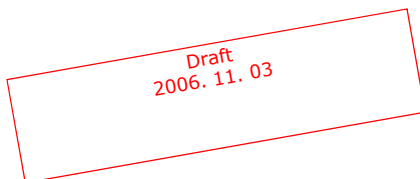 


- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS





SCH-I839

User's Guide

Table of Contents

Important safety precautions	v
--	---

CHAPTER 1 **Getting started**

What's in the box?	7
Getting to know your phone	8
Using a stylus pen	12
Installing the battery	13
Installing an R-UIM/SIM card	14
Charging your phone	15
Switching your phone on	17
Installing an optional memory card	17
Installing Sync programs	19

CHAPTER 2 **The basics**

Home Screen	20
Application Launcher	20
Status bar	21
Basic settings	24
Opening an application	25
Closing an application	25
Using the task window	26
Actions common to all applications	26
Synchronising information	31
Beaming information	32
Resetting your phone	36

CHAPTER 3 **Entering text**

Using the touch screen	37
Using the keypad	43

CHAPTER 4 **Call functions**

Turning the phone functions on or off	49
Accessing the Phone screen	50
Making a call	50
Answering a call	51
Quickly switching to Silent mode	52
Options during a call	52
Viewing missed calls	53
Advanced calling features	54
Using call logs	56
Using the speed dial list	58
Setting phone options	58

CHAPTER 5 **Messaging and the Internet**

SMS	63
eMail	69
Trace Messenger	74
QQ Messenger	78
Uni-Mail	81

CHAPTER 6 **Personal information management**

Address	93
Schedule	99
To Do	104
Memo	106
Money	109
DioBCR	111

CHAPTER 7 Entertainment

Camera	114
Photo Album	119
Media Player	123
Fruits Cocktail	126

CHAPTER 8 Tools

Alarm	127
D-Day	128
Clock	130
Calculator	132
Converter	133
Dictionary	134
Remote control	135
Recorder	137
InfASR	139
File Manager	141

CHAPTER 9 Documents

Picseel Browser	144
Text Reader	150

CHAPTER 10 Setup

Brightness	152
Bluetooth	153
Buttons	154
Calibration	154
Display	154
语言 /Language	155
Security	156
Phone Setup	157
Power	157

I.Beam	158
USB	158
System Info	158
Task Manager	159
Theme	159
Sound	159

CHAPTER 11 Health and safety information

Battery safety	161
Road safety	163
Operating environment	163
Electronic devices	164
Potentially explosive Environment	166
Emergency calls	166
Other important safety information	167
Care and maintenance	168

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.

CAUTION:

- The phone could explode if the battery is replaced with an incorrect type.
 - Dispose of used batteries according to the manufacturer's instructions.
-

Use of authorised software

Use only Samsung-authorized software. The use of any unauthorised software could damage your phone.

Qualified service

Only qualified service personnel may install or repair your phone. Failure to do so may invalidate the warranty.

For more detailed safety information, see "Health and safety information" on page 161.

Note:

- While using your phone, data may be deleted or corrupted due to system malfunctions or operating mistakes. Back up your important data using external storage devices.
 - Be careful not to press the reset button or remove the battery while storing data. Doing this may delete or corrupt your data.
 - Extremely high or low temperatures may cause errors in the screen display or a system malfunction. The phone functions best in a normal temperature range.
-

Getting started

Congratulations on the purchase of your new phone! This chapter helps you familiarise yourself with the different components of your phone, set up your phone and charge the battery.

What's in the box?

Your package contains the following items:

Phone

Travel charger

Battery

Mini USB cable

Software/
Manual CD-ROM

User's Guide &
Quick Reference Guide

Your package may also contains the leather case, desktop charge and etc.







Note: Use the purchased accessories with only Samsung-
authorised devices. The use of these accessories with other
devices could cause problems and any repair costs would
not be covered by the warranty.










Getting to know your phone




The following illustrations show the main elements of your phone:

Front view

Rear view

Button(s)	Description
	<p>Press to open the associated application or menu.</p> <ul style="list-style-type: none"> - : Pop-up menu list or changing the view method to either Icon View or List View. - : Address - : SMS - : Uni-Main
	<ul style="list-style-type: none"> • Press to move through all of the Application Launcher tabs from the Application Launcher. • Press to return to the Home screen when you use an application. Press and hold to open the task window.

Button(s)	Description
	<ul style="list-style-type: none"> • Press to access the Phone screen. • Press to make or answer a call. From the Phone screen, it shows the call log. Press and hold to dial the last number.
	Press to move up or down and left or right through any of the applications, records, or options.
	Press to confirm your selection.
	Press to cancel the operation or return to the previous status or application.
	<ul style="list-style-type: none"> • Press to end a call. • Press and hold to turn the phone functions off or on.
	<ul style="list-style-type: none"> • Press to enter alphanumeric characters. • Press to select options when they are numbered.
	<ul style="list-style-type: none"> • Press and hold to access name dialing application in Phone mode. • Press and hold to change text input mode when entering text using the keypad.
	<ul style="list-style-type: none"> • Press and hold to enter or exit Silent mode in Phone mode. • Press to enter a space when entering text using the keypad.
	<ul style="list-style-type: none"> • Press and hold to turn on the camera. • Press to take a photo or record a video in Camera.

Button(s)	Description
	<ul style="list-style-type: none"> • Slide down to turn on the phone. • Slide down and hold to turn the backlight on and off, or slide down to switch the phone to Sleep mode and wake it up when using the phone. • Slide up to lock the keys, so that pressing the exposed keys does not effect your phone's functions when the phone is closed. To unlock the keys, set this lever to its centre position.
	<p>Press and hold to open the Recorder application allowing you to record a voice memo.</p>
	<p>Press to adjust system volume on the Home screen and in phone mode.</p>

Desktop charger

Using a stylus pen

Your phone has many of the same functions as a portable personal computer, but does not have a keyboard or a mouse. Instead, use the stylus pen provided with your phone to access, run, or enter information using the LCD touch screen.

A stylus pen is stored on the back of the phone so that you can carry it with the phone. When you aren't using the stylus pen, insert it back into the stylus pen holder.

Use the stylus pen to:

Tap: Softly touch the screen once with the stylus pen to select or execute a file or command. A tap works like a mouse click on a computer.

Drag: Hold the stylus pen on the screen and drag it across the screen to move text.

Tap-and-hold: Tap and hold the stylus pen on an item to see a list of actions available for that item. Tap the action you want to perform on the pop-up menu that appears.

Note: To prevent scratches, do not use an actual pen, pencil or other sharp objects to tap or write on the screen.

Installing the battery

Your phone is powered by a rechargeable Li-ion battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

Inserting the battery

1. Put the battery on the back of the phone, lining it up with corresponding slots on the phone.

2. Press the battery down until it clicks into place.

Make sure that the battery is securely locked before switching the phone on.

Removing the battery

To remove the battery, press the battery lock to release the battery and lift the battery away the phone, as shown.

Installing an R-UIM/SIM card

Your phone is compatible with both CDMA networks and GSM networks. When you subscribe to a cellular network, you are provided with a plug-in R-UIM or SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

- Keep all cards out of the reach of small children.
- The card and its contacts can easily be damaged by scratches or bending, so be careful when handling, inserting or removing the card.
- You should switch off your phone first, when handling, inserting or removing the card. Otherwise, the Phone and card can be damaged.

Inserting the card

1. Open the phone.
2. Slide the card cover open.

3. Insert and slide the card under the two tabs, ensuring that the gold-coloured contacts of the card face down into the phone, as shown.
4. Slide the cover closed and relock.

Removing the card

1. Open the phone and the card slot cover, referring to step 1 and 2 in "Inserting the card". See the previous section.
2. Slide the card out of the holder.

Charging your phone

Before using your phone, charge it with the supplied travel charger or desktop charger.



Using the travel charger

1. Plug the connector of the travel charger into the bottom of the phone.


2. Plug the charger into a standard AC wall outlet.
3. The LED on the charger shows the status of the battery being charged.
 - Red: the battery is charging.
 - Green: the battery is fully charged.
 - Orange: the travel charger is not plugged in correctly.
4. When charging is finished and the LED changes to green, unplug the charger from the AC wall outlet and remove it from the phone by pressing the **PUSH** button on the connector and pulling the connector out.

Conserving battery power

You can conserve power by the following methods:

- Switch the phone to Sleep mode when you don't use it. Slide  down to activate Sleep mode.
- Turn on and off the backlight. Slide  down and hold.
- Adjust the Backlight settings and Power settings. For details, see page 24 and page 157.

Switching your phone on

1. After installing the R-UIM/SIM card and the battery and charging the phone, slide  down to turn the phone on.
2. If you install two R-UIM/SIM cards, select a network and tap **OK**. The phone initialises the card and receives signals from the network. The Home screen appears.

Installing an optional memory card

Use a memory card to extend your phone's capacity. You can purchase one from your local Samsung dealer or certain electronics retailers. This phone probably can't recognize the some manufacture's memory card or memory card that capacity is above 512MB.

A memory card is a ultra small-sized Trans flash memory card used for extra storage capacity for data, music files, voice memos, and more. These can be transferred between your phone and your computer. Use a memory card when it is inconvenient to perform a PopSync operation.

To insert a memory card:

1. Remove the battery.

2. Carefully slide the memory card into the slot with the label side face up.

Guidelines for using a memory card

Follow the instructions that come with the memory card or contact your memory card manufacturer for more information.

- Some memory cards consume large amounts of power. To avoid draining the battery completely when using a memory card, connect your phone to an AC wall outlet whenever possible.
- If the battery is very low, do not save data to a memory card. This may result in the loss of data. First connect to an AC power outlet.
- Do not turn your phone off when you are in the middle of performing an operation, such as saving data to your memory card.
- Keep your memory card in a protective case when not in use to protect it from dirt and moisture.

Installing Sync programs

Your phone comes with programs which let you synchronise and exchange information between your phone and your computer. Using the supplied CD-ROM, you can install:

- **PopSync**- Sync manager program, which allows you to synchronise between your phone and Mobile Desk and/or Microsoft Outlook on your computer.
- **Mobile Desk**- Desktop PIMS program, which allows you to manage Address, Schedule, To Do, Memo, and Money data.
- **USB Sync driver**- USB driver for PC, which allows you to connect the phone to your computer using a PC data link cable.

Before installing the Sync programs, make sure that you have:

- Windows 2000/XP
- 40 MB of hard disk space
- 256 (minimum) /512 (recommended) MB of RAM memory
- Available USB port

To install the programs:

1. Insert the supplied CD-ROM into the CD-ROM drive of your computer.

The execution file will automatically run. If it doesn't, access **My computer** and double-click your CD-ROM drive.



2. Click the item you want to install.
3. Follow the instructions on the screen to install the programs.

After installation is complete, the PopSync and Mobile Desktop icons appear on your Windows desktop.

Note: For details about the program, please refer to the Sync user's guide on the supplied CD-ROM.

The basics


■ Home Screen


When you turn your phone on for the first time each day, you'll see the Home screen. You can also display it by pressing  or selecting  from the launcher.

Note: all the funtion of using the data call is for CDMA network only.

■ Application Launcher

Applications on your phone can be accessed from the Application Launcher.



To access the application screens, tap each icon on the Application Launcher, or press  repeatedly until the application screen you want opens.





In each screen you can change the view method to either Icon View or List View by pressing .



Quick launcher:
Allows you to access popular applications.





Application Launcher: Home, Uni-Main, PIM & Communication, Applications, User, Setup.










	Tap to open the Home screen. You can see important information for the day at a glance.
	Tap to access the Uni-Main menu.

















 


	Tap to view the applications are related to Personal Information Management (PIM) and communications, such as Phone, Alarm, QQ Messengers, SMS, and eMail.
	Tap to view the entertainment and tool applications available, such as Camera, Remote Control, Calculator, and Clock.
	Tap to access applications you have installed.
	Tap to change the various settings of your phone.

Status bar

On the top line of the screen, the status bar displays icons to show your phone's current status. The following icons may appear:

Icon	Description
	Shows the received signal strength. The greater the number of bars, the better the signal. (C:CDMA, G:GSM)
	Appears when you turn off the phone functions. Tap to turn on the phone functions.
	Appears when a call is in progress.
	Appears when you are out of a service area. When it appears, you cannot make or receive a call.

Icon	Description
	Appears when you establish a data connection in an application, such as a WAP browser or instant messenger.
	Appears when a call restriction option is active.
R	Appears when you are out of your home area and have logged onto a different network, when travelling in other countries, for example.
e	Appears when a new uni-mail is received in the server.
	Appears when a new uni-mail is received in the phone.
W	Appears when a new Web alert is received.
	Appears when a new SMS message is received.
	Appears when a new voicemail is received.
	Appears when a new SMS message and voicemail are received.
	Appears when a new uni-mail, Web alert, SMS message or voicemail are received. This icon display on the screen except for Home mode, application launcher and Phone mode.
	Appears when you have set an alarm to ring at a specified time.
	Appears when Silent mode is active.



Icon	Description
	Indicates the call ringer setting: <ul style="list-style-type: none"> •  : Ring •  : Ring silent •  : Ring then vibration •  : Vibration then ring •  : Ring and vibration •  : Vibration
	Appears when the Bluetooth feature is active. When the feature is deactivated, this icon is greyed.
	Appears when a memory card is installed into your phone.
	Shows the level of your battery. The more bars you see, the more power left in the battery.
	Appears when your phone is being charging.
	Indicates the text input mode: <ul style="list-style-type: none"> •  : Chinese Pinyin mode •  : Chinese Stroke mode •  : T9word mode •  : ABC mode •  : Number mode •  : Symbolic mode
	Appears when the keys are locked.

Note: Tapping each icon allows you to change the settings for the corresponding feature or shows you information about the corresponding feature.

Basic settings

Before using your phone, personalise the following basic settings as your preferences and needs.



Changing the display language

1. From the Application Launcher, tap  and select 语言 / **Language** ().
2. Tap the language you want and then **Apply**.

Your phone restarts to apply the language change to the system.

Calibrating the screen

The LCD screen of your phone is a touch screen which recognises your touches on the screen and performs the appropriate commands. To ensure optimal performance and to minimise possibility of errors, you should calibrate the screen when you turn on the phone for the first time.



1. From the Application Launcher, tap  and select **Calibration** ().
2. Touch the cross hair object on the screen firmly and accurately as it moves.

If the screen doesn't recognise your touches or react incorrectly to your touches while using the phone, you can recalibrate the phone by doing this.

Customising the display





You can control the screen's brightness and the light usage. The backlight drains the battery, so you can conserve power by reducing the brightness of the screen.

To adjust the brightness of the screen:

1. From the Application Launcher, tap  and select **Brightness** ().
2. Tap the pick list and select a menu.
3. Adjust the backlight time and the display brightness.
4. Tap **X** to save the changes and exit screen.

Adjusting the device volume

You can adjust the volume level of the system sounds, such as the keypad tone, screen touch tone, and error alert tones.

Tap a ringer icon on the top line of the screen, and then tap  or . You can also press  or  from the Home screen [or phone screen](#).

Opening an application


On the Application Launcher, tap an Application Launcher icon and then the application icon you want to use.

Your phone has one or more application buttons located on the front or side of the phone and the quick launcher on the Home screen to quickly access the applications.

Closing an application


To close the application you are currently using, use the following methods:

- Tap **X** at the top right corner of the screen. The application closes and your settings, if any, are saved automatically.

- Select **Menu** → **Quit**. You can return to the previous screen.
- Press  to close the current application and return to Home screen.

■ ■ Using the task window

Your phone is a multi-tasking device, which means that it can run multiple application at the same time. If you switch to another application without closing the application you were using, the previous application is inactive but still running.

When you are using several applications at once, you can quickly access one of the applications you have already opened. Tap the application name currently open on the top of the screen or press and hold .




The operating application icons display. Tap the application icon you want to access. The selected application opens.

If you want to end one of the applications currently open, tap **Task Manager**, select the application(s), and then tap **Menu** → **End**. For details, see page 159.

■ ■ Actions common to all applications

Creating a new item in an application


Tap  on the command bar at the bottom of the screen or tap **Menu** → **New**.

Tip! For information on how to enter or change text on your phone, see “Entering text” on page 37.

Opening an item for viewing


When you are viewing a list of files or folders, tap an item to open it. You can also tap and hold an item then select **View** from the pop-up menu.

Editing an item

To open an item for editing, you usually need to first open it for viewing and then tap  on the command bar. You can also tap and hold an item and then select **Edit** from the pop-up menu, or tap **Menu** → **Edit**.



You can use the standard editing tools, such as **Cut**, **Paste**, or **Undo**. Highlight the information you want to edit by dragging the stylus pen over it. Then tap and hold the highlighted area to display the pop-up menu with the editing options.

Deleting an item

Select the item you want to delete, and then tap  or tap **Menu** → **Delete**. You can also tap and hold an item, then select **Delete** from the pop-up menu.

Searching for items

Using Search, you can search for a name, file, folder, or shortcut. You can also use the Search application in each application.

1. From the Application Launcher, tap  and select **Search** ().
2. Enter the keyword in the **Keyword** field.
If you already have a keyword entered, tap the arrow next to the **Keyword** field and select the keyword you want.
3. Tap the **Type** field and select the application type.
4. When you have finished, tap **Find**.
The phone searches for and displays the items that match the entered keyword.
5. To make the search more accurate, enter more letters and the selection moves to the item that best matches the letters.
6. Tap the item you want to open it.



Making records private

In all basic applications, such as Address, Schedule, To Do, Money, and Memo, you can make individual records private. Once you make records “Private”, your phone hides the records. You must enter a password to display them on the screen.

Making a record private

When you create a new record or edit a record, check the **Private** box. The record that you mark as private is not shown on the list.

Displaying private records

1. From the Application Launcher, tap  and select **Security** ().

2. When the Enter password dialogue box appears, enter the password by tapping numeric keys and tap **Ok**.

The password is preset to **00000000** at the factory. For details about changing a password, see page 156.



3. Select **Restriction** from the pick list on the top right.
4. Select **Show private record**. You can view all of the private records in any application.

To hide the records again, deselect the check box.
5. Tap **X** to exit the screen.


Categorising records


You can categorise records in the Address, Schedule, To Do, Memo, and Money applications for easy retrieval.

Creating application categories


1. In the Address, Schedule, To Do, Memo or Money application, tap **Menu** → **Edit Category**.
2. Tap .
3. Enter a new category name. In Address, you can select a ringtone for the category.
4. Tap  to save the category.
5. If necessary, repeat steps 2 through 4 to create more categories.
6. When you have finished, tap **X** to exit the screen.

Assigning the record to a category

1. In an application, tap  or **Menu** → **New** to create a new record.

2. In the new record screen, tap the **Category** field.
3. Select a category from the list.
4. Tap  to save the record.
5. Tap **X** to exit the screen.

Editing a category

1. In the Address, Schedule, To Do, Memo, or Money application, tap **Menu** → **Edit category**.
2. On the Category screen select a category and tap **Menu** → **Edit**.
3. When the Edit category dialogue box appears, change the category name for the category.
4. Tap  to save the change.
5. Tap **X** to exit the screen.

Deleting a category

1. In the Address, Schedule, To Do, Memo, or Money application, tap **Menu** → **Edit Category**.
2. On the Category screen, select the category and tap **Menu** → **Delete**.
3. Tap **Yes** to delete the category.
4. Tap **X** to exit the screen.

Synchronising information

You can synchronise information between your phone and the Mobile Desktop or Microsoft Outlook program in your computer.

You can do this using the PopSync program supplied with your phone. In addition, the program enables you to back up and restore data, install and remove applications, or copy files between the phone and the computer. Use the USB port to connect your phone and computer.

To synchronise information:

1. Place your phone in the supplied desktop charger and plug the one end of the PC data link cable into the communication port on the back of the desktop charger.

Or, plug the PC data link cable into the phone.

2. Plug the other end of the PC data link cable into the USB port on your computer.

The PopSync program is automatically running.

3. In the Popsync window of your Windows desktop, check the application you want to synchronise.

Note: For details about synchronising information, please refer to the Sync user's guide supplied on the CD.

Beaming information

You can connect your phone to other devices wirelessly and send and receive data. To do this, use the IrDA technology or Bluetooth technology.

Note: You cannot send the DRM contents and the downloaded file from Uni-Chinell via Beaming and Bluetooth.

Using IrDA communications

Your phone is equipped with an IrDA port that you can use to beam information to another device that is close by and also has an IrDA port. The IrDA port is located at the top of the phone.

You can send or receive the following information between your phone and another device:

- The records currently displayed in Address, Schedule, To Do, Memo, or File Manager.
- The files, such as sounds, images, videos, and documents.

Beaming a record or a file to another device

1. Locate the record in an application you want to beam.

2. Align the IrDA port on your phone with the IrDA port on another device.

Tip: For best results, the IrDA ports between two devices should be unobstructed and within close range of each other.



3. Tap and hold the record and tap **Send** → **Via Beaming** from the pop-up menu.

Wait for the Infrared send dialogue box to indicate that the transfer is complete before you continue working on your phone.

Notes:

- It may take longer than usual to transfer data when you beam data of large capacity.
 - You can send or receive one file each time.
-

Receiving beamed data

1. From the Application Launcher, tap  and select **I.Beam** ().

2. Select **Receive all incoming beams**.
3. Align the IrDA port on your phone with the IrDA port on another device.
4. Wait for the Infrared receive dialogue box to indicate that the transfer is complete. You can view the name, type and size of the received information.
5. Tap **Save** to save the data.

Transferring data via Bluetooth

Your phone is equipped with the Bluetooth technology, which is becoming a wireless communication standard for mobile devices. Bluetooth allows you to connect your phone wirelessly with Bluetooth-compatible devices, such as phones, PDAs, computers or headsets, within 10 metres.



Notes:

- It is recommended that you do not use the Bluetooth feature while using multimedia features such as voice recorder, camera, and Media player, or vice versa for a good performance.
 - Some devices may not be compatible with your phone.
-

Using Bluetooth connections, you can:

- send or receive data to and from other devices
- talk hands-free
- control your phone remotely

Activating Bluetooth

1. From the Application Launcher, tap  and select **Bluetooth** ().
2. Tap the button below **Active**.

3. Select **ON** and tap **Ok**.

Setting Bluetooth

1. From the Setup Bluetooth screen, tap **Menu** → **Settings**.
2. If necessary, Tap the button below **Bluetooth's Name** and change the name.
3. Tap the button below **Discoverable**.
4. Select **ON** and tap **OK**.

Connecting the phone with other devices

1. From the Bluetooth screen, tap **Menu** → **Add New Device**.
2. Tap **Search** to let the phone search for available Bluetooth devices.
3. Select a device and tap **Connect**.
4. Enter a 1- to 16-digit Bluetooth PIN code and tap **OK**.
When the owner of the other device enters the same PIN code, the connection is established.

Sending data

You can send data stored in the PIMS applications, such as Address, Schedule, To Do, and Memo, or other applications, such as Photo Album or File Manager.

1. Access an application and select the item you want to send.
2. Tap **Menu** → **Send** → **Via Bluetooth**.
3. Tap **Search** to let the phone search for available Bluetooth devices.

4. Select a device and tap **Send**.
5. If necessary, enter a 1- to 16-digit Bluetooth PIN code and tap **OK**.

Receiving data

When a device request to pair with your phone, enter PIN and tap **OK**.

When the phone receive data from another device, a message confirming if you want to receive the data.

1. Tap **Yes** to confirm the reception.
2. Tap **Save** and The data is stored in the appropriate application.

Resetting your phone

If your phone does not respond to the buttons or tapping the screen, you need to perform a reset to get your phone running again.

Press the **Reset** button inside the hole on the right of the phone. Your phone is now reset.

Entering text

You can enter text, numbers and special symbols into the phone using various input modes. Your phone supports the four screen input modes: Keyboard, Draw Input, FSIM, and Symbolic. You can also use the six keypad input modes: Pinyin, CHN S Stroke, T9word, ABC, Number, and Symbolic.

Using the touch screen

When you select a field that requires you to enter text or numbers in an application, such as Address, Memo, To Do, or SMS, you can open the text entry screen.

To show or hide the text entry screen, tap the text entry icon.

To change the entry mode, tap the arrow next to the text entry icon and select the mode from the list.

Using the on-screen keyboard

The on-screen keyboard is similar to a keyboard you use on your computer, except that you need to tap instead of type. You can enter text directly on the screen by tapping letters, numbers, and symbols on the keyboard.

To use the on-screen keyboard:

When the text entry icon appears, tap the arrow next to it, and then select **Keyboard** from the list. By default, the English keyboard displays.


Entering English characters

Tap the keys with your stylus pen just as you would type with your fingers on your desktop keyboard.

Entering Chinese characters



You can enter Chinese characters using Pinyin, a system to write the pronunciation of Chinese words using the Latin alphabet.

In the character selection field, your phone automatically presents the letters matching your input.

1. Tap  to switch to the Chinese keyboard from the English keyboard.

2. Tap the keys corresponding to the phonetic spelling. Notice that the choices in the character selection field change with each character you enter.

For example, to enter 力, tap **l** and then **i** from the highlighted keys.

If you cannot find the you want in the character selection field, press  or  to scroll through the choices available.

3. When the you want appears, tap it to add it into text.

Using DrawInput mode

Your phone is equipped with a powerful character recognition software to convert your handwriting into typed characters accurately and efficiently.


To use DrawInput mode:

When the text entry icon appears, tap the arrow next to it, and then select **DrawInput**.


Use the following buttons on the screen:

 : Allows you to enter Chinese characters.

 : Allows you to enter English characters.

 : Allows you to enter numbers, symbols, and punctuation marks.

 : Clears characters one by one.

 : Enters a space between characters

 : Changes the line.

Entering characters

1. After selecting the mode buttons you need, write a character at a time on the input panel.
2. Tap one of the choices to enter it into text.

Using FSIM mode

You can write anywhere on the screen using the stylus pen just as you would a pencil on paper, and FSIM mode presents characters that resemble your writing from which you can choose.

To use FSIM mode:

When the text entry icon appears, tap the arrow next to it, and then select **FSIM**.


Use the following buttons on the screen:

 : Allows you to enter Chinese characters.

 : Allows you to enter English characters.

 : Allows you to enter numbers.

 : Allows you to enter symbols and punctuation marks.

 
 : Enters a space between characters.

 : Enters a comma.

 : Enters a period.

 : Clears characters one by one.


 : Changes the line.

 : Opens the pop-up menu list. The following menus are available:

- **Black, Red, Green, or Blue:** allows you to change the text colour.

- **Multi chars, Single chars:** allows you to enter words or a single character.
- **Upper chars only or Lower chars only:** allows you to enter uppercase or lowercase characters.

If you selected **Single chars**, the selected letters are inserted into text immediately.

If you selected **Multi chars**, the selected letters are shown in the multi-character entry field. You can continue writing and choosing characters until the completed word displays in the multi-character entry field, then tap  to enter the word into text.

Entering characters



1. After selecting the mode buttons you need, write the character anywhere on the screen.
2. Tap one of the choices to enter it into text.

Using Symbolic mode

When you need to enter symbols and punctuation marks, Symbolic mode allows you to enter them quickly and easily.

To use Symbolic mode:


1. When the Text Entry icon appears, tap the arrow next to it, and then select **Symbolic**. The symbol list displays.

2. Tap the symbols you want to enter. To display more symbols, tap  or .

Using the keypad

You can enter text by pressing the alphanumeric keys on the phone, labelled with the Chinese strokes and alphabet.

Changing the text input mode



1. In the text entry screen, press and hold .
2. Select the mode you want. You can select Pinyin and CHN S Stroke modes for Chinese, and T9word and ABC mode for English. You can also use Number mode and Symbolic mode.

Using Chinese Pinyin mode


Pinyin is a system to enter Chinese words by spelling them phonetically (how they sound) using the Latin alphabet. With the Pinyin input mode, you can enter Chinese characters by keying in the pinyin string using the phone's keypad.

Entering characters in Pinyin mode

1. Press the keys corresponding to the phonetic spelling, referring to the letters printed on the keys.




Example: To enter 你好, press  and  to enter **ni**.

2. Press the Left or Right navigation key to select alternative pinyins for the keys you have pressed.






 
3. If you cannot find the character you want from the display, press the Up or Down navigation key to scroll through word choices.
4. When you find the character, press  to activate the character selection field. The numbers from 1 to 6 are added to each character.
5. Press the number key corresponding to the character.

Using the tones



You can enter another character by assigning a tone for the selected pinyin. Entering a tone for a character is optional, but it is especially useful if the pinyin spelling is similar for several characters.

1. Press the keys corresponding to the pinyin of the letter you want.
2. If necessary, press the Left or Right navigation key to select the pinyin.
3. Press  for four tones.
4. If you cannot find the character you want from the display, press the Up or Down navigation key to scroll through word choices.
5. Press a key,  to , corresponding to the character.

Rapid character entry

To enter *zhong guo* (中国), enter the first letter using the following keystrokes; , , , , , and . You do not have to complete the Pinyin spelling to include *guo* (国). The letter displays automatically.

Using Chinese Stroke mode

This mode allows you to enter individual Chinese strokes, in written order, from top to bottom, and from left to right. The Chinese strokes are classified into five basic categories; heng, shu, pie, dian, and zhe. The basic strokes are printed on keys  to  on the keypad. Refer to the following table:


Category	Keys	Strokes represented in each category
→		→ ↗
		↓
/		/ -)
\		` \ /
→		⌈ → J ⤵ L ↶ ↷ ↸ ↙ ↘ ↻ ↺ ↻ ⚡ ⋄) ⊥ ↱ ⊥ ⊥ ⊂ ⊃ ⊆ ⊇


Entering strokes and characters in Stroke mode

1. Press the keys that correspond to a character's component strokes. Press keys in the order that you would write the strokes, using one press per stroke.




Example: To enter 力, press  to enter → and  to enter ↵.

2. Press the Up or Down navigation key to scroll through choices.

Note: If you are uncertain of the stroke order, press  in place of each questionable stroke. Continue entering strokes until the character displays or until you finish the character.




 




 

3. To select a character and add it to text, press the corresponding key,  to .

Rapid character entry



 
 

Try entering *zhong guo* (中国) using the following keystrokes: , , and . Even though the letters are twelve strokes, your phone allows you to enter the complete pair in only three key presses.

Using ABC mode

Press the appropriate key until the character you want appears on the screen.

Key	Characters in order displayed	
	Upper case	Lower case
	. , - ? ! ' @ : ; / 1	
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	0	



Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically, or press the Right navigation key. Then, enter the next letter.
- Press  to insert a space.
- Press  to change case. Lower case , Initial capital , and Capital lock  are available.

Using T9word mode

 
T9word mode allows you to enter text using T9 technology, which is a predictive text input mode that allows you to key in any character using single keystrokes.



Entering a word in T9word mode

1. Press  to  to start entering a word. Press each key once for each letter.

Example: Press , , , , and  to enter *Hello*.



 




T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting the characters.
3. When the word displays correctly, go to step 4. Otherwise, press  to display alternative word choices for the keys that you have pressed.

Example: *Of* and *Me* use  and .

4. Press  to insert a space and enter the next word.

Tips for using T9word mode

- Press  to enter periods or apostrophes automatically.
- Press  and then  until a basic punctuation mark you want appears.
- Press  to change case. Lower case , Initial capital , and Capital lock  are available.

Using Number mode

Number mode enables you to enter numbers. Press the keys corresponding to the digits you want.

Using Symbolic mode


Symbolic mode enables you to enter symbols. When you select this mode, a symbol list displays, see page 42.

Call functions

■ Turning the phone functions on or off

You can turn the phone functions on and off separately from the PDA functions. You can use the PDA applications on your phone without turning the phone on at all.


Turning off the phone functions

Press and hold .

When the phone is turned off:

- The signal strength indicator disappears. **TOFF** appears on the status bar.
- You cannot make and receive calls.
- You can use all of the PDA features.
- You cannot access the address list in your R-UIM/SIM card.
- You cannot send or receive calls or messages, or access the Web.

Turning on the phone functions



1. Press and hold .
2. Select the GSM or CDMA card you want to activate and tap **OK**. The phone receives signals from the corresponding network.

When the phone is turned on:






- The signal strength indicator (**C** or **G**) appears on the status bar.
- You can make and receive calls.

- You can send or receive messages or e-mails remotely, or access the wireless web.
- You can use all of the PDA applications while making a phone call. If you are using an application when the phone rings, you can answer the call and continue with your work.

Switching between networks

1. Tap  or , depending on the current network.
2. Select GSM or CDMA card and tap **OK**.


Accessing the Phone screen


1. Make sure that  or  appears at the top left of the screen and that it shows a strong signal.
2. Press  or tap  from the Application Launcher and select **Phone** (.


Making a call

Dialling a number



1. On the Phone screen, enter the phone number, including the area code.


You can open the onscreen keypad by tapping . Then, tap the numbers from the onscreen keypad.

If you make a mistake while entering a number, press  to clear the last digit or press and hold the key to clear all of the digits.


2. Press  to dial the number. When a call is connected, the call duration displays.


During a call, you can use several call options. For details, see page 53.

To adjust the earpiece volume during a call, press  or  to increase or decrease the level.

3. When you have finished your call, press  or close the phone.

Redialling the last number

Your phone stores the last phone number you dialled. Press and hold  to redial the number.

If you want to view the list of the recent calls, press . For details, see page 56.




Answering a call



When someone calls you, the phone alerts you by ringing or vibrating, depending on the ringer type you have set. To change the ringer type, see page 159.


When the caller can be identified, the callers phone number, name, and image, if stored in Address, display.

If a call comes in while your phone is sleeping or you are working with another application, the incoming call alert screen displays.

1. To answer a call, press  or tap **Menu** → **Answer**.



If you don't want to answer a call, press  or press and hold / or tap **Menu** → **Reject**.

If you want to silence the ringer, press / or tap **Menu** → **Silence**.

2. To end the call, press .

Quickly switching to Silent mode

Silent mode disables all sounds on your phone except for camera, media player and other applications. This feature is best used in situations where the phone might disturb others, such as in a meeting, at a library, or in a theatre.

To enter Silent mode, press and hold  on the Phone screen until **Entering Silent Mode** displays. The Silent mode icon () appears at the top of the screen.

To exit and reactivate the previous sound settings, press and hold  until **Exit Silent Mode** displays.

Options during a call

Your phone provides a number of functions that you can use during a call.


Muting the microphone

You can mute the microphone so that the other person on the phone cannot hear anything you say, but you can still hear the person.

To mute the microphone, tap **Menu** → **Sound** → **Mute On** .
To unmute, tap **Menu** → **Sound** → **Mute Off**.

Muting key tones

You can mute the keypad to press the keys without hearing annoying key tones.

To mute keytones, tap  . To unmute, tap the icon again.

Using In-call options

You can use the following options by tapping **Menu** at the bottom of the screen:

Address: enters Address. You can save a number in Address or use it to recall a number. For details, see page 93.

Memo: opens a new memo screen. For details, see page 106.

Call Log: displays the list of recent calls. For details, see page 56.

Hold: (for GSM network) allows you to put the call on hold.

Sound: allows you to turn the key tones, or microphone on or off.

Send DTMF: allows you to send the DTMF tones of the number you have previously stored on the DTMF list. DTMF tones are the tones that you hear when you press number keys. For details about storing numbers on the DTMF list, see page 60.

Send my number: sends your phone number to the person with whom you are speaking.

Voice Recording: records your call conversation. You can access your call recordings in the Recorder application.


End call: disconnects the call.

Quit: exit the phone mode screen.

Viewing missed calls

If you were unable to answer and missed a call, you can find out who called you, if the caller ID is transmitted from


the network. The display will show the number of missed calls, the last caller's number or name, if stored in Address, and the date and time of the last call.

Press  to dial the last caller you have not answered. If you press any other keys except for navigation keys on this screen, the missed call notification screen disappears. You can view the missed calls in the Call Log. See page 56.

Advanced calling features


Three-digit dialling

You can quickly dial a phone number in Address or Call Log by entering its three consecutive digits. Your phone finds the entire number for you.

1. Enter the three digits of the phone number you want to dial. The phone searches Address and Call Log for the numbers containing those digits, and displays the result.
2. Tap the number and press  or tap **Call**.

Making a call from Address

You can store the phone numbers you call regularly in Address. You can then simply recall the number to dial.

1. on the Phone screen, tap **Menu** → **Address**.
 2. Scroll to the contact you want and press ,
- For details about Address, see page 93.

Making a call from the speed dial list

When you assign phone numbers to one of the speed dialling keys, you can dial them easily by pressing a few keys corresponding to the location number. For details about storing a speed dial number, see page 58.


You can use the following ways to call speed dial numbers:

- For one-digit locations, press and hold the last digit key.
- For other locations, press the first digit key and hold the last digit key(s).

To view the number you stored in the speed dial list, tap **Menu** → **Speed Dial**.

Making an emergency call

 
You can make calls to standard emergency numbers, such as 119, 110, and 120 or three specified numbers on the emergency number list, even if your phone is locked or all outgoing calls are restricted. For details about storing emergency numbers, see page 60.


You can also make an emergency call when the R-UM/SIM card is not installed in your phone or locked. On the Phone screen, tap  at the bottom of the screen. Your phone dials **120**.

Making an international call

Before making an international call, you must store an international call service number. For details, see page 59.

To make an international call:


1. On the Phone screen, press and hold . The preset international call code displays.

2. Enter the phone number you want to dial.
3. Press  to dial the number.

Pause dialling

When you call an automated system, like a banking service, you are often required to enter a password or account number. Instead of entering the numbers each time, you can enter them in advance before dialling, in order to be sure that you are sending correct numbers.




To insert a pause in a number, tap **Menu** → **Pause** while entering a number. A **P** displays, meaning that a pause will occur at that point in the dialling sequence.

The number after a pause is sent by pressing  after dialling the first number.

Using call logs

You can view a list of most recent received, missed, or dialled numbers. The last call is saved in the first position. The oldest calls are automatically deleted from the list to make room for new calls.

Viewing call logs

1. On the Phone screen, press  to access the list of recent calls. You can also use **Menu** → **Call Log**.
2. Tap  or  select a call type from the top line of the screen.

3. Scan through the list until you find the call log you want.

4. Tap the number or name to view detailed information about the call.

Using call log options

While viewing call details, tap **Menu** to access the following options:

Talk: dials the displayed number.

Save: allows you to save the number in Address.

Edit: allows you to change the number for dialling or saving in Address.

Delete: deletes the call log.

Send Msg: allows you to send an SMS message to the number.

Mail: allows you to send a uni-mail to the number.

Close: exit the current screen.

Using the speed dial list

Once you have stored contact cards, you can set up the speed dial list of the most frequently used numbers so that you can dial them with only one to three keypresses.

Setting up the speed dial list

1. From the Phone screen, tap **Menu** → **Speed Dial**.
2. Tap the location you want. The list of numbers stored in Address and on the R-UIM/SIM card opens.
3. Find and select the number you want.

Editing the speed dial list

- To exchange the number in a speed dial location with another one, select the entry and tap **Menu** → **Replace Number**.
- To remove the speed dial setting for the selected location, tap **Menu** → **Remove**.
- To remove all speed dial settings, tap **Menu** → **Remove all**.
- To make a call, tap **Menu** → **Phone call**.

Setting phone options

You can customise various options related to phone functions using the **Phone Setup** menu.


To access phone setup options:

1. From the Phone screen, tap **Menu** → **Phone Setup**.
2. Tap a setup menu.

3. Select a submenu from the pick list on the top of the screen.

General


Call Option: you can set up the options for making and answering calls.

- **Answering:** allows you to select how to answer an incoming call, either by pressing  or by opening the phone.

With the **Enable to answer the call under keylock** box is checked, you can answer a call even if the keypad is locked.

- **Connection:** allows you to specify whether the display turns off or stays on when a call is connected.
- **Dialing:** allows you to set dialling codes.

Auto area code: the phone automatically inserts a specified area code when you access the dialling screen.

Auto international code: the phone automatically inserts a specified international code when you press and hold  for an international call.

Roam: you can control your phone's roaming capabilities.

- **Home Only:** allows the phone to search for your home network only. When your home network is not available, you cannot make or receive calls.
- **Automatic:** allows the phone to automatically select the first available network.

Voice Privacy: you can set the phone to encrypt the voice channel so that people cannot eavesdrop on your conversation.

- **Standard:** the phone uses the phone uses a standard line.
- **Enhanced:** the phone to use a highly encrypted CDMA line to keep other people from eavesdropping on your calls.

GPS: you can set up the options for the position location function.

- **GPS lock:** allows the phone to block the position location function of your phone to prevent other people from locating your position. Note that emergency centres can always locate your position.
- **Privacy alert:** allows the phone to alert you when a person is attempting to locate your position.

Emergency: you can set up a list of emergency numbers which you can dial even when outgoing calls are restricted. You can set numbers of up to 3 digits.

DTMF: you can change the DTMF tone settings. DTMF tones are the tones that you hear when you press number keys. DTMF tones allow you to communicate with computerised telephone systems, such as telebanking services and auto response systems.

- **Length:** allows you to select the tone length. In digital services, as most are, short DTMF tones will almost always work.
- **Register list:** allows you to set up a list of DTMF tone code numbers, such as account numbers or PINs. You can retrieve them during a call to send to a system.

Air Time: shows you the air time measurement for your voice call and data call. You can reset the timers except for life time.

My Phone #: allows you to edit your phone number. This setting doesn't affect the phone's actual number.

CDMA Network

This menu provides you with options for CDMA network services.

Call Forwarding: this service allows the phone to forward incoming calls to a specified destination. You can set call forwarding for the following conditions:

- **Busy:** forwards calls when the phone line is engaged with another call.

- **No answer:** forwards calls when you don't answer the phone.
- **Uncondition:** forwards all calls.
- **Busy/No answer:** forwards calls when the phone line is engaged with another call or you don't answer.

Call Waiting: this service allows the phone to receive a second call while a call is in progress.

GSM Network

This menu provides you with options for GSM network services.

Call Cost: this service allows you to check the cost of your last call or all calls, and the maximum cost limit. You can also access the following options:

- **Reset counter:** allows you to reset the call cost record to zero. You need to enter PIN2.
- **Set max cost:** allows you to change the cost limit. If you reach this limit, you cannot make calls. You need to enter PIN2.
- **Price/Unit:** allows you to change the currency unit per call. You need to enter PIN2.

Call Diverting: this service allows the phone to forward incoming calls to a specified destination. You can set call forwarding for the following conditions:

- **Divert Always:** forwards all calls.
- **Busy:** forwards calls when the phone line is engaged with another call.
- **No Reply:** forwards calls when you don't answer the phone.
- **Unreachable:** forwards calls when you are out of your service area or your phone is off.

To cancel all call diverting settings, select **Cancel All**.

Call Barring: this service allows the phone to restrict calls. You can set call barring for the following call types:

- **All outgoing:** restricts all outgoing calls.
- **International:** restricts international calls.
- **International except to home:** restricts international calls, except calls to your home country while abroad.
- **All incoming:** restricts all incoming calls.
- **Incoming while abroad:** restricts incoming calls when you are roaming.

To cancel all call barring settings, select **Cancel all**.

To change the barring password provided by your service provider, select **Change**.

Call Waiting: this service allows the phone to receive a second call while a call is in progress.

Network Selection: this service allows you to set how the phone selects a network when roaming.

- **Automatic:** allows the phone to automatically select the first available network.
- **Manual:** starts searching for all networks and displays available networks. You can select the one you want.

Caller ID: this service allows you to choose whether or not your phone number displays on the other person's phone. this function is depending on your service provider.

Network Change




In this menu, you can switch the network back and forth between CDMA and GSM. You can also set whether the phone asks you to select a network or automatically selects according to the R-UIM/SIM card inserted in Slot 1 and Slot 2, when the phone turns on.

Messaging and the Internet

SMS



With SMS, you can send and receive text messages via Short Message Service (SMS).

To access SMS:

Press , or tap  from the Application Launcher and select **SMS** ().




Sending a message

You can send a text message via the SMS centre provided by your service provider.

1. On the SMS screen, tap **New Message**.
2. Enter the message text. To retrieve a canned sentence, tap  and select sentence and tap .
3. Check **Save** to save the message in the Outbox folder after sending.

When scrolling down the screen, you can access the message setting options. For details, see page 68.


4. Tap **Ok**.
5. Enter destination phone numbers.

You can retrieve a number from Address by tapping , or from the list of recent call logs by tapping  and select number and tap .

6. Tap **Send** to send the message.




Viewing a received SMS message

When you receive a new SMS message, the phone alerts you by the following methods:

- Displaying a notice pop-up window.
- Displaying the New SMS icon (.
- Ringing or vibrating, depending on the ringer type you have set. To change the ringer type, see page 159.

All received messages are stored in the Inbox folder in the phone's memory.

Viewing a message

1. On the SMS home screen, tap **Inbox**, **Outbox**, or **Draft**.
If you are working with another application, tap  or tap  and select  on the status bar to open the SMS screen.
2. Tap the message you want to view. The selected message contents display.

Using message options

While viewing a sent or received message, you can access the following options by tapping **Menu**:

Reply: (Inbox) allows you to reply to the received message.

Forward: (Inbox) allows you to forward the received message to other people.

Resend: (Outbox) allows you to resend the message.

Delete: deletes the message.

Copy to card/Copy to phone: allows you to copy the message to the R-UIM/SIM card or the phone's memory.

Move to card/Move to phone: allows you to move the message to the R-UIM/SIM card or the phone's memory.

Cut address: extract URLs, e-mail addresses, or phone numbers from the message.

TTS (Text to speech): reads the message contents audibly to you.

Close: exit the current screen.

Accessing voicemails

To access a list of voicemail notifications, tap **Voice** from the SMS screen. Then select the notification you want and tap **Call** to connect to the voicemail centre.


Accessing web messages

Web servers can send messages regarding various topics to your phone, if you have subscribed the particular services. To access a web message, tap **Web Alert** from the SMS screen and select it from the list.

Deleting messages

You can delete your messages one by one or all at the same time.

Deleting a message

1. From the SMS screen, select a message box.
2. Select the message you want to delete.
3. Tap .
4. Tap **Yes** to confirm the deletion.

Deleting all messages


1. From the SMS screen, select a message box.
2. Tap **Menu** → **Delete all**.
3. Tap **Yes** to confirm the deletion.

Checking memory information

You can check the memory status for messages stored in the phone's memory or on the R-UIM/SIM card.

1. From the SMS screen, tap **Menu** → **Memory Info**.
2. Select the memory location you want from the pick list on the top of the screen.

Configuring SMS options

1. On the SMS screen, tap **Menu** → **Settings**.
2. Set each option.
3. When you have finished, tap  to save the changes and exit the screen.

In each menu, you can access the following options:

General settings

Message alert: allows you to specify how you are informed of any incoming messages. If you select a ringtone, tap **Play** to preview the melody.

CDMA Settings

Delivery Ack: allows you to specify whether or not the SMS centre informs you when your message has been delivered.

Priority: allows you to set the priority of your messages.

GSM Settings

Service Center: allows you to set the address of the SMS centre.

Validate Period: allows you to set how long your messages are saved in the SMS centre.

Reply path: allows you to let the recipients send a reply to you via your SMS centre.



Delivery Report: allows you to specify whether or not the SMS centre informs you when your message has been delivered.

Voice Mail Center: allows you to set the number of the voicemail centre.

eMail

Using eMail, you can send and receive e-mails as you would in a typical e-mail program on a computer.

To access eMail:

From the Application Launcher, tap  and select **eMail** (.

Setting up an e-mail service account

By default, your phone provides you with the local service account preset by your service provider. In addition, you can set up accounts for using e-mail services offered by other ISP (Internet Service Provider)s.


Creating a new account

1. From the eMail screen, tap **Menu** → **Settings**.
2. Tap **Menu** → **New**.
3. Enter account information in each field.
 - **E-mail**: enter your e-mail address.
 - **Name**: enter the account name.
 - **Host name**: enter the name of the incoming mail server.
 - **Type**: select the protocol of the mail server.
 - **Login ID**: enter the login ID.
 - **Password**: enter the login password.
 - **Use same host name for outgoing**: select to use the same name for the outgoing mail server. Availability of the following options depends on this setting.
 - **Host name**: enter the name of the outgoing mail server
 - **Requires authentication**: select to use authentication for accessing the outgoing mail server. Availability of the following options depends on this setting.

- **Use same settings as incoming:** select to use the same settings as incoming mail serve.

4. When you have finished, tap .

Editing an account

1. From the eMail screen, tap **Menu** → **Settings**.
2. Select the account you want from the service list.
3. Tap **Menu** → **Edit**.
4. Change the account information.
5. When you have finished, tap .
6. Tap **Yes** to update the account.






Sending an e-mail

You can generate e-mails offline or online.


In Offline mode, you cannot send an e-mail directly from your phone, but can create and send them later when you synchronise the phone to your computer. Before creating an e-mail in Offline mode, you must install the PopSync program. For details, see page 19.

In addition to synchronising e-mails with your computer, you can send and receive e-mails by connecting to your mail server. Before using the online e-mail service, you must configure an e-mail account. When your phone is connected to the e-mail server, new e-mails are downloaded to the Inbox folder on your phone and e-mails in the Draft folder on your phone are sent. When you use an **IMAP4** server, e-mails which have been deleted on the e-mail server are removed from the Inbox folder of the phone.

Sending an e-mail offline

1. On the eMail screen, tap **Inbox** and select any mail box in the Local account.
2. Tap  at the bottom of the screen.
3. Enter an e-mail address on the **To** line.
To have the e-mail sent to multiple addresses, tap  and enter an additional address. You can remove an address by tapping .
4. Enter the mail subject on the **Subject** line.
5. In the text field, enter the mail text.
To add attachments, tap **Menu** and then **Show attachment**. Tap  and select a file to attach from the Documents folder, and then tap **OK**.
6. When you have finished, tap  to queue the e-mail. The e-mail is saved in the Draft folder of the Local service.

To synchronise e-mails:



1. Connect your phone to your computer using a USB cable. Make sure that the phone is turned on.
2. In the PopSync window, check the **E-Mail** box and click .

Note that **Outlook** must be selected in **Sync Setup**. For details about the PopSync program, refer to the PopSync User's guide on the CD.

The e-mails in the Draft folder on your phone are transferred to Microsoft Outlook on your computer. Then the Microsoft Outlook program sends your e-mails.

Sending an e-mail online

1. On the eMail screen, tap **Inbox** and select a message box of your e-mail account.


2. Tap  at the bottom of the screen.
3. Create an e-mail. See page 71.
4. When you have finished, tap  to send the e-mail. You can view the e-mail in the Sent folder on your phone.

Receiving an e-mail

As with sending e-mails, you can receive e-mails offline, via synchronisation, or online.


Viewing an e-mail offline

You can receive e-mails by synchronising with Microsoft Outlook on your computer.

1. Connect your phone to your computer using an optional USB cable. The PopSync program automatically runs.
2. In the PopSync window, check the **E-Mail** box and click .
E-mails are copied from the Inbox folder of Microsoft Outlook on your computer to the Inbox folder on your phone. Note that attached files will not synchronise.
3. Tap the e-mail you want to view. The selected e-mail contents display.

Viewing e-mails online

You can receive e-mails through your mail server directly to your phone.

1. On the eMail screen, tap the message box button and select an e-mail account.
2. Tap  to receive new e-mails from the e-mail server.
3. Tap the e-mail you want to view.

Using e-mail options

While viewing an e-mail, you can access the following options by tapping **Menu**:

Reply: allows you to reply to the sender.

Reply all: allows you to reply to both the sender and all other recipients.

Forward: allows you to forward the received e-mail to other people.

Delete: deletes the e-mail.

TTS (Text to speech): reads the e-mail text audibly to you.

Close: exit the current screen.

Managing e-mail folders

Local mail folders

Messages display in folders preset for the service: Inbox, Draft.

Inbox: If you synchronise your phone with Microsoft Outlook through PopSync, PopSync copies e-mails from the Microsoft Outlook Inbox.

Draft: stores draft mails that have not been sent. If you synchronise your phone with Microsoft Outlook through PopSync, the e-mails are sent to the Microsoft Outlook Outbox and then to the specified recipients.

Online mail folders

E-mails display in folders preset for each service: Inbox, Sent, and Draft, or ones you have created.

Inbox: stores all of the e-mails received from the mail server.

Sent: stores all of the e-mails that have been sent to the mail server.

Draft: stores draft mails that have not been sent to the mail server.

For an IMAP4 server, you can import mail folders from the server. Tap **Menu** → **Get IMAP Folder**.

Configuring e-mail options

On the eMail screen, tap **Menu** → **Settings** → **Menu** → **Option**. You can configure the following options:

New messages only: You can set the phone to receive only new e-mails from the IMAP4 server.

Remove received messages from server(pop3): This is only for a POP3 server. A server removes e-mails after transferring them to your phone.

Limit message size: You can set a size limit for your e-mails. Your phone will not accept an e-mail from the mail server if it exceeds the set limit.

Encoding: allows you to select the encoding type from the list.

Word Wrap: If you check this option, your phone automatically moves words which would extend beyond the right margin to the following line.



Trace Messenger



Your phone provides the same chat environment as MSN Messenger or ICQ Messenger on your computer. These features include:

- seeing who is online.

- sending and receiving instant messages. When a new message is received, the message icon blinks and you also hear an alert.
- having an instant message conversation with a group of contacts.
- telling contacts you are unavailable.
- blocking contacts from seeing your online status.

To chat with other people through Trace Messenger, you must have a passport to use the MSN Messenger or ICQ Messenger service.

To access Trace Messenger:

From the Application Launcher, tap  and select **Trace Messenger** (.

Signing in to Trace Messenger

1. On the Trace Messenger home screen, tap **Login**.

2. Enter your account ID.

If you use MSN Messenger, check the box next to **MSN ID** and enter the mail address.

If you use ICQ Messenger, check the box next to **ICQ#** and enter the ICQ number.

3. Enter the password in the **Password** field.

Select the **Save Password** check box to save the password.

4. Tap **Connect** to sign in to Trace Messenger.

Chatting with contacts

1. Make sure that you have signed in to Trace Messenger.

2. On the Buddy List screen, you can chat with the contact by tapping and holding the contact's name and then select **Send IM** from the pop-up menu.

To send an e-mail to the contact, tap and hold the contact's name and select **Send Mail**.

3. Enter your message.

To enter a preset message, tap **Menu** → **Preset**. For details about preset messages, see page 77.

If you are an MSN Messenger user, you can invite another contact to join an ongoing chat. Select the contact you want to invite, and then tap **Menu** → **Invite**.

4. Tap **Send** to send your message.

Ending a chat

- To sign out of Trace Messenger, tap **Menu** → **Logout**.
- To exit, tap ✕.

Note: If you do not sign out of Trace Messenger, your data connection will remain open. This may result in additional charges from your service provider.

Configuring messenger settings

1. On the Trace Messenger home screen or the Messenger Buddy List screen, tap **Menu** → **Setup**.
2. Configure your MSN or ICQ login number and password.
3. Check the options you want. The following options are available:
 - **Save Password**: saves your password.

- **Hide Offline Buddy:** hides or displays your offline contacts on the buddy list.
- **Sound On:** selects whether or not the sound is turned on when you receive a new instant message, the connection to Trace Messenger is completed, or a contact in the buddy list signs into Trace Messenger.
- **Notify Buddy Login:** alerts you when a contact on the buddy list signs into Trace Messenger.
- **Keep Connection:** selects whether or not your phone maintains a connection to Trace Messenger when you don't use the messenger for a specific period.

4. Tap **Ok** to save your settings.

Creating preset messages

You can preset up to five messages that you use most frequently.

1. On the Trace Messenger home screen or the buddy list screen, tap **Menu** → **Preset**.
2. Tap an empty entry and enter your text.
3. Tap **Ok** to save the text.

Saving instant messages

You can save your chat as a text file and then view, manage, or delete the chat.

To save the contents of your chat:

While you are having a conversation, tap **Menu** → **Save**. The messages are saved as a text file.

To view a saved chat:

1. Tap **Menu** → **History**.



2. Select the file you want to view and tap **View**.

QQ Messenger

Using QQ Messenger, you can have great one-to-one text "conversations" via Instant Messaging (IM).

To use this application, you first need to register as a QQ user and receive a user id number and password through the WAP browser program on your computer.

To access QQ Messenger:

From the Application Launcher, tap  and select **QQ Messenger** ().

Signing in to QQ Messenger

1. On the QQ Messenger home screen, enter your number in the **QQ** field.
2. Enter your password in the **Password** field.
Select the **Save password** check box to save the password.
3. Tap **Login** to sign in to the QQ Messenger.

Setting the buddy list

When you have signed in to the QQ Messenger, the buddy list screen appears. Before starting a chat, set up your buddy list.

Adding a buddy

You can add a buddy from the Friends group, the Strangers group, or an online contact list.

To add from the Friends group:

1. Tap **Friends** → **Add buddy**.
2. Enter the number of the contact you want to add and tap **Add**.

To add from an online contact list:


1. From the buddy list screen, tap **Menu** → **Search buddy**.
2. Enter contact information for searching and tap **Search**.
3. Select the contact you want, and then **Add buddy** from the pop-up menu.

Deleting a buddy

Select a buddy and then select **Delete buddy** from the pop-up menu.

Viewing online buddies


You can change the buddy list to view the buddies who are currently signed in to QQ Messenger.

Tap  to view online buddies only. Tap the icon again to view all buddies.

Chatting with contacts

You can start a chat by sending a message to a contact, or replying to an incoming message.

Sending a message

1. Make sure that you have signed in to QQ Messenger.
2. On the buddy list, tap a contact and tap .
3. Enter your message.

4. Tap **Send** to send your message.

Replying to a sender

When an instant message comes in, a message icon appears next to the contact's number on the buddy list.

1. Tap the icon to view the message.
2. Tap **Reply**.
3. Enter the message and tap **Send**.

Ending a chat

- To sign out of QQ Messenger, tap **Menu** → **Logout**.
- To exit, tap ✕.

Note: If you do not sign out of QQ Messenger, your data connection will remain open. This may result in additional charges from your service provider.

Changing your login status

If you don't want other contacts to know if you are logged in or out, change the status display setting.

1. On the buddy list screen, tap **Menu** → **Status**.
2. Select the setting you want.

Viewing chatting notes

QQ Messenger stores your chatting notes containing instant messages you have sent and received during chats as chatting logs.

To view a chatting note:

1. On the buddy list, tap **Menu** → **Chatting notes**.
2. Select a note.

Uni-Main



The Uni-Main application, supplied by your CDMA service provider, gives you access to the wireless web, mail, or Java services. The contents available in each menu option may be different, depending on the service provider. For further details, contact your service provider.

Note: In this menu, you may not be able to use stylus pen.


Wap

If your service provider offers over-the-air digital data coverage in your area, you can use the Wap application for wireless access to Internet sites.

To access Wap:

From the Application Launcher, tap  and select **Wap** (). The phone is connected to the network and loads the homepage of the WAP service given by your service provider.

Navigating the WAP browser

Scroll to an option by pressing the Navigation keys and access it by pressing  or tapping **OK**.

Using WAP browser options

Tap **Menu** to access the following options:

Home: returns the display to the homepage.

History: opens the list of pages you accessed recently.

Forward: moves to the next page while navigating pages in history back and forth.

Bookmarks: opens the bookmark list. You can add or delete bookmarks, or assign hot keys to the bookmarks.

PUSH Message: display the WAP push messages received from the server.

Reload: reloads the current page with updated information.

Go To URL: allows you enter a URL manually.

Search: search for a page by entering a keyword.

Snapshots: allows you to save the current page as an image.

Save Items: allows you to save media items on the current page.

Show URL: display the URL address of the site where you are currently connected.

Exit: exit the WAP browser.

Advanced: provides advanced options:

- **Restart Browser:** restarts the WAP browser without ending it.
- **Delete Cookies:** deletes cookies stored in the phone. Cookies are pieces of personal information sent to a WAP server while you are navigating the Internet.
- **Homepage:** allows you to change the page to be used for your homepage.
- **Multimedia:** allows you to enable downloads of media items from WAP pages.
- **Scroll Mode:** allows you to select the display scroll mode or speed.

- **Send Referrer:** allows you to set the server to send referrer information each connection.
- **Connection Timeout:** allows you to select the length of time the browser waits for the answer from a WAP server after sending a request.
- **Key Press Timeout:** allows you to set the intervals between keypresses.
- **Security:** allows you to set up the security. You can enable secure prompts or authentication caching, or manage certificates.
- **Reset to Default:** resets all your settings in the Browser Menu to their default status.

Send Link: send the URL of the current page by e-mail.



Clear: clear information stored in the History list, the cache, and the Auto Fill form. Also deletes cookies.

About...: shows version and copyright information and certificate information.

Mail

Use this menu to access the Mail service, which allows you to send or receive mails containing various media items, such as images, sounds, name cards, and applications phone to phone or phone to e-mail.

To access Mail:


From the Application Launcher, tap  and select **Mail** (.

Sending a new mail

1. From the Mail screen, select **New Mail** and tap **OK**.
2. When the **To** field is highlighted, tap **Edit** to access the Recipient list.
3. Tap **Edit**.

4. Enter a destination address or phone number and tap **OK**.
5. Repeat steps 3 and 4 to send your mail to more than one person.
6. On the Recipient List screen, tap **Menu** to access the following options:
 - **Addr Book**: allows you to retrieve an e-mail address or a phone number from Address.
 - **Sent History**: allows you to retrieve an e-mail address or a phone number from the list of the mails you have sent.
 - **Addr Group**: allows you to select a caller group to access the mail addresses or phone numbers of members of that group.
 - **Profiles**: allows you to enter your e-mail address automatically.
 - **Delete**: deletes the selected recipient. This option is available only when an e-mail address or a phone number is selected.
 - **Move to To**: changes the selected address to a To address. This option displays when you have selected a Cc or Bcc address.
 - **Move to Cc**: changes the selected address to a Cc address. This option displays when you have selected a To or Bcc address.
 - **Move to Bcc**: changes the selected address to a Bcc address. This option displays when you have selected a To or Cc address.
7. When you have finished, tap **OK** to return to the New Mail screen.
8. Move to the subject line and tap **Edit**.
9. Enter the subject of your mail and tap **OK**.
10. Move to the attachment line and tap **Edit**.

11. Add files using the following options:

- **Select Attach:** allows you to add various types of files. Tap  and select a file. You can add up to 5 files.
- **Select SMIL Attach:** allows you to add an SMIL file.
- **Edit SMIL:** allows you to create or edit an SMIL file. See page 87.

12. Move to the body of your mail and tap **Edit**.

13. Write your mail text and tap **OK**.

Note: When you attach an SMIL file, you are unable to write text.

14. Tap **Send** to send the mail.

Note: You can save the mail you have created by tapping **Menu** → **Save as New**.

Viewing received mails

To receive new mails from the server, select **Check New Mail** from the Mail screen and tap **OK**. New mails, if any, are downloaded to the phone.

To view an incoming mail:

1. From the Mail screen, select **Inbox** and tap **OK**. The folder list appears.

Received mails are saved in the **Folder0** folder by default. If you have set filters, a new mail will be saved in the folder containing the filter that corresponds to the sender's address.

2. Select a folder and tap **OK**.
3. Scroll to the mail you want and tap **Display**. Items attached to the mail will display with the text.

While viewing a mail, tap **Menu** to access the following options:

Reply: allows you to send a reply to the sender.

Reply All: allows you to send a reply to the sender and all of the recipients of the mail.

Forward: allows you to forward the mail to other destinations.

Protect: locks the mail to keep it from being deleted.

Delete: deletes the mail.

Move to Folder: moves the mail to another folder.

Show Full Address: shows the addresses of the sender and all of the recipients of the mail.

Copy Mail Body: copy the mail text. you can paste the text when composing a new e-mail.

Managing mail folders in the Inbox

Your phone provides you with the potential for up to 10 mail folders to manage your mails. Scroll to the folder you want and tap **Menu** to access the following options for managing folders:

Add Filter: allows you to set a filter, which arranges incoming mails by sender's addresses. This option is not available for **Folder0**.

Edit Folder Name: allows you to change the folder name.

Re-Filter: allows you to rearrange received mails, according to the filter set for the current folder.

Delete All: allows you to delete all of the mails stored in the selected folder.

Reset Folder: allows you to restore the default settings of the selected folder.

Viewing sent or saved mails

The Send Box stores mails you have sent or tried to send.

To view an outgoing mail:

1. From the Mail screen, select **Send Box** and tap **OK**.
2. Scroll to the mail you want and select **Display** to open the mail.

While viewing the mail or mail list, tap **Menu** to access the following options. available options may different according to screen you view:

Edit: allows you to edit the selected mail. This option displays when you select the e-mails you didn't send.

Copy & Edit: copy and edit the selected message.

Protect ON/OFF: prevents the selected mail from being deleted.

Delete: deletes the selected mail.

Sort: allows you to change the sort order of the mail list.

Show Full Addr: displays all recipient's addresses.

Copy Mail Body: copy the mail text. You can paste the text when composing a new e-mail.


1-In/3-In View: allows you to change the mail list mode. 3-line View mode displays the time and date, the recipient's e-mail address, and the mail subject on all at once. 1-line View mode displays only one of them. You can change the item to be displayed on the mail list by tapping **Change**.

Using SMIL Editor

You can create a new SMIL file, which is a combination of an image, a sound clip, and text.

To create a new SMIL file:

1. From the Mail screen, select **SMIL Editor** and tap **OK**.

2. Select **New SMIL** and tap **OK**.
3. Select **Add New SLIDE** and tap **Edit**.
4. Select a field and tap **Edit**.
5. Select an image or audio file and press , or enter mail text and tap **OK**.

You can access the following options by tapping **Menu** on the image, text, or audio line on a slide:

- **Set Start:** allows you to set the time delay before the currently selected item displays when you open the slide.
- **Set End:** allows you to set the length of time the currently selected item will be displayed before the next item automatically displays.
- **Layout:** allows you to check and change the layout for your SMIL slide. you can't access this options when you select audio line.
- **Preview:** displays the SMIL file you have created.
- **Delete Image/Delete Text/Delete Audio:** deletes the added image, text, or sound.

6. Tap **OK** to save the slide.
7. To add more slides, repeat steps 3 to 6. You can add up to 5 slides for an SMIL file.

While you are viewing a slide list, tap **Menu** to access the following options:

- **SLIDE During:** allows you to set how long one slide displays on the message presentation screen. After a specified time, the display automatically scrolls to the next slide.
- **SLIDE Move:** moves the selected slide to the position you want.
- **SLIDE Delete:** deletes the selected slide.

8. When you have finished, tap **OK** to save the SMIL file.

9. Tap **Yes** to confirm the message.

To edit SMIL files:

1. From the SMIL Editor screen, select **Open SMIL** and tap **OK**.
2. Select and Tap the SMIL file you want to edit.
3. Move to the slide you want and tap **Edit**.
4. Change the items on the slide and save the file as you would when creating a slide.

Changing mail settings

You can configure various settings that are required when you send or receive mails.

From the Mail screen, select **Mail Settings** and tap **OK**. Customise the following setting options:

Receiving & View: allows you to change the settings that control how mails are received and viewed.

- **Auto-Rcving:** allows you to set whether or not your phone retrieves new incoming mails from your mail server without notification.
- **Rcving Type:** allows you to select which parts of mails you want to retrieve, such as all the mails, assigned sender's mails, or the title of mail, from the Mail server.
- **Receive Atchmnt:** allows you to select whether or not the phone retrieve a mail with attachments from the Mail server.
- **Play Atchmnt:** allows you to set whether or not the phone first displays attached files in a mail and then shows you the body of the mail.
- **Show Folders:** allows you to set whether or not the phone displays mail folders.

Send & New Mail: allows you to change the settings that control how mails are created and sent.

- **Quote Original:** allows you to set whether or not the phone includes the original mail text in a reply.
- **Addr Group:** allows you to manage caller groups.
- **Encoding Type:** allows you to select an encoding type.
- **Del Sent History:** allows you to delete e-mails you have sent.

Register Account: allows you to register your mail account to the Mail server or delete your account from the server.


Others: allows you to access the website preset by your service provider to manage your Mail service.

View Mail Settings: allows you to check the current mail settings.

About: displays the software version and copyright information of your Mail service.

Resetting Mail



You can delete all mails from the currently selected mail list or mail box, or reset the mail settings to their default status.

Tap  at the bottom of any screen in Mail and select the option you want.

Magic

The Magic menu enables you to download various Java applications from a Java server and to access and manage them.

To access Magic:

From the Application Launcher, tap  and select **Magic** (.

Downloading an application

1. From the Magic screen, select **Portal Site** and tap **Enter**.

The phone launches the WAP browser and you are connected to the associated web site preset by your service provider. You can browse available applications.

2. Select the application you want and follow the onscreen instructions to download it.



Using Java options

1. From the Magic screen, tap **Menu**.
2. Select a setting option.
 - **Make Folder:** allows you to add folders to manage downloaded Java applications.
 - **Delete:** deletes the selected folder.
 - **Rename:** allows you to edit the name of the selected file.
 - **System Info:** shows memory information, and version and copyright information.
 - **Registry:** sends the registration message to the Java server.
3. When you have finished, tap **Back**.

Map



Use this menu to access a location service based on GPS positioning technology. With this service, you can easily find friends, gas stations, restaurants, and other locations.

To access Map:

From the Application Launcher, tap  and select **Map** (.

Info



If you are using a UTK UIM card that provides additional services such as news, mails, online banking, or faxes, you can access **Info** from the Uni-Main application launcher. For further details, see your UIM card instructions.

From the Application Launcher, tap  and select **Info** (.

Channel

The Channel menu gives you access to the VOD (Video on demand) service preset by your service provider to enjoy various streaming video content or download video files to your phone.

To access Channel:




From the Application Launcher, tap  and select **Channel** (.

Personal information management

Address

In Address, you can store a contact card containing a person's contact information, such as multiple phone numbers, e-mail and street addresses, web pages, and other information. You can also add a personal ring tone or a thumbnail image to a contact card.



To access Address:


From the Application Launcher, tap  and select **Address** () , or press .

Creating a new contact card

You can create a new contact card either in the Address application or on the Phone screen, and save it selectively in the phone's memory (Address) or on the R-UIM/SIM card.



Creating a new card in Address

1. Tap  at the bottom of the Address screen. The New Address screen displays.
2. Set the storage location to **Local** from the **Location** pick list.
3. To add a caller ID image to the contact card, tap the image area and select the source. The following options are available:
 - **File**: allows you to use an image file currently stored in the phone's memory and memory card.
 - **Camera**: allows you to take a photo using the camera on your phone. For details, see page 114. After taking a photo, tap  to add it to the contact card.

- **No image:** removes the added image.
4. Specify contact information in each input field.
 5. When you have finished, tap  to save the card.

Creating a new card on your R-UIM/SIM card

If you store your contact information on the R-UIM/SIM card, you can copy or share all contact information easily by inserting the card into another device.


 
1. On the Address screen, tap .
2. Select a card from the **Location** pick list.
3. At the **Name** and **Phone number** field, enter contact information.
4. Select the memory location number from the **Location** box.
Tap the upper half of the box to increase the number or the lower half to decrease the number.
5. When you have finished, tap  to save the contact card.

Creating a new card from the Phone screen

1. From the Phone screen, enter the number you want to save.
To insert a dialling pause for special phone services, tap **Menu** → **Pause**.
2. When you are sure that the number is correct, Tap **Menu** → **Save**.
3. Select the phone number type and tap **OK**.

4. Enter additional information about the contact, according to the selected number type.

Viewing contact cards

When you open the Address application, the Address list displays the names of your contacts alphabetically, along with icons indicating the types of contact information stored, such as a work phone number () or a home phone number ()

Accessing a contact card

1. To view contact cards assigned to a specific category, tap the category field at the top right of the screen and select the category you want to view.
2. To find a contact card, enter the first few letters of the contact's name in the search field at the top left of the screen.
3. When you find the contact card you want, tap it.

Using contact card options

While viewing card details, you can access the following options by tapping **Menu**:

Edit: allows you to change information.

Delete: removes the selected card from the Address list.



Phone call: dials the phone number of the contact. You can choose which number to dial if there is more than one.

Send: sends the card to another device using the Beaming or Bluetooth. For details about beaming data, see page 32.

Send Message: allows you to send an SMS message to a mobile number.

Close: exit the current screen.






Editing a contact card

1. On the Address list, tap the contact card you want to change.
2. Tap .
3. Make the changes in the same way as you would when creating a new card.
4. When you have finished, tap  to save the change(s).

Entering owner information

You can set a name card. You can then send it to other devices via Beaming communication.

Creating owner information

1. From the Application Launcher, tap  and select **Owner** ().
2. Tap .
3. Set personal information in each field, as you would when creating a contact card in Address.
4. When you have finished, tap .
5. Tap  to exit the screen.

Sending your name card


Before sending, make sure that the infrared port is active; see page 158.

1. Align the infrared ports of your phone and another device.
2. From the Owner screen, tap **Menu** → **Send** → **Via Beaming**.


Copying contact cards between the R-UIM/SIM card and Address

You can copy selected contact card to the R-UIM/SIM card or to the phone.

Copying from Address to the R-UIM/SIM card

1. On the Address list, select the contact card you want to copy and tap **Menu** → **Copy to Card**.
2. On the Copy to Card screen, select a storage location from the pick list.
3. Tap  to copy the card.


Copying from the R-UIM/SIM card to Address

1. On the Address list, tap the category field and select a list from the R-UIM/SIM card.
2. Select the contact card you want to copy and tap **Menu** → **Copy to Address**.
3. On the Copy to Address screen, select a category from the pick list.
4. Tap  to copy the contact card.

Deleting contact cards

You can delete contact cards in Address one by one or you can delete all of the contact cards in a selected category at the same time.

Deleting a contact card

1. Open the contact card you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.



Deleting all contact cards

1. From the contact card list, select a category.
2. Tap **Menu** → **Delete** → **All**.
3. Tap **Yes** to confirm the deletion.


Schedule

You can schedule appointments, including meetings and other events, and view them by day, week, or month.

To access Schedule:

From the Application Launcher, tap  and select **Schedule** ().

Scheduling an event


1. On the Schedule screen, tap .

2. Set event information in each field.

Tap the **Type** field to choose the type of event, **Appointment**, **Meeting**, **Telephone**, **Etc**, or **Memorial Day**. When you select **Memorial Day**, the **All day** option is checked automatically.


When you create a new event or edit a event, check the **Private** box. The record that you mark as private is not shown on the list. For details, See page 28

To set the event to recur at regular intervals, select an option from the **Repeat** pick list.

3. When you have finished, tap  to save the event.

Viewing your schedule

On the Schedule screen, your schedule can appear in three different views: Day, Week, or Month.

When you access Schedule, your schedule appears in Month view. To change the view mode, tap .

Month view

The Month view provides an overview of your monthly schedule. Each type of event is assigned a square icon with a different colour: Red (All day schedule), Blue (Appointment), Green (Meeting), Orange (Telephone), and Purple (Etc).

Tap the date containing the event you want to view. The Day View screen for that date appears. To view the details on the Day View screen, see page 102.



Week view

Week view shows your schedule for the specified week. This allows you to get a quick indication of your free and occupied time, and to schedule an event for a selected day easily.

Coloured time cells indicate that there is a scheduled event: Blue (Appointment), Green (Meeting), Orange (Telephone), and Purple (Etc). All day events display as a black dot below the corresponding date.



Tap the time cell you want to open.

Day view

Day view displays events scheduled for the selected day. The events are shown in chronological order. An all day event always displays at the top of the Day view. The alarm indicator () and the repeating event indicator () are shown next to the event, if they have been set.

Tap the event you want to view.

Editing an event

1. Open the event you want to edit.
2. Tap .
3. Change the information in the same way as you would when creating a new appointment.
4. When you have finished, tap  to save the changes and close the screen.

Sending an event

You can beam the current event to another phone using the IrDA port or Bluetooth. Tap **Menu** → **Send** → a sending method.

- To send the event via Beaming, see page 32.
- To send the event via Bluetooth, see page 34.

Setting event alarm options


You can change the settings for event alarms. From any view mode in Schedule, tap **Menu** → **Settings**.

You can change the alarm melody, and set the phone to maximise the device volume for sounding event alarms.

Deleting events

You can delete events one by one, or for a specific period, or all events at the same time.

Deleting an event

1. Open the event you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.

Deleting events for a specific period

1. From any view of Schedule, tap **Menu** → **Delete** → **Events**.
2. Specify the period by selecting the starting day and ending day.
3. Tap **Delete** to confirm the deletion.



Deleting all events

1. From any view of Schedule, tap **Menu** → **Delete** → **All**.
2. Tap **Yes** to confirm the deletion.



To Do

To Do is a convenient place to create reminders and prioritise the things that you need to do.

To access To Do:

From the Application Launcher, tap  and select **To Do** ().

Creating a task

1. On the To Do screen, tap .
2. Set task information in each field.
 - Tap the **Due** field and select the due date.
If you don't want to set a due date for the task, select **No Due Date** check box.
 - To set a priority for the task, select the importance rate of your task from the **Priority** pick list.
 - Select the starting percentage of the progress on your task from the **Progress** pick list.
3. When you have finished, tap  to save the task.



Viewing tasks

When you access To Do, the task list displays. The task's priority displays in front of its title. Title of overdue tasks are displayed in red.

To mark a task as complete, tap the box in front of the task. A check mark will appear.

To view the task details, tap the task on the list.

Editing a task

1. open the task you want to edit.
2. Tap .
3. Make the changes in the same way as you would when creating a new task.
4. When you have finished, tap  to save the changes.

Sending a task


You can beam the current task to another phone using the IrDA port or Bluetooth. Tap **Menu** → **Send** → a sending option.

- To send a task via Beaming, see page 32.
- To send a task via Bluetooth, see page 34.

Deleting tasks

You can delete tasks one by one or all tasks at the same time.

Deleting a task

1. Open the task you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.



Deleting all tasks

1. From the task list, tap **Menu** → **Delete** → **All**.
2. Tap **Yes** to confirm the deletion.


Memo

You can take notes on your phone using your stylus pen, just as you would use a pen to write on a notepad. Memo provides a place to take notes that are not associated with Address, Schedule, or To Do. You can enter text and draw a picture.


To access Memo:

From the Application Launcher tap  and select **Memo** (.

Creating a memo

1. On the Memo screen, tap .
2. Enter the text you want.

3. To draw a picture, tap **Drawing**. You can use the tools you need from the tool palette at the top of the screen.


4. When you have finished, tap ✕.
5. Tap  to save the memo.


Viewing a memo

The Memo list displays the first line of each memo you create. This makes it easy to locate and review specific memos.

To view a memo, tap the memo. To view the drawing in the memo on the full screen, tap drawing.

Editing a memo

1. On the Memo list, tap the memo you want to edit.
2. Tap .


3. Make changes in the same way as you would when creating a memo.
4. When you are finished, tap  to save the changes.

Sending a memo

You can beam the current memo to another phone using the Beaming or Bluetooth. **Menu** → **Send** → a sending option.

- To send the memo via Beaming, see page 32.
- To send the memo via Bluetooth, see page 34.

Using TTS (Text to Speech)


You can listen to memo contents by using Memo's TTS function. The text in a memo is read audibly to you. To listen to the memo contents, tap  on a memo screen.

You can turn TTS on or off by tapping **Menu** from the memo list and selecting **Settings**.

Deleting memos

You can delete memos one by one or all memos at the same time.

Deleting a memo

1. Open the memo you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.



Deleting all memos

1. From the memo list, tap **Menu** → **Delete** → **All**.
2. Tap **Yes** to confirm the deletion.


Money

Money helps you keep track of your daily, weekly, or monthly income and expenses, and balance your finances. You can assign your expenses to categories to organise and view them in logical groups.



To access Money:


From the Application Launcher, tap  and select **Money** ().

Creating a new account

1. From the Money screen, tap .
2. Set account information in each field.

You can record dates, types of expenses, amount spent, payment method, and other details associated with any money that you spend or earn.

In the **Amount** field, enter the amount of money you spent or earned and set  for income or  for expenses.

3. When you have finished, tap  to save the account.


 
Viewing money accounts

When you access Money, the screen shows a list of accounts and the balance of income and expenses.



Tap an account to view its details.

Editing a Money field item

You can preset titles for accounts and places so that you can easily and quickly select them when creating new accounts.

1. On the Money screen, tap **Menu** → **Edit Field Item**.
2. Select **Title** or **Place** from the pick list.
3. If you want to add a new item, tap  and enter the item.
If you want to change the item's name, tap the item and tap **Menu** → **Edit**.
If you want to delete the item, tap the item and tap **Menu** → **Delete**, and then tap **Yes** to confirm the deletion.
4. When you have finished, tap  to exit the screen.

Editing an account

1. Open the account you want to edit.
2. Tap .
3. Make changes in the same way as you would when creating an account.
4. When you have finished, tap .

Setting the date range


You can set the date range for money management. The total sum and accounts displayed on the Money screen will include only the expenses and income for the specified period.

1. Tap **Menu** → **Settings**.
2. Select the date range from the pick list.
3. Tap ✕ to save the change.

Deleting accounts

You can delete accounts one by one or all accounts at the same time.

Deleting an account

1. Open the account you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.



Deleting all accounts

1. From the account list, tap **Menu** → **Delete** → **All**.
2. Tap **Yes** to confirm the deletion.



The DioBCR application allows you to take a photo of a name card and extract contact information from the card, and save it as a new contact in Address.

To access DioBCR:







From the Application Launcher, tap  and select **DioBCR** ()

Taking a namecard photo

You can take a name card photo and save it as a new contact in Address.


Notes:

- Hold the phone firmly while taking the name card photo.
 - Be careful not to let any shadows on the name card.
 - Place the name card on level, evenly lit place and photograph it.
 - Depending on the shooting environment, the result of the name card conversion may not be satisfying.
 - if the recognize result is not satisfying, you should try to center the information such as name, phone number, e-mail address and so forth within the yellow frame and photograph it again.
-

1. From the DioBCR screen, change the camera settings, use the onscreen icons.
 - :flash on, :flash off
 - :horizontal direction card, :vertical direction card
2. Center the name card within the yellow frame.
3. Press  or  to take the photo.

Converting to a new contact card in Address

1. After taking photo, your phone automatically recognises the photographed name card and converts it to contact card format.

2. Phone displays the contact card preview.
3. Enter or revised the contact card, if necessary, and tap **Menu** → **Save to Address** or  to save the contact card.
To access the Address, tap **Menu** → **Go to Address**.
To take the namecard photo again, tap **Menu** → **Retry**.
To view the version of the DioBCR, tap **Menu** → **About**.
To exit the DioBCR, tap **Menu** → **Quit**.




Entertainment

Camera

With the built-in camera, you can take photos of people or events or record videos while on the move. Your phone's camera produces JPEG photos and 3G2 videos.














 



 
 

Note: When you are adjusting the White balance, the color on the phone may be changed suddenly. in this case, you should restart the Camera application. if it continually not working properly, take it to your service center.



Taking a photo

1. Press and hold  to turn on the phone. You can also tap  from the Application Launcher and select **Camera** (). The viewfinder appears in Landscape (horizontal) mode.


Tapping on the viewfinder screen will switches the viewfinder mode to Grid mode, No icon mode, or Normal mode.

2. Adjust the camera settings using the following icons on the screen.

Icon	Description
	switches the camera mode:  (Single shot),  (Camcorder),  (uni-Mail photo), or  (Multi shot)
	selects an image resolution.
AWB	adjusts the white balance: AWB (Auto),  (Daylight),  (Cloudy),  (Tungsten), or  (Fluorescent)
	selects a scene mode:  (Auto),  (Night),  (Macro), or  (Portrait)
 OFF	sets a time delay before taking a photo.
	turns the flash on or off:  (On) or  (Off).
	opens the Camera or Camcorder folder in Photo Album, depending on the current mode.

Press the Left or Right navigation key  to adjust the image brightness, and the Up or Down navigation key  to zoom in or out.

You can also access camera options by tapping **Menu**. See the next section.

pressing the  adjusts the focus. The focus frame on the screen changes to green and back to white.

3. Press and hold  or press  to take a photo. The photo is saved automatically.

Options available in Camera mode

When you tap **Menu** from the Camera preview screen, the following options are available:

Mode: allows you to change the camera mode. **Single shot**, **uni-Mail photo** and **Multi shot** are available for taking a photo, and **Camcorder** is available for recording a video.

Resolution: allows you to view or select an image resolution.

White balance: allows you to customise the white balance to make your photo warmer or cooler, depending on lighting conditions.

 


Scene mode: allows you to change the scene mode for the type of subject you want to capture.

Self timer: allows you to set a time delay before the camera takes a photo.

Flash: allows you to change the flash settings.

Effect: allows you to apply a photo effect or a frame effect.

Viewing photos

To view the last photo taken, press  from the Camera screen. You can delete the photo by tapping  or return to the Camera screen by press .

To view all of your photos, tap  from the Camera screen. The **Camera** folder in Photo Album opens and displays thumbnail images of your photos.

Configuring Camera mode



On the Camera preview screen, tap **Menu** → **Settings** to access the following options for Camera mode:

Save location: allows you to select a memory location.

File name Prefix: allows you to set the default name prefix for photos.

Photo Quality: allows you to select an image quality setting.

Instant review: allows you to immediately see a photo after taking it. If this option is disabled, the camera will return to Preview mode after saving the photo automatically.



Shutter sound: allows you to select the sound produced when you press and hold  or press .

Auto Focus: allows you to set the camera to adjust the focus Automatically.





Date mark: allows you to set the camera to add a date stamp to your photos.

Image count: allows you to check the number of photos you have taken. Tap **Initialize** to begin a new count.


Recording a video

1. Press and hold  to turn on the camera.
2. Switch to Camcorder mode by tapping  or **Menu** → **Mode** → **Camcorder**.
3. Adjust the camcorder settings using the onscreen icons. See page 115.

You can also access camcorder options by tapping **Menu**. See page 116.

4. Press and hold  or press  to start recording.
5. When you have finished recording, press and hold  or press  to stop. The video is saved automatically.

Playing videos

To view all of your videos, tap  from the Camcorder screen. The **Camcorder** folder in Photo Album opens and displays thumbnail images of your videos.



Configuring Camcorder mode

On the Camcorder screen, tap **Menu** → **Settings** to access the following options for the default settings of Camcorder mode:

Save location: allows you to select a memory location.

File name Prefix: allows you to set the default name prefix for videos.

Instant review: allows you to immediately see a video after recording it. If this options is disabled, the camera will return to Preview mode after saving the video automatically.

Shutter sound: allows you to select the sound produced when you press and hold  or press .



Record volume: allows you to adjust the volume level for audio recording. If you don't want to record audio, select **Sound off**.

Video count: allows you to check the number of videos you have recorded. Tap **Initialize** to begin a new count.

Photo Album




In Photo Album, you can access and manage and videos stored in your phone's memory, or an optional memory card.

To access Photo Album:

From the Application Launcher, tap  and select **Photo Album** ().

Viewing photos





When you open Photo Album, you can view the photos you've taken in the thumbnail images by default.



1. If necessary, tap  and then access the folder you want.
2. Tap the photo you want to open.
The photo displays with the file name and resolution.
3. To view the next or previous image in the selected folder, tap  or  or press the Left or Right navigation key.

For the options available when you are viewing an image, see the following section.

Options available while viewing a photo

Zooming

- Tap  to zoom in or  to zoom out. You can also use the Up or Down navigation key.
- To return to Real size view, tap . To fit the photo to the screen, tap .





- Press **Menu** → **Full screen** or  to view the photo on the Full screen. Tap the screen or press  again to go back to the initial view.

Viewing a slide show

You can view a slide show of all photos that are stored in your current folder.

Tap **Menu** → **Slideshow**. Your phone displays photos one by one. To stop the slide show, tap the screen. From the slide list screen, you can set up the slide show properties by tapping **Menu** → **Settings**.

Rotating a photo

Tap  or press  to rotate the image 90 degrees clockwise. Tap  or press  to rotate the image 90 degrees counterclockwise.

Editing a photo

Tap **Menu** → **Photo Studio**. Select **Color tone** or **Brightness** and change the tone of the photo or adjust the brightness. When you have finished, tap **Menu** → **Save**. If the resolution of the photo is 176X144, you can also select **Frame** and add a decorated frame to the photo.

Setting a photo as a caller ID or wallpaper

- To set a photo as a caller ID image, tap **Menu** → **Set as** → **Address photo**. The New address screen opens with the photo inserted to allow you to create a new contact.
- To set a photo as wallpaper for the Home screen, tap **Menu** → **Set as** → **Home background**.

Sending a photo

You can beam a photo to another phone using Email, Beaming, Bluetooth or Printer. Tap **Menu** → **Send** → a sending method.

- To send the photo by uni-Mail, see page 83.
- To send the photo via Beaming, see page 32.
- To send the photo via Bluetooth, see page 34.
- To send the photo to a printer, see the next section.


Printing a photo

You can print your photos directly from your phone by connecting the phone to a printer with an optional USB cable. First you need to enable USB printing in the USB setup.


1. Connect your phone to the printer with a USB cable.
2. Access Photo Album from the Application Launcher and select the photo you want to print.
3. Tap **Menu** → **Send** → **To Printer**.
4. Set print properties as you need, such as paper size, date stamp, and the number of copies.
5. When you have finished, tap **Start print**.

Adding a note to a photo

1. Open the photo you want.
2. Tap **Menu** → **Information**.
3. From the photo information screen, tap **Edit**.

4. Enter a note and tap .
5. Tap ✕ to exit the screen.

Playing videos


1. On the Photo list screen, tap  and then select the video folder you want.
2. Tap the video you want. The video plays on the Media Player screen.

During playback, tapping on the viewfinder switches to Full screen mode.



Deleting photos or videos

You can delete photos and videos in Photo Album one by one or all of them.

Deleting a photo or video

1. Select a folder.
2. Tap the check box next to the item you want to delete.
3. Tap .
4. Tap **Yes** to confirm the deletion.



To delete all photos or videos

1. Select a folder.
2. Tap  to select all of the items in the folder.
3. Tap .
4. Tap **Yes** to confirm the deletion.


Media Player

Using Media Player, you can play MPEG 1/2 and MP3 files. You can download these files to your phone from a compatible computer or copy them using an optional memory card.

To access Media Player:

From the Application Launcher, tap  and select **Media Player** (). The Media Player screen displays.

Creating a play list and playing files

1. On the Media Player screen, tap  at the bottom of the screen.
2. Tap **Menu** → **Add** → a category.
 - **User files:** Normal music and movie files.

- **VOD files:** Streaming files. For playing these files, you need to connect to the network and will be charged for the connection.
- **DRM files:** Files to which accesses are locked by the Digital Rights Management (DRM) system. To access these files, you need to acquire the licence keys from the website which owns the rights to the content.

For DRM files, you can export to or import from a memory card, if inserted.

3. Select files and Tap **Menu** → **Add** → **Selected** or **All** to add them to the play list.
4. Tap **Menu** → **play** to start playing.

During playback, tapping on the player screen switches between Full screen mode in Landscape view for movie files and Normal view, or between File info and Equalizer views for music files.

When you launch another programme, Playback is paused.

Options available during playback

While playing a file, you can use the following menu options. Tap **Menu** and select the option you want to use:

Play List: opens the play list.

Online Playlist: opens the online playlist to allow you to play streaming content.

MP3 Caption: displays the lyrics if the MP3 file supports the caption feature.

Shuffle: plays files at random.

Repeat: allows you to select the repeat type.

- **No Repeat:** doesn't repeat playback.
- **Repeat This:** repeats the current file.
- **Repeat All:** repeats all of the files in the playlist.

Full Screen: displays the file on the full screen. This option is only available when you play a multimedia file.

SRS WOW: allows you to activate SRS WOW to improve the phone's sound quality.

Button Mapping: allows you to assign the media player functions to the keys on your phone. If you delete the selected map(s), tap **Un-map** or **Un-map All**.

Quit: exits Media Player.

Removing media files from a play list

You can remove media files from a play list. Removing files from the play list does not delete them from the phone's memory. To delete a file permanently, you need to delete it from File Manager.

Removing a file

On the play list screen, select the file you want to remove and tap **Menu** → **Remove**, and then tap **Yes** to confirm the deletion.



Removing more than one file

On the play list screen, tap **Menu** → **Clear List** to remove all of the files from the current play list.

If you want to remove more than one file, but not all, select the files you want. Then tap **Menu** → **Remove**. All of the selected files are removed.

Fruits Cocktail

Your phone provides the Fruits Cocktail game. The goal of this game is to score as many points as possible by swapping adjacent fruits to create a set, either horizontal or vertical, of 3 or more identical fruits. Only one fruit may be moved at a time.

1. From the Application Launcher, tap  and select **Fruits Cocktail** ().
2. To start the game, select **START GAME** on the red bar or tap **Menu** and then **New Game**.

On the Fruits Cocktail home screen, you can use the following options by tapping **Menu**:

- **New Game**: allows you to start a new game.
- **GameMode**: allows you to change the game mode either Normal or Time Trial.
- **High Scores**: shows the High Scores table.
- **Help**: shows the help file for playing the game.
- **Quit**: exits the Fruits Cocktail game.

3. Tap and drag the fruit you want to move.

While playing the game, if you want to pause, tap **Menu** and select **Pause**. To resume the paused game, tap **PAUSE** on the paused screen.



You can get a hint of the game by tapping **HINT**. Note that it decreases the energy gauge.

4. To end the game, tap **X**.
5. Tap **Yes** to confirm ending the game.

Alarm

You can set an alarm to ring at a specific time or activate an hourly alert.

Setting an alarm

1. In the Application Launcher, tap  and select **Alarm** ().
2. Select an alarm type, **Alarm**, **Morning call**, or **Hourly alarm**.
3. Tap the alarm time button below the selected alarm.
4. Set each option.

For an alarm:


- **Time:** allows you to set the time for the alarm to ring.
- **Duration:** allows you to select an repeat option.
- **Melody:** allows you to select an alarm melody. To set the phone to use the highest volume when sounding the alarm, select **Max alarm volume**.

For a morning call:

- **Time:** allows you to set the time for the alarm to ring.
- **Duration:** allows you to select an repeat option.
- **Interval:** allows you to how often the alarm repeats.
- **Melody:** allows you to select an alarm melody. To set the phone to use the highest volume when sounding the alarm, select **Max alarm volume**.

For the hourly alarm:

- **Range:** allows you to set the starting time and the ending time for the hourly alarm.
- **Alert:** allows you to select an alert type.

5. Tap  to save the alarm.



Stopping an alarm

- When an alarm rings, tap **Stop**.
- To deactivate an alarm, deselect it from the Alarm screen.

D-Day

In the D-Day feature, you can calculate how many days, hours and minutes are left before or have passed since a specific event. You can also be alerted when the D-Day counter expires.

To access D-Day:


From the Application Launcher, tap  and select **D-Day** ().

Setting a D-Day counter

1. From the D-Day screen, tap .

2. Set counter information in each field.



If you aren't sure of the exact your D-day date, use the d-day calculator. Tap **D-day Calculator** and set the standard date and the number of days before (-) or after (+) the day. The calculated date is inserted into the **Date** field.

3. When you have finished, tap  to save the counter.

Viewing a D-Day counter

From the D-Day screen, tap the counter you want to view. The counter information appears.


Editing a D-Day counter

1. From the D-Day screen, tap the counter you want to edit.
2. Tap .
3. Make changes as you would when creating a counter.
4. When you have finished, tap  to save the changes.

Deleting D-Day counters

You can delete counters one by one or all counters at the same time.

Deleting a counter

1. Open the counter you want to delete.
2. Tap .
3. Tap **Yes** to confirm the deletion.

Deleting all counters

1. From the counter list, tap **Menu** → **Delete** → **All**.
2. Tap **Yes** to confirm the deletion.

Setting D-Day alarm options



You can change D-Day alarm settings.

1. From the counter list, tap **Menu** → **Settings**.
2. Set each option.
 - **Alarm melody**: allows you to select an alarm melody.
 - **Max alarm volume**: allows you to set the phone to use the highest volume when sounding alarms.
3. When you have finished, tap **X** to save the changes and exit the screen.

Clock

Using Clock, you can set the current date and time, and view times around the world.

To access Clock:


From the Application Launcher, tap  and select **Clock** ().

Setting the date and time

In a CDMA network, when you turn on your phone for the first time, it reads the date and time over the air and automatically sets them.

In a GSM network, the phone doesn't receive time information from the network and you need to set the current time and date.

1. From the Clock screen, tap **Menu** → **Date & Time**.

2. Set the date, time, and GMT.
3. When you have finished, tap  to save the changes.


Changing the clock background

1. In the Clock screen, tap **Menu** → **Background** → **Select**.
2. Select the folder where the desired image file is stored.
3. Select the file in the folder. The image file displays on the clock screen.

To reset your settings to their default status, tap **Menu** → **Background** → **Default**.

Viewing world time

You can check the current time for major cities around the world.

1. On the Clock screen, tap .

2. Tap and drag the cross hairs to select a time zone on the map.



The local date and time display along with an indication of whether it is day or night in the zone.

3. Tap **X** to exit the screen.

Calculator

Using Calculator, you can perform any of the standard mathematical operations, such as addition, subtraction, multiplication, division, and many advanced operations.

To access Calculator:

From the Application Launcher, tap  and select **Calculator** (). The onscreen calculator displays.

You can use the following buttons on the screen:

- **←**: clears the number you entered from left to right.
- **C**: Clears the entire calculation so you can begin a fresh calculation.
- **CE**: Clears the last number you entered. If you make a mistake while entering a number in the middle of a calculation, you can use this button to reenter the number without starting the calculation over.
- **MC**: clears any value that is stored in the calculator's memory.
- **MR**: recalls the stored value from memory and inserts it into the current calculation.
- **MS**: saves the current value in the calculator's memory.
- **M+**: Places the current number into memory. Each new number you enter with the M+ button is added to the total already stored in memory. The number you add can be either

a calculated value or any number you enter by pressing the number buttons. Tapping this button has no effect on the current calculation(or series of calculations); it merely places the value into memory until it is recalled.



- **SQRT**: computes the square root of the currently entered number.

Converter

In Converter, you can convert units of measurement.

Note: The Converter has limited accuracy and rounding errors may occur.

To access Converter:

From the Application Launcher, tap  and select **Converter** (.



Converting a unit

1. Select the type of converter you want from the pick list on the top line.
2. Tap the **Input** field to position the cursor and then enter the data you want to convert on the Text Entry screen.
3. Select the unit you want to convert from the dropdown arrow below the **Input** field.
4. Select the unit you want to convert to from the dropdown arrow below the **Output** field.
5. The **Output** field changes automatically to shows you the converted value.
6. Tap **X** to exit the screen.





Dictionary

Your phone is equipped with an English-Chinese and Chinese-English dictionary. Use the dictionary to look up English or Chinese words anytime anywhere.

To access Dictionary:


From the Application Launcher, tap  and select **Dictionary** ().

Looking up a word

1. Tap **Menu** → **Mode** → a dictionary type.
2. Enter the English or Chinese word in the input field at the top of the Dictionary screen. The corresponding word appears in the right pane of the screen.
 - Tap a related word in the right pane to view the corresponding Chinese or English word.
 - If you are using the English-Chinese dictionary, tap  to listen to the Chinese pronunciation.
 - To switch the dictionary language between Simplified Chinese and Traditional Chinese, tap **Menu** → **Simplified** or **Traditional**.
 - To change the view mode of the dictionary, tap  or .
 - To add the word to your word book, tap .

Viewing your word book

To access words you have added to the word book, tap **Menu** → **Mode** → **Wordbook[E]** or **Wordbook[C]**.

To delete a word from your word book, select the word and tap .



Remote control

With the Remote control application, you can control and operate infrared-supported office, entertainment, and home automation equipment, such as TVs, DVD players, VTRs, audios, or air conditioners.


Note:


- Before opening Remote control, you must deactivate the IrDA service.
 - Your phone may not be able to access all remote control devices, depending on the model.
 - Your phone cannot learn universal remote controllers, which are able to control several devices.
-

To access Remocon:

From the Application Launcher, tap  and select **Remote Control** (). By default, you can set the phone as a remote control for a Samsung TV.

Adding a device


1. Tap . The remote control list of devices you've already added displays, if any.
2. Tap **Menu** → **New**.
3. Select the device type and enter the device name.
4. Align the IrDA port on your phone with the IrDA port on the remote control of the device you want to add.
5. Tap **Start Signal Analysis**.

6. Press and hold any button on the remote control of the device, until the message "Setup is completed" appears in the **Status** field.
7. When you have successfully completed the operation, tap  to save the setting and tap **X** exit the screen.

Learning the device

1. Open the remote control list.
2. Select the device you want to learn.
3. Tap **Menu** → **Mapping**.
4. Align the IrDA port on your phone with the IrDA port on the remote control of the device.
5. Tap the button that you want to programme. For example, if you want your phone to learn "Power", tap it first.
6. Press the corresponding button on the remote control of the device you added. For example, if you tapped **Power** on your phone, press the power button on your remote control.

When your phone has learned the button, a check mark appears on the onscreen button.

7. To continue for additional buttons on your remote control, repeat steps 5 and 6.
8. When you have finished programming, tap  at the top right corner of the screen.

Using a device




1. Tap  to open the remote control device list.

2. Select the device you want to use.
3. Tap a remote button on the screen.
4. When you have finished, tap **X** .



Recorder

In Recorder, you can record voice memos or other recordings.

To access Recorder:

From the Application Launcher, tap  and select **Recorder** () or press and hold  from home screen or phone mode screen.

Making a voice recording

1. From the Recorder screen, select a memory location. Select **Local** to save the recording in the phone's memory or **External** to save it to an optional memory card.
2. Tap  and make a voice recording by speaking into the microphone.
3. Tap  to stop recording. The voice recording is automatically saved.

Playing a voice recording


1. On the Recorder screen, select a memory location.

2. Tap the recording you want to listen to. The recording plays.

Deleting voice recordings

You can delete voice recordings one by one or all recordings at the same time.

Deleting a recording

1. From the Recorder screen, select the recording you want.
2. Tap .
3. Tap **Yes** to confirm the deletion.

Deleting all recordings

1. From the Recorder screen, select a memory location.
2. Tap **Menu** → **Delete** → **All**.

3. Tap **Yes** to confirm the deletion.



InfASR

The InfASR application is the voice recognition programme, which allows you to dial a phone number, search for a contact card, or access a specific menu just by saying an associated command.


InfASR uses the speaker-independent recognition system, meaning that you don't have to programme the phone for your particular voice or pronunciation, and the phone can recognise commands from any speaker.

Note: Your phone can recognise only Chinese commands.

To access InfASR:

From the Application Launcher, tap  and select **InfASR** (). The phone prompts you to say a command.

Name dialling

1. Access InfASR to start voice recognition.
2. When prompted, say (**Name dial**)
Or, you can press and hold  to start name dialing in phone mode.
3. When prompted, say the full name of the contact as displayed in Address.
The phone displays one or three names that most closely match your command, and recites the first choice audibly.

4. If the name is not the one that you want, say **(No)** until you hear the correct name.
5. When the recited name is correct, say **(Yes)**.
6. If there are multiple numbers for the name, say the number type you want.

Accessing a menu

1. Access InfASR to start voice recognition.
2. When prompted, say the name of the menu you want to access. The phone opens the application immediately.
For the menus accessible by voice commands, refer the **Command list** pick list.

Setting Voice Recognition options



You can change the settings for voice recognition to make the phone recognise your commands better.

1. Tap **Menu** → **Settings**.
2. Set each option.
 - **Gender**: allows you to set the gender.
 - **N Best**: allows you to set the number of result to be displayed.
 - **Language**: allows you to select the Chinese dialect to be used.
3. When you have finished, tap **Apply** to save the changes or tap **Default** to resets all your settings to their default status.

File Manager

Your phone provides plenty of memory space for documents, music files, favourite photos, or any other files. Using File Manager, you can quickly access, organise, delete, or edit any files on your phone.

To access File Manager:

From the Application Launcher, tap  and select **File Manager** (). The list of the folders and files displays.

Opening contents

To open the contents of a selected folder or file, tap an item on the list. For information about DRM files, see page 124

Using File Manager options

Tap and hold a file, folder, or selected files or folders to access the following options.

Cut: cut the selected items.

Copy: copy the selected items.

Paste: paste the cut or copied items.

Rename: allows you to edit the name of the selected file.

Delete: delete the selected items.

Information: shows detailed information about the selected items.

Send: allows you to beam the selected file to another PDA phone using Beaming or Bluetooth. If you select an JPG image, you can send the file to a printer.

select: select the current file.

unselect: remove the marks on the file if you have placed.

Set My Bell: set the sound file as your ringtone.

Creating a new folder

You can create folders to organise your files.

1. Tap **Menu** → **New Folder**.
2. Enter a folder name and tap **OK**.

Formatting a memory card

You can format your memory card in File Manager. This will delete all of the data stored on it.

Note:

- Be sure to carefully check and confirm that you no longer need the data on the memory card before formatting it.
 - Formatting is recommended for any memory card that you suspects contains corrupted data, or newly purchased memory cards.
-

1. Tap **Menu** → **T-flash Format**.
2. Select a file format system and tap **Format**.

Sending a file

You can share your files with other people by sending them using the Beaming or Bluetooth. For JPG images, you can send them to a printer. Tap **Menu** → **Send** → a sending option.

- To send a file via Beaming, see page 32.
- To send a file via Bluetooth, see page 34.
- To print an JPG image, see page 121.



Documents

Picsel Browser

Picsel Browser enables you to browse document on thin-client computing platforms or access the Internet using the HTML browser. Use Picsel Browser to do the following:

- View content on your phone without any file-conversion or loss of contents.
- Access HTML websites.



To access Picsel Browser:

From the Application Launcher, tap  and select **Picsel Browser** (). By default, the Picsel Browser help opens.

Viewing a document

Picsel Browser supports most common desktop document formats including PDF, MS Word, Excel, PowerPoint, and so on.

Opening a document








1. Tap the Picsel Browser Menu icon () on the bottom right of the screen.
2. Tap the Folder View icon (.

3. Select the directory you want to open.


The name of the current folders path location is shown at the top of the screen and the folders and documents on the selected folder appear.





Documents looks like sheets of paper in various other colours, depending on their type.

The following document formats are supported:



Adobe PDF: , Microsoft Word: , Microsoft Power Point: , Microsoft Excel: , Plain Text: , JPEG/PNG images: , HTML: .

4. Tap the document you want to open.

While viewing the document, tap  to open the control bar.

- To zoom in or out of the document, tap and drag the slider on the left of the screen.
- To rotate the screen on 90 degrees counterclockwise, tap  and .
- To fit the width of the page on screen, tap  and .


Opening a document by entering the file path or URL

1. Tap .
2. Tap the Enter URL icon ().
3. Enter the file path or URL address.

You can enter one of preset URL components on the screen.

4. Tap **OK** to open the document or the website.

Changing the file list view

1. On the file directory screen, tap .
2. Select the appropriate icon.

Viewing history

Picseel Browser shows you previously visited documents as a small thumbnail image, and the document's name, location, and the date of your visit.

Opening a document in history

1. On the Picseel Browser screen, tap .

2. Tap the History View icon (📖).
3. Tap the document you want to open twice.

Changing the order of the history list

1. On the History screen, tap 📖.
2. Tap the appropriate icon.
 - 📅: Sort by date.
 - 🌐: Sort by URL.
 - 📄: Sort by name.
3. Tap 📖 to hide the option icons.

Making and viewing bookmarks

Picseel Browser keeps a list of documents you have bookmarked.

Making a bookmark

1. While viewing the document, tap 📖.
2. Tap the Bookmark this page icon (🔖).
3. Enter a bookmark name.
4. Tap **OK**.




Viewing a bookmark

1. On the Picseel Browser screen, tap 📖.
2. Tap the Bookmark View icon (🔖).



The documents you have explicitly added with a bookmark appear.

3. Tap the document you want to view twice.

Deleting a bookmark

1. On the Pícsel Browser screen, tap .
2. Tap the Bookmark View icon ().
The documents you have bookmarked appear.
3. Tap the document you want to delete.
4. Tap .
5. Tap **OK** to confirm the deletion.



Changing Pícsel Browser settings

1. On the Pícsel Browser screen, tap .
2. Tap the Preferences icon ().
3. Tap the pick list on the button and select the category you want to set.
4. Set each tab and change the settings as needed:
 - **Home:** Select the item what is displayed on the startup screen of Pícsel Browser when you launch it.
 - **Preferences:** Select the page options and set the period of times after which thumbnail images and descriptions of pages are purged from the history memory.
 - **Internet:** Set the options for Internet connections.
 - **About:** View the information about Pícsel Browser.
5. Tap **OK**.

Text Reader


Using Text Reader, you can read *.txt files on your phone. Your phone can read you text audibly by using the TTS function.

To access Text Reader:

From the Application Launcher, tap  select **Text Reader** ().

Reading a text file

1. Find the text file you want to read and tap it to open it.
2. Scroll through the text file by tapping at the top/button screen with the stylus pen.

While viewing a file, tap  to bookmark the current page.

Using the control bar

You can use the control bar to move the location you want in a text file. While viewing the text file, tap **Menu** → **Controller** → **Show**. The control bar appears at the bottom of the screen. Tap or drag the slider or use the buttons to move to the location you want to view.

Opening bookmarked pages


If you have bookmarked pages in text files, you can quickly access them any time you need.

1. Tap **Menu** → **Bookmark list**.
2. Select a bookmarked page.

Setting Text Reader options

While reading a text document, you can change the Text Reader's properties.

Tap **Menu** → **Settings**. The following options are available:


- **Font Size**: changes the font size.
- **Font Color**: changes the font color.
- **Background**: changes the background colour of the document.
- **Encoding**: selects a text encoding type.
- **Scroll Step**: selects the step for auto scroll.
- **Scroll Speed**: selects the speed for auto scroll.
- **TTS**: activates or deactivates the TTS (Text To Speech) feature. Once TTS has been activated,  appears. Tapping the icon will read the text audibly to you.

When you have finished, tap  to save the changes.

Setup

This section shows you the various options you can use to customise your phone according to the way you work.

To access Setup:

1. From the Application Launcher, tap  at the bottom of the screen.
2. Tap the setup menu item you want.

Brightness

You can configure the display brightness and backlight time options to conserve the battery power.

On battery power: you can set whether or not the backlight turns off after a specified time when the phone is inactive, and whether or not the backlight turns on when

you press a key or tap the screen, when the main battery is being used as the power source.

On external power: you can set whether or not the backlight turns off after a specified time when the phone is inactive, and whether or not the backlight turns on when you press a key or tap the screen, when the phone is being charged.

Brightness level: you can select the display brightness level.

Keypad LED: you can set up the backlight options for the keypad.

- **Button Light:** allows you to select the backlight mode. In General mode, the keypad backlight turns on each time you press a key or tap the screen. In Saving mode, the keypad backlight is used only during the night time (from 5:00 PM to 8:00 AM).
- **Auto Off:** allows you to select how long the keypad backlight stays on.

Service LED: you can set up the whether or not the phone use the service LED.



Bluetooth

You can activate Bluetooth or configure the options for Bluetooth. For further details about sending and receiving data via Bluetooth, see page 34.

To activate or deactivate Bluetooth, tap the button below **Active** and select **ON** or **OFF**, and then tap **Ok**.

Tap **Menu** to access Bluetooth options.

- **Add New Device:** allows you to search for and pair with new devices.

- **Delete:** deletes the selected device.
- **Delete All:** deletes all devices.
- **Settings:** allows you to change the Bluetooth name of the phone and set the phone to be discoverable by other devices, or not.
- **Quit:** exit the current screen.

Buttons

You can change the applications assigned to the Address and SMS application keys.

Tap the button next to an action icon (👉-pressing, 👉-pressing and holding) and select the application you want. Tap ✕ to apply the change.

Calibration

You can calibrate your phone's touch screen. When you turns on the phone for the first time or if the screen doesn't recognise your touches or reacts incorrectly to your touches, you need to recalibrate the phone. Tap the cross hair object firmly and precisely.



Display

You can configure your display. Choose several different display options.

Home / Launcher: you can customise the Home screen and Application Launcher.

- **Launcher type:** allows you to change the launcher type.
- **Home Display:** allows you to select the functions to be displayed on the Home screen. This option is available only for the Legacy launcher type.
- **Background image:** allows you to change the background image of each launcher screen, individually.
- **Quick Launcher:** allows you to change the applications you can access from the Quick Launcher.

Phone: you can customise the Phone screen.

- **User text:** allows you to set the banner message.
- **Phone image:** allows you to change the wallpaper for phone function screens. Select a screen from the pick list and then select an image by tapping **Change**, and then  or  below the image field.
- **Number display:** allows you to change the font size and colour for digits to be displayed when entering a phone number for dialling.
- **Screen keypad:** allows you to change the onscreen keypad type.

语言 /Language

You can change the system language. Note that voice guides for voice recognition are not affected by this setting.

You can also set up the options for T9 input mode. Tap **Menu** and select **T9 Setup**.

Entry text mode: you can select the default input mode.

T9 Chinese: you can set T9 mode to provide you with multiple stroke components in Chinese Stroke mode, in addition to the strokes on the keypad.

T9 English: you can activate special features in T9 English mode.

- **Add Word:** allows you to add new words to the built-in T9 dictionary.
- **T9Word List Box:** provides you the list of word choices for your key presses.
- **AutoSpace:** enters a space automatically after you confirm a word by tapping it from the word list.

Security

You can set up various security options to protect your phone from unauthorised uses. To access the Security menu, you need the phone password. It is preset to **00000000**.

Lock: you can lock the phone.

- **Device lock:** allows you to lock or unlock your phone. When the phone is locked, it will require the phone password on power-up. If you want your name card as set in Owner to be displayed on the lock screen, select **Show Owner Info. On Lock Screen**.
- **Change Password:** allows you to change the phone password.

Restriction: you can restrict the phone use.

- **PIMS Restriction:** allows you to hide private data in the PIMS applications: Address, Schedule, To Do, Memo, and Money.
- **Outgoing call restriction:** allows you to prevent outgoing calls.
- **Incoming call restriction:** allows you to reject incoming calls from specified numbers or all incoming calls.

- **call reject:** specify phone numbers from which call will not be accepted.

Reset: you can reset the phone.

- **Erase function only:** allows you to reset all user-selectable options to their default settings.
- **Erase all:** allows you to erase all of the data stored in applications and reset the options to their default settings.

Slot 1/Slot 2: you can change the security settings for the R-UIM/SIM card inserted in each slot.

- **PIN Check:** allows you to enable or disable the PIN Check feature. When enabled, you need to enter the PIN supplied with your R-UIM/SIM card each time you turn on the phone.
- **Change PIN Code:** allows you to change the PIN 1/2 code.
- **FDN Mode:** allows you to enable or disable FDN (Fixed Dialling Number) mode. In FDN mode, you can dial only those numbers stored in the FDN list of the R-UIM/SIM card.
- **Clear Memory:** allows you to clear phone Book, message or all memory stored on the R-UIM/SIM card.

Phone Setup

You can customise the settings for the phone functions. For further details, see page 58.

Power

You can customise the power settings to conserve battery power.

Battery power remaining: you can check how much battery power remains.

On battery power: you can set whether or not the phone turns off after a specified time when the phone is inactive and the main battery is being used as the power source.

On external power: you can set whether or not the phone turns off after a specified time when the phone is inactive and when the phone is being charged.

I.Beam

You can set the phone to receive all data incoming via the infrared port.

USB

You can set up the options for USB connections.

USB: you can select which features a USB connection is used for. Depending on the type of operation, you may need to change this setting each time.

System Info

You can view information about your phone's system.

Memory: you can check memory information for the system.

Storage: you can check information on the amount of memory for storing data.

CPU: you can check information on the CPU type and usage.

Task Manager

Task Manager shows applications that is currently running. You can activate an inactive application or close unnecessary applications to save battery power or speed up data processing.

- To activate an application, tap **Menu** → **Activate**.
- To close an application, tap **Menu** → **End**.
- To close all applications, tap **Menu** → **End All**.

Theme

You can change the display theme. Select one of five colour patterns and tap **Apply**.

Sound

You can change various sound settings.

Volume: you can adjust the volume level for system sounds, callers' voices, the call ringer, and recording.

Ring tone: you can change the ringer settings.

- **Ringer type:** allows you to select a ringer type.

Ring: the phone plays the selected rintone.

Ring Silent: the phone just turns the backlight.

Ring Then vibration: the phone first plays the ringtone and then vibrates.

Vibration Then Ring: the phone first vibrates and then plays the ringtone.

Ring and Vibration: the phone plays the ringtone and vibrates.

Vibration: the phone just vibrates.

- **Ring name:** allows you to select a ringtone.

Effect: you can activate or deactivate effect tones for screen taps and key presses, select a key tone type, and activate or deactivate phone alerts for connection and disconnection.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

When approval test is done, no Samsung supplied accessories are available but maybe available later after approval.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. The highest reported SAR values are: (Body SAR distance:2.0cm)

CDMA Mode - Head: 0.707 W/kg, Body-worn: 0.861 W/kg

PCS Mode - Head: 0.777 W/kg, Body-worn: 0.826 W/kg

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 2.0 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3LSCHI839. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones

that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions

about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development

Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal trade

Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>

- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice



• This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and,



if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.

- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Licensed by QUALCOMM incorporated under one or more of the following Patents.

U.S Patent No.	4,901,307	5,056,109	5,099,204
	5,101,501	5,103,459	5,107,225
	5,109,390		

