



SCH-n330 Series

**A l l D i g i t a l
M o b i l e P h o n e**

User Guide

Please read this guide before operating your phone, and keep it for future reference.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters

1301 East Lookout Dr.
Richardson, TX 75082
Tel: 972.761.7000
Fax: 972.761.7001

Customer Care Center

1601 E. Plano Parkway, Suite 150
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)
Fax: 972.761.7001 and 972.761.7501

Internet Address: <http://www.samsungusa.com>

©2005 Samsung Telecommunications America. Samsung is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Licensed by Qualcomm Incorporated under one or more of the following patents: U.S. Patent No. 4, 901, 307; 5, 056, 109; 5, 099, 204; 5, 101, 501; 5, 103, 459; 5, 107, 225; 5, 109, 390.

Printed in South Korea
Revised July 7, 2005
GH68-05300A

 
 
 
 
 
Openwave® is a registered trademark of Openwave, Inc.

VibeTonz™ is a trademark of Immersion Corporation.

RSA® is a registered trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.



Contents


SCH-n330 closed view	1
SCH-n330 open view	2
Quick reference	3
Introduction	5
Key features of the SCH-n330	5
Install the battery	6
Remove the battery	6
Charge the battery	7
Pop-up display	8
Understand your phone	9
Antenna	9
Backlight features	9
Alpha-numeric keypad	9
Left soft key	10
Right soft key	10
End key	10
Clear key	11
Microphone	11
Headset connector	11
Speaker	11
Volume key	12
Send key	12
Navigation key	12
Your phone's display	13
Your phone's modes	15
Call answer mode	15
Input mode	15
Lock mode	15
Standby mode	16
Talk mode	16
Silent mode	17
Vibrate mode	17
Power save mode	18
Ringer setting	18
Getting started	19
Obtaining service	19
Make and answer calls	20

Voice mail	22
Menus and sub menus	24
Menu navigation	27
Navigate using keys	27
Navigate using a shortcut	27
In-use menu	29
Calls	30
Outgoing	30
Incoming	31
Missed	32
Erase logs	33
Call timer	33
Call waiting	34
Caller ID	35
Three-way calling	35
Contacts	36
Open contacts	36
Find contacts	37
Add contacts	39
Store numbers after a call	43
Store numbers from call logs	45
Assign speed dial numbers	45
Speed dialing	46
Remove contacts	47
Rename groups	48
My phone number	48
Memory	49
Messages	50
Text entry modes	50
Send TXT messages	54
Receive TXT messages	57
Message folders	58
Get It Now	64
Settings	65
Help	65
Mobile Web	68
Stored web content	68
Launch Mobile Web	68
Exit Mobile Web	69
Navigate the web	69

Mobile Web soft keys	69
Using links	69
How Mobile Web keys work	70
Planner	71
Open the planner	71
Today	71
Scheduler	73
Jump to date	74
To do list	74
Memo pad	76
Count down	77
Alarm clock	79
World time	80
Calculator	81
Display	82
Menu style	83
Animation	83
Banner	84
Backlight	84
Contrast	85
Auto hyphen	86
Service LED	86
Sounds	87
Vol./VibeTonz™	87
Ringer type	88
Key beep	89
Alerts	90
Power on/off	91
Roam ringer	91
Voice Kit	92
Voice kit commands	92
Voice memo	99
Voice setup	102
Setup	103
Location	103
Network	103
Data	104
Security	105
Others	110
Version	113



TTY/TDD	114
Usage guidelines: all about performance and safety	115
Getting the most out of your reception	115
Maintaining safe use and access to your phone	117
Caring for the battery.....	121
Special precautions and FCC notices	123
FDA consumer update	126
Owner's record	140
User guide proprietary notice	141
Limited warranty	142
Index	149

 

SCH-n330 closed view



SCH-n330 open view



Quick reference

Cut out and use this page as a handy quick reference for several useful features in your phone.

1) CALLS

- 1) Outgoing
- 2) Incoming
- 3) Missed
- 4) Erase Logs
- 5) Call Timer
- 6) Data Counter

2) CONTACTS

- 1) Find
- 2) Add
- 3) Rename Group
- 4) My Phone #
- 5) Memory

3) MESSAGES

- 1) Send New Msg
- 2) Voice Mail
- 3) Inbox
- 4) Outbox
- 5) Draft
- 6) Saved
- 7) Wap Push
- 8) Msg Setting
- 9) Erase Msg

4) MOBILE WEB

- 1) Get In Web

5) PLANNER

- 1) Today
- 2) Scheduler
- 3) Jump To Date
- 4) To Do List
- 5) Memo Pad
- 6) Count Down
- 7) Alarm Clock
- 8) World Time
- 9) Calculator

6) DISPLAY

- 1) Menu Style
- 2) Animation
- 3) Banner
- 4) Backlight
- 5) Contrast
- 6) Auto Hyphen
- 7) Service LED

7) SOUNDS

- 1) Vol./VibeTonz
- 2) Ringer Type
- 3) Key Beep
- 4) Alerts
- 5) Power On/Off
- 6) Roam Ringer

 
8) VOICE KIT

- 1) Voice Memo
- 2) Voice Setup

9) SETUP

- 1) Location
- 2) Network
- 3) Data
- 4) Security
- 5) Others
- 6) Version

Navigation shortcuts (in standby mode)

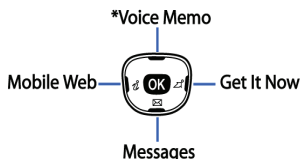

*Voice Memo can be customized. Press the left soft key (Menu), then press , , .

Quick reference

Turn the phone on and off

Press and hold  to turn the phone on or off.

Enter/Exit Silent Mode

In standby mode, press and hold . To exit, press and hold .



Standby mode is the state of your phone once it has found service and is in the idle state.

Set call ringer volume

- 1) In standby mode, press the volume key on the left side of the phone.
- 2) Press the volume key up or down to set call ringer volume as desired.

View recent calls

In standby mode, press . Your recent calls appear in the display.

Change the wallpaper

- 1) In standby mode, press the left soft key () **Menu**, then press , .
- 2) Select **Preloaded** from the pop-up menu.
- 3) Use the left or right navigation keys to select your choice of wallpaper.

Save a number (quickly)

- 1) In standby mode, enter the number to save using the keypad.
- 2) Press **OK**. With **New Entry** highlighted, press **OK** again.
- 3) Select the number type using the navigation keys, then press **OK**.
- 4) Enter a name for the entry using the keypad, then press **OK**.

View software and hardware information for your phone

In standby mode, press the left soft key () **Menu**, then press , .

Introduction

Congratulations on your purchase of the Samsung SCH-n330 mobile phone. The features listed below are a sample of what SCH-n330 has to offer. We ask that you read this guide to understand the many features that this phone supports and keep it handy for reference.

Key features of the SCH-n330

- 128 x 160 pixel Liquid Crystal Display
- High speed data (CDMA 2000 1X Technology)
- Global Positioning Technology (GPS)
- PIM functions (Scheduler, To Do List, etc.)
- TXT Messaging
- Enhanced Messaging Service (EMS)
- Voice Dial
- Speaker phone
- 32 Polyphonic Ringtones
- VibeTonz™ Technology

How to use this guide

The chapters of this guide generally follow the same order as the menus and sub menus in your phone. A robust index for quick reference to most features begins on page 149.

Also included is important safety information that you should know before using your phone. Most of this information is near the back of the guide, beginning on page 115.

If you still have questions, we'll be happy to answer them. Just call our Samsung Customer Care Center toll-free at 1.888.987.HELP (4357).

Install the battery

 


Your phone comes packaged with a partially charged rechargeable standard Li-Ion battery and travel adapter.




Important! The phone can be used while the battery is charging; however, it must be fully charged the first time you use your phone, otherwise you could damage the battery.

1. Place the battery so it rests in the slot in your phone just below the battery release latch.
2. Gently slide the battery up until it snaps into place.

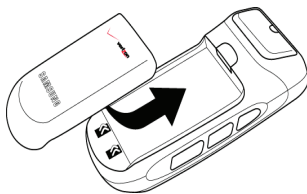

Remove the battery

 1. Press and hold  to turn off the phone (if on).
2. Move the battery release latch toward the top end of the phone and hold.
3. Slide the battery down and lift it away from your phone.

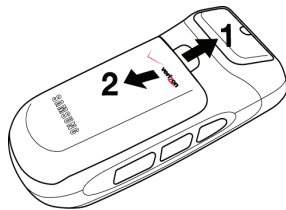


Charge the battery

Your phone is powered by a rechargeable standard Li-Ion battery. Only use Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. **Using other accessories may invalidate your warranty and may cause damage.**

Use the travel adapter

The travel adapter is a convenient, light-weight charger that rapidly charges your phone from any 120/220 VAC outlet.

 1. Plug the large end of the travel adapter into a standard 120 or 220 VAC wall outlet.
2. Insert the smaller end of the adapter into the charger/ accessory connector at the bottom end of the phone.

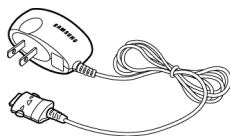

Low battery indicator

The battery indicator () in the upper-right corner of the display screen indicates the battery power level. Three bars indicate a full charge, while an empty battery icon indicates your battery is almost empty. Two to three minutes before the battery charge level becomes too low to operate your phone, a blinking, empty battery icon () displays and a tone sounds. If you continue to operate your phone without charging the battery, it will shut off. Be sure to monitor the battery strength icon and ensure your battery is adequately charged.

Pop-up display

The unique pop-up display is designed to provide maximum visual space in a compact phone, as well as, restrict unwanted dialed calls.

To use your new n330 handset, follow the steps listed below:

1. Hold your phone in an upright position and simultaneously press both pop-up display buttons located on each side of the phone to extend the display.
2. Once the phone is on, you can make calls using the key pad and access the menu options of your phone to personalize it to fit your needs.
3. To retract the display, gently push the top of the display down until it locks in place.



Understand your phone

Intenna

Avoid touching the intenna while the phone is powered up. Contact with the antenna affects the quality of your calls and may cause the phone to operate at a higher power level than necessary.

Backlight features

You can choose the amount of time that the display and backlight remain illuminated after a period of inactivity. Keep in mind that increasing these settings reduces battery life.

1. In standby mode, press the left soft key () **Menu**.
2. Press  ,  , for **Backlight**. The following backlight options appear in the display.
 - 1 **Lcd**
 - 2 **Keypad**
 - 3 **Power save**
3. Use the navigation key to highlight **Keypad** or **Power Save**, then press  .
4. Use the navigation key to highlight the amount of time that you want the keypad or display to remain illuminated after a period of inactivity, then press  .

Alpha-numeric keypad

Use the alpha-numeric keypad to enter text, numbers, and special characters.

Left soft key

Functions for the left soft key () are defined by what appears above it in the display. Some functions of the left soft key are as follows.

- Press the left soft key () **Menu** to enter the Main menu.
- Press the left soft key () **Option** to view options in some features.
- Press the left soft key () to acknowledge browser charges and other functions.

Right soft key

Functions for the right soft key () are defined by what appears above it in the display. Some functions of the right soft key are as follows:

- Press the right soft key () **Back** to return to the standby mode from any main menu.
- Press the right soft key () **Back** to return to the previous menu from a sub menu.
- In standby mode, press the right soft key () **Contacts** to enter the **Contacts** list.

End key

- Press and hold  to turn off and turn on your phone.
- Press  once to disconnect a call, return to standby mode, or cancel any input.

 
Clear key

The CLR key () is used to erase or clear numbers from the display. You can also use  to return to a previous menu or to return to standby mode from any menu.

- If you enter an incorrect character, briefly press  to backspace and delete.
- To erase all digits or characters from the display screen, press and hold .
- To back up one menu level, briefly press .
- To return to standby mode from any menu, press and hold  until you return to standby mode.

Microphone

The microphone, located just beneath  on the keypad, is used for conversation, voice setup, and recording voice memos.

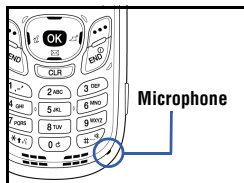


Headset connector

The headset connector is the input jack for the optional hands-free headset. The headset includes an earbud and microphone in a convenient, lightweight unit so you can talk without using your hands.

- Before connecting the headset, gently pry open the input jack cover to expose the connector inside.

Speaker

 The speaker, located on the front of your phone, plays audible sounds such as ring tones and alerts.

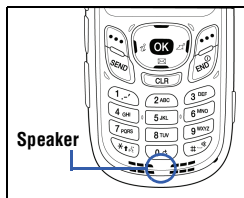

Volume key

The volume key is located on the left side of the phone. Use the volume key to set the call ringer volume in standby mode or earpiece volume while in a call. You can also use the volume key to scroll through menus, sub menus, and lists.



Send key

The **Send** key (SEND) is used to answer calls, dial calls, and to recall the last number (or list of numbers) dialed.

- Press SEND once to answer calls.
- Enter a number and press SEND once to connect a call.
- Press SEND once in standby mode to display the recent calls list, which includes the last 20 outgoing, 20 incoming, and 20 missed calls.
- Press SEND twice in standby mode to call the most recently dialed number.

 
Navigation key



Use any of the four directional keys on the navigation key to browse menus, sub menus, and lists. Each of the four keys also acts as a shortcut to launch specific applications, and the Up navigation key is user definable. Use the center (OK) key to select a highlighted feature, confirm prompts, or to jump to highlighted links on the web.

Your phone's display

The top of your phone's display contains icons that indicate network status, battery power, signal strength, connection type, and more. The following list contains icons that may appear in your display.

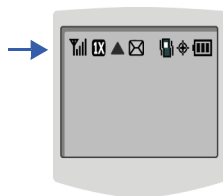

Display screen icons



Signal strength: Always displays when your phone is on and indicates the current signal strength. The more lines displayed, the higher the received signal strength.



Ringer Silent: The ringer has been set to **Silent** using the volume key on the side of the phone.



Service indicator: Indicates a call in progress. When dialing a number, this icon flashes until the call connects.



No service indicator: Indicates your phone cannot find a signal because you're outside a service area. You cannot make or receive calls. Wait for a signal or move into an open area. This indicator displays when your phone is turned on but turns off when a service signal is located.



Roam: Extended roaming indicator. Roaming occurs when you use your phone outside your home area. While roaming, a wireless provider's system other than Verizon Wireless handles your call, so the service rate for the call may be higher than those made within your home area. Please refer to information from Verizon Wireless on roaming rates.



Text message: Indicates that you've received a new text message. You're also notified by a visual, audible, and VibeTonz™ alert according to your assigned preferences.



Voicemail message: Indicates that you've received a new voice message. You're also notified by a visual, audible, and VibeTonz alert according to your assigned preferences.



WAP push & voicemail message: Indicates that you've received voice and WAP push messages. You're also notified by a visual, audible, and VibeTonz alert according to your assigned preferences.



WAP push, TXT & voicemail message: Indicates that you've received text, voice, and WAP push messages. You're also notified by a visual, audible, and VibeTonz alert according to your assigned preferences.



1X Protocol: Indicates your phone is using the 1X protocol.



Battery strength: Indicates the battery charge level. The more black bars, the greater the charge. When the battery becomes very low, a flashing empty battery icon displays and the phone sounds an audible alert, which indicates your phone is about to shut down.



Alarm clock: The alarm clock is set.



GPS (911 only): This icon represents Global Positioning Service (GPS) for 911.



GPS: Indicates GPS is on for location.



Silent mode: Indicates your phone is in silent mode. Ringer is silenced for all alerts, incoming calls, and incoming messages. The phone alerts you of incoming calls, alerts, and messages by vibration and a flashing Service LED.



Vibrate mode: Your phone is in vibrate mode. When you receive a call, the phone plays VibeTonz touch sensations instead of ringing.



Speakerphone on: Your phone is in speakerphone mode. You can talk and listen to your call without holding your phone next to your ear.

Your phone's modes

Call answer mode

You can select the method for answering your phone when you receive a call.

1. In standby mode, press the left soft key () **Menu**, then press , , . The following call answer options appear in the display.

Send Key

Send or Slide Up

Slide Up

Any Key

2. Use the navigation key to highlight an option.
3. Press **OK** to select the method for answering calls.

Input mode

Use input mode (ABC, Symbol, 123, or T9 Word) to enter text, numbers or symbols into messages, events, and other functions. The input mode is indicated in the right lower part of the display. For more information about changing the input mode, see “Change text entry modes” on page 51.

Lock mode

When you lock your phone using **Lock Mode**, (Menu , , ), restrictions are placed on phone use. You can receive messages and calls, but you cannot make outgoing calls (except for emergency numbers) until you unlock the phone. **Lock Mode** also restricts access to menus and the volume key. The default code used to unlock your phone is the last four digits of your phone number.

Standby mode

Standby mode is the state of your phone once it has found service and is in the idle state. Your phone goes into standby mode:

- After you power it on.
- When you press  after a call.

When in standby mode, you will see the time, day, and date as well as all other active icons.

1. While in standby mode, enter a phone number, and press  to place a call.
2. Press  to return to standby mode.

Receive messages in standby mode

You can receive messages while in standby mode. An alert tone sounds and a notification message displays when a new message arrives.

1. Extend the slide on your phone, if closed, by pressing both pop-up display buttons at the same time.
2. To view the message, press the right soft key () **View**, or press the left soft key () **Ignore** to view the message later.

Talk mode

You can only place and receive calls when your phone is on. While in a call your phone is in talk mode. Press the left soft key () to display a list of **In-Use** menu options. See “In-use menu” on page 29 for more information.

Silent mode

With a single press of the key you can silence the call ringer and tones that your keypad makes whenever you press a key. When you receive a call, the phone vibrates instead of ringing.

Enter Silent mode

- In standby mode, press and hold . **Entering Silent Mode** briefly displays and your phone returns to standby mode. The  appears in the display.

Exit silent mode

- In standby mode, press and hold . **Exit Silent Mode** briefly displays and your phone returns to standby mode.

Vibrate mode

You can set your phone to vibrate while in Standby mode by either using your volume key or selecting **VibeTonz™** from the Volume menu.

- In standby mode, repeatedly press the volume key  down until **VibeTonz** appears in the display. For more information about **VibeTonz** touch sensations see page 87.
- or –
- 1. In standby mode, press the left soft key  **Menu**, then press , , .
- 2. Use the navigation key until **VibeTonz** appears in the display, then press .

Power save mode

Unless the backlight setting for the LCD has been changed, the backlight dims after a minute of inactivity, and then turns off. With **Power save** enabled, the backlight for the LCD is always dim. After approximately one minute of inactivity, **Power save** turns the backlight off. To enable or disable **Power save**:

1. In standby mode, press the left soft key (Menu).
2. Press **6 min**, **4 grs**, for **Backlight**. The following backlight options appear in the display.
 - 1 Lcd
 - 2 Keypad
 - 3 Power save
3. Use the navigation key to highlight **Power save**, then press **OK**. **Off** and **On** appear in the display.
4. Use the navigation key to highlight **On** or **Off**, then press **OK**.

Ringer setting

1. In standby mode, repeatedly press the volume key (Up/Down) on the left side of the phone up or down. Options are:
 - **Silent**
 - **1 Beep**
 - **VibeTonz**
 - **Level 1**
 - **Level 2**
 - **Level 3**
 - **Level 4**
 - **Level 5**
 - **Vib+Ring**
 - **Vib&Ring**
2. Press **OK** once you're satisfied with the setting. The phone returns to standby mode.

Getting started

Obtaining service

Contact Verizon Wireless and follow their instructions for obtaining service, if necessary. We suggest that you read this user guide to fully understand the services that your phone supports.

Turn your phone on

1. Extend the slide on your phone by pressing both pop-up display buttons on your phone at the same time.
2. Press and hold  for two or more seconds.



As with any other radio-transmitting device, do not touch the antenna as it affects call quality and can cause the phone to operate at a higher power level than is necessary.

3. **Verizon** momentarily appears in the display and your phone begins searching for a network signal.
4. Once your phone finds a signal, the time, date, and day appear in the bottom of the display.
5. You're now ready to place and receive calls.

If the phone is outside of your carrier's coverage or roaming area, the  icon appears in the top of the display. If you cannot place or receive calls, try later when service is available.

Turn your phone off

- Press and hold  for two or more seconds. Your phone powers off.



If your phone is on and you press  for less than one second, the phone will not power off. This feature prevents your phone from being turned off accidentally.

Make and answer calls

Outgoing

- With the phone on and the slide up, enter the number you want to call using the keypad.
- Press  to place the call.

Incoming

When you receive a call, the phone displays one of the following:

- If the caller can be identified, the caller's number (or name if they're in Contacts) displays.
- If the caller can't be identified, **Call from unavailable #**, **Call from restricted #**, or **no number** will display.



Incoming, outgoing, and missed calls are automatically stored in call logs. The last 20 calls you answered, made, or missed are stored in their respective logs.

Call notification features

Your phone notifies you of a call in a variety of ways.

- 10 ring volume settings including **Silent**, **1-beep**, **VibeTonz**, **Vib+Ring** or **Vib&Ring**. For information on changing the ringer notification, see “Ringer setting” on page 18. For more about the **VibeTonz** touch sensations see page 87.
- Different ring types to distinguish callers.
- Name display with Caller ID. (If the caller's name is programmed into your Contacts).

Your phone continues to alert you to an incoming call until one of the following occurs:

- You answer the call.
- The calling party ends the call.
- The call is sent to voicemail.

Call answer

You can select from three methods for answering your calls. You can change this option in the **Setup** menu.

1. In standby mode, press the left soft key (Menu), then press **9 WXYZ**, **5 ABC**, **2 ABC**. The following options appear in the display.

Send Key
Send or Slide Up
Slide Up
Any Key

2. Use the navigation key to highlight the call answer option of your choice.
3. Press **OK** to select the highlighted option.

LCD backlight setting

To extend the charge of your battery, the display goes blank when the screen is idle for a period of time. The amount of idle time allowed can be adjusted in the **Backlight** menu.

1. In standby mode, press the left soft key (Menu), then press , , . The following options appear in the display.

5 Seconds (default setting)

10 Seconds

15 Seconds

Slide Up



With **Slide Up** selected, the backlight remains on as long as the LCD display is in the up position. This can discharge your battery significantly.

2. Use the navigation key to highlight an option.
3. Press **OK** to select the highlighted option.

Silence an incoming ringer

- Press the up or down volume key or press  when your phone rings for an incoming call to silence the ringer.

Ignore an incoming call

When you ignore an incoming call, the call is immediately forwarded to your voice mail.

- During an incoming call, press the left soft key (Ignore) **Ignore**. The call is forwarded to your voice mail.

Vicemail

When you receive a new voicemail, a notification icon appears in the top of your screen.

Set up voicemail

All unanswered calls to your phone are sent to voicemail, even if your phone is turned off. Therefore, you'll want to set up your voicemail and personal greeting as soon as you activate your service. Your service provider has assigned your voicemail number to the  key.

1. Press and hold  to dial your voicemail. You will see **Voice Mail** and ***86** in the display.
2. If prompted, enter your password and press .
3. Follow the system prompts to set up your voicemail.



You can also press , , , then  to dial voicemail.

Check voicemail

1. Press and hold . Your phone dials the voicemail system.
2. When you're connected to the voicemail system, enter your password and press .
3. Follow the recorded prompts to listen to your voicemail.

Menus and sub menus

1) CALLS

- 1) Outgoing
- 2) Incoming
- 3) Missed
- 4) Erase Logs

1) OUTGOING

Yes
No

2) INCOMING

Yes
No

3) MISSED

Yes
No

4) ALL CALLS

Yes
No

5) Call Timer

1) LAST CALL

2) TOTAL

3) LIFETIME

4) ERASE TOTAL

Yes
No

6) Data Counter

1) TRANSMIT

2) RECEIVED

3) TOTAL

4) ERASE TOTAL

2) CONTACTS

1) Find

BY NAME

BY ENTRY

BY GROUP

2) Add

NUMBER

E-MAIL

3) Rename Group

1) FRIEND

2) FAMILY

3) COLLEAGUE

4) VIP

5) NO NAME

4) My Phone#

5) Memory

3) MESSAGES

1) Send New Msg

2) Voice Mail

3) Inbox

4) Outbox

5) Draft

6) Saved

7) Wap Push

8) Msg Setting

9) Erase Msg

1) VOICE

Yes
No

2) INBOX

Yes
No

3) OUTBOX

Yes
No

4) DRAFT

Yes
No

5) SAVED

Yes
No

6) ALL MESSAGES

Yes
No

4) MOBILE WEB

1) Get In Web

5) PLANNER

1) Today

2) Scheduler

3) Jump To Date

4) To Do List

5) Memo Pad

6) Count Down

7) Alarm Clock

Once

Daily

Off

8) World Time

9) Calculator

6) DISPLAY

1) Menu Style

1) ICON STYLE

2) TEXT STYLE

2) Animation

1) OPENING

1) *Preloaded*

Glass Cube

2) *My Image*

2) CLOSING

1) *Preloaded*

Glass Cube

2) *My Image*

3) WALLPAPER

1) *Preloaded*

Animal

Sports

Etc.

Digital Clock

World Time

Scheduler

2) *My Image*

3) Banner

4) Backlight

1) LCD

5 Seconds

10 Seconds

15 Seconds

Slide Up

- 2) KEYPAD
 - 5 Seconds
 - 10 Seconds
 - 15 Seconds
 - Slide Up
- 3) POWER SAVE
 - Off
 - On
- 5) Contrast
- 6) Auto Hyphen
- No
- Yes
- 7) Service LED
 - Off
 - On

7) SOUNDS

1) Vol./VibeTonz

- 1) CALLS
 - Silent
 - 1 Beep
 - VibeTonz
 - Level 1
 - Level 2
 - Level 3
 - Level 4
 - Level 5
 - Vib+Ring
 - Vib&Ring

- 2) ALARM
 - Silent
 - 1 Beep
 - VibeTonz
 - Level 1
 - Level 2
 - Level 3
 - Level 4
 - Level 5
 - Vib+Ring
 - Vib&Ring

2) Ringer Type

- 1) CALLS
 - 1) Preloaded
 - Bell 1
 - Bell 2
 - Bell 3
 - Bell 4
 - Bell 5
 - Melody 1
 - Melody 2
 - Melody 3
 - Melody 4
 - Melody 5
 - Melody 6

- Melody 7
- Melody 8
- Melody 9
- Melody 10
- 2) My Melody
- 2) ALARM
 - 1) Preloaded
 - Bell 1
 - Bell 2
 - Bell 3
 - Bell 4
 - Bell 5
 - Melody 1
 - Melody 2
 - Melody 3
 - Melody 4
 - Melody 5
 - Melody 6
 - Melody 7
 - Melody 8
 - Melody 9
 - Melody 10
 - 2) My Melody
- 3) DATA
 - 1) Preloaded
 - Bell 1
 - Bell 2
 - Bell 3
 - Bell 4
 - Bell 5
 - Melody 1
 - Melody 2
 - Melody 3
 - Melody 4
 - Melody 5
 - Melody 6
 - Melody 7
 - Melody 8
 - Melody 9
 - Melody 10
 - 2) My Melody
- 4) PLANNER
 - 1) Preloaded
 - Bell 1
 - Bell 2
 - Bell 3
 - Bell 4
 - Bell 5
 - Melody 1
 - Melody 2
 - Melody 3
 - Melody 4
 - Melody 5
 - Melody 6
 - Melody 7
 - Melody 8
 - Melody 9
 - Melody 10
 - 2) My Melody

3) Key Beep

- 1) VOLUME
 - Silent
 - Level 1
 - Level 2
 - Level 3
 - Level 4
 - Level 5
- 2) TONE LENGTH
 - Long
 - Normal
- 3) VIBETONZ
 - On
 - Off

4) Alerts

- 1) MINUTE BEEP
 - On
 - Off
- 2) SERVICE
 - On
 - Off
- 3) CONNECT
 - Off
 - Sound Only
 - VibeTonz Only
 - Sound+VibeTonz
- 4) DISCONNECT
 - Off
 - Sound Only
 - VibeTonz Only
 - Sound+VibeTonz
- 5) FADE
 - On
 - Off
- 6) ROAM
 - On
 - Off
- 7) PRIVACY
 - On
 - Off

5) Power On/Off

- Off
- Sound Only
- VibeTonz Only
- Sound+VibeTonz

6) Roam Ringer

- On
- Off

8) VOICE KIT**1) Voice Memo**

- 1) RECORD
- 2) REVIEW
- 3) ERASE ALL
 - Yes
 - No

2) Voice Setup

- 1) SET ACTIVE
 - [*] Only
 - [*]/Slide Up
 - [*]/EarMic
- 2) SET DIGITS
 - Adapt Digits
 - Reset Digits

9) SETUP**1) Location**

- Location On
- 911 Only

2) Network

- 1) SET NAM
 - NAM 1
 - NAM 2
- 2) ROAM OPTION
 - Home only
 - Automatic-A
 - Automatic-B

3) Data

- 1) AUTO DETECT
 - data off
 - data for next call
 - data until powered off
- 2) BAUD RATE
 - Auto
 - 19200
 - 38400
 - 57600
 - 115200
 - 230400

4) Security

- 1) LOCK PHONE
 - Never
 - On Power up
 - Now
- 2) CHANGE LOCK
 - New code

3) EMERGENCY #

- 1) 911
- 2) #911
- 3) *911

4) VOICE PRIVACY

- Standard
- Enhanced

5) RESTRICTION

- 1) Outgoing
 - No
 - Yes
- 2) Incoming
 - No
 - Yes
- 3) Contacts
 - No
 - Yes

6) ERASE MEMORY

- Yes
- No

7) RESET PHONE

- Yes
- No

5) Others**1) SHORTCUT**

- Scheduler
- Voice Memo
- Animation
- Ringer Type
- Alarm
- Calculator
- Memo Pad

2) CALL ANSWER

- Send Key
- Send or Slide Up
- Slide Up
- Any Key

3) CALL END

- End Key Only
- Slide Down

4) AUTO RETRY

- Off
- Every 10 sec
- Every 30 sec
- Every 60 sec

5) LANGUAGE

- English
- Spanish

6) CLOCK SET**6) Version**

Menu navigation

Access the menus and sub menus in your phone using the navigation key () and soft keys ( ) or use a shortcut.

Navigate using keys

1. In standby mode press the left soft key () **Menu**. The main menus display.
2. Use the navigation key to browse through the menus in your phone.
3. Press **OK** to enter the menu or sub menu that is highlighted in the display.

Return to a previous menu

There are two methods for exiting a menu or list.

- Press the right soft key () **Back** to return to a previous menu.
- When **Back** does not appear in the display, press  to return to a previous menu.

Navigate using a shortcut

You can also access the menus and sub menus in your phone using menu numbers. Use the left soft key () **Menu** to select the main menus, then enter the numbers associated with each menu to access the sub menus directly. Before you can navigate using a shortcut, you'll need to know the menu or sub menu number of the feature that you want to access.



 
Tip: Use the list of menus and sub menus, which begins on page 24, to navigate using shortcuts.

1. In standby mode, press the left soft key **Menu** (⋮).
2. Press the number of the menu, sub menu, and so on for the feature that you want to access.

Example: Press the left soft key (⋮) for **Menu**, then press **5 JKL**, **4 GH**. This takes you to the **Planner** (Menu 5), and then to the **To Do List** (sub menu 4).

Navigation key shortcuts

Some applications can be launched by pressing one of the four navigation keys (see the illustration) while in standby mode. The up key, which is initially set to **Voice Memo**, can be customized in the **Shortcut** sub menu by selecting **Menu**, **9 WXYZ**, **5 JKL**, **1 ., ';**, and then choosing the option you want to be associated with this key.

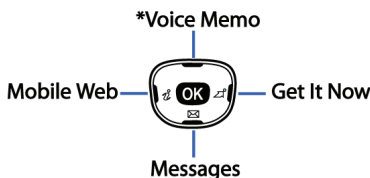

***Voice Memo** can be customized. Press the left soft key (⋮) **Menu**, then press **9 WXYZ**, **5 JKL**, **1 ., ';**.

In-use menu

Your phone includes both a standby menu and an **In-Use Menu**. The **In-Use Menu** applies to when you are in a call.

1. Press the left soft key () **Menu** while in a call to display the options listed in the following table.

In-Use Menu	Function
Calls	Allows you to access the Calls menu. You can also erase your call logs from this menu.
Contacts	Accesses Contacts menu options.
Silent/Quit	Activates or deactivates Silent Mode. In Silent Mode, your phones ringer is silent and key-pad tones are muted. This feature should not be used when you access automated services that require you to select options, or enter numbers (such as your voice mail password).
Send Tel#	Sends your phone number to the other party of the call.
Send DTMF	Send your phone number as tones (if you're the recipient of the call). Send the recipient's phone number as tones (if you're the originator of the call).
Voice Privacy	Set Voice Privacy to enhanced or standard mode. Voice Privacy prevents the receiving party from seeing your number when you call.
Location	Enable the GPS setting for emergency calls only, or fully enable GPS (always on).
Version	View the software and hardware versions for your phone.

2. Use the navigation keys to highlight an option. Press **OK** to select the **In-Use Menu** of your choice.

Calls

The calls menu retains information about **Outgoing**, **Incoming**, and **Missed** Calls. You can also view times for your last call and the total of all calls.



In cases where a Contact matches a call log entry, the name associated with the number appears instead of the number.

Outgoing

Your phone retains information about the last 20 outgoing calls and stores them in the **Outgoing** call log. You can review the Outgoing call log for the time and date of the call, as well as other information.



Tip: To quickly view your most recent outgoing calls, briefly press in standby mode. The recent calls lists displays the last 20 incoming, 20 outgoing, and 20 missed calls.

1. In standby mode, press the left soft key **Menu**, then press . Your list of outgoing calls appears in the display.
2. Use the navigation key to highlight a call, then press **OK** to view further information about the call.

Once your selection is highlighted you can do the following:

- Press to dial the number.
- Press **OK** to review all available call information (name and phone number [if available] and time/date stamp).

- Press **OK**, then press the left soft key ( **Option**) to display the options below.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Contacts.
Prepend	Add a prefix to the number.
Erase	Erase the selected call from your Outgoing call list.

Incoming

Your phone retains information about the last 20 Incoming calls and stores them in the **Incoming** call log. You can review the Incoming call log for the time and date of the call, as well as other information.

- In standby mode, press the left soft key ( **Menu**), then press , . Your list of Incoming calls appears in the display.
- Use the navigation key to highlight a call, then press **OK** to view further information about the call.

Once your selection is highlighted you can do the following:

- Press  to dial the number.
- Press **OK** to review all available call information (name and phone number [if available] and time/date stamp).
- Press **OK**, then press the left soft key ( **Option**) to display the options below.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Contacts.
Prepend	Add a prefix to the number.

Option	Function
Erase	Erase the selected call from your Incoming call list.

Missed

Your phone retains information about the last 20 missed calls (calls that were never picked up) and stores them in the **Missed** call log. You can review the **Missed** call log for the time and date of the call, as well as other information.

1. In standby mode, press the left soft key ( **Menu**), then press , . Your list of missed calls appears in the display.
2. Use the navigation key to highlight a call, then press **OK** to view further information about the call.

Once your selection is highlighted you can do the following:

- Press  to dial the number.
- Press **OK** to review all available call information (name and phone number [if available] and time/date stamp).
- Press **OK**, then press the left soft key ( **Option**) to display the options below.

Option	Function
Talk	Call the selected number.
Save	Save the number to your Contacts.
Prepend	Add a prefix to the number.
Erase	Erase the selected call from your Missed call list.

Erase logs

You can erase the **Outgoing**, **Incoming** or **Missed** call log, or you can erase **All Calls**.

Erase a call log

1. In standby mode, press the left soft key ( **Menu**), then press , .
2. Use the navigation key to highlight the log you want to clear calls from, and then press . A confirmation message displays.
3. Use the navigation key to highlight **Yes**, then press , or select **No** to exit without clearing the call log.

Erase all calls

1. In standby mode, press the left soft key ( **Menu**), then press , , . **Erase All Calls?** appears in the display as well as the options **Yes** and **No**.
2. Use the navigation key to highlight **Yes**, then press , or select **No** to exit without erasing call logs.

Call timer

View the duration of your last call, total calls, and calls made during the life of your phone using the Call timer feature.



The Call timer is not for billing purposes.

1. In standby mode, press the left soft key ( **Menu**), then press , .

2. The options listed in the following table appear in the display.

Option	Function
Last Call	View the duration of your last call.
Total	View the duration of the total calls, incoming and outgoing, made on your phone since the last erasure.
LifeTime	View the duration of all calls on your phone since activation (LifeTime timers cannot be erased).
Erase Total	Erases the counters for the Total call timer.

- Press the number of the option you want or use the navigation key to highlight the option, then press **OK**.
- Press  to exit the **Option** menu.



Although **Total** call timers can be erased, **the LifeTime** call timer can never be erased.

Call waiting

If you're on a call, your phone beeps when you receive another call. Contact Verizon Wireless for availability of this feature.

1. Press  to connect and ask the calling party to remain on the line.
2. Press  again and the second caller is placed on hold, and you're returned to the original caller.
3. Use the  key to alternate between calls.

Caller ID

Caller ID allows you to see who is calling by displaying the caller's number when your phone rings. If the caller's name and number are stored in your Contacts, the name also appears in the display.

Caller ID block

You can block your number from being displayed on another phone by enabling the call block feature.

1. In standby mode, press + , , .
2. Enter the phone number and press .

Three-way calling

Call two other numbers and connect them to your call using Three-way calling.

1. In standby mode, dial the number for the first party in your call and press .
2. When connected, ask the other party to remain on the line. Press to place them on hold.
3. Dial the second party's phone number and press .
4. When the second party answers, press to connect all three parties.

Contacts

Your Contacts can store up to 500 numbers, with each contact having up to five associated phone numbers, an e-mail address, and a picture ID. Each phone number can be up to 32 digits in length, including hard pauses, and associated names can be up to 22 characters in length. The memory location for each entry can be specified. For more information about Contacts restrictions, see “Restriction” on page 108.



Tip: One-Touch, Two-Touch, and Three-Touch Dialing allows you to call numbers stored in your Contacts faster.

Open contacts

1. In standby mode, press the left soft key  **Menu**, then press  for the **Contacts**. The following Contacts sub menus and options appear in the display:

Menu	Function
Find	Find a phone number By Name, By Entry, or By Group.
Add	Add a number or e-mail to your Contacts.
Rename Group	Rename one of your five groups.
My Phone#	View the 10-digit number assigned to your phone by Verizon Wireless.
Memory	Display available memory for dial entries.

2. Use the navigation key to highlight the Contacts menu of your choice, and press .



Tip: You can also press the number on your alpha-numeric keypad that corresponds to the Contacts menu number.

Find contacts

If you've stored a name entry in your Contacts, **Find** allows you to find it quickly.

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Find**.
2. Use the navigation key to select the method by which to find the entry. The options listed in the following table are available.

Find	Function
By Name	Search the Contacts alphabetically by name.
By Entry	Search the Contacts by entry number.
By Group	Search the Contacts by selecting from one of the five available groups.

Find by name

1. Enter the name of the person *as they are entered in your Contacts*. For example, if you saved the name as Amy Smith, begin the search pressing .

As you enter letters, the entry number and names of the closest matches appear in the display.

2. When the desired entry appears in the display, highlight the number using the navigation key (if necessary).
3. Press  to dial the number associated with the name.
4. Press the left soft key ( **Option**) to display the options listed in the following table.

Option	Description
Edit	Edit details of the highlighted name.
Erase	Erase the name and associated information.
Add New	Add a new entry to a contact.

5. Press **OK** to view information about the entry.
6. Use the navigation key to highlight an option, then press **OK** to enter the option's sub menu.

Find by entry

This option allows you to find a stored entry by location number.

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Find**.
2. Use the navigation key to highlight **By Entry**.
3. Enter the number for your Contact, then use the navigation key to highlight the entry you want.
4. Press **OK** to display information about the entry.
5. Press the left soft key ( **Option**) to display the options listed in the following table.

Option	Description
Talk	Dial the first number stored for your contact or dial a number you have highlighted.
Edit	Edit details of the highlighted name.
Erase	Erase the name and associated information.

6. Use the navigation key to highlight an option, then press **OK** to enter the option's sub menu.

Find by group

This option allows you to find a stored entry in a related group.

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Find**.
2. Use the navigation key to highlight **By Group**.

3. Press the navigation key briefly to highlight the group field.
4. Use the navigation key to display the group that you want. As each group displays, entries assigned to the group are listed on your phone's screen.
5. Use the navigation key to highlight the desired entry.
6. Press **OK** to display information about the entry.

Add contacts

You can add an entirely new entry or add information to an existing entry.

1. In standby mode, press the left soft key ( **Menu**), then press **2 ABC**, **2 ABC** for **Add**. A pop-up menu with the following options appears in the display.

Number

E-mail

2. Use the navigation key to highlight the desired option and press **OK**.
3. Enter the information for the entry, then press **OK**.
4. With **New Entry** highlighted, press **OK**. The following (number type) icons appear in the display.



Home



Office



Mobile



Pager



Fax

5. Use the navigation key to highlight the type that matches your new entry and press **OK**.
6. Enter a name to associate with the type using the keypad, then press **OK** to save the entry.

Edit contact numbers

Once a contact has been saved, it can be easily changed or modified.

1. In standby mode, press the left soft key (⋮) **Menu**, then press **2 ABC**, **1 .*** for **Find**.
2. Use the navigation key to display the search method that you want to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the entry containing the number that you want to edit.
4. Once the entry is highlighted, press **OK**.
5. Use the navigation key to highlight the number within the entry that you want to edit, then press the left soft key (⋮) **Option**. A pop-up menu displays.
6. Use the navigation key to highlight **Edit**, then press **OK**.
 - Press **CLR** to backspace and delete numbers.
 - Press and hold **CLR** to clear all numbers in the highlighted field.
7. When you're finished editing the number, press **OK**. Your changes are saved and a confirmation message appears in the display.

Edit an e-mail address

1. In standby mode, press the left soft key (⋮) **Menu**, then press **2 ABC**, **1 .*** for **Find**.
2. Use the navigation key to display the search method that you want to use (**By Name**, **By Group**, or **By Entry**).

3. Enter information to find the entry, or use the navigation key to highlight the entry that you want.
4. Once the entry is highlighted, press the left soft key (ⓘ) **Option**. A pop-up menu appears in the display with **Edit** highlighted. Press **OK**.
5. Use the keypad to edit the e-mail address. To insert the @ symbol, press the left soft key (ⓘ) **Option**.
6. Use the navigation key to select **Symbol**, and then press **OK**.
7. Press **2 ABC** (@ symbol) and enter the remainder of the e-mail address using the keypad.
8. Press the left soft key (ⓘ) **Option**.
9. Use the navigation key to highlight **.com**, then use the navigation key to display the desired domain type (.com,.edu, .net), then press **OK**.



If the domain is different you must enter it using your keypad.

10. Press **OK** to save your changes.

Add pauses to contacts

When you call automated systems (like banking services), you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

- **P pause:** A hard pause stops the calling sequence until you enter additional numbers.
- **T pause:** A two-second pause stops the calling sequence and then automatically sends the remaining digits.



You can enter multiple two-second pauses to extend the length of a pause. For example, two consecutive two-second pauses cause a total pause time of four seconds. Keep in mind pauses count as digits towards the 32-digit maximum.

To store a pause in a contact, follow these steps:

1. In standby mode, enter the number you want to save as a contact (such as your bank's teleservice number).
2. Press the left soft key () **Option**. The following pause menu options appear in the display.

P pause

T pause



P pause is a hard pause (awaits input from you) and a
T pause is a two-second pause.

3. Use the navigation key to highlight the pause option of your choice.
4. Press **OK** to enter the highlighted pause into your number sequence.
5. When you're finished entering the number and pauses, press the right soft key () **Save** to store the number in your Contacts.

PAUSE DIALING WITH CONTACTS

1. If you stored the number using (two-second) T pause(s), simply recall the number from the **Contacts**.
2. If you stored the number using (hard) P pause(s), recall the number from the **Contacts** and wait for the appropriate prompt from the number you are calling (credit card number, bank account number, etc.).
3. Press  to dial the remaining part of the saved number.

Store numbers after a call

Once you've finished a call, you can store the number of the caller to your **Contacts**.



If the call was incoming and Caller ID information was unavailable, then the store option is also unavailable.

1. After you press  to end your call, the call time, length of call, phone number, and name of the party (if available) appears in the display.
2. Press the right soft key () **Save**. You're prompted to confirm this as a **New Entry**, or **Find** a name in your **Contacts** with which to associate the number.
3. Follow the instructions in the upcoming sections depending on if the number is a new entry or is one you want to add to an existing contact.

Add a new entry

1. With **New Entry** highlighted, press **OK**. The following number types appear in the display.



Home



Office



Mobile



Pager



Fax

2. Use the navigation key to choose the number type, then press **OK**.
3. Enter a name for the new entry and press **OK**. The new entry is saved to your Contacts.

Add to an existing entry

1. Use the navigation key to highlight **Find**, then press **OK**.
2. Use the navigation key to display the search method that you want to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the desired entry and press **OK**. The following number types appear in the display.



Home



Office



Mobile



Pager



Fax

4. Use the navigation key to highlight the number type that matches the number you are adding, then press **OK**.
5. Press **OK** again at the **Contacts** menu. The number is added to the existing entry.

Shortcuts to storing phone numbers

You can store a phone number by entering the number, and pressing the right soft key ( **Save**). Follow the screen prompts to designate other information. You can also save a number after an incoming or outgoing call.

Store numbers from call logs

Store numbers from call history log s to your Contacts.

1. In standby mode, press the left soft key ( **Menu**), then press  for **Calls**.
2. Press the corresponding number on the keypad to view call logs for the following call types.
 -  for **Outgoing**  for **Incoming**  for **Missed**
3. Use the navigation key to highlight the number you want to store in the Contacts, then press .
4. Press the left soft key ( **Option**), then use the navigation key to highlight **Save**.
5. Add the number as a **New Entry**, or **Find** a number in your Contacts with which to add the number.
6. Follow the prompts to store the number to the Contacts.

Assign speed dial numbers

Each entry in Contacts is assigned a number from 2 to 500, since the first entry is reserved for your voice mail. The entry number for each contact corresponds with a same speed dial location, so, for example, Contact entry 10 is also Speed dial location 10. Since a contact can have up to 5 different phone numbers stored in it, you must select what phone number is dialed when speed dialing is used.

The first number entered when you create a contact is used for speed dialing unless you change it. To change the number dialed when you use speed dialing, follow these steps:

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Find**.
2. Use the navigation key to select the find method (**By Name, By Group, or By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the desired entry, then press .
4. Use the navigation key to highlight **SpeedDial**.
5. With **SpeedDial** highlighted, press the left soft key ( **Edit**).
6. Use the navigation key to select the icon associated with the number you want dialed when Speed dial is used.
7. Press  to save your changes.

Speed dialing

Once you have stored phone numbers in Contacts, you can dial them quickly using one of the Speed dialing options.

One-touch dialing

Memory locations 001 through 009 are special **One-Touch dialing** locations. You can call the phone numbers stored in the Contacts memory from 001 through 009 by pressing and holding a single key. For example, for location number 001, press and hold  until the name and number appear in the display and the number is dialed.

Two-touch dialing

Memory locations 010 through 099 are special **Two-Touch dialing** locations. For example, for location number 013, briefly press , then hold down  until the name and number appear in the display and the number is dialed.

Three-touch dialing

Memory locations 100 through 500 are special **Three-Touch dialing** locations. For example, to dial location number 113, press , , then hold  until the name and number appear in the display and the number is dialed.

Remove contacts

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Find**.
2. Use the navigation key to display the search method that you want to use (**By Name**, **By Group**, or **By Entry**).
3. Enter information to find the entry, or use the navigation key to highlight the entry that you want to erase.
4. Once the entry is highlighted, press the left soft key ( **Option**). A pop-up with the following items displays:
 - Edit**
 - Erase**
 - Add New**
5. Use the navigation key to highlight **Erase**.
6. Press . The phone prompts you to confirm the erasure.
7. Use the navigation key to highlight **Yes** or **No**, then press .

Rename groups

Use this option to rename a group in your Contacts.

1. In standby mode, press the left soft key ( **Menu**), then press ,  for **Rename Group**.
2. Use the navigation key to highlight the group that you want to rename, then press . The current name of the group appears in the display with a flashing cursor at the end of the name.
3. Press the left soft key ( **Option**) to display a pop up with the following text entry modes.
 - 1 T9 word
 - 2 ABC
 - 3 Symbol
 - 4 123
4. Press the corresponding number on the keypad for the method of entry that you prefer.
5. Press  to delete characters individually, or press and hold  to clear all characters in the display.
6. Enter a new group name using the keypad, then press .

My phone number

My Phone# displays the ten-digit number assigned to your phone by Verizon Wireless.

- In standby mode, press the left soft key ( **Menu**), then press ,  for **My Phone#**. The phone number assigned by Verizon Wireless appears in the display.

Memory

Use the Memory menu to view the amount of memory used for the contacts you have stored, as well as the remaining memory available for other entries.

- In standby mode, press the left soft key (⋮) **Menu**, then press **2 ABC**, **5 M**. The amount of memory used and remaining for Contacts is displayed.

Messages

Your phone is able to send and receive text messages to compatible phones and other devices. If a text message exceeds 160 characters, it is broken up and delivered in separate messages, which will incur additional cost. There are various text entry modes available when using your phone, and each is described below.



Available memory is shared between all messages. You can store up to 100 incoming and 100 outgoing messages. The exact number that you can store is dependent upon message length.

Text entry modes

You can compose text messages composed of alphabetical characters, symbols, and numbers. Each method of character entry (symbol, number, etc.) is called a text entry mode. There are four such entry modes as indicated in the following table:

Text Entry Mode	Function
ABC	Alphabetical text entry mode. Options are: ABC - All uppercase Abc - Initial caps abc - All lower case
Symbol	Symbol entry mode. Enter symbols into your message by pressing the corresponding number that appears above it in the display.
123	Number entry mode. Enter numbers by pressing the corresponding key on the keypad.
T9 Word	Predictive text mode. Press each key only once to enter the letter of the word that you're spelling.

Your current mode of text entry (**ABC**, **Symbol**, **123**, or **T9 Word**) is indicated in the lower part of the display when composing a text message.

Change text entry modes

1. While composing a text message, press the left soft key () **Option** to display a pop-up menu containing the following options

ABC
Text Format
Add Media
Quick Text

2. **ABC** is highlighted. Use the left or right navigation key to choose display the text entry mode you want to use.
3. Press **OK**. The mode is changed.

ABC mode

- Enter characters while in **ABC** mode by pressing the key with the letter you want, such as  for "h".
- Press the key repeatedly until the desired character appears in the display.
- Pause briefly and the displayed character is accepted and inserted into your message.
- Press  to enter a space.

T9® Word text entry

The T9 predictive text input mode allows you to enter words easily with a minimum of key presses. As you press each key, the phone selects a letter that makes up the word it thinks you are typing, based on a built-in dictionary. As a new letter is added, the word changes based on the key you pressed.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys 2 to 9. Press each key only once for each letter.

As you type, a word will display; however, it changes with each key you press.

2. Enter the whole word before editing or deleting any keystrokes.
3. If the word is correct, start entering the next word.
Otherwise, press  repeatedly to display alternate word choices for the keys that you have pressed.
4. Complete each word with a space by pressing the  key.



To type words not found in the T9 mode, use the ABC text entry mode.

For example, to enter a word using T9 predictive text, follow these steps:

1. In standby mode, press the left soft key  **Menu**, then press ,  to compose a new text message.
2. Enter the phone number of the recipient, then press .
3. Press the left soft key  **Option** to display a pop-up menu containing the following options:

ABC
Text Format
Add Media
Quick Text