User Menual (SCS-26UC2)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is con-nected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, (example - use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SAFETY CONCERNS

The purpose of the Safety Concerns section is to ensure the safety of users and prevent property damage. Please read this document carefully for proper use.

Conventions/Symbols

Warning

Caution

WARNING



Provides information or instructions that the reader should follow in order to avoid a service failure or damage to the system.

Provides information or instructions that

the reader should follow in order to avoid personal injury or fatality.

Note

Indicates additional information as a reference.



Caution Indication of a general caution.



Restriction





Indication for prohibiting an action for a product.



Instruction

Indication for commanding a specifically required action.

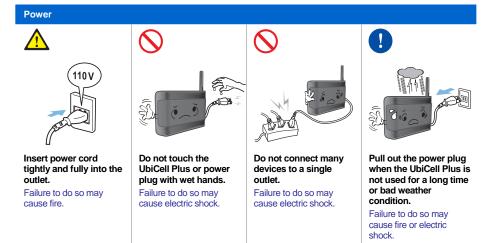

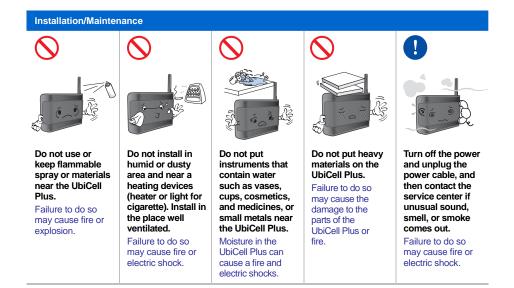



Installation/Maintenance

Accurately install and properly use the product according to the manual.

This is to prevent malfunctions and reductions in product lifetime.



Do not spray water directly or do not use chemical solvents such as wax, benzene, alcohol, thinner, mosquito spray, aerosol, lubricant, and detergent.

Failure to do so may cause the damage to the product.





Do not install the UbiCell Plus on an unstable surface or near the direct rays of sunlight. It may cause severe damage to the parts of the UbiCell Plus, and your UbiCell Plus may not work properly.




Do not separate, repair or remodel the UbiCell Plus arbitrarily.

If a repair is needed, please contact where the UbiCell Plus was purchased or call the Service Center.

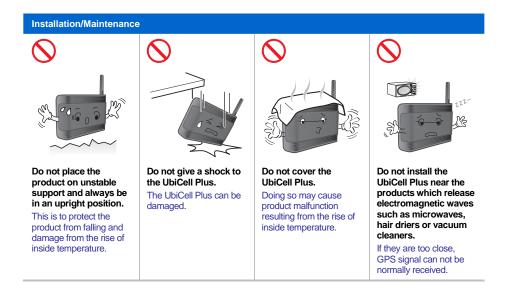

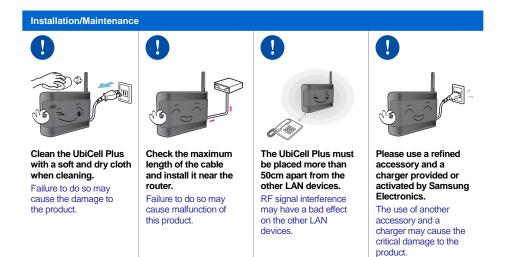

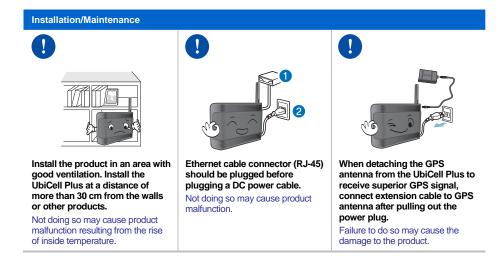

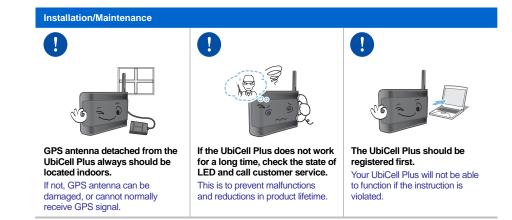


TABLE OF CONTENTS

SAFETY CONCERNS 1	I
Conventions/Symbols4 Warning	1 5 7
PREPARATION 14	Ļ
Congratulations! 14 About This Guide 14 What's in the box 15 Names and Functions of each part 16 LED 16 Connector 17 Registering your UbiCell Plus 20	4 5 6 7
OVERVIEW 21	I

INSTALLING YOUR UBICELL PLUS	22
TROUBLESHOOTING	26
ANNEX A	28
Product Specifications	28

PREPARATION

Congratulations!

The UbiCell Plus ensures that you and your family have reliable wireless telephone service while in your home or small business.


You only have to install the UbiCell Plus in your home or small business, and register. The UbiCell Plus will be functioned normally through the UbiCell Plus Manager (UCM).

About This Guide

This user guide provides instructions for the use of the UbiCell Plus. Please take the time to make sure of this guide to become familiar with the operation of your UbiCell Plus and the benefits this new UbiCell Plus can provide. Keep this guide handy. You may need to look up instructions for infrequently used features.

What's in the box

After purchasing this product, check if the items below are all included in the package. If any item is missing or damaged, contact your dealer:

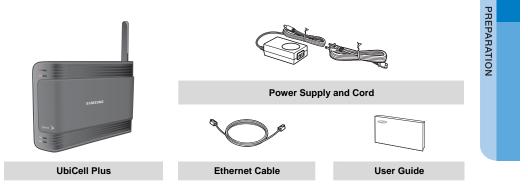

Names and Functions of each part The UbiCell Plus is very simple. On one end it has connectors for power and LAN.

On the other end the UbiCell Plus has four LED indicators to let you know its status.

<u>LED</u>

	Name	Description
	1 PWR	When powering on the UbiCell Plus, it turns blue.
02	Ø SYS	When the UbiCell Plus normally works, It turns blue. When the alarm occurs, it turns red.
	3 GPS	When GPS signal is normally received, it turns blue. When the internal GPS antenna is not able to detect a stable GPS signal and cannot validate accurate time and location information, it turns red.
	4 WAN	When the Ethernet cable is normally connected, it turns blue. When there is data traffic, it turns blinking blue.
Sprint		

Connector

	Name	Description		
	1 Antenna	Provides omni-directional transmission and reception of signals between the UbiCell Plus and communicating mobile station.	PREPARATION	
	2 PWR	Connects the power cable.	RATI	
	3 WAN	Connects the Ethernet cable.	NO	
New Base New State New State S				

Using the GPS Antenna detached from the UbiCell Plus as an External GPS Antenna

	l
NO	l
_	l
	l

If the UbiCell Plus is installed in places where GPS signals cannot be received, detach the GPS antenna from the UbiCell Plus. Extension cable for GPS antenna is sold separately.

Power off

NOTE

When detaching the GPS antenna from the UbiCell Plus to receive superior GPS signal, connect extension cable to GPS antenna after pulling out the power plug.

1	
C/	
	<u>_</u>

The GPS antenna detached from the UbiCell Plus

The GPS antenna detached from the UbiCell Plus always should be located indoors.

The GPS antenna detached from the UbiCell Plus must be laid in a horizontal position, as close to a window as possible. Laying it on a window is ideal. To be certain of keeping the antenna horizontal, you may wish to tape it down, but do not use duct tape. The window should not have metal blinds, nor metallic solar film.

The extension cable that is connected between the UbiCell Plus and detached GPS antenna is 7 meters (about 23 feet) long, providing plenty of flexibility in locating both it and the UbiCell Plus.



- 1) Turn off the base station.
- 2) Rotate the antenna down to provide access to the GPS antenna's protective cover.
- 3) Firmly press down on the Open button (top of station)
- 4) Slide the protective cover back to expose the internal GPS mini-coax connector.
- 5) Connect and secure the GPS antenna to the exposed port by using the GPS cable.
- 6) Connect and secure the terminal end of the same mini-coax cable to the port on the GPS antenna.


Registering your UbiCell Plus Before installing your UbiCell Plus you need to register.



Registering Your UbiCell Plus will not be able to function if the instruction is violated. Your UbiCell Plus should be registered first.

OVERVIEW

The UbiCell Plus is a system that performs the radio interface with Mobile Stations (MS), and exchanges radio subscriber data and signal data with the MSs under CDMA2000 standards.

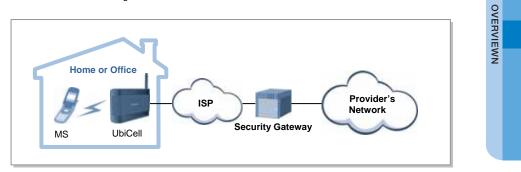

INSTALLING YOUR UBICELL PLUS

If possible, place the UbiCell Plus in a high location such as on top of a book shelf or tall cabinet. For best results place the UbiCell Plus in a room with a window.

Make sure your DSL modem or cable modem and broadband router are on and working properly.

When your UbiCell Plus is operating, you had better stay at a distance of more than 20 cm from the UbiCell Plus.

N	ΟΤΕ	P
-		- (

Installation Environment


Refer to the 'Environment Standard' of 'ANNEX' for the conditions of the environment which make the UbiCell Plus normally work.



Installing your UbiCell Plus

1) Your UbiCell Plus always should be in an upright position.

- 2) Install the UbiCell Plus at a distance of more than 30 cm from the walls or other products.
- The adjustable antenna rotates only 180 degrees. Rotating it beyond that angle may damage the antenna.
- -

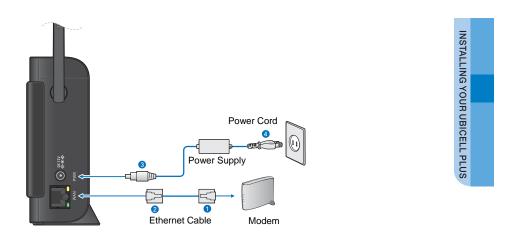

- 1) Connect one end of the included Ethernet cable to an open port on the modem.
- 2) Connect the other end to the WAN port located at the rear of the UbiCell Plus.
- 3) Plug the power supply connector into the PWR connector located at the rear of the UbiCell Plus.

4) Insert one end of the power cord into the power supply and then plug the other end into an available power outlet.



Ethernet Cable

- 1) Check the maximum length of the cable and install it near the router.
- 2) Ethernet cable connector (RJ-45) should be plugged before plugging a DC power cable.



Connecting the power

- 1) Please use a refined accessory and a charger provided or activated by Samsung Electronics.
- 2) Use only the power supply and cord that are included in the package. Using any other power source may damage the UbiCell Plus.

Checking the LED



The 'PWR' LED on the front of the UbiCell Plus should lit up blue when power is connected normally. Over the next few minutes the 'WAN' LED, the 'GPS' LED, and the 'SYS' LED should all lit up blue. (If after 10 minutes any of the LEDs is not lit up, or is lit up red, see the 'Troubleshooting' instructions on the next page.)

That's all there is to it. You can now make and receive calls with your existing handset using the UbiCell Plus.

TROUBLESHOOTING

In the unlikely event that you have problems, check the following:

Trouble	Solution
The PWR LED is not lit	 Make sure that one end of the power cord is securely connected to an active outlet and that the other end is properly connected to the power supply. Make sure the power supply connector is securely inserted into the rear PWR connector on the back of the UbiCell Plus.
The SYS LED lights up red	The UbiCell Plus was unable to register. A red System LED indicates a system error was detected. Contact Samsung Customer Service.
The WAN LED lights up red	 A red light indicates that the WAN port is receiving power but has not detected a valid Ethernet connection. Confirm that both ends of the Ethernet cable are securely plugged into the WAN port on the UbiCell Plus and into an open port on the router(or modern).

Trouble	Solution
The GPS LED still does not light up blue 10 minutes after plugging-in the UbiCell Plus	 The internal GPS antenna is either unable to obtain or having difficulty obtaining a GPS signal. Move the UbiCell Plus a location with fewer surrounding obstructions. The new location should be in a more open area and closer to a window, if possible. If relocation does not resolve the issue, detach the GPS antenna from the UbiCell Plus to use it as an external GPS antenna. Make sure the power is properly configured and securely connected to the rear of the UbiCell Plus. If the preceding fails, remove the power cord from the wall outlet, and then remove the power supply connector from PWR connector at the rear of the UbiCell Plus for at least 10 seconds. Reconnect the power supply connector to the PWR connector, plug the power cord into the wall outlet. This allows the UbiCell Plus to initiate its startup sequence where it detects the Ethernet connection, GPS signal, and communication with the system.

If the above suggestions did not correct the problem, or you encounter a problem that is not listed here, you can get additional assistance by calling Samsung customer service.

ANNEX A

Product Specifications

Transmitter/Receiver Specification

The specification of the transmitter and receiver of the UbiCell Plus is described as follows: The items that are not included in the following table should meet the IS-95A/B, IS-2000 standard.

ANNEX A

Frequencies by Models	
SCS-26UC2 support 1.9 G band	

Item		Specification
Transmission	Tx Frequency	1,930~1,990 MHz (SCS-26UC2)
	Channel Bandwidth	1.25 MHz
	Conducted Power	50 mW/carrier
	Modulation	QPSK
Reception	Rx Frequency	1,850~1,910 MHz (SCS-26UC2)
	Channel Bandwidth	1.25 MHz
	Sensitivity	-119 dBm (SCS-26UC2)

Unit Specification

The specification of the UbiCell Plus is described as follows:

Category	Specification
Size (H × W × D, mm)	144.0 ×204.4 × 42.2
Weight (g)	815(440+ 375[adapter & cables]) ± 40

Power

The specification of the UbiCell Plus power is described as follows.

The UbiCell Plus meets the power safety criterion defined in UL60950-1 and EN60950-1.

Category	Specification
Input Voltage	AC 110 V
Voltage Variation Range (Tolerable error of commercial electric power source)	100~250 VAC

	≥
	ANNEX A
	EX A
,)