

SCX-4600 Series  
SCX-4623 Series

# Multi Functional Printer User's Guide

imagine the possibilities

Thank you for purchasing a Samsung product.



# copyright

---

© 2009 Samsung Electronics Co., Ltd. All rights reserved.

This user's guide is provided for information purposes only. All information included herein is subject to change without notice. Samsung Electronics is not responsible for any direct or indirect damages, arising from or related to use of this user's guide.

- Samsung and Samsung logo are trademarks of Samsung Electronics Co., Ltd.
- Microsoft, Windows, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation.
- TrueType, LaserWriter and Macintosh are trademarks of Apple Computer, Inc.
- All other brand or product names are trademarks of their respective companies or organizations.

REV. 1.00

# Content

---

## COPYRIGHT

2

## CONTENT

3

- 9 Safety information
- 13 Regulatory information
- 22 About this user's guide
- 24 Features of your new product

## INTRODUCTION

26

- 26 Machine overview
  - 26 Front view
  - 27 Rear view
- 28 Control panel overview (SCX-4623 Series)
- 29 Control panel overview (SCX-4600 Series)
- 30 Understanding the Status LED
- 30 Introducing the useful buttons
  - 30 Menu button
  - 30 (Power button)
  - 30 Print screen button
- 30 Turning on the machine

## GETTING STARTED

31

- 31 Setting up the hardware
- 31 Supplied software
- 32 System requirements
  - 32 Windows
  - 32 Macintosh
  - 32 Linux
- 33 Installing USB connected machine's driver
  - 33 Windows
  - 34 Macintosh
  - 34 Linux
- 35 Sharing your machine locally
  - 35 Windows
  - 36 Macintosh

## NETWORK SETUP

37

- 37 Network environment
- 37 Introducing useful network programs
  - 37 SyncThru™ Web Service
  - 37 SyncThru™ Web Admin Service
  - 37 AnyWeb Print
  - 37 SetIP
- 37 Using a wired network
  - 37 Printing Network Configuration report
  - 38 Setting IP address
  - 39 Network parameter setting
  - 39 Restoring factory default settings
- 39 Installing wired network or USB connected machine's driver
  - 39 Windows
  - 41 Macintosh
  - 41 Linux
- 42 IPv6 Configuration
  - 42 Activating IPv6
  - 42 Setting IPv6 addresses

# Content

---

	42	Connecting SyncThru Web Service
<b>BASIC SETUP</b>	<b>43</b>	
	43	Altitude adjustment
	43	Changing the display language
	43	Setting the date and time
	43	Changing the clock mode
	44	Changing the default mode
	44	Setting sounds
	44	Speaker, ringer, key sound, and alarm sound
	44	Speaker volume
	44	Entering characters using the number keypad
	44	Entering alphanumeric characters
	44	Keypad letters and numbers
	44	Correcting numbers or names
	45	Inserting a pause
	45	Using the save modes
	45	Using toner saving feature
	45	Using power saving feature
	45	Setting the default tray and paper
	45	In the control panel
	45	In the computer
	46	Setting job timeout
<b>MEDIA AND TRAY</b>	<b>47</b>	
	47	Preparing originals
	47	Loading originals
	47	On the scanner glass
	48	In the document feeder
	48	Selecting print media
	48	Guidelines to select the print media
	48	Media sizes supported in each mode
	48	Changing the tray size
	49	Loading paper in the tray
	49	Tray 1
	49	Manual tray
	50	Printing on special media
	51	Envelope
	51	Transparency
	51	Labels
	52	Card stock/ Custom-sized paper
	52	Letterhead/ Preprinted paper
	52	Photo
	52	Glossy
	52	Setting the paper size and type
	52	Setting the paper size
	52	Setting the paper type
	52	Setting the paper source
	53	Using the output support
	53	Stacking papers firmly
<b>PRINTING</b>	<b>54</b>	
	54	Printer driver features
	54	Printer driver
	54	Basic printing
	55	Canceling a print job
	55	Opening printing preferences

# Content

---

55	Using a favorite setting
<b>55</b>	<b>Using help</b>
<b>55</b>	<b>Using special print features</b>
55	Printing multiple pages on one sheet of paper
56	Printing posters
56	Printing booklets (Manual)
56	Printing on both sides of paper (Manual)
57	Change percentage of your document
57	Fitting your document to a selected paper size
57	Using watermarks
57	Using overlay
58	Advanced Options
<b>58</b>	<b>Changing the default print settings</b>
<b>59</b>	<b>Setting your machine as a default machine</b>
<b>59</b>	<b>Printing to a file (PRN)</b>
<b>59</b>	<b>Macintosh printing</b>
59	Printing a document
59	Changing printer settings
60	Printing multiple pages on one sheet of paper
<b>60</b>	<b>Linux printing</b>
60	Printing from applications
61	Printing files
61	Configuring Printer Properties

## COPYING

62

<b>62</b>	<b>Basic copy</b>
<b>62</b>	<b>Changing the settings for each copy</b>
62	Changing the darkness
62	Selecting the type of originals
62	Reducing or enlarging copies
<b>63</b>	<b>Changing the default copy settings</b>
<b>63</b>	<b>Using special copy features</b>
63	ID card copying
63	2-up or 4-up copying (N-up)
63	Poster copying
64	Clone copying
<b>64</b>	<b>Deciding the form of copy output</b>
<b>64</b>	<b>Setting copy timeout</b>

## SCANNING

65

<b>65</b>	<b>Basic scanning method</b>
<b>65</b>	<b>Scanning originals and sending to your computer (Scan to PC)</b>
65	For USB connected machine
65	For network connected machine
<b>66</b>	<b>Using Samsung Scan Manager</b>
66	Set Scan Button tab
67	Change Port tab
<b>67</b>	<b>Scanning with TWAIN-enabled software</b>
<b>67</b>	<b>Scanning using the WIA driver</b>
67	Windows XP
67	Windows Vista
<b>67</b>	<b>Macintosh scanning</b>
67	Scanning with USB
68	Scanning with network
<b>68</b>	<b>Linux Scanning</b>
68	Scanning
69	Adding Job Type Settings

# Content

---

	69	Using the Image Manager
<b>FAXING</b>	<b>70</b>	<b>Preparing to fax</b>
<b>70</b>	<b>70</b>	<b>Sending a fax</b>
	70	Setting the fax header
	70	Sending a fax
	70	Sending a fax manually
	71	Confirming a transmission
	71	Automatic redialing
	71	Redialing the last number
	71	Sending a fax to multiple destinations
	71	Delaying a fax transmission
	72	Sending a priority fax
	<b>72</b>	<b>Receiving a fax</b>
	72	Changing the receive modes
	72	Receiving manually in Tel mode
	72	Receiving automatically in Answering Machine/Fax mode
	73	Receiving faxes manually using an extension telephone
	73	Receiving faxes using DRPD mode
	73	Receiving in secure receiving mode
	73	Activating secure receiving mode
	73	Receiving faxes in memory
	<b>73</b>	<b>Adjusting the document settings</b>
	73	Resolution
	74	Darkness
	<b>74</b>	<b>Forwarding a fax to other destination</b>
	74	Forwarding a sent fax to other destination by a fax
	74	Forwarding a received fax to other destination by a fax
	74	Forwarding a sent fax to other destination by an email
		Forwarding a received fax to other destination by an email
	75	Forwarding a sent fax to other destination by a server
	75	Forwarding a received fax to other destination by server
	<b>75</b>	<b>Setting up address book</b>
	75	Speed dial numbers
	75	Group dial numbers
	76	Searching Address Book for an entry
	<b>76</b>	<b>Printing sent fax report automatically</b>
<b>MACHINE STATUS AND ADVANCED FEATURE</b>	<b>77</b>	<b>Fax setup</b>
<b>77</b>	77	Changing the fax setup options
	77	Sending
	77	Receiving
	78	Change Default
	78	Auto Report
	<b>78</b>	<b>Copy setup</b>
	78	Changing the copy setup options
	79	Change Default
	<b>79</b>	<b>Printing a report</b>
	<b>79</b>	<b>Clearing memory</b>
	<b>80</b>	<b>Network</b>
	<b>80</b>	<b>Menu overview</b>

# Content

---

<b>MANAGEMENT TOOLS</b>	<b>82</b>	<b>Introducing useful management tools</b>
	<b>82</b>	<b>Using SyncThru™ Web Service</b>
	82	To access SyncThru™ Web Service:
	82	SyncThru™ Web Service overview
	82	Setting the contact information
	<b>83</b>	<b>Using the Smart Panel program</b>
	83	Understanding Smart Panel
	83	Changing the Smart Panel Program Settings
	<b>83</b>	<b>Smarthru</b>
	<b>83</b>	<b>Using SetIP program</b>
	84	Windows
	84	Macintosh
	84	Linux
	<b>84</b>	<b>Using the Linux Unified Driver Configurator</b>
	84	Opening the Unified Driver Configurator
	85	Printers configuration
	86	Scanners configuration
	86	Ports configuration
<b>MAINTENANCE</b>	<b>87</b>	<b>Printing a machine report</b>
	<b>87</b>	<b>Monitoring the supplies life</b>
	<b>87</b>	<b>Using toner low alert</b>
	<b>87</b>	<b>Finding the serial number</b>
	<b>87</b>	<b>Cleaning a machine</b>
	87	Cleaning the outside
	87	Cleaning the inside
	88	Cleaning the scan unit
	<b>88</b>	<b>Storing the Toner cartridge</b>
	89	Handling instructions
	89	Use of non-Samsung and refilled toner cartridge
	89	Estimated cartridge life
	<b>89</b>	<b>Tips for moving &amp; storing your machine</b>
<b>TROUBLESHOOTING</b>	<b>90</b>	<b>Redistributing toner</b>
	<b>90</b>	<b>Clearing original document jams</b>
	<b>91</b>	<b>Tips for avoiding paper curls</b>
	<b>91</b>	<b>Tips for avoiding paper jams</b>
	<b>92</b>	<b>Clearing paper jams</b>
	92	In tray 1
	92	In the manual tray
	92	Inside the machine
	93	In exit area
	<b>94</b>	<b>Understanding display messages</b>
	94	Checking display messages
	<b>94</b>	<b>Solving other problems</b>
	94	Paper feeding problems
	95	Printing problems
	96	Printing quality problems
	98	Copying problems
	99	Scanning problems
	100	Fax problems
	100	Samsung Scan Manager Problem
	100	Common Windows problems
	101	Common Linux problems
	102	Common Macintosh problems

# Content

---

<b>SUPPLIES AND ACCESSORIES</b>	
103	103 How to purchase
	103 Available supplies
	103 Available maintenance parts
	103 Replacing the toner cartridge
	104 Checking replaceable's lifespan

<b>SPECIFICATIONS</b>	
105	105 General specifications
	106 Printer specifications
	107 Scanner specifications
	107 Copier specifications
	108 Facsimile specifications
	109 Print media specifications

<b>CONTACT SAMSUNG WORLDWIDE</b>	
110	





 






# safety information

These warnings and precautions are included in order to prevent injury to you and others, as well as preventing any potential damage to your machine. Be sure to read and understand all of these instructions before using the machine. Use common sense for operating any electrical appliance and whenever using your machine. Also, follow all warnings and instructions marked on the machine and in the accompanying literature. After reading this section, keep it in a safe place for future reference.

## IMPORTANT SAFETY SYMBOLS


This section explains the meanings of all icons and signs in the user's guide. These safety symbols are in order, according to the degree of danger.

### Explanation of all icons and signs used in the user's guide:

 	<b>Warning</b>	Hazards or unsafe practices that may result in severe personal injury or death.
	<b>Caution</b>	Hazards or unsafe practices that may result in minor personal injury or property damage.
	Do not attempt.	
	Do not disassemble.	
	Do not touch.	
	Unplug the power cord from the wall socket.	
	Make sure the machine is grounded to prevent electric shock.	
	Call the service center for help.	
	Follow directions explicitly.	

## OPERATING ENVIRONMENT

### Warning



Do not use if the power cord is damaged or if the electrical outlet is not grounded.  
► This could result in electric shock or fire.



 
Do not bend, or place heavy objects on the power cord.  
► Stepping on or allowing the power cord to be crushed by a heavy object could result in electric shock or fire.



Do not place anything on top of the machine (water, small metal or heavy objects, candles, lit cigarettes, etc.).  
► This could result in electric shock or fire.




Do not remove the plug by pulling on the cord; do not handle the plug with wet hands.  
► This could result in electric shock or fire.



If the machine gets overheated, it releases smoke, makes strange noises, or generates an odd odor, immediately turn off the power switch and unplug the machine.

► This could result in electric shock or fire.

## Caution

 

During an electrical storm or for a period of non-operation, remove the power plug from the electrical outlet.

► This could result in electric shock or fire.



Be careful, the paper output area is hot.  
► Burns could occur.



If the machine has been dropped, or if the cabinet appears damaged, unplug the machine from all interface connections and request assistance from qualified service personnel.  
► Otherwise, this could result in electric shock or fire..



If the machine exhibits a sudden and distinct change in performance, unplug the machine from all interface connections and request assistance from qualified service personnel.

► Otherwise, this could result in electric shock or fire.



If the plug does not easily enter the electrical outlet, do not attempt to force it in.

► Call an electrician to change the electrical outlet, or this could result in electric shock.



Do not allow pets to chew on the AC power, telephone or PC interface cords.

► This could result in electric shock or fire.



If the machine does not operate properly after these instructions have been followed, unplug the machine from all interface connections and request assistance from qualified service personnel.

► Otherwise, this could result in electric shock or fire.

## OPERATING METHOD

### Caution



Do not forcefully pull the paper out during printing.  
► It can cause damage to the machine.



Be careful not to put your hand between the machine and paper tray.  
► You may get injured.



Do not block or push objects into the ventilation opening.  
► This could result in elevated component temperatures which can cause damage or fire.



Use care to avoid paper cuts when replacing paper or removing jammed paper.  
► You may get hurt.



When printing large quantities, the bottom part of the paper output area may get hot. Do not allow children to touch.

► You may be burned.



When removing jammed paper, do not use tweezers or sharp metal objects.

► It can cause damage to the machine.



Do not allow too many papers to stack up in the paper output tray.

► It could cause damage to the machine.



This machine's power interception device is the power cord.  
► To switch off the power supply, remove the power cord from the electrical outlet.

## INSTALLATION / MOVING

### Warning



Do not place the machine in an area with dust, humidity or water leaks.

► This could result in electric shock or fire.

### Caution



When moving the machine, turn the power off and disconnect all cords; then lift the machine with at least two people.

► The machine could fall, causing human injury or machine damage.



Do not place the machine on an unstable surface.

► The machine could fall, causing human injury or machine damage.



The machine should be connected to the power level which is specified on the label.

► If you are unsure and want to check the power level you are using, contact the electrical utility company.



Use only No.26 AWG<sup>a</sup> or larger, telephone line cord, if necessary.

► Otherwise, it can cause damage to the machine.



Do not put a cover over the machine or place it in an airtight location, such as a closet.

► If the machine is not well-ventilated, this could result in fire.



Make sure you plug the power cord into a grounded electrical outlet.

► Otherwise, this could result in electric shock or fire.



Do not overload wall outlets and extension cords.

► This can diminish performance, and could result in electric shock or fire.



Use the power cord supplied with your machine for safe operation. If you are using a cord which is longer than 2 meters (79") with a 140V machine, then the gauge should be 16 AWG or larger.

► Otherwise, it can cause damage to the machine, and could result in electric shock or fire.

a. AWG: American Wire Gauge

## MAINTENANCE / CHECKING

### Caution



Unplug this product from the wall outlet before cleaning the inside of the machine. Do not clean the machine with benzene, paint thinner or alcohol; do not spray water directly into the machine.

► This could result in electric shock or fire.



Keep cleaning supplies away from children.

► Children may get hurt.



When you are working inside the machine replacing supplies or cleaning the inside, do not operate the machine.

► You may get injured.



Do not disassemble, repair or rebuild the machine by yourself.

► It can cause damage to the machine. Call a certified technician when the machine needs repair.

- ❗ Keep the power cable and the contact surface of the plug clean from dust or water.
  - ▶ This could result in electric shock or fire.
- ⊗ Do not remove any covers or guards that are fastened with screws.
  - ▶ The machine should only be repaired by Samsung service technician.

- ❗ To clean and operate the machine, strictly follow the user's guide provided with the machine.
  - ▶ Otherwise, it can cause damage to the machine.

## SUPPLY USAGE

---

### Caution



- Do not disassemble the toner cartridge.
  - ▶ Toner dust can be dangerous to humans.




- Do not burn any of the supplies such as toner cartridge or fuser unit.
  - ▶ It can cause an explosion or fire.

- ❗ When changing the toner cartridge or removing jammed paper, be careful not to let toner dust touch your body or clothes.
  - ▶ Toner dust can be dangerous to humans.



- When storing supplies such as toner cartridges, keep them away from children..
  - ▶ Toner dust can be dangerous to humans.

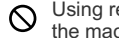

- Using recycled supplies, such as toner, can cause damage to the machine.
  - ▶ In case of damage due to the use of recycled supplies, a service fee will be charged.

# regulatory information

This machine is designed for our sound environment and certified with several regulatory statements.

## LASER SAFETY STATEMENT

The printer is certified in the U.S. to conform to the requirements of DHHS 21 CFR, chapter 1 Subchapter J for Class I(1) laser products, and elsewhere is certified as a Class I laser product conforming to the requirements of IEC 825.

Class I laser products are not considered to be hazardous. The laser system and printer are designed so there is never any human access to laser radiation above a Class I level during normal operation, user maintenance or prescribed service condition.

### WARNING

Never operate or service the printer with the protective cover removed from Laser/Scanner assembly. The reflected beam, although invisible, can damage your eyes.

When using this product, these basic safety precautions should always be followed to reduce risk of fire, electric shock, and injury to persons:



CAUTION - CLASS 3B LASER RADIATION WHEN OPEN  
AVOID EXPOSURE TO THE BEAM.

DANGER - LASER RADIATION AVOID DIRECT  
EXPOSURE TO BEAM.

DANGER - RADIATIONS INVISIBLES DU LASER EN CAS  
D'OUVERTURE. EVITER TOUTE EXPOSITION  
DIRECTE AU FAISCEAU.

VORSICHT - UNSICHTBARE LASERSTRAHLUNG, WENN  
ABDECKUNG GEÖFFNET.  
NICHT DEM STRAHL AUSSETZEN.

ATTENZIONE - RADIAZIONE LASER INVISIBILE IN CASO DI  
APERTURA. EVITARE L'ESPOSIZIONE AL FASCIO.

PRECAUCIÓN - RADIACIÓN LASER INVISIBLE CUANDO SE ABRE.  
EVITAR EXPONERSE AL RAYO.

PERIGO - RADIAÇÃO LASER INVISÍVEL AO ABRIR. EVITE  
EXPOSIÇÃO DIRECTA AO FEIXE.

GEVAAR - ONZICHTBARE LASERSTRALEN BIJ GEOPENDE  
KLEP. DEZE KLEP NIET OPENEN.

ADVARSEL - USYNLIG LASERSTRÅLNING VED ÅBNING.  
UNDGÅ UDSÆTTELSE FOR STRÅLNING.

ADVARSEL - USYNLIG LASERSTRÅLNING NÅR DEKSEL  
ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.

VARNING - OSYNLIG LASERSTRÅLNING NÄR DENNA DEL  
ÄR ÖPPEN. STRÅLEN ÄR FARLIG.

VAROITUS - NÄKYMÄTÖNTÄ LASERSÄTELYÄ AVATTAESSA.  
VARO SUORAA ALTISTUMISTA SÄTEELLE.

注意 - 严禁打开此盖，以免激光泄露灼伤

주의 - 이 덮개를 열면 레이저광에 노출될 수 있으므로  
주의하십시오.

## TAIWAN ONLY

### 警告使用者：

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

## OZONE SAFETY



During normal operation, this machine produces ozone. The ozone produced does not present a hazard to the operator. However, it is advisable that the machine be operated in a well ventilated area.

If you need additional information about ozone, request your nearest Samsung dealer.

## PERCHLORATE WARNING

---

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA.

Perchlorate Material - special handling may apply.

See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate). (U.S.A. only)

## POWER SAVER

---



This printer contains advanced energy conservation technology that reduces power consumption when it is not in active use.

When the printer does not receive data for an extended period of time, power consumption is automatically lowered.

ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

For more information on the ENERGY STAR program see <http://www.energystar.gov>

## RECYCLING

---



Recycle or dispose of the packaging material for this product in an environmentally responsible manner.

## CHINA ONLY

---

### 回收和再循环

为了保护环境，我公司已经为废弃的产品建立了回收和再循环系统。

我们会为您无偿提供回收同类废旧产品的服务。

当您要废弃您正在使用的产品时，请您及时与工厂取得联系，

我们会及时为您提供服务。

## CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

---



### (Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

## CORRECT DISPOSAL OF BATTERIES IN THIS PRODUCT

---

**(Applicable in the European Union and other European countries with separate battery return systems.)**



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## RADIO FREQUENCY EMISSIONS

---


### FCC Information to the User

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio TV technician for help.

 Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### Canadian Radio Interference Regulations

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Industry and Science Canada.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", ICES-003 édictée par l'Industrie et Sciences Canada.

## TAIWAN ONLY

---

### 回收和再循环

为了保护环境，我公司已经为废弃的产品建立了回收和再循环系统。

我们会为您无偿提供回收同类废旧产品的服务。

当您要废弃您正在使用的产品时，请您及时与工厂取得联系，

我们会及时为您提供服务。

## RUSSIA ONLY

---



Минсвязи России



## FAX BRANDING

---

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission the following information:

1. the date and time of transmission
2. identification of either business, business entity or individual sending the message; and
3. telephone number of either the sending machine, business, business entity or individual.

The Telephone Company may make changes in its communications facilities, equipment operations or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in FCC Part 68. If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service


## RINGER EQUIVALENCE NUMBER

---

The Ringer Equivalence Number and FCC Registration Number for this machine may be found on the label located on the bottom or rear of the machine. In some instances you may need to provide these numbers to the telephone company.

The Ringer Equivalence Number (REN) is a measure of the electrical load placed on the telephone line, and is useful for determining whether you have "overloaded" the line. Installing several types of equipment on the same telephone line may result in problems making and receiving telephone calls, especially ringing when your line is called. The sum of all Ringer Equivalence Numbers of the equipment on your telephone line should be less than five in order to assure proper service from the telephone company. In some cases, a sum of five may not be usable on your line. If any of your telephone equipment is not operating properly, you should immediately remove it from your telephone line, as it may cause harm to the telephone network.

The equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the rear of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

 FCC Regulations state that changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment. In the event that terminal equipment causes harm to the telephone network, the telephone company should notify the customer that service may be stopped. However, where prior notice is impractical, the company may temporarily cease service, providing that they:

- a) promptly notify the customer.
- b) give the customer an opportunity to correct the equipment problem.
- c) inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.



### You should also know that:

- Your machine is not designed to be connected to a digital PBX system.
- If you intend to use a computer modem or fax modem on the same phone line as your machine, you may experience transmission and reception problems with all the equipment. It is recommended that no other equipment, except for a regular telephone, share the line with your machine.
- If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for both the power and the telephone lines. Surge protectors can be purchased from your dealer or telephone and electronic specialty stores.
- When programming emergency numbers and/or making test calls to emergency numbers, use a non-emergency number to advise the emergency service dispatcher of your intentions. The dispatcher will give you further instructions on how to actually test the emergency number.
- This machine may not be used on coin service or party lines.
- This machine provides magnetic coupling to hearing aids.

You may safely connect this equipment to the telephone network by means of a standard modular jack, USOC RJ-11C.

## REPLACING THE FITTED PLUG (FOR UK ONLY)

---

### Important

The mains lead for this machine is fitted with a standard (BS 1363) 13 amp plug and has a 13 amp fuse. When you change or examine the fuse, you must re-fit the correct 13 amp fuse. You then need to replace the fuse cover. If you have lost the fuse cover, do not use the plug until you have another fuse cover.

Contact the people from you purchased the machine.

The 13 amp plug is the most widely used type in the UK and should be suitable. However, some buildings (mainly old ones) do not have normal 13 amp plug sockets. You need to buy a suitable plug adaptor. Do not remove the moulded plug.



If you cut off the moulded plug, get rid of it straight away.

You cannot rewire the plug and you may receive an electric shock if you plug it into a socket.

### Important warning:



You must earth this machine.

The wires in the mains lead have the following color code:

- **Green and Yellow:** Earth
- **Blue:** Neutral
- **Brown:** Live

If the wires in the mains lead do not match the colors marked in your plug, do the following:

You must connect the green and yellow wire to the pin marked by the letter "E" or by the safety 'Earth symbol' or colored green and yellow or green.

You must connect the blue wire to the pin which is marked with the letter "N" or colored black.

You must connect the brown wire to the pin which is marked with the letter "L" or colored red.

You must have a 13 amp fuse in the plug, adaptor, or at the distribution board.

## DECLARATION OF CONFORMITY (EUROPEAN COUNTRIES)

---

### Approvals and Certifications



The CE marking applied to this product symbolizes Samsung Electronics Co., Ltd. Declaration of Conformity with the following applicable 93/68/EEC Directives of the European Union as of the dates indicated:

**January 1, 1995:** Council Directive 2006/95/EC Approximation of the laws of the member states related to low voltage equipment.

**January 1, 1996:** Council Directive 2004/108/EC (92/31/EEC), approximation of the laws of the Member States related to electromagnetic compatibility.

**March 9, 1999:** Council Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. A full declaration, defining the relevant Directives and referenced standards can be obtained from your Samsung Electronics Co., Ltd. representative.

### EC Certification

Certification to 1999/5/EC Radio Equipment & Telecommunications Terminal Equipment Directive (FAX)

This Samsung product has been self-certified by Samsung for pan-European single terminal connection to the analogue public switched telephone network (PSTN) in accordance with Directive 1999/5/EC. The product has been designed to work with the national PSTNs and compatible PBXs of the European countries:

In the event of problems, you should contact the Euro QA Lab of Samsung Electronics Co., Ltd. in the first instance.

The product has been tested against TBR21. To assist in the use and application of terminal equipment which complies with this standard, the European Telecommunication Standards Institute (ETSI) has issued an advisory document (EG 201 121) which contains notes and additional requirements to ensure network compatibility of TBR21 terminals. The product has been designed against, and is fully compliant with, all of the relevant advisory notes contained in this document.

## OPENSSL LICENSE

---

Copyright (c) 1998-2001 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without
5. Prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
6. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
7. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT ``AS IS'' AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

## ORIGINAL SSLEAY LICENSE

---

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com). Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)" The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related:-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.

## EU DECLARATION OF CONFORMITY



### Declaration of Conformity

**Manufactured at:**

of Samsung Electronics Co., Ltd.  
259, Gongdan-Dong, Gumi-City, Gyeongsangbuk-Do, Korea 730-030  
of Samsung Electronics(Shandong) Digital Printing Co., Ltd.  
264209, Samsung Road, Weihai Hi-Tech. IDZ, Shandong Province, P.R.China  
of Weihai Shin Heung Digital Electronics Co., Ltd.  
98, Samsung Road, Weihai Hi-Tech. IDZ, Shandong Province, P.R.China  
of Intops (Weihai) Electronics Co., Ltd., Keji Road-268-1, Weihai Hi-Tech. Industries  
Development Zone, Shandong Province, CHINA

**We hereby declare, that the product is in compliance with the essential requirements of the R&TTE Directive (1995/5/EC) by application of:**

EN 60950-1: 2001 + A11 (IEC 60950-1:2001)  
EN 55022:1998 +A1:2000 +A2:2003  
EN 61000-3-2:2006  
EN 61000-3-3:1995 +A1:2001 +A2:2005  
EN 61000-4-2:1995  
EN 61000-4-3:1996  
EN 61000-4-4:2004  
EN 61000-4-5:1995  
EN 61000-4-6:1996  
EN 61000-4-11:1994  
ETSI TS 103 021  
ETSI EG 201 121 (February 2000)  
ES 201 187

The Technical documentation is kept at the below Manufacturer's address.

**Manufacturer**

Samsung Electronics Co., Ltd.  
259, Gongdan-Dong, Gumi-City  
Gyeongsangbuk-Do, Korea 730-030

Oct 20, 2008

A handwritten signature in black ink, appearing to read "Baek Sung Hwan".

Sung Hwan Baek / S. Manager

**Representative in the EU:**

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park  
Saxony Way, Yateley, Hampshire  
GU46 6GG, UK

Oct 20, 2008  
(Place and date of issue)

A handwritten signature in black ink, appearing to read "Y. S. Park".

Yong Sang Park / S. Manager

(Name and signature of authorized person)

CHINA ONLY

产品中有害有毒物质或元素的名称及含量


部件名称	有害有毒物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴联苯醚 (PBDE)
塑料	O	O	O	O	O	O
金属 ( 机箱 )	X	O	O	O	O	O
印刷电路部件 (PCA)	X	O	O	O	O	O
电缆 / 连接器	X	O	O	O	O	O
电源设备	X	O	O	O	O	O
电源线	X	O	O	O	O	O
机械部件	X	O	O	O	O	O
卡盒部件	X	O	O	O	O	O
定影部件	X	O	O	O	O	O
扫描仪部件 - CCD ( 如果有 )	X	X	O	O	O	O
扫描仪部件 - 其它 ( 如果有 )	X	O	O	O	O	O
印刷电路板部件 (PBA)	X	O	O	O	O	O
墨粉	O	O	O	O	O	O
滚筒	O	O	O	O	O	O

O：表示该有害有毒物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。  
X：表示该有害有毒物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

以上表为目前本产品含有有害有毒物质的信息。本信息由本公司的配套厂家提供，经本公司审核后而做成，本产品的部分部件含有有害有毒物质，这些部件是在现有科学技术水平下暂时无可替代物质，但三星电子将会一直为满足 SJ/T 11363-2006 标准而做不懈的努力。

# about this user's guide

This user's guide provides information about basic understanding of the machine as well as detailed explanation on each step during actual usage. Valuable for both novice and professional users can refer to this as a guide for installing and using the machine.



-  • Read the safety information before using the machine.
- If you have a problem using the machine, refer to the troubleshooting chapter. (See "Troubleshooting" on page 90.)
- Terms used in this user's guide are explained in the glossary chapter. (See "Glossary" on page 112.)
- Use Index to find information.
- All illustrations in this user's guide may differ from your machine depending on its options or models.
- The procedures in this user's guide are mainly based on Windows XP.

## CONVENTION

Some terms in this guide are used interchangeably, as below:




- Document is synonymous with original.
- Paper is synonymous with media, or print media.
- Machine refers to printer or MFP.

The following table offers the conventions of this guide:

CONVENTION	DESCRIPTION	EXAMPLE
<b>Bold</b>	For texts on the display or button names on the machine.	<b>Start</b>
<b>Note</b>	Provides additional information or detailed specification of the machine function and feature.	 The date format may differ from country to country.
<b>Caution</b>	Gives users information to protect the machine from possible mechanical damage or malfunction.	 Do not touch the green underside of the toner cartridge.
<b>Footnote</b>	Provides additional more detailed information on certain words or a phrase.	a. pages per minute
<b>("Cross-reference")</b>	Guides users to a reference page for the additional detailed information.	(See Finding more information.)

## FINDING MORE INFORMATION

You can find information for setting up and using your machine from the following resources, either as a print-out or on screen.

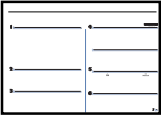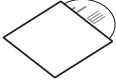MATERIAL NAME	DESCRIPTION
<b>Quick Install Guide</b> 	This guide provides information on setting up your machine and this requires that you follow the instructions in the guide to prepare the machine.
<b>User's Guide</b> 	This guide provides you with step-by-step instructions for using your machine's full features, and contains information for maintaining your machine, troubleshooting, and installing accessories.
<b>Network Website</b>	If you have network model, you can set the network environment from your computer using network-managing programs, such as SetIP, SyncThru™ Web Admin Service, <b>AnyWeb Print</b> etc. SyncThru™ Web Admin Service will be convenient for network administrators who need to manage many machines simultaneously. <b>AnyWeb Print</b> helps personal users to screen-capture the website screen in Windows Internet Explorer easily. You can download the SyncThru™ Web Admin Service or <b>AnyWeb Print</b> on <a href="http://solution.samsungprinter.com">http://solution.samsungprinter.com</a> . SetIP program is provided in the software CD.
<b>Machine Driver Help</b> 	This help provides you with help information on printer driver and instructions for setting up the options for printing. (See "Using help" on page 55.)
<b>Samsung website</b>	If you have Internet access, you can get help, support, machine drivers, manuals, and order information from the Samsung website, <a href="http://www.samsungprinter.com">www.samsungprinter.com</a> .

# features of your new product

---

Your new machine is equipped with a number of special features that improve the quality of the documents you print.

## SPECIAL FEATURES

 
---

### Print with excellent quality and speed




- You can print with a resolution of up to 1200 x 600 dpi effective output.
- Your machine prints A4-sized paper at up to 22 ppm and letter-sized paper at up to 23 ppm.

### Handle many different types of printable material



- Manual tray supports plain paper in various sizes, letterhead, envelopes, labels, custom-sized media, postcards, and heavy paper.
- The 250-sheet tray supports plain paper.

### Create professional documents

 

- Print Watermarks. You can customize your documents with words, such as "Confidential". (See "Using watermarks" on page 57.)
- Print Posters. The text and pictures of each page of your document are magnified and printed across the sheet of paper and can then be taped together to form a poster. (See "Printing posters" on page 56.)
- You can use preprinted forms with plain paper. (See "Using overlay" on page 57.)

### Save time and money



 
- To save paper, you can print multiple pages on one single sheet of paper. (See "Printing multiple pages on one sheet of paper" on page 55.)
- This machine automatically conserves electricity by substantially reducing power consumption when not in use.
- To save paper, you can print on both sides of the paper (manual). (See "Printing on both sides of paper (Manual)" on page 56.)

### Print in various environments




- You can print with various operating system such as Windows, Linux and Macintosh systems. (See "System requirements" on page 32.)
- Your machine is equipped with a USB interface and a network interface.

### Copy originals in several formats




- Your machine can copy multiple image copies from the original document on a single page. (See "2-up or 4-up copying (N-up)" on page 63.)
- The print quality and image size may be adjusted and enhance at the same time.

### Scan the originals and send it right away

 

- Scan in color and use the precise compressions of JPEG, TIFF and PDF formats.
- Quickly scan and send files to multiple destinations using Networks scanning. (See "For network connected machine" on page 65.)

### Set a specific time to transmit a Fax

 

- You can specify a certain time to transmit the fax and also send the fax to several stored destinations.
- After the transmission, the machine may print out the fax reports according to the setting.

### IPv6



This machine supports IPv6.



## FEATURES BY MODELS

The machine is designed to support all of your document needs from printing and copying to more advanced networking solutions for your business.

**Some features and optional goods may not be available depending on models or countries.**

Features by models include:

FEATURES		SCX-4600(K)	SCX-4623F(K)	SCX-4623FN	SCX-4623FH(K)
USB 2.0		●	●	●	●
Network Interface Ethernet 10/100 Base TX wired LAN				●	
IPv6				●	
Print		●	●	●	●
Copy		●	●	●	●
Scan feature	ID copy, clone, poster copy, auto fit	●	●	●	●
	2/4 up		●	●	●
FAX			●	●	●
Duplex (2-sided) printing (manual)		●	●	●	●
Print Screen		●	●		●
Reduce/Enlarge				●	
On hook dial			●	●	●
Document Feeder			●	●	●
Scanner glass		●	●	●	●
Handset					●
SyncThru™Web Service				●	
SetIP program				●	
Network PC fax				●	

( ●: Included, ○: Optional, Blank: Not available)

# introduction



This chapter gives you an overview of your machine:

**This chapter includes:**

- Machine overview
- Control panel overview (SCX-4623 Series)
- Control panel overview (SCX-4600 Series)
- Understanding the Status LED
- Control panel overview (SCX-4600 Series)
- Turning on the machine

## MACHINE OVERVIEW

### Front view

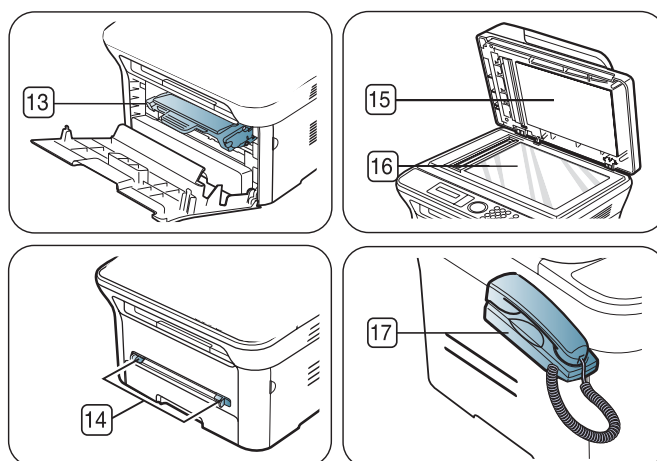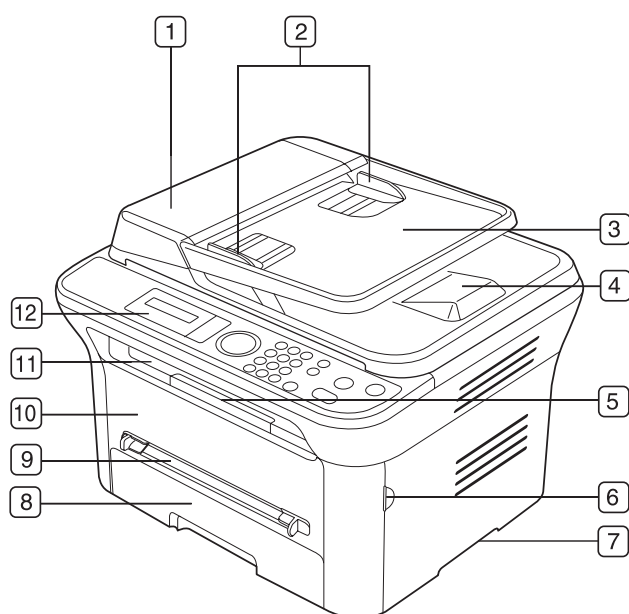


This illustration may differ from your machine depending on its model.

1 Document feeder cover <sup>a</sup>	6 Front door handle	11 Document output tray	16 Scanner glass
2 Document feeder width guides <sup>a</sup>	7 Handle	12 Control panel	17 Handset <sup>b</sup>
3 Document feeder input tray <sup>a</sup>	8 Tray 1	13 Toner cartridge	
4 Document feeder output tray <sup>a</sup>	9 Manual tray	14 Manual tray paper width guides	
5 Output support	10 Front door	15 Scanner lid	

- a. SCX-4623F(K), SCX-4623FN, SCX-4623FH(K)  
b. SCX-4623FH(K) only.

Rear view

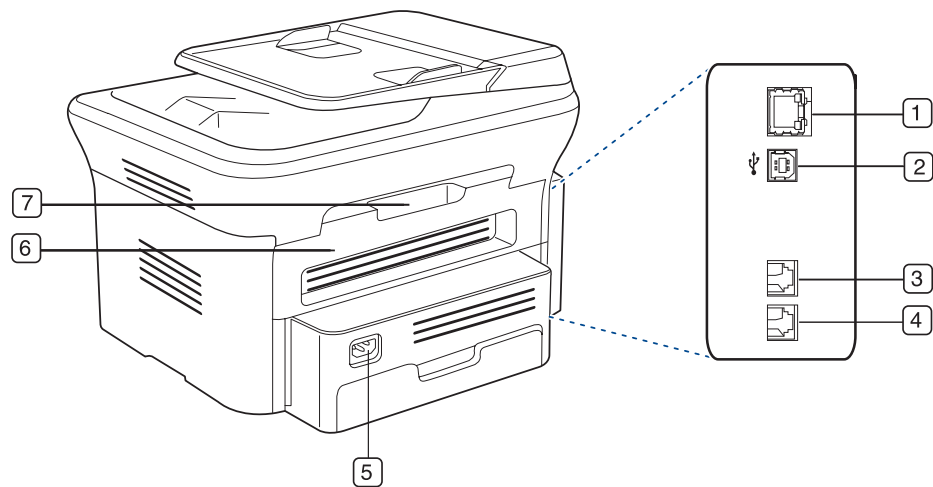


This illustration may differ from your machine depending on its model.

1	Network port <sup>a</sup>	5	Power receptacle
2	USB port	6	Rear door
3	Telephone line socket <sup>b</sup>	7	Rear door handle
4	Extension telephone socket (EXT) <sup>b</sup>		


- a. SCX-4623FN  
b. SCX-4623F(K), SCX-4623FN, SCX-4623FH(K)

## CONTROL PANEL OVERVIEW (SCX-4623 SERIES)

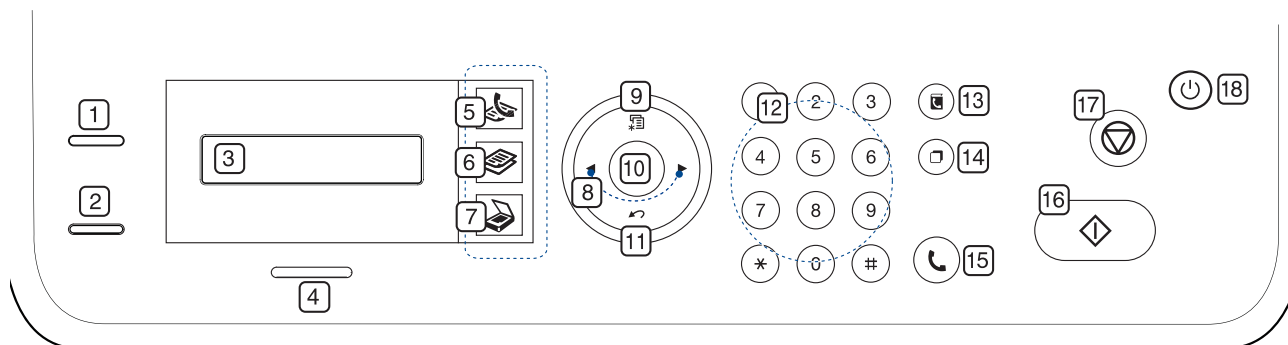

1	<b>ID Copy</b>	You can copy both sides of the ID Card like a driver's license to a single side of paper. (See "ID card copying" on page 63.)
2	<b>Print screen</b>	Prints the active screen displayed on the monitor. (See "Print screen button" on page 30.) (SCX-4623F(K), SCX-4623FH(K) only)
	<b>Reduce/Enlarge</b>	Makes a copy smaller or larger than the original. (SCX-4623FN only)
3	<b>Display</b>	Shows the current status and prompts during an operation.
4	<b>Status</b>	Shows the status of your machine. (See "Understanding the Status LED" on page 30.)
5	<b>(Fax)</b>	Activates fax mode.
6	<b>(Copy)</b>	Activates copy mode.
7	<b>(Scan)</b>	Activates scan mode.
8	<b>Arrow</b>	Scroll through the options available in the selected menu, and increase or decrease values.
9	<b>Menu</b>	Enters Menu mode and scrolls through the available menus. (See "Machine status and advanced feature" on page 77.)
10	<b>OK</b>	Confirms the selection on the screen.
11	<b>Back</b>	Sends you back to the upper menu level.
12	<b>Numeric keypad</b>	Dials fax number, and enters the number value for document copies or other options.
13	<b>Address Book</b>	Allows you to store frequently used fax numbers and email addresses or search for stored fax numbers or email addresses.
14	<b>Redial/Pause</b>	In standby mode, redials the last number. Also in edit mode, inserts a pause into a fax number.
15	<b>On Hook Dial</b>	Performs same as you hold a handset under the telephone line is engaged.
16	<b>Start</b>	Starts a job.
17	<b>Stop/Clear</b>	Stops an operation at any time. The pop-up window appears on the screen showing the current job that the user can stop or resume.
18	<b>(Power)</b>	Sends the machine into power saver mode. If you press and hold this button, you can also turn the power on and off. (See "(Power button)" on page 30.)

## CONTROL PANEL OVERVIEW (SCX-4600 SERIES)

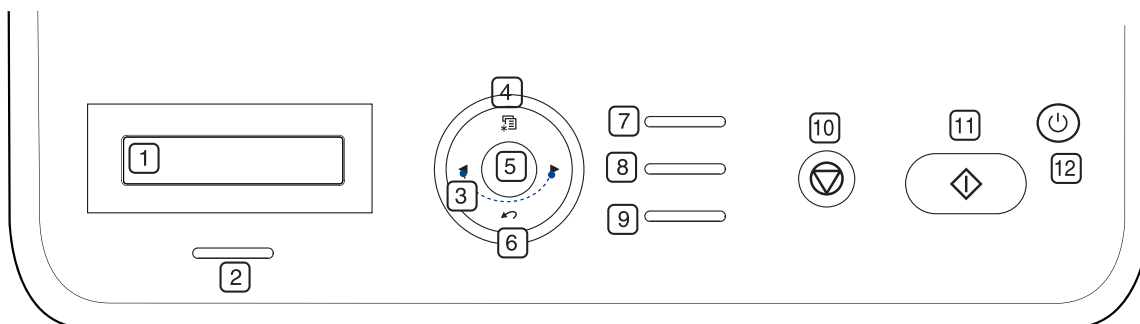


1	<b>Display</b>	Shows the current status and prompts during an operation.
2	<b>Status</b>	Shows the status of your machine. (See "Understanding the Status LED" on page 30.)
3	<b>Arrow</b>	Scroll through the options available in the selected menu, and increase or decrease values.
4	<b>Menu</b>	Enters Menu mode and scrolls through the available menus. (See "Machine status and advanced feature" on page 77.)
5	<b>OK</b>	Confirms the selection on the screen.
6	<b>Back</b>	Sends you back to the upper menu level.
7	<b>ID Copy</b>	You can copy both sides of the ID Card like a driver's license to a single side of paper. (See "ID card copying" on page 63.)
8	<b>Scan to</b>	Sends scanned data. (See "Scanning originals and sending to your computer (Scan to PC)" on page 65.)
9	<b>Print screen</b>	Prints the active screen displayed on the monitor. (See "Print screen button" on page 30.)
10	<b>Stop/Clear</b>	Stops an operation at any time. The pop-up window appears on the screen showing the current job that the user can stop or resume.
11	<b>Start</b>	Starts a job.
12	<b>⏻ (Power)</b>	Sends the machine into power saver mode. If you press and hold this button, you can also turn the power on and off. (See "(Power button)" on page 30.)

## UNDERSTANDING THE STATUS LED

The color of the status LED indicates the machine's current status.

STATUS		DESCRIPTION
Off		<ul style="list-style-type: none"><li>The machine is off-line.</li><li>The machine is in power saver mode. When data is received, or any button is pressed, it switches to on-line automatically.</li></ul>
Green	Blinking	<ul style="list-style-type: none"><li>When the backlight slowly blinks, the machine is receiving data from the computer.</li><li>When the backlight blinks rapidly, the machine is printing data.</li></ul>
	On	The machine is on-line and can be used.
Red	Blinking	<ul style="list-style-type: none"><li>A minor error has occurred and the machine is waiting for the error to be cleared. Check the display message. When the problem is cleared, the machine resumes.</li><li>Small amount of toner is left in the cartridge. The estimated cartridge life<sup>a</sup> of toner is close. Prepare a new cartridge for replacement. You may temporarily increase the printing quality by redistributing the toner. (See "Redistributing toner" on page 90.)</li></ul>
	On	<ul style="list-style-type: none"><li>A toner cartridge has almost reached its estimated cartridge life<sup>a</sup>. It is recommended to replace the toner cartridge. (See "Replacing the toner cartridge" on page 103.)</li><li>A paper jam has occurred. (See "Clearing paper jams" on page 92.)</li><li>The cover is opened. Close the cover.</li><li>There is no paper in the tray. Load paper in the tray.</li><li>The machine has stopped due to a major error. Check the display message. (See "Understanding display messages" on page 94.)</li></ul>

a. Estimated cartridge life means the expected or estimated toner cartridge life, which indicates the average capacity of print-outs and is designed pursuant to ISO/IEC 19752. (See "General specifications" on page 105.) The number of pages may be affected by operating environment, printing interval, media type, and media size. Some amount of toner may remain in the cartridge even when **Toner Empty** appears and the printer stops printing.


 Check the message on the display. Follow the instructions in the message or refer to troubleshooting part. (See "Understanding display messages" on page 94.) If the problem persists, call for service.

## INTRODUCING THE USEFUL BUTTONS

### Menu button


When you want to know the machine status and set your machine to use an advanced feature, click **Menu** button. (See "Machine status and advanced feature" on page 77.)

### (Power button)


When the machine is not in use, save electricity by pressing the  (power) button. Pressing this button for one second puts the machine into power save mode. (See "Using the save modes" on page 45.)  
When you want to turn the power off, press this button until **Power Down** appear. Choose **Yes**, to turn the power off. This button can also be used to turn the machine on.

STATUS	DESCRIPTION
Off	
On	The machine is in power save mode.

### Print screen button

 
 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)


If you press **Print Screen** button for more than two seconds, machine prints active screen displayed on the monitor, if you press **Print Screen** button for less than two seconds, machine prints the whole screen displayed in the monitor. The page will be printed on the default page like A4, Letter.



- You can only use this function with USB-connect machine.
- Print Screen** can only be used in the Windows and Macintosh.
- You can only use this function if the machine driver is installed.

## TURNING ON THE MACHINE

1. Plug in the power cord.
2. Press the  (power) button.


 If you want to turn the power off, press this button until **Power Down** appear.

# getting started

This chapter gives you step-by-step instructions for setting up the USB connected machine and software.

## This chapter includes:

- Setting up the hardware
- Supplied software
- System requirements

 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)


## SETTING UP THE HARDWARE

This section shows the steps to set up the hardware, as is explained in the Quick Install Guide. Make sure you read the Quick Install Guide first and follow the steps below:

### 1. Select a stable location.

Select a level, stable place with adequate space for air circulation. Allow extra space to open covers and trays.

The area should be well ventilated and away from direct sunlight or sources of heat, cold, and humidity. Do not set the machine close to the edge of your desk or table.

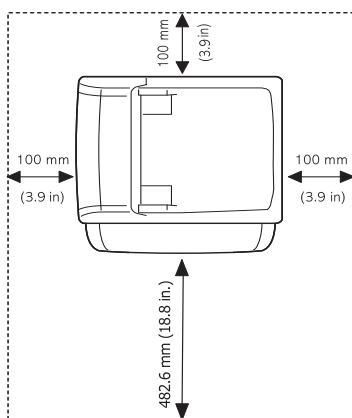


Printing is suitable for altitudes under 1,000 m (3,281 ft). Refer to the altitude setting to optimize your printing. (See "Altitude adjustment" on page 43.)

Place the machine on a flat, stable surface so that there is no incline greater than 2 mm (0.08 inch). Otherwise, printing quality may be

- Installing USB connected machine's driver
- Sharing your machine locally

affected.

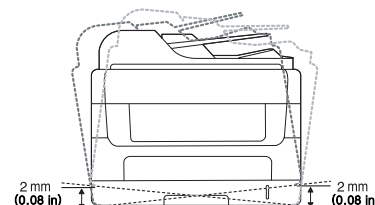

2. Unpack the machine and check all the enclosed items.
3. Remove all the tapes.
4. Install the toner cartridge.
5. Load paper. (See "Loading paper in the tray" on page 49.)
6. Make sure that all cables are connected to the machine.
7. Turn the machine on.



This equipment will be inoperable when mains power fails.

## SUPPLIED SOFTWARE

After you have set up your machine and connected it to your computer., you must install the printer and scanner software using the supplied CD . The software CD provides you with the following software.

OS	CONTENTS
Windows	<ul style="list-style-type: none"> <li>• <b>Printer driver:</b> Use this driver to take full advantage of your machine's features.</li> <li>• <b>Scanner driver:</b> TWAIN and Windows Image Acquisition (WIA) drivers are available for scanning documents on your machine.</li> <li>• <b>Smart Panel:</b> This program allows you to monitor the machine's status and alerts you when an error occurs during printing.</li> <li>• <b>SmarThru<sup>a</sup>:</b> This program is the accompanying Windows-based software for your multifunctional machine.</li> <li>• <b>Samsung Scan &amp; Fax Manager:</b> You can find out about Scan &amp; Fax Manager program information and installed scan driver's condition.</li> <li>• <b>SetIP:</b> Use this program to set your machine's TCP/IP addresses.</li> </ul>
Macintosh	<ul style="list-style-type: none"> <li>• <b>Printer driver:</b> Use this driver to take full advantage of your machine's features.</li> <li>• <b>Scanner driver:</b> TWAIN driver is available for scanning documents on your machine.</li> <li>• <b>Smart Panel:</b> This program allows you to monitor the machine's status and alerts you when an error occurs during printing.</li> <li>• <b>Samsung Scan &amp; Fax Manager:</b> You can find out about Scan &amp; Fax Manager program information and installed scan driver's condition.</li> <li>• <b>SetIP:</b> Use this program to set your machine's TCP/IP addresses.</li> </ul>
Linux	<ul style="list-style-type: none"> <li>• <b>Unified Linux Driver:</b> Use this driver to take full advantage of your machine's features.</li> <li>• <b>SANE:</b> Use this driver to scan documents.</li> <li>• <b>Smart Panel:</b> This program allows you to monitor the machine's status and alerts you when an error occurs during printing.</li> <li>• <b>SetIP:</b> Use this program to set your machine's TCP/IP addresses.</li> </ul>

a. Allows you to edit a scanned image in various ways using a powerful image editor and to send the image by email. You can also open another image editor program, such as Adobe Photoshop, from SmarThru . For details, refer to the on screen help supplied on the SmarThru program. (See "Smarthru" on page 83.)

## SYSTEM REQUIREMENTS

Before you begin, ensure that your system meets the following requirements:

### Windows

Your machine supports the following Windows operating systems.

OPERATING SYSTEM	REQUIREMENT (RECOMMENDED)		
	CPU	RAM	FREE HDD SPACE
Windows 2000	Pentium II 400 MHz (Pentium III 933 MHz)	64 MB (128 MB)	600 MB
Windows XP	Pentium III 933 MHz (Pentium IV 1 GHz)	128 MB (256 MB)	1.5 GB
Windows Server 2003	Pentium III 933 MHz (Pentium IV 1 GHz)	128 MB (512 MB)	1.25 GB to 2 GB
Windows Vista	Pentium IV 3 GHz	512 MB (1024 MB)	15 GB
Windows Server 2008	Pentium IV 1 GHz (Pentium IV 2 GHz)	512 MB (2048 MB)	10 GB



- Internet Explorer 5.5 or higher is the minimum requirement for all Windows operating systems.
- Users who have an administrator right can install the software.
- **Windows Terminal Services** is compatible with this machine.

### Macintosh

OPERATING SYSTEM	REQUIREMENTS (RECOMMENDED)		
	CPU	RAM	FREE HDD SPACE
Mac OS X 10.3 ~ 10.4	<ul style="list-style-type: none"> <li>• Intel Processors</li> <li>• PowerPC G4/ G5</li> </ul>	<ul style="list-style-type: none"> <li>• 128 MB for a PowerPC based Mac (512 MB)</li> <li>• 512 MB for a Intel-based Mac (1 GB)</li> </ul>	1 GB
Mac OS X 10.5 ~ 10.6	<ul style="list-style-type: none"> <li>• Intel Processors</li> <li>• 867 MHz or faster Power PC G4/ G5</li> </ul>	512 MB (1 GB)	1 GB

### Linux

ITEM	REQUIREMENTS
Operating system	RedHat 8.0, 9.0 (32bit) RedHat Enterprise Linux WS 4, 5 (32/64bit) Fedora Core 1~7 (32/64bit) Mandrake 9.2 (32bit), 10.0, 10.1 (32/64bit) Mandriva 2005, 2006, 2007 (32/64bit) SuSE Linux 8.2, 9.0, 9.1 (32bit) SuSE Linux 9.2, 9.3, 10.0, 10.1, 10.2 (32/64bit) SuSE Linux Enterprise Desktop 9, 10 (32/64bit) Ubuntu 6.06, 6.10, 7.04 (32/64bit) Debian 3.1, 4.0 (32/64bit)
CPU	Pentium IV 2.4GHz (IntelCore2)
RAM	512 MB (1024 MB)
Free HDD space	1 GB (2GB)



- It is necessary to claim swap partition of 300 MB or larger for working with large scanned images.
- The Linux scanner driver supports the optical resolution at maximum.


## INSTALLING USB CONNECTED MACHINE'S DRIVER

A locally connected machine is a machine directly attached to your computer using the USB cable. If your machine is attached to a network, skip the following steps below and go on to installing network connected machine's driver. (See "Installing wired network or USB connected machine's driver" on page 39.)

- Selecting **Custom installation** allows you to choose programs to install.
- Only use an USB cable no longer than 3 m (118 in.).

### Windows

You can install the machine software using the typical or custom method. The following steps below are recommended for most users who use a machine directly connected to your computer. All components necessary for machine operations will be installed.

1. Make sure that the machine is connected to your computer and powered on.
  - If the **"New Hardware Wizard"** window appears during the installation procedure, click  in the upper right corner of the box to close the window, or click **Cancel**.
2. Insert the supplied software CD into your CD-ROM drive.
  - The software CD should automatically run and an installation window appear.
  - If the installation window does not appear, click **Start** and then **Run**. Type **X:\Setup.exe**, replacing "X" with the letter which represents your drive. Click **OK**.
  - If you use Windows Vista, click **Start > All programs > Accessories > Run**. Type **X:\Setup.exe** replacing "X" with the letter which represents your drive and click **OK**.
  - If the **AutoPlay** window appears in Windows Vista, click **Run Setup.exe** in **Install or run program** field, and click **Continue** in the **User Account Control** windows.
3. Select **Install Now**.




If necessary, select a language from the drop-down list.

4. Read **License Agreement**, and select **I accept the terms of the License Agreement**. Then, click **Next**.



The program searches the machine.

- If your machine is not connected to the computer, the following window will appear.

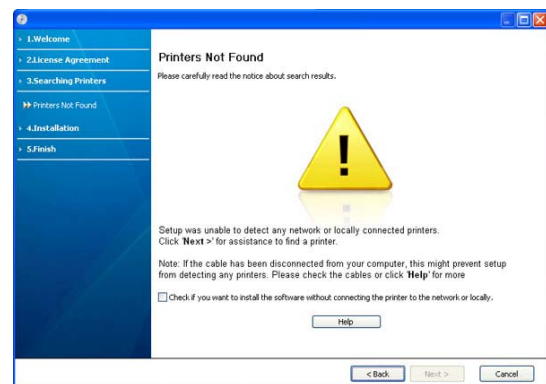


- After connecting the machine, click **Next**.
  - If you don't want to connect the machine at this time, click the check box beside of **Check if you want to install the software without connecting the printer to the network or locally..** In this case, the print a test page window will be skipped, and completes the installation.
  - The installation window in this User's Guide may differ depending on the machine and interface in use.
5. When the printer connection confirmation window appears, check the printer name and click **Next**.
  6. After the installation is finished, a window asking you to print a test page appears. If you choose to print a test page, click the button and **Next**.
  7. If the test page prints out correctly, click **Yes**. If not, click **No** to reprint it.

8. To register as a user of the machine in order to receive information from Samsung, click **On-line Registration**. You are now registered to the Samsung web site.



9. Click **Finish**.


-  If the printer driver does not work properly, follow the steps below to repair or reinstall the driver.
- a) Make sure that the machine is connected to your machine and powered on.
  - b) From the **Start** menu, select **Programs** or **All Programs** > **Samsung Printers** > **your printer driver name** > **Maintenance**.
  - c) Select the option as you wish, follow the instruction on the window.

## Macintosh

The software CD that came with your machine provides you with the Driver files that allows you to use the CUPS driver or PostScript driver (only available when you use a machine which supports the PostScript driver) for printing on a Macintosh computer.

Also, it provides you with the TWAIN driver for scanning on a Macintosh computer.

1. Make sure that the machine is connected to your computer and powered on.
2. Insert the supplied software CD into your CD-ROM drive.
3. Double-click the CD-ROM icon that appears on your Macintosh desktop.
4. Double-click the **MAC\_Installer** folder.
5. Double-click the **Installer OS X** icon.
6. Enter the password and click **OK**.
7. The Samsung Installer window opens. Click **Continue**.
8. Select **Easy Install** and click **Install**. **Easy Install** is recommended for most users. All components necessary for machine operations will be installed.  
If you select **Custom Install**, you can choose individual components to install.
9. When the message which warns that all applications will close on your computer appears, click **Continue**.
10. After the installation is finished, click **Quit**.

-  If you have installed scan driver, click **Restart**.

11. Open the **Applications** folder > **Utilities** > **Print Setup Utility**.
  - For Mac OS X 10.5 ~ 10.6, open the **Applications** folder > **System Preferences** and click **Print & Fax**.
12. Click **Add** on the **Printer List**.

- For Mac OS X 10.5 ~ 10.6, press the "+" icon; a display window will pop up.

13. For Mac OS X 10.3, select the **USB** tab.


- For Mac OS X 10.4, click **Default Browser** and find the USB connection.
- For Mac OS X 10.5 ~ 10.6, click **Default** and find the USB connection.

14. For Mac OS X 10.3, if Auto Select does not work properly, select **Samsung** in **Printer Model** and your machine name in **Model Name**.

- For Mac OS X 10.4, if Auto Select does not work properly, select **Samsung** in **Print Using** and your machine name in **Model**.
- For Mac OS X 10.5 ~ 10.6, if Auto Select does not work properly, select **Select a driver to use...** and your machine name in **Print Using**.

Your machine appears on the **Printer List**, and is set as the default machine.

15. Click **Add**.


-  If the printer driver does not work properly, uninstall the driver and reinstall it.

Follow steps below to uninstall the driver for Macintosh.


- a) Make sure that the machine is connected to your computer and powered on.
- b) Insert the supplied software CD into your CD-ROM drive.
- c) Double-click CD-ROM icon that appears on your Macintosh desktop.
- d) Double-click the **MAC\_Installer** folder.
- e) Double-click the **Installer OS X** icon.
- f) Enter the password and click **OK**.
- g) The Samsung Installer window opens. Click **Continue**.
- h) Select **Uninstall** and click **Uninstall**.
- i) When the message which warns that all applications will close on your computer appears, click **Continue**.
- j) When the uninstall is done, click **Quit**.

## Linux


Follow the steps below to install the driver for Linux. While installing the driver, the Unified Linux Driver package will automatically be installed as well.

-  The supplied software CD provides you with the Unified Linux Driver package for using your machine with a Linux computer easily in UI based management tool. (See "Using the Linux Unified Driver Configurator" on page 84.)

1. Make sure that the machine is connected to your computer and powered on.
2. When the **Administrator Login** window appears, type in root in the **Login** field and enter the system password.

-  You must log in as a super user (root) to install the machine software. If you are not a super user, ask your system administrator.

3. Insert the supplied software CD into your CD-ROM drive.  
The software CD will run automatically.


If the software CD does not run automatically, click the  icon at the bottom of the desktop. When the Terminal screen appears, type in the following:

If the software CD is secondary master and the location to mount is

```

/mnt/cdrom,
[root@localhost root]#mount -t iso9660 /dev/hdc /mnt/cdrom
[root@localhost root]#cd /mnt/cdrom/Linux
[root@localhost Linux]#./install.sh
If you still failed to run the software CD type the followings in sequence:
[root@localhost root]#umount /dev/hdc
[root@localhost root]#mount -t iso9660 /dev/hdc /mnt/cdrom

```


 The installation program runs automatically if you have an autorun software package installed and configured.



4. When the welcome screen appears, click **Next**.



5. When the installation is complete, click **Finish**.

The installation program has added the Unified Driver Configurator desktop icon and the Unified Driver group to the system menu for your convenience. If you have any difficulties, consult the on screen help that is available through your system menu or can otherwise be called from the driver package Windows applications, such as **Unified Driver Configurator** or **Image Manager**.

-  Installing the driver in the text mode:
- If you do not use the graphical interface or have been unable to install the driver, you have to use the driver in the text mode.
  - Follow the steps 1 to 3, then type `[root@localhost Linux]# ./install.sh`. Follow the instructions on the terminal screen. The installation is completed.
  - When you want to uninstall the driver, follow the installation instructions above, but type `[root@localhost Linux]# ./uninstall.sh` on the terminal screen.

-  If the printer driver does not work properly, uninstall the driver and reinstall it.
- Follow the steps below steps to uninstall the driver for Linux.
- a) Make sure that the machine is connected to your computer and powered on.
  - b) When the **Administrator Login** window appears, type in root in the **Login** field and enter the system password.  
You must log in as a super user (root) to uninstall the printer driver. If you are not a super user, ask your system administrator.
  - c) Insert the supplied software CD into your CD-ROM drive.  
The software CD will run automatically.  
If the software CD does not run automatically, click the  icon at the bottom of the desktop. When the Terminal screen appears, type in:  
If the software CD is secondary master and the location to mount is /mnt/cdrom,

```

[root@localhost root]#mount -t iso9660 /dev/hdc /mnt/cdrom
[root@localhost root]#cd /mnt/cdrom/Linux
[root@localhost Linux]#./uninstall.sh
The installation program runs automatically if you have an autorun
software package installed and configured.


```

- d) Click **Uninstall**.
- e) Click **Next**.
- f) Click **Finish**.

## SHARING YOUR MACHINE LOCALLY

Follow the steps below to set up the computers to share your machine locally.

If the Host computer is directly connected to the machine with USB cable and is also connected to the local network environment, the client computer connected to the local network can use the shared machine through the host computer to print.

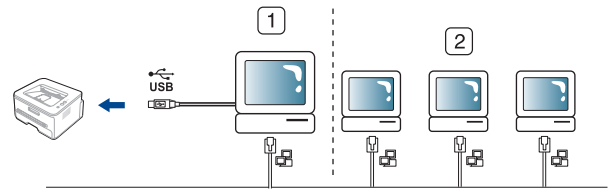

1	Host computer	A computer which is directly connected to the machine by USB cable.
2	Client computers	Computers which use the machine shared through the host computer.

## Windows

### Setting up a host computer

1. Install your printer driver. (See "Installing USB connected machine's driver" on page 33.)
2. Click the Windows **Start** menu.
3. For Windows 2000, select **Settings > Printers**.
  - For Windows XP/2003 select **Printer and Faxes**.
  - For Windows 2008/Vista select **Control Panel > Hardware and Sound > Printers**.
4. Double-click your printer driver icon.
5. From the **Printer** menu, select **Sharing....**
6. Check the **Share this printer**.
7. Fill in the **Shared Name** field. Click **OK**.

### Setting up a client computer

1. Install your printer driver. (See "Installing USB connected machine's driver" on page 33.)
2. Click the Windows **Start** menu.
3. Select **All programs > Accessories > Window Explorer**.
4. Enter in IP address of the host computer and press Enter in your keyboard.





In case host computer requires **User name** and **Password**, fill in User ID and password of the host computer account.

5. Right click the printer icon you want to share and select **Connect**.
6. If a set up complete message appears, click **OK**.
7. Open the file you want to print and start printing.

## Macintosh



The following steps are for Mac OS X 10.5 ~ 10.6. Refer to Mac Help for other OS versions.

### Setting up a host computer

1. Install your printer driver. (See "Macintosh" on page 34)
2. Open the **Applications** folder > **System Preferences** and click **Print & Fax**.
3. Select the printer to share in the **Printers list**.
4. Select "**Share this printer**".

### Setting up a client computer


1. Install your printer driver. (See "Macintosh" on page 34.)
2. Open the **Applications** folder > **System Preferences** and click **Print & Fax**.
3. Press the "+" icon.  
A display window showing the name of your shared printer appears.
4. Select your machine and click **Add**.

# network setup

This chapter gives you step-by-step instructions for setting up the network connected machine and software.

## This chapter includes:

- Network environment
- Introducing useful network programs

 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)

## NETWORK ENVIRONMENT


You need to set up the network protocols on the machine to use it as your network machine. You can set up the basic network settings through the machine's control panel.

The following table shows the network environments supported by the machine:

ITEM	REQUIREMENTS
<b>Network interface</b>	<ul style="list-style-type: none"><li>• Ethernet 10/100 Base-TX</li></ul>
<b>Network operating system</b>	<ul style="list-style-type: none"><li>• Windows 2000/XP/2003/2008/Vista</li><li>• Various Linux OS</li><li>• Mac OS X 10.3 ~ 10.6</li></ul>
<b>Network protocols</b>	<ul style="list-style-type: none"><li>• TCP/IPv4</li><li>• DHCP, BOOTP</li><li>• DNS, WINS, Bonjour, SLP, UPnP</li><li>• Standard TCP/IP Printing(RAW), LPR, IPP</li><li>• SNMPv 1/2/3, HTTP(S), IPSec</li><li>• TCP/IPv6 (DHCP, DNS, RAW, LPR, SNMPv 1/2/3, HTTP(S), IPSec (See "IPv6 Configuration" on page 42.)</li></ul>

## INTRODUCING USEFUL NETWORK PROGRAMS

There are several programs available to setup the network settings easily in network environment. For the network administrator especially, managing several machines on the network is possible.

 Before using the programs below, set the IP address first.

### SyncThru™ Web Service

Web server embedded on your network machine, which allows you to:

- Configure the network parameters necessary for the machine to connect to various network environments.
- Customize machine settings.

(See "Using SyncThru™ Web Service" on page 82.)

- Using a wired network
- IPv6 Configuration

### SyncThru™ Web Admin Service


Web-based machine management solution for network administrators. SyncThru™ Web Admin Service provides you with an efficient way of managing network devices and lets you remotely monitor and troubleshoot network machines from any site with corporate internet access. Download this program from <http://solution.samsungprinter.com>.

### AnyWeb Print

This tool helps you to screen-capture, preview, scrap and print the screen of Windows Internet Explorer more easily, than when you use the ordinary program. Click **Start > All programs > Samsung Printers > your machine name > AnyWeb Print** to link the website where the tool is available for the download. This tool is available only for Windows operating systems.

### SetIP


This utility program allows you to select a network interface and manually configure the IP addresses for use with the TCP/IP protocol. (See "IP setting using SetIP Program (Windows)" on page 38 or "IP setting using SetIP Program (Macintosh)" on page 38.)

 TCP/IPv6 is not supported by this program.

## USING A WIRED NETWORK

You must set up the network protocols on your machine to use it on your network. This chapter will show you how this is easily accomplished.

You can use network after connecting network cable to a corresponding port on your machine.

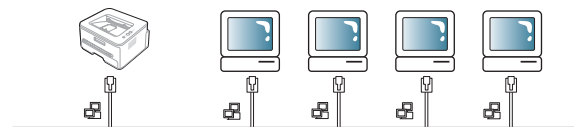

### Printing Network Configuration report

You can print a **Network Configuration Report** from the machine's control panel that will show the current machine's network settings. This will help you to set up a network and troubleshooting problems.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **Network Info.** appear and press **OK**.

Using this **Network Configuration Report**, you can find your machine MAC address and IP address.

For example:

- MAC Address : 00:15:99:41:A2:78
- IP Address : 192.0.0.192

## Setting IP address


Firstly, you have to set up an IP address for network printing and managements. In most cases a new IP address will be automatically assigned by a DHCP (Dynamic Host Configuration Protocol) server located on the network.

In a few situations the IP address must be set manually. This is called a static IP and is often required in corporate Intranets for security reasons.

- **DHCP IP assignment:** Connect your machine to the network, and wait a few minutes for the DHCP server to assign an IP address to the machine. Then, print the **Network Configuration Report** as explained above. If the report shows that the IP address has changed, the assignment was successful. You will see the new IP address in the report.
- **Static IP assignment:** Use SetIP program to change the IP address from your computer. If your machine has a control panel, you can also change IP address using the machine's control panel.

In an office environment, we recommend that you contact a network administrator to set this address for you.

### IP setting using control panel

1. Connect your machine to the network with a network cable.
2. Turned on the machine.
3. Press **Menu** on the control panel.
4. Press the left/right arrow until **Network** appear and press **OK**.
5. Press the left/right arrow until **TCP/IP (IPv4)** appear and press **OK**.
6. Press the left/right arrow until **IPv4 Activate** appear and press **OK**.
7. Press the left/right arrow until **On** appear and press **OK**.  
 **On** is set as a default.
8. Press the left/right arrow until **Set IP Address** appear and press **OK**.
9. Press the left/right arrow until **Manual** appear and press **OK**.
10. The first available menu item, **IP Address** displays.
  - Enter a number between 0 and 255.
11. Enter the IP address using numeric keypad appear and press **OK**.
12. Enter other parameters, such as the **Subnet Mask** and **Gateway** appear and press **OK**.
13. After entering all parameters, press **Stop/Clear** to return to ready mode.

Now go to "Installing wired network or USB connected machine's driver" on page 39.

### IP setting using SetIP Program (Windows)

This program is for manually setting the network IP address of your machine using its MAC address to communicate with the machine. A MAC address is the hardware serial number of the network interface and can be found in the **Network Configuration Report**.

For using SetIP program, disable the computer firewall before continuing by performing the following:


1. Open **Control Panel**.
2. Double click **Security Center**.
3. Click **Windows Firewall**.
4. Disable the firewall.


### Installing the program

1. Insert the Printer Software CD-ROM provided with your machine. When the driver CD runs automatically, close that window.
2. Start Windows Explorer and open the X drive. (X represents your CD-ROM drive.)

3. Double-click **Application > SetIP**.
4. Double-click **Setup.exe** to install this program.
5. Click **OK**. If necessary, select a language from the drop-down list.
6. Follow the instructions in the window and complete the installation.

### Starting the program

1. Connect your machine to the network with a network cable.
2. Turned on the machine.
3. From the Windows **Start** menu, select **All Programs > Samsung Printers > SetIP > SetIP**.
4. Click on the  icon (third from left) in the SetIP window to open the TCP/IP configuration window.
5. Enter the machine's new information into the configuration window as follows. In a corporate intranet, you may need to have this information assigned by a network manager before proceeding.

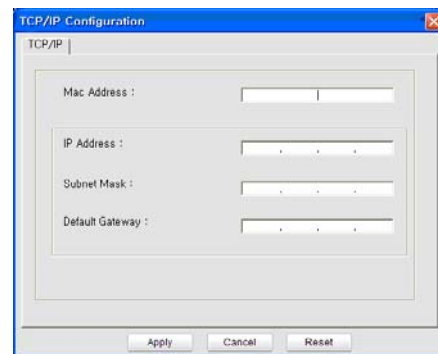

- **MAC Address** : Find the machine's MAC address from the **Network Configuration Report** and enter it without the colons. For example, 00:15:99:29:51:A8 becomes 0015992951A8.
  - **IP Address**: Enter a new IP address for your printer. For example, if your computer's IP address is 192.168.1.150, enter 192.168.1.X. (X is number between 1 and 254 other than the computer's address.)
  - **Subnet Mask**: Enter a Subnet Mask.
  - **Default Gateway**: Enter a Default Gateway.
6. Click **Apply**, and then click **OK**. The machine will automatically print the **Network Configuration Report**. Confirm that all the settings are correct.
  7. Click **Exit** to close the SetIP program.
  8. If necessary, restart the computer's firewall.

### IP setting using SetIP Program (Macintosh)

For using SetIP program, disable the computer firewall before continuing by performing the following:


1. Open **System Preferences**.
2. Click **Security**.
3. Click the **Firewall** menu.
4. Turn firewall off.

 The following instructions may vary for your model.

1. Connect your machine to the network with a network cable.
2. Insert the Installation CD-ROM, and open the disk window, select **MAC\_Installer > MAC\_Printer > SetIP > SetIP.ppplet.html**.




3. Double click the file and **Safari** will automatically open, then select **Trust**. The browser will open the **SetIPApplet.html** page that shows the printer's name and IP address information.
4. Highlight the printer information row and select the **Setup icon**, which is the second icon from the left in the application menu bar. A TCP/IP Configuration window will open.

 If the printer was not shown in the information row, select the Manual Setting icon (third from left) to open the TCP/IP Configuration window.

5. Enter the machine's new information into the configuration window as follows. In a corporate intranet, you may need to have this information assigned by a network manager before proceeding.
  - **MAC Address** : Find the machine's MAC address from the **Network Configuration Report** and enter it without the colons. For example, 00:15:99:29:51:A8 becomes 0015992951A8.
  - **IP Address**: Enter a new IP address for your printer.  
For example, if your computer's IP address is 192.168.1.150, enter 192.168.1.X. (X is number between 1 and 254 other than the computer's address.)
  - **Subnet Mask**: Enter a Subnet Mask.
  - **Default Gateway**: Enter a Default Gateway.
6. Select **Apply**, then **OK**, and **OK** again. The printer will automatically print the configuration report. Confirm that all the settings are correct. **Quit Safari**. You may close and eject the installation CD-ROM. If necessary, restart the computer's firewall. You have successfully changed the IP address, subnet mask, and gateway.

### IP setting using SetIP Program (Linux)

SetIP program should be automatically installed during the printer driver installation.

1. Print the machine's network configuration report to find your machine's MAC address.
  2. Open the **/opt/Samsung/mfp/share/utills/**.
  3. Double click the **SetIPApplet.html** file.
  4. Click to open the TCP/IP configuration window.
  5. Enter the network card's MAC address, IP address, subnet mask, default gateway, and then click **Apply**.
-  When you enter the MAC address, enter it without a colon(:).
6. The machine prints the network information. Confirm all the settings are correct.
  7. Close the SetIP program.

### Network parameter setting

You can also set up the various network settings through the network administration programs such as **SyncThru™ Web Admin Service** and **SyncThru™ Web Service**.

### Restoring factory default settings


You may need to reset the machine to the factory default settings when machine that you are using is connected to new network environment.

#### Restoring factory default settings using control panel


1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **Clear Settings** appear and press **OK**.
4. Turn off and restart machine to apply settings.

### Restoring factory default settings using SyncThru™ Web Service

1. Start a web browser such as Internet Explorer, Safari or Firefox and enter your machine's new IP address in the browser window.  
For example,

 **http://192.168.1.133/**

2. When the **SyncThru™ Web Service** window opens, click **Network Settings**.
3. Click **Reset**. Then, click **Clear** for network.

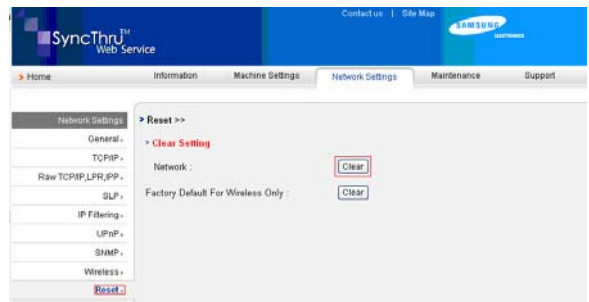

4. Turn off and restart machine to apply settings.

## INSTALLING WIRED NETWORK OR USB CONNECTED MACHINE'S DRIVER

### Windows

You can set up the machine driver, follow the steps below.


This is recommended for most users. All components necessary for machine operations will be installed.

1. Make sure that the machine is connected to the network or USB and powered on.
2. Insert the supplied software CD into your CD-ROM drive.
  - The software CD should automatically run and an installation window appear.
  - If the installation window does not appear, click **Start** and then **Run**. Type **X:\Setup.exe**, replacing "X" with the letter which represents your drive. Click **OK**.
  - If you use Windows Vista, click **Start > All programs > Accessories > Run**.  
Type **X:\Setup.exe** replacing "X" with the letter which represents your drive and click **OK**.
  - If the **AutoPlay** window appears in Windows Vista, click **Run Setup.exe** in **Install or run program** field, and click **Continue** in the **User Account Control** windows.


### 3. Select **Install Now**.




If necessary, select a language from the drop-down list.

 The **Advanced Installation** has two options, **Custom Installation** and **Install Software Only**. The Custom Installation allows you to select the machine's connection and choose individual component to install. The Install Software Only allows you to install the supplied softwares, such as Smart Panel. Follow the instruction on the window.


### 4. Read **License Agreement**, and select **I accept the terms of the License Agreement**. Then, click **Next**.

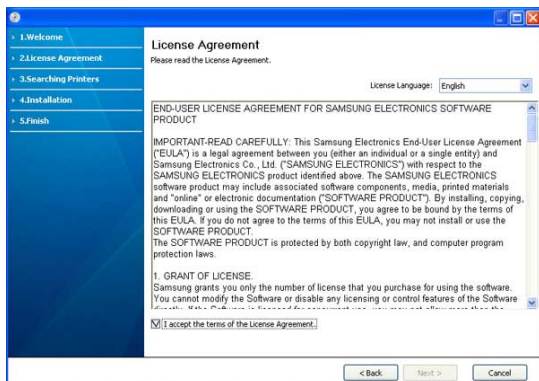

The program searches the machine.

 If your machine is not found in the network or locally, the following

window will appear.

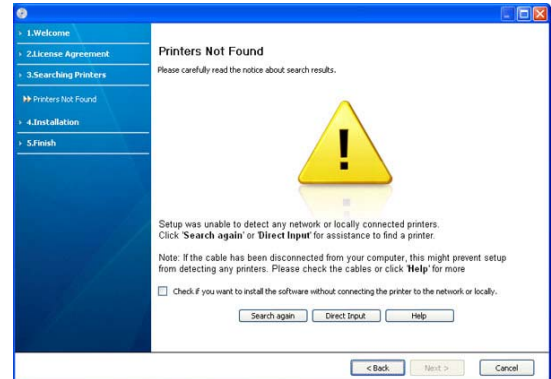

- **Check if you want to install the software without connecting the printer to the network or locally.**
  - Check this option to install this program without a machine connected. In this case, the print a test page window will be skipped, and completes the installation.
- **Search again**

When you press this button, the firewall notice window appears;

  - Turn off the firewall and **Search again**. For Window operating system, click **Start > Control Panel > Windows Firewall**, and inactivate this option.
  - Turn off the firewall from the third party's program beside the operating system. Refer to the manual provided by individual programs.
- **Direct Input**

The **Direct Input** allows you to search a specific machine on the newtwork.

  - **Search by IP address:** Enter the IP address or the host name. Then click **Next**.

To verify your machine's IP address, print a network configuration report. (See "Installing wired network or USB connected machine's driver" on page 39.)
  - Search by network path: To find a shared machine (UNC Path), enter the shared name manually or find a shared printer by clicking the **Browse** button. Then click **Next**.
- **Help**


If your machine is not connected to the computer or network, This help button gives detailed information about the how to connect the machine.
- **Set IP Address**

If you want to set a specific IP address on a specific network machine, click the **Set IP Address** button. The **Set IP Address** window appears. Do as follows:

  - a) Select a machine to be set with a specific IP address from the list.
  - b) Configure an IP address, subnet mask, and gateway for the machine manually and click **Apply** to set the specific IP address for the network machine.
  - c) Click **Next**.



- The searched machine will be shown on the screen. Select one you wish to use.


 If the driver searched only one printer, the confirmation window appears.

The program starts installation.


- After the installation is finished, a window asking you to print a test page appears. If you want to print a test page, click **Print a test page**. Otherwise, just click **Next** and skip to step 7.
- If the test page prints out correctly, click **Yes**. If not, click **No** to reprint it.
- To register as a user of the machine in order to receive information from Samsung, click **On-line Registration**. You are now registered to the Samsung web site.



- Click **Finish**.

-  • After the driver setup, you may enable firewalls.
- If your printer driver doesn't work properly after setup has been completed, repair or reinstall the printer driver. (See "Installing USB connected machine's driver" on page 33.)

## Macintosh

- Make sure that the machine is connected to your network and powered on. Also, your machine's IP address should have been set.
- Insert the supplied software CD into your CD-ROM drive.
- Double-click the CD-ROM icon that appears on your Macintosh desktop.
- Double-click the **MAC\_Installer** folder.
- Double-click the **Installer OS X** icon.
- Enter the network key and click **OK**.
- The Samsung Installer window opens. Click **Continue**.
- Select **Easy Install** and click **Install**. **Easy Install** is recommended for most users. All components necessary for machine operations will be installed.  
If you select **Custom Install**, you can choose individual components to install.
- When the message which warns that all applications will close on your computer appears, click **Continue**.
- Select **Typical installation for a network print** and click **OK**.  
 The certificate window appears, click **Trust**. (See "Macintosh" on page 84 to use **SetIP** program.)
- After the installation is finished, click **Quit**.

- Open the **Applications** folder > **Utilities** > **Print Setup Utility**.

- For Mac OS X 10.5 ~ 10.6, open the **Applications** folder > **System Preferences** and click **Print & Fax**.

- Click **Add** on the **Printer List**.

- For Mac OS X 10.5 ~ 10.6, press the "+" icon; a display window will pop up.

- For Mac OS X 10.3, select the **IP Printing** tab.

- For Mac OS X 10.4, click **IP Printer**.
- For Mac OS X 10.5 ~ 10.6, click **IP**.

- Select **Socket/HP Jet Direct** in **Printer Type**.

When printing a document containing many pages, printing performance may be enhanced by choosing **Socket** for **Printer Type** option.

- Enter the machine's IP address in the **Printer Address** field.


- Enter the queue name in the **Queue Name** field. If you cannot determine the queue name for your machine server, try using the default queue first.

- For Mac OS X 10.3, if Auto Select does not work properly, select **Samsung** in **Printer Model** and your machine name in **Model Name**.

- For Mac OS X 10.4, if Auto Select does not work properly, select **Samsung** in **Print Using** and your machine name in **Model**.
- For Mac OS X 10.5 ~ 10.6, if Auto Select does not work properly, choose **Select a driver to use...** and your machine name in **Print Using**.

Your machine's IP address appears on the **Printer List**, and is set as the default machine.

- Click **Add**.

 If the printer driver does not work properly, uninstall the driver and reinstall it.

Follow steps below to uninstall the driver for Macintosh.

- Make sure that the machine is connected to your computer and powered on.
- Insert the supplied software CD into your CD-ROM drive.
- Double-click CD-ROM icon that appears on your Macintosh desktop.
- Double-click the **MAC\_Installer** folder.
- Double-click the **Installer OS X** icon.
- Enter the network key and click **OK**.
- The Samsung Installer window opens. Click **Continue**.
- Select **Uninstall** and click **Uninstall**.
- When the message which warns that all applications will close on your computer appears, click **Continue**.
- When the uninstall is done, click **Quit**.

## Linux

- Make sure that the machine is connected to your network and powered on. Also, your machine's IP address should have been set.
- Insert the supplied software CD into your CD-ROM drive.
- Double-click CD-ROM icon that appears on your Linux desktop.
- Double-click the **Linux** folder.
- Double-click the **install.sh** icon.
- The Samsung Installer window opens. Click **Continue**.
- The Add printer wizard window opens. Click **Next**.
- Select Network printer and click **Search** button.
- The Printer's IP address and model name appears on list field.
- Select your machine and click **Next**.

## IPv6 CONFIGURATION



TCP/IPv6 is supported properly only in Windows Vista or higher.



If the IPv6 network seems not working, set all the network setting to the factory defaults and try again. (See "Restoring factory default settings" on page 39.)

To use the IPv6 network environment, follow the next procedure to use the IPv6 address:

1. Connect your machine to the network with a network cable.
2. Turned on the machine.
3. Print a **Network Configuration Report** from the machine's control panel that will check IPv6 addresses.
  - a) Press **Menu** on the control panel.
  - b) Press the left/right arrow until **Network** appear and press **OK**.
  - c) Press the left/right arrow until **Network Info.** appear and press **OK**.
4. Select **Start > Control Panel > Hardware and Sound > Printers > Add Printer**.
5. Click **Add a local printer** on the **Add Printer** windows.
6. Follow the instruction on the window.



If the machine does not work in the network environment, activate IPv6. Refer to the next section followed by.

### Activating IPv6

The machine is provided with IPv6 feature on.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **TCP/IP (IPv6)** appear and press **OK**.
4. Press the left/right arrow until **IPv6 Activate** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Turn the machine off and turn it on again.
7. Reinstall your printer driver.

### Setting IPv6 addresses

Machine supports following IPv6 addresses for network printing and managements.

- **Link-local Address:** Self-configured local IPv6 address. (Address starts with FE80.)
- **Stateless Address:** Automatically configured IPv6 address by a network router.
- **Stateful Address:** IPv6 address configured by a DHCPv6 server.
- **Manual Address:** Manually configured IPv6 address by a user.

#### DHCPv6 address configuration (Stateful)

If you have a DHCPv6 server on your network, you can set one of the following option for default dynamic host configuration:

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **TCP/IP (IPv6)** appear and press **OK**.
4. Press the left/right arrow until **DHCPv6 Config** appear and press **OK**.
5. Press the left/right arrow to access the required value.
  - **Routers:** Use DHCPv6 only when requested by a router.
  - **DHCPv6 Addresses:** Always use DHCPv6 regardless of router request.

- **DHCPv6 Off:** Never use DHCPv6 regardless of router request.

6. Press **OK**.


### Manual address configuration

1. Start a web browser such as Internet Explorer that supports IPv6 addressing as a URL. (See "Connecting SyncThru Web Service" on page 42.)



For IPv4, enter the IPv4 address (http://xxx.xxx.xxx.xxx) in the address field and press the Enter key or click **Go**.

2. When the **SyncThru™ Web Service** window opens, click **Network Settings**.
3. Click **TCP/IP**.

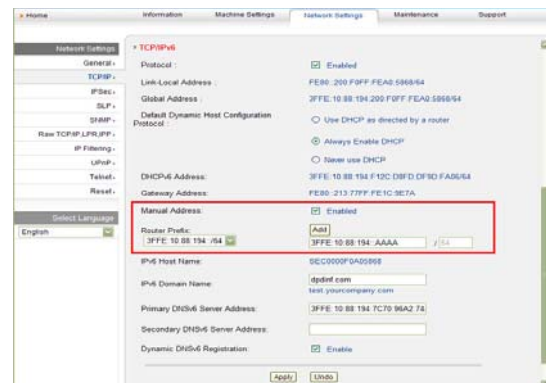

4. Enable the **Manual Address** In the **TCP/IPv6** section.
5. Select the **Router Prefix** and click the **Add** button, then the router prefix will automatically be entered into the address field. Enter the rest of address. (ex:3FFE:10:88:194::AAAA. "A" is the hexadecimal 0 through 9, A through F.)
6. Click the **Apply** button.

### Connecting SyncThru Web Service

1. Start a web browser such as Internet Explorer that supports IPv6 addressing as a URL .
2. Select one of the IPv6 addresses (**Link-local Address, Stateless Address, Stateful Address, Manual Address**) from **Network Configuration Report**.
3. Enter the IPv6 addresses. (ex: http://[FE80::215:99FF:FE66:7701])



Address must be enclosed in '[' ']' brackets.

# basic setup

After installation is complete, you may want to set the machine's default settings. Refer to the next section if you would like to set or change values. This chapter gives you step-by-step instructions for setting up the machine.


This chapter includes:

- Altitude adjustment
- Changing the display language
- Setting the date and time
- Changing the clock mode
- Changing the default mode
- Setting sounds
- Entering characters using the number keypad
- Using the save modes
- Setting the default tray and paper
- Setting job timeout

## ALTITUDE ADJUSTMENT

The print quality is affected by atmospheric pressure, which is determined by the height of the machine above sea level. The following information will guide you on how to set your machine to the best print quality or best quality of print.

Before you set the altitude value, find the altitude where you are using the machine.

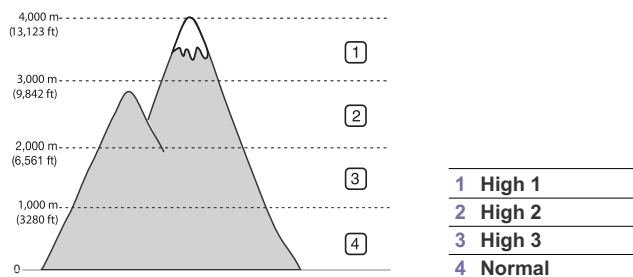

1. Ensure that you have installed the printer driver with the provided Printer Software CD.
2. Double-click the **Smart Panel** icon on the Windows task bar (or Notification Area in Linux). You can also click **Smart Panel** on the status bar in Mac OS X.
3. Click **Printer Setting**.
4. Click **Setting > Altitude Adjustment**. Select the appropriate value from the dropdown list, and then click **Apply**.

- If your machine is connected to a network, SyncThru™ Web Service screen appears automatically. Click **Machine Settings > System Setup > Machine Setup > Altitude Adj.** Select the appropriate altitude value, and then click **Apply**.
- If your machine is connected via a USB cable, set the altitude in **Altitude Adj.** option on the machine's display.

## CHANGING THE DISPLAY LANGUAGE

To change the language that appears on the display, follow the steps below:

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.

4. Press the left/right arrow until **Language** appear and press **OK**.
5. Press the left/right arrow to display the language you want.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.

## SETTING THE DATE AND TIME

When you set the time and date, they are used in delay fax and delay print. They are printed on reports. If, however, they are not correct, you need to change it for the correct time being.

If the machine's power is cut off, you need to reset the correct time and date once the power has been restored.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Date & Time** appear and press **OK**.
5. Enter the correct time and date using left/right arrow or numeric keypad.  
Month = 01 to 12,  
Day = 01 to 31,  
Year = requires four digits,  
Hour = 01 to 12,  
Minute = 00 to 59,  
and you can also select AM or PM.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.

## CHANGING THE CLOCK MODE

You can set your machine to display the current time using either a 12-hour or 24-hour format.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Clock Mode** appear and press **OK**.
5. Press the left/right arrow to select the other mode and press **OK**.
6. Press **Stop/Clear** to return to ready mode.

## CHANGING THE DEFAULT MODE

Your machine is preset to Copy mode. You can switch this default mode between Fax mode and Copy mode.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Default Mode** appear and press **OK**.
5. Press the left/right arrow to select the mode you want.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.

## SETTING SOUNDS

You can control the following sounds:

- **Key sound:** Turns the key sound **On** or **Off**. With this option set to **On**, a tone sounds each time a key is pressed.
- **Alarm Sound:** Turns the alarm sound **On** or **Off**. With this option set to **On**, an alarm tone sounds when an error occurs or fax communication ends.
- **Speaker:** Turns **On** or **Off** the sounds from the telephone line through the speaker, such as a dial tone or a fax tone. With this option set to **Comm.** which means "Common", the speaker is on until the remote machine answers.



You can adjust the volume level using **On Hook Dial**. If your machine is SCX-4623FH, you can adjust the volume level using the handset.

- **Ringer:** Adjusts the ringer volume. For the ringer volume, you can select **Off**, **Low**, **Mid**, and **High**.

### Speaker, ringer, key sound, and alarm sound

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Sound/Volume** appear and press **OK**.
4. Press the left/right arrow until the sound option you want appear and press **OK**.
5. Press the left/right arrow until the desired status or volume for the sound you have selected appears and press **OK**.
6. If necessary, repeat steps 4 through 5 to set other sounds.
7. Press **Stop/Clear** to return to ready mode.

### Speaker volume

To adjust the volume using **On Hook Dial**:

1. Press **Fax** on the control panel.
2. Press **On Hook Dial**. A dial tone sounds from the speaker.
3. Press the left/right arrow until you hear the volume you want.
4. Press **On Hook Dial** to save the change and return to ready mode.

To adjust the volume using the handset (SCX-4623FH only)

1. Pick up the handset. A dial tone sounds from the earpiece.
2. Press the left/right arrow until you hear the volume you want.
3. Press **OK** to save the change and replace the handset.



You can adjust the speaker volume only when the telephone line is connected.

## ENTERING CHARACTERS USING THE NUMBER KEYPAD

As you perform various tasks, you may need to enter names and numbers. For example, when you set up your machine, you enter your name or your company's name, and the fax number. When you store fax numbers or email addresses in memory, you may also enter the corresponding names.

### Entering alphanumeric characters

1. When you are prompted to enter a letter, locate the button labeled with the character you want. Press the button until the correct letter appears on the display.

For example, to enter the letter O, press 6, labeled with MNO.

Each time you press 6, the display shows a different letter, M, N, O, m, n, o and finally 6.

You can enter special characters, such as space, plus sign, and etc. For details, see the below section.

2. To enter additional letters, repeat step 1.

If the next letter is printed on the same button, move the cursor by pressing the left/right arrow button and then press the button labeled with the letter you want. The cursor will move to the right and the next letter will appear on the display.

You can enter a space by pressing 1 twice.

3. When you have finished entering letters, press **OK**.

### Keypad letters and numbers

KEY	ASSIGNED NUMBERS, LETTERS, OR CHARACTERS
1	@ / . ' 1
2	A B C a b c 2
3	D E F d e f 3
4	G H I g h i 4
5	J K L j k l 5
6	M N O m n o 6
7	P Q R S p q r s 7
8	T U V t u v 8
9	W X Y Z w x y z 9
0	& + - , 0
*	*
#	#

### Correcting numbers or names

If you make a mistake while entering a number or name, press the left/right arrow button to delete the last digit or character. Then enter the correct number or character.

## Inserting a pause

With some telephone systems, you must dial an access code (9, for example) and listen for a second dial tone. In such cases, you must insert a pause in the telephone number. You can insert a pause while you are setting up speed dial numbers.

To insert a pause, press **Redial/Pause** at the appropriate place while entering the telephone number. A - appears on the display at the corresponding location.

## USING THE SAVE MODES

### Using toner saving feature

Toner save mode allows your machine to use less toner on each page. Activating this mode extends the life of the toner cartridge beyond what one would experience in the normal mode, but it reduces print quality.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Toner Save** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Press **Stop/Clear** to return to ready mode.



When PC-printing, you can also turn on or off toner save mode in the printer properties.

### Using power saving feature

When you are not using the machine for a while, use this feature to save power.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Power Save** appear and press **OK**.
5. Press the left/right arrow to select the time you want.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.

## SETTING THE DEFAULT TRAY AND PAPER

You can select the tray and paper you would like to keep using for printing job.

### In the control panel

#### Setting the paper size

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Size** appear and press **OK**.
5. Press the left/right arrow to select the paper tray you want and press **OK**.
6. Press the left/right arrow to select the paper size you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

#### Setting the paper type

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.

3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Type** appear and press **OK**.
5. Press the left/right arrow to select the paper tray you want and press **OK**.
6. Press the left/right arrow to select the paper type you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

### Setting the paper source

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Source** appear and press **OK**.
5. Press the left/right arrow until **Copy Tray** or **Fax Tray** appear and press **OK**.
6. Press the left/right arrow to select the paper tray you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

### Setting the wide A4

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Wide A4** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Press **Stop/Clear** to return to ready mode.

## In the computer

### Windows

1. Click the Windows **Start** menu.
2. For Windows 2000, select **Settings > Printers**.
  - For Windows XP/2003 select **Printer and Faxes**.
  - For Windows Vista select **Control Panel > Hardware and Sound > Printers**.
3. Right-click your machine and press **Printing Preferences**.
4. Click **Paper** tab.
5. Select tray and its options, such as paper size and type.
6. Press **OK**.

### Macintosh

Macintosh does not support this function. Macintosh users need to change the default setting manually each time they want to print using other settings.

1. Open a Macintosh application and select the file you want to print.
2. Open the **File** menu and click **Print**.
3. Go to **Paper Feed** pane.
4. Open the **File** menu and click **Print**.
5. Go to **Paper Feed**.
6. Set appropriate tray from which you want to print.
7. Go to **Paper** pane.
8. Set paper type to correspond to the paper loaded in the tray from which you want to print.
9. Click **Print** to print.

## SETTING JOB TIMEOUT

---

When there is no input for a certain period of time, the machine exits the current menu and goes in to the default settings. You can set the amount of time the machine will wait.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Job Timeout** appear and press **OK**.
5. Enter the time using left/right arrow or numeric keypad.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.




# media and tray

This chapter provides information on how to load originals and print media into your machine.

## This chapter includes:

- Preparing originals
- Loading originals
- Selecting print media
- Changing the tray size

 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)

## PREPARING ORIGINALS

- Do not load paper smaller than 142 x 148 mm (5.6 x 5.8 inches) or larger than 216 x 356 mm (8.5 x 14 inches).
- Do not attempt to load the following types of paper, in order to prevent paper jam, low print quality and machine damage.
  - Carbon-paper or carbon-backed paper
  - Coated paper
  - Onion skin or thin paper
  - Wrinkled or creased paper
  - Curled or rolled paper
  - Torn paper
- Remove all staples and paper clips before loading.
- Make sure any glue, ink, or correction fluid on the paper is completely dry before loading.
- Do not load originals that include different sizes or weights of paper.
- Do not load booklets, pamphlets, transparencies, or documents with other unusual characteristics.

## LOADING ORIGINALS


You can use the scanner glass or the automatic document feeder to load an original for copying, scanning, and sending a fax.

### On the scanner glass


Make sure that no originals are in the document feeder. If an original is detected in the document feeder, the machine gives it priority over the original on the scanner glass. To get the best scan quality, especially for colored or gray-scaled images, use the scanner glass.

- Loading paper in the tray
- Printing on special media
- Setting the paper size and type
- Using the output support

1. Lift and open the scanner lid.

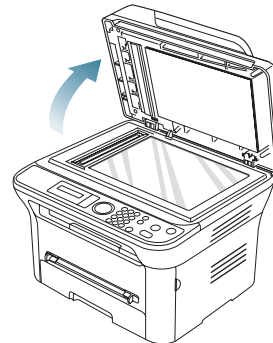

2. Place the original face down on the scanner glass. And align it with the registration guide at the top left corner of the glass.

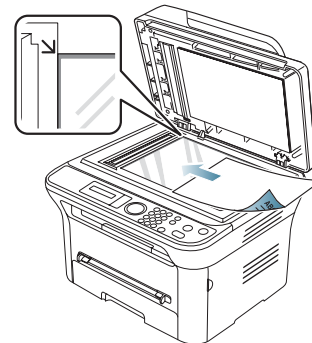

3. Close the scanner lid.



- Leaving the scanner lid open while copying may affect copy quality and toner consumption.
- Dust on the scanner glass may cause black spots on the printout. Always keep it clean. (See "Cleaning the scan unit" on page 88.)
- If you are copying a page from a book or magazine, lift the scanner lid until its hinges are caught by the stopper and then close the lid. If the book or magazine is thicker than 30 mm, start copying with the lid open.




- Be careful not to break the scanner glass. You may get hurt.
- Do not put hands while closing the scanner lid. The scanner lid may fall on your hands and get hurt.

- Do not look the light from inside of the scanner while copying or scanning. It is harmful to eyes.


### In the document feeder

 Using the document feeder, you can load up to 50 sheets of paper (80 g/m<sup>2</sup>, 20 lb bond) for one job.


1. Flex or fan the edge of the paper stack to separate the pages before loading originals.



2. Load the original face up into the document feeder. Make sure that the bottom of the original stack matches the paper size marked on the document input tray.

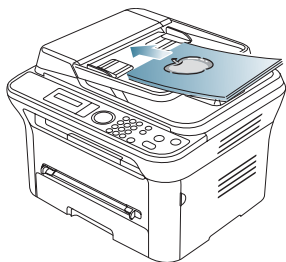

3. Adjust the document width guides to the paper size.

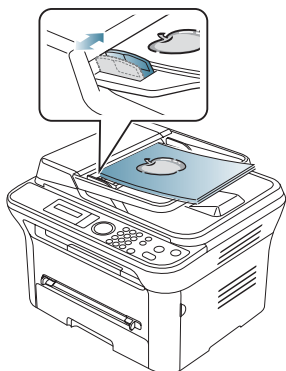

- ✍ Dust on the document feeder glass may cause black lines on the printout. Always keep the glass clean. (See "Cleaning the scan unit" on page 88.)

## SELECTING PRINT MEDIA

You can print on a variety of print media, such as plain paper, envelopes, labels, and transparencies. Always use print media that meet the guidelines for use with your machine.

### Guidelines to select the print media

Print media that does not meet the guidelines outlined in this user's guide may cause the following problems:

- Poor print quality

- Increased paper jams
- Premature wear on the machine.

Properties, such as weight, composition, grain, and moisture content, are important factors that affect the machine's performance and the output quality. When you choose print materials, consider the following:

- The type, size and weight of the print media for your machine are described in print media specifications. (See "Print media specifications" on page 109.)
- Desired outcome: The print media you choose should be appropriate for your project.
- Brightness: Some print media are whiter than others and produce sharper, more vibrant images.
- Surface smoothness: The smoothness of the print media affects how crisp the printing looks on the paper.

- ✍ Some print media may meet all of the guidelines in this section and still not produce satisfactory results. This may be the result of improper handling, unacceptable temperature and humidity levels, or other variables over which cannot be controlled.
- Before purchasing large quantities of print media, ensure that it meets the requirements specified in this user's guide.

- ⚠ Using print media that does not meet these specifications may cause problems, requiring repairs. Such repairs are not covered by the warranty or service agreements.

The amount of paper put into the tray may differ according to media type used. (See "Print media specifications" on page 109.)


### Media sizes supported in each mode

MODE	SIZE	SOURCE
Copy mode	Letter, A4, Legal, Oficio, Folio, Executive, ISO B5, JIS B5, A5, A6	<ul style="list-style-type: none"> <li>• tray 1</li> <li>• manual tray</li> </ul>
Print mode	All sizes supported by the machine.	<ul style="list-style-type: none"> <li>• tray 1</li> <li>• manual tray</li> </ul>
Fax mode	Letter, A4, Legal	<ul style="list-style-type: none"> <li>• tray 1</li> </ul>

## CHANGING THE TRAY SIZE


The tray is preset to Letter or A4 size, depending on your country. To change the size, you need to adjust the paper guides.



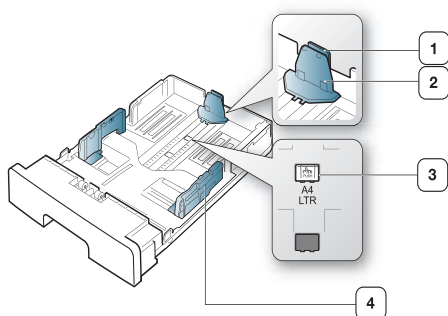

- 1 Support guide
- 2 Paper length guide
- 3 Guide lock
- 4 Paper width guide


1. With one hand press and hold the guide lock, and with the other hand, hold the paper length guide and support guide together. Slide the paper length guide and support guide to locate them in the correct paper size slot.

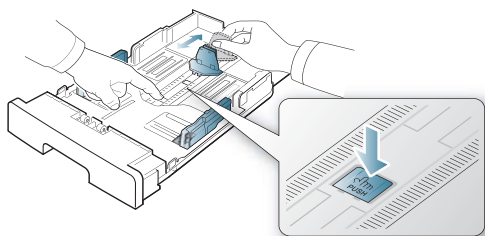


2. Flex or fan the edge of the paper stack to separate the pages before loading papers. Insert the paper into the tray.






3. After inserting paper into the tray, adjust the support guide so that it lightly touches the paper stack.

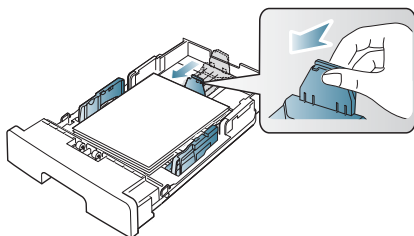

4. Squeeze the paper width guides and slide them to the desired paper size marked at the bottom of the tray.

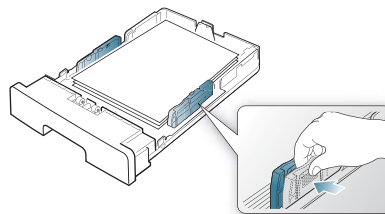

   - Do not push the paper width guide too far causing the media to warp.
- If you do not adjust the paper width guide, it may cause paper jams.




## LOADING PAPER IN THE TRAY

### Tray 1

1. Pull out the paper tray . And adjust the tray size to the media size you are loading. (See "Changing the tray size" on page 48.)
2. Flex or fan the edge of the paper stack to separate the pages before loading paper.



3. And place paper with the side you want to print facing down.

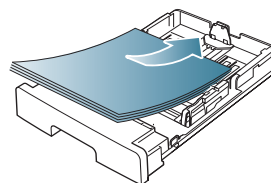

4. Set the paper type and size for the tray 1. (See "Setting the default tray and paper" on page 45.)

- If you experience problems with paper feeding, check whether the paper meets the media specification. Then try placing one sheet at a time in the manual tray. (See "Print media specifications" on page 109.)

### Manual tray


The manual tray can hold special sizes and types of print material, such as postcards, note cards, and envelopes. It is useful for single page printing on letterhead or colored paper.

#### Tips on using the manual tray

- If you select **Manual Feeder** for **Source** from your software

application, you need to press **OK** each time you print a page and load only one type, size and weight of print media at a time in the manual tray.

- To prevent paper jams, do not add paper while printing when there is still paper in the manual tray. This also applies to other types of print media.
  - Print media should be loaded face up with the top edge going into the manual tray first and be placed in the center of the tray.
  - Always load the specified print media only to avoid paper jams and print quality problems. (See "Print media specifications" on page 109.)
  - Flatten any curl on postcards, envelopes, and labels before loading them into the manual tray.
1. Load the paper in the manual tray.

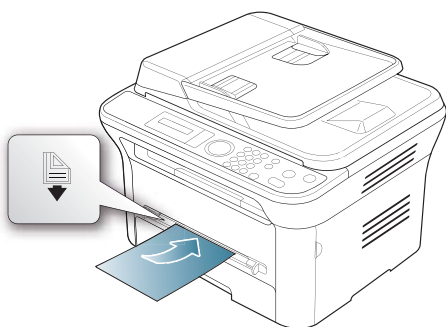

- Do not force the paper beyond the surface with the mark when loading.
- When printing the special media, you must follow the loading guideline. (See "Printing on special media" on page 50.)
- When papers overlap when printing using manual tray, open tray 1 and remove overlapping papers then try printing again.
- When paper does not feed well while printing, push the paper in manually until it starts feeding automatically.

2. Squeeze the manual tray paper width guides and adjust them to the width of the paper. Do not force them too much, or the paper will bent resulting in a paper jam or skew.
3. To print in application, open an application and start the print menu.
4. Open **Printing Preferences**. (See "Opening printing preferences" on page 55.)
5. Press the **Paper** tab in **Printing Preferences**, and select an appropriate paper type.

- For example, if you want to use a label, set the paper type to **Label**.

6. Select **Manual Feeder** in paper source, then press **OK**.
7. Start printing in application.

- If you are printing multiple pages, load the next sheet after the first page prints out, and press the **OK**. Repeat this step for every page to be printed.

When using special media, we recommend you feed one paper at a time. Check the maximum input number of media for each tray. (See "Print media specifications" on page 109.)

TYPES	TRAY 1	MANUAL TRAY
Plain	O	O
Thick	O	O
Thin	O	O
Bond	X	O
Color	X	O
CardStock	X	O
Labels	X	O
Transparency	X	O
Envelope	X	O
Preprinted	X	O
Cotton	X	O
Recycled	O	O
Archive	O	O

The media types are shown in the **Printing Preferences**. This paper type option allows you to set the type of paper to be loaded in the tray. This setting appears in the list, so that you can select it. This will let you get the best quality printout. If not, the desired print quality may not be achieved.

- **Plain:** Normal plain paper. Select this type if your machine is monochrome and printing on the 60 to 90 g/m<sup>2</sup> (16 to 24 lb).
- **Thick:** 90 to 105 g/m<sup>2</sup> (24 to 28 lb) thick paper.
- **Thin:** 60 to 70 g/m<sup>2</sup> (16 to 19 lb) thin paper.
- **Bond:** 105 to 120 g/m<sup>2</sup> (28 to 32 lb) bond.
- **Color:** 75 to 90 g/m<sup>2</sup> (20 to 24 lb) color-backgrounded paper.
- **CardStock:** 90 to 163 g/m<sup>2</sup> (24 to 43 lb) cardstock.
- **Labels:** 120 to 150 g/m<sup>2</sup> (32 to 40 lb) labels.
- **Transparency:** 138 to 146 g/m<sup>2</sup> (37 to 39 lb) transparency paper.
- **Envelope:** 75 to 90 g/m<sup>2</sup> (20 to 24 lb) envelope.
- **Preprinted:** 75 to 90 g/m<sup>2</sup> (20 to 24 lb) preprinted/letterhead paper.
- **Cotton:** 75 to 90 g/m<sup>2</sup> (20 to 24 lb) cotton paper.
- **Recycled:** 75 to 90 g/m<sup>2</sup> (20 to 24 lb) recycled paper.
- **Archive:** 70 to 90 g/m<sup>2</sup> (19 to 24 lb) If you need to keep the print-out for a long period time, such as archives, select this option.


## PRINTING ON SPECIAL MEDIA

The table below shows the available special media for each tray.


## Envelope

Successful printing on envelopes depends upon the quality of the envelopes.

To print an envelope, place it flap side down with the stamp area on the bottom right side.

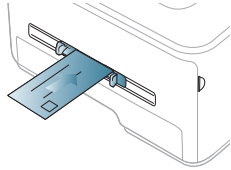

If envelopes are printed out with wrinkles, crease or black bold lines, open the rear cover and pull down the pressure lever and try printing again. Keep the rear cover opened during printing.

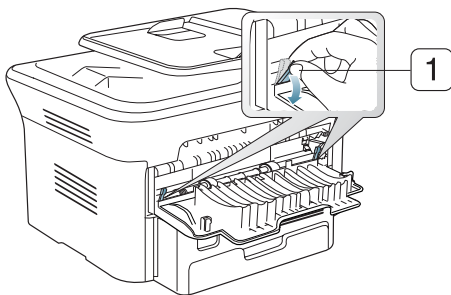

1 Pressure lever

- When selecting envelopes, consider the following factors:
  - Weight:** The weight of the envelope paper should not exceed 90 g/m<sup>2</sup> otherwise, jam may occur.
  - Construction:** Prior to printing, envelopes should lie flat with less than 6 mm curl, and should not contain air.
  - Condition:** Envelopes should not be wrinkled, nicked, nor damaged.
  - Temperature:** Use envelopes that are compatible with the heat and pressure of the machine during operation.
- Use only well-constructed envelopes with sharp and well-creased folds.
- Do not use stamped envelopes.
- Do not use envelopes with clasps, snaps, windows, coated lining, self-adhesive seals, or other synthetic materials.
- Do not use damaged or poorly made envelopes.
- Be sure the seam at both ends of the envelope extends all the way to the corner of the envelope.



1 Acceptable

2 Unacceptable


- Envelopes with a peel-off adhesive strip or with more than one flap that folds over to seal must use adhesives compatible with the machine's fusing temperature for 0.1 second. To view the fusing temperature, check your machine's specification. (See "General specifications" on

page 105.) The extra flaps and strips might cause wrinkling, creasing, or jams, and may even damage the fuser.

- For the best print quality, position margins no closer than 15 mm from the edges of the envelope.
- Avoid printing over the area where the envelope's seams meet.

## Transparency


To avoid damaging the machine, use only transparencies designed for use in laser printers.

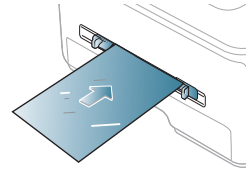

- Transparencies used in the machine must be able to withstand machine's fusing temperature.
- Place them on a flat surface after removing them from the machine.
- Do not leave unused transparencies in the paper tray for long periods of time. Dust and dirt may accumulate on them, resulting in spotty printing.
- To avoid smudging caused by fingerprints, handle them carefully.
- To avoid fading, do not expose printed transparencies to prolonged sunlight.
- Ensure that transparencies are not wrinkled, curled, or have any torn edges.
- Do not use transparencies that separates from the backing sheet.
- To prevent transparencies from sticking to each other, do not let the printed sheets stack up as they are begin printed out.
- Recommended media: Transparency for a color laser printer by Xerox, such as 3R 91331 (A4), 3R 2780 (Letter).

## Labels

To avoid damaging the machine, use only labels designed for use in laser machines.

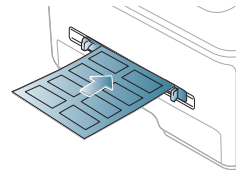


- When selecting labels, consider the following factors:
  - Adhesives:** The adhesive material should be stable at your machine's fusing temperature. Check your machine's specification to view the fusing temperature. (See "General specifications" on page 105.)
  - Arrangement:** Only use labels with no exposed backing between them. Labels can peel off sheets that have spaces between the labels, causing serious jams.
  - Curl:** Prior to printing, labels must lie flat with no more than 13 mm of curl in any direction.
  - Condition:** Do not use labels with wrinkles, bubbles, or other indications of separation.

- Make sure that there is no exposed adhesive material between labels. Exposed areas can cause labels to peel off during printing, which can cause paper jams. Exposed adhesive can also cause damage to machine components.
- Do not run a sheet of labels through the machine more than once. The adhesive backing is designed for only a single pass through the machine.
- Do not use labels that are separating from the backing sheet or are wrinkled, bubbled, or otherwise damaged.

## Card stock/ Custom-sized paper

Postcards, cards and other custom-sized materials can be printed with this machine.

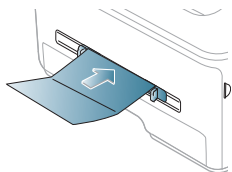

- Do not print on media smaller than 76 mm (3.00 inches) wide or 127 mm (5.00 inches) long.
- In the software application, set margins at least 6.4 mm (0.25 inches) away from the edges of the material.

## Letterhead/ Preprinted paper

	SINGLE-SIDED	DOUBLE-SIDED
Tray1	<b>Face down</b> 	<b>Face up</b> 
Manual tray	<b>Face up</b> 	<b>Face down</b> 

- Letterhead/ Preprinted paper must be printed with heat-resistant ink that will not melt, vaporize, or release hazardous emissions when subjected to the machine's fusing temperature for 0.1 second. Check your machine's specification to view the fusing temperature. (See "General specifications" on page 105.)
- Letterhead/ Preprinted paper ink must be non-flammable and should not adversely affect machine rollers.
- Forms and letterhead should be sealed in a moisture-proof wrapping to prevent changes during storage.
- Before you load letterhead/preprinted paper, verify that the ink on the paper is dry. During the fusing process, wet ink can come off preprinted paper, reducing print quality.

## Photo

- Make sure not to use the inkjet photo paper with this machine. It could cause damage to the machine.

## Glossy

- Load one paper to the manual tray at a time, glossy side facing up.
- Recommended media: Glossy paper (Letter) for this machine by **HP Brochure Paper** (Product: Q6611A) only.
- Recommended media: Glossy paper (A4) for this machine by **HP Superior Paper 160 glossy** (Product: Q6616A).

## SETTING THE PAPER SIZE AND TYPE

After loading paper in the paper tray, set the paper size and type using the control panel. These settings will apply to copy and fax modes. For computer printing, select the paper size and type in the application program you use on your computer. (See "Opening printing preferences" on page 55.)

- The settings made from the machine driver override the settings on the control panel.

### Setting the paper size

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Size** appear and press **OK**.
5. Press the left/right arrow to select the paper tray you want and press **OK**.
6. Press the left/right arrow to select the paper size you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

- If you want to use special-sized paper-such as a billing paper, select **Edit...** in the **Paper** tab in the **Printing Preferences**. (See "Opening printing preferences" on page 55.)

### Setting the paper type

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Type** appear and press **OK**.
5. Press the left/right arrow to select the paper tray you want and press **OK**.
6. Press the left/right arrow to select the paper type you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

### Setting the paper source

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Paper Setup** appear and press **OK**.
4. Press the left/right arrow until **Paper Source** appear and press **OK**.
5. Press the left/right arrow until **Copy Tray** or **Fax Tray** appear and press **OK**.
6. Press the left/right arrow to select the paper tray you want.
7. Press **OK** to save the selection.


8. Press **Stop/Clear** to return to ready mode.

## USING THE OUTPUT SUPPORT



The surface of the output tray may become hot if you print a large number of pages at once. Make sure that you do not touch the surface, and do not allow children near it.

The printed pages stack on the output support, and the output support will help the printed pages to align. The printer sends output to the output tray by default. To use the output tray, make sure that the rear cover is closed.

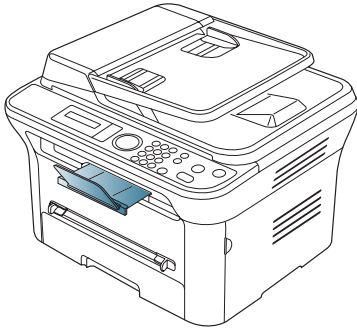

### Stacking papers firmly

If you use a machine in a humid area, or you are using the damp print media caused by a high humidity, the print-outs on the output tray may be curled and may not be stacked properly. In this case, you can set the machine to use the **Paper Stacking** function to let print-outs stacked firmly. But, using this function will make the print speed slow.


1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Maintenance** appear and press **OK**.
4. Press the left/right arrow until **Paper Stacking** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Press **Stop/Clear** to return to ready mode.

# printing

This chapter explains common printing tasks.

**This chapter includes:**

- Printer driver features
- Basic printing
- Opening printing preferences
- Using help
- Using special print features


 The procedures in this chapter are mainly based on Windows XP.

## PRINTER DRIVER FEATURES

Your printer drivers support the following standard features:

- Paper orientation, size, source, and media type selection
- Number of copies

In addition, you can use various special printing features. The following table shows a general overview of features supported by your printer drivers:


 Some models or operating system may not support the certain feature(s) in the following table.

### Printer driver




FEATURE	WINDOWS
Machine quality option	<input type="radio"/>
Booklet printing	<input type="radio"/>
Poster printing	<input type="radio"/>
Multiple pages per sheet	<input type="radio"/>
Fit to page printing	<input type="radio"/>
Reduce and enlarge printing	<input type="radio"/>
Different source for first page	<input type="radio"/>
Watermark	<input type="radio"/>
Overlay	<input type="radio"/>
Double-sided printing (manual)	<input type="radio"/>

## BASIC PRINTING


Your machine allows you to print from various Windows, Macintosh, or Linux applications. The exact steps for printing a document may vary depending on the application you use.

 • Your **Printing Preferences** window that appears in this user's guide may differ depending on the machine in use. However, the composition of the **Printing Preferences** window is similar. Check the operating system(s) that are compatible with your machine. Refer to the OS compatibility section of Printer Specifications . (See "Printer specifications" on page 106.)

- Changing the default print settings
- Setting your machine as a default machine
- Printing to a file (PRN)
- Macintosh printing
- Linux printing

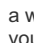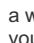
- When you select an option in **Printing Preferences**, you may see a warning mark, , or . An exclamation mark () means you can select that certain option but it is not recommended, and () mark means you cannot select that option due to the machine's setting or environment.

The following procedure describes the general steps required for printing from various Windows applications.


-  Macintosh basic printing. (See "Macintosh printing" on page 59.)
- Linux basic printing. (See "Linux printing" on page 60.)

The following **Printing Preferences** window is for Notepad in Windows XP. Your **Printing Preferences** window may differ, depending on your operating system or the application you are using.


1. Open the document you want to print.
2. Select **Print** from the **File** menu. The **Print** window appears.
3. Select your machine from the **Select Printer** list.

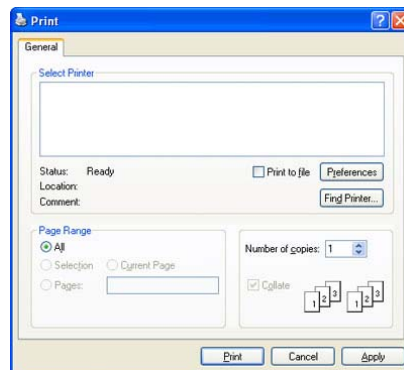

The basic print settings including the number of copies and print range are selected within the **Print** window.

 To take advantage of the printer features provided by your printer driver, click **Properties** or **Preferences** in the application's **Print** window to change the print setting. (See "Opening printing preferences" on page 55. )

4. To start the print job, click **OK** or **Print** in the **Print** window.

 If you are using Windows Internet Explorer, the **AnyWeb Print** too will save your time for screen-captured images or printing the image. Click **Start > All programs > Samsung Printers > your machine name > AnyWeb Print** to link the website where the tool is available for the download.

## Canceling a print job

If the print job is waiting in a print queue or print spooler, cancel the job as follows:

1. Click the Windows **Start** menu.
  - For Windows 2000, select **Settings > Printers**.
  - For Windows XP/2003, select **Printers and Faxes**.
  - For Windows Vista, select **Control Panel > Hardware and Sound > Printers**.

2. Double-click your machine.

3. From the **Document** menu, select **Cancel**.




You can also access this window by simply double-clicking the machine icon ( ) in the Windows task bar.

You can also cancel the current job by pressing **Stop** on the control panel.

## OPENING PRINTING PREFERENCES

You can preview the settings you selected on the upper right of the **Printing Preferences**.

1. Open the document you want to print.
2. Select **Print** from the file menu. The **Print** window appears.
3. Select your machine from the **Select Printer**.
4. Click **Properties** or **Preferences**.

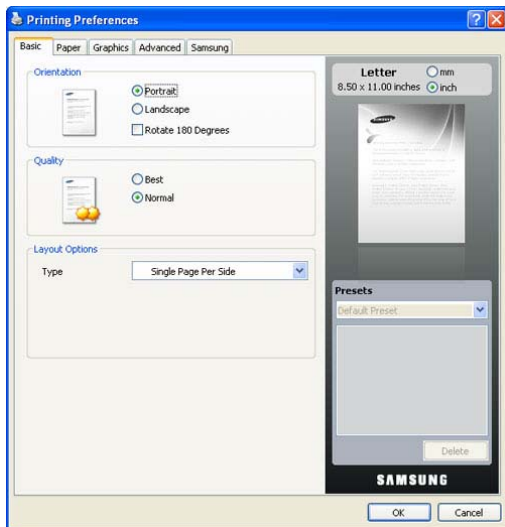


## Using a favorite setting

The **Presets** option, which is visible on each preferences tab except for **Samsung** tab, allows you to save the current preferences settings for future use.

To save a **Presets** item:

1. Change the settings as needed on each tab.
2. Enter a name for the item in the **Presets** input box.

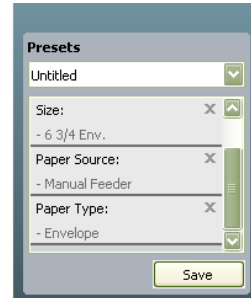

3. Click **Save**. When you save **Presets**, all current driver settings are saved.


To use a saved setting, select it from the **Presets** drop down list. The machine is now set to print according to the setting you selected.

To delete a saved setting, select it from the **Presets** drop down list and click **Delete**.

You can also restore the printer driver's default settings by selecting **Default Preset** from the **Presets** drop down list.

## USING HELP

 Click the question mark from the upper-right corner of the window and click on any option you want to know about. Then a pop up window appears with information about that option's feature which is provided from the driver.



If you want to search information via a keyword, click the **Samsung** tab in the **Printing Preferences** window, and enter a keyword in the input line of the **Help** option. To get information about supplies, driver update or registration and so on, click appropriate buttons.

## USING SPECIAL PRINT FEATURES

Special print features include:

- "Printing multiple pages on one sheet of paper" on page 55.
- "Printing posters" on page 56.
- "Printing booklets (Manual)" on page 56.
- "Printing on both sides of paper (Manual)" on page 56.
- "Change percentage of your document" on page 57.
- "Fitting your document to a selected paper size" on page 57.
- "Using watermarks" on page 57.
- "Using overlay" on page 57.
- "Advanced Options" on page 58.

### Printing multiple pages on one sheet of paper


You can select the number of pages to print on a single sheet of paper. To print more than one page per sheet, the pages will be reduced in size and arranged in the order you specify. You can print up to 16 pages on one sheet.




1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Basic** tab, select **Multiple Pages per Side** in the **Type** drop-down list.
3. Select the number of pages you want to print per sheet (2, 4, 6, 9, or 16) in the **Pages per Side** drop-down list.
4. Select the page order from the **Page Order** drop-down list, if necessary.
5. Check **Print Page Border** to print a border around each page on the sheet.
6. Click the **Paper** tab, select the **Size**, **Source**, and **Type**.
7. Click **OK** or **Print** until you exit the **Print** window.

## Printing posters

This feature allows you to print a single-page document onto 4, 9, or 16 sheets of paper, for the purpose of pasting the sheets together to form one poster-size document.

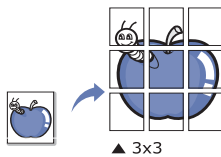


1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Basic** tab, select **Poster Printing** in the **Type** drop-down list.
3. Select the page layout you want.  
Specification of the page layout:
  - **Poster 2x2**: Document will be enlarged and be divided into 4 pages.
  - **Poster 3x3**: Document will be enlarged and be divided into 9 pages.
  - **Poster 4x4**: Document will be enlarged and be divided into 16 pages.
4. Select the **Poster Overlap** value. Specify **Poster Overlap** in millimeters or inches by selecting the radio button on the upper right of **Basic** tab to make it easier to paste the sheets together.

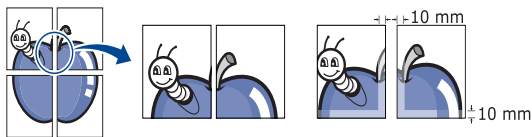

5. Click the **Paper** tab, select the **Size**, **Source**, and **Type**.
6. Click **OK** or **Print** until you exit the **Print** window.
7. You can complete the poster by pasting the sheets together.

## Printing booklets (Manual)

This feature prints your document on both sides of a paper and arranges the pages so that the paper can be folded in half after printing to produce a booklet.

-  If you want to make a booklet, you need to print on Letter, Legal, A4,



Us Folio, or Oficio sized print media.



1. To change the print settings from your software application, access the **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Basic** tab, select **Booklet Printing** from the **Type** drop-down list.
3. Click the **Paper** tab, select the **Size**, **Source**, and **Type**.



The **Booklet Printing** option is not available for all paper sizes. In order to find out the available paper size for this feature, select the available paper size in the **Size** option on the **Paper** tab.

If you select an unavailable paper size, this option can be automatically canceled. Select only available paper. (paper without  or  mark).

4. Click **OK** or **Print** until you exit the **Print** window.
5. After printing, fold and staple the pages.

## Printing on both sides of paper (Manual)

You can print on both sides of a paper; duplex. Before printing, decide how you want your document oriented. You can use this feature with Letter, Legal, A4, US Folio, or Oficio sized paper. (See "Print media specifications" on page 109.)



We recommend not to print on both sides of the special media, such as labels, envelopes, or thick paper to print on both sides of paper. It may cause a paper jam or damage the machine.

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Advance** tab.
3. From the **Double-Sided Printing (Manual)** section, select the binding option you want.
  - **None**
  - **Long Edge**: This option is the conventional layout used in bookbinding.



- **Short Edge**: This option is the conventional layout used in calendars.



4. Click the **Paper** tab, select the **Size**, **Source**, and **Type**.
5. Click **OK** or **Print** until you exit the **Print** window.





If your machine does not have a duplex unit, you should complete the printing job manually. The machine prints every other page of the document first. After that, a message appears on your computer. Follow the on-screen instructions to complete the printing job.

## Change percentage of your document


You can change the size of a document to appear larger or smaller on the printed page by typing in a percentage you want.



1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Paper** tab.
3. Enter the scaling rate in the **Percentage** input box.  
You can also click the left/right arrows to select the scaling rate.
4. Select the **Size**, **Source**, and **Type** in **Paper Options**.
5. Click **OK** or **Print** until you exit the **Print** window.

## Fitting your document to a selected paper size

This printer feature allows you to scale your print job to any selected paper size regardless of the document size. This can be useful when you want to check fine details on a small document.

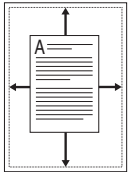

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Paper** tab.
3. Select the paper size you want from the **Fit to page**.
4. Select the **Size**, **Source**, and **Type** in **Paper Options**.
5. Click **OK** or **Print** until you exit the **Print** window.

## Using watermarks

The watermark option allows you to print text over an existing document. For example, you use it when you want to have large gray letters reading "DRAFT" or "CONFIDENTIAL" printed diagonally across the first page or all pages of a document.



There are several predefined watermarks that come with the machine. They can be modified, or you can add new ones to the list.

## Using an existing watermark

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Advanced** tab, and select the desired watermark from the **Watermark** drop-down list. You will see the selected watermark in the preview image.
3. Click **OK** or **Print** until you exit the print window.

## Creating a watermark

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. From the **Advanced** tab, select **Edit** from the **Watermark** drop-down list. The **Edit Watermarks** window appears.
3. Enter a text message in the **Watermark Message** box. You can enter up to 256 characters. The message displays in the preview window.  
When the **First Page Only** box is checked, the watermark prints on the first page only.
4. Select watermark options.  
You can select the font name, style, size, and shade from the **Font Attributes** section, as well as set the angle of the watermark from the **Message Angle** section.
5. Click **Add** to add a new watermark to the **Current Watermarks** list.
6. When you have finished editing, click **OK** or **Print** until you exit the **Print** window.

To stop printing the watermark, select **None** from the **Watermark** drop-down list.

## Editing a watermark

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Advanced** tab, select **Edit** from the **Watermark** drop-down list. The **Edit Watermarks** window appears.
3. Select the watermark you want to edit from the **Current Watermarks** list and change the watermark message and options.
4. Click **Update** to save the changes.
5. Click **OK** or **Print** until you exit the **Print** window.


## Deleting a watermark

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Advanced** tab, select **Edit** from the **Watermark** drop-down list. The **Edit Watermarks** window appears.
3. Select the watermark you want to delete from the **Current Watermarks** list and click **Delete**.
4. Click **OK** or **Print** until you exit the **Print** window.

## Using overlay

An overlay is text and/or images stored in the computer hard disk drive (HDD) as a special file format that can be printed on any document. Overlays are often used to take the place of letterhead paper. Rather than using preprinted letterhead, you can create an overlay containing exactly the same information that is currently on your letterhead. To print a letter


with your company's letterhead, you do not need to load preprinted letterhead paper in the machine just print the letterhead overlay on your document.

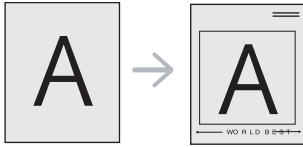

### Creating a new page overlay

To use a page overlay, you must create a new page overlay containing your logo or image.


1. Create or open a document containing text or an image for use in a new page overlay. Position the items exactly as you wish them to appear when printed as an overlay.
2. To save the document as an overlay, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
3. Click the **Advanced** tab, and select **Edit** from the **Text** drop-down list. **Edit Overlay** window appears.
4. In the **Edit Overlay** window, click **Create**.
5. In the **Save As** window, type a name of up to eight characters in the **File name** box. Select the destination path, if necessary. (The default is C:\Formover.)
6. Click **Save**. The name appears on the **Overlay List**.
7. Click **OK** or **Print** until you exit the **Print** window.
8. The file is not printed. Instead, it is stored on your computer hard disk drive.

 The overlay document size must be the same as the document you print with the overlay. Do not create an overlay with a watermark.

### Using a page overlay

After an overlay has been created, it is ready to be printed with your document. To print an overlay with a document:

1. Create or open the document you want to print.
2. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
3. Click the **Advanced** tab.
4. Select the desired overlay from the **Text** drop-down list.
5. If the overlay file you want does not appear in the **Text** drop-down list, select **Edit** from the list and click **Load**. Select the overlay file you want to use.  
If you have stored the overlay file you want to use in an external source, you can also load the file when you access the **Open** window.  
After you select the file, click **Open**. The file appears in the **Overlay List** box and is available for printing. Select the overlay from the **Overlay List** box.
6. If necessary, check **Confirm Page Overlay When Printing** box. If this box is checked, a message window appears each time you submit a document for printing, asking you to confirm your wish to print an overlay on your document.  
If this box is not checked and an overlay has been selected, the overlay automatically prints with your document.
7. Click **OK** or **Print** until you exit the **Print** window.  
The selected overlay prints on your document.

 The resolution of the overlay document must be the same as that of the document you will print with the overlay.


### Deleting a page overlay


You can delete page overlays that you no longer use.

1. In the **Printing Preferences** window, click the **Advanced** tab.
2. Select **Edit** in the **Overlay** drop down list.
3. Select the overlay you want to delete from the **Overlay List** box.
4. Click **Delete**.
5. When a confirming message window appears, click **Yes**.
6. Click **OK** or **Print** until you exit the **Print** window.

### Advanced Options


Use the following Graphics options to adjust the print quality for your specific printing needs.

 If the option is grayed out or not shown, that option is not applicable with the printer language you are using.

1. To change the print settings from your software application, access **Printing Preferences**. (See "Opening printing preferences" on page 55.)
2. Click the **Graphics** tab.  
 Refer to the online help for each option's information provided from the **Printing Preferences**.
  - **Font/Text:** Select **Darken Text** to print texts darker than on a normal document. Use **All Text Black** to prints solid black, regardless of the color it appears on the screen.
  - **Toner Save Mode :** Selecting this option extends the life of your toner cartridge and reduces your cost per page without a significant reduction in print quality.
    - **On:** Select this option to allow the printer to use less toner on each page.
    - **Off:** If you do not need to save toner when printing a document, select this option.
3. Click **OK** or **Print** until you exit the **Print** window.

## CHANGING THE DEFAULT PRINT SETTINGS

1. Click the Windows **Start** menu.
  - For Windows 2000, select **Settings > Printers**.
  - For Windows XP/2003, select **Printers and Faxes**.
  - For Windows 2008/Vista, select **Control Panel > Hardware and Sound > Printers**.
2. Select your machine.
3. Right-click on the machine driver icon and select **Printing Preferences**.
4. Change the settings on each tab.
5. Click **OK**.

 Most Windows applications will override settings you specify in the printer driver. Change all print settings available in the software application first, and change any remaining settings using the printer driver.

## SETTING YOUR MACHINE AS A DEFAULT MACHINE


1. Click the Windows **Start** menu.
  - For Windows 2000, select **Settings > Printers**.
  - For Windows XP/2003, select **Printers and Faxes**.
  - For Windows 2008/Vista, select **Control Panel > Hardware and Sound > Printers**.
2. Select your machine.
3. Right-click your machine and select **Set as Default Printer**.

## PRINTING TO A FILE (PRN)


You will sometimes need to save the print data as a file.

To create a file:

1. Check the **Print to file** box at the **Print** window.

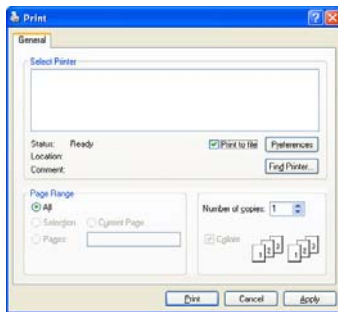

2. Click **Print**.
3. Type in the destination path and the file name, and then click **OK**. For example **c:\Temp\file name**.

 If you type in only the file name, the file is automatically saved in **My Documents**.

## MACINTOSH PRINTING

This section explains how to print using Macintosh. You need to set the print environment before printing.


- USB connected (See "Macintosh" on page 34.)
- Network connected (See "Macintosh" on page 41.)

### Printing a document

When you print with a Macintosh, you need to check the printer driver setting in each application you use. Follow the steps below to print from a Macintosh:

1. Open the document you want to print.
2. Open the **File** menu and click **Page Setup**.

3. Choose your paper size, orientation, scaling, other options, and make sure that your machine is selected. Click **OK**.

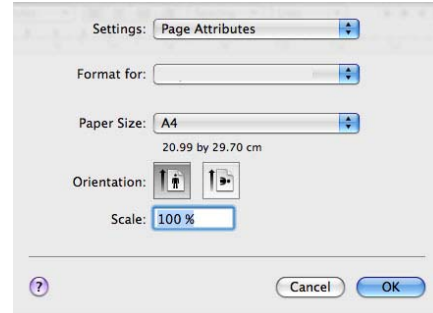


4. Open the **File** menu and click **Print**.
5. Choose the number of copies you want and indicate which pages you want to print.
6. Click **Print**.

### Changing printer settings


You can use advanced printing features provided by your machine.

Open an application and select **Print** from the **File** menu. The machine name, which appears in the printer properties window may differ depending on the machine in use. Except for the name, the composition of the printer properties window is similar to the following.

 The setting options may differ depending on printers and Macintosh OS version.

### Layout

The **Layout** tab provides options to adjust how the document appears on the printed page. You can print multiple pages on one sheet of paper. Select **Layout** from the drop-down list under **Orientation** to access the following features.

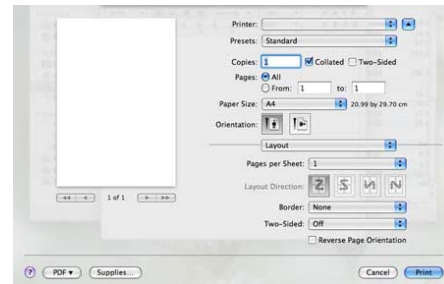

- **Pages per Sheet:** This option determines how many pages to be printed on one page. (See "Printing multiple pages on one sheet of paper" on page 60.)
- **Layout Direction:** This option allows you to select the printing direction on a page similar to the examples on UI.
- **Border:** This option allows you to print a border around each page on the sheet.
- **Reverse Page Orientation:** This option allows you to rotate paper 180 degrees.

## Graphics


The **Graphics** tab provides options for selecting **Resolution**. Select **Graphics** from the drop-down list under **Orientation** to access the graphic features.



- **Resolution (Quality):** This option allows you to select the printing resolution. The higher the setting, the sharper the clarity of printed characters and graphics. The higher setting also may increase the time it takes to print a document.
- **Darkness:** This option allows you to enhance printouts. The available options are **Normal**, **Light**, and **Dark**.


## Paper

Set **Paper Type** to correspond to the paper loaded in the tray from which you want to print. This will let you get the best quality printout. If you load a different type of print material, select the corresponding paper type.

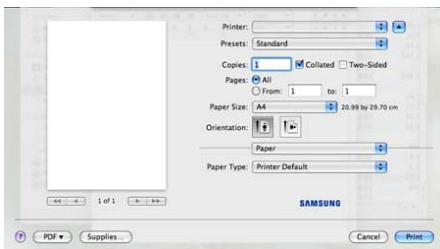

## Printer Settings

**Printer Settings** tab provides **Toner Save Mode**, **Reprint When Jammed**, and **Power Save** options. Select **Printer Settings** from the drop-down list under **Orientation** to access the following features:

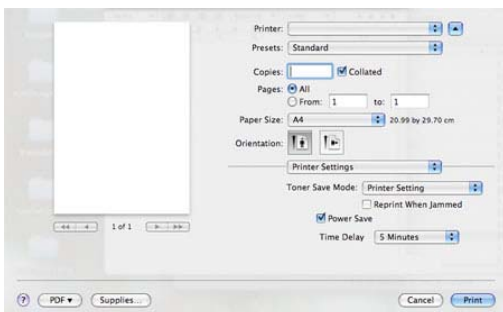

- **Toner Save Mode :** Selecting this option extends the life of your toner cartridge and reduces your cost per page without a significant


reduction in print quality.

- **Printer Setting:** If you select this option, this feature is determined by the setting you've made on the control panel of the printer.
- **On:** Select this option to allow the printer to use less toner on each page.
- **Off:** If you do not need to save toner when printing a document, select this option.
- **Reprint When Jammed:** When this option is checked, the machine retains the image of a printed page until the machine signals that the page has successfully exited the machine. If a paper jam occurs, the printer will reprint the last page sent from the computer after you have cleared the jam.
- **Power Save:** When this option is checked, the machine turns to the power save mode after the selected time.

## Printing multiple pages on one sheet of paper

You can print more than one page on a single sheet of paper. This feature provides a cost-effective way to print draft pages.

1. Open an application, and select **Print** from the **File** menu.
2. Select **Layout** from the drop-down list under **Orientation**. In the **Pages per Sheet** drop-down list, select the number of pages you want to print on one sheet of paper.

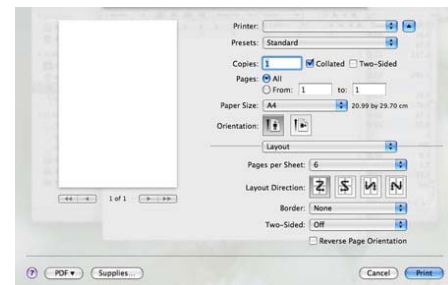

3. Select the other options you want to use.
4. Click **Print**, then the machine prints the selected number of pages you want to print on one sheet of paper.


## LINUX PRINTING

### Printing from applications


There are a lot of Linux applications that allow you to print using Common UNIX Printing System (CUPS). You can print on your machine from any such application.

1. Open an application, and select **Print** from the **File** menu.
2. Select **Print** directly using **lpr**.

3. In the LPR GUI window, select the model name of your machine from the printer list and click **Properties**.

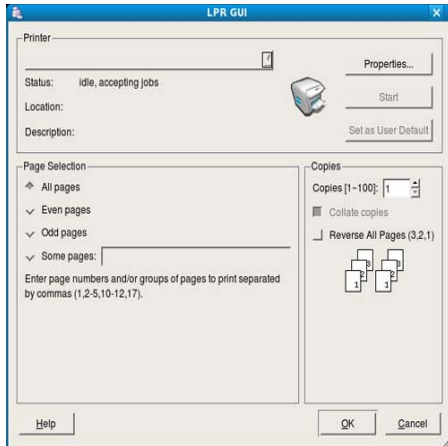

4. Change the print job properties using the following four tabs displayed at the top of the window.

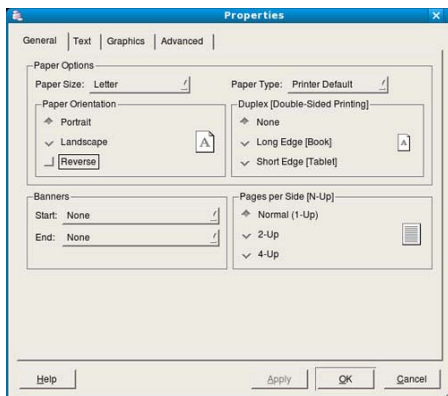

- **General:** This option allows you to change the paper size, the paper type, and the orientation of the documents. It enables the duplex feature, adds start and end banners, and changes the number of pages per sheet.
- **Text:** This option allows you to specify the page margins and set the text options, such as spacing or columns.
- **Graphics:** This option allows you to set image options that are used when printing image files, such as color options, image size, or image position.
- **Advanced:** This option allows you to set the print resolution, paper source, and destination.



If an option is grayed out, it means that the grayed out option is not supported.

5. Click **Apply** to apply the changes and close the **Properties** window.
6. Click **OK** in the **LPR GUI** window to start printing.
7. The Printing window appears, allowing you to monitor the status of your print job.  
To abort the current job, click **Cancel**.

## Printing files

You can print many different types of files on your machine using the standard CUPS way, directly from the command line interface. The CUPS lpr utility allows you to do that. But the drivers package replaces the standard lpr tool by a much more user-friendly LPR GUI program.


To print any document file:

1. Type `lpr <file_name>` from the Linux shell command line and press Enter. The **LPR GUI** window appears.  
When you type only `lpr` and press **Enter**, the **Select file(s) to print** window appears first. Just select any files you want to print and click **Open**.
2. In the **LPR GUI** window, select your machine from the list, and change the print job properties.
3. Click **OK** to start printing.

## Configuring Printer Properties

Using the **Printer Properties** window provided by the **Printers configuration**, you can change the various properties for your machine as a printer.

1. Open the **Unified Driver Configurator**.  
If necessary, switch to **Printers configuration**.
2. Select your machine on the available printers list and click **Properties**.
3. The **Printer Properties** window opens.

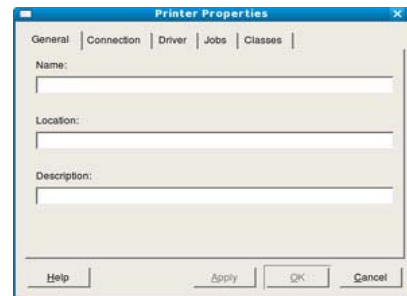

The following five tabs display at the top of the window:

- **General:** This option allows you to change the printer location and name. The name entered in this tab displays on the printer list in **Printers configuration**.
- **Connection:** This option allows you to view or select another port. If you change the machine port from USB to parallel or vice versa while in use, you must re-configure the machine port in this tab.
- **Driver:** This option allows you to view or select another machine driver. By clicking **Options**, you can set the default device options.
- **Jobs:** This option shows the list of print jobs. Click **Cancel job** to cancel the selected job and select the **Show completed jobs** check box to see previous jobs on the job list.
- **Classes:** This option shows the class that your machine is in. Click **Add to Class** to add your machine to a specific class or click **Remove from Class** to remove the machine from the selected class.

4. Click **OK** to apply the changes and close the **Printer Properties** window.




# copying

This chapter gives you step-by-step instructions for copying documents.


This chapter includes:


- Basic copy
- Changing the settings for each copy
- Changing the default copy settings

 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)

## BASIC COPY


This is the normal and usual procedure for copying your originals.

1. Press  (Copy) on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "On the scanner glass" on page 47 or "In the document feeder" on page 48.)
3. If necessary, adjust the settings for each copy such as **Reduce/Enlarge**, **Darkness**, **Original Type** and more. (See "Changing the settings for each copy" on page 62.)
4. Enter the number of copies using the arrow or number keypad, if necessary.
5. Press **Start** on the control panel to begin copying.

 To cancel the current copy job, press **Stop/Clear** on the control panel.


## CHANGING THE SETTINGS FOR EACH COPY

Your machine provides default settings for copying so that you can quickly and easily make a copy. However, if you want to change the options for each copy, use the copy function buttons on the control panel.

 If you press **Stop/Clear** while setting the copy options, all of the options you have set for the current copy job will be canceled and return to their default status after the machine completes the copy in progress.

### Changing the darkness

If you have an original containing faint marking and dark images, you can adjust the brightness to make a copy that is easier to read.

1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Darkness** appear and press **OK**.
5. Press the left/right arrow until the contrast mode you want appears and press **OK**.
  - **Light**: Works well with dark print.
  - **Lightest**: Works well with darker print.
  - **Normal**: Works well with standard typed or printed originals.
  - **Dark**: Works well with light print.


- Using special copy features
- Deciding the form of copy output
- Setting copy timeout

- **Darkest**: Works well with lighter print or faint pencil markings.

6. Press **Stop/Clear** to return to ready mode.

### Selecting the type of originals


The original type setting is used to improve the copy quality by selecting the document type for the current copy job.

1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Original Type** appear and press **OK**.
5. Press the left/right arrow until the image mode you want appears and press **OK**.
  - **Text**: Use for originals containing mostly text.
  - **Text/Photo**: Use for originals with mixed text and photographs.
  - **Photo**: Use when the originals are photographs.
6. Press **Stop/Clear** to return to ready mode.


### Reducing or enlarging copies


You can reduce or enlarge the size of a copied image from 25% to 400% when you copy original documents from the scanner glass, or from 25% to 100% from the ADF.

#### To select from the predefined copy sizes:

1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Reduce/Enlarge** appear and press **OK**.
5. Press the left/right arrow until the size setting you want appears and press **OK**.
6. Press **Stop/Clear** to return to ready mode.


#### To scale the copy by directly entering the scale rate:


1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Reduce/Enlarge** appear and press **OK**.
5. Press the left/right arrow until **Custom** appear and press **OK**.
6. Press the left/right arrow or numeric keypad to enter the copy size you want. Pressing and holding the left/right arrow allows you to quickly scroll to the number you want.
7. Press **OK** to save the selection.
8. Press **Stop/Clear** to return to ready mode.

-  When you make a reduced copy, black lines may appear at the bottom of your copy.

## CHANGING THE DEFAULT COPY SETTINGS

The copy options, including darkness, original type, copy size, collation and number of copies, can be set to those most frequently used. When you copy a document, the default settings are used unless they have been changed by using the corresponding buttons on the control panel.

1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Setup** appear and press **OK**.
4. Press the left/right arrow until **Change Default** appear and press **OK**.
5. Press the left/right arrow until the setup option you want appears and press **OK**.
6. Press the left/right arrow until the setting you want appears and press **OK**.
7. Repeat steps 5 through 6, as needed.
8. Press **Stop/Clear** to return to ready mode.

-  While you are setting copy options, pressing **Stop/Clear** cancels the changed settings and restores the defaults.

 
## USING SPECIAL COPY FEATURES


You can use the following copy features:

### ID card copying


Your machine can print 2-sided originals on one sheet of A4-, Letter-, Legal-, Folio-, Executive-, B5, A5, or A6-sized paper.

The machine prints one side of the original on the upper half of the paper and the other side on the lower half without reducing the size of the original. This feature is helpful for copying a small-sized item, such as a business card.




-  This copy feature is available only when you place originals on the scanner glass.
- The size of the 2-sided originals should be smaller than A5, if not, some of it won't be copied.

1. Press **ID Copy** on the control panel.
2. **Place Front Side and Press [Start]** appears on the display.
3. Place the front side of an original facing down on the scanner glass where arrows indicate as shown, and close the scanner lid.

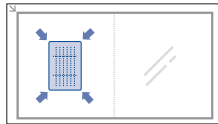


4. Press **OK** on the control panel.  
Your machine begins scanning the front side and shows **Place Back Side and Press [Start]**.

5. Turn the original over and place it on the scanner glass, where arrows indicate as shown then, close the scanner lid.

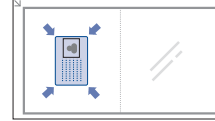


6. Press **OK** on the control panel to begin copying.


-  If the original is larger than the printable area, some portions may not be printed.
- If you don't press the **OK** button, only the front side will be copied.
- If you press **Stop/Clear**, the machine cancels the copy job and returns to ready mode.

### 2-up or 4-up copying (N-up)

The machine reduces the size of the original images and prints 2 or 4 pages onto one sheet of paper.




1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Layout** appear and press **OK**.
5. Press the left/right arrow until **2-Up** or **4-Up** appear and press **OK**.
6. When **Yes** appears, press **OK**.
7. Press **Start** on the control panel to begin copying.


-  You cannot adjust the copy size using the **Reduce/Enlarge** for the **N-Up** feature.

### Poster copying

Your original will be divided into 9 portions. You can paste the printed pages together to make one poster-sized document.

This copy feature is available only when you place originals on the scanner glass.

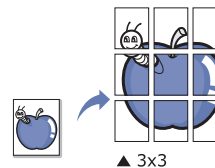

1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Layout** appear and press **OK**.
5. Press the left/right arrow until **Poster Copy** appear and press **OK**.
6. Press **Stop/Clear** to return to ready mode.
7. Press **Start** on the control panel to begin copying.

-  Your original is divided into 9 portions. Each portion is scanned and


printed one by one in the following order:


1	2	3
4	5	6
7	8	9


## Clone copying

The machine prints multiple original images on a single page. The number of images is automatically determined by the original image and the paper size.

This copy feature is available only when you place originals on the scanner glass.

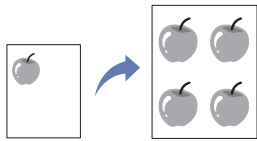


 
1. Press  (Copy) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Feature** appear and press **OK**.
4. Press the left/right arrow until **Layout** appear and press **OK**.
5. Press the left/right arrow until **Clone Copy** appear and press **OK**.
6. When **Yes** appears, press **OK**.
7. Press **Start** on the control panel to begin copying.

 You cannot adjust the copy size using the **Reduce/Enlarge** for the **Clone Copy** feature.


## DECIDING THE FORM OF COPY OUTPUT

 You can set the machine to sort the copy job. For example, if you make 2 copies of a 3 page original, one complete 3 page document will print followed by a second complete document.

1. Press  (Copy) on the control panel.
2. Place originals, face up, in the document feeder. Or you can use the scanner glass with a single original document face down and closed the scanner lid.
3. Press **OK** and enter the number of copies using the left/right arrow or numeric keypad.
4. Press **Menu** on the control panel.
5. Press the left/right arrow until **Copy Setup** appear and press **OK**.
6. Press the left/right arrow until **Change Default** appear and press **OK**.
7. Press the left/right arrow until **Copy Collation** appear and press **OK**.
8. Press the left/right arrow until **On** appear and press **OK**.
  - **On**: Prints output in sets to match the sequence of originals.



- **Off**: Prints output sorted into stacks of individual pages.



9. Press **Stop/Clear** to return to ready mode.

10. Press **Start** to begin copying.

One complete document will print followed by the second complete document.

## SETTING COPY TIMEOUT

You can set the time the machine waits before it restores the default copy settings, if you do not start copying after changing them on the control panel.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Timeout** appear and press **OK**.
5. Press the left/right arrow until the time setting you want appears. Selecting **Off** means that the machine does not restore the default settings until you press **Start** to begin copying, or **Stop/Clear** to cancel.
6. Press **OK** to save the selection.
7. Press **Stop/Clear** to return to ready mode.





# scanning

Scanning with your machine lets you turn pictures and text into digital files that can be stored on your computer.

## This chapter includes:

- Basic scanning method
- Scanning originals and sending to your computer (Scan to PC)
- Using Samsung Scan Manager
- Scanning with TWAIN-enabled software

 The maximum resolution that can be achieved depends upon various factors, including computer speed, available disk space, memory, the size of the image being scanned, and bit depth settings. Thus, depending on your system and what you are scanning, you may not be able to scan at certain resolutions, especially using enhanced resolution.

 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)

## BASIC SCANNING METHOD

You can scan the originals with your machine via an USB cable or the network.

- **Samsung Scan Manager:** You just walk to the machine with the originals and scan them from the control panel. Then, the scanned data will be stored in the connected computers **My Documents** folder. When you install all the softwares in the supplied CD, the Samsung Scan Manager is also automatically installed on your computer. This feature can be used via the local connection or the network connection. (See "Using Samsung Scan Manager" on page 66.)
- **TWAIN:** TWAIN is the one of a preset imaging applications. Scanning an image launches the selected application, enabling you to control the scanning process. This feature can be used via the local connection or the network connection. (See "Scanning with TWAIN-enabled software" on page 67.)
- **SmarThru Office :** This program is the accompanying software for your machine. You can use this program to scan images or documents. This feature can be used via the local connection or the network connection. (See "Smarthru" on page 83.)
- **WIA:** WIA stands for Windows Images Acquisition. To use this feature, your computer must be connected directly with the machine via an USB cable. (See "Scanning using the WIA driver" on page 67.)


## SCANNING ORIGINALS AND SENDING TO YOUR COMPUTER (SCAN TO PC)


You can scan an image on the machine via the Samsung Scan Manager program that is installed in your networked computer.

### For USB connected machine

This is a basic scanning method for usb connected machine.


- Scanning using the WIA driver
- Macintosh scanning
- Linux Scanning



1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. Press  (Scan) on the control panel.
4. Press the left/right arrow until **Scan To PC** appear and press **OK**.
5. Press the left/right arrow until **Local PC** appear and press **OK**.

 If you see **Not Available** message, check the port connection.

6. Press the left/right arrow until the application program you want appears and press **OK**.

Default setting is **My Documents**.







 To add or delete the folder where the scanned file is saved, add or delete the application program in **Samsung Scan Manager > Properties > Set Scan Button**.

7. Press the left/right arrow until the setting you want appears and press **OK**.
  - **Resolution:** Sets the image resolution.
  - **Scan Color:** Sets the color mode.
  - **Scan Format:** Sets the file format in which the image is to be saved.
  - **Scan Size:** Sets the image size.
- 
  - **Scan Format** appears only when you selected the Scan destination to **My Documents**.
  - If you want to scan from the default setting, press **Start**.
8. Scanning begins.
  - 
    - Scanned image is saved in computer's **My Documents > My Pictures > Samsung** folder.
    - You can use Twain driver to scan quickly in **Samsung Scan Manager** program.
    - You can also scan by pressing Window's **Start > Control Panel > Samsung Scan Manager > Quick Scan**.

### For network connected machine



Make sure the printer driver is installed on your computer using the software CD, since the printer driver includes the scan program. (See "Installing wired network or USB connected machine's driver" on page 39.)

1. Make sure that your machine and the computer are connected to a network and Samsung Scan Manager is installed on the computer.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.

3. Press  (Scan) on the control panel.
4. Press the left/right arrow until **Scan To PC** appear and press **OK**.
5. Press the left/right arrow until **Network PC** appear and press **OK**.
  -  If you see **Not Available** message, check the port connection.
6. Select your registered computer **ID**, and enter the **Password** if necessary.
  -  • **ID** is the same ID as the registered **Computer ID** for **Samsung Scan Manager**.
  - **Password** is the 4 digit number registered **Password** for **Samsung Scan Manager**.
7. Press the left/right arrow until the application program you want appears and press **OK**.  
Default setting is **My Documents**.
  -  To add or delete the folder where the scanned file is saved, add or delete the application program in **Samsung Scan Manager > Properties > Set Scan Button**.
8. Press the left/right arrow until the setting you want appears and press **OK**.
  - **Resolution**: Sets the image resolution.
  - **Scan Color**: Sets the color mode.
  - **Scan Format**: Sets the file format in which the image is to be saved.
  - **Scan Size**: Sets the image size.
  -  • **Scan Format** appears only when you selected the Scan destination to **My Documents**.
    - If you want to scan from the default setting, press **Start**.
9. Scanning begins.
  -  • Scanned image is saved in computer's **My Documents > My Pictures > Samsung** folder.
  - You can use Twain driver to scan quickly in **Samsung Scan Manager** program.
  - You can also scan by pressing Window's **Start > Control Panel > Samsung Scan Manager > Quick Scan**.

## USING SAMSUNG SCAN MANAGER


If you have installed the printer driver, Samsung Scan Manager program has installed too. Start Samsung Scan Manager program to find out about this program information and the installed scan driver's condition. Through this program, you can change scan settings and add or delete the folders where scanned documents are saved in your computer.

-  The Samsung Scan Manager program can only be used in the Window and Macintosh system. If you use the Macintosh, See "Setting scan information in Scan Manager" on page 68.
1. From the **Start** menu, click **Control Panel > Samsung Scan Manager**.
    -  You can open Samsung Scan Manager by right clicking the Smart Panel icon in the Windows task bar and selecting Scan Manager.
  2. Select the appropriate machine from the Samsung Scan Manager window.
  3. Press **Properties**.
  4. The **Set Scan Button** tab allows you to change the saving destination and scan settings, add or delete application program, and format files.

You can change the scanning machine by using the **Change Port** tab. (Local or Network)

5. When setting is done, press **OK**.

### Set Scan Button tab

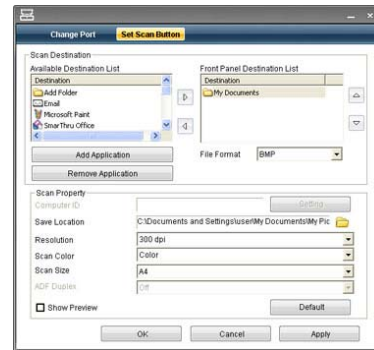


### Scan Destination

- **Available Destination List**: Shows the list of applications currently linked to scanned images in the PC's registry. Select the program you want to use and click the right arrow and add to **Front Panel Destination List**.
- **Front Panel Destination List**: Shows the list of applications to open scanned image.
- **Add Application**: Allows you to add application you want to use to **Available Destination List**.
- **Remove Application**: Allows you to remove an item added by the user in the **Available Destination List**.
- **File Format**: Allows you to select the form of scanned data to be saved. You can choose among **BMP**, **JPEG**, **PDF**, and **TIFF**.

### Scan Property

- **Computer ID**: Shows the ID of your computer.
- **Save Location**: Allows you to choose the location of the default saving folder.
- **Resolution**: Allows you to choose the scan resolution.
- **Scan Color**: Allows you to choose the scan color.
- **Scan Size**: Allows you to choose the scan size.
- **ADF Duplex**: Automatically scans both sides. If your model does not support this option, it will be grayed out.
- **Show Preview**: Checking this box allows you to preview applied scan options. You can modify the options before scanning.
- **Default**: Allows you to go back to default options.

## Change Port tab

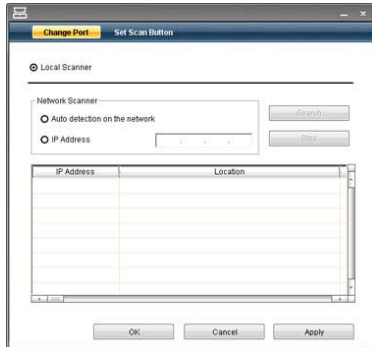

### Local Scanner

Select when your machine is connected via USB or LPT port.

### Network Scanner

Select when your machine is connected via network port.

- **Auto detection on the network:** Automatically detects your machine.
- **IP address:** Enter in your machine's IP address to detect your machine.

## SCANNING WITH TWAIN-ENABLED SOFTWARE

If you want to scan documents using other softwares, you will need to use TWAIN-compliant software, such as Adobe Photoshop.

Follow the steps below to scan with TWAIN-compliant software:

1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. Open an application, such as Adobe Photoshop.
4. Open the TWAIN window and set the scan options.
5. Scan and save your scanned image.

## SCANNING USING THE WIA DRIVER

Your machine also supports the Windows Image Acquisition (WIA) driver for scanning images. WIA is one of the standard components provided by Microsoft Windows XP and works with digital cameras and scanners. Unlike the TWAIN driver, the WIA driver allows you to scan and easily adjust images without using additional software.


-  The WIA driver works only on Windows XP/Vista with a USB port.


### Windows XP

1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. From the **Start** menu, select **Control Panel**, > **Scanners and Cameras**.

4. Double click your scanner driver icon. The **Scanner and Camera Wizard** appears.
5. Click **Next**.
6. Set the option in **Choose scanning preferences** window and click **Preview** to see how your options affect the picture.
7. Click **Next**.
8. Enter a picture name, and select a file format and destination to save the picture.
9. Your picture has been successfully copied to your computer. Choose one of the options on screen.
10. Click **Next**.
11. Click **Finish**.

## Windows Vista



1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. From the **Start** menu select **Control Panel** > **Hardware and Sound** > **Scanners and Cameras**.
4. Double click **Scan a document or picture**. **Windows Fax and Scan** application appears.
  -  You can click on **View scanners and cameras** to view scanners,
  - If there is no **Scan a document or picture**, open the MS paint program and from the **File** click **From Scanner or Camera...**
5. Click **New Scan**. Scan driver appears.
6. Choose your scanning preferences and click **Preview** to see your preferences affect the picture.
7. Click **Scan**.

-  If you want to cancel the scan job, press the **Cancel** button on the **Scanner and Camera Wizard**.

## MACINTOSH SCANNING

You can scan documents using **Image Capture** program. Macintosh OS offers **Image Capture** program.

### Scanning with USB

1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. Start **Applications** and click **Image Capture**.
  -  If **No Image Capture device connected** message appears, disconnect the USB cable and reconnect it. If the problem continues, refer to the **Image Capture's** help.
4. Set the scan options on this program.
5. Scan and save your scanned image.
  -  For more information about using **Image Capture**, refer to the **Image Capture's** help.
  - Use TWAIN-compliant softwares to apply more scan options.
  - You can also scan using TWAIN-compliant softwares, such as Adobe Photoshop.

- Scan process differ according to TWAIN-compliant softwares. Please refer to the user's guide of the software.
- If scanning does not operate in **Image Capture**, update Mac OS to the latest version. **Image Capture** operates properly in Mac OS X 10.3.9 or higher and Mac OS X 10.4.7 or higher.

## Scanning with network

1. Make sure that the machine is connected to your computer and powered on.
2. Load originals face up into the document feeder , or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
3. Start **Applications** and click **Image Capture**.
4. Click **Devices** and click **Browse Devices**.
5. For Mac OS X 10.4:  
Select your machine in Twain devices option. Make sure that **Use TWAIN software** checkbox is checked, and click **Connect**.
  - If a warning message appears, click **Change Port..** to select port.
  - If TWAIN UI appears, from the **Preference** tab, click **Change Port..** to select port.


 Refer to Scan Manager for **Change port..** use. (See "Setting scan information in Scan Manager" on page 68.)

For Mac OS X 10.5 ~ 10.6:

Make sure that **Connected** checkbox is checked beside your machine in **Bonjour Devices**.

If you want to scan using TWAIN, refer to the Mac OS X10.4 steps above.

6. Set the scan options on this program.
7. Scan and save your scanned image.

- 
- For Mac OS X 10.3, use TWAIN-compliant softwares.
  - For more information about using **Image Capture**, refer to the **Image Capture**'s help.
  - Use TWAIN-compliant softwares to apply more scan options.
  - You can also scan using TWAIN-compliant softwares, such as Adobe Photoshop.
  - Scan process differ according to TWAIN-compliant softwares. Please refer to the user's guide of the software.
  - If scanning does not operate in **Image Capture**, update Mac OS to the latest version. **Image Capture** operates properly in Mac OS X 10.4.7 or higher.

## Setting scan information in Scan Manager


To find out about Scan Manager program information, to check the installed scan driver's condition, to change scan settings. and to add or delete the folders where scanned documents to computer are saved in Scan Manager program, follow these instructions:


1. From the Smart Panel menu on Status bar, click Scan Manager.
2. Select the appropriate machine from the Scan Manager .
3. Press **Properties**.
4. Use **Set Scan Button** to change the file destination or scan settings, to add or delete application programs, and to format files. You can change the scanning machine by using **Change port**. (Local or Network)
5. When done, press **OK**.

## LINUX SCANNING

You can scan a document using the Unified Driver Configurator window.

### Scanning


1. Double-click the **Unified Driver Configurator** on your desktop.
2. Click the  button to switch to Scanners Configuration.
3. Select the scanner on the list.

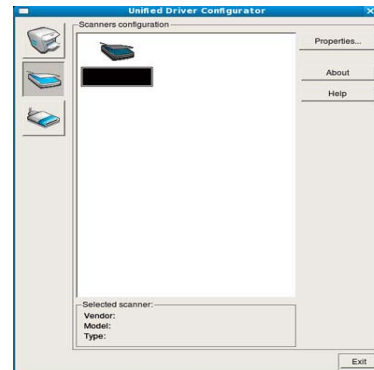

If you use only one machine device and it is connected to the computer and turned on, your scanner appears on the list and is automatically selected.

If you have two or more scanners connected to your computer, you can select any scanner to work at any time. For example, while acquisition is in progress on the first scanner, you may select the second scanner, set the device options and start the image acquisition simultaneously.

4. Click **Properties**.
5. Load originals face up into the document feeder, or place a single original face down on the scanner glass.  
(See "Loading originals" on page 47.)
6. From the **Scanner Properties** window, click **Preview**.  
The document is scanned and the image preview appears in the **Preview Pane**.

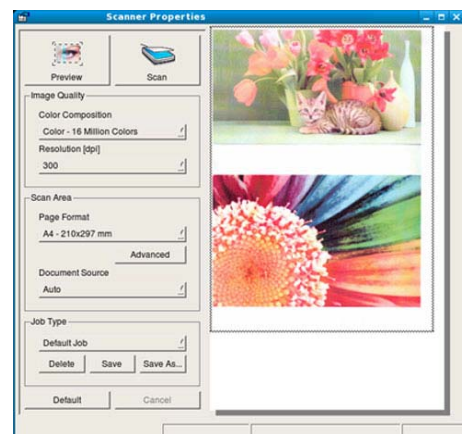

7. Drag the pointer to set the image area to be scanned in the **Preview Pane**.
8. Change the scan options in the **Image Quality** and **Scan Area** sections.
  - **Image Quality:** This option allows you to select the color composition and the scan resolution for the image.
  - **Scan Area:** This option allows you to select the page size. The **Advanced** button enables you to set the page size manually.

If you want to use one of the preset scan option settings, select the option from the **Job Type** drop-down list. (See "Adding Job Type Settings" on page 69.)

Click **Default** to restore the default setting for the scan options.
9. When you have finished, click **Scan** to start scanning.
 

The status bar appears on the bottom left of the window to show you the progress of the scan. To cancel scanning, click **Cancel**.
10. The scanned image appears.
 

If you want to edit the scanned image, use the toolbar. (See "Using the Image Manager" on page 69.)
11. When you are finished, click **Save** on the toolbar.
12. Select the file directory where you want to save the image and enter the file name.
13. Click **Save**.

### Adding Job Type Settings

You can save your scan option settings for later use.

#### To save a new Job Type setting:

1. Change the options from the Scanner Properties window.
  2. Click **Save As**.
  3. Enter the name for your setting.
  4. Click **OK**.
- Your setting is added to the **Saved Settings** drop-down list.

#### To save a Job Type setting for the next scan job:


1. Select the setting you want to use from the **Job Type** drop-down list.
2. The next time you open the **Scanner Properties** window, the saved setting is automatically selected for the scan job.

#### To delete a Job Type setting







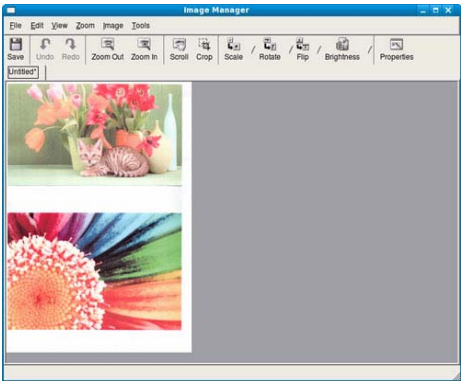





1. Select the setting you want to delete from the **Job Type** drop-down list.
  2. Click **Delete**.
- The setting is deleted from the list.

### Using the Image Manager

 The Image Manager application provides you with menu commands and tools to edit your scanned image.



Use the following tools to edit the image:

TOOLS	NAME	FUNCTION
	<b>Save</b>	Saves the image.
	<b>Undo</b>	Cancels your last action.
	<b>Redo</b>	Restores the action you canceled.
	<b>Scroll</b>	Allows you to scroll through the image.
	<b>Crop</b>	Crops the selected image area.
	<b>Zoom Out</b>	Zooms the image out.
	<b>Zoom In</b>	Zooms the image in.
	<b>Scale</b>	Allows you to scale the image size; you can enter the size manually, or set the rate to scale proportionally, vertically, or horizontally.
	<b>Rotate</b>	Allows you to rotate the image; you can select the number of degrees from the drop-down list.
	<b>Flip</b>	Allows you to flip the image vertically or horizontally.
	<b>Effect</b>	Allows you to adjust the brightness or contrast of the image, or to invert the image.
	<b>Properties</b>	Shows the properties of the image.


For further details about the Image Manager application, refer to the on screen help.

This chapter gives you information about using your machine as a fax machine.

## This chapter includes:

- Preparing to fax
- Sending a fax
- Receiving a fax
- Adjusting the document settings

- You cannot use this machine as a fax via the internet phone. For more information ask the internet service provider.
- We recommend you to use traditional analog phone services (PSTN: public switched telephone network) when connecting telephone lines to use Fax. If you use other Internet services (DSL, ISDN, VoIP), you can improve the connection quality by using the Micro-filter. The Micro-filter eliminates unnecessary noise signals and improves connection quality or Internet quality. Since the DSL Micro-filter is not provided with the machine, contact your Internet Service provider for use on DSL Micro-filter.

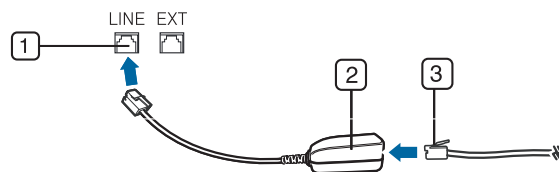

- 1 Line port
- 2 Micro filter
- 3 DSL modem / Telephone line

- Supported optional devices and features may differ according to your model. Please check your model name. (See "Features by Models" on page 25.)

## PREPARING TO FAX

Before you send or receive a fax, you need to connect the supplied line cord to the wall jack. Refer to the Quick Install Guide how to make a connection. The method of making a telephone connection is varies from one country to another.

## SENDING A FAX

This part explains how to send a fax and the special methods of transmission.

- When you place the originals, you can use either the document feeder or the scanner glass. (See "Loading originals" on page 47.) If the originals are placed on both the document feeder and the scanner glass, the machine will read the originals on the document feeder first, which has higher priority in scanning.

- Forwarding a fax to other destination
- Setting up address book
- Printing sent fax report automatically

## Setting the fax header

In some countries, you are required by law to indicate your fax number on any fax you send.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Machine Setup** appear and press **OK**.
4. Press the left/right arrow until **Machine ID** appear and press **OK**.
5. Enter your name or the company name using the number keypad. You can enter alphanumeric characters using the number keypad, and include special symbols by pressing the 1 button. For details on how to enter alphanumeric characters, see "Entering characters using the number keypad" on page 44.
6. Press **OK** to save the ID.
7. Press the left/right arrow until **Machine Fax No.** appear and press **OK**.
8. Enter your fax number using the number keypad and press **OK**.
9. Press **Stop/Clear** to return to ready mode.

## Sending a fax


1. Press **(Fax)** on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass. (See "On the scanner glass" on page 47 or "In the document feeder" on page 48.)
3. Adjust the resolution and the darkness to suit your fax needs. (See "Adjusting the document settings" on page 73.)
4. Enter the receiving fax machine's number. You can use speed dial numbers, or group dial numbers. For details about storing and searching for a number, see "Setting up address book" on page 75.
5. Press **Start** on the control panel. The machine starts to scan and send a fax to destinations.


- If you want to send fax directly from your computer, use SmarThru Office. (See "SmarThru" on page 83.)
- When you want to cancel a fax job, press **Stop/Clear** before the machine start transmission.
- If you used the scanner glass, the machine shows the message asking to place another page.
- While the machine is sending a fax, you can not send an email at the same time.

## Sending a fax manually

This method is sending a fax using **On Hook Dial** on the control panel.



1. Press  (Fax) on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.
3. Adjust the resolution and the darkness to suit your fax needs. (See "Adjusting the document settings" on page 73.)
4. Press **On Hook Dial** on the control panel or lift the handset.
5. Enter a fax number using the number keypad on the control panel.
6. Press **Start** when you hear a high-pitched fax signal from the remote fax machine.

 When you want to cancel a fax job, press **Stop/Clear** at any time while sending.

## Confirming a transmission

When the last page of your original has been sent successfully, the machine beeps and returns to ready mode.

When something goes wrong while sending your fax, an error message appears on the display. For a list of error messages and their meanings, see "Understanding display messages" on page 94. If you receive an error message, press **Stop/Clear** to clear the message and try to send the fax again.

You can set your machine to print a confirmation report automatically each time sending a fax is completed. For further details, see "Printing sent fax report automatically" on page 76.

## Automatic redialing

When the number you have dialed is busy or there is no answer when you send a fax, the machine automatically redials the number every three minutes, up to seven times according to the factory default settings..

When the display shows **Retry Redial?**, press **OK** to redial the number without waiting. To cancel the automatic redialing, press **Stop/Clear**.

To change the time interval between redials and the number of redial attempts. (see "Changing the fax setup options" on page 77.)


## Redialing the last number

To redial the number you called last:

1. Press **Redial/Pause** on the control panel.
2. When an original is loaded in the document feeder, the machine automatically begins to send.  
If an original is placed on the scanner glass, select **Yes** to add another page. Load another original and press **OK**. When you have finished, select **No** at the **Another Page?** prompt.


## Sending a fax to multiple destinations

You can use the Multiple Send feature, which allows you to send a fax to multiple locations. Originals are automatically stored in memory and sent to a remote station. After transmission, the originals are automatically erased from memory. You cannot send a color fax using this feature.

1. Press  (Fax) on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.
3. Adjust the resolution and the darkness to suit your fax needs. (See "Adjusting the document settings" on page 73.)
4. Press **Menu** on the control panel.
5. Press the left/right arrow until **Fax Feature** appear and press **OK**.
6. Press the left/right arrow until **Multi Send** appear and press **OK**.
7. Enter the number of the first receiving fax machine and press **OK**.  
You can press speed dial numbers or select group dial number using

**Address book** button. For details, see "Setting up address book" on page 75.

8. Enter the second fax number and press **OK**.  
The display asks you to enter another fax number to send the document.
9. To enter more fax numbers, press **OK** when **Yes** appears and repeat steps 7 and 8. You can add up to 10 destinations.
10. Press **OK** to start storing the scanned original data into memory.

 Once you entered a group dial number, you cannot enter another group dial numbers anymore.


11. When you have finished entering fax numbers, press the left/right arrow to select **No** at the **Another No.?** prompt and press **OK**.
12. If an original is placed on the scanner glass, select **Yes** to add another pages. Load another original and press **OK**.


When you have finished, select **No** at the **Another Page?** prompt.

The machine begins sending the fax to the numbers you entered in the order in which you entered them.

## Delaying a fax transmission

You can set your machine to send a fax at a later time when you will not be present. You cannot send a color fax using this feature.

1. Press  (Fax) on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.
3. Adjust the resolution and the darkness to suit your fax needs. (See "Adjusting the document settings" on page 73.)
4. Press **Menu** on the control panel.
5. Press the left/right arrow until **Fax Feature** appear and press **OK**.
6. Press the left/right arrow until **Delay Send** appear and press **OK**.
7. Enter the number of the receiving fax machine and press **OK**.  
You can press speed dial numbers or select group dial number using **Address book** button. For details, see "Setting up address book" on page 75.
8. The display asks you to enter another fax number to send the document.
9. To enter more fax numbers, press **OK** when **Yes** appears and repeat steps 7. You can add up to 10 destinations.


 Once you entered a group dial number, you cannot enter another group dial numbers anymore.

10. When you have finished entering fax numbers, press the left/right arrow to select **No** at the **Another No.?** prompt and press **OK**.
11. Enter the job name you want and press **OK**.

For details on how to enter alphanumeric characters, see "Entering characters using the number keypad" on page 44.

If you do not want to assign a name, skip this step.

12. Enter the time using the number keypad and press **OK**.

 If you set a time earlier than the current time, the fax will be sent at that time on the following day.

The original is scanned into memory before transmission.

13. If an original is placed on the scanner glass, select **Yes** to add another pages. Load another original and press **OK**.

When you have finished, select **No** at the **Another Page?** prompt.

The machine returns to ready mode. The display reminds you that you are in ready mode and that a delayed fax is set.

### Adding documents to a reserved delay fax job

You can add additional documents to the delayed fax job which is saved in memory.

1. Load the originals to be added and adjust document settings.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Add pages** appear and press **OK**.
5. Press the left/right arrow until the fax job you want appears and press **OK**.

When you have finished, select **No** at the **Another Page?** prompt. The machine scans the original into memory.

6. Press **Stop/Clear** to return to ready mode.


### Canceling a reserved delay fax job

You can add additional documents to the delayed fax job which is saved in memory.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Fax Feature** appear and press **OK**.
3. Press the left/right arrow until **Cancel Job** appear and press **OK**.
4. Press the left/right arrow until the fax job you want appears and press **OK**.
5. Press **OK** when **Yes** appears.  
The selected fax is deleted from memory.
6. Press **Stop/Clear** to return to ready mode.

### Sending a priority fax

This function is used when a high priority fax need to be sent ahead of reserved operations. The original is scanned into memory and immediately transmitted when the current operation is finished. In addition, priority transmission will interrupt a sending to multiple destinations between stations (example, when the transmission to station A ends, before transmission to station B begins) or between redial attempts.


1. Press  (Fax) on the control panel.
2. Load originals face up into the document feeder, or place a single original face down on the scanner glass.
3. Adjust the resolution and the darkness to suit your fax needs. (See "Adjusting the document settings" on page 73.)
4. Press **Menu** on the control panel.
5. Press the left/right arrow until **Fax Feature** appear and press **OK**.
6. Press the left/right arrow until **Priority Send** appear and press **OK**.
7. Enter the number of the receiving fax machine and press **OK**.  
You can press speed dial numbers or select group dial number using **Address book** button. For details, see "Setting up address book" on page 75.
8. Enter the job name you want and press **OK**.  
The original is scanned into memory before transmission.
9. If an original is placed on the scanner glass, select **Yes** to add another pages. Load another original and press **OK**.  
When you have finished, select **No** at the **Another Page?** prompt.  
The machine starts to scan and send a fax to destinations.

## RECEIVING A FAX

This part explains how to receive a fax, and the special receiving methods available.

### Changing the receive modes

Your machine is preset to **Fax** mode at the factory. When you receive a fax, the machine answers the call on a specified number of rings and automatically receives the fax. But if you want to change the Fax mode to another mode, follow the steps below:

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Setup** appear and press **OK**.
4. Press the left/right arrow until **Receiving** appear and press **OK**.
5. Press the left/right arrow until **Receive Mode** appear and press **OK**.
6. Press the left/right arrow until the fax reception mode you want appears.
  - **Fax**: Answers an incoming fax call and immediately goes into the fax reception mode.
  - **Tel**: Receives a fax by pressing **On Hook Dial** and then **Start**. If your machine is SCX-5635HN, you can receive a fax by picking up the handset.
  - **Ans/Fax**: Is for when an answering machine attached to your machine. Your machine answers an incoming call, and the caller can leave a message on the answering machine. If the fax machine senses a fax tone on the line, the machine automatically switches to Fax mode to receive the fax.
  - **DRPD**: you can receive a call using the Distinctive Ring Pattern Detection (DRPD) feature. Distinctive Ring is a telephone company service which enables an user to use a single telephone line to answer several different telephone numbers. For further details, see "Receiving faxes using DRPD mode" on page 73.
7. Press **OK** to save your selection.
8. Press **Stop/Clear** to return to ready mode.



- To use the **Ans/Fax** mode, attach an answering machine to the EXT socket on the back of your machine.
- If you do not want other people to view your received documents, you can use secure receiving mode. In this mode, all of the received faxes are stored in memory. For further details, see "Receiving in secure receiving mode" on page 73.

### Receiving manually in Tel mode

You can receive a fax call by pressing **On Hook Dial** and then pressing **Start** when you hear a fax tone from the remote machine. The machine begins receiving a fax. If your machine has a handset, you can answer calls using the handset.

To change the number of rings, see "Changing the fax setup options" on page 77.

### Receiving automatically in Answering Machine/Fax mode

To use this mode, you must attach an answering machine to the EXT socket on the back of your machine. (See "Rear view" on page 27.)

If the caller leaves a message, the answering machine stores the message as it would normally. If your machine detects a fax tone on the line, it automatically starts to receive the fax.



- If you have set your machine to this mode and your answering machine is switched off, or no answering machine is connected to EXT socket, your machine automatically goes into Fax mode after a predefined number of rings.
- If your answering machine has a user-selectable ring counter, set the machine to answer incoming calls within 1 ring.
- If you are in Tel mode when the answering machine is connected to your machine, you must switch off the answering machine.



otherwise, the outgoing message from the answering machine will interrupt your phone conversation.

## Receiving faxes manually using an extension telephone

This feature works best when you are using an extension telephone connected to the EXT socket on the back of your machine. You can receive a fax from someone you are talking to on the extension telephone, without going to the fax machine.

When you receive a call on the extension phone and hear fax tones, press the keys \*9\* on the extension phone. The machine receives the fax.

Press the buttons slowly in sequence. If you still hear the fax tone from the remote machine, try pressing \*9\* once again.

\*9\* is the remote receive code preset at the factory. The first and the last asterisks are fixed, but you can change the middle number to whatever you wish. For details about changing the code, see "Changing the fax setup options" on page 77


## Receiving faxes using DRPD mode

Distinctive Ring is a telephone company service which enables an user to use a single telephone line to answer several different telephone numbers. The particular number someone uses to call you is identified by different ringing patterns, which consist of various combinations of long and short ringing sounds. This feature is often used by answering services who answer telephones for many different clients and need to know which number someone is calling in on to properly answer the phone.

Using the Distinctive Ring Pattern Detection (DRPD) feature, your fax machine can learn the ring pattern you designate to be answered by the fax machine. Unless you change it, this ringing pattern will continue to be recognized and answered as a fax call, and all other ringing patterns will be forwarded to the extension telephone or answering machine plugged into the EXT socket. You can easily suspend or change DRPD at any time.


Before using the DRPD option, Distinctive Ring service must be installed on your telephone line by the telephone company. To set up DRPD, you will need another telephone line at your location, or someone available to dial your fax number from outside.

To set up the DRPD mode:

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Setup** appear and press **OK**.
4. Press the left/right arrow until **Receiving** appear and press **OK**.
5. Press the left/right arrow until **Receive Mode** appear and press **OK**.
6. Press the left/right arrow until **DRPD** appear and press **OK**.  
**Waiting Ring** appears on the display.
7. Call your fax number from another telephone. It is not necessary to place the call from a fax machine.
8. When your machine begins to ring, do not answer the call. The machine requires several rings to learn the pattern..

When the machine completes learning, the display shows **Completed DRPD Setup**. If the DRPD setup fails, **Error DRPD Ring** appears.



Press OK when DRPD appears and start over from step 6.

-  • DRPD must be set up again if you re-assign your fax number, or connect the machine to another telephone line.
- After DRPD has been set up, call your fax number again to verify that the machine answers with a fax tone. Then have a call placed to a different number assigned to that same line to be sure the call is forwarded to the extension telephone or answering machine plugged into the EXT socket.

## Receiving in secure receiving mode

You may need to prevent your received faxes from being accessed by unauthorized people. You can turn on secure receiving mode to restrict printing of received faxes when the machine is unattended. In secure receiving mode, all incoming faxes go into memory. When the mode is deactivated, any stored faxes are printed.

## Activating secure receiving mode

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Secure Receive** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Enter a four-digit password you want to use and press **OK**.  
 You can activate secure receiving mode without setting a password, but cannot protect your faxes.
7. Re-enter the password to confirm it and press **OK**.
8. Press **Stop/Clear** to return to ready mode.

When a fax is received in secure receiving mode, your machine stores it in memory and shows **Secure Receive** to let you know that there is a fax received.

## Printing received faxes

1. Access the **Secure Receive** menu by following steps 1 through 4 in "Activating secure receiving mode."
2. Press the left/right arrow until **Print** appear and press **OK**.
3. Enter the four-digit password and press **OK**.  
The machine prints all of the faxes stored in memory.

## Deactivating secure receiving mode

1. Access the **Secure Receive** menu by following steps 1 through 4 in "Activating secure receiving mode."
2. Press the left/right arrow until **Off** appear and press **OK**.
3. Enter the four-digit password and press **OK**.  
The mode is deactivated and the machine prints all faxes stored in memory.
4. Press **Stop/Clear** to return to ready mode.

## Receiving faxes in memory


Since your machine is a multi-tasking device, it can receive faxes while you are making copies or printing. If you receive a fax while you are copying or printing, your machine stores incoming faxes in its memory. Then, as soon as you finish copying or printing, the machine automatically prints the fax.

## ADJUSTING THE DOCUMENT SETTINGS

Before starting a fax, change the following settings according to your original's status to get the best quality.

### Resolution


The default document settings procedure good results when using typical text-based originals. However, if you send originals that are of poor quality, or contain photographs, you can adjust the resolution to produce a higher quality fax.

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.

3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Resolution** appear and press **OK**.
5. Press the left/right arrow until the option you want appears and press **OK**.
6. Press **Stop/Clear** to return to ready mode.


Recommended resolution settings for different original document types are described in the table below:


MODE	RECOMMENDED FOR:
<b>Standard</b>	Originals with normal sized characters.
<b>Fine</b>	Originals containing small characters or thin lines or originals printed using a dot-matrix printer.
<b>Super Fine</b>	<p>Originals containing extremely fine detail. <b>Super Fine</b> mode is enabled only if the machine with which you are communicating also supports the Super Fine resolution.</p> <ul style="list-style-type: none"> <li>For memory transmission, <b>Super Fine</b> mode is not available. The resolution setting is automatically changed to <b>Fine</b></li> <li>When your machine is set to <b>Super Fine</b> resolution and the fax machine with which you are communicating does not support <b>Super Fine</b> resolution, the machine transmits using the highest resolution mode supported by the other fax machine.</li> </ul>
<b>Photo Fax</b>	Originals containing shades of gray or photographs.
<b>Color Fax</b>	Originals with colors. Sending a color fax is enabled only if the machine with which you are communicating supports color fax reception and you send the fax manually. In this mode, memory transmission is not available.

 The resolution setting is applied to the current fax job. To change the default setting, see "Change Default" on page 78.

## Darkness


You can select the degree of darkness of the original document.

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Darkness** appear and press **OK**.
5. Press the left/right arrow until the option you want appears and press **OK**.
6. Press **Stop/Clear** to return to ready mode.

 The darkness setting is applied to the current fax job. To change the default setting, see "Change Default" on page 78.


## FORWARDING A FAX TO OTHER DESTINATION

You can set the machine to forward the received or sent fax to other destination by a fax, an email or a server. If you are out of office but have to receive the fax, this feature may be useful.

 When you forward a fax by an email, you firstly set the mail server and IP address in SyncThru™ Web Service. (See "Using SyncThru™ Web Service" on page 82.)


## Forwarding a sent fax to other destination by a fax

You can set the machine to forward every fax you sent to other destination by faxing.


1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Fax** appear and press **OK**.
6. Press the left/right arrow until **Send Forward** appear and press **OK**.
7. Press the left/right arrow until **On** appear and press **OK**.
8. Enter the number of the fax machine to which faxes are to be sent and press **OK**.
9. Press **Stop/Clear** to return to ready mode.  
Subsequent sent faxes will be forwarded to the specified fax machine.

## Forwarding a received fax to other destination by a fax


With this feature, you can forward every fax you received to other destination by faxing. When the machine receives a fax, a fax is stored in the memory then, the machine sends it to the destination you have set.

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Fax** appear and press **OK**.
6. Press the left/right arrow until **Rcv. Forward** appear and press **OK**.
7. Press the left/right arrow until **Forward** appear and press **OK**.  
To set the machine to print out a fax when fax forwarding has been completed, select **Forward & Print**.
8. Enter the number of the fax machine to which faxes are to be sent and press **OK**.
9. Enter the starting time using left/right arrow or numeric keypad and press **OK**.
10. Enter the ending time using left/right arrow or numeric keypad and press **OK**.
11. Press **Stop/Clear** to return to ready mode.  
Subsequent received faxes will be forwarded to the specified fax machine.


## Forwarding a sent fax to other destination by an email

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Email** appear and press **OK**.
6. Press the left/right arrow until **Send Forward** appear and press **OK**.
7. Press the left/right arrow until **On** appear and press **OK**.
8. Enter your email address and press **OK**.
9. Enter the email address to which faxes are to be sent and press **OK**.
10. Press **Stop/Clear** to return to ready mode.  
Subsequent sent faxes will be forwarded to the specified email address.


## Forwarding a received fax to other destination by an email

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Email** appear and press **OK**.
6. Press the left/right arrow until **Rcv. Forward** appear and press **OK**.
7. Press the left/right arrow until **Forward** appear and press **OK**.  
To set the machine to print out a fax when fax forwarding has been completed, select **Forward & Print**.
8. Enter your email address and press **OK**.
9. Enter the email address to which faxes are to be sent and press **OK**.
10. Press **Stop/Clear** to return to ready mode.  
Subsequent received faxes will be forwarded to the specified email address.

## Forwarding a sent fax to other destination by a server


1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Server** appear and press **OK**.
6. Press the left/right arrow until **Send Forward** appear and press **OK**.
7. Press the left/right arrow until **On** appear and press **OK**.
8. Press **Stop/Clear** to return to ready mode.  
Subsequent sent faxes will be forwarded to the specified server.

## Forwarding a received fax to other destination by server

1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Feature** appear and press **OK**.
4. Press the left/right arrow until **Forward** appear and press **OK**.
5. Press the left/right arrow until **Server** appear and press **OK**.
6. Press the left/right arrow until **Receive Forward** appear and press **OK**.
7. Press the left/right arrow until **Forward** appear and press **OK**.  
To set the machine to print out a fax when fax forwarding has been completed, select **Forward & Print**.
8. Press **Stop/Clear** to return to ready mode.  
Subsequent received faxes will be forwarded to the specified server.

## SETTING UP ADDRESS BOOK


You can set up **Address Book** with the fax numbers you use most frequently. Your machine provides you with the following features for setting up **Address Book**:

-  Before beginning to store fax numbers, make sure that your machine is in Fax mode.


## Speed dial numbers

You can store up to 200 frequently-used fax numbers in speed dial numbers.

### Registering a speed dial number

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **New & Edit** appear and press **OK**.
4. Press the left/right arrow until **Speed Dial** appear and press **OK**.
5. Enter a speed dial number between 0 and 199 and press **OK**.  
If an entry is already stored in the number you choose, the display shows the message to allow you to change it. To start over with another speed dial number, press **Back**.
6. Enter the name you want and press **OK**.  
For details on how to enter alphanumeric characters, see ""Entering characters using the number keypad" on page 44.
7. Enter the fax number you want and press **OK**.
8. Press **Stop/Clear** to return to ready mode.

### Editing speed dial numbers

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **New & Edit** appear and press **OK**.
4. Press the left/right arrow until **Speed Dial** appear and press **OK**.
5. Enter the speed dial number you want to edit and press **OK**.
6. Change the name and press **OK**.
7. Change the fax number and press **OK**.
8. Change the name and press **OK**.
9. Press **Stop/Clear** to return to ready mode.

### Using speed dial numbers

When you are prompted to enter a destination number while sending a fax, enter the speed dial number at which you stored the number you want.


- For a one-digit (0-9) speed dial number, press and hold the corresponding digit button on the number keypad.
- For a two- or three-digit speed dial number, press the first digit button(s) and then hold down the last digit button.

You can also search through memory for an entry by pressing Address Book. (See "Searching Address Book for an entry" on page 76.)

## Group dial numbers


If you frequently send the same document to several destinations, you can group these destinations and set them under a group dial number. You can then use a group dial number to send a document to all of the destinations within the group. You can set up to 100 (0 through 99) group dial numbers using the destination's existing speed dial numbers.

### Registering a group dial number

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **New & Edit** appear and press **OK**.
4. Press the left/right arrow until **Group Dial** appear and press **OK**.
5. Enter a group dial number between 0 and 99 and press **OK**.  
If an entry is already stored in the number you choose, the display shows the message to allow you to change it.

6. Enter the name you want and press **OK**.  
For details on how to enter alphanumeric characters, see "Entering characters using the number keypad" on page 44.
7. Enter the first few letters of the speed dial's name you want.
8. Press the left/right arrow until the name and number you want appears and press **OK**.
9. Press **OK** when **Yes** appears at the **Another No.?** prompt.  
Repeat step 7 to include other speed dial numbers into the group.
10. When you have finished, press the left/right arrow to select **No** at the **Another No.?** prompt and press **OK**.
11. Press **Stop/Clear** to return to ready mode.

### Editing a group dial number

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **New & Edit** appear and press **OK**.
4. Press the left/right arrow until **Group Dial** appear and press **OK**.
5. Enter the group dial number you want to edit and press **OK**.
6. Enter the name you want to edit and press **OK**.
7. Enter the first few letters of the speed dial's name you want to add or delete.
8. Press the left/right arrow until the name and number you want appears and press **OK**.  
If you entered a new speed dial number, **Add?** appears.  
If you enter a speed dial number stored in the group, **Delete?** appears.
9. Press **OK** to add or delete the number.
10. Press **OK** when **Yes** appears to add or delete more numbers and repeat steps 7 and 8.
11. When you have finished, press the left/right arrow to select **No** at the **Another Number?** and press **OK**.
12. Press **Stop/Clear** to return to ready mode.

### Using group dial numbers


To use a group dial entry, you need to search for and select it from memory.

When you are prompted to enter a fax number while sending a fax, press **Address Book**. See below.


### Searching Address Book for an entry

There are two ways to search for a number in memory. You can either scan from A to Z sequentially, or you can search by entering the first letters of the name associated with the number.


#### Searching sequentially through the memory

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **Search & Dial** appear and press **OK**.
4. Press the left/right arrow until **Group Dial** appear and press **OK**.
5. Press the left/right arrow until **All** appear and press **OK**.
6. Press the left/right arrow until the name and number you want appears. You can search upwards or downwards through the entire memory in alphabetical order.

### Searching sequentially through the memory


1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **Search & Dial** appear and press **OK**.
4. Press the left/right arrow until **Group Dial** appear and press **OK**.
5. Press the left/right arrow until **ID** appear and press **OK**.
6. Enter the first few letters of the name you want.
7. Press the left/right arrow until the group dial's name and number you want appears.

### Deleting a Address Book for entry

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **Delete** appear and press **OK**.
4. Press the left/right arrow until the deleting option you want appears and press **OK**.
5. Press the left/right arrow until the searching method you want appears and press **OK**.  
Select **Search All** to search for an entry by scanning through all entries in **Address Book**.  
Select **Search ID** to search for an entry by the first few letters of the name.
6. Press the left/right arrow until the name you want appears and press **OK**.  
Or, enter the first letters. Press the left/right arrow until the name you want appears and press **OK**.
7. Press **OK** when **Yes** appears to confirm the deletion.
8. Press **Stop/Clear** to return to ready mode.


### Printing Address Book

You can check your **Address Book** settings by printing a list.

1. Press  (Fax) on the control panel.
2. Press **Address Book** on the control panel.
3. Press the left/right arrow until **Print** appear and press **OK**.  
The machine begins printing.

## PRINTING SENT FAX REPORT AUTOMATICALLY

You can set the machine to print a report with detailed information about the previous 50 communication operations, including time and dates.


1. Press  (Fax) on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Setup** appear and press **OK**.
4. Press the left/right arrow until **Auto Report** appear and press **OK**.
5. Press the left/right arrow until **On** appear and press **OK**.
6. Press **Stop/Clear** to return to ready mode.

# machine status and advanced feature

This chapter explains how to browse the current status of your machine, and the method of setting for the advanced machine setup. Read this chapter carefully in order to use your machine's diverse features.

**This chapter includes:**

- Fax setup
- Copy setup
- Printing a report

 Some menus may not appear in the display depending on options or models. If so, it is not applicable to your machine.

## FAX SETUP

### Changing the fax setup options

Your machine provides you with various user-selectable options for setting up the fax system. You can change the default settings for your preferences and needs.

To change the fax setup options:

1. Press **Fax**.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Fax Setup** appear and press **OK**.
4. Press the left/right arrow until the fax setup item you want appears and press **OK**.
5. Press the left/right arrow until the option you want appears and press **OK**.
6. Press the left/right arrow until the desired status appears or enter the value for the option you have selected, and press **OK**.
7. If necessary, repeat steps 4 through 6.
8. Press **Stop/Clear** to return to ready mode.

### Sending

OPTION	DESCRIPTION
<b>Redial Times</b>	You can specify the number of redial attempts. If you enter 0, the machine will not redial.
<b>Redial Term</b>	Your machine can automatically redial a remote fax machine if it was busy. You can set an interval between attempts.
<b>Prefix Dial</b>	You can set a prefix of up to five digits. This number dials before any automatic dial number is started. It is useful for accessing a PABX exchange.
<b>ECM Mode</b>	This mode helps with poor line quality and makes sure any faxes you send are sent smoothly to any other ECM-equipped fax machine. Sending a fax using ECM may take more time.

- Clearing memory
- Network
- Menu overview

OPTION	DESCRIPTION
<b>Send Report</b>	You can set your machine to print a confirmation report showing whether a transmission was successful, how many pages were sent, and more. The available options are <b>On</b> , <b>Off</b> , and <b>On-Error</b> , which prints only when a transmission is not successful.
<b>Image TCR</b>	This function allows users to know what fax messages have been sent by showing sent messages in the transmission report. The first page of the message is turned into an image file than is printed on the transmission report so the users can see what messages have been sent. However, you can not use this function when sending fax without saving the data in the memory.
<b>Dial Mode</b>	This setting may not be available depending on your country. If you cannot reach this option, your machine does not support this feature. You can set the dial mode for your machine to either tone dialling or pulse dialling. If you have a public telephone system or a private branch exchnage(PBX) system, you may need to select <b>Pulse</b> . Contact your local telephone company if you are not sure which dial mode to use. If you select <b>Pulse</b> , some phone system features might not be available. It can also take longer to dial a fax or phone number.

### Receiving

OPTION	DESCRIPTION
<b>Receive Mode</b>	You can select the default fax receiving mode. For details on receiving faxes in each mode, see "Changing the receive modes" on page 72.
<b>Ring to Answer</b>	You can specify the number of times the machine rings before answering an incoming call.
<b>Stamp RCV Name</b>	This option allows the machine to automatically print the page number, and the date and time of reception at the bottom of each page of a received fax.



OPTION	DESCRIPTION
<b>RCV Start Code</b>	This code allows you to initiate fax reception from an extension phone plugged into the EXT socket on the back of the machine. If you pick up the extension phone and hear fax tones, enter the code. It is preset to *9* at the factory.
<b>Auto Reduction</b>	When receiving a fax containing pages as long as or longer than the paper loaded in the paper tray, the machine can reduce the size of the original to fit the size of the paper loaded in the machine. Turn on this feature if you want to automatically reduce an incoming page. With this feature set to <b>Off</b> , the machine cannot reduce the original to fit onto one page. The original will be divided and printed in actual size on two or more pages.
<b>Discard Size</b>	When receiving a fax containing pages as long as or longer than the paper in your machine, you can set the machine to discard a specific length from the end of the received fax. The machine will print the received fax on one or more sheets of paper, minus the data that would have been on the specified discard segment. When the received fax contains pages larger than the paper in your machine, and <b>Auto Reduction</b> has been turned on, the machine will reduce the fax to fit on the existing paper, and nothing will be discarded.
<b>Junk Fax Setup</b>	This setting may not be available depending on your country. Using this feature, the system will not accept faxes sent from remote stations whose numbers are stored in the memory as junk fax numbers. This feature is useful for blocking any unwanted faxes. When you turn on this feature, you can access the following options to set junk fax numbers. <ul style="list-style-type: none"> <li>• <b>Add</b>: Allows you to set up to 10 fax numbers.</li> <li>• <b>Delete</b>: Allows you to delete the desired junk fax number. If you select <b>Delete All</b>, Allows you to delete all junk fax numbers.</li> </ul>
<b>DRPD Mode</b>	This mode enables a user to use a single telephone line to answer several different telephone numbers. In this menu, you can set the machine to recognize which ring patterns to answer. For details about this feature, see "Receiving faxes using DRPD mode" on page 73.

## Change Default

OPTION	DESCRIPTION
<b>Resolution</b>	Changing the resolution setting affects the appearance of the received document. <ul style="list-style-type: none"> <li>• <b>Standard</b>: Originals with normal sized characters.</li> <li>• <b>Fine</b>: Originals containing small characters or thin lines or originals printed using a dot-matrix printer.</li> <li>• <b>Super Fine</b>: Originals containing extremely fine detail. <b>Super Fine</b> mode is enabled only if the machine with which you are communicating also supports the <b>Super Fine</b> resolution. <ul style="list-style-type: none"> <li>• For memory transmission, <b>Super Fine</b> mode is not available. The resolution setting is automatically changed to <b>Fine</b>.</li> <li>• When your machine is set to <b>Super Fine</b> resolution and the fax machine with which you are communicating does not support <b>Super Fine</b> resolution, the machine transmits using the highest resolution mode supported by the other fax machine.</li> </ul> </li> <li>• <b>Photo Fax</b>: Originals containing shades of gray or photographs.</li> <li>• <b>Color Fax</b>: Originals with colors. Sending a color fax is enabled only if the machine with which you are communicating supports color fax reception and you send the fax manually. In this mode, memory transmission is not available.</li> </ul>
<b>Darkness</b>	You can select the default contrast mode to fax your originals lighter or darker.

## Auto Report

You can set the machine to print a report with detailed information about the previous 50 communication operations, including time and dates.

For further details, see "Printing sent fax report automatically" on page 76.

## COPY SETUP

### Changing the copy setup options

For copy output, you can set up several options in advance.

1. Press **Copy** on the control panel.
2. Press **Menu** on the control panel.
3. Press the left/right arrow until **Copy Setup** appear and press **OK**.
4. Press the left/right arrow until the copy setup item you want appears and press **OK**.
5. Press the left/right arrow until the setup option you want appears and press **OK**.
6. Press the left/right arrow until the setting you want appears and press **OK**.

7. Repeat steps 4 through 6, as needed.
8. Press **Stop/Clear** to return to ready mode.

## Change Default

OPTION	DESCRIPTION
<b>Copies</b>	You can enter the number of copies using the number keypad.
<b>Copy Collation</b>	You can set the machine to sort the copy job. For further details, see "Deciding the form of copy output" on page 64.
<b>Reduce/Enlarge</b>	Reduces or enlarges the size of a copied image.
<b>Darkness</b>	Adjusts the brightness level to make a copy that is easier to read, when the original contains faint markings and dark images.
<b>Original Type</b>	Improves the copy quality by selecting the document type for the current copy job.


## PRINTING A REPORT

You can print a report on the machine's configuration or font list, etc.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Report** appear and press **OK**.
4. Press the left/right arrow until the report or list you want to print appears and press **OK**.  
To print all reports and lists, select **All Report**.
5. Press **OK** when **Yes** appears to confirm printing.  
The selected information prints out.

OPTION	DESCRIPTION
<b>Configuration</b>	This list shows the status of the user-selectable options. You may print this list to confirm your changes after changing settings.
<b>Phone Book</b>	This list shows all of the fax numbers and email addresses currently stored in the machine's memory.
<b>Send Report</b>	This report shows the fax number, the number of pages, the elapsed time of the job, the communication mode, and the communication results for a particular fax job. You can set up your machine to automatically print a transmission confirmation report after each fax job. (See "Sending" on page 77.)
<b>Sent Report</b>	This report shows information on the faxes and emails you have recently sent. You can set the machine to automatically print this report every 50 communications. (See "Sending" on page 77.)
<b>Fax RCV Report</b>	This report shows information on the faxes you have recently received.


OPTION	DESCRIPTION
<b>Schedule Jobs</b>	This list shows the documents currently stored for delayed faxes along with the starting time and type of each operation.
<b>JunkFax Report</b>	This list shows the fax numbers specified as junk fax numbers. To add or delete numbers to or from this list, access the Junk Fax Setup menu. (See "Receiving" on page 77.)
<b>Network Info.</b>	This list shows information on your machine's network connection and configuration.

 You can also print the machine's status information and browse status with SyncThru™ Web Service. Open the Web browser on your networked computer and type the IP address of your machine. When SyncThru™ Web Service opens, click **Information > Print information**.

## CLEARING MEMORY

You can selectively clear information stored in your machine's memory.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Clear Setting** appear and press **OK**.
4. Press the left/right arrow until the item you want to clear appears and press **OK**.
5. Press **OK** when **Yes** appears to confirm clearing.
6. Repeat steps 4 through 5 to clear another item.
7. Press **Stop/Clear** to return to ready mode.


 Some menus may not appear in the display depending on options or models. If so, it is not applicable to your machine.

OPTION	DESCRIPTION
<b>All settings</b>	Clears all of the data stored in memory and resets all of your settings to the factory default.
<b>Fax Setup</b>	Restores all of the fax options to the factory default.
<b>Copy Setup</b>	Restores all of the copy options to the factory default.
<b>Scan Setup</b>	Restores all of the scan options to the factory default.
<b>System Setup</b>	Restores all of the system options to the factory default.
<b>Network Setup</b>	Restores all of the network options to the factory default.
<b>Phone Book</b>	Clears all of the fax numbers and email address entries stored in memory.
<b>Sent Report</b>	Clears all records of sent faxes and emails.
<b>RCV Report</b>	Clears all records of received faxes.

## NETWORK

You may set up the network with the machine's display screen. Before doing that, you must have the relevant information concerning the type of network protocols and computer system you use. If you are not sure which setting to use, contact your network administrator to configure this machine to the network.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until the setup option you want appears and press **OK**.
4. Press the left/right arrow until the setting you want appears and press **OK**.
5. Repeat steps 3 through 4, as needed.
6. Press **Stop/Clear** to return to ready mode.

OPTION	DESCRIPTION
<b>TCP/IP (IPv4)</b>	Select appropriate protocol and configure parameters to use the network environment.  There are lots of parameters to be set; therefore, if you are not sure, leave as is, or consult the network administrator.
<b>TCP/IP (IPv6)</b>	Selects this option to use the network environment through IPv6. (See "IPv6 Configuration" on page 42.)
<b>Ethernet Speed</b>	Configure the network transmission speed.
<b>Clear Setting</b>	Reverts the network settings to the default values.
<b>Network Info</b>	This list shows information on your machine's network connection and configuration.

## MENU OVERVIEW

The control panel provides access to various menus to set up the machine or use the machine's functions. These menus can be accessed by pressing **Menu**.



Some menus may not appear in the display depending on options or models. If so, it is not applicable to your machine.

ITEMS	OPTION
<b>Fax Feature</b>	<b>Darkness</b> <b>Resolution</b> <b>Multi Send</b> <b>Delay Send</b> <b>Priority Send</b> <b>Forward</b> <b>Secure Receive</b> <b>Add Page</b> <b>Cancel Job</b>
<b>Fax Setup</b>	<b>Sending</b> <b>Redial Times</b> <b>Redial Term</b> <b>Prefix Dial</b> <b>ECM Mode</b> <b>Send Report</b> <b>Image TCR</b> <b>Dial Mode</b> <b>Receiving</b> <b>Receive Mode</b> <b>Ring to Answer</b> <b>Stamp Rcv Name</b> <b>Rcv Start Code</b> <b>Auto Reduction</b> <b>Discard Size</b> <b>Junk Fax Setup</b> <b>DRPD Mode</b> <b>Change Default</b> <b>Resolution</b> <b>Darkness</b> <b>Auto Report</b>
<b>Copy Feature</b>	<b>Reduce/Enlarge</b> <b>Darkness</b> <b>Original Type</b> <b>Layout</b>
<b>Copy Setup</b>	<b>Change Default</b> <b>Copies</b> <b>Copy Collation</b> <b>Reduce/Enlarge</b> <b>Darkness</b> <b>Original Type</b>



ITEMS	OPTION
System Setup	Machine Setup Machine ID Machine Fax No. Date & Time Clock Mode Language Default Mode Power Save Timeout Job Timeout Altitude Adj. Toner Save Paper Setup Paper Size Paper Type Paper Source Wide A4 Sound/Volume Key Sound Alarm Sound Speaker Ringer Reports All Report Configuration Phone Book Send Report Sent Report Rcv Report Schedule Jobs JunkFax Report Network Info. Maintenance CLR Empty Msg Ignore Toner Supplies Life Toner Low Alert Serial Number Paper Stacking Clear Setting All Settings Fax Setup Copy Setup Scan Setup System Setup Network Setup Phone Book Sent Report Rcv Report


ITEMS	OPTION
Network	TCP/IP (IPv4) IPv4 Activate View Host Name Set IP Address Manual DHCP BOOTP Show IP Address TCP/IP (IPv6) IPv6 Activate DHCP v6 Config Router DHCP Address DHCP Off Ethernet Speed Auto 10M Half 10M Full 100M Half 100M Full Clear Settings Network Info.

# management tools

This chapter introduces management tools provided to help you make full use of your machine.

## This chapter includes:

- Introducing useful management tools
- Using SyncThru™ Web Service
- Using the Smart Panel program


 Supported optional devices and features may differ according to your model. Please check your model name.  
(See "Features by Models" on page 25.)

## INTRODUCING USEFUL MANAGEMENT TOOLS

The programs below help you to use your machine conveniently.

- "Using SyncThru™ Web Service" on page 82.
- "Using the Smart Panel program" on page 83.
- "Smarthru" on page 83.
- "Using the Linux Unified Driver Configurator" on page 84.

## USING SYNCTHRU™ WEB SERVICE

 Your SyncThru™ Web Service window that appears in this user's guide may differ depending on the machine in use.

If you have connected your machine to a network and set up TCP/IP network parameters correctly, you can manage the machine via SyncThru™ Web Service, an embedded web server. Use SyncThru™ Web Service to:


- View the machine's device information and check its current status.
- Change TCP/IP parameters and set up other network parameters.
- Change printer preference.
- Set the email notifications advising of the machine's status.
- Get support for using the machine.

### To access SyncThru™ Web Service:

1. Access a web browser, such as Internet Explorer, from Windows.  
Enter the machine IP address (<http://xxx.xxx.xxx.xxx>) in the address field and press the Enter key or click **Go**.
2. Your machine's embedded website opens.

- Smarthru
- Using SetIP program
- Using the Linux Unified Driver Configurator

## SyncThru™ Web Service overview

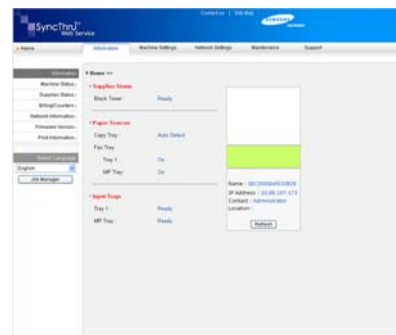

- **Information tab:** This tab gives you general information about your machine. You can check things, such as the machine's IP address, remaining amount of toner, ethernet information, firmware version, and so on. You can also print reports such as an error report and so on.
- **Machine Settings tab:** This tab allows you to set options provided by your machine.
- **Network Settings tab:** This tab allows you to view and change the network environment. You can set things, such as TCP/IP, enabling Ether Talk and so on.
- **Maintenance tab:** This tab allows you to maintain your machine by upgrading firmware and setting security information.
- **Support tab:** This tab allows you to set contact information for sending email. You can also connect to SEC website or download drivers by selecting Link.

### Setting the contact information

Set the machine administrator information and this setting is necessary to use E-mail notification option.

1. Start a web browser, such as Internet Explorer, from Windows.  
Enter the machine IP address (<http://xxx.xxx.xxx.xxx>) in the address field and press the Enter key or click **Go**.
2. Your machine's embedded website opens.
3. Select **Support**.

4. Enter the name of machine administrator, phone number, location or E-mail address..




5. Click **Apply**.

 If the firewall is activated, the E-mail may not be sent successfully. In that case, contact the a network administrator.

## USING THE SMART PANEL PROGRAM

Smart Panel is a program that monitors and informs you of the machine status, and allows you to customize the machine's settings. Smart Panel is installed automatically when you install the machine software.




-  To use this program, you need the following system requirements:
- Windows. Check for windows operating system(s) compatible with your machine. (See "System requirements" on page 32.)
  - Mac OS X 10.3 or higher
  - Linux. Check for Linux systems that are compatible with your machine. (See "System requirements" on page 32.)
  - Internet Explorer version 5.0 or higher for flash animation in HTML Help.

If you need to know the exact model name of your machine, you can check the supplied software CD.


### Understanding Smart Panel

If an error occurs while printing, you can check the error from the Smart Panel.

You can also launch Smart Panel manually. Double-click the Smart Panel icon on the Windows task bar (in Windows), or Notification Area (in Linux). You can also click it on the status bar (in Mac OS X).

Windows		Double-click this icon in Windows.
Macintosh		Click this icon in Mac OS X.
Linux		Click this icon in Linux.



Or, if you are a Windows user, you can launch it from the **Start** menu, select **Programs** or **All Programs** > **Samsung Printers** > **your printer driver name** > **Smart Panel**.

-  • If you have already installed more than one Samsung machine, first select the correct machine model you want in order to access the corresponding Smart Panel.  
Right-click (in Windows or Linux) or click (in Mac OS X) the Smart Panel icon and select your machine.
- The Smart Panel window and its contents shown in this user's guide may differ depending on the machine or operating system in

use.

The Smart Panel program displays the current status of the machine, the level of toner remaining in the toner cartridge(s), and various other types of information. You can also change settings.



<b>1</b>	<b>Toner Level</b>	View the level of toner remaining in the toner cartridge(s). The machine and the number of toner cartridge(s) shown in the above window may differ depending on the machine in use. Some machines do not have this feature.
<b>2</b>	<b>Buy Now</b>	Order replacement toner cartridge(s) online.
<b>3</b>	<b>User's Guide</b>	View User's Guide.  This button changes to <b>Troubleshooting Guide</b> when error occurs. You can directly open troubleshooting section in the user's guide.
<b>4</b>	<b>Printer Setting</b>	Configure various machine settings in the Printer Settings Utility window. Some machines do not have this feature.  If you connect your machine to a network, the SyncThru™ Web Service window appears instead of the Printer Settings Utility window.
<b>5</b>	<b>Driver Setting</b>	Set all of the machine options you need in the <b>Printer Preferences</b> window. This feature is available only for Windows. (See "Opening printing preferences" on page 55.)

### Opening the Troubleshooting Guide

Find solutions for problems by using the **Troubleshooting Guide**.

Right-click (in Windows or Linux) or click (in Mac OS X) the Smart Panel icon and select **Troubleshooting Guide**.

### Changing the Smart Panel Program Settings

Right-click (in Windows or Linux) or click (in Mac OS X) the Smart Panel icon and select **Options**. Select the settings you want from the **Options** window.


## SMARTHRU

The supplied software CD provides you with SmarThru. SmarThru offers you convenient features to use with your machine.

## USING SETIP PROGRAM

This program is for the network IP setting using the MAC address which is the hardware serial number of the network printer card or interface.

It is especially for the network administrator to set several network IPs at the same time.

 You can only use the SetIP program when your machine is connected to a network.

## Windows

The following procedure is based on the Windows XP operating system.

### Installing the program

1. Insert the software CD provided with your machine. When the software CD runs automatically, close the window.
2. From the **Start** menu select **My Computer** and open the X drive. (X represents your CD-ROM drive.)
3. Double click **Application > SetIP**.
4. Double-click **Setup.exe** to install this program.
5. Click **OK**.  
If necessary, select a language from the drop-down list.
6. Follow the instructions in the window to complete the installation.

### Printing out the machine's MAC address

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **Network Info.** appear and press **OK**.  
You can find your machine's MAC address and IP address.

### Setting network values

1. Print the machine's network configuration report to find your machine's MAC address.
2. From the Windows **Start** menu, select **All Programs > Samsung Printers > SetIP > SetIP**.
3. Click to open the TCP/IP configuration window.
4. Enter the network card's MAC address, IP address, subnet mask, default gateway, and then click **Apply**.

 When you enter the MAC address, enter it without a colon(:).

5. The machine prints the network information. Confirm all the settings are correct.
6. Close the SetIP program.

## Macintosh

SetIP program should be automatically installed during the printer driver installation.


### Printing out the machine's MAC address

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **Network Info.** appear and press **OK**.  
You can find your machine's MAC address and IP address.

### Setting network values

If you want to change your network printer IP setting, follow the below instruction.

 If you select **Typical installation for a network printer** during the printer driver installation, the SetIP program automatically runs after the installation. Go to step 4.

1. Print the machine's network configuration report to find your machine's MAC address.
2. Open the **Library** folder > **Printers > Samsung > your printer model name > SetIP**.
3. Double click the **SetIPApplet.html** file.
4. The certificate window appears, click **Trust**.
5. Click to open the TCP/IP configuration window.
6. Enter the network card's MAC address, IP address, subnet mask, default gateway, and then click **Apply**.  
 When you enter the MAC address, enter it without a colon(:).
7. The machine prints the network information. Confirm all the settings are correct.
8. Close the SetIP program.


## Linux

SetIP program should be automatically installed during the printer driver installation.

### Printing out the machine's MAC address

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **Network** appear and press **OK**.
3. Press the left/right arrow until **Network Info.** appear and press **OK**.  
You can find your machine's MAC address and IP address.

### Setting network values

1. Print the machine's network configuration report to find your machine's MAC address.
2. Open the **/opt/Samsung/mfp/share/utlis/**.
3. Double click the **SetIPApplet.html** file.
4. Click to open the TCP/IP configuration window.
5. Enter the network card's MAC address, IP address, subnet mask, default gateway, and then click **Apply**.  
 When you enter the MAC address, enter it without a colon(:).
6. The machine prints the network information. Confirm all the settings are correct.
7. Close the SetIP program.

## USING THE LINUX UNIFIED DRIVER CONFIGURATOR

The supplied software CD provides you with the Linux Unified Driver package for using your machine with a Linux computer.


Unified Driver Configurator is a tool primarily intended for configuring machine devices. Since a machine device combines the printer and scanner, the Linux Unified Driver Configurator provides options logically grouped for printer and scanner functions. There is also a special machine port option responsible for the regulation of access to a machine printer and scanner via a single I/O channel. Also, you can monitor a number of machine devices via fast ECP parallel ports and USB simultaneously.

After the driver is installed on your Linux system, the Linux Unified Driver Configurator icon will automatically be created on your desktop.

### Opening the Unified Driver Configurator

1. Double-click the **Unified Driver Configurator** on the desktop.  
You can also click the **Startup** Menu icon and select **Samsung Unified Driver > Unified Driver Configurator**.

2. Click each button on the left to switch to the corresponding configuration window.

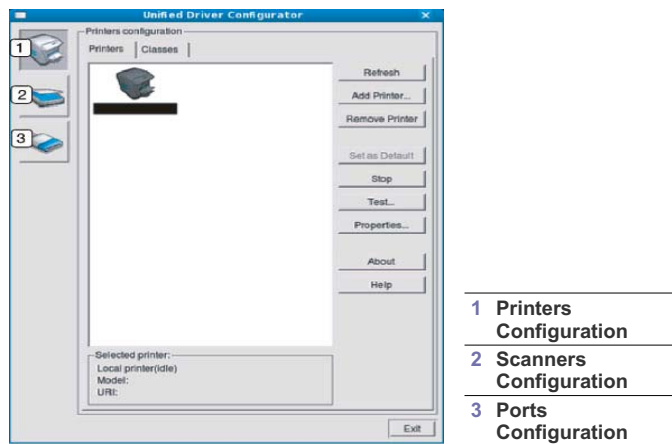

To use the on screen help, click **Help**.


3. After changing the configurations, click **Exit** to close the Unified Driver Configurator window.

### Printers configuration

Printers configuration has the two tabs: **Printers** and **Classes**.

#### Printers tab

View the current system's printer configuration by clicking on the machine icon button on the left side of the Unified Driver Configurator window.

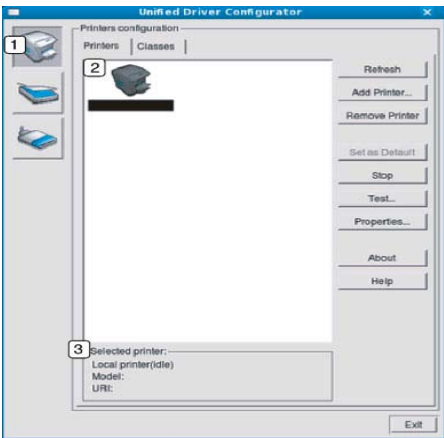


1	Switches to <b>Printers configuration</b> .
2	Shows all of the installed machine.
3	Shows the status, model name and URI of your machine.

The printer control buttons are, as follows:

- **Refresh**: Renews the available machines list.
- **Add Printer**: Allows you to add a new machines.
- **Remove Printer**: Removes the selected machine.
- **Set as Default**: Sets the current selected machine as a default machine.
- **Stop/Start**: Stops/starts the machine.
- **Test**: Allows you to print a test page to ensure the machine is working properly.
- **Properties**: Allows you to view and change the printer properties.

### Classes tab


The Classes tab shows a list of available machine classes.

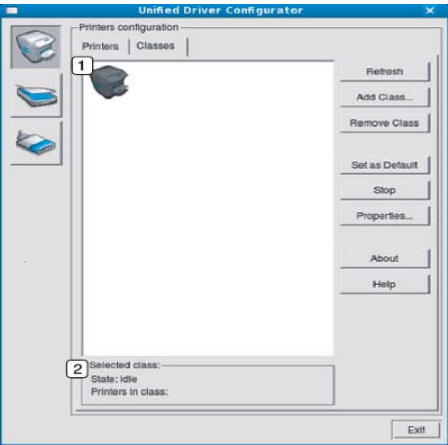

1	Shows all of the machine classes.
2	Shows the status of the class and the number of machines in the class. <ul style="list-style-type: none"><li>• <b>Refresh</b>: Renews the classes list.</li><li>• <b>Add Class</b>: Allows you to add a new machine class.</li><li>• <b>Remove Class</b>: Removes the selected machine class.</li></ul>

Scanners configuration

In this window, you can monitor the activity of scanner devices, view a list of installed Samsung machine devices, change device properties, and scan images.

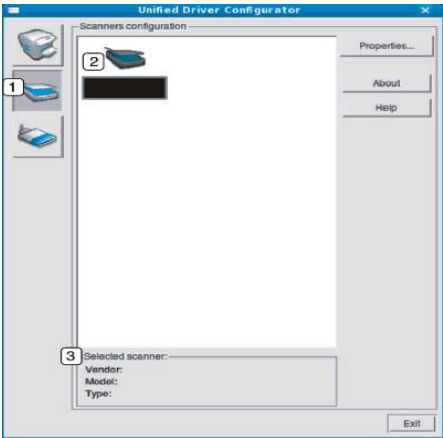


- |   |  |
|---|--|
| 1 | Switches to <b>Scanners configuration</b> .            |
| 2 | Shows all of the installed scanners.                   |
| 3 | Shows the vendor, model name and type of your scanner. |

- **Properties:** Allows you to change the scan properties and scan a document.

Ports configuration

In this window, you can view the list of available ports, check the status of each port and release a port that is stalled in a busy state when its owner has terminated the job for any reason.

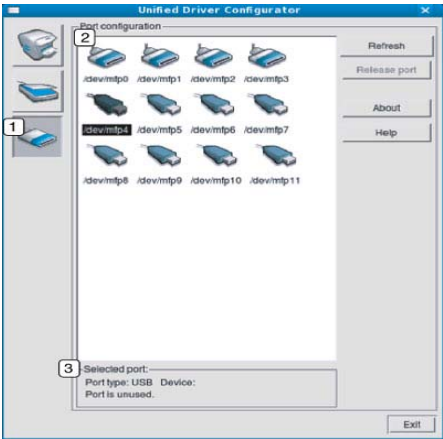

- |   |  |
|---|--|
| 1 | Switches to <b>Ports configuration</b> . |
| 2 | Shows all of the available ports.        |

- |   |   |
|---|---|
| 3 | Shows the port type, device connected to the port, and status |
|---|---|
- **Refresh:** Renews the available ports list.
  - **Release port:** Releases the selected port.

Sharing Ports Between Printers and Scanners

Your machine may be connected to a host computer via a parallel port or USB port. Since the machine device contains more than one device (printer and scanner), it is necessary to organize proper access of "consumer" applications to these devices via the single I/O port.

The Unified Linux Driver package provides an appropriate port sharing mechanism that is used by Samsung printer and scanner drivers. The drivers talk to their devices via so-called machine ports. The current status of any machine port can be viewed via the **Ports configuration**. The port sharing prevents you from accessing one functional block of the machine device, while another block is in use.

When you install a new machine device onto your system, it is strongly recommended you do this with the assistance of an Unified Driver Configurator. In this case you will be asked to choose I/O port for the new device. This choice will provide the most suitable configuration for machine's functionality. For machine scanners, I/O ports are being chosen by scanner drivers automatically, so proper settings are applied by default.

# maintenance

This chapter provides information for maintaining your machine and the toner cartridge.


**This chapter includes:**

- Printing a machine report
- Finding the serial number
- Cleaning a machine
- Storing the Toner cartridge
- Tips for moving & storing your machine

## PRINTING A MACHINE REPORT

You can print the machine's information and job report.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Report** appear and press **OK**.
4. Press the left/right arrow until the report or list you want to print appears.press **OK**.  
To print all reports and lists, select **All Report**.
5. Press the left/right arrow to appear **Yes** at the **Print?** prompt and press **OK**.

 You can use SyncThru™ Web Service to print the machine's configuration or browse the status. Open the web browser in the networked computer and type the machine's IP address. When SyncThru™ Web Service opens, click **Information > Print Information**.

## MONITORING THE SUPPLIES LIFE

If you experience frequent paper jams or printing problems, check the number of pages the machine has printed. Replace the corresponding parts, if necessary.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Maintenance** appear and press **OK**.
4. Press the left/right arrow until **Supplies Life** appear and press **OK**.
5. Press the left/right arrow until the item you want appears and press **OK**.
  - **Supplies Info:** Prints the supply information page.
  - **Total:** Displays the total number of pages printed.
  - **ADF Scan:** Displays the number of pages scanned using the ADF.
  - **Platen Scan:** Displays the number of pages scanned using the scanner glass.
6. Press **Stop/Clear** to return to ready mode.

## USING TONER LOW ALERT

If the amount of toner in the cartridge is low, The **Status** LED blinks red. You can set the option for this LED to blink or not.

1. Ensure that you have installed the printer driver with the provided Printer Software CD.
2. Double-click the **Smart Panel** icon on the Windows task bar (or Notification Area in Linux). You can also click **Smart Panel** on the status bar in Mac OS X.

3. Click **Printer Setting**.
4. Click **Setting > Toner Low Alert**. Select the appropriate setting and then click **Apply**.

## FINDING THE SERIAL NUMBER

When you call for service or register as a user on the Samsung website, the machine's serial number by taking the following steps:

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Maintenance** appear and press **OK**.
4. Press the left/right arrow until **Serial Number** appear and press **OK**.
5. Check your machine's serial number.
6. Press **Stop/Clear** to return to ready mode.

## CLEANING A MACHINE

If printing quality problems occur or if you use your machine in a dusty environment, you need to clean your machine regularly to keep the best printing condition and use your machine longer.



- Cleaning the cabinet of the machine with cleaning materials containing large amounts of alcohol, solvent, or other strong substances can discolor or distort the cabinet.
- If your machine or the surrounding area is contaminated with toner, we recommend you use cloth or tissue dampened with water to clean it. If you use a vacuum cleaner, toner blows in the air and might be harmful to you.

### Cleaning the outside


Clean the machine cabinet with a soft, lint-free cloth. Dampen the cloth slightly with water, but be careful not to let any water drip onto or into the machine.

### Cleaning the inside

During the printing process, paper, toner, and dust particles can accumulate inside the machine. This buildup can cause print quality problems, such as toner specks or smearing. Cleaning the inside of the machine clears and reduces these problems.




1. Turn the machine off and unplug the power cord. Wait for the machine to cool down.
2. Open the front door and pull the toner cartridge out. Set it on a clean flat surface

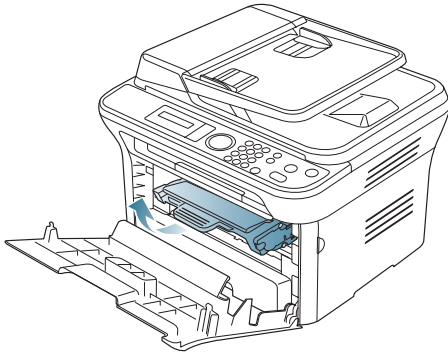


- To prevent damage to the toner cartridge, do not expose it to light for more than a few minutes. Cover it with a piece of paper, if necessary.
- Do not touch the green surface underside of the toner cartridge. Use the handle on the cartridge to avoid touching this area.

3. With a dry, lint-free cloth, wipe away any dust and spilled toner from the toner cartridge area.

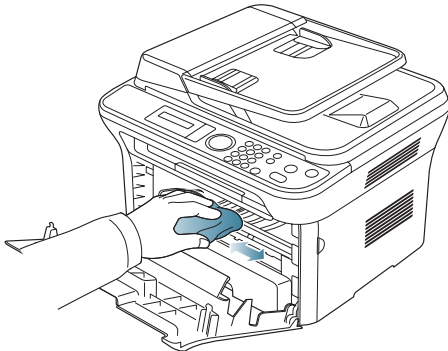

While cleaning the inside of the machine, be careful not to damage the transfer roller or any other inside parts. Do not use solvents such as benzene or thinner to clean. Printing quality problems can occur and cause damage to the machine.

4. Locate the long strip of glass (LSU) inside the top of the cartridge compartment and gently clean the glass with a swab.

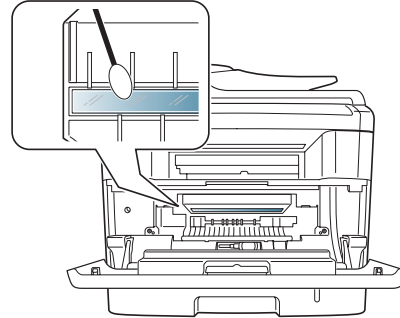


5. Reinsert the toner cartridge and close the front door.
6. Plug in the power cord and turn the machine on.

### Cleaning the scan unit

Keeping the scan unit clean helps ensure the best possible copies. We suggest that you clean the scan unit at the start of each day and during the day, as needed.

1. Slightly dampen a soft, lint-free cloth or paper towel with water.
2. Open the scanner lid.
3. Wipe the surface of the scanner glass and the document feeder glass until it is clean and dry.

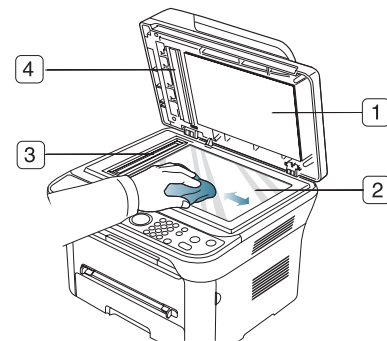

- |   |                       |
|---|-----------------------|
| 1 | Scanner lid           |
| 2 | Scanner glass         |
| 3 | Document feeder glass |
| 4 | White sheet           |

4. Wipe the underside of the scanner lid and white sheet until it is clean and dry.
5. Close the scanner lid.

### STORING THE TONER CARTRIDGE

Toner cartridges contain components that are sensitive to light, temperature, and humidity. Samsung suggests users follow the recommendations to ensure the optimum performance, highest quality, and longest life from your new Samsung toner cartridge.

Store this cartridge in the same environment as the printer it will be used in; this should be in controlled office temperature and humidity conditions. The toner cartridge should remain in its original, unopened package until installation – If original packaging is not available, cover the top opening of the cartridge with paper and store in a dark cabinet.



Opening the cartridge package prior to use dramatically shortens its useful shelf and operating life. Do not store on the floor. If the toner cartridge is removed from the printer, always store the cartridge:

- Inside the protective bag from the original package.
- Correct side up in a horizontal position (not standing on end).
- Do not store consumables in;
  - Temperature greater than 40°C (104°F).
  - Humidity range less than 20% and not greater than 80%.
  - An environment with extreme changes in humidity or temperature.
  - Direct sunlight or room light.
  - Dusty places.
  - A car for a long period of time.
  - An environment where corrosive gases are present.
  - An environment with salty air.

### Handling instructions

- Do not touch the surface of the photosensitive drum in the cartridge.
- Do not expose the cartridge to unnecessary vibrations or shock.
- Never manually rotate the drum, especially in the reverse direction; this can cause internal damage and toner spillage.

### Use of non-Samsung and refilled toner cartridge

Samsung Electronics does not recommend or approve the use of non-Samsung brand toner cartridges in your printer including generic, store brand, refilled, or remanufactured toner cartridges.



Samsung's printer warranty does not cover damage to the machine caused by the use of a refilled, remanufactured, or non-Samsung brand toner cartridge.

### Estimated cartridge life

Estimated cartridge life (the life of the toner cartridge yield) depends on the amount of toner that print jobs require. The actual print-out number may vary depending on the print density of the pages you print on, operating environment, printing interval, media type, and/or media size. For example, if you print a lot of graphics, the consumption of the toner is high and you may need to change the cartridge more often.

### TIPS FOR MOVING & STORING YOUR MACHINE

- When moving the machine, do not tilt or turn it upside down. Otherwise, the inside of the machine may be contaminated by toner, which can cause damage to the machine or bad print quality.
- When moving the machine, make sure at least two people are holding the machine securely.

# troubleshooting

This chapter gives helpful information for what to do if you encounter an error.

## This chapter includes:

- Redistributing toner
- Clearing original document jams
- Tips for avoiding paper jams
- Clearing paper jams
- Understanding display messages
- Solving other problems


## REDISTRIBUTING TONER

When the toner cartridge is near the end of its life:


- White streaks or light printing occurs.
- **Toner Low** appears on the display.
- The **Status** LED blinks red.


If this happens, you can temporarily improve print quality by redistributing the remaining toner in the cartridge. In some cases, white streaks or light printing will still occur even after you have redistributed the toner.


1. Open the front door.
2. Pull the toner cartridge out.

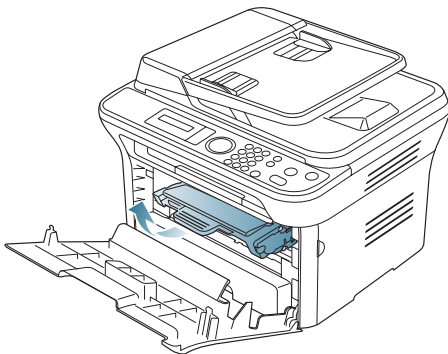

3. Thoroughly roll the cartridge five or six times to distribute the toner evenly inside the cartridge.

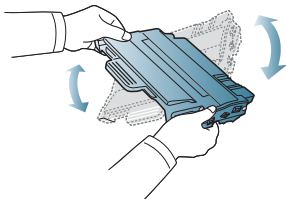


 If toner gets on your clothing, wipe it off with a dry cloth and wash clothing in cold water. Hot water sets toner into fabric.

 Do not touch the green underside of the toner cartridge. Use the handle on the cartridge to avoid touching this area.

4. Hold the toner cartridge by the handle and slowly insert the cartridge into the opening in the machine.  
Tabs on the sides of the cartridge and corresponding grooves within the


machine will guide the cartridge into the correct position until it locks into place completely.

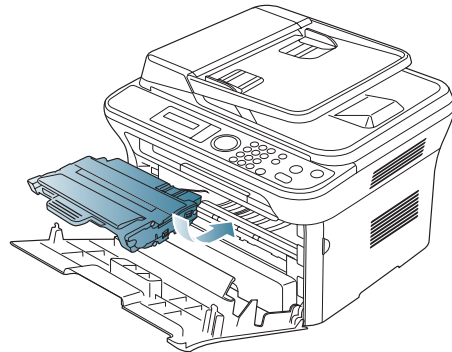


5. Close the front door. Ensure that the cover is securely closed.


## CLEARING ORIGINAL DOCUMENT JAMS

When an original jams while passing through the document feeder, a warning message appears on the display screen.


 To avoid tearing the document, remove the jammed document slowly and gently.


 To prevent document jams, use the scanner glass for thick, thin, or mixed paper-type originals.

1. Remove any remaining pages from the document feeder.
2. Open the document feeder cover.

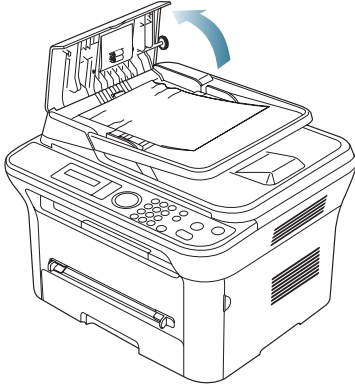


3. Gently remove the jammed paper from the document feeder.

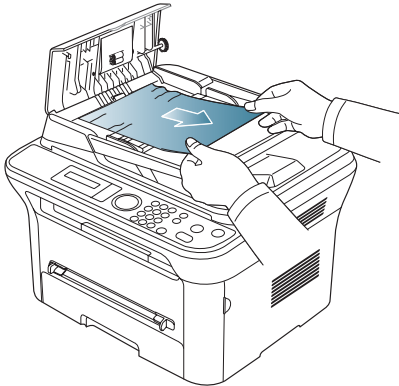


 If you see no paper in this area, go to step 5.

4. Close the document feeder cover. Reload the pages you removed, if any, in the document feeder.

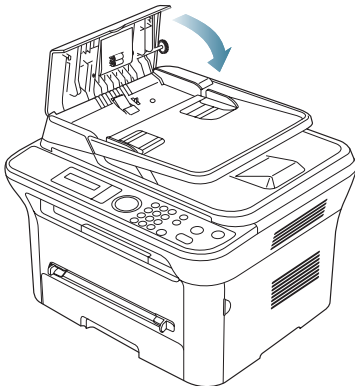

5. Open the scanner lid.
6. Seize the misfeed paper, and remove the paper from the feed area by carefully pulling it to the right using both hands.

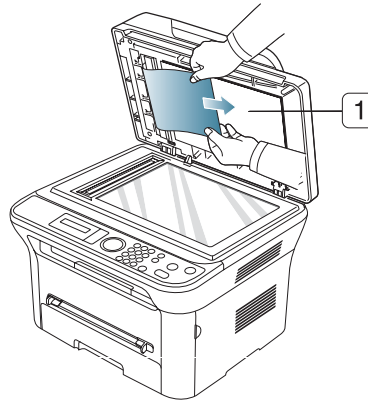


**1 scanner lid**


7. Close the scanner lid. Load the removed pages back into the document feeder.


## TIPS FOR AVOIDING PAPER CURLS

1. Open the rear door.
2. Pull down the pressure lever on each side.

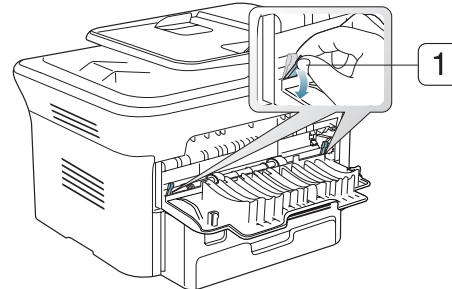

**1 Pressure lever**

 -  Keep the rear cover opened during printing. Only use when the printout has more than 20 mm curl.



## TIPS FOR AVOIDING PAPER JAMS


By selecting the correct media types, most paper jams can be avoided. When a paper jam occurs, refer to the next guidelines.

- Ensure that the adjustable guides are positioned correctly. (See "Loading paper in the tray" on page 49.)
- Do not overload the tray. Ensure that the paper level is below the paper capacity mark on the inside of the tray.
- Do not remove paper from the tray while your machine is printing.
- Flex, fan, and straighten paper before loading.
- Do not use creased, damp, or highly curled paper.


- Do not mix paper types in a tray.
- Use only recommended print media. (See "Setting the paper size and type" on page 52.)
- Ensure that the recommended side of the print media is facing down in the tray, or facing up in the manual tray.

## CLEARING PAPER JAMS


When a paper jam occurs, a warning message appears on the display. To resume printing after clearing paper jams, you must open and close the front door.

 To avoid tearing the paper, pull the jammed paper out slowly and gently. Follow the instructions in the following sections to clear the jam.


### In tray 1

 Click this link to open an animation about clearing a jam.

1. Open and close the front door. The jammed paper is automatically ejected from the machine.  
If the paper does not exit, go to the next step.
2. Pull out tray 1 .

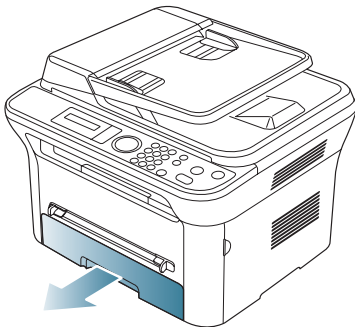


3. Remove the jammed paper by gently pulling it straight out.

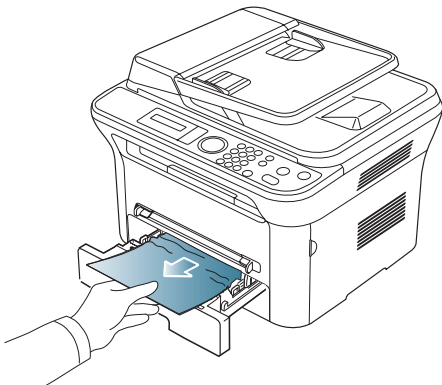


If the paper does not move when you pull, or if you do not see the paper in this area, check the fuser area around the toner cartridge. (See "Inside the machine" on page 92.)

4. Insert tray 1 back into the machine until it snaps into place. Printing automatically resumes.

### In the manual tray


 Click this link to open an animation about clearing a jam.


1. If the paper is not feeding properly, pull the paper out of the machine.

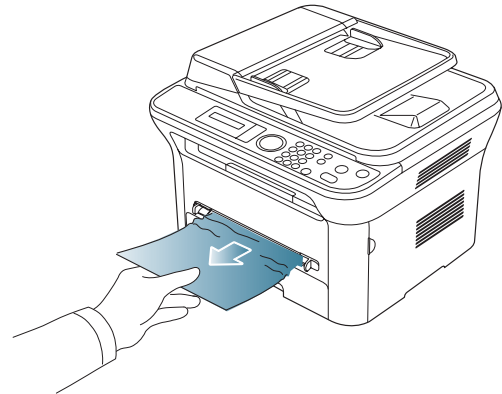


2. Open and close the front door to resume printing.

### Inside the machine


 Click this link to open an animation about clearing a jam.

 The fuser area is hot. Take care when removing paper from the machine.

1. Open the front door and pull the toner cartridge out, lightly pushing it down.

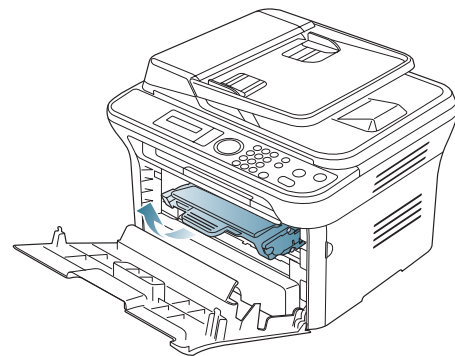


2. Remove the jammed paper by gently pulling it straight out.

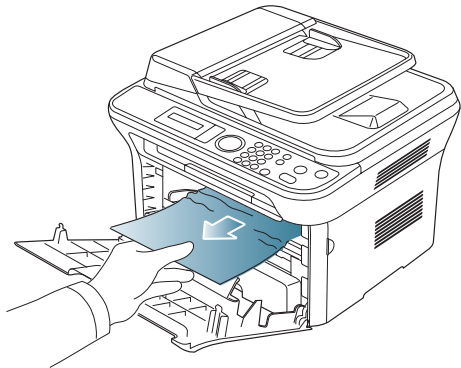


3. Replace the toner cartridge and close the front door. Printing automatically resumes.

### In exit area


 Click this link to open an animation about clearing a jam.

1. Open and close the front door. The jammed paper is automatically ejected from the machine.  
If you do not see the jammed paper, go to next step.
2. Gently pull the paper out of the output tray.

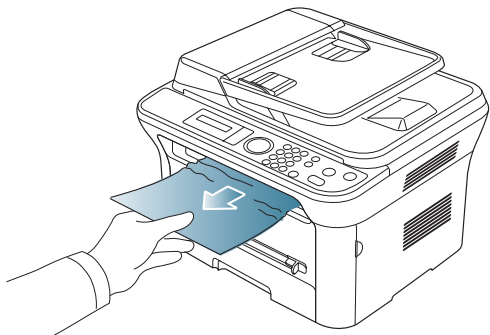

If you do not see the jammed paper or if there is any resistance when you pull, stop and go to the next step.

3. Open the rear door.
4. Pull the pressure levers down and remove the paper.

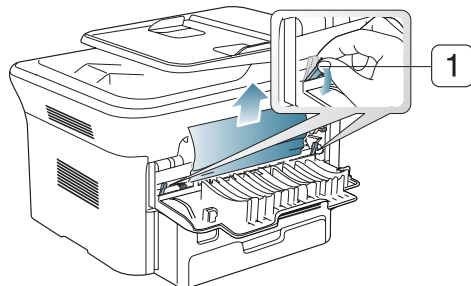

**1** Pressure lever

5. Return the pressure levers to their original position.
6. Close the rear door.
7. Open and close front door, printing automatically resumes.

## UNDERSTANDING DISPLAY MESSAGES

Messages appear on the control panel display to indicate the machine's status or errors. Refer to the tables below to understand the messages' and their meaning, and correct the problem, if necessary.

### Checking display messages



- If a message is not in the table, reboot the power and try the printing job again. If the problem persists, call for service.
- When you call for service, provide the service representative with the contents of display message.
- Some messages may not appear in the display depending on options or models.

## SOLVING OTHER PROBLEMS

The following chart lists some conditions that may occur and the recommended solutions. Follow the suggested solutions until the problem is corrected. If the problem persists, call for service.

### Paper feeding problems


CONDITION	SUGGESTED SOLUTIONS
<b>Paper jams during printing.</b>	Clear the paper jam. (See "Clearing paper jams" on page 92.)
<b>Paper sticks together.</b>	<ul style="list-style-type: none"><li>• Check the maximum paper capacity of the tray. (See "Print media specifications" on page 109.)</li><li>• Make sure that you are using the correct type of paper. (See "Print media specifications" on page 109.)</li><li>• Remove paper from the tray and flex or fan the paper.</li><li>• Humid conditions may cause some paper to stick together.</li></ul>
<b>Multiple sheets of paper do not feed.</b>	Different types of paper may be stacked in the tray. Load paper of only one type, size, and weight.
<b>Paper does not feed into the machine.</b>	<ul style="list-style-type: none"><li>• Remove any obstructions from inside the machine.</li><li>• Paper has not been loaded correctly. Remove paper from the tray and reload it correctly.</li><li>• There is too much paper in the tray. Remove excess paper from the tray.</li><li>• The paper is too thick. Use only paper that meets the specifications required by the machine. (See "Print media specifications" on page 109.)</li><li>• If an original does not feed into the machine, the document feeder rubber pad may require to be replaced. Contact a service representative.</li></ul>
<b>The paper keeps jamming.</b>	<ul style="list-style-type: none"><li>• There is too much paper in the tray. Remove excess paper from the tray. If you are printing on special materials, use the manual tray.</li><li>• An incorrect type of paper is being used. Use only paper that meets the specifications required by the machine. (See "Print media specifications" on page 109.)</li><li>• There may be debris inside the machine. Open the front door and remove any debris.</li><li>• If an original does not feed into the machine, the document feeder rubber pad may need to be replaced. Contact a service representative.</li></ul>
<b>Transparencies stick together in the paper exit.</b>	Use only transparencies specifically designed for laser printers. Remove each transparency as it exits from the machine.
<b>Envelopes skew or fail to feed correctly.</b>	Ensure that the paper guides are against both sides of the envelopes.

## Printing problems

CONDITION	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
<b>The machine does not print.</b>	The machine is not receiving power.	Check the power cord connections.
	The machine is not selected as the default machine.	Select your machine as your default machine in your Windows.
	Check the machine for the following: <ul style="list-style-type: none"> <li>The front door is not closed. Close the front door.</li> <li>Paper is jammed. Clear the paper jam. (See "Clearing paper jams" on page 92.)</li> <li>No paper is loaded. Load paper. (See "Loading paper in the tray" on page 49.)</li> <li>The toner cartridge is not installed. Install the toner cartridge.</li> </ul> If a system error occurs, contact your service representative.	
	The connection cable between the computer and the machine is not connected properly.	Disconnect the machine cable and reconnect it.
	The connection cable between the computer and the machine is defective.	If possible, attach the cable to another computer that is working properly and print a job. You can also try using a different machine cable.
	The port setting is incorrect.	Check the Windows printer setting to make sure that the print job is sent to the correct port. If the computer has more than one port, make sure that the machine is attached to the correct one.
	The machine may be configured incorrectly.	Check the <b>Printing Preferences</b> to ensure that all of the print settings are correct. . (See "Opening printing preferences" on page 55.)
	The printer driver may be incorrectly installed.	Repair the machine software. (See "Installing USB connected machine's driver" on page 33, "Installing wired network or USB connected machine's driver" on page 39.)
	The machine is malfunctioning.	Check the display message on the control panel to see if the machine is indicating a system error. Contact a service representative.


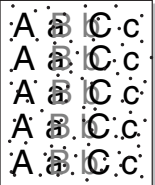
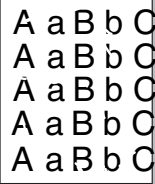
CONDITION	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
<b>The machine does not print.</b>	The document size is so big that the hard disk space of the computer is insufficient to access the print job.	Get more hard disk space and print the document again.
	The output tray is full.	Once the paper is removed from the output tray, the machine resumes printing.
<b>The machine selects print materials from the wrong paper source.</b>	The paper option that was selected in the <b>Printing Preferences</b> may be incorrect.	For many software applications, the paper source selection is found under the Paper tab within the <b>Printing Preferences</b> . Select the correct paper source. See the printer driver help screen. (See "Opening printing preferences" on page 55.)
<b>A print job is extremely slow.</b>	The job may be very complex.	Reduce the complexity of the page or try adjusting the print quality settings.
<b>Half the page is blank.</b>	The page orientation setting may be incorrect.	Change the page orientation in your application. See the printer driver help screen.
	The paper size and the paper size settings do not match.	Ensure that the paper size in the printer driver settings matches the paper in the tray. Or, ensure that the paper size in the printer driver settings matches the paper selection in the software application settings you use.
<b>The machine prints, but the text is wrong, garbled, or incomplete.</b>	The machine cable is loose or defective.	Disconnect the machine cable and reconnect. Try a print job that you have already printed successfully. If possible, attach the cable and the machine to another computer that you know works and try a print job. Finally, try a new machine cable.
	The wrong printer driver was selected.	Check the application's printer selection menu to ensure that your machine is selected.
	The software application is malfunctioning.	Try printing a job from another application.
	The operating system is malfunctioning.	Exit Windows and reboot the computer. Turn the machine off and back on again.








CONDITION	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
<b>Pages print, but they are blank.</b>	The toner cartridge is defective or out of toner.	Redistribute the toner, if necessary. If necessary, replace the toner cartridge.
	The file may have blank pages.	Check the file to ensure that it does not contain blank pages.
	Some parts, such as the controller or the board, may be defective.	Contact a service representative.
<b>The machine does not print PDF file correctly. Some parts of graphics, text, or illustrations are missing.</b>	Incompatibility between the PDF file and the Acrobat products.	Printing the PDF file as an image may enable the file to print. Turn on <b>Print As Image</b> from the Acrobat printing options.  It will take longer to print when you print a PDF file as an image.
<b>The print quality of photos is not good. Images are not clear.</b>	The resolution of the photo is very low.	Reduce the photo size. If you increase the photo size in the software application, the resolution will be reduced.
<b>Before printing, the machine emits vapor near the output tray.</b>	Using damp paper can cause vapor during printing.	This is not a problem. Just keep printing.
<b>The machine does not print special-sized paper, such as billing paper.</b>	Paper size and paper size setting do not match.	Set the correct paper size in the <b>Custom Paper Size Settings</b> in the <b>Paper</b> tab in the <b>Printing Preferences</b> . (See "Opening printing preferences" on page 55.)





## Printing quality problems




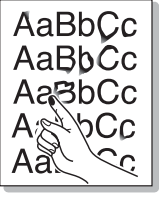
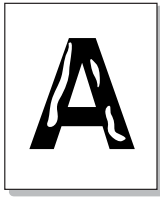
If the inside of the machine is dirty or paper has been loaded improperly, there might be a reduction in print quality. See the table below to clear the problem.



CONDITION	SUGGESTED SOLUTIONS
<b>Light or faded print</b> 	<ul style="list-style-type: none"> <li>If a vertical white streak or faded area appears on the page, the toner supply is low. You may be able to temporarily extend the toner cartridge life. (See "Redistributing toner" on page 90.) If this does not improve the print quality, install a new toner cartridge.</li> <li>The paper may not meet paper specifications; for example, the paper may be too moist or rough. (See "Print media specifications" on page 109.)</li> <li>If the entire page is light, the print resolution setting is too low or the toner save mode is on. Adjust the print resolution and turn the toner save mode off. See the help screen of the printer driver.</li> <li>A combination of faded or smeared defects may indicate that the toner cartridge needs cleaning. (See "Cleaning the inside" on page 87.)</li> <li>The surface of the LSU part inside the machine may be dirty. (See "Cleaning the inside" on page 87.)</li> </ul>
<b>Toner specks</b> 	<ul style="list-style-type: none"> <li>The paper may not meet specifications; for example, the paper may be too moist or rough. (See "Print media specifications" on page 109.)</li> <li>The transfer roller may be dirty. Clean the inside of your machine. Contact a service representative.</li> <li>The paper path may need cleaning. Contact a service representative.</li> </ul>
<b>Dropouts</b> 	<p>If faded areas, generally rounded, occur randomly on the page:</p> <ul style="list-style-type: none"> <li>A single sheet of paper may be defective. Try reprinting the job.</li> <li>The moisture content of the paper is uneven or the paper has moist spots on its surface. Try a different brand of paper. (See "Print media specifications" on page 109.)</li> <li>The paper lot is bad. The manufacturing processes can cause some areas to reject toner. Try a different kind or brand of paper.</li> <li>Change the printer option and try again. Go to <b>Printing Preferences</b>, click <b>Paper</b> tab, and set type to <b>Thick</b>. (See "Opening printing preferences" on page 55.)</li> <li>If these steps do not correct the problem, contact a service representative.</li> </ul>

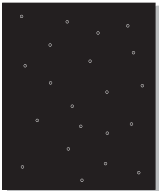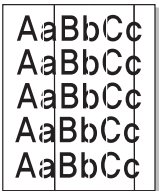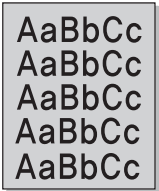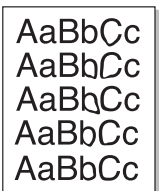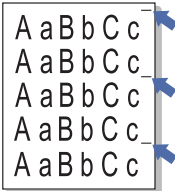

CONDITION	SUGGESTED SOLUTIONS
<b>White Spots</b> 	<p>If white spots appear on the page:</p> <ul style="list-style-type: none"> <li>The paper is too rough and a lot of dirt from a paper falls to the inner devices within the machine, so the transfer roller may be dirty. Clean the inside of your machine. (See "Cleaning the inside" on page 87.)</li> <li>The paper path may need cleaning. (See "Cleaning the inside" on page 87.)</li> </ul>
<b>Vertical lines</b> 	<p>If black vertical streaks appear on the page:</p> <ul style="list-style-type: none"> <li>The surface (drum part) of the toner cartridge inside the machine has probably been scratched. Remove the toner cartridge and install a new one. (See "Replacing the toner cartridge" on page 103.)</li> </ul> <p>If white vertical streaks appear on the page:</p> <ul style="list-style-type: none"> <li>The surface of the LSU part inside the machine may be dirty. (See "Cleaning the inside" on page 87.)</li> </ul>
<b>Black background</b> 	<p>If the amount of background shading becomes unacceptable:</p> <ul style="list-style-type: none"> <li>Change to a lighter weight paper. (See "Print media specifications" on page 109.)</li> <li>Check the environmental conditions: very dry conditions or a high level of humidity (higher than 80% RH) can increase the amount of background shading.</li> <li>Remove the old toner cartridge and, install a new one. (See "Replacing the toner cartridge" on page 103.)</li> </ul>
<b>Toner smear</b> 	<p>If toner smears on the page:</p> <ul style="list-style-type: none"> <li>Clean the inside of the machine. (See "Cleaning the inside" on page 87.)</li> <li>Check the paper type and quality. (See "Print media specifications" on page 109.)</li> <li>Remove the toner cartridge and then, install a new one. (See "Replacing the toner cartridge" on page 103.)</li> </ul>
<b>Vertical repetitive defects</b> 	<p>If marks repeatedly appear on the printed side of the page at even intervals:</p> <ul style="list-style-type: none"> <li>The toner cartridge may be damaged. If you still have the same problem, remove the toner cartridge and, install a new one. (See "Replacing the toner cartridge" on page 103.)</li> <li>Parts of the machine may have toner on them. If the defects occur on the back of the page, the problem will likely correct itself after a few more pages.</li> <li>The fusing assembly may be damaged. Contact a service representative.</li> </ul>

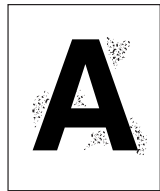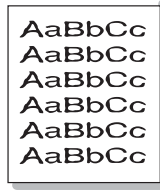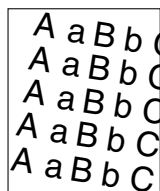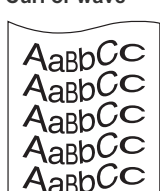CONDITION	SUGGESTED SOLUTIONS
<b>Background scatter</b> 	<p>Background scatter results from bits of toner randomly distributed on the printed page.</p> <ul style="list-style-type: none"> <li>The paper may be too damp. Try printing with a different batch of paper. Do not open packages of paper until necessary so that the paper does not absorb too much moisture.</li> <li>If background scatter occurs on an envelope, change the printing layout to avoid printing over areas that have overlapping seams on the reverse side. Printing on seams can cause problems.</li> <li>If background scatter covers the entire surface area of a printed page, adjust the print resolution through your software application or in <b>Printing Preferences</b>. (See "Opening printing preferences" on page 55.)</li> </ul>
<b>Misformed characters</b> 	<ul style="list-style-type: none"> <li>If characters are improperly formed and producing hollow images, the paper stock may be too slick. Try different paper. (See "Print media specifications" on page 109.)</li> <li>If characters are improperly formed and producing a wavy effect, the scanner unit may need service. (See "Cleaning the scan unit" on page 88.)</li> </ul>
<b>Page skew</b> 	<ul style="list-style-type: none"> <li>Ensure that the paper is loaded properly.</li> <li>Check the paper type and quality. (See "Print media specifications" on page 109.)</li> <li>Ensure that the guides are not too tight or too loose against the paper stack.</li> </ul>
<b>Curl or wave</b> 	<ul style="list-style-type: none"> <li>Ensure that the paper is loaded properly.</li> <li>Check the paper type and quality. Both high temperature and humidity can cause paper curl. (See "Print media specifications" on page 109.)</li> <li>Turn the stack of paper over in the tray. Also try rotating the paper 180° in the tray.</li> </ul>

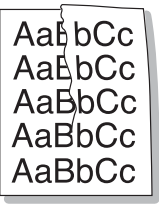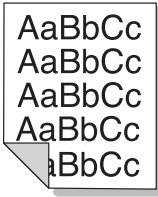CONDITION	SUGGESTED SOLUTIONS
<b>Wrinkles or creases</b> 	<ul style="list-style-type: none"> <li>Ensure that the paper is loaded properly.</li> <li>Check the paper type and quality. (See "Print media specifications" on page 109.)</li> <li>Turn the stack of paper over in the tray. Also try rotating the paper 180° in the tray.</li> </ul>
<b>Back of printouts are dirty</b> 	<p>Check for leaking toner. Clean the inside of the machine. (See "Cleaning the inside" on page 87.)</p>
<b>Solid Color or Black pages</b> 	<ul style="list-style-type: none"> <li>The toner cartridge may not be installed properly. Remove the cartridge and reinsert it.</li> <li>The toner cartridge may be defective. Remove the toner cartridge and install a new one. (See "Replacing the toner cartridge" on page 103.)</li> <li>The machine may require repair. Contact a service representative.</li> </ul>
<b>Loose toner</b> 	<ul style="list-style-type: none"> <li>Clean the inside of the machine. (See "Cleaning the inside" on page 87.)</li> <li>Check the paper type and quality. (See "Print media specifications" on page 109.)</li> <li>Remove the toner cartridge and then, install a new one. (See "Replacing the toner cartridge" on page 103.)</li> <li>If the problem persists, the machine may require repair. Contact a service representative.</li> </ul>
<b>Character Voids</b> 	<p>Character voids are white areas within parts of characters that should be solid black:</p> <ul style="list-style-type: none"> <li>If you are using transparencies, try another type of transparency. Because of the composition of transparencies, some character voids are normal.</li> <li>You may be printing on the wrong surface of the paper. Remove the paper and turn it around.</li> <li>The paper may not meet paper specifications. (See "Print media specifications" on page 109.)</li> </ul>

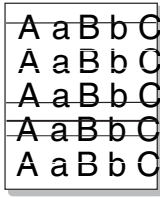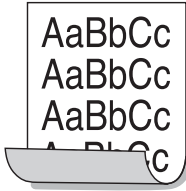CONDITION	SUGGESTED SOLUTIONS
<b>Horizontal stripes</b> 	<p>If horizontally aligned black streaks or smears appear:</p> <ul style="list-style-type: none"> <li>The toner cartridge may be installed improperly. Remove the cartridge and reinsert it.</li> <li>The toner cartridge may be defective. Remove the toner cartridge and install a new one. (See "Replacing the toner cartridge" on page 103.)</li> <li>If the problem persists, the machine may require repair. Contact a service representative.</li> </ul>
<b>Curl</b> 	<p>If the printed paper is curled or paper does not feed into the machine:</p> <ul style="list-style-type: none"> <li>Turn the stack of paper over in the tray. Also try rotating the paper 180° in the tray.</li> <li>Change the printer option and try again. Go to <b>Printing Preferences</b>, click <b>Paper</b> tab, and set type to <b>Thin</b>. (See "Opening printing preferences" on page 55.)</li> </ul>
<b>An unknown image repetitively appears on a few sheets or loose toner, light print, or contamination occurs.</b>	<p>Your machine is probably being used at an altitude of 1,000 m (3,281 ft) or above. The high altitude may affect the print quality, such as loose toner or light imaging. Change the correct altitude setting to your machine. (See "Altitude adjustment" on page 43.)</p>

## Copying problems

CONDITION	SUGGESTED SOLUTION
<b>Copies are too light or too dark</b>	Use <b>Darkness</b> in <b>Copy feature</b> to lighten or darken the backgrounds of copies. (See "Changing the darkness" on page 62.)
<b>Smears, lines, marks, or spots appear on copies.</b>	<ul style="list-style-type: none"> <li>If the defects are on the original, use <b>Darkness</b> in <b>Copy feature</b> to lighten the background of your copies. (See "Changing the darkness" on page 62.)</li> <li>If there are no defects on the original, clean the scan unit. (See "Cleaning the scan unit" on page 88.)</li> </ul>
<b>Copy image is skewed.</b>	<ul style="list-style-type: none"> <li>Ensure that the original is face down on the scanner glass or face up in the document feeder.</li> <li>Check that the copy paper is loaded correctly.</li> </ul>
<b>Blank copies print out.</b>	Ensure that the original is face down on the scanner glass or face up in the document feeder.

CONDITION	SUGGESTED SOLUTION
<b>Image rubs off the copy easily.</b>	<ul style="list-style-type: none"> <li>Replace the paper in the tray with paper from a new package.</li> <li>In high humidity areas, do not leave paper in the machine for extended periods of time.</li> </ul>
<b>Frequent copy paper jams occur.</b>	<ul style="list-style-type: none"> <li>Fan the stack of paper, then turn it over in the tray. Replace the paper in the tray with a fresh supply. Check/adjust the paper guides, if necessary.</li> <li>Ensure that the paper is the proper paper weight.</li> <li>Check for copy paper or pieces of copy paper remaining in the machine after a paper jam has been cleared.</li> </ul>
<b>Toner cartridge produces fewer copies than expected before running out of toner.</b>	<ul style="list-style-type: none"> <li>Your originals may contain pictures, solids, or heavy lines. For example, your originals may be forms, newsletters, books, or other documents that use more toner.</li> <li>The scanner lid may be left open while copies are being made.</li> <li>Turn the machine off and back on.</li> </ul>

## Scanning problems

CONDITON	SUGGESTED SOLUTIONS
<b>The scanner does not work.</b>	<ul style="list-style-type: none"> <li>Make sure that you place the original to be scanned face down on the scanner glass, or face up in the document feeder.</li> <li>There may not be enough available memory to hold the document you want to scan. Try the <b>Prescan</b> function to see if that works. Try lowering the scan resolution rate.</li> <li>Check that the machine cable is connected properly.</li> <li>Make sure that the machine cable is not defective. Switch the cable with a known good cable. If necessary, replace the cable.</li> <li>Check that the scanner is configured correctly. Check scan setting in the SmarThru Office or the application you want to use to make certain that the scanner job is being sent to the correct port (for example, USB001).</li> </ul>
<b>The unit scans very slowly.</b>	<ul style="list-style-type: none"> <li>Check if the machine is printing received data. If so, scan the document after the received data has been printed.</li> <li>Graphics are scanned more slowly than text.</li> <li>Communication speed slows in scan mode because of the large amount of memory required to analyze and reproduce the scanned image. Set your computer to the ECP printer mode through BIOS setting. It will help to increase the speed. For details about how to set BIOS, refer to your computer user's guide.</li> </ul>
<b>Message appears on your computer screen:</b> <ul style="list-style-type: none"> <li><b>Device can't be set to the H/W mode you want.</b></li> <li><b>Port is being used by another program.</b></li> <li><b>Port is Disabled.</b></li> <li><b>Scanner is busy receiving or printing data. When the current job is completed., try again.</b></li> <li><b>Invalid handle.</b></li> <li><b>Scanning has failed.</b></li> </ul>	<ul style="list-style-type: none"> <li>There may be a copying or printing job in progress. Try your job again when that job is finished.</li> <li>The selected port is currently being used. Restart your computer and try again.</li> <li>The machine cable may be improperly connected or the power may be off.</li> <li>The scanner driver is not installed or the operating environment is not set up properly.</li> <li>Ensure that the machine is properly connected and the power is on, then restart your computer.</li> <li>The USB cable may be improperly connected or the power may be off.</li> </ul>

## Fax problems

CONDITION	SUGGESTED SOLUTIONS
The machine is not working, there is no display, or the buttons are not working.	<ul style="list-style-type: none"> <li>Unplug the power cord and plug it in again.</li> <li>Ensure that there is power being supplied to the electrical outlet.</li> </ul>
No dial tone.	<ul style="list-style-type: none"> <li>Check that the phone line is properly connected.</li> <li>Check that the phone socket on the wall is working by plugging in another phone.</li> </ul>
The numbers stored in memory do not dial correctly.	Make sure that the numbers are stored in memory correctly. Print a <b>Address Book</b> list. (See "Setting up address book" on page 75.)
The original does not feed into the machine.	<ul style="list-style-type: none"> <li>Make sure that the paper is not wrinkled and you are inserting it in correctly. Check that the original is the right size, not too thick or thin.</li> <li>Make sure that the document feeder is firmly closed.</li> <li>The document feeder rubber pad may need to be replaced. Contact a service representative.</li> </ul>
Faxes are not received automatically.	<ul style="list-style-type: none"> <li>The receiving mode should be set to fax.</li> <li>Make sure that there is paper in the tray.</li> <li>Check to see if the display shows any error message. If it does, clear the problem</li> </ul>
The machine does not send.	<ul style="list-style-type: none"> <li>Make sure that the original is loaded in the document feeder or on the scanner glass.</li> <li>Check the fax machine you are sending to, to see if it can receive your fax.</li> </ul>
The incoming fax has blank spaces or is of poor-quality.	<ul style="list-style-type: none"> <li>The fax machine sending you the fax may be faulty.</li> <li>A noisy phone line can cause line errors.</li> <li>Check your machine by making a copy.</li> <li>The toner cartridge may be empty. Replace the toner cartridge. (See "Replacing the toner cartridge" on page 103.)</li> </ul>
Some of the words on an incoming fax are stretched.	The fax machine sending the fax had a temporary document jam.
There are lines on the originals you sent.	Check your scan unit for marks and clean it. (See "Cleaning the scan unit" on page 88.)

CONDITION	SUGGESTED SOLUTIONS
The machine dials a number, but the connection with the other fax machine fails.	The other fax machine may be turned off, out of paper, or cannot answer incoming calls. Speak with the other machine operator and ask her/him to solve out the problem.
Faxes do not store in memory.	There may not be enough memory space to store the fax. If the display indicating the memory status shows, delete any faxes you no longer need from the memory, and then try to store the fax again. Call for service.
Blank areas appear at the bottom of each page or on other pages, with a small strip of text at the top	You may have chosen the wrong paper settings in the user option setting. For details about paper settings. (See "Setting the paper size and type" on page 52.)

## Samsung Scan Manager Problem

CONDITION	SUGGESTED SOLUTION
Samsung Scan Manager does not work.	Check your system requirements. Samsung Scan Manager works in Window and Macintosh (See "System requirements" on page 32.)

## Common Windows problems

CONDITION	SUGGESTED SOLUTIONS
"File in Use" message appears during installation.	Exit all software applications. Remove all software from the printer's startup group, then restart Windows. Reinstall the printer driver.
"General Protection Fault", "Exception OE", "Spool 32", or "Illegal Operation" messages appear.	Close all other applications, reboot Windows and try printing again.
"Fail To Print", "A printer timeout error occurred" messages appear.	These messages may appear during printing. Just keep waiting until the machine finishes printing. If the message appears in standby mode or after printing has been completed, check the connection and/or whether an error has occurred.




Refer to Microsoft Windows User's Guide that came with your computer for further information on Windows error messages.

## Common Linux problems


CONDITION	SUGGESTED SOLUTIONS
The machine does not print.	<ul style="list-style-type: none"> <li>Check if the printer driver is installed in your system. Open Unified Driver Configurator and switch to the <b>Printers</b> tab in <b>Printers configuration</b> window to look at the list of available machines. Make sure that your machine is displayed on the list. If not, open <b>Add new printer wizard</b> to set up your device.</li> <li>Check if the machine is started. Open <b>Printers configuration</b> and select your machine on the printers list. Look at the description in the <b>Selected printer</b> pane. If its status contains <b>Stopped</b> string, press the <b>Start</b> button. After that normal operation of the machine should be restored. The "stopped" status might be activated when some problems in printing occurred. For instance, this could be an attempt to print a document when the port is claimed by a scanning application.</li> <li>Ensure the port is not busy. Since functional components of machine (printer and scanner) share the same I/O interface (port), the situation of simultaneous access of different "consumer" applications to the same port is possible. To avoid possible conflicts, only one of them at a time is allowed to gain control over the device. The other "consumer" will encounter "device busy" response. You should open ports configuration and select the port assigned to your machine. In the <b>Selected port</b> pane you can see if the port is occupied by some other application. If this is the case, you should either wait for completion of the current job or press the <b>Release port</b> button, if you are sure that the present application is not functioning properly.</li> <li>Check if your application has special print option such as "-oraw". If "-oraw" is specified in the command line parameter, then remove it to print properly. For Gimp front-end, select "print" -&gt; "Setup printer" and edit command line parameter in the command item.</li> <li>The CUPS (Common Unix Printing System) version distributed with SuSE Linux 9.2 (cups-1.1.21) has a problem with ipp (Internet Printing Protocol) printing. Use the socket printing instead of ipp or install a later version of CUPS (cups-1.1.22 or higher).</li> </ul>
The machine does not print whole pages, and output is printed on half the page.	It is a known problem that occurs when a color machine is used on version 8.51 or earlier of Ghostscript, 64-bit Linux OS, and has been reported to <a href="http://bugs.ghostscript.com">bugs.ghostscript.com</a> as Ghostscript Bug 688252. The problem is solved in AFPL Ghostscript v. 8.52 or above. Download the latest version of AFPL Ghostscript from <a href="http://sourceforge.net/projects/ghostscript/">http://sourceforge.net/projects/ghostscript/</a> and install it to solve this problem.


CONDITION	SUGGESTED SOLUTIONS
I cannot scan via Gimp Front-end.	Check if Gimp Front-end has Xsane: <b>Device dialog</b> . on the <b>Acquire</b> menu. If not, you should install Xsane plug-in for Gimp on the your computer. You can find Xsane plug-in package for Gimp on Linux distribution CD or Gimp home page. For the detailed information, refer to the Help for Linux distribution CD or Gimp Front-end application. If you wish to use another kind of scan application, refer to application's Help.
I encounter error "Cannot open port device file" when printing a document.	Avoid changing print job parameters (via LPR GUI, for example) while a print job is in progress. Known versions of CUPS server break the print job whenever print options are changed and then try to restart the job from the beginning. Since Unified Linux Driver locks the port while printing, the abrupt termination of the driver keeps the port locked and unavailable for subsequent print jobs. If this situation occurs, try to release the port by selecting <b>Release port</b> in <b>Port configuration</b> window.
The machine does not appear on the scanners list.	<ul style="list-style-type: none"> <li>Ensure your machine is attached to your computer, connected properly via the USB port, and is turned on.</li> <li>Ensure the scanner driver for your machine is installed in your system. Open Unified Linux Driver configurator, switch to <b>Scanners configuration</b>, then press <b>Drivers</b>. Make sure that driver with a name corresponding to your machine's name is listed in the window.</li> <li>Ensure the port is not busy. Since functional components of machine (printer and scanner) share the same I/O interface (port), the situation of simultaneous access of different "consumer" applications to the same port is possible. To avoid possible conflicts, only one of them at a time is allowed to gain control over the device. The other "consumer" will encounter "device busy" response. This usually happens when starting a scan procedure. An appropriate message box appears. To identify the source of the problem, open the <b>Ports configuration</b> and select the port assigned to your scanner, port's symbol /dev/mfp0 corresponds to LP:0 designation displayed in the scanners' options, /dev/mfp1 relates to LP:1, and so on. USB ports start at /dev/mfp4, so scanner on USB:0 relates to /dev/mfp4 respectively and so forth sequentially. In the <b>Selected port</b> pane, you can see if the port is occupied by another application. If this is the case, you should either wait for completion of the current job or press the <b>Release port</b> button, if you are sure that the present port application is not functioning properly.</li> </ul>

CONDITION	SUGGESTED SOLUTIONS
<b>The machine does not scan.</b>	<ul style="list-style-type: none"> <li>• Ensure a document is loaded into the machine, ensure your machine is connected to the computer.</li> <li>• If there is an I/O error while scanning.</li> </ul>

 Refer to Linux User's Guide that came with your computer for further information on Linux error messages.

## Common Macintosh problems

CONDITION	SUGGESTED SOLUTIONS
<b>The machine does not print PDF files correctly. Some parts of graphics, text, or illustrations are missing.</b>	<p>Printing the PDF file as an image may enable the file to print. Turn on <b>Print As Image</b> from the Acrobat printing options.</p> <p> It will take longer to print when you print a PDF file as an image.</p>
<b>The document has printed, but the print job has not disappeared from the spooler in Mac OS X10.3.2.</b>	Update your MAC OS to MAC OS X 10.3.3. or higher.
<b>Some letters are not displayed normally during the cover page printing.</b>	Mac OS cannot create the font during the cover page printing. The English alphabet and numbers are displayed normally on the cover page.
<b>When printing a document in Macintosh with Acrobat Reader 6.0 or higher, colors print incorrectly.</b>	Make sure that the resolution setting in your machine driver matches the one in Acrobat Reader.

 Refer to Macintosh User's Guide that came with your computer for further information on Macintosh error messages.




# supplies and accessories

This chapter provides information on purchasing supplies, accessories and maintenance parts available for your machine.

## This chapter includes:

- How to purchase
- Available supplies
- Available maintenance parts

 Available accessories may differ from country to country. Contact your sales representatives to obtain the list of available accessories.

## HOW TO PURCHASE

To order Samsung-authorized supplies, accessories and, maintenance parts, contact your local Samsung dealer or the retailer where you purchased your machine. You can also visit [www.samsung.com/supplies](http://www.samsung.com/supplies), select your country/region, and obtain information on calling for service.

## AVAILABLE SUPPLIES

When supplies reach their lifespan, you can order the following types of supplies for your machine:


TYPE	AVERAGE YIELD <sup>a</sup>	PART NAME
Standard yield	Approx. 1,500 pages	<ul style="list-style-type: none"><li>• MLT-D105S</li><li>• Region A<sup>b</sup>: MLT-D1052S</li><li>• Region B<sup>c</sup>: MLT-D1053S</li></ul>
High yield	Approx. 2,500 pages	<ul style="list-style-type: none"><li>• MLT-D105L</li><li>• Region A<sup>b</sup>: MLT-D1052L</li><li>• Region B<sup>c</sup>: MLT-D1053L</li></ul>


a. Declared yield value in accordance with ISO/IEC 19752.

b. Region A: Albania, Austria, Belgium, Bosnia, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Finland, France, Germany, Greece, Hungary, Italy, Macedonia, Netherlands, Norway, Poland, Portugal, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, UK.


c. Region B: China only.

To replace a toner cartridge: (See "Replacing the toner cartridge" on page 103.)

 Depending on the options and job mode used, the toner cartridge's lifespan may differ.

 You must purchase supplies, including toner cartridges, in the same country where you purchased your machine. Otherwise, supplies will be incompatible with your machine since the system configuration of these vary from country to country.

- Replacing the toner cartridge
- Checking replaceable's lifespan

 Samsung does not recommend using non-genuine Samsung toner cartridge such as refilled or remanufactured. Samsung cannot guarantee non-genuine Samsung toner cartridge's quality. Service or repair required as a result of using non-genuine Samsung toner cartridges will not be covered under the machine warranty.

## AVAILABLE MAINTENANCE PARTS

To avoid print quality and paper feed problems resulting from worn parts and to maintain your machine in top working condition, the following parts will need to be replaced after printing the specified number of pages or when the life span of each item has expired.


PARTS	AVERAGE YIELD <sup>a</sup>	PART NAME
Document feeder rubber pad	Approx. 20,000 pages	RMO ADF RUBBER
Transfer roller	Approx. 50,000 pages	ROLLER-TRANSFER
Fuser unit	Approx. 50,000 pages	FUSER
Pickup roller	Approx. 50,000 pages	ROLLER-PICK UP
Cassette unit	Approx. 50,000 pages	CASSETTE

a. It will be affected by operating system used, computing performance, application software, connecting method, media type, media size and job complexity.

To purchase maintenance parts, contact the source where you bought the machine.

Replacing maintenance parts can be performed only by an authorized service provider, dealer, or the retailer where you bought the machine. The warranty does not cover the replacement of any maintenance parts after their lifespan.

## REPLACING THE TONER CARTRIDGE

 Click this link to open an animation about replacing a toner cartridge.


When the toner cartridge is empty:

- **Toner Empty** appears on the display.
- The machine stops printing. Incoming faxes are saved in memory.


At this stage, the toner cartridge needs to be replaced. Check the type of the toner cartridge for your machine. (See "Available supplies" on page 103.)



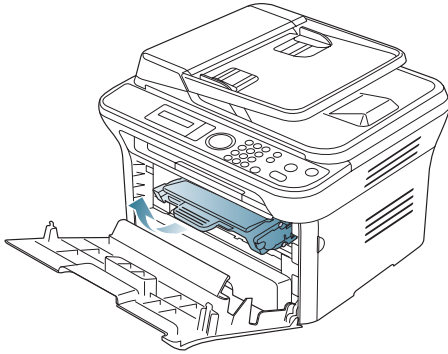

1. Open the front door.
2. Pull the toner cartridge out.

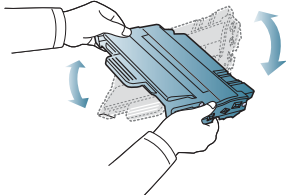

3. Remove the new toner cartridge from its bag.
4. Slowly shake the cartridge five or six times to distribute the toner evenly inside the cartridge. It will assure maximum copies per cartridge.




 If toner gets on your clothing, wipe it off with a dry cloth and wash clothing in cold water. Hot water sets toner into fabric.

 Do not touch the green underside of the toner cartridge. Use the handle on the cartridge to avoid touching this area.

5. Hold the toner cartridge by the handle and slowly insert the cartridge into the opening in the machine.

Tabs on the sides of the cartridge and corresponding grooves within the machine will guide the cartridge into the correct position until it locks into place completely.

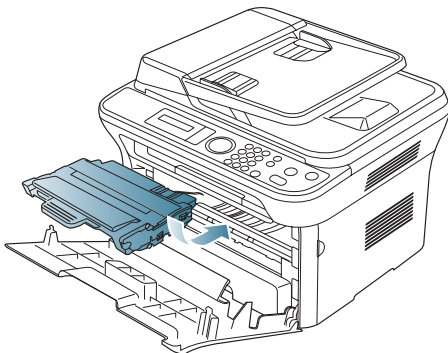

6. Close the front door. Make sure that the cover is securely closed.

## CHECKING REPLACEABLE'S LIFESPAN

If you experience frequent paper jams or printing problems, check the number of pages the machine has printed. Replace the corresponding parts, if necessary.

1. Press **Menu** on the control panel.
2. Press the left/right arrow until **System Setup** appear and press **OK**.
3. Press the left/right arrow until **Maintenance** appear and press **OK**.
4. Press the left/right arrow until **Supplies Life** appear and press **OK**.
5. Press the left/right arrow until the item you want appears and press **OK**.
  - **Supplies Info**: Prints the supply information page.
  - **Total**: Displays the total number of pages printed.
  - **ADF Scan**: Displays the number of pages scanned using the ADF.
  - **Platen Scan**: Displays the number of pages scanned using the scanner glass.
6. Press **Stop/Clear** to return to ready mode.

# specifications

This chapter guides you about this machine's specifications such as various features.

**This chapter include:**

- General specifications
- Printer specifications
- Scanner specifications
- Copier specifications
- Facsimile specifications
- Print media specifications

## GENERAL SPECIFICATIONS

ITEM	DESCRIPTION	
<b>Document feeder capacity</b>	Up to 40 sheets 75 g/m <sup>2</sup> (20 lb bond)	
<b>Document feeder document size</b>	Width: 142 to 216 mm (5.6 x 8.5 inches)/ Length: 148 to 356 mm (5.8 x 14 inches)	
<b>Paper input capacity</b>	<ul style="list-style-type: none"> <li>• <b>Tray:</b> 250 sheets for plain paper, 80 g/m<sup>2</sup> (20 lb bond)</li> <li>• <b>Manual tray:</b> 1 sheet</li> </ul> ( See "Print media specifications" on page 109.)	
<b>Paper output capacity (Face down)</b>	100 sheets 75 g/m <sup>2</sup> (20 lb bond)	
<b>Power rating</b>	AC 110 - 127 V or AC 220 - 240 V See the Rating label on the machine for the correct voltage, frequency (hertz) and type of current for your machine.	
<b>Power consumption</b>	<ul style="list-style-type: none"> <li>• <b>Average operating mode:</b> Less than 420 W</li> <li>• <b>Ready mode:</b> Less than 48 W</li> <li>• <b>Power save mode:</b> Less than 10 W</li> <li>• <b>Power off mode:</b> Less than 1 W</li> </ul>	
<b>Noise Level<sup>a</sup></b>	<ul style="list-style-type: none"> <li>• <b>Ready mode:</b> 26 dB(A)</li> <li>• <b>Printing mode:</b> 50 dB(A)</li> <li>• <b>Copying mode:</b> 52 dB(A)</li> </ul>	
<b>Boot-up time<sup>b</sup></b>	Less than 30 seconds	
<b>Operating environment</b>	Temperature: 10 to 32 °C (50 to 90 °F) Humidity: 20 to 80% RH	
<b>Display</b>	16 characters x 2 lines	
<b>Toner cartridge life<sup>c</sup></b>	SCX-4600 Series	700 pages <sup>d</sup> (Shipped with the machine) (See "Available supplies" on page 103.)
	SCX-4623 Series	1,000 pages <sup>d</sup> (Shipped with the machine) (See "Available supplies" on page 103.)
<b>Memory (Expandable)*</b>	64 MB (Non-extendable): SCX-4600(K), SCX-4623F(K), SCX-4623FH(K)	
	128 MB (Non-extendable): SCX-4623FN	
<b>External dimension (W x D x H)</b>	SCX-4600 Series	416 x 409 x 275.8 mm (16.4 x 16.1 x 10.9 inches)
	SCX-4623 Series	416 x 409 x 352 mm (16.4 x 16.1 x 13.9 inches)
<b>Weight (Including consumables)</b>	SCX-4600 Series	10.5 Kg (23.15 lbs)
	SCX-4623 Series	11.5 Kg (25.35 lbs)
<b>Package weight</b>	Paper: 3.4 Kg (7.42 lbs) Plastic: 1.1 Kg (2.42 lbs)	

- a. Sound Pressure Level, ISO 7779. Configuration tested: machine basic installation, A4 paper, simplex printing.
- b. Boot-up time is the time that takes from the power switch on to the ready mode.
- c. Declared yield value in accordance with ISO/IEC 19752. The number of pages may be affected by operating environment, printing interval, media type, and media size.
- d. It varies depending on the product configuration.

## PRINTER SPECIFICATIONS

ITEM	DESCRIPTION
<b>Printing method</b>	Laser beam printing
<b>Printing speed<sup>a</sup></b>	Up to 22 ppm (A4), 23 ppm (Letter)
<b>First print out time</b>	10 seconds (from ready)
<b>Print resolution</b>	Up to 1,200 x 1,200 dpi effective output
<b>Printer language</b>	SPL
<b>OS compatibility<sup>b</sup></b>	<ul style="list-style-type: none"> <li>Windows: 2000/XP/2003/2008/Vista</li> <li>Various Linux OS ( See "Linux" on page 32.)</li> <li>Macintosh: Mac OS X 10.3~10.6</li> </ul>
<b>Interface</b>	<ul style="list-style-type: none"> <li>High speed USB 2.0</li> <li>Ethernet 10/100 Base TX (Embedded type) (SCX-4623FN only)</li> </ul>

- a. It will be affected by operating system used, computing performance, application software, connecting method, media type, media size and job complexity.
- b. Visit [www.samsungprinter.com](http://www.samsungprinter.com) to download the latest software version.

## SCANNER SPECIFICATIONS

ITEM	DESCRIPTION	
<b>Compatibility</b>	TWAIN standard/WIA standard	
<b>Scanning method</b>	Color CIS	
<b>Resolution<sup>a</sup></b>	TWAIN standard	Up to 600 x 600 dpi (Up to 4,800 x 4,800 dpi by software enhancement)
	WIA standard	Up to 600 x 600 dpi
	Scan to PC	75, 150, 200, 300, 600 dpi
	Scan to Email	100, 200, 300dpi
<b>Network Scan File format</b>	PDF, TIFF, JPEG <sup>b</sup>	
<b>Effective scanning length</b>	Scanner glass: 297 mm (11.7 inches) Document feeder: 348 mm (13.7 inches)	
<b>Effective scanning width</b>	Max. 208 mm (8.2 inches)	
<b>Color bit depth</b>	24 bit	
<b>Mono bit depth</b>	1 bit for lineart & halftone 8 bit for gray scale	

a. Due to the applications for scanning, the maximum resolution might differ.

b. JPEG is not available when you select the mono mode in scan color.

## COPIER SPECIFICATIONS

ITEM	DESCRIPTION	
<b>Copy Speed<sup>a</sup></b>	<ul style="list-style-type: none"> <li>Up to 22 cpm (A4), 23 cpm (Letter)</li> <li>Up to 12 cpm (A4)<sup>b</sup></li> </ul>	
<b>Copy resolution</b>	Text	Scanner glass: Up to 300 x 300 dpi Document feeder: Up to 300 x 300 dpi
	Text/photo	Scanner glass: Up to 300 x 300 dpi Document feeder: Up to 300 x 300 dpi
	Photo	Scanner glass: Up to 600 x 600 dpi Document feeder: Up to 300 x 300 dpi
<b>Zoom range</b>	Scanner glass: 25% to 400% Document feeder: 25% to 100%	

a. Copy speed is based on Single Document Multiple Copy.

b. For Austria, Belgium, Germany, Spain. (Copy speed varies by countries.)

## FACSIMILE SPECIFICATIONS



The fax feature may not be supported depending on machines.

ITEM	DESCRIPTION
Compatibility	ITU-T G3
Applicable line	Public Switched Telephone Network (PSTN) or behind PABX
Data coding	MH/MR/MMR/JBIG/JPEG
Modem speed	33.6 Kbps
Transmission speed	Up to 3 seconds/page <sup>a</sup>
Maximum document length	356 mm (14 inches)
Resolution	<ul style="list-style-type: none"><li>• <b>Standard:</b> 203 x 98 dpi</li><li>• <b>Fine:</b> 203 x 196 dpi</li><li>• <b>Super Fine:</b> 300 x 300 dpi</li></ul>
Memory	4 MB
Halftone	256 levels
Auto dialer	up to 200 numbers

a. Standard resolution, MMR(JBIG), Maximum modem speed, Phase "C" by ITU-T No. 1 chart, Memory Tx, ECM.

## PRINT MEDIA SPECIFICATIONS

TYPE	SIZE	DIMENSIONS	PRINT MEDIA WEIGHT <sup>a</sup> /CAPACITY <sup>b</sup>		
			TRAY1	MANUAL TRAY	
Plain paper	Letter	216 x 279 mm (8.50 x 11.00 inches)	60 to 120 g/m <sup>2</sup> (16 to 32 lb bond) • 250 sheets of 80g/m <sup>2</sup> (20 lb bond)	60 to 220 g/m <sup>2</sup> (16 to 43 lb bond) • 1 sheet stacking	
	Legal	216 x 356 mm (8.50 x 14.00 inches)			
	US Folio	216 x 330 mm (8.50 x 13.00 inches)			
	A4	210 x 297 mm (8.27 x 11.69 inches)			
	Oficio	216 x 343 mm (8.50 x 13.50 inches)			
	JIS B5	182 x 257 mm (7.17 x 10.12 inches)	60 to 90 g/m <sup>2</sup> (16 to 24 lb bond) • 150 sheets of 80 g/m <sup>2</sup> (20 lb bond)		
	ISO B5	176 x 250 mm (6.93 x 9.84 inches)			
	Executive	184 x 267 mm (7.25 x 10.50 inches)			
	A5	148 x 210 mm (5.83 x 8.27 inches)			
	A6	105 x 148 mm (4.13 x 5.83 inches)			
Envelope	Envelope Monarch	98 x 191 mm (3.87 x 7.50 inches)	Not available in tray1.		75 to 90 g/m <sup>2</sup> (20 to 24 lb bond) • 1 sheet stacking
	Envelope No. 10	105 x 241 mm (4.12 x 9.50 inches)			
	Envelope DL	110 x 220 mm (4.33 x 8.66 inches)			
	Envelope C5	162 x 229 mm (6.38 x 9.02 inches)			
	Envelope C6	114 x 162 mm (4.49 x 6.38 inches)			
Thick paper	Refer to the Plain paper section	Refer to the Plain paper section	90 g/m <sup>2</sup> (24 lb bond)	90 g/m <sup>2</sup> (24 lb bond) • 1 sheet stacking	
Thin paper	Refer to the Plain paper section	Refer to the Plain paper section	60 to 70 g/m <sup>2</sup> (16 to 19 lb bond)	60 to 70 g/m <sup>2</sup> (16 to 19 lb bond) • 1 sheet stacking	
Transparency	Refer to the Plain paper section	Refer to the Plain paper section	Not available in tray1.	138 to 146 g/m <sup>2</sup> (36.81 to 38.91 lb bond) • 1 sheet stacking	
Labels <sup>c</sup>	Letter, Legal, US Folio, A4, JIS B5, ISO B5, Executive, A5, Statement	Refer to the Plain paper section	Not available in tray1.	120 to 150 g/m <sup>2</sup> (32 to 40 lb bond) • 1 sheet stacking	
Card stock	Letter, Legal, US Folio, A4, JIS B5, ISO B5, Executive, A5, Statement, PostCard 4x6	Refer to the Plain paper section	Not available in tray1.	105 to 163 g/m <sup>2</sup> ( 28 to 43 lb bond) • 1 sheet stacking	
Minimum size (custom)		76 x 127 mm (3.00 x 5.00 inches)	60 to 163 g/m <sup>2</sup> (16 to 43 lb bond)		
Maximum size (custom)		216 x 356 mm (8.50 x 14.02 inches)			

a. If media weight is over 120 g/m<sup>2</sup> (32 lb), load a paper into the tray one by one.

b. Maximum capacity may differ depending on media weight, thickness, and environmental conditions.

c. Smoothness: 100 to 250 (sheffield)

# contact samsung worldwide

If you have any comments or questions regarding Samsung products, contact the Samsung customer care center.

COUNTRY/REG ION	CUSTOMER CARE CENTER	WEB SITE
<b>ARGENTINE</b>	0800-333-3733	www.samsung.com/ar
<b>AUSTRALIA</b>	1300 362 603	www.samsung.com/au
<b>AUSTRIA</b>	0810-SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at
<b>BELGIUM</b>	02 201 2418	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
<b>BRAZIL</b>	0800-124-421 4004-0000	www.samsung.com/br
<b>CANADA</b>	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
<b>CHILE</b>	800-SAMSUNG (726-7864)	www.samsung.com/cl
<b>CHINA</b>	800-810-5858 400-810-5858 010-6475 1880	www.samsung.com/cn
<b>COLOMBIA</b>	01-8000112112	www.samsung.com.co
<b>COSTA RICA</b>	0-800-507-7267	www.samsung.com/latin
<b>CZECH REPUBLIC</b>	800-SAMSUNG (800-726786)  Samsung Zrt., česká organizační složka, Oasis Florenc, Sokolovská394/17, 180 00, Praha 8	www.samsung.com/cz
<b>DENMARK</b>	8-SAMSUNG (7267864)	www.samsung.com/dk
<b>ECUADOR</b>	1-800-10-7267	www.samsung.com/latin
<b>EL SALVADOR</b>	800-6225	www.samsung.com/latin
<b>ESTONIA</b>	800-7267	www.samsung.com/ee
<b>KAZAKHSTAN</b>	8-10-800-500-55-500	www.samsung.com/kz_ru
<b>KYRGYZSTAN</b>	00-800-500-55-500	
<b>FINLAND</b>	30-6227 515	www.samsung.com/fi
<b>FRANCE</b>	01 4863 0000	www.samsung.com/fr
<b>GERMANY</b>	01805 - SAMSUNG (726-7864 € 0,14/min)	www.samsung.de
<b>GUATEMALA</b>	1-800-299-0013	www.samsung.com/latin
<b>HONDURAS</b>	800-7919267	www.samsung.com/latin
<b>HONG KONG</b>	3698-4698	www.samsung.com/hk
<b>HUNGARY</b>	06-80-SAMSUNG (726-7864)	www.samsung.com/hu

COUNTRY/REG ION	CUSTOMER CARE CENTER	WEB SITE
<b>INDIA</b>	3030 8282 1800 110011 1800 3000 8282	www.samsung.com/in
<b>INDONESIA</b>	0800-112-8888	www.samsung.com/id
<b>ITALIA</b>	800-SAMSUNG(726-7864)	www.samsung.com/it
<b>JAMAICA</b>	1-800-234-7267	www.samsung.com/latin
<b>JAPAN</b>	0120-327-527	www.samsung.com/jp
<b>LATVIA</b>	8000-7267	www.samsung.com/lv
<b>LITHUANIA</b>	8-800-77777	www.samsung.com/lt
<b>LUXEBURG</b>	02 261 03 710	www.samsung.com/lu
<b>MALAYSIA</b>	1800-88-9999	www.samsung.com/my
<b>MEXICO</b>	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
<b>NETHERLANDS</b>	0900-SAMSUNG (0900-7267864) (€ 0,10/min)	www.samsung.com/nl
<b>NEW ZEALAND</b>	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
<b>NICARAGUA</b>	00-1800-5077267	www.samsung.com/latin
<b>NORWAY</b>	3-SAMSUNG (7267864)	www.samsung.com/no
<b>PANAMA</b>	800-7267	www.samsung.com/latin
<b>PHILIPPINES</b>	1800-10-SAMSUNG (726-7864) 1-800-3-SAMSUNG (726-7864) 02-5805777	www.samsung.com/ph
<b>POLAND</b>	0 801 1SAMSUNG (172678) 022-607-93-33	www.samsung.com/pl
<b>PORTUGAL</b>	80820-SAMSUNG (726-7864)	www.samsung.com/pt
<b>PUERTO RICO</b>	1-800-682-3180	www.samsung.com/latin
<b>REP. DOMINICA</b>	1-800-751-2676	www.samsung.com/latin
<b>EIRE</b>	0818 717 100	www.samsung.com/ie
<b>RUSSIA</b>	8-800-555-55-55	www.samsung.ru
<b>SINGAPORE</b>	1800-SAMSUNG (726-7864)	www.samsung.com/sg
<b>SLOVAKIA</b>	0800-SAMSUNG (726-7864)	www.samsung.com/sk



COUNTRY/REGION	CUSTOMER CARE CENTER	WEB SITE
<b>SOUTH AFRICA</b>	0860 SAMSUNG (726-7864)	www.samsung.com/za
<b>SPAIN</b>	902-1-SAMSUNG(902 172 678)	www.samsung.com/es
<b>SWEDEN</b>	075-SAMSUNG (726 78 64)	www.samsung.com/se
<b>SWITZERLAND</b>	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch
<b>TADJIKISTAN</b>	8-10-800-500-55-500	
<b>TAIWAN</b>	0800-329-999	www.samsung.com/tw
<b>THAILAND</b>	1800-29-3232 02-689-3232	www.samsung.com/th
<b>TRINIDAD &amp; TOBAGO</b>	1-800-SAMSUNG (726-7864)	www.samsung.com/latin
<b>TURKEY</b>	444 77 11	www.samsung.com/tr
<b>U.A.E</b>	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com/ae
<b>U.K</b>	0845 SAMSUNG (726-7864)	www.samsung.com/uk
<b>U.S.A</b>	1-800-SAMSUNG (7267864)	www.samsung.com/us
<b>UKRAINE</b>	8-800-502-0000	www.samsung.ua
<b>UZBEKISTAN</b>	8-10-800-500-55-500	www.samsung.com/kz_ru
<b>VENEZUELA</b>	0-800-100-5303	www.samsung.com/latin
<b>VIETNAM</b>	1 800 588 889	www.samsung.com/vn

# glossary

---



The following glossary helps you get familiar with the product by understanding the terminologies commonly used with printing as well as mentioned in this user's guide.

## 802.11

802.11 is a set of standards for wireless local area network (WLAN) communication, developed by the IEEE LAN/MAN Standards Committee (IEEE 802).

## 802.11b/g

802.11b/g can share same hardware and use the 2.4 GHz band. 802.11b supports bandwidth up to 11 Mbps; 802.11g up to 54 Mbps. 802.11b/g devices may occasionally suffer interference from microwave ovens, cordless telephones, and Bluetooth devices.

## Access point

Access Point or Wireless Access Point (AP or WAP) is a device that connects wireless communication devices together on wireless local area networks (WLAN), and acts as a central transmitter and receiver of WLAN radio signals.

## ADF

An Automatic Document Feeder (ADF) is a mechanism that will automatically feed an original sheet of paper so that the machine can scan some amount of the paper at once.

## AppleTalk

AppleTalk is a proprietary suite of protocols developed by Apple, Inc for computer networking. It was included in the original Macintosh (1984) and is now deprecated by Apple in favor of TCP/IP networking.

## BIT Depth

A computer graphics term describing the number of bits used to represent the color of a single pixel in a bitmapped image. Higher color depth gives a broader range of distinct colors. As the number of bits increases, the number of possible colors becomes impractically large for a color map. 1-bit color is commonly called as monochrome or black and white.

## BMP

A bitmapped graphics format used internally by the Microsoft Windows graphics subsystem (GDI), and used commonly as a simple graphics file format on that platform.

## BOOTP

Bootstrap Protocol. A network protocol used by a network client to obtain its IP address automatically. This is usually done in the bootstrap process of computers or operating systems running on them. The BOOTP servers assign the IP address from a pool of addresses to each client. BOOTP enables 'diskless workstation' computers to obtain an IP address prior to loading any advanced operating system.

## CCD

Charge Coupled Device (CCD) is a hardware which enables the scan job. CCD Locking mechanism is also used to hold the CCD module to prevent any damage when you move the machine.

## Collation

Collation is a process of printing a multiple-copy job in sets. When collation is selected, the device prints an entire set before printing additional copies.

## Control Panel

A control panel is a flat, typically vertical, area where control or monitoring instruments are displayed. They are typically found in front of the machine.

## Coverage

It is the printing term used for a toner usage measurement on printing. For example, 5% coverage means that an A4 sided paper has about 5% image or text on it. So, if the paper or original has complicated images or lots of text on it, the coverage will be higher and at the same time, a toner usage will be as much as the coverage.

## CSV

Comma Separated Values (CSV). A type of file format, CSV is used to exchange data between disparate applications. The file format, as it is used in Microsoft Excel, has become a pseudo standard throughout the industry, even among non-Microsoft platforms.

## DADF

A Duplex Automatic Document Feeder (DADF) is a mechanism that will automatically feed and flip over an original sheet of paper so that the machine can scan on both sides of the paper.

## Default

The value or setting that is in effect when taking a printer out of its box state, reset, or initialized.

## DHCP

A Dynamic Host Configuration Protocol (DHCP) is a client-server networking protocol. A DHCP server provides configuration parameters specific to the DHCP client host requesting, generally, information required by the client host to participate on an IP network. DHCP also provides a mechanism for allocation of IP addresses to client hosts.

## DIMM

Dual Inline Memory Module (DIMM), a small circuit board that holds memory. DIMM stores all the data within the machine like printing data, received fax data.

## DNS

The Domain Name Server (DNS) is a system that stores information associated with domain names in a distributed database on networks, such as the Internet.

## Dot Matrix Printer

A dot matrix printer refers to a type of computer printer with a print head that runs back and forth on the page and prints by impact, striking an ink-soaked cloth ribbon against the paper, much like a typewriter.

## DPI

Dots Per Inch (DPI) is a measurement of resolution that is used for scanning and printing. Generally, higher DPI results in a higher resolution, more visible detail in the image, and a larger file size.

## DRPD

Distinctive Ring Pattern Detection. Distinctive Ring is a telephone company service which enables a user to use a single telephone line to answer several different telephone numbers.

## Duplex

A mechanism that will automatically flip over a sheet of paper so that the machine can print (or scan) on both sides of the paper. A printer equipped with a Duplex can print double-sided of paper.

## Duty Cycle

Duty cycle is the page quantity which does not affect printer performance for a month. Generally the printer has the lifespan limitation such as pages per year. The lifespan means the average capacity of print-outs, usually within the warranty period. For example, if the duty cycle is 48,000 pages per month assuming 20 working days, a printer limits 2,400 pages a day.

## ECM

Error Correction Mode (ECM) is an optional transmission mode built into Class 1 fax machines or fax modems. It automatically detects and corrects errors in the fax transmission process that are sometimes caused by telephone line noise.

## Emulation

Emulation is a technique of one machine obtaining the same results as another.

An emulator duplicates the functions of one system with a different system, so that the second system behaves like the first system. Emulation focuses on exact reproduction of external behavior, which is in contrast to simulation, which concerns an abstract model of the system being simulated, often considering its internal state.

## Ethernet

Ethernet is a frame-based computer networking technology for local area networks (LANs). It defines wiring and signaling for the physical layer, and frame formats and protocols for the media access control (MAC)/data link layer of the OSI model. Ethernet is mostly standardized as IEEE 802.3. It has become the most widespread LAN technology in use during the 1990s to the present.

## EtherTalk

A suite of protocols developed by Apple Computer for computer networking. It was included in the original Macintosh (1984) and is now deprecated by Apple in favor of TCP/IP networking.

## FDI

Foreign Device Interface (FDI) is a card installed inside the machine to allow a third party device such as a coin operated device or a card reader. Those devices allow the pay-for-print service on your machine.

## FTP

A File Transfer Protocol (FTP) is a commonly used protocol for exchanging files over any network that supports the TCP/IP protocol (such as the Internet or an intranet).

## Fuser Unit

The part of a laser printer that melts the toner onto the print media. It consists of a hot roller and a back-up roller. After toner is transferred onto the paper, the fuser unit applies heat and pressure to ensure that the toner stays on the paper permanently, which is why paper is warm when it comes out of a laser printer.

## Gateway

A connection between computer networks, or between a computer network and a telephone line. It is very popular, as it is a computer or a network that allows access to another computer or network.

## Grayscale

A shades of gray that represent light and dark portions of an image when color images are converted to grayscale; colors are represented by various shades of gray.

## Halftone

An image type that simulates grayscale by varying the number of dots. Highly colored areas consist of a large number of dots, while lighter areas consist of a smaller number of dots.

## HDD

Hard Disk Drive (HDD), commonly referred to as a hard drive or hard disk, is a non-volatile storage device which stores digitally-encoded data on rapidly rotating platters with magnetic surfaces.

## IEEE

The Institute of Electrical and Electronics Engineers (IEEE) is an international non-profit, professional organization for the advancement of technology related to electricity.

## IEEE 1284

The 1284 parallel port standard was developed by the Institute of Electrical and Electronics Engineers (IEEE). The term "1284-B" refers to a specific connector type on the end of the parallel cable that attaches to the peripheral (for example, a printer).

## **Intranet**

A private network that uses Internet Protocols, network connectivity, and possibly the public telecommunication system to securely share part of an organization's information or operations with its employees. Sometimes the term refers only to the most visible service, the internal website.

## **IP address**

An Internet Protocol (IP) address is a unique number that devices use in order to identify and communicate with each other on a network utilizing the Internet Protocol standard.

## **IPM**

The Images Per Minute (IPM) is a way of measuring the speed of a printer. An IPM rate indicates the number of single-sided sheets a printer can complete within one minute.

## **IPP**

The Internet Printing Protocol (IPP) defines a standard protocol for printing as well as managing print jobs, media size, resolution, and so forth. IPP can be used locally or over the Internet to hundreds of printers, and also supports access control, authentication, and encryption, making it a much more capable and secure printing solution than older ones.

## **IPX/SPX**

IPX/SPX stands for Internet Packet Exchange/Sequenced Packet Exchange. It is a networking protocol used by the Novell NetWare operating systems. IPX and SPX both provide connection services similar to TCP/IP, with the IPX protocol having similarities to IP, and SPX having similarities to TCP. IPX/SPX was primarily designed for local area networks (LANs), and is a very efficient protocol for this purpose (typically its performance exceeds that of TCP/IP on a LAN).

## **ISO**

The International Organization for Standardization (ISO) is an international standard-setting body composed of representatives from national standards bodies. It produces world-wide industrial and commercial standards.

## **ITU-T**

The International Telecommunication Union is an international organization established to standardize and regulate international radio and telecommunications. Its main tasks include standardization, allocation of the radio spectrum, and organizing interconnection arrangements between different countries to allow international phone calls. A -T out of ITU-T indicates telecommunication.

## **ITU-T No. 1 chart**

Standardized test chart published by ITU-T for document facsimile transmissions.

## **JBIG**

Joint Bi-level Image Experts Group (JBIG) is an image compression standard with no loss of accuracy or quality, which was designed for

compression of binary images, particularly for faxes, but can also be used on other images.

## **JPEG**

Joint Photographic Experts Group (JPEG) is a most commonly used standard method of lossy compression for photographic images. It is the format used for storing and transmitting photographs on the World Wide Web.

## **LDAP**

The Lightweight Directory Access Protocol (LDAP) is a networking protocol for querying and modifying directory services running over TCP/IP.

## **LED**

A Light-Emitting Diode (LED) is a semiconductor device that indicates the status of a machine.

## **MAC address**

Media Access Control (MAC) address is a unique identifier associated with a network adapter. MAC address is a unique 48-bit identifier usually written as 12 hexadecimal characters grouped in pairs (e. g., 00-00-0c-34-11-4e). This address is usually hard-coded into a Network Interface Card (NIC) by its manufacturer, and used as an aid for routers trying to locate machines on large networks.

## **MFP**

Multi Function Peripheral (MFP) is an office machine that includes the following functionality in one physical body, so as to have a printer, a copier, a fax, a scanner and etc.

## **MH**

Modified Huffman (MH) is a compression method for decreasing the amount of data that needs to be transmitted between the fax machines to transfer the image recommended by ITU-T T.4. MH is a codebook-based run-length encoding scheme optimized to efficiently compress white space. As most faxes consist mostly of white space, this minimizes the transmission time of most faxes.

## **MMR**

Modified Modified READ (MMR) is a compression method recommended by ITU-T T.6.

## **Modem**

A device that modulates a carrier signal to encode digital information, and also demodulates such a carrier signal to decode transmitted information.

## **MR**

Modified Read (MR) is a compression method recommended by ITU-T T.4. MR encodes the first scanned line using MH. The next line is compared to the first, the differences determined, and then the differences are encoded and transmitted.

## NetWare

A network operating system developed by Novell, Inc. It initially used cooperative multitasking to run various services on a PC, and the network protocols were based on the archetypal Xerox XNS stack. Today NetWare supports TCP/IP as well as IPX/SPX.

## OPC

Organic Photo Conductor (OPC) is a mechanism that makes a virtual image for print using a laser beam emitted from a laser printer, and it is usually green or gray colored and a cylinder shaped.

An exposing unit of a drum is slowly worn away by its usage of the printer, and it should be replaced appropriately since it gets scratches from grits of a paper.

## Originals

The first example of something, such as a document, photograph or text, etc, which is copied, reproduced or translated to produce others, but which is not itself copied or derived from something else.

## OSI

Open Systems Interconnection (OSI) is a model developed by the International Organization for Standardization (ISO) for communications. OSI offers a standard, modular approach to network design that divides the required set of complex functions into manageable, self-contained, functional layers. The layers are, from top to bottom, Application, Presentation, Session, Transport, Network, Data Link and Physical.

## PABX

A private automatic branch exchange (PABX) is an automatic telephone switching system within a private enterprise.

## PCL

Printer Command Language (PCL) is a Page Description Language (PDL) developed by HP as a printer protocol and has become an industry standard. Originally developed for early inkjet printers, PCL has been released in varying levels for thermal, matrix printer, and page printers.

## PDF

Portable Document Format (PDF) is a proprietary file format developed by Adobe Systems for representing two dimensional documents in a device independent and resolution independent format.

## PostScript

PostScript (PS) is a page description language and programming language used primarily in the electronic and desktop publishing areas. - that is run in an interpreter to generate an image.

## Printer Driver

A program used to send commands and transfer data from the computer to the printer.

## Print Media

The media like paper, envelopes, labels, and transparencies which can be used on a printer, a scanner, a fax or, a copier.

## PPM

Pages Per Minute (PPM) is a method of measurement for determining how fast a printer works, meaning the number of pages a printer can produce in one minute.

## PRN file

An interface for a device driver, this allows software to interact with the device driver using standard input/output system calls, which simplifies many tasks.

## Protocol

A convention or standard that controls or enables the connection, communication, and data transfer between two computing endpoints.

## PS

See PostScript.

## PSTN

The Public-Switched Telephone Network (PSTN) is the network of the world's public circuit-switched telephone networks which, on industrial premises, is usually routed through the switchboard.

## RADIUS

Remote Authentication Dial In User Service (RADIUS) is a protocol for remote user authentication and accounting. RADIUS enables centralized management of authentication data such as usernames and passwords using an AAA (authentication, authorization, and accounting) concept to manage network access.

## Resolution

The sharpness of an image, measured in Dots Per Inch (DPI). The higher the dpi, the greater the resolution.

## SMB

Server Message Block (SMB) is a network protocol mainly applied to share files, printers, serial ports, and miscellaneous communications between nodes on a network. It also provides an authenticated Inter-process communication mechanism.

## SMTP

Simple Mail Transfer Protocol (SMTP) is the standard for e-mail transmissions across the Internet. SMTP is a relatively simple, text-based protocol, where one or more recipients of a message are specified, and then the message text is transferred. It is a client-server protocol, where the client transmits an email message to the server.

## SSID

Service Set Identifier (SSID) is a name of a wireless local area network (WLAN). All wireless devices in a WLAN use the same SSID in order to communicate with each other. The SSIDs are case-sensitive and have a maximum length of 32 characters.

## Subnet Mask

The subnet mask is used in conjunction with the network address to determine which part of the address is the network address and which part is the host address.

## TCP/IP

The Transmission Control Protocol (TCP) and the Internet Protocol (IP); the set of communications protocols that implement the protocol stack on which the Internet and most commercial networks run.

## TCR

Transmission Confirmation Report (TCR) provides details of each transmission such as job status, transmission result and number of pages sent. This report can be set to print after each job or only after failed transmissions.

## TIFF

Tagged Image File Format (TIFF) is a variable-resolution bitmapped image format. TIFF describes image data that typically come from scanners. TIFF images make use of tags, keywords defining the characteristics of the image that is included in the file. This flexible and platform-independent format can be used for pictures that have been made by various image processing applications.

## Toner Cartridge

A kind of bottle within a machine like printer which contains toner. Toner is a powder used in laser printers and photocopiers, which forms the text and images on the printed paper. Toner can be melted by the heat of the fuser, causing it to bind to the fibers in the paper.

## TWAIN

An industry standard for scanners and software. By using a TWAIN-compliant scanner with a TWAIN-compliant program, a scan can be initiated from within the program.; an image capture API for Microsoft Windows and Apple Macintosh operating systems.

## UNC Path

Uniform Naming Convention (UNC) is a standard way to access network shares in Window NT and other Microsoft products. The format of a UNC path is: \\<servername>\<sharename>\<Additional directory>

## URL

Uniform Resource Locator (URL) is the global address of documents and resources on the Internet. The first part of the address indicates what protocol to use, the second part specifies the IP address or the domain name where the resource is located.

## USB

Universal Serial Bus (USB) is a standard that was developed by the USB Implementers Forum, Inc., to connect computers and peripherals. Unlike the parallel port, USB is designed to concurrently connect a single computer USB port to multiple peripherals.

## Watermark

A watermark is a recognizable image or pattern in paper that appears lighter when viewed by transmitted light. Watermarks were first introduced in Bologna, Italy in 1282; they have been used by papermakers to identify their product, and also on postage stamps, currency, and other government documents to discourage counterfeiting.

## WEP

Wired Equivalent Privacy (WEP) is a security protocol specified in IEEE 802.11 to provide the same level of security as that of a wired LAN. WEP provides security by encrypting data over radio so that it is protected as it is transmitted from one end point to another.

## WIA

Windows Imaging Architecture (WIA) is an imaging architecture that is originally introduced in Windows Me and Windows XP. A scan can be initiated from within these operating systems by using a WIA-compliant scanner.

## WPA

Wi-Fi Protected Access (WPA) is a class of systems to secure wireless (Wi-Fi) computer networks, which was created to improve upon the security features of WEP.

## WPA-PSK

WPA-PSK (WPA Pre-Shared Key) is special mode of WPA for small business or home users. A shared key, or password, is configured in the wireless access point (WAP) and any wireless laptop or desktop devices. WPA-PSK generates a unique key for each session between a wireless client and the associated WAP for more advanced security.

# index

---

## A

- adjusting
  - tray size 45
- answering machine/fax 72
- authentication
  - printing a report 79

## B

- booklet printing 56
- booklets 56
- buttons
  - power 30

## C

- cleaning
  - inside 87
  - outside 87
  - scan unit 88
- cleaning a machine 87
- control panel 28, 29
- convention 22
- copy setup 78
- copy timeout setting 64
- copying
  - adjusting darkness 62
  - basic copying 62
  - changing the copy setup 78, 64
  - ID card copy 63
  - n-up copy 63
  - poster copy 63
  - reducing or enlarging copies 62
  - selecting the size of originals 62

## D

- date setting 43
- default settings
  - changing the default settings 44
  - loading paper 44
  - setting a fax header 70
  - tray setting 52
- display 28

- display screen 29
- document feeder 48
- duplex printing (manual)
  - printer driver 56

## E

- Entering
  - using the number keypad 44
- error message 94
- extension telephone 73

## F

- favorites settings, for printing 55
- fax receiving
  - activating secure receive 73
  - changing the receive mode 72
  - DRPD mode 73
  - extension telephone 73
  - in answering machine/fax 72, 73
  - secure receiving 73
- fax sending
  - delay sending 71
  - multi sending 71
  - redialing the last number 71
  - sending a fax 70, 72
- fax setup 77
- faxing
  - address book 75, 74, 73
  - changing receiving mode 72, 77
  - delaying a fax transmission 71
  - forwarding faxes 74
  - group dial 75
  - preparing to fax 70
  - receiving 72, 73, 72, 73, 71
  - sending 70, 72, 70, 75
- features 24
  - machine features 77, 105
  - power saving feature 45, 109, 54
  - supplied software 31

- front view 26

## G

- glossary 112

## I

- ID copy 63
- information 9

## J

- jam
  - clearing paper 92
  - tips for avoiding paper jams 91
- job timeout setting 46

## L

- language 43
- LCD display
  - changing the display language 43

## LED

- machine status 30
- power saver 30
- understanding the status LED 30

## Linux

- common Linux problems 101
- driver installation for network connected 41, 34
- printer properties 61, 60
- scanning 68, 32
- unified driver configurator 84, 39, 84

## loading

- in the document feeder 48
- originals on the scanner glass 47
- paper in manual tray 49
- special media 50

## M

### Macintosh

- common Macintosh problems 102
- driver installation for network connected 41, 34
- printing 59
- scanning 67, 36, 32
- using SetIP 38, 84

### maintenance parts 103

### manual tray

- loading 49
- tips on using 49
- using special media 50



memory  
clearing memory 79

menu overview 80

## N

network  
driver installation  
Linux 41  
Macintosh 41  
Windows 39  
installing environment 37  
IPv6 configuration 42  
SetIP program 38, 39, 83  
using a wired network 37

network setup 80

N-up copy 63

N-up printing  
Macintosh 60  
Windows 55

## O

on hook dial  
hardware 28

original document  
clearing jam 90  
loading  
in the document feeder 48  
on the scanner glass 47

original type  
copying 62

output support 53

overlay printing  
create 58  
delete 58  
print 58

## P

placing a machine  
adjusting the altitude 43  
spacing 31

poster, print 56

power saver  
button 30  
using power save mode 45

print media  
card stock 52  
envelope 51  
glossy paper 52, 48  
labels 51, 52  
output support 109  
photo paper 52

setting the default tray and paper  
in the computer 45  
52  
transparency 51

print resolution set  
Linux 61

print resolution, set  
Macintosh 60

printer driver  
features 54

printer preferences  
Linux 61

printer properties 55

printing  
changing the default print settings 58, 57  
fitting your document to a selected paper  
size 57  
Linux 60  
Macintosh 59  
multiple pages on one sheet of paper  
Macintosh 60  
Windows 55  
poster 56  
Windows 54, 56  
59  
using overlay 57

printing a document  
Linux 60  
Macintosh 59

problems  
copying problems 98  
paper feeding problems 94, 96

## R

rear view 27

regulatory information 13

reports  
network MAC address 84

resolution  
faxing 73

## S

safety  
information 9  
symbols 9

scanner  
glass 47  
lid 26, 47

scanner glass  
loading documents 47

scanning  
basic information 65  
changing the default settings 44  
for local connection 65  
Linux 68  
Macintosh 67  
TWAIN 67  
WIA 67

serial number 87

service contact numbers 110

SetIP program 38, 39, 83

Smart Panel  
general information 83

specifications  
copier 107  
faximile 108  
general 105  
print media 109, 106  
scanner 107

start button 28, 29

stop button 28, 29

supplies  
available supplies 103  
estimated toner cartridge life 89  
monitoring the supplies life 87  
ordering 103  
replacing toner cartridge 103

SyncThru™ Web Service  
general information 82

## T

time setting 43

toner cartridge  
estimated life 89, 105  
handling instructions 89  
non-Samsung and refilled 89  
redistributing toner 90, 103  
storing 88

toner save mode 45

tray  
adjusting the width and length 48  
changing the tray size 48  
loading paper in manual tray 49  
setting the paper size and type 52

turning on the machine 30

TWAIN, scan 67

## U

understanding the control panel  
power button 30

- USB cable
  - driver installation 33

- using setip program
  - Linux 84
  - Macintosh 84
  - Windows 84

## **W**

- watermark
  - create 57
  - delete 57
  - edit 57
  - print 57

- WIA
  - scan 67

- Windows
  - common Windows problems 100
  - driver installation for network connected 39, 33
  - printing 54
  - scanning 65, 35, 32
  - using SetIP 38, 84