

Menus and Sub menus Outline

Section 4

- 2.7.3.3.2 On
- 2.7.3.4 Message Acceptance
- 2.7.3.5 Expiry Date
 - 2.7.3.5.1 Maximum
 - 2.7.3.5.2 1 Hour
 - 2.7.3.5.3 12 Hours
 - 2.7.3.5.4 1 Day
 - 2.7.3.5.5 1 Week
- 2.7.3.6 Delivery Time
 - 2.7.3.6.1 Immediately
 - 2.7.3.6.2 1 Hour later
 - 2.7.3.6.3 12 Hours later
 - 2.7.3.6.4 1 Day later
 - 2.7.3.6.5 1 Week later
- 2.7.3.7 Priority
 - 2.7.3.7.1 High
 - 2.7.3.7.2 Normal
 - 2.7.3.7.3 Low
- 2.7.3.8 Report Allowed
 - 2.7.3.8.1 Off
 - 2.7.3.8.2 On
- 2.7.3.9 Page Duration
- 2.7.3.0 Profile

Section 4

2.7.4 Push Message

2.7.4.1 Receive

2.7.4.1.1 Never

2.7.4.1.2 Always

2.7.4.1.3 Only White List

2.7.4.2 White List

2.7.5 Broadcast*

2.7.5.1 Receive

2.7.5.1.1 Disable

2.7.5.1.2 Enable

2.7.5.2 Channel List

2.7.5.2.1 Select

2.7.5.2.2 Add Channel

2.7.5.2.3 Delete

2.7.5.2.4 Edit

2.7.5.3 Language

2.7.6 Default Text Input Mode

2.7.6.1 VoiceMode

2.7.6.2 Predictive Text Mode

2.7.6.3 Alphabet Mode

2.8 Memory Status

3. Games & Apps

3.1 Games

3.2 Alarm

3.2.1 Wake-up Call

3.2.2 Single Use Alarm

3.2.3 Daily Alarm

3.2.4 Remove Alarm

3.2.5 Autopower

3.2.5.1 Disable

3.2.5.2 Enable

3.3 Calendar

3.4 To Do List

3.5 Calculator

3.6 Record Audio

3.6.1 Record

3.6.2 Audio List

3.6.3 Delete All

3.6.4 Memory Status

3.7 Currency Conversion

3.8 World Time

4. MEdia Mall

4.1 Shop Ringtones

4.2 Shop Games

4.3 Shop Graphics

4.4 Shop Multimedia

4.5 Shop Applications

4.6 MEdia Home

5. MEdia Net

5.1 MEdia Net Home

5.2 Favorites

5.3 http://

5.4 Settings

5.5 Clear Cache

6. IM **

7. My MEdia

7.1 Audio

7.2 Graphics

7.3 Video

7.4 Others

7.5 Delete All

7.6 Memory Status

8. Address Book

8.1 Search

8.2 New Entry

8.3 Group Search

8.4 Group Edit

8.5 Speed Dial

8.6 Delete All

8.7 Own Number

8.8 Memory Status

8.9 SDN*

9. Settings

9.1 Time & Date

9.1.1 Set Time

9.1.2 Set Date

9.1.3 Time Format

9.1.3.1 12 Hours

9.1.3.2 24 Hours

9.1.4 Auto Update

9.1.4.1 Off

9.1.4.2 On

9.1.4.3 Confirm First

9.2 Phone Settings

9.2.1 Language

9.2.2 Greeting Message

9.2.3 Short Cut

9.2.3.1 Up Key

9.2.3.2 Down Key

9.2.3.3 Right Key

9.2.3.4 Left Key

9.2.4 Extra Settings

9.3 Display Settings



9.3.1 Wallpaper

9.3.1.1 Shop Graphics

9.3.1.2 Default Wallpapers

9.3.1.3 Downloaded Graphics

9.3.2 Front LCD Display

9.3.2.1 Clock

9.3.2.1.1 Digital Clock

9.3.2.1.2 Analog Clock

9.3.2.2 LCD Brightness

9.3.3 Text Display

9.3.3.1 Disable

9.3.3.2 Enable

9.3.4 Text Color

9.3.5 Dialing Font Color

9.3.5.1 Basic

9.3.5.2 Rainbow

9.3.6 Menu Style

9.3.6.1 Grid Style

 
9.3.6.2 Page Style

9.3.6.3 Bar Style

9.3.7 Back Light

9.3.7.1 On

9.3.7.1.1 15 Seconds



Menus and Sub menus Outline

Section 4

9.3.7.1.2 30 Seconds

9.3.7.1.3 1 Minute

9.3.7.1.4 3 Minutes

9.3.7.1.5 10 Minutes

9.3.7.2 Dim

9.3.7.2.1 Off

9.3.7.2.2 15 Seconds

9.3.7.2.3 30 Seconds

9.3.7.2.4 1 Minute

9.3.7.2.5 3 Minutes

9.3.8 Graphic Logo

9.3.8.1 Off

9.3.8.2 On

9.4 Sound Settings

9.4.1 Ring Tone

9.4.1.1 Shop Ringtones

9.4.1.2 Default Ringtones

9.4.1.3 Downloaded Ringtones

9.4.1.4 Ring Volume

9.4.1.5 Alert Type

9.4.1.5.1 Melody

9.4.1.5.2 Vibration

9.4.1.5.3 Vibration+Melody

Section 4: Menu Navigation 71

Section 4

9.4.2 Keypad Tone

9.4.2.1 Type

9.4.2.1.1 Off

9.4.2.1.2 Ping Pong

9.4.2.1.3 Raindrop

9.4.2.1.4 Tone

9.4.2.1.5 Beep

9.4.2.2 Volume

9.4.3 Message Tone

9.4.3.1 Text Messages

9.4.3.1.1 Tone

9.4.3.1.2 Mode

9.4.3.1.2.1 Off

9.4.3.1.2.2 Tone

9.4.3.1.2.3 Vibration

9.4.3.1.3 Repetition

9.4.3.1.3.1 Once

9.4.3.1.3.2 Periodic

9.4.3.2 Multimedia Messages

9.4.3.2.1 Tone

9.4.3.2.2 Mode

9.4.3.2.2.1 Off

9.4.3.2.2.2 Tone

9.4.3.2.2.3 Vibration

Menus and Sub menus Outline

Section 4

9.4.3.2.3 Repetition

9.4.3.2.3.1 Once

9.4.3.2.3.2 Periodic

9.4.4 Power On/Off

9.4.4.1 Off

9.4.4.2 Mystic

9.4.4.3 Exciting

9.4.5 Folder Tone

9.4.5.1 Off

9.4.5.1 Future

9.4.5.1 Crystal

9.4.6 Alerts on Call

9.4.6.1 Off

9.4.6.2 On

9.4.7 Quiet Mode

9.4.7.1 Vibration All

9.4.7.2 Silent All

9.4.8 Extra Tones

9.5 Network Services

9.5.1 Call Forwarding

9.5.1.1 Forward Always

9.5.1.2 Busy

9.5.1.3 No Reply

9.5.1.4 Unreachable

Section 4: Menu Navigation

Section 4

9.5.1.5 Cancel All

9.5.2 Call Barring*

9.5.2.1 All Outgoing

9.5.2.2 International

9.5.2.3 International Except to Home

9.5.2.4 All Receiving

9.5.2.5 Receiving While Abroad

9.5.2.6 Cancel All

9.5.2.7 Change Barring Password

9.5.3 Call Waiting

9.5.3.1 Voice Calls

9.5.3.2 Data Calls

9.5.3.3 Cancel All

9.5.4 Network Selection*

9.5.4.1 Automatic

9.5.4.2 Manual

9.5.5 Caller ID

9.5.5.1 Default

9.5.5.2 Hide Number

9.5.5.3 Send Number

9.5.6 Closed User Group*

9.5.6.1 Index List

9.5.6.2 Outside Access

Menus and Sub menus Outline

Section 4

9.5.6.2.1 Disable

9.5.6.2.2 Enable

9.5.6.3 Default Group

9.5.6.3.1 Disable

9.5.6.3.2 Enable

9.5.7 Band Selection

9.5.7.1 GSM 1800

9.5.7.2 GSM 850/1900

9.6 Bluetooth

9.6.1 Activation

9.6.2 My Devices

9.6.3 My Phone's Visibility

9.6.4 My Phone's Name

9.6.5 Secure Mode

9.6.6 Bluetooth Services

9.6.6.1 Headset

9.6.6.2 Handsfree

9.6.6.3 Serial Port

9.6.6.4 Dial-up

9.6.6.5 File Transfer

9.7 Voice Recognition

9.7.1 Choice Lists

9.7.2 Sensitivity

Section 4

9.7.3 Digit Dialing

9.7.3.1 Select Location

9.7.3.2 Adapt Digits

9.7.3.3 Reset Digits

9.7.4 Sound

9.7.4.1 Prompts

9.7.4.2 Digits

9.7.4.3 Names

9.7.4.4 Name Settings

9.7.4.4.1 Speed

9.7.4.4.2 Volume

9.7.5 VoiceMode

9.7.5.1 Adapt VoiceMode

9.7.5.2 Tutorial

9.7.5.3 Reset VoiceMode

9.7.6 About

9.8 Security

9.8.1 PIN Check

9.8.1.1 Disable

9.8.1.2 Enable

9.8.2 Change PIN

9.8.3 Phone Lock

9.8.3.1 Disable

Menus and Sub menus Outline

Section 4

9.8.3.2 Enable

9.8.4 Change Password

9.8.5 Privacy

9.8.5.1 Disable

9.8.5.2 Enable

9.8.6 SIM Lock

9.8.6.1 Disable

9.8.6.2 Enable

9.8.7 FDN Mode*

9.8.7.1 Disable

9.8.7.2 Enable

9.8.8 Change PIN2*

9.9 Connection Settings

9.9.1 MEdia Net

9.9.2 Home

9.9.3 Roam

9.9.4 Cingular MMS

9.9.5 Cingular IM

9.9.6 Cingular Email

9.9.7 Cingular Syncml

9.9.8 Cingular JAVA

9.9.9 Profile 9

9.9.9.1 Profile Name

Section 4

9.9.9.2 Homepage URL

9.9.9.3 Bearer

9.9.9.3.1 GPRS

9.9.9.3.2 DATA

9.9.9.4 Proxy Setting

9.9.9.5 User Name

9.9.9.6 Password

9.9.9.7 APN

9.9.9.8 Proxy Status

9.9.9.8.1 Deactivate

9.9.9.8.2 Activate

9.9.9.9 Primary DNS

9.9.9.0 Secondary DNS

9.9.0 Profile 10

9.9.0.1 Profile Name

9.9.0.2 Homepage URL

9.9.0.3 Bearer

9.9.0.3.1 GPRS

9.9.0.3.2 DATA

9.9.0.4 Proxy Setting

9.9.0.5 User Name

9.9.0.6 Password

9.9.0.7 APN

Menus and Sub menus Outline

9.9.0.8 Proxy Status

9.9.0.8.1 Deactivate

9.9.2.8.2 Activate

9.9.0.9 Primary DNS




9.9.0.0 Secondary DNS

9.0 Reset Settings

Section 4

*** Shows only if supported by your SIM card.**

   ****The IM menu settings are predicated by your Default Community Setting**



Section 5: Entering Text

Topics Covered

 
- Changing Text Entry Mode
 - Using T9 (Predictive Text) Mode
 - Using Alphabet Mode
 - Using Number Mode
 - Using Symbol Mode
 - Voice Mode
 - Using Voice Mode Advance Features
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the amount of key strokes associated with entering text.

Changing Text Entry Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

For example, the following screen displays when writing a text message.

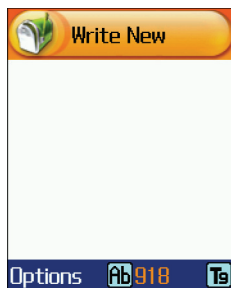

1. To select **T9** mode, press the key until displays.
2. To select **Alphabet mode**, press the key until displays.
3. To select **Number mode**, press the key until displays.
4. To select **Symbol mode**, press the key until displays.
5. To select **VoiceMode™**, press the key until **VoiceMode™** displays.

Using T9 (Predictive Text) Mode

Entering a Word in T9 Mode

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter “Hello”, press the **4,3,5,5**, and **6** keys.:



The word you are typing appears in the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key or the **Up** (↶) or **Down** (↷) Navigation key to display alternative word choices for the keys that you have pressed.

For example, both “Of” and “Me” have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the (␣) key and start entering the next word.

Adding a New Word into the T9 Dictionary

If you cannot find the word you want, you can add the word in the T9 dictionary for the next use.

1. After pressing the keys corresponding to the word you want to add, press the key or the **Up** () or **Down** () Navigation key to display the alternative words.
2. When there are no more alternative words, the display shows **Add** on the bottom line. Press the **Add** soft key.
3. If necessary, clear the word using the key and enter the word you want to add using Alphabet mode. See "Using Alphabet Mode" on page 85.
4. Press the **OK** soft key or the key.
The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Tips for Using T9 Mode

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the key. There are three cases; Initial capital , Capital lock , and Lower case .
- You can move the cursor by using the **Left** () and **Right** () Navigation keys. To delete letters, press the key. Press and hold the key to clear the display.

Using Alphabet Mode

Alphabet mode allows you to enter letters by pressing the numeric key associated with the letter you want to enter. Press the key until the letter you want appears in the display.

Entering a Word in Alphabet Mode

1. Press the key (1 to 0) labeled with the letter you want.
2. Select the other letters in the same way.

Note: When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

-  . , - ? ! @ : () / 1 _
-  A B C 2 Ä Å Æ Ç Γ
a b c 2 à ä å æ Γ
-  D E F 3 É Δ Φ
d e f 3 è é Φ
-  G H I 4 Θ Ψ
g h i 4 ì Ψ
-  J K L 5 Λ
j k l 5 Λ
-  M N O 6 Ñ Ø Ö ö
m n o 6 ñ ø ö ö

-  P Q R S 7 Π Σ Ξ
p q r s 7 β ζ Ξ
-  T U V 8 Ü ü
t u v 8 ù ü
-  W X Y Z 9 Ω
w x y z 9 Ω
-  Space + = < > € £ \$ % & ¥ ¤ Ø

Tips for Using Alphabet Mode

- To insert a space, press the  key.
- To shift case in Alphabet mode, use the  key. There are three cases: Capital Lock , Lower case , and Initial Capital .
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Using Number Mode

Number mode allows you to enter numbers by pressing the key labeled with the number you want. When in a text message screen, press the  soft key to access the Number mode.

Using Symbol Mode

Symbol mode allows you to enter symbols by pressing the number key associated with the symbol you want.

When in a text message entry screen, press the  soft key to access Symbol mode. The Symbol screen displays the

VoiceMode™

available symbols for each key. Use the **Up** (⬆) or **Down** (⬇) Navigation key to cycle through all available symbols.

You can enter up to 10 symbols at one time. When finished, press the **OK** (⏹) soft key or the (S) key. The VoiceMode screen appears in the display.

Press the **Cancel** (⏮) soft key to return to text message entry screen.

Your phone will now be in VoiceMode, press the (P) soft key to select a text entry mode.


VoiceMode™

VoiceMode™ from VoiceSignal Technologies is the fastest, and most convenient way to compose text messages on a mobile phone. VoiceMode lets you use your voice to dictate words, names, punctuation, and even abbreviations (like LOL and TTYL), instead of keying them in by hand.

VoiceMode is seamlessly integrated into your phone's text messaging application, so you can switch from keypad text entry to voice dictation with a push of a button.

Section 5

 Section 5

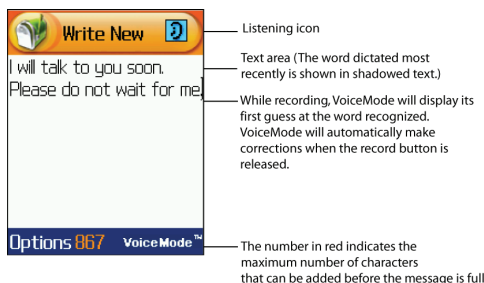

To use VoiceMode when composing a text message, you simply hold down the voice button of your phone. A listening icon  flashes to show that VoiceMode is listening for your voice. Start dictating, pausing briefly between each word. While you are dictating, you will see the words recognized appear in your message. These initial words that appear on the screen are VoiceMode's first guess at what you dictated. When you release the record button, VoiceMode automatically makes corrections based on the context of the phrase, and display its best guess of the words recognized.

Adapting VoiceMode

Before you can use VoiceMode, you must adapt it to recognize the special characteristics of your voice. The adaptation process takes a few minutes and involves reading a list of 122 words, one word at a time.

To Adapt VoiceMode

1. Find a quiet place for adaptation.
2. Start VoiceSignal by pressing the  key located on the right side of your phone.

3. Press the **Settings** soft key or the  key.
4. Select **VoiceMode**. Highlight **Adapt VoiceMode** and press the **Select** soft key or the  key.
The Adapt VoiceMode screen displays to verify the start of the adaptation.
5. When you are ready to start adaptation, select **OK**.
(If you or someone else has completed adaptation earlier, the phone will ask if you want to start from scratch or continue adapting the existing models. Select Yes to discard existing adaptation data and start from scratch, or select No to continue adapting the existing data.)
6. Wait for the beep and then say each word as it appears on the screen. Speak each word clearly and distinctly, using a normal tone and volume. If the adaptation process doesn't detect a word, it will prompt you again to speak the same word.
7. If you want to take a break, press the **Pause** soft key to pause the adaptation process. When paused, continue adaptation by pressing the Continue key.
8. After you say all 122 words, the phone will adapt VoiceMode to your voice. This process will take about one minute to complete.

Note: If you press Cancel during adaptation, the phone will ask if you want to save the adaptation data. Press Yes to save the data, or No to exit without saving. If you do not complete adaptation, be sure to go back and finish adapting to improve dictation recognition.

If you ever need to reset adaptation to its original state, use the following procedure.

To Reset Adaptation

1. Start VoiceSignal by pressing the  key located on the right side of your phone.
2. Press the **Settings** soft key or the  key.
3. Select **VoiceMode** and highlight **Reset VoiceMode**. Press the **Select** soft key or the  key.
4. When prompted, press **OK** to reset adaptation, or **Cancel** to exit without resetting the adaptation data.

Using VoiceMode

After adapting VoiceMode, you can start using it when composing text messages.

To Start VoiceMode

1. In Idle mode press the **Menu** () soft key to access Menu Mode. Highlight **Messaging** and press the **Select** soft key or the  key.
2. Select **Create New message** and highlight **Text Message**. Press the **Select** soft key or the  key.
3. Press the  key to select VoiceMode. A VoiceMode Tutorial message appears. Press the **View** soft key to proceed or **Cancel** to return.
4. To activate VoiceMode, press and hold the  button on the right side of the phone.

VoiceMode beeps and animates the Listening icon at the top right of the screen to indicate that you can begin speaking.

To dictate text using VoiceMode

1. Speak clearly and pause distinctly between each word. (Double-click the audio link, below, to hear an example of how to dictate text.)
"When... speaking... COMMA... pause... briefly... between... each... word... PERIOD"
2. When you are done or want to pause, release the  button to stop the phone from listening. Although the phone is not listening, the text message application will remain in VoiceMode. To switch to another mode, press the  soft key.

Using VoiceMode Advanced Features

 
Using Choice Lists

Every time you dictate a word using VoiceMode, it maintains a list of alternatives that closely resemble the recognized word. These choice lists let you quickly change a word that was not recognized correctly.

To use choice lists

1. Use the **Left** () or **Right** () Navigation keys to highlight a word you want to change, and then press the  key.

A choice list appears with possible matches for the word.

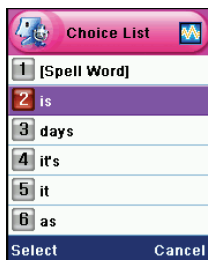

2. Use the **Up** (⬆) and **Down** (⬇) Navigation key to highlight a word, then press the **Select** soft key or the **s** key.

 
Spelling a Word

If a word is not recognized and does not appear in the choice list, it might be because that word is not in the dictation dictionary. In this case, you can spell out the word manually. When you spell a word that is not part of the dictation dictionary, the new word is added to the dictionary. This enables VoiceMode to recognize the new word the next time it is spoken.

To Spell a Word

1. Display the choice list for the word you want to spell out.
2. Select [Spell Word].

You will see an empty text box, where you can manually spell the word using the keypad.

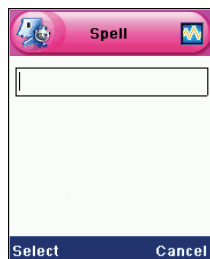

3. As you start typing letters, you will see words with similar spellings appear below the text box. Use the up and down Navigation keys to scroll the dictionary. While scrolling the dictionary, the words will populate the text box. Use the  key to edit the entry in the text box.



Changing the Text Case

When using VoiceMode, you can specify the case (all caps, initial caps, or lower case) for text that you dictate. By default, VoiceMode formats text according to the

context of the words in the message. For example, words following periods are capitalized.

To Specify the Case of the Next Dictated Word

1. In VoiceMode, press the  key.

The VoiceMode icon changes to **VOICEMODE** (all caps).

Press the  key again to change the text case icon to **Voicemode** (initial caps), or **voicemode** (lower case).




2. Dictate the word you want to appear in the specified case.

Changing the text case will apply to all the words spoken directly after specifying the case. You must manually change the case back to the default.

Entering Punctuation Characters

VoiceMode recognizes most punctuation characters by name. The following is a complete list of the names of punctuation characters you can dictate.

. period	(open-paren	. dot
, comma	) close-paren	. point
? question-mark	[open-bracket	/ slash
! exclamation-point	] close-bracket	\ backslash
: colon	{ open-brace	:-) happy-face
; semicolon	} close-brace	:(sad-face
- hyphen	< open-angle-bracket	< less-than
-- em dash	> close-angle-bracket	> greater-than
... ellipsis	vertical-bar	= equal
' apostrophe	# pound-sign	@ at-sign
's apostrophe-s	\$ dollar-sign	^ caret
" open-quote	% percent	_ underscore
" close-quote	& ampersand	' back-quote
' open-single-quote	* asterisk	~ tilde
' close-single-quote	+ plus	

   

Section 6: Understanding Your Address Book

Topics Covered

- Adding a New Address Book Entry
 - Pauses
 - Dialing a Number from the Address Book
 - Speed Dialing
 - Finding Address Book Entries
 - Deleting Address Book Entries
 - Checking Memory Status
-

This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Section 6

Adding a New Address Book Entry

There are two ways to store a number:

- Entering the number in Idle mode and press the **Save** soft key or the  key.
- Use the **New Entry** option in the **Address Book** menu.

Storing a Number in Idle Mode

1. Enter the number you want to store.

Note: If you make a mistake while entering a number, correct it using the  key.

2. When you are sure that the number is correct, press the **Save** soft key or the  key.
3. Use the **Left** () or **Right** () Navigation key to highlight an icon to identify the category in which the number is to be stored and press the **Select** soft key or the  key.

The following categories are available:

-  : Mobile phone number
-  : Office number
-  : Home number

4. Select a memory location, choose **SIM Memory** or **Phone Memory** and press the **Select** soft key or the  key.

Note: When you change phones, any numbers stored in your SIM card memory are automatically available with the new phone, whereas any numbers stored in the phone's memory will need to be re-entered.

Adding a New Address Book Entry

5. Enter a name. For further details about how to enter characters, see "Section 5: Entering Text" on page 81.
6. Press the **OK** soft key or  key to store the name and number.
After storing, the phone displays the phone number and name you just stored.
7. To dial the number, press the  key or the  key.
8. To use the entry options, press the **Options** soft key. For further details see "Using Address Book Entry Options" on page 107.
9. To return to the Idle screen, press the  key.

Storing a Number Using the New Entry Option

1. In Idle mode, press the **Menu**  soft key to access the Menu mode and select **Address Book**.
2. Select **New Entry**. The New Entry Type screen appears in the display. Select from the following entry types
 -  : Mobile phone number
 -  : Office number
 -  : Home number
 -  : Email Address

Note: Follow standard email address formats when entering an email address. For example, *someone@providersname.com*. An error message displays when an email address has been entered incorrectly.

3. Using the **Left**  or **Right**  Navigation key, highlight an entry type for the number to be stored and press the **Select** soft key or the  key.

4. Select a memory location, either **SIM Memory** or **Phone Memory**.

Note: When you are saving an Email address, SIM Memory is not available.

5. Enter a name and press the **OK** soft key.
For further details about how to enter characters, see "Section 5: Entering Text" on page 81.
To add the number to an existing name, select the one you want from the list.
6. Enter the number or address you want to store and press the **Save** soft key or the  key.
7. After storing, the phone displays the phone number and name you just stored.
8. Press the  key to dial the number.

Storing Your Phone Number

To store your own phone number(s), use the following steps:

1. In Idle mode, press the **Menu** () soft key to access Menu mode and select **Address Book**.
2. Select **Own Number** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to select location **Number 1** and press the **Edit** soft key or the  key.
4. Enter the number and press the **OK** soft key or the  key.

Pauses

5. Enter the name and press the **OK** soft key or the  key.

Pauses

When you call automated systems (like banking services and voice mail) you are often required to enter a password or account number. Instead of manually entering the numbers each time you can store the numbers in your Address Book along with special characters called pauses.

Enter the number you want to store, press and hold the  key to insert a two-second pause. A “P” appears in the display.

Note: You can enter multiple two-second pauses to extend the length of the pause. For example two consecutive pauses equates to a pause time of four seconds.

Dialing a Number from the Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by using the location numbers that were assigned to them in the Address Book in the order they were saved.

Note: If you cannot remember a location number, you must go into the **Search** option in the **Address Book** menu to search for the entry by name.

Dialing a Number from the SIM Card

1. In Idle mode, enter the location number for the phone number you want to dial and press the  key. The number associated with the location number displays.
2. You can press the **Up** () or **Down** () Navigation key to view other numbers that have been saved on your SIM card.
3. Press the **Dial** soft key or the  when you have selected the number you want.

Dialing a Number from the Phone's Memory

1. In Idle mode, press and hold the  key. A + appears.
2. Enter the location number of the phone number you want and press the  key. The number associated with the location number displays.
3. You can press the **Up** () or **Down** () Navigation key to view other numbers that have been saved in your Phone memory.
4. Press the **Dial** soft key or the  key when you have selected the number you want.

Speed Dialing

You can assign up to 8 phone numbers from the Address Book that you use frequently to the number keys (2 to 9). You can then dial them easily whenever you want, simply by pressing and holding the associated number key.

Setting up Speed Dial Entries

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Speed Dial** and press the **Select** soft key or the  key.
4. Select the Speed Dial location you wish to assign a number and press the **OK** soft key or the  key.

Note: If you have already assigned a number to the speed dial location, the **Options** soft key replaces the **OK** soft key.

Note: Memory location 1 is reserved for your Voice Mail server number.

5. Highlight a name from the Address Book list or enter the first few letters of the name associated with the number you would like to assign to the Speed Dial location and press the **Select** soft key or the  key.
6. Select a number, (if there is more than one number associated with the address book entry) and press the **Select** soft key.

7. The number displays in the speed dial list.
8. When you have finished, press the  key.

Editing the Speed Dial List

You can edit the speed dial list by changing the number assignment or deleting all of the entries on the speed dial list.

Changing a Number Assigned to a Key

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Speed Dial** and press the **Select** soft key or the  key.
4. Select the Speed Dial location you want to change and press the **Options** soft key or the  key.
5. Select **Change** and press the  key or the  key.

Note: At this point press the  key to return to the Speed Dial list.

6. Use the **Up** () or **Down** () Navigation key to highlight a name from the Address Book list or enter the first few letters of the name associated with the number you would like to assign to the Speed Dial location and press the **Select** soft key or the  key.
7. Press the **Select** soft key or the  key to save number. The new number or name displays in the Speed Dial location.

Speed Dialing

8. When you have finished, press the  key.

Deleting Speed Dial Entries

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Speed Dial** and press the **Select** soft key or the  key.
4. Select the number assigned to the Speed Dial location you want to delete and press the **Options** soft key or the  key.
5. Select **Delete** and press the  key or the  key.
Alternatively, if you want to delete all speed dial entries, select **Delete All** and press the  key or the  key.
6. Press the **Yes** soft key to confirm the deletion.
7. When you have finished, press the  key.

Finding Address Book Entries

After storing numbers in the Address Book, you can search for them in two ways; by name and by caller group.

Finding a Number by Name

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Select **Search** and press the **Select** soft key or the  key. You are asked to enter a name.
4. Enter the first few letters of the name that you want to find.
The Address Book entries are listed, highlighting the entry that most closely matches your input.
5. To view the highlighted entry, press the **Select** soft key or the  key. Press the  key to return to Address Book entries.
6. To select a different entry, press the **Up** () or **Down** () Navigation key until the entry you want highlights.
7. To look for a name starting with a different letter, press the key labeled with the letter you want.
8. Once you have found the entry, press the  key or the  key to dial the number.
Alternatively, press the **Options** soft key to access the Address Book entry options.

Using Address Book Entry Options

While accessing any Address Book entry, press the **Options** soft key to access the options for the entry. The following options are available:

- **Edit:** allows you to edit the name and/or number
One Entry: to change the name and/or phone number for the selected entry. If you change the name, the number is saved separately with the new name.
All Entry: to change only the name of the entry.
- **Send Message:** launches the Create New Message Screen. You may create and send a text message or multimedia message for the selected number.
- **Paste:** allows you to paste the number into the normal dialing mode. Use this option to dial a number similar to one in the Address Book, such as a different extension in the same office. Use the  key to change the number as required. When you are ready to dial, press the  key.
- **Delete:** allows you to delete the name and number for the chosen number. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key or the  key.
- **Copy:** allows you to copy the number to another location. You can select the memory location, either SIM or Phone, and the location number. If the number already exist in the selected location an Overwrite popup appears in the display. Select **Yes** to overwrite and replace the entry.
- **Caller Group:** allows you to organize your Address Book entries in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the 10 groups available.
To remove an entry from a group, select the **No Group** option.
- **Add Entry:** allows you to add a new number to the currently selected name.

Finding a Number by Caller Group

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Use the **Up** () or **Down** () Navigation key to select **Address Book** and press the **Select** soft key or the  key.
3. Highlight **Group Search** and press the **Select** soft key or the  key.
4. Use the **Up** () or **Down** () Navigation key to

highlight a caller group or enter the first few letters of the name associated with the caller group you want to find.

The caller groups are listed, starting with the group that most closely matches your input.

Press the **Select** soft key or the  key. The Address Book entries in the caller group are listed.

5. To view the highlighted entry, press the **View** soft key or the  key.
6. To select a different entry, press the **Up** () or **Down** () Navigation key until the entry you want highlights.
7. Once you have found the entry, press the  key or the  key to dial the number.
Alternatively, press the **Options** soft key to access the Address Book entry options.

Editing a Caller Group

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Select **Group Edit** and press the **Select** soft key or the  key. Use the **Up** () or **Down** () Navigation key to highlight the group you want and press the **Options** soft key or the  key.
4. Select each option and change the settings accordingly. The following options are available:
 - **Call Ring Tone:** allows you to set a ring tone to be used when you receive a voice call from a member of that group.
 - **SMS Tone:** allows you to set a ring tone to be used when you receive a message from a member of that group.
 - **Graphic:** allows you to set a graphic icon to be displayed when you receive a voice call from the member of that group.
 - **Group Name:** allows you to assign a name to the group.
5. When you have finished, press the  key.

Deleting Address Book Entries

You can delete entries in the Address Book one by one, or all of the entries in the selected memory or both memories.

Deleting an Address Book Entry

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.

3. Select **Search** and press the **Select** soft key or the  key.
4. Use the **Up** () or **Down** () Navigation key to highlight a name from the Address Book list or enter the first few letters of the name associated with the number you would like delete.
The Address Book entries are listed, highlighting the entry that most closely matches your input.
5. Press the **Select** soft key or the  key to select a number.
6. Press the **Options** soft key, use the **Up** () or **Down** () Navigation key to highlight **Delete** and press the  key or the  key.
7. Press the **Yes** soft key to confirm the deletion.
8. When you have finished, press the  key.

Deleting all Entries

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Select **Delete All** and press the **Select** soft key or the  key.
4. To place a check mark by the memory you want to empty, press the  key or the  key.
5. When you have finished, press the **Delete** soft key to delete the entries in the selected memory location(s).

Checking Memory Status

6. Enter the phone password and press the **OK** soft key or the  key.

 
 
 
Note: The password is preset to "00000000". To change this password, see "Change Password" on page 160.

7. When the confirmation message appears, press the **Yes** soft key or the  key.
To cancel the deletion, press the **No** soft key.
8. When you have finished, press the  key.

Checking Memory Status

Memory Status, allows you to check the capacity and how many names and numbers are stored in the Address Book, in both the SIM and the phone's memory.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Address Book** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Memory Status** and press the **Select** soft key or the  key, to display **Memory Status**.
4. When you have finished, press the  key.



Section 7: Messaging

Topics Covered

- Using Instant Messenger
 - Creating and Sending New Messages
 - Creating a Long Text Message
 - Creating and Sending a Multimedia Message
 - Retrieving New Messages
 - My Messages
 - Viewing Messages
 - Deleting Messages
 - Changing Message Settings
 - Checking Memory Status
-

This section allows you to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Using Instant Messenger

Instant Messenger (IM) is a way of sending short, simple messages that are delivered immediately to users online at the moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

Note: Your phone is set to use your service provider's messenger service by default. You can change the configurations for Instant Messenger, such as the default community or auto sign on.

Start Your Messenger

Note: The d307 handset supports the following Instant Messaging Applications: AIM, ICQ, and YAHOO.

1. In Idle mode, press the **IM** soft key.
Alternatively, press the **Menu** () soft key to access Menu mode. Select **Messaging**, highlight **IM** and press the **Select** soft key or the  key.
2. Highlight your established IM application and press the **Select** soft key or the  key.
3. Select one of the following and press the **Select** soft key or the  key.
 - **Sign On** for AIM
 - **Connect** for ICQ
 - **Sign In** for YAHOO

Using Instant Messenger

4. Enter your **Login ID** (this field title will change to reflect the name used in each instant message application) and your **Password** and press the **OK** soft key.

Note: Use the **Down** () Navigation key to select the **Auto-Sign In** option and press the  key. Press the **OK** soft key to continue.

5. Press the **Options** soft key and select **Buddy List**. The subscribers of the messenger service displays.
6. Select the person you want to talk to and press the  key.
7. Start the conversation with the person as you would on a normal messenger for a PC.
8. When you want to end the conversation, press the **Options** soft key and select **End Conversation**.
9. Press the **Options** key and select **Sign Out** to log off IM.

Viewing the Conversation Log

You can view the log of your conversations in the Instant messenger Conversation log.

Online or offline, press the **Options** soft key and select **Saved Convs.**

Creating and Sending New Messages

This section guides you through the procedure to send various types of messages.

Creating and Sending a Simple Text Message

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Create New Message** and press the **Select** soft key or the  key.
4. Highlight **Text Message** and press the **Select** soft key or the  key. The **Write New** screen appears in the display.

Note: Use the  key to change text input settings. To changed letter case in ABC mode press the  key.

5. Create your message.

If you make a mistake, press the **Clear** () key to delete the character or press and hold the **Clear** () key to clear the display.

6. When you have finished writing the message, press the **Options** soft key. Select one of the following options:
 - **Send to Number:** allows you to send your message to a specified number.
 - **Send to Email:** allows you to send your message to a specified email address.

Creating and Sending New Messages

The **Destination** screen appears in the display

Alternatively, press the  key, to display the **Destination** screen.

Note: For details about using other options, see the next page.

7. Enter your destination number or email address. If you want to send the message to multiple destinations, press the **OK** soft key after entering a number or email address and repeat this step.

Alternatively, press the **Options** soft key, and select **Add Address Book** to add an entries number or email address from your Address Book. To add multiple destination numbers or email addresses at one time, select **Add Group**. All entries under the selected group will be added.

8. When you have finished entering destination numbers, press the  key or the  key to send message.

Creating and Sending an Enhanced Text Message

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Create New Message** and press the **Select** soft key or the  key.
4. Highlight **Text Message** and press the **Select** soft key or the  key. The **Write New** screen appears.

5. Create your message.

If you make a mistake, press the **Clear** (T9) key to delete the character or press and hold the **Clear** (T9) key to clear the display.

6. While entering the message text, press the **Options** soft key to access the following options to enhance your message:

Note: When you add media items to a message, the number of characters you can enter decreases.

- **Send to Number:** allows you to select from Save and Send or Send Only to the specified number.
- **Send to Email:** allows you to Save and Send or Send only to the specified email address.
- **Insert:** allows you to add text from the Templates folder, an entry in Address Book, or a URL address in the Favorites folder.
- **Add Media:** allows you to add one from various default media items, such as Animations, Melodies and Downloads.
- **Attach:** you can add entries from the Name Card (vCard) and from the Calendar (vCalendar).
- **Save Message to:** allows you to save the message to Draft or to My Folder.
- **Language Select:** allows you to change the language to be used in T9 input mode.
- **Text Style:** allows you to format the style of the text.

For the Size attribute, Medium, Large, and Small sizes are available. For the Bold, Italic, Underline and Strike through attributes, select Off or On.

Creating a Long Text Message

7. Complete the message, and send or save it by following the procedure from "Creating and Sending a Simple Text Message" on page 116.

Creating a Long Text Message

When you write a text message, the phone automatically splits it into several messages if your message exceeds the maximum number of characters allowed for sending. The number of split messages to be sent is shown each time your message is split. Depending on your service provider, the maximum number of characters may vary.

Creating and Sending a Multimedia Message

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging**. Highlight **Create New Message** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Multimedia Message** and press the **Select** soft key or the  key.
4. When **Add Here** highlights, press the **Options** soft key and add the message contents using one of the following options:
 - **Add Text:** enter the message text and press the  key. While entering text, you can add a message template or an entry in Address Book, or an URL address in the Favorites folder, or change the input language by pressing the **Options** soft key.
 - **Add Graphic:** allows you to add an image.

- **Add Video:** allows you to add a video clip. You can add one of video clips stored in the phone's memory.
- **Add Audio:** allows you to add a sound file. You can record a new audio clip or add an existing audio clip, or select one of sound clips stored in the Audio folder.
Select Record Audio to record a new voice memo or Audio List to add one of the voice memos or sound clips stored in the phone's memory. You can add Downloaded sounds if they are in correct format and your service provider supports them.
- **Add Subject:** allows you to enter text for the subject.
- **Send:** allows you to send the message.
- **Save to:** saves the message to Draft or My Folder.
- **Settings:** allows you to change the message settings. After changing the settings, press the  soft key or the  key to go back to the message screen.
- **Add Destination:** allows you to enter destination numbers or addresses. After adding them, press the  soft key or the  key to go back to the message screen.
- **Preview:** shows the message you created.

Note: You can add only one video, and one graphic file per page.

5. If you need to add another page for additional information, use the **Up** () or **Down** () Navigation key to highlight **Page 1/x**. Press the **Options** soft key and select **Add Page**.
6. Repeat step 4 until you have finished creating your message.

7. If you want to change the added items, scroll to the one you want and press the **Options** soft key or  key.
Select the option you would like to change and press the  key.
8. When you have finished creating the message, press the **Options** soft key and choose **Send**.
9. Select a destination type, **To**, **Cc**, or **Bcc** and press the **Select** soft key or the  key.
10. Choose one of the following options and press the **Select** soft key or the  key:
 - **Phone Number:** allows you to enter the phone number of the recipient.
Enter a phone number or press the **Names** soft key to display Address Book. Use the **Up** () or **Down** () Navigation key to highlight an entry or enter the first few letters of the name associated with the number you would like to send a message and press the **OK** soft key or the  key.
 - **Email Address:** allows you to enter the email address of the recipient.
Enter an Email Address and press the **OK** soft key.
 - **Address Book:** allows you to retrieve a number from your Address Book.
Use the **Up** () or **Down** () Navigation key to highlight an entry or enter the first few letters of the name associated with the number you would like to send a message and press the **OK** soft key or the .

11. To add a destination, select **Add Destination** and repeat from step 9.

If you want to edit the destinations, select the one you want. You can change or delete it.

12. To enter additional numbers or addresses to the other destination types, press the  key or the  soft key and repeat steps 8 through 12.

You can enter up to 10 destination search to **To**, **Cc**, and **Bcc**.

13. When you have finished entering the destinations, select **Send Message**. Your phone sends the message.

Using Message Templates

Your phone has message templates to allow you to retrieve them when creating a message. You can change the templates as your preferences or send a message immediately.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key.
3. Use the **Up** () or **Down** () Navigation key to highlight **Templates** and press the **Select** soft key or the  key.
4. Select a template and press the **Options** soft key to access the following options:

- **Edit**: allows you to change the template.

Select **Edit** and press the  key or the  key

Retrieving New Messages

(to delete unwanted text, press the  key).
Edit text and press the **OK** soft key to save.

Note: See "Section 5: Entering Text" on page 81 for detail information about entering text.

- **Send Message:** allows you to send an SMS message using the template.

Select **Send Message**, press the  key or the  key and follow the steps in "Creating and Sending a Simple Text Message" on page 116 to send message.

- **Delete:** deletes the template.

Select **Delete**, press the  soft key or the  key and press the **Yes** soft key to confirm deletion.

- **Add New:** allows you to add a frequently used message to the template list.

Select **Add New** and press the  key or the  key.
Enter new message and press the **OK** soft key.

Note: See "Section 5: Entering Text" on page 81 for detail information about entering text.

5. When you have finished, press the  key.

Retrieving New Messages

While text messages from other phones are delivered directly to your phone, MMS messages and emails will be stored in the Inbox of the message server and the server will alert you to new messages. Therefore you need to retrieve new messages to your phone and read them on the phone.

Retrieving an MMS Message

When a new MMS message comes in, the display shows the MMS Message icon () and a text notification along with the sender's number.

1. Press the **View** soft key or the  key to view brief information about the message, such as the sender's number, the message size, and the subject.
To view the message later in the Inbox, press the **Exit** soft key.
2. Press the **Options** soft key or the  key to access the following options:
 - **View**: allows you to view the message received.
 - **Delete**: deletes the message.
 - **Move to My Folder**: allows you to move your messages to a folder you have defined.
 - **Sort by**: allows you to sort this message by Date, Name, Subject, Size and Type.
 - **Protection**: allows you to set the protection for a message.
3. Select **View**.
Your phone retrieves the message contents from the server and displays it.
4. To scroll through the message, press the **Up** () or **Down** () Navigation key.
5. When you have finished, press the  key.

My Messages

- **Inbox**: stores incoming SMS, MMS, CB, and WAP message
- **Note**: stores notes.

Viewing a Message

- **Sent:** stores the messages your phone successfully have sent.
- **Outbox:** stores the messages and emails your phone is attempting to send temporarily.
- **Draft:** stores the messages and emails you have saved without sending or tried to send.
- **My Folders:** allows you to create a folder that is used to store messages. You can create up to 5 message folders to manage your messages and emails.

Viewing a Message

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key, highlight **My Messages** and press the **Select** soft key or the  key. The **My Messages** screen appears in the display.

Select **Inbox**, press the **Options** soft key, highlight **Select** and press the  key or the  key. The message list appears in the display.

Alternatively, select the message folder and press the  key to display the message list.

The icons on the left of the message indicates the message type.

- : indicates SMS
- : indicates MMS

The icons on the right of the message subject indicate the memory location and the lock status.

3. From the message list, press the **Options** soft key to display the following options:

- **View:** allows you to view the message received.
- **Delete:** allows you to delete the selected message or all messages in the message folder.
- **Move to My Folder:** allows you to move your messages to a folder you have defined. See "Managing Your Own Message Folders" on page 129 for detailed information.
- **Sort by:** allows you to sort this message by Date, Name, Subject, Size and Type.
- **Protection:** allows you to set the protection for a message.

4. Select a message and press the  key. The message content displays.

Alternatively, press the **Options** soft key, highlight **View** and press the  key or the  key. The message content displays.

5. Press the **Up** () or **Down** () Navigation key to scroll through the contents of the message. When viewing a Multimedia message, if the message has more than one page, use the **Up** () or **Down** () Navigation key to scroll to other pages.
6. Press the  key or the  key to scroll to the previous or next message.
7. When you have finished, press the  key.

Viewing a Note

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key, highlight **My Messages** and press the **Select** soft key or the  key. The **My Messages** screen appears in the display.
3. Select **Note**, press the **Options** soft key, highlight **Select** and press the  key or the  key. The message list appears in the display.

Alternatively, select the message folder and press the  key to display the message list.

4. From the message list, press the **Options** soft key to display the following option:
 - **View**: allows you to view the message received.
5. Select a message and press the  key. The message content displays.

Alternatively, press the **Options** soft key, highlight **View** and press the  key or the  key. The message content displays.

6. Press the **Up** () or **Down** () Navigation key to scroll through the contents of the message.
7. Press the  key or the  key to scroll to the previous or next message.
8. When you have finished, press the  key.

Using Message Options

While viewing a message, press the **Options** soft key to access the following options:

Options for SMS Messages

- **Reply:** allows you to reply to the message received
- **Forward:** allows you to forward the message to another destination.
- **Delete:** deletes the currently selected message.
- **Callback:** allows you to dial the number that the message has listed.
- **Move to My Folder:** allows you to move the message to a specific folder. You must create a folder in the My Folders option.
- **Move to Phone/SIM:** allows you to move the message to the Phone or SIM card's memory.
- **Extract Address:** allows you to save the address from which the message originated.
- **Save Media/Attach:** allows you to move the attachment to a specific folder.
- **Protection:** allows you to set the protection for the message.

Options for Multimedia Messages

- **Reply:** allows you to reply to the destination from which the message originated. Choose from Reply via Text Message or Reply via Multimedia Message.
- **Reply All:** allows you to reply to all addresses listed in the recipient list.
- **Forward:** allows you to forward the message to another destination. You may Add Subject or simply Send.
- **Delete:** deletes the message.