

Viewing a Message

- **Callback:** allows you to dial the number from which the message was originated.
- **Move to My Folder:** allows you to move this sent message to a folder you have previously created.
- **Extract Address:** allows you to extract the recipient or sender's number or address, and URL, email addresses or phone numbers from the message text so that you can make a call, send a message, or save them in your phone's memory.
- **Save Contents:** allows you to save the Picture, Video, or Sound from the message received.
- **Properties:** shows you information about the message.

Managing Your Own Message Folders

You can create up to 5 message folders to store messages separately from the default message folders.

Creating a Message Folder

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key.
3. Highlight **My Messages** and press the **Select** soft key or the  key.
4. Use the **Up** () or **Down** () Navigation key to highlight **My Folders** and press the  key. The **Create Folder** pop up appears in the display. Press the **Yes** soft key to confirm folder creation.

Alternatively, press the **Options** soft key and select **Create Folder**.

5. Enter a folder name and press the **OK** soft key or the  key.
6. When you have finished, press the  key.

Moving a Message to a Folder

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and press the **Select** soft key or the  key.
3. Highlight **My Messages** and press the **Select** soft key or the  key.
4. Select **Inbox** and press the **Select** soft key or the  key.
5. Select the message you want to move and press the **Options** soft key.
6. Select **Move to My Folder** and press the  key.
7. Select one of the folders you have defined and press the  key. The message is moved to the folder.
8. When you have finished, press the  key.

Renaming a Message Folder

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging**. Highlight **My Messages** and select **My Folders**. The folder list opens.
3. Scroll to the folder you want to rename.
4. Press the **Options** soft key and select **Rename Folder**.
5. Clear the current name and enter a new name.
6. Press the **OK** soft key or the  key.

7. When you have finished, press the  key.

Deleting a Message Folder

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging**. Highlight **My Messages** and select the **My Folders**. The folder list opens.
3. Scroll to the folder you want to delete.
4. Press the **Options** soft key and select **Delete Folder**.
5. Press the **Yes** soft key or the  key to confirm the deletion.
6. When you have finished, press the  key.

Deleting Messages

You can delete the messages in each message folder one by one or all at one time. You can also delete all of your messages at one time.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging**. Highlight **Delete All** and press the **Select** soft key or the  key.
3. Scroll to the message folder you want to delete and place a check mark by pressing the  key. Repeat this step to select more message folders.
To delete all of the messages in the folder, select **All Messages**.
4. Press the **Delete** soft key.

5. A “Delete All” confirmation message displays. Press the  key to mark the “Include Protection” option. Press the **Yes** soft key to confirm the deletion.
6. A message “Are you Sure?” displays, press the **Yes** soft key or the  key.
7. When you have finished, press the  key.

Changing Message Settings

You can set up various options for using messaging services.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Messaging** and highlight **Settings**. Press the **Select** soft key or the  key.
3. Select the type of messages for which you want to change. Press the **Select** soft key or the  key.

IM

The following options are available:

- **Default Community:** allows you to select the community you want to join by default.
- **Profile:** allows you to choose the profile information required to access the instant message utility.

Text Message

The following options are available:

- **Sending Profile:** allows you to set the options for sending text messages.

Changing Message Settings

- **Reply Path:** allows the recipient of your message to send you a reply through your message center, if your network supports this service.
- **Delivery Report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- **Bearer Selection:** allows you to select either GSM or GPRS, depending on your network.
- **Preferred Memory (Sent, Outbox, Draft):** allows you to select a default memory where your outgoing messages are stored. Choose from **In Card** or **In Phone**.

Multimedia Message

The following options are available:

- **Delivery Report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read Reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Auto Download:** you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications.
- **Message Acceptance:** you can specify the category of messages you want to receive.
- **Expiry Date:** you can select the length of time your messages are stored in the message center after they are sent.
- **Delivery Time:** you can set a time delay before the phone sends your messages.
- **Priority:** you can select the priority level of your messages.
- **Report Allowed:** when this option is enabled, the sender of an incoming message receives a delivery report from the network.

- **Page Duration:** you can set the length of time one page of an outgoing message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.
- **Profile:** you can select a connection profile to be used for sending and receiving MMS messages.

Push Message

The following options are available:

- **Receive:** you can select whether the phone receive or reject push-messages from the WAP server. Choose from Never, Always, or Only White List.
- **White List:** allows only users on your contact list to push messages.

Broadcast

The following options are available:

- **Receive:** allows you to enable or disable the reception of broadcast messages.
- **Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:
 - **Select:** use to enable or disable channels on the list by marking or unmarking them, respectively. A check mark displays in front of each selected channel.
 - **Add Channel:** use to enter the ID and title for a new channel.
 - **Delete:** use to remove a channel from the list.
 - **Edit:** use to change the ID and title of an existing channel.
- **Language:** allows you to select your preferred language in which to display cell broadcast messages.

 
 
 
 
 
Please contact your service provider for further details.

Default Text Input Mode

- **VoiceMode:** allows you to set the default text entry mode to VoiceMode.
- **Predictive Text Mode:** allows you to set the default text entry mode to Predictive Text (T9) Mode.
- **Alphabet Mode:** allows you to set the default text entry mode to Alphabet Mode (ABC or abc) Mode.

Checking Memory Status

Memory Status, allows you to check the amount of memory being used and available for storing Text messages, Multimedia messages, Push messages and Note messages.



Section 8: Changing Your Settings



Section 8

Topics Covered

- Time & Date
 - Phone Settings
 - Display Settings
 - Sound Settings
 - Network Services
 - Bluetooth
 - Voice Recognition
 - Security
 - Connection Settings
 - Reset Settings
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Time & Date

Allows you can change the settings for the time and date that appears in the display.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings** and highlight **Time & Date**. Press the **Select** soft key or the  key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the  key.

Set Time

You can enter the current time. You can choose the time format in the **Time Format** menu.

Note: Before setting the time, you must specify your time zone in the **World Time** menu.

Set Date

You can enter the month, day, and year.

Time Format

You can change the time format to **12 Hours** or **24 Hours**.

Auto Update

You can receive time information from your service provider's network.

- **Off:** you need to manually set the time and date according to the current time zone using the **Set Time** menu.

- **On:** the phone automatically updates the time and date according to the current time zone using the network service.
- **Confirm First:** the phone asks for a confirmation before the update.

Note: Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.

Phone Settings

To customize the settings for your phone use the following steps:

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings** and highlight **Phone Settings**. Press the **Select** soft key or the  key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the  key.

Language

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Note: Depending on your country, service provider, or software version of the phone, the **Automatic** option may not display.

Greeting Message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

Short Cut

The Navigation keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly. To assign a shortcut to a key:

1. From the **Phone Settings** menu, select **Short Cut**.
2. Select the key to be used as a shortcut key.
3. Select the menu to be assigned to the key.

Note: To deactivate a shortcut key, select the **None** option.

Extra Settings

You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, press the **On** soft key or the  key. A check mark displays in front of the option.
2. To turn a feature off, press the **Off** soft key or the  key. The check mark no longer displays.

The following options are available:

- **Auto Redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.
- **Active Folder:** when this option is checked, incoming calls are answered when opening the folder.

Note: The interval between call attempts varies.

- **Anykey Answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key or the **Reject** soft key. To reject the calls, press the  key or the **Reject** soft key.

When this option is unchecked, you must press the  key or **Accept** soft key to answer a call.

TTY Settings*

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone.

Note: The TTY is automatically detected when TTY adaptor is inserted into your phone.

For additional technical support you may access the following website or call 1-888-987-4357.

http://www.samsungtelecom.com/contact_us/accessibility.asp

Display Settings

To customize the settings for the display use the following steps:

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings** and highlight **Display Settings** and press the **Select** or  key.

3. Select a menu and then change the setting. If the menu has submenus, repeat this step.
For the details of each menu, see the next sections.
4. When you have finished, press the  key.

Wallpaper

This menu allows you to change the background image in Idle mode. The following options are available:

- Shop Graphics
- Default Wallpapers
- Downloaded Graphics

Note: You can scroll to other images by pressing the **Up** () or **Down** () Navigation key from the image preview screen.

Front LCD Display

This menu allows you to adjust the external LCD clock display and LCD Brightness.

You can choose from Digital Clock or Analog Clock.

You can set the front LCD brightness by using the **Left** () Navigation key to decrease brightness or the **Right** () to increase brightness. Press the **OK** soft key to save changes.

Text Display

This menu allows you to specify whether or not the phone displays the time and date on the Idle screen. Choose Enable or Disable.

Text Color

This menu allows you to select the color of the text to be displayed on the Idle screen. This option is available when the text display is enabled. Use the **Up** (⏮) or **Down** (⏭) Navigation key to make your selection.

Dialing Font Color

This menu allows you to select numeric font color that appears in the display when making a call. Choose basic or rainbow.

Menu Style

This menu allows you to select the menu display style. You can choose either **Grid Style**, **Page Style**, or **Bar Style**.

Back Light

You can select the length of time the backlight is on. The backlight turns on when you press a key, when you open the phone or you receive a call or message, and remains on for the specified length of time.

Graphic Logo

This menu allows you to display a service provider's logo when using another service provider's SIM card. This menu is SIM specific.

- **Off:** the service provider's name displays in the Idle mode.
- **On:** the service provider's logo stored on your SIM card displays in Idle mode; if no logo has been stored, the service provider's name appears in the display.

Sound Settings

You can customize the settings related to various sounds for the phone, such as the call ringer, key tone, power on/off tone, folder tone, and so on.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings**. Highlight **Sound Settings** and press the **Select** soft key or the  key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the  key.

Ring Tone

This menu allows you to select a ring melody. You can choose between many different melodies and tones. If you have downloaded sounds from the Internet, you can access them in this menu.

- **Shop Ringtones:** allows you to access the web site preset by your service provider to download melodies. Once you have downloaded melodies, they are saved in the Audio folder.
- **Default Ringtones:** allows you to choose from preset ringtones provided by your service provider.
- **Downloaded Ringtones:** allows you to choose from ringtones you have downloaded.
- **Ring Volume:** allows you to adjust the ring volume to one of 5 levels. Use the Up () or Down () Navigation keys or the Up and Down keys on the side of the phone to adjust the volume.

- **Alert Type:** allows you to specify how you are to be informed of incoming calls. The following options are available:
 - **Melody:** the phone rings using the ring melody selected in the Ring Tone menu.
 - **Vibration:** the phone vibrates but does not ring. The  icon appears in the top line of the display.
 - **Vibration + Melody:** the phone first vibrates three times and then starts ringing. The  icon appears in the top line of the display.

Keypad Tone

This menu allows you to select the **Tone Type** and **Volume** of the tone that the phone sounds when you press a key. To turn off the sound, select **Off**.

If the **Tone Type** option is set to **off**, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, a Tone Type must be selected.

Message Tone

This menu allows you to select how the phone informs you that a new SMS and MMS message has been received.

For each message tone, the following options are available:

- **Tone:** allows you to select a message tone.
- **Mode:** allows you to select a type of message alert.

- **Off:** the phone does not sound when you have received a SMS message.
- **Tone:** the phone sounds the selected message tone.
- **Vibration:** the phone vibrates.
- **Repetition:** you can select how often the phone informs you of a new message.
 - **Once:** the phone alerts you to a new message just once at the time of its receipt.
 - **Periodic:** the phone alerts you to a new message every 2 minutes until you open the message.

Power On/Off

This menu allows you to select the melody that the phone sounds when it is switched on and off. To turn off the sound, select **Off**.

Folder Tone

This menu allows you to select the tone the phone sounds when you open or close the phone. To turn off the sound, select **Off**.

Alerts on Call

The following options are available:

- **Off:** the phone doesn't actively alert you to incoming messages or alarms. It only displays the corresponding notification.
- **On:** the phone alerts you with a beep and displays the corresponding notification.

Quiet Mode

This menu allows you to select how you are notified when silent mode is activated. You can select **Vibration All** or **Silent All**.

The following options are available:

- **Vibration All:** the phone will vibrate in silent mode.
- **Silent All:** the phone mutes the sound of an incoming call in silent mode.

In idle mode press and hold the  key, to activate or deactivate Silent All or Vibration All.

Alternatively, in idle mode press the Volume/Menu Browse key (See "Open View of Your Phone" on page 21) until the **Silent All** or **Vibration All** message appears in the display. The icon associated with the setting appears in the top line of the display.

When **Silent All** is active on your handset the  icon appears in the top line of the display.

Note: When Silent All is activated your keypad tones are muted. This feature should not be used when you access automated services that require you to enter numbers (such as your voice mail password).

When **Vibration All** is active on your handset the  icon appears in the top line of the display.

Extra Tones

You can customize additional tones for the phone.

1. To turn a given tone on, press the **On** soft key or the  key. A check mark displays in front of the option.
2. To turn a given tone off, press the **Off** soft key or the  key. The check mark no longer displays.

The following options are available:

- **Error Tone:** sets whether or not the phone informs you when you have a make a mistake.

- **Minute Minder:** sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- **Connect Tone:** sets whether or not the phone beeps when your call is connected to the system.

Network Services

You can customize the settings for network features, such as call forwarding, call barring, and call waiting.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings** and highlight **Network Services**. Press the **Select** soft key or the  key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the  key.

Call Forwarding

This network service enables incoming calls to be rerouted to the number that you specify.

For example, you may wish to forward your business calls to a colleague while you are on vacation.

1. From the Network Services menu screen, select **Call Forwarding**.
2. Select one of the following call forwarding options.
 - **Forward Always:** all calls are forwarded
 - **Busy:** calls are forwarded when you are already on another call
 - **No Reply:** calls are forwarded when you do not answer the phone.

- **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel All:** all call forwarding options are canceled.
3. Select the type of calls, **Voice Calls** or **Data Calls**.
The current status displays. If the option has already been set, the number to which the calls are forwarded displays.
 4. Press the **Activate** soft key or the  key.
Enter the number to which the calls are to be forwarded and press the **OK** soft key or the  key.
To enter an international code, press and hold the **0** key until the **+** sign appear in the display.
 5. If you selected **No Reply** in step 1, select the time delay the network waits before forwarding a call.
The phone sends your settings to the network and the network's acknowledgement displays.

Call Barring (SIM dependent)

The call barring network service allows you to restrict your calls. This option is SIM dependent and requires a subscription. For more information, contact your service provider.

Setting Call Barring Options

1. From the Network Services menu screen, select **Call Barring**.
2. Select one of the following call barring options:
 - **All Outgoing**: calls cannot be made.
 - **International**: international calls cannot be made.
 - **International Except to Home**: when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.
 - **All Receiving**: calls cannot be received.
 - **Receiving While Abroad**: calls cannot be received when you are using your phone outside of your home country.
 - **Cancel All**: all call barring settings are deactivated; calls can be made and received normally.
 - **Change Barring Password**: you can set and change the call barring password obtained from your service provider.
3. Select the type of calls, **Voice Calls** or **Data Calls**.
4. Press the **Activate** soft key or the  key.
5. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

Deactivating Specific Call Barring Settings

1. From the Network Services menu screen, select **Call Barring**.
2. Select the call barring option to be deactivated.
3. Select the type of calls to which this option applies.
4. Press the **Deactivate** soft key or the  key.
5. Enter your call barring password supplied by your service provider.

The phone sends our settings to the network and the network's acknowledgment displays.

Changing the Barring Password

1. From the Network Services menu screen, select **Call Barring**.
2. Select **Change Barring Password**.
3. Enter the current password and press the **OK** soft key or the  key.
4. Enter a new password and press the **OK** soft key or the  key.
5. Enter the new password to confirm and press the **OK** soft key or the  key.

The phone sends your settings to the network and the network's acknowledgement displays.

Call Waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

Setting Call Waiting Options

1. From the Network Services menu screen, select **Call Waiting**.
2. Select the type of calls, **Voice Calls** or **Data Calls**.
The screen informs you whether call waiting is activated or deactivated.

Press the **Activate** soft key or the  key to activate the call waiting feature.

The phone sends your settings to the network and the network's acknowledgement displays.

Deactivating Call Waiting Settings

1. From the Network Services menu screen, select **Call Waiting**.
2. Select the type of calls, **Voice Calls** or **Data Calls**.
The screen informs you whether call waiting is activated or deactivated.
3. Press the **Deactivate** soft key or the  key.
The phone sends your settings to the network and the network's acknowledgement displays.

Network Selection (SIM Dependent)

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

1. From the Network Services menu screen, select **Network Selection**.
2. Select the options you want.
If you select **Automatic**, you are connected to the first available network when roaming.
If you select **Manual**, go to step 3.
3. Select the network you want. The phone will scan for that network and you will be connected.

Caller ID

You can prevent your phone number from being displayed on the phone of the person you are calling.

Note: Some networks do not allow you to change this setting.

The following options are available:

- **Default:** the default setting provided by the network is used.
- **Hide Number:** your number does not display on the other person's phone.
- **Send Number:** your number is sent each time you make a call.

Closed User Group (SIM Dependent)

This network service allows incoming and outgoing calls to be restricted to a selected user group. you can create up to 10 user groups.

For details about how to create and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options:

- **Index List:** lets you list, add, or delete CUG index numbers.

If there is no CUG index stored, you are prompted to add a new index when you select this option. Once you have added a CUG index, the list of current CUG indexes appears.

Add a new CUG index as advised by your service provider, or delete a group.

- **Outside Access:** lets you enable or disable calls to numbers other than those in the CUG. This feature depends on the nature of your CUG subscription. Please check with your service provider.
- **Default Group:** you may set a default CUG with your service provider. If you have done so, you can enable the **Default Group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Bluetooth

- **Deactivate:** deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

Band Selection

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks:

- GSM 1800
- Combined GSM 850/1900

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you must remember to change to an appropriate band.

1. From the Network Services menu screen, select **Band Selection**.
2. Select the appropriate option, and press the **OK** soft key or the  key.
3. When the display confirms the network band you selected, press the **Yes** soft key or the  key. To cancel the selection, press the **No** soft key.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange

information between them, even if they are located in different rooms.

The Bluetooth wireless technology settings menu provides the ability to view and change the device name, show the visibility, and set the security for the device.

Activation

When the Bluetooth is turned on, you can use the Bluetooth features available. When the Bluetooth is turned off, you cannot send or receive information via Bluetooth. To save battery life or in situations where Bluetooth use is prohibited, such as airline traveling, you can turn off the Bluetooth wireless technology headset.

My Devices

This menu provides a list of Bluetooth wireless technology devices discovered by your handset.

1. Highlight **My Devices** and press the **Select** soft key or the  key.
2. To search for the Bluetooth device(s), highlight **Search New Device** and press the **Select** soft key or the  key.

Connecting to a Bluetooth Device

From the Device list,

1. Highlight the device and press the **Select** soft key or the  key.
2. Enter the PIN for the device.
If connecting to a Bluetooth wireless device consult your Bluetooth device user manual for your assigned PIN.

If connecting to another handset, enter a user-defined four to eight digit PIN.

Note: The first time you try to pair with a handset, you and the owner of the other handset must enter the same PIN.

Once the handsets are paired, you will not need to use the PIN again.

3. Press the **OK** soft key or the  key.
4. If you are unable to pair with the device a popup appears in the display. Press the **Yes** soft key to retry.

My Phone's Visibility

Allows other users to see your accessibility. Select **On** for other devices to see your device, or **Off** for no visibility.

My Phone's Name

Shows the handset name. You may change this name enter the text and press the  key.

Secure Mode

Secure Mode feature enables you to restrict other Bluetooth enable devices from discovering your device.

Bluetooth Services

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices will not work together.

Your phone supports the following profile services:

- **Headset:** enables outgoing and incoming calls.
- **Handsfree:** the remote carkit enables outgoing and incoming calls.
- **Serial Port:** the remote bluetooth device acts as a virtual serial port.
- **Dial-up:** the remote bluetooth device enables internet access through a phone modem.
- **File Transfer:** the remote bluetooth device enables users to transfer files from their handset to another.

Voice Recognition

Voice recognition allows your handset to be operated by spoken words. See "VoiceSignal" on page 49 for detailed information.

Security Settings

The Security feature enables you to restrict to use of your phone by others and to restrict the types of calls.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings**. Highlight **Security** and press the **Select** soft key or the  key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the  key.

PIN Check

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone.

Consequently, any person does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Disable:** the phone connects directly to the network when you switch it on.
- **Enable:** you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone Lock

When the Phone Lock feature is enabled, the phone is locked and you must enter the 4- 8 digit phone password each time the phone is switched on.

The password is preset to "00000000" at the factory. To change the phone password, see the following Change Password option.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

- **Disable:** you are not asked to enter the phone password when you switch on the phone.

- **Enable:** you are required to enter the phone password when you switch on the phone.

Change Password

The Change Password feature allows you to change your current phone password to a new one. You must enter the current phone password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy

Using this menu, you can lock your phone’s contents requiring the phone’s password to access the associated all functions except placing a call.

1. From the Security Menu, press **Privacy**.
2. Select Enable to lock and press the  key. Enter your password and press the **OK** soft key.
3. Select Disable to unlock. Enter your password and press the **OK** soft key.

Note: This password is preset to “00000000” at the factory. To change this password, see “Change Password” on page 160.

SIM Lock

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code to unlock the SIM so you can use a different SIM card. Once you have entered the lock code, you are asked to confirm your entry.

FDN Mode (SIM Dependent)

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number
- **Enable:** you can only call phone numbers stored in the Address Book. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Change PIN2 (SIM Dependent)

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Connection Settings

You can customize the profiles containing the settings for connecting your phone to the network. These settings are used for the WAP browser or Instant Messenger, or sending MMS messages or emails.

Note: Your phone connects to the network by default. If you change the MMS settings without first checking with your service provider, the WAP, MMS and Email features may not work properly.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.

**Section 8**

 
 
 
 
 
 
2. Select **Settings** and highlight **Connection Settings**. Press the **Select** soft key or the  key.
3. Select the profile you want to change. For each profile, the following options are available:
 - **Profile Name**: enter a name that you wish to assign to the profile.
 - **Homepage URL**: enter the address of the WAP homepage of your service provider.
 - **Bearer**: select the network bearer type for data transmission, either GPRS or DATA.
 - **Proxy Setting**: enter the IP address of the proxy server.
 - **User Name**: enter the user ID required to connect to the network.
 - **Password**: enter the password required to connect to the network.
 - **APN**: enter the access point name used for the address of the network.
 - **Proxy Status**: activate or deactivate the proxy server.
 - **Primary DNS**: enter the primary DNS (Domain Name System) address.
 - **Secondary DNS**: enter the secondary DNS address.
4. When you have finished, press the  key.

Reset Settings

You can easily reset your phone to its' default settings.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings**. Highlight **Reset Settings** and press the **Select** soft key or the  key.
3. Enter the 4 to 8-digit password and press the **OK** soft key or the  key.

Note: The password is preset to "00000000". To change this password, see "Change Password" on page 160.



Section 9: Personal Organizer

Topics Covered

- Setting Alarms
 - Using the Calendar
 - Consulting the Calendar
 - Using the To Do List
 - Using the Calculator
 - Record Audio
 - Using the Currency Converter
 - World Time
-

The topics covered in this section allow you to schedule appointments, view the calendar, create To-Do lists, set an alarm, and perform simple math calculations.

Section 9

Setting Alarms

You can set the alarm to ring at a specific time and set the weekly time frame. You can also set the phone to power on automatically and ring the alarm even if the phone is switched off.

Setting an Alarm

1. In Idle mode, press the **Menu** () soft key to access the menu mode.
2. Select **Games & Apps**. Highlight **Alarm** and press the **Select** soft key or  key.
3. Select an alarm type
 - **Wake-up Call**: the alarm rings to wake you up at the specified time.
 - **Single Use Alarm**: the alarm rings only once and is then deactivated.
 - **Daily Alarm**: the alarm rings every day at the same time.
 - **Remove Alarm**: removes all alarm settings.
 - **Autopower**: the alarm rings even when the phone is turned off.
4. Enter the time for the alarm to sound.

Note: Your phone is preset to a 12-hour format.

To change the alarm tone, press the **Options** soft key and select **Alarm Tone**. Select an alarm tone from the list.

5. Press the **OK** soft key or the  key.
6. If applicable, select **AM** or **PM**.

Setting Alarms

- If you select Wake-up Call in step 3, select a repeat option, Monday to Friday or Monday to Saturday.
- When you have finished, press the  key.

When the time for an alarm comes, press any key to stop the alarm.

Setting Autopower Alarms

You can set the alarm to ring even if the phone is powered off.

- In Idle mode, press the **Menu** () soft key to access Menu mode.
- Select **Games & Apps**. Highlight **Alarm** and press the **Select** soft key or  key.
- Select **Autopower**.
- Select **Enable** to activate the Autopower feature. The phone will automatically switch on to ring the alarm when the alarm time comes.
If the menu option is set to **Disable**, and the phone is switched off at the specified time, the alarm does not ring.
- When you have finished, press the  key.

Deactivating Alarms

- In Idle mode, press the **Menu** () soft key to access menu mode.
- Select **Games & Apps**. Highlight **Alarm** and press the **Select** soft key or  key.
- Highlight **Remove Alarm** and press the **Select** soft key or the  key.

4. Press **OK** to remove alarm or **Cancel** to exit.
5. When you have finished, press the  key.

Using the Calendar

With the Calendar feature, you can:

- write memos to keep track of your schedule.
- consult the calendar and check your memos.
- set an alarm to act as a reminder.

Writing a Memo

You can create up to 100 memos with a maximum of 40 characters (including spaces) for the calendar. More than one memo can be made for one day.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Games & Apps**. Highlight **Calendar** and press the **Select** soft key or the  key.
The calendar displays with today's date highlighted.
3. Scroll to a date on the calendar by pressing the Navigation keys and press the  key.
Alternatively, press the **Options** soft key and select **Go to Date**. You can enter manually a specific date and press the  key.

Note: To skip to the previous or next month, press the Volume keys on the left side of the phone.

An empty memo screen appears in the display allowing you to enter your memo.

Using the Calendar

4. Enter your memo and then press the **OK** soft key or the  key.
5. If you want an alarm to ring on the chosen day, press the **Yes** soft key or the  key. If not, press the **No** soft key to save the memo.
6. Enter the time for the alarm and press the  key.

Note: Your phone is preset to a 12-hour format.

You can also select the melody for the alarm by pressing the **Melody** soft key.

7. If applicable, select **AM** or **PM**.
The color of the date on the calendar changes to green to indicate that a memo exists for that date.
8. When you have finished, press the  key.

When the time for a memo comes and the phone plays the selected alarm melody, press the **View** soft key or the  key to access the memo. Alternatively, press the **Exit** soft key or the  key to stop the alarm.

Consulting the Calendar

Viewing Memos on the Selected Date

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Games & Apps**. Highlight **Calendar** and press the **Select** soft key or the  key.
3. Select the date you want to view its memo(s).
If there is more than one memo for that date, the latest memo appears in the display.
4. Press the **Up** () or **Down** () Navigation key to scroll to the previous or next memo.
If you want to make a new memo for that date, press the **New** soft key.
5. To access the memo options, press the **Options** soft key.
 - **Edit**: allows you to change the memo text.
 - **Alarm**: allows you to set an alarm to ring at a specified time to remind you of the memo. If you have already set an alarm for that memo, you can change or delete the alarm.
 - **Delete**: allows you to delete the memo.
 - **Copy to**: allows you to copy the memo to another date.
 - **Move to**: allows you to change the date of the memo.
6. When you have finished, press the  key.

Viewing All of the Memos on the Calendar

1. In Idle mode, press the **Menu** () soft key to access menu mode.
2. Select **Games & Apps**. Highlight **Calendar** and press the **Select** soft key or the  key.

3. Press the **Options** soft key and select **Search All**. The phone displays the first memo. You can view all of the memos, starting with the oldest, regardless of the day.
4. To scroll through the memos, press the **Up** (⏮) or **Down** (⏭) Navigation key.
5. When you have finished, press (⏹) key.

Deleting Memos

You can delete memos on the calendar one by one or all at one time.

1. In Idle mode, press the **Menu** (☰) soft key to access menu mode.
2. Select **Games & Apps**. Highlight **Calendar** and press the **Select** soft key or the (⏵) key.
3. Select the date for the memo you wish to delete and press the (⏵) key.
4. Press the **Options** soft key and select **Delete**.
5. Press the **Yes** soft key to confirm the deletion.
6. When you have finished, press the (⏹) key.

Deleting All Memos

1. In Idle mode, press the **Menu** (☰) soft key to access menu mode.
2. Select **Games & Apps**. Highlight **Calendar** and press the **Select** soft key or the (⏵) key.
3. Press the **Options** soft key and select **Delete All**.
4. Press the **Yes** soft key to confirm the deletion.
5. When you have finished, press the (⏹) key.

Using the To Do List

The To Do List allows you to:

- enter a list of tasks to be done
- assign a priority and a deadline to each task
- sort the tasks by priority and status

Creating the To Do List

1. In Idle mode, press the **Menu** () soft key to access menu mode.
2. Select **Games & Apps**. Highlight **To Do List** and press the **Select** soft key or the  key.
3. Press the **New** soft key or the .
4. Enter the first task.
5. Press the **OK** soft key or the .
6. Select a priority level of high, normal, or low.
7. Enter your deadline and press the  key.
If you don't want to set a deadline, press the **Skip** soft key.
The first task is added to the To Do List.
8. When you have finished, press the  key.

Adding Tasks to the To Do List

1. In Idle mode, press the **Menu** () soft key to access menu mode.
2. Select **Games & Apps**. Highlight **To Do List** and press the **Select** soft key or the  key.

3. Press the **Options** soft key and select **New**. Continue using steps in "Creating the To Do List" on page 172.

Viewing the To Do List

1. In Idle mode, press the **Menu** soft key to access menu mode.
2. Select **Games & Apps**. Highlight **To Do List** and press the **Select** soft key or the  key.
The tasks display with a check mark, indicating a task has been done, and its priority level indicator;  for High,  for Normal, and  for low.

Note: You can change the status of a specific task by pressing the * key. The task is marked as completed as of the current time and date.

3. Scroll to a task from the list and press the  key to view the details for the task.
You can use the To Do List options by pressing the **Options** soft key.
4. You can scroll through the tasks using **Up** () or **Down** () Navigation key, if necessary.
5. When you have finished, press the  key.

Using To Do List Options

You can access the following options by pressing the **Options** soft key:

- **New:** allows you to create a new task.
- **Mark:** allows you to change the status of a task. Select the appropriate status (**Done** or **Undo**).
- **Edit:** allows you to edit a task. You can change the text, priority, and/or deadline for the task.

- **Sort:** allows you to sort the existing tasks by priority or status. Select the sort criterion (High, Low, Done, or Undo).
- **Copy:** allows you to copy a task.
- **Copy to Calendar:** allows you to copy a task to the calendar as a memo. You can also change the text and deadline for the task and/or set the alarm.
- **Delete:** deletes a task.
- **Delete All:** allows you to delete all tasks.
- **Exit:** allows you to exit the To do list menu and returns the phone to Idle mode.

Using the Calculator

You can use the phone as a calculator. The calculator provides basic arithmetic functions: addition, subtraction, multiplication, and division.

1. In Idle mode, press the **Menu** () soft key to access menu mode.
2. Select **Games & Apps**. Highlight **Calculator** and press the **Select** soft key or the  key.
3. Enter the first number using the numeric keys.

Note: To include a decimal point or a bracket, press the **Left** soft key until the symbol you want displays.

4. Enter the operation for your calculation by pressing the Navigation keys, according to the illustration on the display.
5. Enter the second number.
6. To view the result, press the  key.
7. Repeat steps 3 to 6 as many times as required.

- When you have finished, press the  key.

Using Record Audio

You can record voice memos. After recording, you can send the memo to other people via the Multimedia Message Service.

Record Audio

- In Idle mode, press the **Menu** () soft key to access the Menu mode.
- Select **Games & Apps**. Highlight **Record Audio**, press the **Select** soft key or the  key.
- Highlight the **Record** option and press the **Select** soft key or the  key.
- Press the **Record** soft key or the  key. The display shows a 30-second timer. Press the  to return.
- Record a memo by speaking into the microphone.
- When you press the **Stop** soft key or the  key, or if the recording time expires, the following options display:
 - Replay**: plays back your memo
 - Re-record**: discards the memo and enables you to record another one
 - Save**: allows you to save the memo
 - Quit**: cancels your recording and exits the Record menu
- To save the memo, choose **Save** and press the **Select** soft key or the  key.

Press the  key to clear the default name, if necessary and enter a name for the memo.

Press the **OK** soft key or the  key.

The memo is saved and then the display shows the memo information.

You can press the **Options** soft key or the  key to access the following memo options:

- **Send**: allows you to send the memo to other people by using the Multimedia Message feature.
 - **Rename**: allows you to change the memo's name.
 - **Delete**: allows you to delete the memo.
8. When you have finished, press the  key.

Audio List

Reviewing Voice Memos

1. In Idle mode, press the **Menu** () soft key to access the Menu mode.
2. Select **Games & Apps**. Highlight **Record Audio**, press the **Select** soft key or the  key.
3. Select **Audio List**. A list of voice memos displays.
4. Scroll to a memo and press the **Options** soft key or the  key. The following options are available:
 - **Play**: plays the memo.
 - **Send**: allows you to send the memo to other people by using the Multimedia or Email feature.
 - **Rename**: allows you to change the memo's name
 - **Properties**: displays information about the memo, such as the name, the date the memo was created, recording length, recording format and memory size.
 - **Delete**: allows you to delete the memo.
5. Select **Play** to review the memo.
6. After playback, the display returns the memo list.

7. When you have finished, press the  key.

Delete All

You can delete your voice memos one by one or all at one time.

Deleting A Voice Memo

1. In Idle mode, press the **Menu** () soft key to access the Menu mode.
2. Select **Games & Apps**. Highlight **Record Audio**, press the **Select** soft key or the  key.
3. Access the **Audio List** and scroll to the memo you want to delete.
4. Press the **Options** soft key or the  key and then select **Delete**.
5. Press the **Yes** soft key or the  key to confirm the deletion.
6. When you have finished, press the  key.

Deleting All Voice Memos

1. In Idle mode, press the **Menu** () soft key to access the Menu mode.
2. Select **Games & Apps**. Highlight **Record Audio**, press the **Select** soft key or the  key.
3. Select **Delete All** and press the  key.
4. Press the **Yes** soft key or the  key to confirm the deletion.
5. When you have finished, press the  key.

Memory Status

Checking the Memory Status

1. In Idle mode, press the **Menu** () soft key to access the Menu mode.
2. Select **Games & Apps**. Highlight **Record Audio**, press the **Select** soft key or the  key.
3. Select **Memory Status**.

This display shows the **Total**, **Used**, and **Free** memory amount and at the bottom of the screen is a sliding scale that shows the proportion of the amount of memory being used and available.

4. When you have finished, press the  key.

Using the Currency Converter

You can figure out currency conversions.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Games & Apps**. Highlight **Currency Conversion** and press the **Select** soft key or the  key.
3. Enter the Exchange Rate amount and press the **OK** soft key or the  key.

Note: You can insert a decimal point by pressing the # key.

4. Enter the local currency amount and press the **OK** soft key or the  key.
The Exchange Rate, Local Currency and Foreign Currency values display.

5. When you have finished, press the  key.

World Time

 
 
 
 
 
You can find out what time it is another part of world, using the **Left** () or **Right** () Navigation key.

The screen shows the:

- city name and time difference between the selected city and the city you have set your home time zone
- current time and date
- city selected as your time zone

Selecting the Home Time Zone

1. From the world map, select the city corresponding to your time zone by pressing the **Left** () or **Right** () Navigation key. The local date and time in the selected city display.
2. Press the **Set** soft key or the  key.



Section 10:WAP

Topics Covered

- Launching the WAP Browser
 - Accessing a WAP site
 - Navigating the WAP Browser
 - Using Favorites
 - Downloading Multimedia Files
 - Clearing the Cache
 - Changing the WAP Profiles
-

Your phone is equipped with a WAP (Wireless Application Protocol) browser which allows you to access Internet specified for mobile phones. This section explains how to access the WAP services of your service provider and navigate the WAP browser.

Launching the WAP Browser

1. In Idle mode, press the  key to launch the WAP browser.
You can also press the **Menu** () soft key to access menu mode.
2. Highlight **MEdia Net** and press the **Select** soft key or the  key. Select **MEdia Net Home**.
your phone is connected to the network and loads the homepage of the Wireless Web service provider. The content of the start-up homepage depends on your Wireless Web service provider.
3. To scroll through the screen, use the **Up** () or **Down** () Navigation key.
4. To exit the browser at any time, simply press the  and press the **Yes** soft key to confirm exit.

Accessing a WAP Site

There are several ways to access a WAP site:

- Selecting a link on the browser
- Using a bookmark item in the Favorites folder; use the Bookmarks option on the browser menu list or Favorites menu.
- Entering a URL address manually; use the Go To URL option on the browser menu list or http:// menu.

Navigating the WAP Browser

1. To scroll through browser items, press the **Up** () or **Down** () Navigation key.

Navigating the WAP Browser

2. To select a browser item, press the  key or press the **Options** soft key, choose **Select** and press the **OK** soft key.
3. To select a numbered item, press the corresponding numeric key.
4. To return to the previous page, press the  key, or press the **Options** soft key and choose **Back**.
5. To access the browser menu list, press the **Menu** soft key.
6. To return to the start-up homepage, press the **Menu** soft key and select the **Home** option.

Entering Text in the WAP Browser

When you are prompted to enter text, the currently active text input mode is indicated on the screen. To change the text input mode, press the  key one or more times.

The following modes are available:

- **Upper-Case Alphabet Mode (A)**: allows you to enter upper-case characters.
- **Lower-Case Alphabet Mode (a)**: allows you to enter lower-case characters.

Note: You can enter symbols in upper or lower case alphabet mode by pressing the 1 key.

- **T9 Mode (T9)**: allows you to enter characters by pressing one key per letter. In this mode, you can use only the  key to display alternative words. To change case, press the  key.
- **Number Mode (1)**: allows you to enter numbers.

Selecting and Using Menu Options

Various menus are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option, press the menu soft key. A menu list displays.

Note: The menus may vary, depending on your version of the WAP Browser.

The following options are available:

- **Favorite:** shows the bookmarks list. You can bookmark the current page or access previously book marked pages.
- **Reload:** reloads the current page.
- **Home:** takes you back at any time to the homepage of the Wireless Web service provider.
- **Go to URL:** allows you to manually enter the URL address of a WAP site. After entering an address, press the **OK** soft key to go there directly.
- **Show URL:** displays the URL address of the page to which you are currently connected. It also enables you to set the current site as the startup homepage.
- **Clear Cache:** deletes the information stored in the cache. The cache stores the most recently accessed pages.
- **Inbox:** allows you to read messages received from a WAP server.
- **Show Images:** shows the image on the current page. Press the **Next** soft key to view the next images.
- **Text Messages:** allows you to send messages using the WAP server.

- **Certificates:** shows the security information when you access the Wireless Web with the secured WAP setting activated.

Using Favorites

While navigating the WAP browser, you can bookmark the site to quickly and easily access it at a future time. The URL addresses of the bookmarked sites are stored in the Favorites folder, wherein you can use the 10-preset URL addresses and store your favorite URL addresses.

Accessing a WAP Site Using Favorites

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Highlight **MEdia Net** and press the **Select** soft key or the  key.
3. Select **Favorites**.
4. Select a bookmark item on the Favorite list.
5. Press the **Options** soft key and select **Goto URL**. You are accessed to the corresponding **WAP** site.

Storing a URL Address

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Highlight **MEdia Net** and press the **Select** soft key or the  key.
3. Select **Favorites**.
4. Select an empty location and press the **Options** soft key or the  key

5. Enter the address and press the **OK** soft key or  key.
6. Enter a name for the bookmark and press the **OK** soft key or the  key. The name displays in the Favorites list.
7. When you have finished, press the  key.

Editing a Bookmark

1. From the Favorite list, select the bookmark you want to change.
2. Press the **Options** soft key and select **Edit**.
3. Change the address and the name, as you would when storing a new one.
4. When you have finished, press the  key.

Deleting a Bookmark

1. From the Favorites list, select the bookmark you want to delete.
2. Press the **Options** soft key and select **Delete**.
3. Press the **Yes** soft key or the  key to confirm the deletion.
4. When you have finished, press the  key.

Downloading Multimedia Files

You can buy a variety of multimedia files, such as ringtones, graphics, applications, MMS contents, and so on from the WAP browser and download them to your phone's memory. Your phone has embedded links to the WAP site, providing you with download services, preset by your service provider.

Clearing the Cache

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **MEdia Mall**. Highlight **Shop Ringtones**, **Shop Games**, **Shop Graphics**, **Shop Multimedia**, or **Shop Applications** depending on the type of items you want to buy.
To access homepage of the online shopping mall, select **MEdia Home**.
3. Find the item you want to download and follow the instructions on the screen to purchase it.

Note: This content is delivered to you in MMS messages. You can retrieve the messages from the server and then save the items in your phone's memory. You cannot forward these messages to other people or add the saved items to an MMS message.

Clearing the Cache

The cache is the phone's temporary memory in which the most recently accessed WAP pages are stored. You can clear the cache at anytime.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Highlight **MEdia Net** and press the **Select** soft key or the  key.
3. Select **Clear Cache**.
4. Press the **Yes** soft key or the  key to confirm the deletion.
5. When you have finished, press the  key.

Changing the WAP Profiles

You can set up 10 server profiles for the WAP browser.

1. In Idle mode, press the **Menu** () soft key to access Menu mode.
2. Select **Settings**. Highlight **Connection Settings** and press the **Select** soft key or the  key.
3. Select the profile you want.
The following options are available:
 - **Profile Name**: enter a name that you wish to assign to the HTTP proxy server.
 - **Homepage URL**: set the address of your startup homepage. When the default homepage displays, you can delete it using the  key and enter your own choice.
 - **Bearer**: select the bearer to be used for each type of network address accessed: GPRS or DATA. The remaining options depend on the Bearer setting.

When the bearer is set to **GPRS**:

 
 
 
- **Proxy Setting**: enter the WAP gateway address required to connect to the Internet.
- **User Name**: enter the User ID required to connect to the GPRS network.
- **Password**: enter the password required to connect to the GPRS network.
- **APN**: enter the access point name used for the address of the GPRS network gateway.
- **Proxy Status**: allows you to activate and deactivate the proxy status.

When the bearer is set to **Data**:




Changing the WAP Profiles

- **Proxy Setting:** enter the WAP gateway address required to connect to the Internet.
- **Login Name:** enter the PPP server login ID.
- **Password:** enter the PPP server password.
- **Dial-up Number:** enter the PPP server phone number
- **Data Call Type:** select a data call type: Analog or ISDN.
- **Proxy Status:** allows you to activate and deactivate the proxy status.

Note: The WAP settings may vary depending on the service provider.



190

   

Section 11: Landscape Mode



Section 11

Topics Covered

- Selecting and Using the Home Screen Function
- Selecting and Using Options
- Note
- SMS Messages
- Managing Your Message Folders
- Call Log
- Answering a Call in Landscape Mode
- Address Book
- Using the Calendar
- Using the To Do List
- List
- Search
- Bluetooth
- IM
- Quick Tip
- Settings
- About

This section outlines the functions associated with Landscape mode.

Selecting and Using the Home Screen Function

The Home Screen function allows you to move directly to a message list or IM application. This function also allows you to set a message list or IM application as the default screen that appears in the display when you open your handset in Landscape mode.

1. Open your handset in Landscape mode.

Alternatively, press the **Space Bar** (↵/Space) key to display the Home Screen selection screen.

The following icons appear in the display.



Use the **Left** (←) or **Right** (→) Navigation key to highlight a menu selection and press the **S** key.

Alternatively, if you want your menu selection to be the first item to display when you open your handset in Landscape mode, press the **Spacebar** (↵/Space) key again, a red arrow (home screen selection arrow) appears in the display.

Use the **Spacebar** (↵/Space) key to highlight a menu selection and press the **S** key.