

# **DUAL BAND GPRS Series SGH-E315 Portable Digital Telephone User Manual**

**Please read this manual before operating your phone,  
and keep it for future reference.**

Draft version  
(05. 10)



**ELECTRONICS**

Printed in Korea  
Code No.: GH68-xxxxxA  
English.05/2004. Rev. 1.0

## **Intellectual property**

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

# **Samsung Telecommunications America, L.P.**

## **U.S. Headquarters:**

1301 East Lookout Drive  
Richardson, Texas 75082  
Tel: 972-761-7000  
Fax: 972-761-7001

## **Customer Care Center:**

1601 E. Plano Parkway  
Suite 150  
Plano, TX 75047  
Tel: 888-987-HELP (4357)  
Fax: 972-761-7501

**Internet Address: [http://www.samsungusa.com/  
wireless](http://www.samsungusa.com/wireless)**

©2003 Samsung Telecommunications America. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Samsung is a registered trademark of Samsung Electronics America, Inc. and its related entities.

# Table of contents

|  |           |
|--|-----------|
| <b>Important safety precautions .....</b>            | <b>5</b>  |
| <b>Unpacking .....</b>                               | <b>7</b>  |
| <b>Your phone .....</b>                              | <b>8</b>  |
| Phone layout .....                                   | 8         |
| Display .....  | 11        |
| Service light .....                                  | 14        |
| Camera .....   | 14        |
| <b>Getting started .....</b>                         | <b>15</b> |
| Installing the SIM card .....                        | 15        |
| Charging a battery .....                             | 17        |
| Switching on/off the phone .....                     | 19        |
| <b>Call functions .....</b>                          | <b>21</b> |
| Making a call .....                                  | 21        |
| Adjusting the volume .....                           | 23        |
| Answering a call .....                               | 24        |
| Viewing missed calls .....                           | 25        |
| Quickly switching to Silent mode .....               | 27        |
| <b>Selecting functions and options .....</b>         | <b>29</b> |
| Using the soft keys .....                            | 29        |
| Selecting options .....                              | 30        |
| <b>Phone Book .....</b>                              | <b>31</b> |
| Storing a number with a name .....                   | 31        |
| Using Phone Book entry options .....                 | 33        |
| Dialling a number from Phone Book .....              | 35        |
| Speed-dialing .....                                  | 36        |
| Searching for and dialing number in Phone Book ..... | 37        |
| Editing a caller group .....                         | 39        |
| Deleting all of the Phone Book entries .....         | 40        |
| Checking the memory status .....                     | 41        |
| Own number .....                                     | 41        |
| Using the service dialing numbers .....              | 42        |

|  |           |
|--|-----------|
| <b>Entering text .....</b>                   | <b>43</b> |
| Changing the text input mode.....            | 44        |
| Using T9 mode .....                          | 45        |
| Using Alphabet mode.....                     | 47        |
| Using Number mode.....                       | 48        |
| Using Symbol mode .....                      | 48        |
| <b>Options during a call.....</b>            | <b>49</b> |
| Putting a call on hold .....                 | 49        |
| Switching off the microphone (Mute) .....    | 50        |
| Muting or sending key tones.....             | 51        |
| Searching for a number in Phone Book.....    | 51        |
| Using the message service (SMS).....         | 52        |
| Call waiting .....                           | 52        |
| Making a multi-party call.....               | 53        |
| <b>Using the menus.....</b>                  | <b>55</b> |
| Accessing a menu function by scrolling ..... | 55        |
| Using shortcuts.....                         | 56        |
| List of menu functions .....                 | 57        |
| <b>Voice notes .....</b>                     | <b>63</b> |
| <b>Call records .....</b>                    | <b>65</b> |
| Missed calls ( <i>Menu 2.1</i> ) .....       | 65        |
| Incoming calls ( <i>Menu 2.2</i> ).....      | 66        |
| Outgoing calls ( <i>Menu 2.3</i> ) .....     | 66        |
| Delete all ( <i>Menu 2.4</i> ).....          | 67        |
| Call time ( <i>Menu 2.5</i> ).....           | 67        |
| <b>Network services .....</b>                | <b>69</b> |
| Call forwarding ( <i>Menu 3.1</i> ) .....    | 69        |
| Call waiting ( <i>Menu 3.2</i> ).....        | 70        |
| Network selection ( <i>Menu 3.3</i> ) .....  | 71        |
| Caller ID ( <i>Menu 3.4</i> ).....           | 71        |
| <b>IM (Instant Messenger).....</b>           | <b>73</b> |
| Starting a messenger .....                   | 73        |
| Using the instant messenger options .....    | 73        |

|   |            |
|---|------------|
| <b>Messages.....</b>                        | <b>75</b>  |
| Text messages ( <i>Menu 5.1</i> ).....      | 75         |
| Picture messages ( <i>Menu 5.2</i> ) .....  | 83         |
| Push messages ( <i>Menu 5.3</i> ).....      | 94         |
| Voice mail ( <i>Menu 5.4</i> ).....         | 94         |
| Broadcast messages ( <i>Menu 5.5</i> )..... | 95         |
| <b>Funbox .....</b>                         | <b>97</b>  |
| t-zones ( <i>Menu 6.1</i> ).....            | 97         |
| Games ( <i>Menu 6.2</i> ) .....             | 103        |
| Sounds ( <i>Menu 6.3</i> ) .....            | 105        |
| Images ( <i>Menu 6.4</i> ) .....            | 106        |
| Delete all ( <i>Menu 6.5</i> ).....         | 107        |
| Memory status ( <i>Menu 6.6</i> ) .....     | 107        |
| <b>Organizer.....</b>                       | <b>109</b> |
| Alarm ( <i>Menu 7.1</i> ).....              | 109        |
| Calendar ( <i>Menu 7.2</i> ).....           | 111        |
| Calculator ( <i>Menu 7.3</i> ) .....        | 113        |
| To do list ( <i>Menu 7.4</i> ) .....        | 114        |
| Voice memo ( <i>Menu 7.5</i> ).....         | 116        |
| Currency exchange ( <i>Menu 7.6</i> ) ..... | 118        |
| <b>Camera .....</b>                         | <b>119</b> |
| Take and send ( <i>Menu 8.1</i> ).....      | 119        |
| Record videos ( <i>Menu 8.2</i> ) .....     | 124        |
| My photos ( <i>Menu 8.3</i> ).....          | 125        |
| My videos ( <i>Menu 8.4</i> ) .....         | 126        |
| My album ( <i>Menu 8.5</i> ) .....          | 127        |
| My journal ( <i>Menu 8.6</i> ) .....        | 127        |
| Delete all ( <i>Menu 8.7</i> ).....         | 128        |
| Memory status ( <i>Menu 8.8</i> ) .....     | 128        |
| <b>Settings .....</b>                       | <b>129</b> |
| Time & Date ( <i>Menu 9.1</i> ).....        | 129        |
| Phone settings ( <i>Menu 9.2</i> ) .....    | 131        |
| Display settings ( <i>Menu 9.3</i> ).....   | 133        |
| Sound settings ( <i>Menu 9.4</i> ).....     | 136        |

|   |            |
|---|------------|
| Security ( <i>Menu 9.5</i> ) .....  | 139        |
| Reset settings ( <i>Menu 9.6</i> ) .....  | 142        |
| <b>Solving problems .....</b>   | <b>143</b> |
| <b>Access codes .....</b>   | <b>146</b> |
| Phone password.....   | 146        |
| PIN .....   | 147        |
| PUK.....  | 147        |
| PIN2 .....  | 148        |
| PUK2.....   | 148        |
| <b>Health and safety information .....</b>  | <b>149</b> |
| Exposure to radio frequency (RF) signals.....                                     | 149        |
| For body operation .....  | 151        |
| Precautions when using batteries .....  | 152        |
| Road safety.....  | 153        |
| Operating environment.....  | 155        |
| Electronic devices .....  | 155        |
| Potentially explosive environments .....  | 157        |
| Emergency calls.....  | 158        |
| Other important safety information.....   | 159        |
| Care and maintenance .....  | 160        |
| Acknowledging special precautions and<br>the FCC and industry Canada notice ..... | 161        |
| Appendix A: CERTIFICATION INFORMATION (SAR) ...                                   | 163        |
| Appendix B: Guide to Safe and Responsible<br>Wireless Phone Use .....             | 165        |
| Appendix C: Consumer Update on Wireless Phones...                                 | 169        |
| <b>STANDARD LIMITED WARRANTY .....</b>  | <b>178</b> |
| <b>Glossary .....</b>   | <b>183</b> |
| <b>Index.....</b>   | <b>188</b> |

# **Important safety precautions**

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

## **Road safety at all times**

Do not use a hand-held phone while driving; park the vehicle first.

## **Switching off when refuelling**

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## **Switching off in an aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## **Switching off in hospitals**

Switch off your phone near medical equipment. Follow any regulations or rules in force.

## **Interference**

All wireless phones may be subject to interference, which could affect their performance.

## **Special regulations**


Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).



## **Sensible use**

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## **Emergency call**

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features in use before you can make an emergency call. Give all necessary information as accurately as possible. Do not cut off the call until given permission to do so.

## **Water resistance**

Your phone is not water-resistant. Keep it dry.

## **Accessories and batteries**

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

## **Qualified service**

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 149.

### **CAUTION**


RISK OF EXPLOSION IF A BATTERY IS REPLACED  
BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING  
TO THE INSTRUCTIONS.

# Unpacking


Your package contains the following items:



Handset

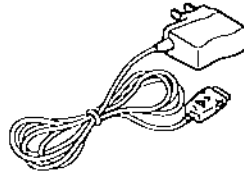

Travel Adapter

 

Battery



User's Manual



Hand Strap

Your local Samsung dealer can provide you with additional accessories including:


- Standard battery
- Simple handsfree car kit
- Cigarette lighter adapter
- Travel adapter
- Hand strap
- TTY adapter
- Car holder
- Straight headset
- Battery charger
- PC data link kit

# Your phone

## Phone layout

The following illustrations show the main elements of your phone:



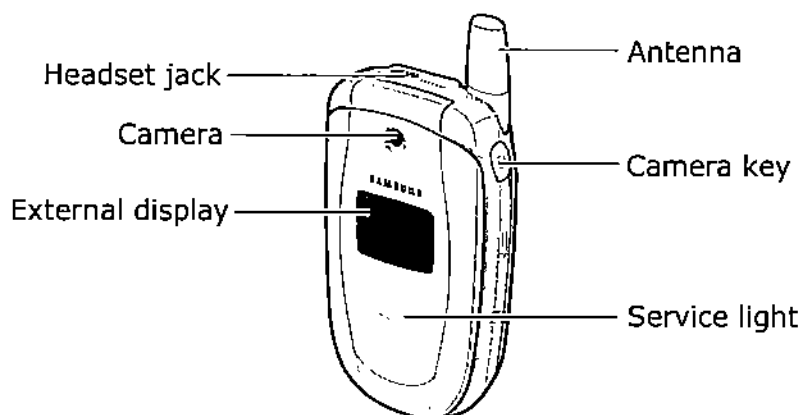

## Key(s)

## Description



In Menu mode, scrolls through the menus and Phone Book.

In Idle mode, the Up key allows you to quickly access the **Camera** menu and the Down key allows you to access your favorite menus directly. For more information about shortcuts, see page 131.



In Menu mode, the Left key returns to the previous menu level and the Right key selects the current menu.

When entering text, moves the cursor left or right, depending on which side you push.

In Idle mode, allows you to access your favorite menus directly. For more information about shortcuts, see page 131.


 

 





(soft keys)

Performs the functions indicated by the screen text above them, on the bottom line of the display.



In Idle mode, launches the WAP (Wireless Application Protocol) browser.

| Key(s)  | Description (Continued)   |
|---|---|
|    | <p>Makes or answers a call.</p> <p>In Idle mode, recalls the most recent number dialed or received when held down.</p> <p>In Menu mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.</p> |
|    | <p>Deletes characters from the display.</p> <p>In Menu mode, returns you to the previous menu level.</p>  |
|    | <p>Ends a call. Also switches the phone on and off when held down.</p> <p>In Menu mode, cancels your input and returns the phone to Idle mode.</p>  |
|  | <p>In Idle mode, accesses your voice mail when held down.</p>   |
|  | <p>Enters numbers, letters, and some special characters.</p>  |
|  | <p>Enters special characters.</p> <p>Performs various functions.</p>  |
|  | <p>(on the right side of the phone)</p> <p>Turns on the camera when held down to allow you to take photos.</p> <p>In Capture mode, takes a photo.</p>   |

| Key(s) | Description (Continued) |
|--------|-------------------------|
|--------|-------------------------|



(on the left side of the phone)  
During a call, adjusts the earpiece volume.


In Idle mode with the phone open, adjusts the keypad tone volume. With the phone closed, turns on the external display when held down.

In Menu mode, scrolls through menus and Phone Book.

## Display

### Display layout

The display has three areas:

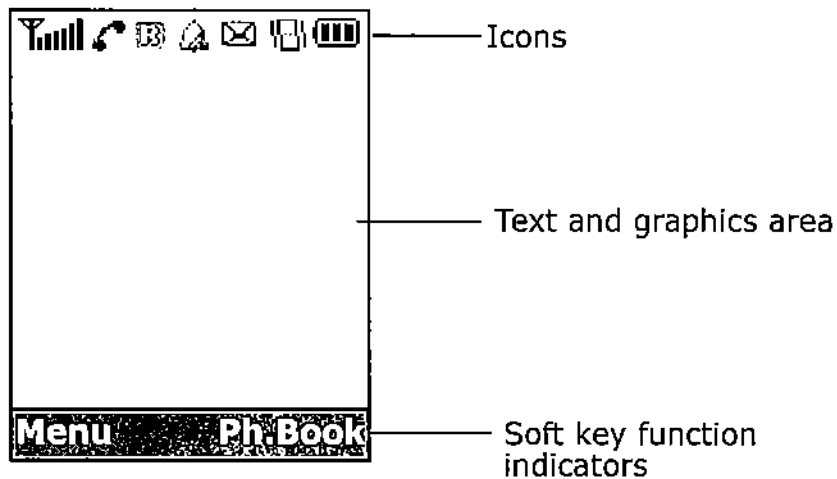

| Area         | Description  |
|--------------|--|
| First line   | Displays various icons. See page 12.   |
| Middle lines | Displays messages, instructions, and any information that you enter, such as the number you are dialing. |
| Last line    | Shows the functions currently assigned to the two soft keys.   |

## Icons

| Icon | Description |
|------|-------------|
|------|-------------|



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Appears when you are connected to the GPRS network.



Appears when a call is in progress.



Appears when you are out of your service area. When it displays, you cannot make or receive a call.



Appears when you are out of your home area and have logged on a different network; for example, when traveling in other countries.



Appears when the Call Forwarding feature is activated.



Appears when you set an alarm to ring at a specified time.



Appears when a new text message is received.



Appears when a new multimedia message is received.



Appears when a new voice mail message is received.



Appears when Mute mode is active.



Appears when Silent mode is active or when you set the phone to vibrate when you receive a call. You set this option in the **Alert type** menu (**Menu 9.4.3**). For further details, see page 27 and page 136 respectively.

## **Icon    Description** (Continued)



Shows the level of your battery. The more bars you see, the more power you have remaining.

## **Backlight**

A backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Back light** menu (**Menu 9.3.5**). The display turns off after one minute to conserve battery power.

To specify the length of time the backlight is active, set the **Back light** menu. See page 135 for further details.

## **External display**

Your phone has an external display on the front of the phone. It indicates when you have an incoming call or message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the external display.

When you close the phone, the display shows the current time on a digital clock. You can select the display color using the **Exterior display** menu (**Menu 9.3.2**). For details, see page 134.


With the phone closed, you can take photos using the external display by pressing and holding the Camera key on the right side of the phone. See page 119.



## Service light

The service light is on the front of the phone. It flashes when services are available on the phone.

To activate or deactivate the use of the service light, use the **Service light** menu (**Menu 9.3.6**). See page 135 for further details.

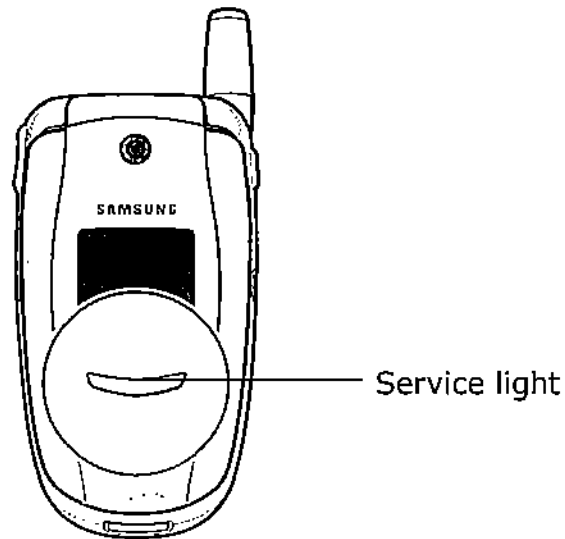

## Camera

The camera module on the front of your phone allows you to take a photo or record a video while on the move.

For further details about the Camera feature, see page 119.


# Getting started


## Installing the SIM card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.


**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
  - ① Slide the battery lock towards the top of the phone and hold it in that position.
  - ② Lift away the battery, as shown.

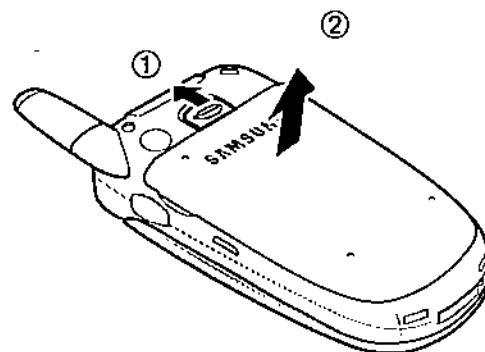


3. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

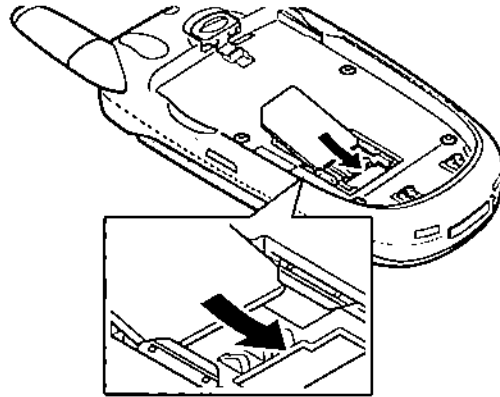


**Note:** When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

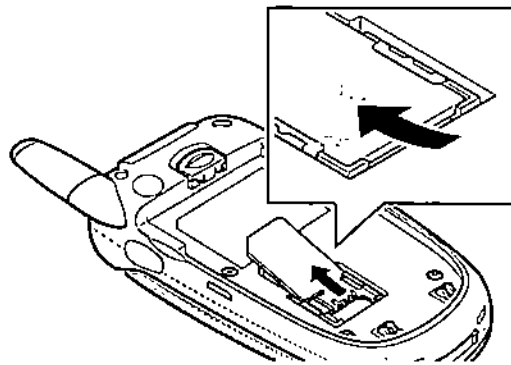

4. Place the battery so that the tabs on the end align with the slots at the bottom of the phone.

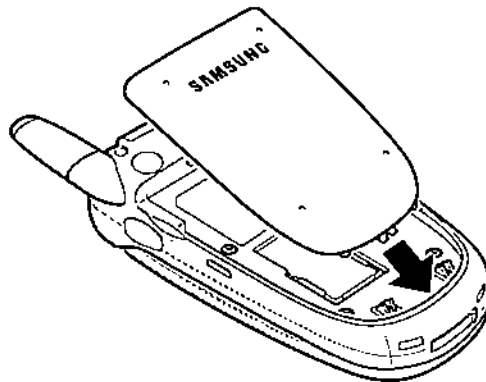

5. Press the battery until it clicks into place. Make sure that the battery is properly installed before switching on the phone.

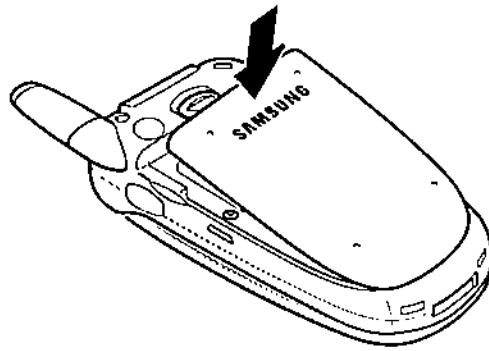


## Charging a battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.


You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

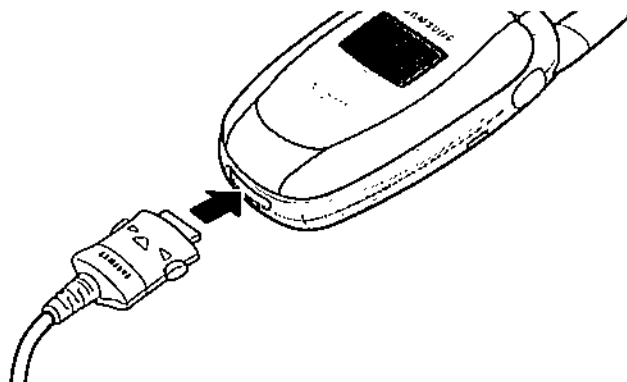

2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.

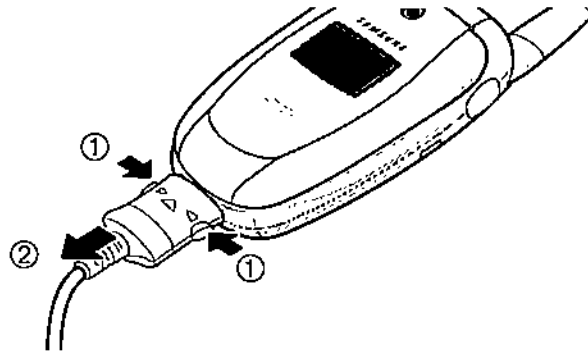


**Note:** You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

## Low battery indicator


When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the "Warning Low Battery" message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level gets too low, the phone automatically turns off.


## Switching on/off the phone

1. Open the phone.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter the phone password, enter the password and press the **OK** soft key. The password is preset to "00000000" at the factory. For further details, see page 146.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key. For further details, see page 147.

The phone searches for your network and after finding it, the idle screen, illustrated below, appears on the display. Now, you can make or receive calls.

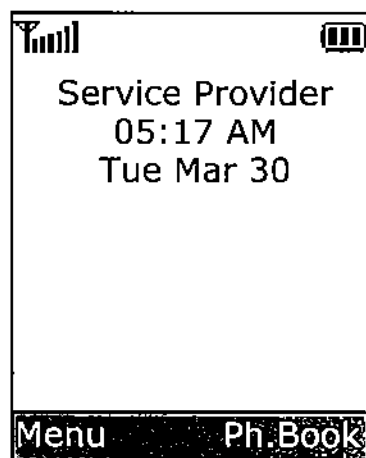


**Note:** The display language is preset to English at the factory. To change the language, use the **Language** menu (**Menu 9.2.1**). For further details, see page 131.

5. When you wish to switch off the phone, press and hold the  key until the power-off image displays.




# Call functions

## Making a call

When the idle screen displays, enter the area code and phone number, and press the  key.

**Note:** When you activate the **Auto redial** option in the **Extra settings** menu (**Menu 9.2.5**), the phone will automatically redial up to ten times when the person does not answer the call or is already on the phone. See page 132 for further details.

## Making an international call


1. Press and hold the **0** key.  
The **+** character appears.
2. Enter the country code, area code, and phone number and press the  key.

## Correcting the number

| To clear                      | Press the   |
|-------------------------------|---|
| the last digit displayed      | <b>C</b> key  |
| any other digit in the number | Left or Right key until the cursor is immediately to the right of the digit to be cleared. Press the <b>C</b> key. You can also insert a missing digit. |
| the whole display             | <b>C</b> key and hold it for more than one second.  |





## Ending a call


When you want to finish your call, briefly press the  key.

## Redialing the last number

The phone stores the numbers of the calls you've dialed, received or missed if the call recipient or caller is identified. See "Call records" on page 65 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the Up and Down keys to scroll through the numbers until the number you want highlights.

| 4. To                     | Press the   |
|---------------------------|---|
| dial the number           |  key.                                  |
| edit the number           | <b>Options</b> soft key and select <b>Edit</b> . Then change the number, referring to "Correcting the number" on page 21. |
| delete the number         | <b>Options</b> soft key and select <b>Delete</b> .  |
| delete all of the numbers | <b>Options</b> soft key and select <b>Delete all</b> . For details, see page 67.  |

## Making a call from Phone Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called Phone Book.


Once you have stored a number in Phone Book, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phone Book features, see page 31.

## Adjusting the volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the  $\blacktriangle$  key to increase the volume level and the  $\blacktriangledown$  key to decrease the level.

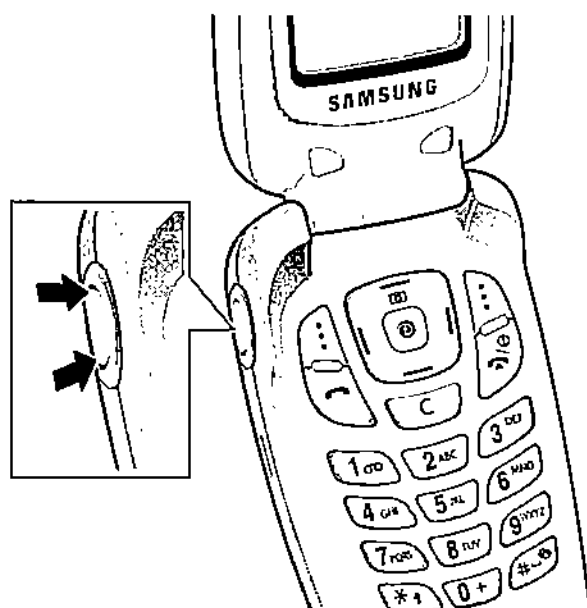



In Idle mode, you can also adjust the keypad tone volume using these keys.

## Answering a call


When somebody calls you, the phone rings and displays the incoming call image.


The caller's phone number, or name if stored in Phone Book, displays.

1. If necessary, open the phone. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the **Extra settings** menu (**Menu 9.2.5**) is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. See page 132.

If the **Active folder** option in the **Extra settings** menu (**Menu 9.2.5**) is activated, you can answer the call simply by opening the phone.

**Note:** To reject an incoming call, press and hold the Volume keys on the left side of the phone before opening the phone, or press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

**Note:** You can answer a call while using the Phone Book or menu features. After ending the call, the phone returns to the function screen you were using.

## Viewing missed calls


When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, open the phone.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.


|                                     |  |
|-------------------------------------|--|
| 3. <b>To</b>                        | <b>Press the</b>   |
| scroll through the missed calls     | Up or Down key.  |
| call the number displayed           |  key. |
| edit or delete a missed call number | <b>Select</b> soft key. See below.   |

## Editing a missed call number

**Note:** When the number corresponding to the missed call is not available, the **Edit number** option does not display.


1. Press the **Options** soft key.
2. Press the Up or Down key to highlight the **Edit number** option.
3. Press the **Select** soft key.

4. Change the number.

|                  |  |
|------------------|--|
| 5. <b>To</b>     | <b>Press the</b>   |
| call the number  |  key. |
| store the number | <b>Save</b> soft key and enter a name and location. For further details, see page 31.  |

## Deleting a missed call


1. Press the **Options** soft key.
2. If necessary, press the Up or Down key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

**Note:** You can access the Missed Call feature at any time by selecting the **Missed calls** menu (**Menu 2.1**). For further details, see page 65.


## Quickly switching to Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the **#** key until the "Silent mode" message and the Vibration icon () display.

When you exit Silent mode, your phone changes the sound settings as follows:

| Option                    | New Setting       |
|---------------------------|-------------------|
| Alert type                | Vibration         |
| Keypad tone               | Off               |
| Text/Picture message tone | Light + Vibration |
| Broadcast message tone    | Light only        |
| Folder tone               | Off               |
| Power on/off              | Off               |
| Extra tones               | Off               |


 
To exit and reactivate the previous sound settings, press and hold the **#** key again until "Exit silent mode" appears. The Vibration icon () no longer displays.

### Notes:

- When you turn off the phone, Silent mode is automatically deactivated.
- Activating Silent mode will not turn off the camera shutter sound.




# Selecting functions and options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys,  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

## Using the soft keys

The roles of the soft keys vary depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.

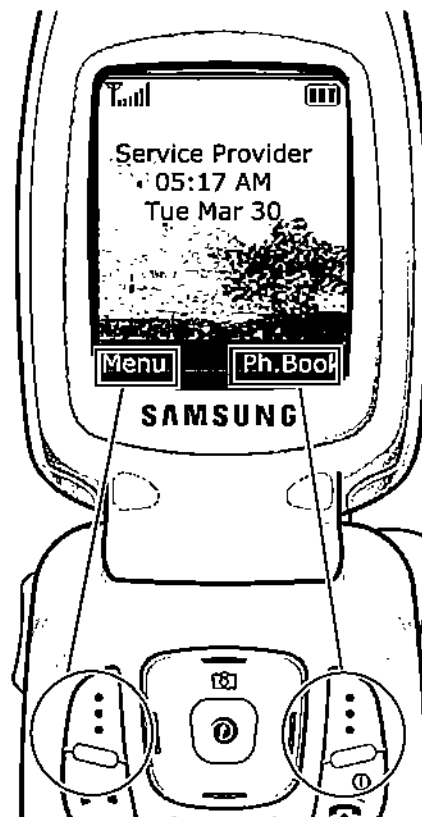

Press the left soft key  
for Menu mode.





Press the right soft key  
to access the **Phone  
Book** menu.



## Selecting options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.

| 2. To   | Press the  |
|---|--|
| select the: <ul style="list-style-type: none"><li>• function displayed</li><li>• option highlighted</li></ul> | <b>Select</b> soft key.  |
| view the next function or highlight the next option on a list   | Down key or  key on the left side of the phone. |
| move back to the previous function or option on a list  | Up key or  key on the left side of the phone.   |
| move back up one level in the menu structure  | Left key,  soft key or <b>C</b> key.            |
| exit the menu structure without changing the settings   |  key.   |

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key.

**Note:** When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

# Phone Book

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phone Book.

**Note:** Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

## Storing a number with a name

There are two ways to store a number:

- Using the **Save** soft key in Idle mode
- Using the **New entry** option in the Phone Book menu

## Storing a number in Idle mode

When you enter a number, **Save** appears above the left soft key to allow you to store the number in Phone Book.

1. Enter the number you want to store.

**Note:** If you make a mistake while entering a number, correct it using the **C** key.

2. To save the number, press the **Save** soft key.
3. Select a category of in which the number is to be stored. Three categories are available:

- **Mobile number**
- **Work number**
- **Home number**

To select the category, press the Up or Down key and press the **Select** soft key.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key.


**Note:** When you change phones, any numbers stored in your SIM card memory are automatically available with the new phone, whereas any numbers stored in the phone's memory will need to be reentered.

5. Enter a name.

For further details about how to enter characters, see page 43.

6. Press the **OK** soft key to store the name and number.

After storing, the phone displays the Phone Book entry or name you just created.

| 7. To                     | Press the  |
|---------------------------|--|
| use the entry options     | <b>Options</b> soft key. For further details, see page 33.                               |
| return to the idle screen |  key. |

## Storing a number using the Phone Book menu

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **New entry** by pressing the Up or Down key and press the **Select** soft key.
3. Select a category of the number to be stored by pressing the Up or Down key, and press the **Select** soft key.

**Note:** The E-mail address is available in this step. It allows you to save an E-mail address instead of a phone number.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key.


**Note:** When you are saving an e-mail address, SIM Memory is not available.

5. Enter a name and press the **OK** soft key.

For further details about how to enter characters, see page 43.

6. Enter a number or address you want to store and press the **Save** soft key.

After storing, the phone displays the Phone Book entry or name you just created.

| 7. To                     | Press the  |
|---------------------------|--|
| use the entry options     | <b>Options</b> soft key. For further details, see page 33.                               |
| return to the idle screen |  key. |

## Using Phone Book entry options

While accessing any Phone Book entry, press the **Options** soft key to use the options for the entry.

The following options are available:

**Photo caller ID:** allows you to assign one of the photos you took using the camera as a caller ID image to be displayed when you receive a call from the selected number. For details about the Camera feature, see page 119.

Select a photo: allows you to select a photo for the number.

Take a photo: allows you to take a new photo to be used as a caller ID.

**View**: displays the photo assigned to the number.

**Delete caller ID**: cancels the photo caller ID setting for the number.


**Edit**: allows you to edit the name and number.

Select **One entry** to change the name and/or one number for the selected entry. If you change the name, the number is saved separately with the new name.

Select **All entry** to change only the name of the entry.

**Copy**: allows you to copy the number to another location. You can select the memory location, either SIM or Phone, and the location number.

**Paste**: allows you to paste the number into the normal dialing mode. Use this option to dial a number similar to one in Phone Book, such as a different extension in the same office.

Use the **C** key to change the number as required; see page 21 for further details. When you are ready to dial, press the  key.

**Delete**: allows you to delete the name and number from Phone Book. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.

**Caller group**: allows you to organize your Phone Book entry in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No group** option.

For more information about how to change caller group properties, see page 39.


**Add entry:** allows you to add a new number to the currently selected name.

## Dialling a number from Phone Book

Once you have stored phone numbers in Phone Book, you can dial them easily and quickly by using the location numbers that were assigned to them in Phone Book.

**Note:** If you cannot remember a location number, you must go into the **Search** menu in the **Phone Book** menu to search for the entry by name. For details, see page 37.

## Dialling a number from the SIM card

1. Enter the location number for the phone number you want to dial.
2. Press the **#** key. The list of entries in the SIM card appears, with the desired number highlighted.
3. You can press the Up or Down key to find other numbers on the list.
4. Press the **Dial** soft key or  key when you have selected the number you want.

## Dialling a number from the phone's memory

1. In Idle mode, press and hold the **0** key. A **+** appears.
2. Enter the location number of the phone number you want and press the **#** key.

The list of entries in the phone's memory appears.

3. You can press the Up or Down key to find other numbers on the list.

4. Press the **Dial** soft key or  key when you have selected the number you want.

## Speed-dialing

You can assign up to eight phone numbers from your Phone Book list that you use most frequently to the number keys (**2** to **9**), and then dial them easily whenever you want, simply by pressing and holding the associated number key.

### Setting up speed-dial entries

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Speed dial** by pressing the Up or Down key and press the **Select** soft key.
3. Select the key to which you wish to assign the speed-dialing number, from the **2** to **9** keys, and press the **OK** soft key.

**Note:** Memory location 1 is reserved for your Voice Mail server number.

If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to step 6.

4. Select an entry from the Phone Book list and press the **View** soft key.
5. Select a number if the entry has more than one number, by pressing the Up or Down key and press the **Select** soft key.
6. Once you have assigned a number to the selected key, you can use the following options by pressing the **Options** soft key:

- **Change:** allows you to assign a different number to the key.
- **Delete:** allows you to clear the setting so that no number is assigned to the key.
- **Delete all:** allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.
- **Number:** allows you to view the number assigned to the key.

7. When you are finished, press the **C** or  key.

## Speed-dialing

To speed-dial the numbers assigned to keys **2** to **9**, press and hold the appropriate key.

## Searching for and dialing number in Phone Book

After storing numbers in Phone Book, you can search for them in two ways; by name and by caller group.


### Searching for a number by name

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Press the **Select** soft key when **Search** highlights. You are asked to enter a name.
3. Enter the first few letters of the name.

The Phone Book entries are listed, starting with the first entry matching your input.



|  |   |
|--|---|
| 4. <b>To</b>                                     | <b>Press the</b>                                    |
| view the highlighted entry                       | <b>View</b> soft key.                               |
| select a different entry                         | Up or Down key until the entry you want highlights. |
| look for a name starting with a different letter | key labeled with the letter you want.               |

- Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Phone Book entry options; for further details, see page 33.

## Searching for a number by caller group


- When the idle screen displays, press the **Ph.Book** soft key.
- Scroll to **Group search** by pressing the Up or Down key and press the **Select** soft key. You are asked to enter a group name.
- Enter the first few letters of the group name that you wish to find.

The caller groups are listed, starting with the first group matching your input.

- Scroll to the group you want by pressing the Up or Down key and press the **View** soft key.

The Phone Book entries in the caller group are listed.

| 5. <b>To</b>               | <b>Press the</b>                                    |
|----------------------------|---|
| view the highlighted entry | <b>View</b> soft key.                               |
| select a different entry   | Up or Down key until the entry you want highlights. |

- Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Phone Book entry options; for further details, see page 33.

## Editing a caller group

- When the idle screen displays, press the **Ph.Book** soft key.
- Scroll to **Group edit** by pressing the Up or Down key and press the **Select** soft key.
- Scroll through the group list by pressing the Up or Down key.
- When the group you want highlights, press the **Options** soft key.
- Select each option and change the settings, as required. The following options are available:
  - **Call ring tone:** allows you to set the ring tone to be used when you receive a voice call from a member of that group.
  - **SMS tone:** allows you to set the ring tone to be used when you receive a text message from a member of that group.
  - **Graphic:** allows you to set the graphic icon to be displayed when you receive a voice call from a member of that group.

- **Group name:** allows you to assign a name to the group. For further details about how to enter characters, see page 43.

6. When you are finished, press the **C** or  key.

## Deleting all of the Phone Book entries

You can delete all your entries from your phone's memory, your SIM card, or both.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Delete all** by pressing the Up or Down key and press the **Select** soft key.
3. To place a check mark by the memory location you want to empty, **All**, **SIM**, or **Phone**, press the **Mark** soft key.

You can remove the check mark by pressing the **Unmark** soft key.

4. Press the **Delete** soft key to delete the entries in the selected memory location.
5. Enter the phone password and press the **OK** soft key.

**Note:** The password is preset to "00000000" at the factory. To change this password, see page 146.



6. When the confirmation message appears, press the **Yes** soft key.

To cancel the deletion, press the **No** soft key.

7. When you are finished, press the **C** or  key.

## Checking the memory status

You can check how many names and numbers are stored in Phone Book, in both SIM card and the phone memory. You can also see the capacity of both memories.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Select the **Memory status** option by pressing the Up or Down key and press the **Select** soft key.
3. Press the Up or Down key to view the number of the entries you stored and the total number of the entries you can store in the SIM card and the phone's memory.
4. When you are finished, press the  soft key or  key.

## Own number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any affect the actual subscriber numbers on your SIM card.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Select the **Own number** option by pressing the Up or Down key and press the **Select** soft key.
3. Select a number location and press the **Edit** soft key.
4. Enter the phone number you want and press the **OK** soft key.
5. Enter the name you want and press the **OK** soft key.

## Using the service dialing numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, directory enquiries and voice mail numbers.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Select the **SDN** option by pressing the Up or Down key and press the **Select** soft key.
3. Scroll through the numbers by using the Up or Down key.
4. To dial the number displayed, press the **Dial** soft key.

**Note:** This menu is available only when your SIM card supports Service Dialing Numbers.

# Entering text

When using your phone, you will often need to enter text, such as when storing a name in Phone Book, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the **5** key can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

- **Alphabet mode**

These modes allow you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three or four times until it displays.

- **Number mode**

This mode allows you to enter numbers.


- **Symbol mode**

This mode allows you to enter symbols, such as punctuation marks.

## Changing the text input mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message

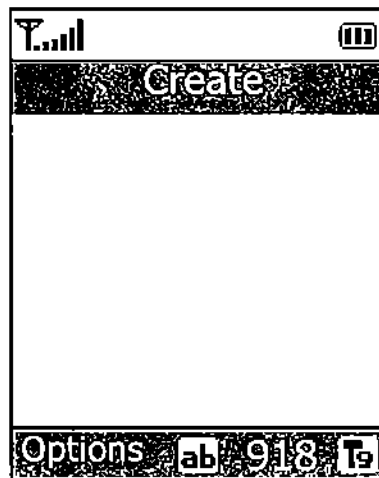

Text input mode  
indicator

| To select     | Press the right soft key until         |
|---------------|--|
| T9 mode       | <b>T9</b> displays. See page 45.       |
| Alphabet mode | <b>A</b> displays. See page 47.        |
| Number mode   | <b>1</b> displays. See page 48.        |
| Symbol mode   | the symbol list displays. See page 48. |

**Note:** Additional text input modes may be available, depending on your country.

## Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode,  
press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key or Up or Down key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.



To add a new word into the T9 dictionary:


1. After pressing the keys corresponding to the word you want to add, press the **0** key or Up or Down key to display the alternative words.
2. When you press the **0** key or Up or Down key at the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key.
3. If necessary, clear the word using the **C** key and enter the word you want to add using Alphabet mode. See page 47.
4. Press the **OK** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

**Note:** This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.

Example: The **1** key is used twice to display two punctuation marks:

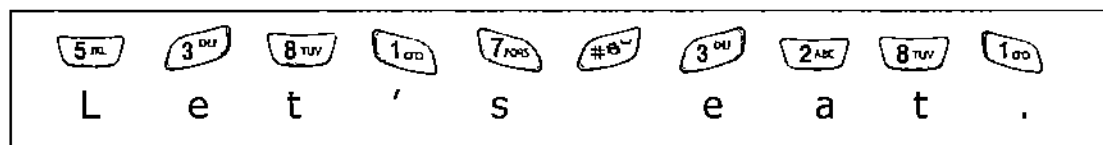

- To shift case in T9 mode, use the **✕** key. There are three cases: Initial capital (**Ab**), Capital lock (**AB**), and Lower case (**ab**).
- You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

## Using Alphabet mode

Use the **1** to **0** keys to enter your text.

1. Press the key labeled with the letter you want:

- Once for the first letter
- Twice for the second letter
- And so on

2. Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key.  
When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

See the table below for more information about available characters:

| Key | Characters in the Order Displayed |                    |
|-----|-----------------------------------|--------------------|
|     | Upper Case                        | Lower Case         |
| 1   | Space . 1 ! ? & ¡ ¸ §             | . @ % _ £ \$ ¥ ¤ § |
| 2   | A B C 2 Ä Å Æ Ç Γ                 | a b c 2 à ä å æ Γ  |
| 3   | D E F 3 É Δ Φ                     | d e f 3 è é Φ      |
| 4   | G H I 4 Θ Ψ                       | g h i 4 ì Ψ        |
| 5   | J K L 5 Λ                         | j k l 5 Λ          |
| 6   | M N O 6 Ñ Ø Ö ö                   | m n o 6 ñ ø ò ö    |
| 7   | P Q R S 7 Π Σ Ξ                   | p q r s 7 β Σ Ξ    |
| 8   | T U V 8 Ü ü                       | t u v 8 ù ü        |
| 9   | W X Y Z 9 Ω                       | w x y z 9 Ω        |
| 0   | 0 * # , ; ' " =                   | / : - + ( ) < >    |

- To insert a space, press the **#** key.
- To shift case in Alphabet mode, use the **✕** key. There are three cases: Capital lock (**AB**), Lower case (**ab**), and Initial capital (**Ab**).
- You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

## Using Number mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

## Using Symbol mode

Symbol mode enables you to insert symbols into a text message.

| To  | Press the   |
|---|---|
| select a symbol                                   | corresponding number key.   |
| display more symbols                              | Up or Down key.   |
| clear the symbol(s)                               | <b>C</b> key. When the input field is empty, this key returns the display to the previous mode. |
| insert the symbol(s) into your message            | <b>OK</b> soft key.   |
| cancel your input and return to the previous mode | <b>Back</b> soft key.   |

# Options during a call


Your phone provides a number of control functions that you can use during a call.

## Putting a call on hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in Phone Book.
2. Press the  key to dial the second call.

The first call is automatically put on hold.


Or

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

When you have an activate call and a call in hold, you may switch between the two calls, changing the one on hold to activate and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

## Switching off the microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key.
2. If necessary, press the Down key to highlight the **Mute** option.
3. Press the **OK** soft key. The other person can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key.
2. If necessary, press the Down key to highlight the **Unmute** option.

3. Press the **OK** soft key. The other person can hear you again.

## Muting or sending key tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

**Note:** To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

## Searching for a number in Phone Book

You can search for a number in Phone Book during a call.


1. Press the **Options** soft key.
2. Press the Down key to highlight the **Phone Book** option.
3. Press the **OK** soft key.

The Phone Book entries are listed.

4. Enter the name that you wish to find.
5. If you enter the first few letters of the name, the Phone Book entries are listed starting with the first entry matching your input.
6. To view the highlighted entry, press the **View** soft key.

For further details about the Phone Book feature, see page 31.

## Using the message service (SMS)


If you receive an SMS (Short Message Service) message during a call, the Message icon () flashes on the display. The SMS Service option enables you to read the message or send a new message.

For further details about the Message feature, see page 75.

## Call waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call waiting** menu (**Menu 3.2**) to **Activate**; see page 70. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.
3. To end a call on hold, press the **Options** soft key and select the **End held call** option.

To end the current call, press the  key.

## Making a multi-party call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

## Setting up a multi-party call


1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key and select **Join**. Press the **OK** soft key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key. Select the **Conference** option and press the **OK** soft key.

You can add incoming callers by answering the call and pressing the **Options** soft key, and selecting **Conference**. Repeat as required.

## Having a private conversation with one participant

1. Press the **Options** soft key and choose the **Select one** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person by pressing the Up or Down key, and press the **Select** soft key or the  key.



3. When the **Private** option highlights, press the **OK** soft key.

Now you can talk privately to that person. The other participants can continue to converse with each other.


4. To return to the multi-party call, press the **Options** soft key and select **Conference**. Press the **OK** soft key.

All of the multi-party call participants can now hear each other.


## Dropping one participant

1. Press the **Options** soft key and choose the **Select one** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person by pressing the Up or Down key, and press the **Select** soft key or the  key.
3. Press the Down key to select the **Remove** option and press the **OK** soft key.

The call with that participant ends, but you can continue to talk to the other participants.

4. When you want to end the multi-party call, close the phone or press the  key.





# Using the menus

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

## Accessing a menu function by scrolling

1. In Idle mode, press the **Menu** soft key.
2. Select **Settings** using the Navigation keys and press the **Select** soft key.
3. Scroll using the Up and Down keys to reach a main menu, **Phone settings** for example. Press the **Select** soft key or the Right key to enter the menu.
4. If the menu contains sub-menus, **Language** for example, you can access them by pressing the **Select** soft key.

If the menu that you have selected contains further options, repeat this step.

| 5. To                                       | Press the  |
|---|--|
| scroll through the menus                    | Up or Down keys or use the  and  keys. |
| confirm the chosen setting                  | <b>Select</b> soft key or the Right key.   |
| return to the previous menu level           |  soft key or the Left key.  |
| exit the menu without changing the settings |  key.   |

## Using shortcuts

The menu items, such as menus, sub-menus and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (**1** to **9**) corresponding to their location on the screen.

### Notes:

- The numbers assigned to each menu are indicated on the list on page 57.
- For menu number 10, use the **0** key.

Example: Accessing the **Language** menu.

1. Press the **Menu** soft key.
2. Press the **9** key for **Settings**.
3. Press the **2** key for **Phone settings**.
4. Press the **1** key for **Language**.

The languages available display.

# List of menu functions

The following list shows the menu structure and indicates the number assigned to each option and the page where you can find a description of each feature.

## 1. Voice notes (see page 63)

## 2. Call records (see page 65)

- 2.1 Missed calls
- 2.2 Incoming calls
- 2.3 Outgoing calls
- 2.4 Delete all
- 2.5 Call time
  - 2.5.1 Last call
  - 2.5.2 Total outgoing
  - 2.5.3 Total incoming
  - 2.5.4 Reset timers

## 3. Network services (see page 69)

- 3.1 Call Forwarding
  - 3.1.1 Forward always
  - 3.1.2 Busy
  - 3.1.3 No reply
  - 3.1.4 Unreachable
  - 3.1.5 Cancel all
- 3.2 Call waiting
- 3.3 Network selection
- 3.5 Caller ID

## 4. IM (see page 73)

## **5. Messages** (see page 75)

### 5.1 Text messages

- 5.1.1 Create
- 5.1.2 Inbox
- 5.1.3 Outbox
- 5.1.4 Templates
- 5.1.5 Settings
- 5.1.6 Delete all
- 5.1.7 Memory status

### 5.2 Picture messages

- 5.2.1 Create
- 5.2.2 Inbox
- 5.2.3 Outbox
- 5.2.4 Draft
- 5.2.5 Templates
- 5.2.6 Delete all
- 5.2.7 Memory Status

### 5.3 Push messages

- 5.3.1 Inbox
- 5.3.2 Receive
- 5.3.3 Delete all

### 5.4 Voice mail

- 5.4.1 Connect to voice mail
- 5.4.2 Voice mail number

### 5.5 Broadcast messages

- 5.5.1 Read
- 5.5.2 Receive
- 5.5.3 Channel list
- 5.5.4 Language

## **6. Funbox** (see page 97)

### 6.1 t-zones

- 6.1.1 Home
- 6.1.2 Favorites
- 6.1.3 http://
- 6.1.4 Clear cache
- 6.1.5 Settings

### 6.2 Games

### 6.3 Sounds

### 6.4 Images

### 6.5 Delete all

### 6.7 Memory status

## **7. Organizer** (see page 109)

### 7.1 Alarm

- 7.1.1 Once alarm
- 7.1.2 Daily alarm
- 7.1.3 Morning call
- 7.1.4 Remove alarm
- 7.1.5 Autopower

### 7.2 Calendar

### 7.3 Calculator

### 7.4 To do list

### 7.5 Voice memo

- 7.5.1 Record
- 7.5.2 Voice memo list
- 7.5.3 Delete all
- 7.5.4 Memory status

### 7.6 Currency exchange

## **8. Camera** (see page 119)

- 8.1 Take and send
- 8.2 Record videos
- 8.3 My photos
- 8.4 My videos
- 8.5 My album
- 8.6 My journal
- 8.7 Delete all
- 8.8 Memory status

## **9. Settings** (see page 129)

- 9.1 Time & Date
- 9.2 Phone settings
  - 9.2.1 language
  - 9.2.2 Greeting message
  - 9.2.3 Short cut
  - 9.2.4 TTY setting
  - 9.2.5 Extra settings
- 9.3 Display settings
  - 9.3.1 Interior display
  - 9.3.2 Exterior display
  - 9.3.3 Menu style
  - 9.3.4 Brightness
  - 9.3.5 Back light
  - 9.3.6 Service light
  - 9.3.7 Graphic logo
- 9.4 Sound settings
  - 9.4.1 Ring tone
  - 9.4.2 Ring volume
  - 9.4.3 Alert type
  - 9.4.4 Keypad tone
  - 9.4.5 Message tone
  - 9.4.6 Folder tone
  - 9.4.7 Power on/off
  - 9.4.8 Alerts on call
  - 9.4.9 Extra tones

## **9. Settings** (continued)

### 9.5 Security

- 9.5.1 PIN check
- 9.5.2 Change PIN
- 9.5.3 Phone lock
- 9.5.4 Change password
- 9.5.5 Privacy
- 9.5.6 FDN mode\*
- 9.5.7 Change PIN2\*

### 9.6 Reset settings

---

\* Shows only if supported by your SIM card.





# Voice notes

In this menu, you can record a voice memo of up to 30 seconds and then immediately send it by a MMS (Multimedia Message Service) message.

When you access this menu, a timer appears on the screen.

1. Press the **Record** soft key to start recording.
2. Record a memo by speaking into the microphone.  
The display shows the elapsed time and the remaining time at one time.
3. When you are finished, press the **Stop** soft key. Or, when the recording time is expired, the display switches to the next screen.
4. Choose one of the following options and press the **Select** soft key:
  - **Recent log**: allows you to select a number or an address from the 10 last destinations you entered for sending the last messages.
  - **Phone number**: allows you to enter the phone number you want.
  - **E-mail address**: allows you to enter the e-mail address of the recipient.
  - **Phone Book**: allows you to retrieve a number from your Phone Book.
5. Enter a number or an e-mail address, or select a destination from the Phone Book or Recent Log list.
6. When the correct number or address displays, press the **OK** soft key.

7. To add a destination, select **Add destination** and press the **Select** soft key. Repeat from step 4. You can enter up to 10 destinations.

If you want to edit the destinations, select one and press the **Select** soft key. You can change or delete it.

8. When you have finished entering the destinations, press the **Select** soft key when **Send message** highlights.


Your phone sends the message. After sending, the message is saved in the Outbox in the **Picture messages** menu.

# Call records

In this menu, you can view the:

- calls you missed, received, or dialed.
- length of your calls.

## Notes:

- You can access the numbers in the three types of call records by pressing the  key in Idle mode.
- The number of call records the phone can store may vary, depending on your SIM card.

## Missed calls *(Menu 2.1)*

This menu lets you view the numbers of the 20 most recent you received.

The number or name, if available, displays together with the time and date the call was received.

By pressing the **Options** soft key, you can:

- edit the number, if available, and save it in Phone Book.
- delete the call from the list.

You can also dial the number by pressing the  key.


## **Incoming calls** *(Menu 2.2)*

This menu lets you view the 20 most recent numbers of the calls you received.

The number or name, if available, displays together with the time and date the call was received.

By pressing the **Options** soft key, you can:

- edit the number, if available, and save it in Phone Book.
- delete the call from the list.

You can also dial the number by pressing the  key.


## **Outgoing calls** *(Menu 2.3)*

This menu lets you view the 20 most recent numbers you dialed.

The number or name displays together with the time and date the call was made.

By pressing the **Options** soft key, you can:

- edit the number and save it in Phone Book.
- delete the number.

You can also dial the number by pressing the  key.

## Delete all *(Menu 2.4)*

This menu allows you to delete all of the records in each call record. You can also delete all of your call records at one time.

| To                            | Press the   |
|-------------------------------|---|
| select a call record to clear | Up or Down key. To delete all of your call records, select <b>All calls</b> . |
| place a check mark            | <b>Mark</b> soft key.   |
| remove a check mark           | <b>Unmark</b> soft key.   |
| delete the marked records     | <b>Delete</b> soft key.   |

When a confirmation message displays, press the **Yes** soft key to confirm.

## Call time *(Menu 2.5)*

This menu lets you view the timers you made and received.

**Note:** The actual time invoiced for calls by your service provider may vary, depending on network features, such as rounding-off for billing purposes.

The following options are available:

**Last call:** length of the last call.

**Total outgoing:** total length of all calls you have made since the timer was last reset.

**Total incoming:** total length of all calls you have received since the timer was last reset.

**Reset timers:** option used to reset the call timers. You must first enter the phone password and then press the **OK** soft key.

**Note:** The password is preset to "00000000." To change this password, see page 140.

# Network services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

## Call forwarding *(Menu 3.1)*

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:

1. Select a call forwarding option by pressing the Up or Down key and then press the **Select** soft key.

The following options are available:

- **Forward always:** all calls are forwarded.
  - **Busy:** calls are forwarded when you are already on another call.
  - **No reply:** calls are forwarded when you do not answer the phone.
  - **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
  - **Cancel all:** all call forwarding options are canceled.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.



| 3. To                          | Press the                               |
|--------------------------------|---|
| activate call forwarding       | <b>Activate</b> soft key. Go to step 4. |
| change the number to be called | <b>Change</b> soft key. Go to step 4.   |
| deactivate call forwarding     | <b>Remove</b> soft key.                 |

4. Enter the number to which the calls are to be forwarded and press the **OK** soft key.

To enter an international code, press the **0** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

## Call waiting *(Menu 3.2)*

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, voice or data, to which the call waiting option is to be applied by pressing the Up or Down key and then press the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

## Network selection *(Menu 3.3)*

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

**Note:** You can select a network other than your home network only if there is a valid roaming agreement between the two.

To indicate to automatically or manually select the network to be used when roaming:

1. Press the Up or Down key until the appropriate option highlights, then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, go to step 3.

2. Press the Up or Down key until the network you want highlights and then press the **OK** soft key.

The phone will scan for that network and you will be connected.

## Caller ID *(Menu 3.4)*

You can prevent your phone number from being displayed on the phone of the person being called.

**Note:** Some networks do not allow you to change this setting.

The following options are available:

**Default:** the default setting provided by the network is used.

**Hide number:** your number does not display on the other person's phone.

**Send number:** your number is sent each time you make a call.



# IM (Instant Messenger)

Instant Messenger (IM) is a way of sending short, simple messages that are delivered immediately to online users.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

## Starting a messenger

1. Select a messenger you subscribed using the Left or Right key and press the **Select** soft key.
2. Enter your screen name to be displayed on other people's phones or PCs.
3. Press the Down key and enter your password to connect to the service.
4. Press the **Sign on** soft key to connect to your messenger service.

## Using the instant messenger options

On the sign on screen of the messenger, press the **Menu** soft key to use the following options:

**Sign on:** allows you to sign on your messenger service.

**IM settings:** allows you to select the messenger options:

Saved password: allows you to select whether or not the phone remembers your password once you sign on your messenger service.

Auto-Sign on: allows you to set the phone to automatically connect to messenger service when you access a messenger.

List ordering: allows you to select the sorting order of the screen name of the users, either **Alphabetic** or **By status**.

Network: allows you to customise your network setting.

**Saved history**: shows you list of the logs connected to messenger for using the messenger.

**Exit**: exits the current screen.


# Messages

Using the **Messages** menu, you can use various message features, such as:

- text messages
- multimedia messages
- WAP push messages
- voice mail
- cell broadcast messages

## Text messages *(Menu 5.1)*

Short Message Service (SMS) allows you to send and receive short text messages to and from other GSM mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Message icon () appears, you have received new text messages. When the memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in each message box to delete obsolete messages.

## **Create** (Menu 5.1.1)

In this menu, you can write and send a text message.

**Note:** When you add media items to a message, the number of characters you can enter decreases.

### **Creating a simple text message**

1. Create your message.

**Note:** For more information about entering characters, see page 43.

1. When you finish entering your message, press the **Options** soft key. The following options are available:
  - **Send only:** allows you to send the message. The message is deleted after sending.
  - **Save and send:** allows you to save a copy of the message to the Outbox and then send the message.
  - **Save only:** allows you to save the message in the Outbox so that it can be sent later.
  - For more information about the **Text formatting**, **Add content**, **Add templates**, **Add from phonebook**, **Add from bookmark**, and **Language** options, see page 77.
2. Select **Send only** or **Save and send**, and press the **Select** soft key.

If you only want to save the message, select **Save only**. After saving the message, the phone returns to the Text Messages menu.
3. If you select a save option, select a location and press the **OK** soft key.

4. Enter a destination number and press the **OK** soft key. The message is sent.

**Note:** When the phone fails to send the message, it asks you if you want to retry. Press the **OK** soft key to confirm. Otherwise, press the **Exit** soft key to return to the message screen.

## Creating a message using options

1. Create your message.
2. Press the **Options** soft key.
3. Select one of the following options by using the Up and Down keys and pressing the **Select** soft key.

- **Text formatting:** allows you to format the style of the text.

For the **Size** attribute, **Normal**, **Large**, and **Small** sizes are available. For the **Bold**, **Italic**, **Underline**, and **Strikethrough** attributes, select **On** or **Off**.

The attributes can be combined.

- **Add content:** allows you to add a sound, melody, picture, or animated image to your message. Select the category of the item to be added. In each category, you can select from the various factory-set items or choose an item received from other sources, such as the Internet or other phones.
- **Add templates:** allows you to apply one of the preset message templates to the text. Select one of the five items stored in the **Templates** menu (**Menu 5.1.4**). For further details, see page 80.
- **Add from phonebook:** allows you to add a Phone Book entry to your message. Select one from the list.



- **Add from bookmark:** allows you to add a web page's address stored in your Favorite list (**Menu 6.1.2**). Select one from the list.
  - **Language:** allows you to change the language to be used in T9 input mode. Select the language to be used.
4. Complete the message, and send or save it by following the procedure from step 2 on page 76.

### **Inbox** (*Menu 5.1.2*)

This message box is used to store messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Phone Book.

1. Select a message from the list and press the **View** soft key to read the message contents.
2. To scroll through the contents, press the Up or Down key.
3. To scroll to the previous or next message, press the \* or # key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** allows you to delete the message.

**Forward:** allows you to send/resend the message. For further information about how to send a message, see page 76.

**Text reply:** allows you to send a reply to the sender by sending a text message.

**Call back:** allows you to call the sender.

**Save address:** allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

**Move to phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.

**Move to SIM:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.

**Select content:** allows you to save media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message. For details, see page 77.

### **Outbox** *(Menu 5.1.3)*

This message box is used to store messages that you have sent or will send.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phone Book.

1. Select a message from the list and press the **View** soft key to read the message contents.
2. To scroll through the contents, press the Up or Down key.
3. To scroll to the previous or next message, press the \* or # key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** allows you to delete the message.

**Send:** allows you to send/resend the message. For further information about how to send a message, see page 76.

**Save address:** allows you to extract the destination number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

**Move to phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.

**Move to SIM:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.

**Select content:** allows you to save the media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message. For details, see page 77.

## **Templates** *(Menu 5.1.4)*

Using this menu, you can use one of the preset messages when you create a message.

Select a message template you want and press the **Select** soft key.

The following options are available:

**Edit:** allows you to write a new message template or edit an existing message template.

**Note:** For further details about how to enter characters, see page 43.

**Send message:** allows you to retrieve the message template. Once you have completed the message, you can send, save and send, or simply save it. For details about how to send a message, see page 76.

**Delete:** allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key.

## **Settings** *(Menu 5.1.5)*

In this menu, you can set up default message information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

**Note:** The last setting you accessed is automatically activated for sending subsequent messages.

**Setting x** (where x is the setting group number): each group has its own sub-menu.

Setting name: allows you to give a name to the setting group currently being defined.

Service center: allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.

Default destination: allows you to store a default destination number. The number automatically displays on the Destination screen when you create a message.

Default type: allows you to set the default message type to **Text**, **Fax**, **Email**, or **Paging**. The network can convert the messages into the selected format.

Default validity: allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.

**Common setting:** The following options are available:

Reply path: allows the recipient of your message to send you a reply message using your message center, if your network supports this service.

Delivery reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer selection: allows you to choose either **GSM** or **GPRS**, depending on your network.

Character support: allows you to choose a character type from **GSM-Alphabet**, **Uni-Code**, or **Automatic**.

If you select **Uni-Code** and your recipient's phone does not support it, your recipient may not be able to read your message.

## **Delete all** *(Menu 5.1.6)*

This menu allows you to delete all of the text messages in each message box and broadcast messages. You can also delete all of your messages at one time.

| <b>To</b>                     | <b>Press the</b>   |
|-------------------------------|--|
| select a message box to clear | Up or Down key. To delete all of your messages, select <b>All messages</b> . |
| place a check mark            | <b>Mark</b> soft key.  |
| remove the check mark         | <b>Unmark</b> soft key.  |
| delete the marked objects     | <b>Delete</b> soft key.  |

When a confirmation message displays, press the **Yes** soft key to confirm.

## **Memory status** *(Menu 5.1.7)*

You can check how many messages are stored in the SIM, phone, and broadcast memories.

Press the Up or Down key to view the number of messages you stored and the total number of messages you can store in the SIM, phone, and broadcast memories.

## **Picture messages** *(Menu 5.2)*

This menu allows you to use the Multimedia Message Service.

Multimedia Message Service (MMS) is a messaging service very similar to the Short Message Service (SMS). It provides automatic and immediate delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. An MMS message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the MMS feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images you downloaded from the Internet and voice memos you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.

## **Create** *(Menu 5.2.1)*

This menu allows you to create a new multimedia message and send to one or multiple destinations.

### **Creating and sending a multimedia message**

1. Enter the subject of your message and press the **OK** soft key.

For further details about entering characters, see page 43.

2. When **Add here** highlights, press the **Options** soft key and add the message contents using one of the following options:

- **Add text:** enter the message text and press the **OK** soft key.
- **Add my photo:** allows you to add a photo you took using the camera on your phone. Select **New photo** to take a new photo, or **My photos** to add one of the photos stored in the phone's memory. For further details about using the camera, see page 119.
- **Add picture:** allows you to add a photo stored in the **Images** folder (**Menu 6.4**). Choose a photo and press the **Select** soft key. You can add downloaded images if they are in correct format and your service provider supports them.
- **Add sound:** allows you to add a sound file. Select **Record** to record a new voice memo or **Sound list** to add one of the voice memos stored in the phone. You can add downloaded sounds if your service provider supports them.
- **Send:** allows you to send the message. Use this option when you have finished creating the message.

- **Save:** saves the message in the **Draft (Menu 5.2.4)** or **Templates (Menu 5.2.6)** box for later use.
- **Settings:** allows you to change the message settings. For further details about each setting option, see page 87. After changing the settings, you need to press the **S** soft key or the **C** key to go to back to the options screen.
- **Add destination:** allows you to enter destination numbers or addresses. See steps 6 to 11. After adding them, you need to press the **S** soft key or the **C** key to go to back to the options screen.
- **Preview:** shows your message as it will display on the recipient's phone.

**Note:** You can add text, an image, and a sound only once for each page.

3. Repeat step 2 until you have finished creating your message.
4. If you want to change the added items, press the Up or Down key to highlight one and press the **Options** soft key.

**Note:** Available options are different, depending on whether the item you select on the message screen is text, an image, a sound, or the Page field.

The following options are available:

- **Edit text/picture/sound:** allows you to change the text or replace the image or sound with another one.
- **Add page:** allows you to add more pages. After you add a page, the display shows you the current page number and the memory space used for the page. You can move to each page using the Left or Right key on the message screen.
- **Delete:** deletes the item from your message.



- **Duration:** allows you to set when and how long text, an image, a sound, or a page displays on the message presentation screen. If the duration you set is shorter than the content duration (for example, the length of sound clip) for a particular page, the content duration is automatically decreased.
  - **Send:** allows you to send the message.
  - **Save:** saves the message in the **Draft (Menu 5.2.4)** or **Templates (Menu 5.2.5)** box for later use.
  - **Settings:** allows you to change the message settings. For further details about each setting option, see page 87.
  - **Add destination:** allows you to enter destination addresses. See steps 6 to 11.
  - **Preview:** shows your message as it will display on the recipient's phone.
5. When you have finished creating the message, choose **Send** from the options and press the **Select** soft key.
  6. Select a destination type, **To**, **Cc** or **Bcc**, and press the **Select** soft key.
  7. Choose one of the following options and press the **Select** soft key:
    - **Phone number:** allows you to enter the phone number you want.
    - **E-mail address:** allows you to enter the e-mail address of the recipient.
    - **Phone Book:** allows you to retrieve a number from your Phone Book.
  8. Enter a number or an e-mail address, or select a number from Phone Book.

9. When the correct number or address displays, press the **OK** soft key.
10. To add a destination, press the **Select** soft key when **Add destination** highlights. Repeat from step 7.

If you want to edit the destinations, select one and press the **Select** soft key. You can change or delete it.

11. To enter additional numbers or addresses to the other destination types, press the **C** key or the **S** soft key and repeat steps 6 through 10.

You can enter up to 10 destinations each for **To**, **Cc** and **Bcc**.

12. When you have finished entering the destinations, select **Send message** and press the **Select** soft key.

Your phone sends the message.

## Using the message setting options

When you select **Settings** from the message options, the following options are available:

**Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.

**Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

**Hide ID:** when this option is enabled, your phone number does not display on the recipient's phone.


**Expiry date:** you can select the length of time your messages are stored in the message center after they are sent.

**Delivery time:** you can set a delay time before the phone sends your messages.

**Priority:** you can select the priority level of your messages.

## **Inbox** *(Menu 5.2.2)*

### **Viewing a message when you receive it**


When a new multimedia message comes in, the display shows the MMS Message icon (  ) and a text notification along with the sender's number.

1. Press the **Select** soft key to view brief information about the message, such as the sender's number, the message size and the subject.

If you want to view the message later in the Inbox, press the **Exit** soft key.







 
2. To scroll through the message information, press the Up or Down key.
3. Press the **Options** soft key to use the following options:
  - **Retrieve:** retrieves the message from the MMS server.
  - **Delete:** deletes the message.
  - **More information:** shows you detailed information about the message.
4. To read the message, press the **Select** soft key when **Retrieve** is highlighted.

Your phone retrieves the message contents from the server and displays it.

5. To scroll through the message, press the Up or Down key.
6. When you are finished, press the  key.

## Viewing a received message in the Inbox

When you access the **Inbox** menu (**Menu 5.2.1**), a list of multimedia messages you received displays along with the message subjects. The icons on the left tell you the status of the messages.

- : MMS notifications that have been opened.
- : MMS notifications that have not been opened.
- : You have sent an enquiry to the MMS server requesting the message be sent to your phone.
- : The MMS server is processing your request.
- : The MMS server is unable to send the message to your phone.
- : Messages that have been opened.
- : Messages that have not been opened.

1. Select a message on the list and press the **Select** soft key.

The message displays and scrolls to the next page, if it has one, after a specified time.

2. Press the **OK** soft key to go to the message view screen.

Or, the display automatically switches to the screen.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

While viewing a message, you can choose the Message options by pressing the **Options** soft key.

If you are viewing a new message, the options are the same as when you view a message at the time of its receipt. See the previous section.

When you are reviewing a message retrieved from the MMS server, the following options are available:

**Delete:** deletes the message.

**Reply:** allows you to reply to the sender by sending a text or multimedia message.

**Call back:** allows you to call the sender.

**Cut address:** allows you to extract the sender's number or e-mail address and URL, other e-mail addresses or phone numbers from the message text.

**Forward:** allows you to forward the message to another person.






**Save picture:** allows you to save an image from the message into your phone. Images are stored in the **Images** folder (**Menu 6.4**).

**Save sound:** allows you to save a sound from the message into the **Sounds** folder (**Menu 6.3**).

**Information:** shows you information about the message, such as the subject, sender's e-mail address or phone number, message size, recipient's e-mail address or phone number, its priority, and the time and date the message was received.

## Outbox *(Menu 5.2.3)*

When you access this menu, the list of multimedia messages that you have sent or saved displays. The icons on the left tell you the status of each message:

- : Messages currently being sent
- : Messages sent
- : Messages your phone couldn't send
- : Messages to be sent
- : Messages deferred

1. Select a message on the list and press the **Select** soft key.

The message displays and scrolls to the next page, if it has one, after a specified time.

2. Press the **OK** soft key to go to the message view screen.

Or, the display automatically switches to the screen.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

While viewing a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** deletes the message.

**Cut address:** allows you to extract the destination numbers or e-mail addresses and URL, e-mail addresses or phone numbers from the message text.

**Send:** allows you to send/resend the message.

**Edit message:** allows you to change the message contents, sound, photo, or text.

**Information:** shows you information about the message, such as the status, subject, sender's e-mail address or phone number, message size, transaction ID, MMS version, recipient's e-mail address or phone number, and the time and date the message was sent.


### **Draft** *(Menu 5.2.4)*

After creating a multimedia message, you can store it in this message box to be sent at a later time.

For further details about viewing a message, see "Outbox" on page 91.

### **Templates** *(Menu 5.2.5)*

This menu stores messages you saved as templates so that you can use them to make new messages.

1. Scroll through the template list using the Up and Down keys.
2. When the message template you want highlights, press the **Select** soft key.
3. Press the **OK** soft key to use the following options, or the display automatically shows the options after a specified time:
  - **Edit:** allows you to send a message using the template. For further details about how to send a message, see page 84.
  - **Delete:** allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key.
4. Press the  key to return to Idle mode.

## **Delete all** *(Menu 5.2.7)*

This menu allows you to delete all of the multimedia messages in each message box separately. You can also delete all of your messages at one time.

| <b>To</b>                     | <b>Press the</b>   |
|-------------------------------|--|
| select a message box to clear | Up or Down key. To delete all of your messages, select <b>All messages</b> . |
| place a check mark            | <b>Mark</b> soft key.  |
| remove a check mark           | <b>Unmark</b> soft key.  |
| delete the marked messages    | <b>Delete</b> soft key.  |

When a confirmation message displays, press the **Yes** soft key to confirm.

## **Memory status** *(Menu 5.2.7)*

You can check the amount of the memory being used and the memory remaining for multimedia messages.

The display shows the total space, including the used and free space. When you press the **Next** soft key, the display shows you how much space is currently occupied by each message box.



## **Push messages** *(Menu 5.3)*

This menu allows you to receive web messages from the server, or to set the phone not to receive Web messages.

The following options are available:

**Inbox:** allows you to read the messages received from the web server.

**Receive:** allows you to set whether or not your phone receives web messages.

**Delete all:** allows you to delete all of the web messages.

## **Voice mail** *(Menu 5.4)*

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

The following options are available:

**Connect to voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **OK** soft key to listen to your messages.

You can connect to the voice server by pressing and holding the **1** key in Idle mode.

**Voice mail number:** allows you to change the voice mail server number, if necessary.

**Note:** Voice mail is a network feature. Please contact your service provider for further details.

## Broadcast messages *(Menu 5.5)*

This network service allows you to receive text messages on various topics, such as the weather or traffic. Cell Broadcasting (CB) messages display as soon as they are received, provided that:

- the phone is in Idle mode.
- the **Receive** option is set to **Enable**.
- the message channel is currently active on the channel list.

The following options are available:

**Read:** lets you view the received messages.

The **Volatile** box displays messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message by using the Up and Down keys.

You can save a CB message in the **Archive** box for later retrieval. When a text notification appears, press the **Options** soft key and select **Save**.

**Receive:** allows you to enable or disable the reception of broadcast messages.

**Channel list:** allows you to indicate the channels from which you wish to receive cell broadcast messages. The following options are available:

Select: used to enable or disable channels on the list by marking or unmarking them, respectively.

Add channel: used to enter the ID and title for a new channel.

Delete: used to remove a channel from the list.

Edit: used to change the ID and title of an existing channel.

**Language:** allows you to select your preferred language in which to be used when displaying cell broadcast messages.

Please contact your service provider for more information.


# Funbox

The Funbox menu contains several fun options.

## **t-zones** *(Menu 6.1)*

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.



### **Home** *(Menu 6.1.1)*

Selecting this menu connects the phone to the network and loads the homepage of the Wireless Web service provider. You can also press the  key in Idle mode to launch the browser.

The content of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

**Note:** To go to the startup homepage from any other screen in the WAP Browser, use the **Home** option. For more information on the WAP Browser menus, see page 99.

### **Exiting the WAP browser**

To exit the browser at any time, simply press the  key or press and hold the  key.

## Navigating the WAP browser

| To                             | Press the   |
|--------------------------------|---|
| scroll through browser items   | Up or Down key.   |
| select browser items           | <b>OK</b> soft key.   |
| select a numbered item         | corresponding numeric key.  |
| return to the previous page    | <b>Back</b> soft key or the <b>C</b> key.   |
| return to the startup homepage | <b>* </b> key and select the <b>Home</b> menu.<br>For further details about this option, see page 99. |

## Entering text in the WAP browser

When you are prompted to enter text, the currently active text input mode is indicated on the screen.

The following modes are available:

**Upper-case character mode (A):** allows you to enter upper-case English characters.

**Lower-case character mode (a):** allows you to enter lower-case English characters.

**Note:** You can enter symbols in upper or lower-case character mode by pressing the **1** key.

**Number mode (1):** allows you to enter numbers.

|                               |  |
|-------------------------------|--|
| To change the text input mode | Press the <b>Ⓢ</b> key one or more times.  |
| To enter a space              | Press the <b>#</b> key.  |
| To edit text                  | ① Set the cursor to the right of the character(s) to be corrected.<br>② Press the <b>C</b> key as required.<br>③ Enter the correct character(s). |

## Selecting and using menu options

Various menus are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option:

1. Press and hold down the **\***  key.  
A menu displays.
2. Highlight a menu by pressing the Up and Down keys.
3. Select the option by pressing the **Select** soft key.
4. If necessary, select a secondary option using the Up and Down keys, and press the **Select** soft key to confirm.

**Note:** The menus may vary, depending on your version of the WAP Browser.

The following options are available:

**Reload:** reloads the current page.

**Home:** takes you back at any time to the homepage of the Wireless Web service provider.

**Goto URL:** allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** soft key to go there directly.

**Show URL:** displays the URL address of the site to which you are currently connected. It also enables you to declare the current site as the startup homepage.

| To  | Press the   |
|---|---|
| declare the current page as your startup homepage | <b>Option</b> soft key, select the <b>Save to home</b> option and press the <b>Select</b> soft key.     |
| set a bookmark for the current page               | <b>Option</b> soft key, select the <b>Save to bookmark</b> option and press the <b>Select</b> soft key. |
| cancel your setting                               | <b>Back</b> soft key.   |

**Edit home:** allows you to change the startup homepage manually. Enter the required URL and press the **OK** soft key. For more information about entering text, see page 98.

### **Favorites** *(Menu 6.1.2)*

This menu stores up to 10 URL addresses of the web site given by your service provider.

Using this menu, you can access one of the default web sites or stores up to 6 addresses of your favorite web site.

To access a web site, select one from the list and press the **#** key.

To store a URL address:

1. Select an empty location and press the **Options** soft key.
2. Enter the address and press the **Enter** soft key.

**Note:** For further details about how to enter characters, see page 43.

3. Enter a name for the favorite item and press the **Enter** soft key.

After saving favorite items, you can use the following options by pressing the **Options** soft key:

**Goto URL:** takes you to the site.

**Edit:** allows you to edit the address.

**Delete:** deletes the address.

### **http://** (*Menu 6.1.3*)

This menu allows you to manually enter the URL address of a web site that you wish to access. You can access this menu directly by pressing and holding the \* key in the WAP browser.

For further details about entering characters, see page 43.

### **Clear cache** (*Menu 6.1.4*)

You can clear the information stored in the cache, which is the phone's temporary memory which stores the most recently accessed Web pages.

Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.



## **Settings** *(Menu 6.1.5)*

This option allows you to set up five proxy servers for the WAP browser. Contact your service provider for details.

For each server, the following options are available:

**Profile name:** enter a name that you wish to assign to the HTTP proxy server.

**Homepage URL:** set the address of your startup homepage. When the default homepage displays, you can delete it using the **C** key and enter your own choice.

**Security:** set the data transmission mode. Choose **Secure** to protect your data against unauthorized access; otherwise, choose **Non-Secure**.

**Bearer:** select the bearer to be used for each type of network address accessed: **GPRS** or **Data**. The remaining options depend on the Bearer setting.

When the bearer is set to **GPRS**:

**IP address:** enter the WAP gateway address required to connect to the Internet.

**User name:** enter the User ID required to connect to the GPRS network.

**Password:** enter the password required to connect to the GPRS network.

**APN:** enter the access point name used for the address of the GPRS network gateway.

When the bearer is set to **Data**:

**IP address:** enter the WAP gateway address required to connect to the Internet.

**Login name:** enter the PPP server login ID.

**Password:** enter the PPP server password.

**Dial-Up number:** enter the PPP server phone number.

**Data call type:** select a data call type: **Analogue** or **ISDN**.

**Note:** The WAP Browser settings may vary, depending on the service provider. Contact your service provider for further information.

## **Games** *(Menu 6.2)*

You can download MIDlets (Java applications that run on mobile phones) from various sources using the WAP Browser and store them in your phone.

When you access the **Games** menu, the list of default games appears. Once you have downloaded games, they are added to the list.

**Note:** Java services may not be available, depending on your service provider.

### **Downloading a new game**

You can download more games from the web site preset by your service provider using the **New games** option.

### **Launching a MIDlet**


**Note:** The procedure explained below is for the default games. For downloaded games, the procedure may be different.


1. Scroll to the MIDlet you want on the Games list and press the **Launch** soft key.
2. On the startup screen of the MIDlet, scroll to an option using the Navigation keys.

The following options are available:

- **START GAME:** starts a new game.

- **CONTINUE:** allows you to continue the last game you played.
- **HIGH SCORE:** shows the high score table. This option may not be available for some games.
- **HOW TO PLAY:** shows how to play the game and the key functions for the game.
- **OPTION:** allows you to switch the game sound on or off.

3. Press the  key to confirm your selection.

| While you are playing a game, to               | Press the  |
|--|--|
| adjust the sound volume                        | Volume keys.   |
| stop the game and return to the startup screen | <b>C</b> key.  |
| exit the game                                  |  key. |

## Viewing MIDlet information

1. Scroll to the MIDlet you want and press the **Info** soft key.

The display shows information about the MIDlet, such as the file size, application version, and its vendor.

2. To scroll to other MIDlet information, press the Navigation keys.

3. If you want to delete MIDlet, press the **Delete** soft key and then press the **Yes** soft key to confirm the deletion.

**Note:** When you select default games from the list, the **Delete** option is not available.

4. To exit and return to the Games list, press the **Back** soft key or the **C** key.


## Entering text

If you need to enter text while using a MIDlet, you can use the following input modes:


**Upper-case character mode (A):** allows you to enter upper-case English characters.

**Lower-case character mode (a):** allows you to enter lower-case English characters.

**Number mode (1):** allows you to enter numbers.

**Symbol mode:** allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the  key to insert it.

**T9 mode (T9):** allows you to enter English characters by pressing one key per letter. In this mode, you can change the case by pressing the **0** key.

To change the text input mode, press the  key until the appropriate indicator appears on the soft key area of the display.

## Sounds *(Menu 6.3)*

In this menu, you can view the list of sounds downloaded from the web server or received in multimedia messages. You can set the downloaded sounds as the current ring tone or send them to other phones.

When memory is full, a warning message displays and the phone rejects additional sounds until you erase obsolete ones.

By pressing the **Options** soft key, you can use the following options:

**Rename:** allows you to change the name of the sound.

**Delete:** allows you to delete the sound.

**Set as ring tone:** sets the sound as your ring tone.

Using the **New MegaTones** option on the sounds list, you can access the web site preset by your service provider and download new sounds.

## **Images** *(Menu 6.4)*

In this menu, you can view the list of pictures downloaded from the web server or received in messages. You can set the downloaded pictures as the current background image or send them to other phones.

If you set a photo as your wallpaper, it is designated as **My photo** on the list.

When memory is full, a warning message displays and the phone rejects additional sounds until you erase obsolete ones.

Press the **Options** soft key to use the following options:

**Rename:** allows you to change the name of the image.

**Delete:** allows you to delete the image.

**Set as Wallpaper:** sets the image as your wallpaper for the idle screen.

Using the **New wallpapers** option on the images list, you can access the web site preset by your service provider and download new images.

## **Delete all** *(Menu 6.5)*

This menu allows you to delete all of the downloaded items in the Games, Sounds and Images folders separately. You can delete all of the items at one time.

| <b>To</b>                | <b>Press the</b>   |
|--------------------------|--|
| select a folder to clear | Up or Down key. To delete all of your items, select <b>All</b> . |
| place a check mark       | <b>Mark</b> soft key.  |
| remove a check mark      | <b>Unmark</b> soft key.  |
| delete the marked items  | <b>Delete</b> soft key.  |

When a confirmation message displays, press the **Yes** soft key to confirm.

## **Memory status** *(Menu 6.6)*

You can check the amount of memory being used and the memory remaining for games, or sounds and images.

### **Games** *(Menu 6.6.1)*

When you select this menu, you can view the Total, Used, and Free memory, and also number of games you downloaded.

### **Sounds & Images** *(Menu 6.6.2)*

When you select this menu, you can view the Total, Used, and Free memory for sounds and for Images. You can also view each space used for sounds and images.



# Organizer

The Organizer feature enables you to:

- set the alarm so that the phone rings at a specific time, for example, to remind you of an appointment.
- view the calendar and organize your schedule.
- define a list of things to do.
- record voice memos
- use the phone as a calculator for basic mathematical equations or currency exchange operations.

## Alarm *(Menu 7.1)*

This feature allows you to:

- set the alarm to ring at a specific time.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

**Once alarm:** the alarm rings only once and is then deactivated.

**Daily alarm:** the alarm rings every day at the same time.

**Morning call:** the alarm rings to wake you up in the morning.

To set the alarm:

1. Choose the type of alarm to be set and press the **Select** soft key.
2. Enter the time for the alarm to sound.



**Note:** Your phone is preset to a 12-hour format. To change the time format, see page 130.



If you want to use the alarm options, press the **Options** soft key. The following options are available:

- **Remove alarm:** deactivates the current alarm.
- **Alarm sound set:** allows you to select an alarm melody.

3. Select **AM** or **PM** and press the **Select** soft key.
4. If you select **Morning call** in step 1, select the repeat option, **Monday to friday** or **Monday to saturday** and press the **Select** soft key.

To stop the alarm when it rings, open the phone and press the **Exit** soft key, Volume keys, **C** key,  key, or  key.

**Remove alarm:** deactivates all alarm settings.

**Autopower:** when this option is set to **Enable**, the alarm rings at the specified time, even if the phone is switched off. Then the phone turns off.

If the option is set to **Disable** and the phone is switched off at the specified time, the alarm does not ring.

## **Calendar** *(Menu 7.2)*

With the Calendar feature, you can:

- consult the calendar and check your memos.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder, if necessary.

### **Consulting the calendar**

When you select the **Calendar** menu (**Menu 7.2**), the calendar displays with today's date highlighted. The following options are available when you press the **Options** soft key:

**Search all:** displays all memos set, starting with the oldest, regardless of the day. To scroll through the memos, press the Up or Down key.

**Delete all:** allows you to delete all of the memos. You are asked to confirm your action.

**Go to date:** allows you to jump to a specific date.

**Exit:** exits the Calendar feature and returns to Idle mode.

### **Writing a memo**

To write or edit a memo on a specific date:

1. Select a date on the calendar, using the Navigation keys.

**Note:** To skip to the previous or next month, press the Volume keys on the left side of the phone.

2. Press the **Select** soft key.

An empty memo screen displays to allow you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

**Note:** For further details about how to enter characters, see page 43.



You are asked if you wish to set an alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key.

Otherwise, press the **No** soft key. The memo is saved and the display returns to the calendar.

5. If you pressed the **Yes** soft key, set the time for the alarm and press the **OK** soft key.

**Notes:**

- Your phone is preset to a 12-hour format. To change the time format, see page 130.
- When the alarm time you set goes off and the alarm rings. To view details about the memo, press the **View** soft key. To stop the alarm, press the **Exit** soft key, **C** key,  key, or  key.

You can also select the melody for the alarm by pressing the **Melody** soft key.

6. Select **AM** or **PM** and press the **Select** soft key.

The color of the date on the calendar changes to green to indicate that a memo exists for that date.

## viewing a memo

When you select a day on which more than one memo exists, the latest memo for the day displays.

In that case, press the Up or Down key to scroll to the previous or next memo.

Press the **New** soft key to add a new memo for the day.

You can use the following options by pressing the **Options** soft key:

**Edit:** allows you to change the memo text.

**Alarm:** allows you to set the alarm to ring at the specified time to remind you of the memo. If you have already set an alarm for that memo, you can change or delete the alarm.

**Delete:** deletes the memo.

**Copy to:** allows you to copy the memo to another date or time.


**Move to:** allows you to change the time or date of the memo.

## **Calculator** *(Menu 7.3)*

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.

**Note:** To include a decimal point or a bracket, press the left soft key until the symbol you want displays.

2. Press the right soft key until the symbol you want displays: **+** (addition), **-** (subtraction), **\*** (multiplication), **/** (division).
3. Enter the second number.
4. To view the result, press the  key.
5. Repeat steps 1 to 4 as many times as required.

## To do list *(Menu 7.4)*

This feature allows you to:

- enter a list of tasks to be done.
- assign a priority and a deadline to each task.
- sort the tasks by priority and status.

### Creating the to do list




1. Press the **New** soft key.
2. Enter the first task.

**Note:** For further details about how to enter characters, see page 43.

3. Press the **OK** soft key.
4. Select a priority level of high, normal, or low priority using the Up or Down key and press the **Select** soft key.
5. Enter your deadline and press the **OK** soft key.

If you do not want to set a deadline, press the **Skip** soft key.

### Editing the to do list

When you select the **To do list** menu (**Menu 7.4**), the current contents display with a status mark. If the task has been done, and priority;  for High,  for Normal, and  for Low.

To change the status of a task, press the ✕ key to mark the task as completed as of the current time and date.

By pressing the **Options** soft key on the list or the task view, you can use the following options:

**New:** allows you to create a new task.

**Mark:** allows you to change the status of the current task to either **Done** or **Undo**.

**Edit:** allows you to change the text, priority, and /or deadline for the current task.

**Sort:** allows you to sort the existing tasks by priority of status. Select the sort criteria, **High**, **Low**, **Done**, or **Undo**.

**Cory:** makes a copy of the current task.

**Copy to calendar:** allows you to copy the current task as a calendar memo. You can change the text and deadline for the task, and set the alarm.

**Delete:** deletes the current task.

**Delete all:** allows you to delete all of the tasks.

**Exit:** exits the To do list.

## **Voice memo** *(Menu 7.5)*

You can record voice memos. After recording, you can send the memo to other people via the Multimedia Message Service.

### **Record** *(Menu 7.5.1)*



This menu allows you to record a new memo. When you select this option, the display shows a 30-second timer.

1. To start recording, press the **Record** soft key.
2. Record a memo by speaking into the microphone.
3. When you press the **Stop** soft key, or if the recording time expires, the following options display:
  - **Replay**: plays back your memo.
  - **Re-record**: discards the memo and enables you to record another one.
  - **Save**: allows you to save the memo.
  - **Quit**: cancels your recording and exits the **Record** menu.
4. To save the memo, choose **Save** and press the **Select** soft key.
5. Press the **C** key to clear the default name, if necessary, and enter a name for the memo.

For further details about how to enter characters, see page 43.

6. Press the **OK** soft key.

The memo is saved and then the display shows the memo information.

7. Press the **Options** soft key to use the following memo options:
  - **Send**: allows you to send the memo to other people by using the MMS feature. For details about sending a multimedia message, see page 84.
  - **Rename**: allows you to change the memo's name.
  - **Delete**: allows you to delete the memo.
8. To exit, press the  soft key or  key.

### **Voice memo list** *(Menu 7.5.2)*

This menu shows a list of saved voice memos. Scroll to a memo and press the **Options** soft key. The following options are available:

**Play**: plays the memo.

**Send**: allows you to send the memo to other people by using the MMS feature. See page 84 for further details about sending a message.

**Rename**: allows you to change the memo's name.

**Information**: displays information about the memo, such as the name, the date when the memo was made, recording duration, and memory size.

**Delete**: allows you to delete the memo.

### **Delete all** *(Menu 7.5.3)*

In this menu, you can delete all of your voice memos.

When the confirmation message appears, press the **Yes** soft key. To cancel the deletion, press the **No** soft key.



## **Memory status** *(Menu 7.5.4)*

You can check the amount of memory being used and the memory remaining for voice memos.

The display shows you the total, free, and used memory, including the number of memos you stored and the total number of memos you can store.

## **Currency exchange** *(Menu 7.6)*

Using this menu, you can figure currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key.

You can insert a decimal point by pressing the **#** key.

2. Enter the amount to convert and press the **OK** soft key.

The amount you entered and its equivalent value display.

3. Press the **Exit** soft key to exit the currency converter.

# Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in a multimedia message or set one as wallpaper or a caller ID image for a Phone Book entry.

You can also record videos using your phone as a camcorder.

**Note:** You can quickly access the **Camera** menu by pressing the Up key in Standby mode.

## **CAUTION:**

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

## **Take and send** *(Menu 8.1)*

This menu allows you to take photos. Your camera produces JPEG photos.

You can take photos with the phone open or closed. When the phone is closed, you can use the external display.

**Note:** When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

## Taking a photo with the phone open

1. Accessing the **Take and send** menu turns the camera on or you can press and hold the Up key in Idle mode.

The image to be captured appears on the display.


2. Adjust the image by aiming the camera at the subject.

When you press the right soft key, you can use the camera options. For details, see page 122.

**Note:** You can change the image settings switch to other modes by using the keypad. For details, see page 121.

3. Press the left soft key to take the photo.
4. Press the **Save** soft key.

To discard the photo, press the **Cancel** soft key.

| 5. To                  | Press the  |
|------------------------|--|
| use the photo options  | <b>Next</b> soft key. For details, see below.  |
| return to Capture mode | <b>NewPhoto</b> soft key.  |
| return to Idle mode    |  key. |

When you press the **Next** soft key after saving a photo, the following options are available:

**Send:** allows you to send the photo as a multimedia message. For further details, see page 84.

**Set as wallpaper:** allows you to set the photo as your wallpaper for the idle screen.

**Set as caller ID:** allows you to set the photo as a caller ID image for a Phonebook entry.

**Protection:** allows you to protect the photo from being deleted.

**Delete:** allows you to delete the photo.

**Rename:** allows you to change the name of the photo.

**Properties:** shows the properties of the photo, such as the time and date it was recorded, file size, photo size, protection status, and file format.

## Using the number keys in Capture mode

You can use the number keys to customize your camera settings when you are in Capture mode.

| Key        | Function  |
|------------|---|
| 1          | switches to Record mode. See page 124.                          |
| 2          | changes the image size.   |
| 3          | selects the image quality.                                      |
| 4          | selects the camera mode.  |
| 5          | changes the color tone or apply a special effect to the photo.  |
| 7          | selects a decorated frame.                                      |
| 8          | sets the timer.   |
| 9          | switches to the <b>My photos (Menu 8.3)</b> menu. See page 125. |
| Up/Down    | zooms in or out.  |
| Left/Right | adjusts the brightness of the image.                            |
| ^/v        | flips the image vertically or horizontally.                     |

## Using the camera options

In Capture mode, you can access various options for the camera by pressing the right soft key.

The following options are available:

**Effects:** allows you to change the color tone or apply a special effect to the photo.

**Frames:** allows you to use a decorated frame. Select a frame from the list using the Navigation keys.

**Mode:** allows you to take a photo in various modes. Once you change the mode, its indicator appears at the top left or bottom of the display.

Normal shot: allows you to take a photo in the normal mode.

Multi-Shot: allows you to take a series of action stills. Select the capture speed to **High speed** or **Normal speed** and the number of photos for the camera to take. When you press the left soft key or Camera key on the right side of the phone, the camera takes photos successively.

After taking photos, press the **Saveall** soft key to save all of them or the **Save** soft key to save the selected one.

**Rotation:** allows you to rotate the photo. You can see its mirror image or flip the photo vertically.

**Self timer:** allows you to set a delay time before the camera takes the photo. Select the length of delay you want. When you press the left soft key or Camera key, the camera takes the photo after the specified time.

**Settings:** allows you to change the image settings.

Photo size: sets the image size to either **VGA(640x480)**, **QVGA(320x240)**, **QQVGA(160x120)**, or **Mobile(128x120)**. The selected image size displays on the capture screen.

Photo quality: allows you to select the image quality from **Economy**, **Normal**, **Fine**, and **Super fine**. The selected quality displays on the capture screen.

## **Taking a photo with the phone closed**

**Note:** If the external display turns off, you first need to turn it on by pressing and holding one of the Volume keys.

1. When the phone is closed, press and hold the Camera (📷) key on the right side of the phone.

The image to be captured appears on the external display as a mirror image.

2. Adjust the image by aiming the camera at the subject.
3. Press the Camera key to take the photo.

Your phone automatically saves the photo and returns to Capture mode.

## Record videos *(Menu 8.2)*

You can record a video using your phone as a camcorder.

You can record videos.

1. When the camera turns on, adjust the image by aiming the camera at the subject.
  - Press the Up or Down key to zoom in or out the image. You can also use the Volume keys.
  - Press the Left or Right key to adjust the image brightness.
  - Press the **1** key to switch to Capture mode.
2. Press the Camera key or the left soft key to start recording.
3. When you are finished, press the Camera key or the left soft key to stop recording.

Or, the phone automatically stops when the recording time expires.

4. Press the **Save** soft key. The video is saved and the display returns to Record mode.

To discard the video, press the **Cancel** soft key.

## **My photos** *(Menu 8.3)*

This menu allows you to review your photos.

When you access this menu, your phone displays the photos in Thumbnail mode, which shows them as small images. Use the Navigation keys to scroll through the photos.

To view the photos on the full screen, press the **View** soft key. To go back to Thumbnail mode, press the **Multi** soft key.

Press the **Options** soft key to use the following options:

**Send:** allows you to send the photo as a part of a multimedia message. For further details, see page 84.

**Set as wallpaper:** allows you to set the photo as your wallpaper for the idle screen.

**Set as caller ID:** allows you to set the photo as a caller ID image for a Phonebook entry.

**Protection:** allows you to protect the photo from being deleted.

**Delete:** allows you to delete the photo.

**Rename:** allows you to change the name of the photo.

**Properties:** shows the properties of the photo, such as the time and date it was taken, file size, photo size, protection status, file format, and file name.




## My videos *(Menu 8.4)*

When you access this menu, the thumbnail images of your videos display.

To play a video:

1. Press the Navigation keys to scroll to the video you want to review.
2. Press the **Play** soft key to start playing the video.

|                     |   |
|---------------------|---|
| 3. <b>To</b>        | <b>Press the</b>  |
| pause the playing   | <b>Pause</b> soft key.  |
| resume              | <b>Continue</b> soft key.   |
| stop                | <b>Stop</b> soft key.   |
| return to Idle mode |  key. |

Press the **Options** soft key on the video list to use the following options:

**Rename:** allows you to change the file name.

**Delete:** allows you to delete the current video file.

**Protection:** allows you to protect the video from being deleted.

**Properties:** shows the properties of the video, such as the time and date it was recorded, file size, protection status, and playing time.

## **My album** *(Menu 8.5)*

This menu provides the ability for you to store your photos using the t-zone browser.

When a photo is taken and you have selected the **Save** soft key; you are prompted with the option to select **Next** or **NewPhoto**. Use the following procedures to send a photo to your album:

1. Select **Next** to go to the Photo Menu.
2. Select **Send** and then press the **OK** soft key.
3. Select **Send to my album**. The Picture Messages screen is displayed and your photo is stored in the Picture Outbox and sent to your album.

## **My journal** *(Menu 8.6)*

This menu provides the ability for you to store your photos using the t-zone browser.

When a photo is taken and you have selected the **Save** soft key; you are prompted with the option to select **Next** or **NewPhoto**. Use the following procedures to send a photo to your journal:

1. Select **Next** to go to the Photo Menu.
2. Select **Send** and then press the **OK** soft key.
3. Select **Send to my journal**. The Picture Messages screen is displayed and your photo is sent to your journal and is also stored in the Picture Outbox.

## **Delete all** *(Menu 8.7)*

This menu allows you to delete photos or videos items. You can delete all of the items at one time.

| <b>To</b>                | <b>Press the</b>   |
|--------------------------|--|
| select a folder to clear | Up or Down key. To delete all of your items, select <b>All</b> . |
| place a check mark       | <b>Mark</b> soft key.  |
| remove a check mark      | <b>Unmark</b> soft key.  |
| delete the marked items  | <b>Delete</b> soft key.  |

When a confirmation message displays, press the **Yes** soft key to confirm.

## **Memory status** *(Menu 8.8)*

You can check the amount of the memory being used and the memory remaining in the camera.

You can view the Total, Used, and Free memory for Pictures and for Videos. Press the **Next** soft key to switch back and forth between Picture information and Videos information.

# Settings

In this menu, you can customize your phone's various settings, such as:

- time and date
- phone settings
- display settings
- sound settings
- security

## Time & Date *(Menu 9.1)*

This menu allows you to change the current time and date displayed. You can also find out what time it is in another part of the world.

The following options are available:

**Set time:** allows you to enter the current time. You can choose the time format in the **Time format** menu (**Menu 9.1.4**).

**Note:** Before setting the time, you must specify your time zone in the **World time** menu (**Menu 9.1.3**).

**Set date:** allows you to enter the month, day, and year.

**World time:** allows you to find out what time it is another part of world, using the Left and Right keys.

The screen shows the:

- city name.
- current time and date.
- time difference between the selected city and your city if you have set the local time (see below for further details).
- city selected as your time zone.

To select your time zone:

1. Select the city corresponding to your time zone by pressing the Left or Right key one or more times. The local date and time display.
2. Press the **Set** soft key.

**Time format:** allows you to change the time format to **12 hours** or **24 hours**.

**Auto update:** allows you to receive time information from your service provider's network.

Manual: you need to manually set the time and date according to the current time zone using the **Set time** menu (**Menu 9.1.1**).

Auto: the phone automatically updates the time and date according to the current time zone using the network service.

Confirm first: the phone asks for a confirmation before the update.

**Note:** Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.

## **Phone settings** *(Menu 9.2)*

Many different features of your phone can be customized to suit your preferences. All of these features are accessed in the **Phone settings** menu.

### **Language** *(Menu 9.2.1)*

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

**Note:** Depending on your country, service provider, or the software version of the phone, the **Automatic** option may not display.

### **Greeting message** *(Menu 9.2.2)*

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see page 43.

### **Short cut** *(Menu 9.2.3)*

The Down, Left, and Right keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the Up or Down key, and press the **Select** soft key.
  - **Key down**
  - **Key right**
  - **Key left**

2. Select the menu to be assigned to the key by pressing the Up or Down key.

**Note:** To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key to save the selection.

## **TTY setting** *(Menu 9.2.4)*

TTY, a TDD or Text Telephone, is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. In this menu, you can enable your phone's TTY feature.

The following options are available:

**Enable:** allows you to communicate with other TTY users. You can communicate with other TTY users by connecting certain portable TTY terminal models to your phone using an optional adapter.

**Disable:** does not allow you to communicate with other TTY users.

## **Extra settings** *(Menu 9.2.5)*

You can turn the automatic redialing or answering features on or off.



| To turn a feature | Press the   |
|-------------------|---|
| on                | <b>Mark</b> soft key. A check mark displays in front of the option. |
| off               | <b>Unmark</b> soft key. The check mark no longer displays.          |


The following options are available:

**Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

**Note:** The interval between call attempts varies.

**Active folder:** when this option is checked, you can simply open the phone to answer a call. When it is unchecked, you must open the phone and press a key to answer a call, depending on the setting of the **Anykey answer** option. See below.

**Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key or the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you must press the  key or **Accept** soft key to answer a call.

## **Display settings** *(Menu 9.3)*

In this menu, you can change various settings for the display or backlight.

### **Interior display** *(Menu 9.3.1)*

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

**Wallpaper:** you can select a background image to be displayed on the idle screen.



To change the background image:

1. Use the Up or Down key to select the image you want, then press the **Select** soft key.

You have various preset images available. You can also select the blank background or any images downloaded for the Internet, WAP browser and optional EasyGPRS program or received in messages.

2. Press the **Select** soft key when the image you want highlights.
3. When the image displays, press the **Select** soft key to display it on the idle screen.

**Text color:** you can select the color of the text to be displayed on the idle screen.

### **Exterior display** (*Menu 9.3.2*)

This menu allows you to adapt the color of external display to your preference.

### **Menu style** (*Menu 9.3.3*)

This menu allows you to select the menu display style. You can choose either **Grid style**, **Bar style**, or **Page style**.

### **Brightness** (*Menu 9.3.4*)

You can adjust the brightness of the display to see it better in different lighting conditions.

Press the Up or Down key or press the Volume keys to adjust the brightness.

### **Back light** *(Menu 9.3.5)*

You can select the length of time for which the backlight is on. The backlight turns on when you press a key or receive a call or message and remains on for the specified length of time.

### **Service light** *(Menu 9.3.6)*

This menu allows you to select whether or not the service light is used. It also allows you to select a color in which it flashes.

Select one from the seven color combinations. When the phone is ready for use, the service light flashes in the chosen color.

If you do not want to use the service light, select **Off**.

### **Graphic logo** *(Menu 9.3.7)*

This menu allows you to display your service provider's logo instead of its name.

**Off:** the service provider's name displays in Idle mode.

**On:** the service provider's logo displays in Idle mode; if no logo has been stored, the service provider's name displays.

## **Sound settings** *(Menu 9.4)*

You can customize various sound settings.

**Note:** When the phone is in Silent mode (see page 27), you cannot change the sound settings.

### **Ring tone** *(Menu 9.4.1)*

This menu allows you to select a ring melody.

You can choose between many different melodies. If you have downloaded sounds from the Internet, you can use them in this menu.

### **Ring volume** *(Menu 9.4.2)*

This menu allows you to adjust the ring volume to one of five levels.

Use the Up and Down keys or the Volume keys on the left side of the phone to increase or decrease the volume.

### **Alert type** *(Menu 9.4.3)*

This menu allows you to specify how you are to be informed of incoming calls.

The following options are available:

**Light only:** the service light flashes the phone neither rings nor vibrates.

**Melody:** the phone rings using the ring melody selected in the **Ring tone** menu (**Menu 9.4.1**).

**Vibration:** the phone vibrates but does not ring.

**Vibra+Melody:** the phone first vibrates three times and then starts ringing.

## **Keypad tone** *(Menu 9.4.4)*

This menu allows you to select the tone that the phone sounds when you press a key.

To turn off the sound, select **Off**.

## **Message tone** *(Menu 9.4.5)*

This menu allows you to set up the ringer for incoming messages, text messages, multimedia messages, and broadcast messages.

For each message, the following options are available:

**Tone:** allows you to use one of several message tones.

**Mode:** allows you specify how you are informed of any incoming messages.

Off: only the text notification appears; the phone neither rings nor vibrates.

Tone: the phone rings using the tone selected under the **Tone** option. See the previous page.

Vibration: the phone vibrates.

Light only: the service light flashes.

**Repetition:** allows you to specify how often the phone informs you of a new message. You can choose either **Once** or **Periodic**.

## **Folder tone** *(Menu 9.4.6)*

This menu allows you to select the tone that the phone sounds when you open or close the phone.

To turn off the sound, select **Off**.

## **Power On/Off** *(Menu 9.4.7)*

This menu allows you to select the melody that the phone sounds when it is switched on and off.

To turn off the sound, select **Off**.

## **Alerts on call** *(Menu 9.4.8)*

This menu allows you to choose whether or not the phone informs you when you receive a new message or when the time for an alarm comes during a call.

The following options are available:

**Off:** the phone doesn't actively alert you to incoming messages or alarms. It only displays the corresponding notification in case of alarm.

**On:** the phone alerts you with a beep and displays the corresponding notification.

## **Extra tones** *(Menu 9.4.9)*

You can customize additional tones for the phone.

| <b>To turn a given tone</b> | <b>Press the</b>  |
|-----------------------------|---|
| on                          | <b>On</b> soft key. A check mark displays in front of the option. |
| off                         | <b>Off</b> soft key. The check mark no longer displays.           |

The following options are available:

**Error tone:** sets whether or not the phone informs you when you have made a mistake.

**Minute minder:** sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.

**Connect tone:** sets whether or not the phone to beep when your call is connected to the system.

## **Security** *(Menu 9.5)*

The Security feature enables you to restrict the use of your phone by the others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone. They are described in the following sections. See also pages 146-148.

### **PIN check** *(Menu 9.5.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**Note:** Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

**Disable:** the phone connects directly to the network when you switch it on.

**Enable:** you must enter the PIN each time the phone is switched on.

## **Change PIN** *(Menu 9.5.2)*

This feature allows you to change your current PIN, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

## **Phone lock** *(Menu 9.5.3)*

When the Phone Lock feature is enabled, the phone is locked and you must enter the 4 to 8-digit phone password each time the phone is switched on.

The password is preset to "00000000" at the factory. To change the phone password, see the **Change password** menu (**Menu 9.5.4**).

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

**Disable:** you are not asked to enter the phone password when you switch on the phone.

**Enable:** you are required to enter the phone password when you switch on the phone.

## **Change password** *(Menu 9.5.4)*

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to "00000000" at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

## **Privacy** *(Menu 9.5.5)*

Using this menu, you can lock your media contents, such as picture messages, photos, videos, voice memos, images, and sounds. Once you have locked the contents, you must enter the phone's password to access the associated menus.

| <b>To</b>              | <b>Press the</b>   |
|------------------------|--|
| select an item to lock | Up or Down key. To lock all of the contents, select <b>All</b> . |
| place a check mark     | <b>Mark</b> soft key.  |
| remove a check mark    | <b>Unmark</b> soft key.  |
| lock the marked items  | <b>OK</b> soft key.  |

When the phone asks for the password, enter the password and press the **OK** soft key.

**Note:** The password is preset to "00000000" at the factory. To change this password, see page 140.



## **FDN mode** *(Menu 9.5.6)*

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

**Disable:** you can call any number.

**Enable:** you can only call phone numbers stored in Phone Book. You must enter your PIN2.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

## **Change PIN2** *(Menu 9.5.7)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

## **Reset settings** *(Menu 9.6)*

You can easily reset your phone to its default settings. To reset your phone:

Enter the 4- to 8-digit password and press the **OK** soft key.

**Note:** The password is preset to "00000000." To change this password, see page 140.

# Solving problems

If you are experiencing problems with your phone, perform the following simple checks before contacting a service professional. This may save you the time and expense of an unnecessary service call.

## **When you switch your phone on, the following messages may appear**

### **Insert SIM Card**

- Check that the SIM card is correctly installed.

### **Phone Locked Enter Password**

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

### **Enter PIN**

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN Check** menu (**Menu 7.5.1**).


### **Enter PUK**

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your service provider.


## **“No Service,” “Network Failure” or “Not Done” displays**

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

## **You have entered a number but it was not dialed**

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

## **Your correspondent cannot reach you**

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.




## **Your correspondent cannot hear you speaking**

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth?  
The microphone is located at the bottom of the phone.

## **The phone starts beeping and “\*\*Warning\*\* Low Battery” flashes on the display**

- The battery is insufficiently charged. Recharge the battery.

## **The audio quality of the call is poor**

- Check the signal strength indicator on the display (); the number of bars indicates the signal strength from strong () to weak (.
- Try moving the phone slightly or moving closer to a window if you are in a building.

## **No number is dialed when you recall a Phonebook entry**

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

# Access codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

When requested for any of the codes explained below, enter the appropriate code (displayed as asterisks) and press the OK soft key. If you make a mistake, press the **C** key until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes can be changed using the **Security** menu (**Menu 9.5**). See page 139 for further details.

**Important!** Avoid using access codes resembling emergency numbers, such as 911, to prevent accidental dialing of an emergency number.

## Phone password

The Phone Lock feature uses the phone password to protect your phone against unauthorized use. The phone password is supplied with the phone and is preset to "00000000" at the factory.

| To   | See                             |
|--|---------------------------------|
| activate/deactivate the Phone Lock feature | page 140 ( <b>Menu 9.5.3</b> ). |
| change the phone password                  | page 140 ( <b>Menu 9.5.4</b> ). |

## PIN

The Personal Identification Number or PIN (4 to 8 digits) protects your SIM card against unauthorized use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK. See below.

| To   | See                             |
|--|---------------------------------|
| activate/deactivate the PIN<br>Check feature | page 139 ( <b>Menu 9.5.1</b> ). |
| change the PIN                               | page 140 ( <b>Menu 9.5.2</b> ). |

## PUK

The 8-digit PUK (PIN Unblocking Key) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, contact your service provider.

To re-enable your PIN:

1. Enter the PUK and press the **OK** soft key.
2. Enter a PIN of your choice and press the **OK** soft key.
3. When the Confirm New PIN message displays, enter the same code again and press the **OK** soft key.

When you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

## PIN2

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, see page 142 (**Menu 9.5.7**).

## PUK2

The 8-digit PUK2 (PIN Unblocking Key 2), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Enter the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the Confirm PIN2 message displays, enter the same code again and press the **OK** soft key.

When you enter an incorrect PUK2 ten times in succession, you are not able to access the functions requiring the PIN2. Contact your service provider for a new card.

# Health and safety information

## Exposure to radio frequency (RF) signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the FCC is 1.6W/kg.\*

---

\* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

FCC certification information for this model phone is attached separation paper.

## For body operation

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

For more Information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)  
<http://www.fcc.gov>

Cellular Telecommunications Industry Association (CTIA):  
<http://www.wow-com.com>

U.S. Food and Drug Administration (FDA)  
<http://www.fda.gov/cdrh/consumer>

World Health Organization (WHO)  
<http://www.who.int/peh-emf/en>

## **Precautions when using batteries**

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## **Road safety**

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
- Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
- Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
- Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
- If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

## **Operating environment**

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## **Electronic devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

## **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

## **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Switch your phone off in any facility where posted notices require you to do so.

## **Potentially explosive environments**

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.




## Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## **Other important safety information**

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phones in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

- Keep the phone and all its parts and accessories out of the reach of small children's.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.

- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

## **Acknowledging special precautions and the FCC and industry Canada notice**

### **Cautions**

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **FCC Compliance Information**

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Including interference that may cause undesired operation.

## **Information to User**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

## **Appendix A: CERTIFICATION INFORMATION (SAR)**

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on safety standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. SAR Tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations(e.g., at the ear and worn on the body) as required by the FCC for each model.

Health and safety information

The highest SAR values for this model phone as reported to the FCC are Head: 1.04W/Kg, Body-worn: 0.485W/Kg.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID A3LSGHE315.

---

In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## **Appendix B: Guide to Safe and Responsible Wireless Phone Use**

Cellular Telecommunications & Internet Association

"Safety is the most important call you will ever make."

### **A Guide to Safe and Responsible Wireless Phone Use**

TENS OF MILLIONS OF PEOPLE IN THE U.S. TODAY TAKE ADVANTAGE OF THE UNIQUE COMBINATION OF CONVENIENCE, SAFETY AND VALUE DELIVERED BY THE WIRELESS TELEPHONE. QUITE SIMPLY, THE WIRELESS PHONE GIVES PEOPLE THE POWERFUL ABILITY TO COMMUNICATE BY VOICE-ALMOST ANYWHERE, ANYTIME-WITH THE BOSS, WITH A CLIENT, WITH THE KIDS, WITH EMERGENCY PERSONNEL OR EVEN WITH THE POLICE. EACH YEAR, AMERICANS MAKE BILLIONS OF CALLS FROM THEIR WIRELESS PHONES, AND THE NUMBERS ARE RAPIDLY GROWING.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense-keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seat belts and requiring other passengers to do the same.



But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need. When it comes to the use of wireless phones, safety is your most important call.

### **Wireless Phone "Safety Tips"**

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip-dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix-they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

"The wireless industry reminds you to use your phone safely when driving."

Cellular Telecommunications & Internet Association For more information, please call 1-888-901-SAFE.  
For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID =85>

## **Appendix C: Consumer Update on Wireless Phones**

U.S. Food and Drug Administration

### **1. What kinds of phones are the subject of this update?**

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell, mobile, or PCS phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

### **2. Do wireless phones pose a health hazard?**

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases,

other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 3. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency Federal Communications Commission

- Occupational Safety and Health Administration
- National Telecommunications and Information Administration
- The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

#### 4. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

5. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 6. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## 7. Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.



8. Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

9. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

#### 10. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

11. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

12. Which other federal agencies have responsibilities related to potential RF health effects?

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations.

FCC RF Safety Program:

<http://www.fcc.gov/oet/rfsafety/>

Environmental Protection Agency (EPA):

<http://www.epa.gov/radiation/>

Occupational Safety and Health Administration's (OSHA):

<http://www.osha-slc.gov/SLTC/radiofrequencyradiation/index.html>

National Institute for Occupational Safety and Health (NIOSH):

<http://www.cdc.gov/niosh/emfpg.html>

World health Organization (WHO):

<http://www.who.int/peh-emf/>

International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

National Radiation Protection Board (UK):

<http://www.nrpb.org.uk>

---

Updated 4/3/2002: US Food and Drug Administration <http://www.fda.gov/cellphones>

# STANDARD LIMITED WARRANTY

**What is Covered and For How Long?** SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. (SAMSUNG) warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

|                         |         |
|-------------------------|---------|
| Phone                   | 1 Year  |
| Batteries               | 1 Year  |
| Leather Case/Pouch      | 90 Days |
| Holster                 | 90 Days |
| Other Phone Accessories | 1 Year  |

**What is Not Covered?** This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

**What are SAMSUNG's Obligations?** During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

**What Are the Limits On SAMSUNG's Liability?** EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM

THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO



INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2004 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice. [080802]

# Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features of your mobile phone, here are a few definitions:

## **Active Folder**

Ability to answer a call simply by opening the phone.

## **Call Forwarding**

Ability to reroute calls to another number.

## **Call Holding**

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

## **Call Waiting**

Informs you that you have an incoming call when you are engaged on another call.

## **Caller Line Identification Services (Caller ID)**

Services allowing subscribers to view or block the telephone numbers of callers.

## **Dual Band**

Ability to operate with both DCS (1900 Mhz) and GSM (900 Mhz) networks. The phone automatically uses the network with the strongest signal and even switches networks during a call within the same operator's network.

## **EMS (Enhanced Message Service)**

An adaptation of the Short Message Service (SMS) that allows you to send and receive ring tones and service provider's logo, as well as combinations of simple media to and from EMS-compliant handsets. Because EMS is based on SMS, it can use SMS centers the same way that SMS does. EMS works on all Global System for Mobile communications (GSM) networks. EMS senders can use text, melodies, pictures, sounds, and animations to enhance the expressive power of messages that are limited by the display constraints of mobile devices.

## **GPRS (General Packet Radio Service)**

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS provides continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

## **GSM (Global System for Mobile Communication)**

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

## **Java**

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a MIDlet.

## **MMS (Multimedia Message Service)**

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can be sent by e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and also video clips and presentation information.

## **Multi-party Calling**

Ability to establish a conference call involving up to five additional parties.

## **Phone Password**

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

## **PIN (Personal Identification Number)**

Security code that protects the phone against unauthorized use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

## **Proxy Server**

A proxy server resides between a Web client, such as a web browser, and a real Web server and acts as an intermediary between them. When some people browse a web site, their browser is not actually connecting to the web server. The request from their browser goes to a proxy server, and the proxy server makes the request to the web server. A proxy server can improve performance for groups of users because it cache the results of all requests for a certain amount of time. If a user requests a web page that it already loaded for another user, it reloads the page instead of forwarding the request to the Web server, which can be a time-consuming operation.

## **PUK (PIN Unblocking Key)**

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

## **Roaming**

Use of your phone when you are outside your home area (when traveling for example).



## **SIM (Subscriber Identification Module)**

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

## **SMS (Short Message Service)**

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

## **Soft Keys**

Two keys marked  and  on the phone, the purpose of which:

- varies according to the function that you are currently using.
- is indicated on the bottom line of the display just above the corresponding key.

## **Voice Mail**

Computerized answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

# Index

## A

- Access codes • 146
- Alarm • 109
- Alert type • 136
- Alphabet mode, text input • 47
- Answering
  - call • 24
  - second call • 52
- Anykey answer • 133
- Auto redial • 133

## B

- Background image • 133
- Backlight
  - description • 13
  - time, set • 135
- Battery
  - charging • 17
  - installing • 16
  - low indicator • 18
  - removing • 16
- Broadcast messages • 95
- Browser, WAP • 105

## C

- Calculator • 118
- Calendar memos
  - copying • 113
  - erasing • 113
  - viewing • 111
  - writing • 111
- Call back, message • 78
- Call costs • 136
- Call records
  - incoming • 66
  - missed • 25, 65
  - outgoing • 66
- Call time • 67
- Caller groups
  - editing • 39
  - searching • 38

Caller ID • 71

### Calls

- answering • 24, 52
- ending • 22
- forwarding • 69
- holding • 49
- making • 21
- redialing • 22
- rejecting • 24
- waiting • 52, 70

### Camera

- playing video • 126
- taking photo • 119
- viewing photo • 125

CB (Cell Broadcast) messages • 95

Characters, enter • 43

Charging battery • 17

Conference call • 53

Connect tone • 139

Currency exchange • 118

## D

Date, set • 129

### Deleting

- calendar memo • 113
- call record • 65
- multimedia message • 90, 91
- phonebook • 34
- photo • 121, 125
- task • 115
- text message • 78, 80
- video • 126
- voice memo • 117

Delivery reports, message • 82, 87

Dialed calls • 66

### Display

- backlight • 13
- icons • 12
- layout • 11
- settings • 133

## E

- Earpiece volume • 23
- EMS (Enhanced Message Service) • 75
- Error tone • 138
- External display • 134

## F

- FDN (Fixed Dial Number) mode • 142
- Folder tone • 137
- Forwarding
  - calls • 69
  - multimedia message • 90
- Front LCD • 13, 134
- Funbox • 97

## G

- Games
  - playing • 103
- Graphic logo • 135
- Greeting message • 142

## H

- Health and safety • 149
- Holding, call • 49

## I

- Icons, description • 12
- Images
  - downloading • 135
  - viewing • 106
- Inbox, messages
  - multimedia • 88
  - text • 78
- International calls • 21
- Internet • 105

## J

- Java service • 103

## K

- Key volume • 23
- Keypad tones
  - selecting • 137
  - sending • 51
- Keys
  - description • 9
  - location • 8
  - shortcut • 131

## L

- Language, select • 131
- Last number, redial • 22
- Locking
  - media contents • 141
  - phone • 140
- Low battery indicator • 18

## M

- Memory status
  - camera • 128
  - downloaded items • 107
  - multimedia messages • 93
  - phonebook • 41
  - text messages • 83
  - voice memos • 118
- Menu style • 134
- Menus
  - accessing • 55
  - list • 57
- Message tone • 137
- Messages
  - cell broadcast • 95
  - greeting • 142
  - multimedia • 83, 105
  - reading • 78
  - setting • 81
  - text • 75
  - voice • 94
  - web • 94
- Messages •
  - ring tone • 137
- MIDlets, launch • 103



- Minute minder • 139
- Missed calls • 25, 65
- MMS (Multimedia Message Service)
  - 83
- Morning call • 109
- Multimedia messages
  - creating/sending • 84
  - deleting • 90, 91
  - editing • 91
  - reading • 88, 91
  - setting • 85, 87
- Multi-party calls • 53
- Muting
  - all sounds • 27
  - key tones • 51
  - microphone • 50

## **N**

- Names
  - entering • 43
  - searching/dialing • 37
- Network selection • 71
- Network services • 69, 109
- Numbers, phone
  - searching/dialing • 37
  - storing • 31

## **O**

- On/off switch, phone • 19
- Organizer • 109
- Outbox, messages
  - multimedia • 91
  - text • 79
- Own number • 41

## **P**

- Password
  - phone • 140, 146
- Phone
  - display • 11
  - icons • 12
  - keys • 9
  - layout • 8

- locking • 140
- password • 146
- resetting • 142
- switching on/off • 19
- unpacking • 7

### **Phonebook**

- copying • 34
- editing • 34
- erasing • 34
- options • 33
- searching/dialing • 37
- speed-dialing • 36
- speed-dialling • 35
- storing • 31

### **Photo**

- deleting • 121, 125
- taking • 119
- viewing • 125

- Pictures, downloaded • 106

### **PIN**

- changing • 140
- description • 147

### **PIN2**

- changing • 142
- description • 148

- Power on/off tone • 138

- Privacy • 141

- Problems, solving • 143

- PUK • 147

- PUK2 • 148

## **R**

- Received calls • 66

- Received messages

- multimedia • 88
- text • 78

### **Recording**

- voice memos • 116

### **Redialing**

- automatically • 133
- manually • 22

- Resetting phone • 142

- Ring tone • 136

- Ring type • 136

- Ring volume • 105, 134, 136

Ringer  
    messages • 137  
Roaming • 71

## S

Safety  
    information • 149  
    precautions • 5  
Scheduler • 111  
SDN (Service Dialling Numbers) • 42  
Searching, phonebook • 37  
Security, calls • 139  
Sent messages  
    multimedia • 91  
    text • 79  
Service light • 14, 135  
Shortcut, menu • 131  
SIM card  
    installing • 15  
SMS (Short Message Service)  
    Inbox • 78  
    Outbox • 79  
Soft keys • 29  
Sound settings • 136  
Sounds  
    playing • 105  
Speed-dial • 35  
Speed-dialing • 36  
Switching on/off  
    microphone • 50  
    phone • 19  
Symbol mode, text input • 48

## T

T9 mode, text input • 45  
Tasks, to do list  
    creating • 114  
    editing • 114  
Templates, message  
    multimedia • 92  
    text • 80  
Text input mode • 44

Text message  
    creating/sending • 76  
    deleting • 78, 80  
    reading • 78, 79  
    setting • 81  
Text, enter • 43  
Time format • 130  
Time, set • 129  
To do list • 114  
Tone  
    connect • 139  
    error • 138  
    folder • 137  
    keypad • 137  
    message • 137  
    minute minder • 139  
    power on/off • 138  
    ring • 136  
Travel adapter • 17  
TTY setting • 132

## V

Vibration • 27, 136  
Video  
    deleting • 126  
    playing • 126  
Voice mail • 94  
Voice memo  
    deleting • 117  
    playing • 117  
    recording • 116  
Voice notes • 63  
Voicemail server • 94  
Volume, adjust  
    keypad tone • 23  
    ring • 136  
Volume, adjusting  
    earpiece • 23

## **W**

Waiting call • 52, 70

Wallpaper • 133

WAP browser

- accessing • 105

- cache, clear • 101

- favorites • 100

- setting • 102

World time • 129

Writing messages



 
 



- multimedia • 84



- text • 76

- voice note • 63

## Dual Band SGH-E315GPRS telephone

### Quick reference card

|                           |   |  |   |
|---------------------------|---|--|---|
| Access the menu functions | <ol style="list-style-type: none"> <li>1 Press the <b>Menu</b> soft key.</li> <li>2 Scroll using the Navigation keys through the list of the menus until you reach the menu you want.</li> <li>3 Press the <b>Select</b> soft key.</li> <li>4 Scroll using the Up and Down keys through the list of the options until the one you want is selected.</li> <li>5 Press the <b>Select</b> soft key.</li> </ol> | Switch on/off                                    | Press and hold the  key.   |
|                           |   | Make a call                                      | <ol style="list-style-type: none"> <li>1 Enter the number.</li> <li>2 Press the  key.</li> </ol>   |
|                           |   | End a call                                       | Briefly press the  key.  |
|                           |   | View missed calls immediately after missing them | <ol style="list-style-type: none"> <li>1 Open the phone and press the <b>View</b> soft key.</li> <li>2 Scroll using the Up and Down keys through the missed calls.</li> <li>3 To return the call, press the  key.</li> </ol> |
|                           |   | Answer a Call                                    | Open the phone or Press the  key.  |
|                           |   | Adjust the Volume                                | Press the  or  key on the left side of the phone.   |

- Each of the two soft keys ( and ) perform the function indicated by the text above it, on the bottom line of the display.



|                             |   |
|-----------------------------|---|
| Choose the alert type       | <ol style="list-style-type: none"> <li>① Select the <b>Alert type</b> menu (<b>Menu 9.4.3</b>).</li> <li>② Select an option: <ul style="list-style-type: none"> <li>• <b>Light only</b></li> <li>• <b>Melody</b></li> <li>• <b>Vibration</b></li> <li>• <b>Vibra+Melody</b></li> </ul> </li> <li>③ Press the <b>Select</b> soft key.</li> </ol>   |
| Store numbers in Phone Book | <ol style="list-style-type: none"> <li>① Enter the number and press the <b>Save</b> soft key.</li> <li>② Select a category of the number.</li> <li>③ Press the <b>Select</b> soft key.</li> <li>④ Select a memory.</li> <li>⑤ Press the <b>Select</b> soft key.</li> <li>⑥ Enter the name.</li> <li>⑦ Press the <b>OK</b> soft key.</li> <li>⑧ Press the <b>OK</b> soft key.</li> <li>⑨ Press the <b>↶</b> key to return to Idle mode.</li> </ol> |

|                                   |   |
|-----------------------------------|---|
| Search for a number in Phone Book | <ol style="list-style-type: none"> <li>① Press the <b>Ph.Book</b> soft key.</li> <li>② Select the <b>Search</b> option.</li> <li>③ Enter the first few letters of the name.</li> <li>④ To scroll through the names, press the Up or Down key.</li> <li>⑤ Press the <b>View</b> soft key.</li> <li>⑥ To scroll through the numbers, press the Up or Down key.</li> <li>⑦ Press the <b>↶</b> key to dial.</li> </ol>                                |
| Take a Photo                      | <ul style="list-style-type: none"> <li>• With the phone open</li> </ul> <ol style="list-style-type: none"> <li>① In Idle mode, press and hold the Up key.</li> <li>② Press the left soft key.</li> <li>③ Press the <b>Save</b> soft key.</li> </ol> <ul style="list-style-type: none"> <li>• With the phone closed</li> </ul> <ol style="list-style-type: none"> <li>① Press and hold the Camera key.</li> <li>② Press the Camera key.</li> </ol> |