

* Some of the contents of this manual may differ from your phone,
depending on the software installed or your service provider.



ELECTRONICS

World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.: GH68-XXXXXA
English. 06/2004. Rev 1.0

SAMSUNG

**GPRS TELEPHONE
SGH-E610**

DRAFT

Contents

Important Safety Precautions	7
Unpacking	9
Your Phone.....	10
Phone Layout	10
Display	13
Service Light.....	16
Camera	17
Flash.....	17
Getting Started.....	18
Installing the SIM Card	18
Charging the Battery	20
Switching On or Off the Phone.....	22
Call Functions.....	23
Making a Call	23
Adjusting the Volume	26
Answering a Call	27
Viewing Missed Calls	28
Quickly Switching to Silent Mode.....	30
Selecting Functions and Options.....	31
Using the Soft Keys.....	31
Selecting Options.....	32
Phonebook	34
Storing a Number with a Name.....	34
Using Phonebook Entry Options	37
Dialling a Number from Phonebook	39
Speed Dialling	40
Searching for and Dialling a Number in Phonebook	42
Editing a Caller Group	44
Deleting All of the Phonebook Entries	45
Checking the Memory Status	46
Using the Service Dialling Numbers	46
Entering Text.....	48
Changing the Text Input Mode.....	49
Using T9 Mode	50
Using Alphabet Mode.....	52
Using Number Mode.....	53
Using Symbol Mode.....	53



Contents

Options During a Call.....	54
Putting a Call on Hold.....	54
Using the Menu Functions	55
Switching off the Microphone (Mute)	56
Muting and Sending DTMF Tones	57
Sending a Sequence of DTMF Tones	57
Searching for a Number in Phonebook	58
Call Waiting	59
Making a Multi-party Call	59
 Using the Menus.....	 62
Accessing a Menu Function by Scrolling	62
Using Shortcuts	63
List of Menu Functions.....	64
 SIM AT	 69
 Call records	 70
Missed calls (<i>Menu 2.1</i>)	70
Received calls (<i>Menu 2.2</i>)	71
Dialled calls (<i>Menu 2.3</i>)	71
Delete all (<i>Menu 2.4</i>)	72
Call time (<i>Menu 2.5</i>)	73
Call costs (<i>Menu 2.6</i>)	74
 Network services.....	 75
Call diverting (<i>Menu 3.1</i>)	75
Call barring (<i>Menu 3.2</i>)	77
Call waiting (<i>Menu 3.3</i>)	79
Network selection (<i>Menu 3.4</i>).....	79
Caller ID (<i>Menu 3.5</i>)	80
Closed user group (CUG) (<i>Menu 3.6</i>).....	81
Band selection (<i>Menu 3.7</i>)	82
 Sound settings	 84
Ringtone (<i>Menu 4.1</i>)	84
Ring volume (<i>Menu 4.2</i>)	84
Alert type (<i>Menu 4.3</i>).....	85
Keypad tone (<i>Menu 4.4</i>)	85
Message tone (<i>Menu 4.5</i>)	85
Folder tone (<i>Menu 4.6</i>).....	87
Power on/off (<i>Menu 4.7</i>).....	87
Alert on call (<i>Menu 4.8</i>).....	87
Extra tones (<i>Menu 4.9</i>).....	88

Messages.....	89
Text message (Menu 5.1)	89
Multimedia message (Menu 5.2)	97
Push messages (Menu 5.3)	110
Delete all (Menu 5.4)	110
Voice mail (Menu 5.5)	111
Broadcast messages (Menu 5.6)	112
Memory status (Menu 5.7).....	113
 Funbox	 114
WAP browser (Menu 6.1)	114
Games (Menu 6.2)	121
Sounds (Menu 6.3)	124
Images (Menu 6.4)	124
Delete all (Menu 6.5)	125
Memory status (Menu 6.6).....	125
 Organiser	 126
Alarm (Menu 7.1)	126
Calendar (Menu 7.2)	128
Time & Date (Menu 7.3)	131
Calculator (Menu 7.4).....	132
To do list (Menu 7.5).....	133
Voice memo (Menu 7.6)	136
Currency exchange (Menu 7.7).....	138
 Camera.....	 139
Take photos (Menu 8.1)	139
My photos (Menu 8.2)	144
Video (Menu 8.3).....	145
Memory status (Menu 8.4).....	147
 Phone settings	 148
Activate infrared (Menu 9.1)	148
Display settings (Menu 9.2)	152
Greeting message (Menu 9.3)	155
Own number (Menu 9.4).....	155
Language (Menu 9.5)	155
Security (Menu 9.6)	156
Extra settings (Menu 9.7)	160
Short cut (Menu 9.8).....	161
Reset settings (Menu 9.9).....	161
 Solving Problems.....	 162

Contents

Access Codes.....	165
Phone Password	165
PIN	166
PUK	166
PIN2	167
PUK2	167
Barring Password.....	168
Health and Safety Information	169
Glossary	203
Index	209
Quick Reference Card	214



Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch off your phone near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations


Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Important Safety Precautions

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features in use before you can make an emergency call. Give all necessary information as accurately as possible. Do not end the call until given permission to do so.

Water Resistance

Your phone is not water-resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.

Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and Safety Information" on page 169.

CAUTION

RISK OF EXPLOSION IF A BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO
THE INSTRUCTIONS.




Unpacking

Your package contains the following items:



Handset

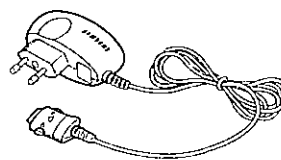

Travel Adapter



Batteries



User's Manual

Note: The items supplied with your phone may be different, depending on your country or service provider.

You can obtain the following accessories for your phone from your local Samsung dealer:


- Standard/extend batteries
- Simple handsfree car kit
- Travel charger/adaptor
- Hand strap
- PC data kit
- Ear-microphone




Your Phone

Phone Layout

The following illustrations show the main elements of your phone:

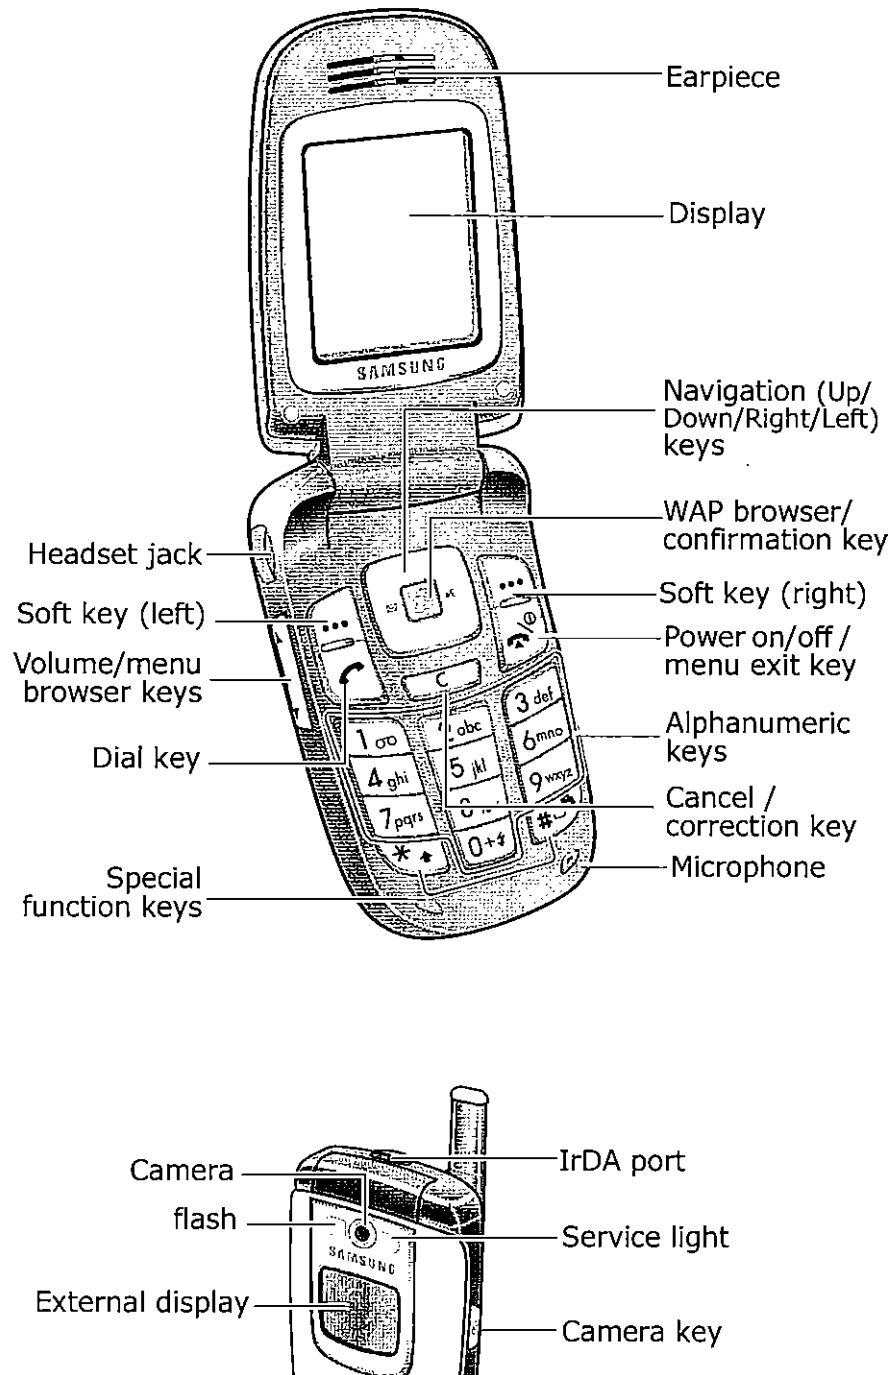

Key(s) Description

 

In Menu mode, scrolls through the menu options and Phonebook.

In Idle mode, accesses your favourite menu options directly. For more information about shortcuts, see page 161.



When entering text, moves the cursor to the left or right, depending on which side you push.

In Idle mode, the Left key allows you to quickly access the **Create** menu in the **Text messages** menu and the Right key allows you to access the **Record voice** menu in the **Voice memo** menu.



(soft keys)

Performs the functions indicated by the screen text above them, on the bottom line of the display.



In Idle mode, directly launches the WAP (Wireless Application Protocol) browser.

In Menu mode, selects the highlighted main menu.



Makes or answers a call.

In Idle mode, recalls the last number you dialled or received when held down.



Deletes characters from the display.

In Menu mode, returns you to the previous menu level.

Your Phone

Key(s) **Description** (continued)



Ends a call. Also switches the phone on and off when held down.

In Menu mode, cancels your input and returns the phone to Idle mode.



In Idle mode, accesses your voice mail when held down.



Enters numbers, letters, and some special characters.



Enters special characters.
Performs various functions.



(on the left side of the phone)
During a call, adjusts the earpiece volume.

In Idle mode with the phone open, adjusts the keypad tone volume. With the phone closed and the external display on, turns on or off the flash when held down.

In Menu mode, scrolls through menu options and Phonebook.




(on the right side of the phone)
Turns on the camera when held down to allow you to take photos.

Display

Display Layout



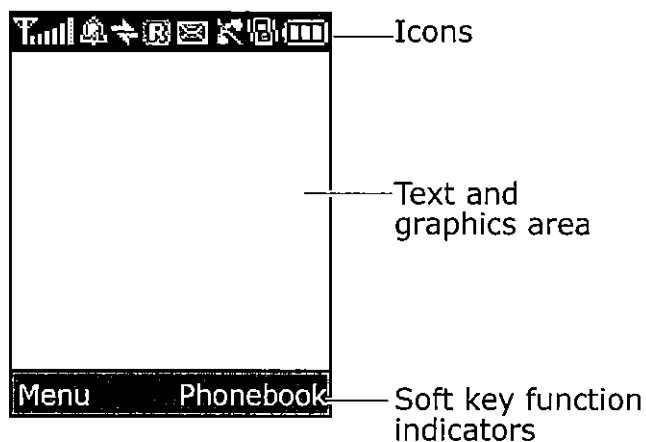







The display has three areas:



Area	Description
First line	Displays various icons. See page 14.
Middle lines	Displays messages, instructions, and any information that you enter, such as the number you are dialling.
Last line	Shows the current functions assigned to the two soft keys.

Your Phone

Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the stronger the signal.
	Appears when you set an alarm to ring at a specified time.
	Appears when the IrDA port is active. For details, see page 148.
	Appears when you are out of your home area and have logged onto a different network; for example, when travelling in other countries.
	Appears when a new text message has been received.
	Appears when a new voice mail message has been received.
	Appears when a new multimedia message has been received.
	Appears when a call is in progress.
	Appears when you are out of your service area. When it displays, you cannot make or receive a call.
	Appears when you are connected to the GPRS network.

Icon	Description (continued)
------	-------------------------



Appears when Silent mode is active or when you set the phone to vibrate when you receive a call. You can set this option in the **Alert type** menu (**Menu 4.3**). For further details, see page 30 and page 85 respectively.



Appears when Mute mode is active.



Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

The backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on and remains on for a given period of time, depending on the setting in the **Back light** menu (**Menu 9.2.5**). When no keys are pressed, the display turns off after one minute to conserve battery power.

To specify the length of time the backlight is active, set the **Back light** menu. See page 154 for further details.

Your Phone

External Display

Your phone has an external display on the front of the phone. It indicates when you have an incoming call or message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the external display.


When you close the phone, the display shows the current time on an analogue clock. You can set the display to show the current date instead of the analogue clock using the **Front LCD display** menu (**Menu 9.2.2**). For details, see page 153.

With the phone closed, you can take photos using the external display by pressing and holding the Camera key on the right side of the phone. See page 139.

Service Light

The service light is on the front of the phone. It flashes when services are available on the phone.

To activate or deactivate the service light, use the **Service light** menu (**Menu 9.2.6**). See page 154 for further details.

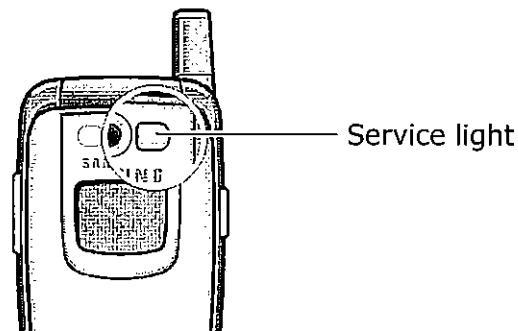

Camera

 
The camera on the front of the phone allows you to take a photo or record a video while on the move.

For further details about the Camera feature, see page 139.

Flash

You can use the built-in flash on the front of the phone, on the left side of the camera, to view the external display or to take photos when it is dark. You can also use the flash in emergency conditions.

With the external display on, press and hold one of the Volume keys to turn on or off the flash.




Getting Started


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and so on.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Slide the battery lock toward the top of the phone.
 - ② Lift away the battery, as shown.

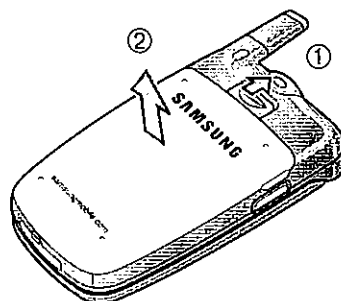


Getting Started

3. Slide the SIM card into the SIM card socket, as shown, so that it locks the card into position.

Make sure the gold coloured contacts of the card face into the phone.

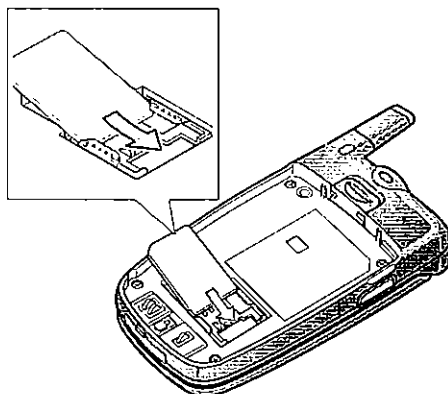


Note: When you need to remove the SIM card, slide it upward, as shown, and take it out of the socket.

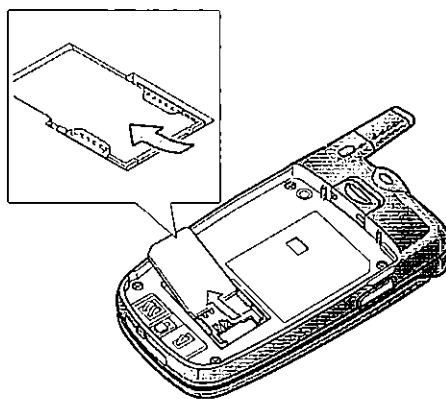


Getting Started

4. Place the battery so that the tabs on the end align with the slots at the bottom of the phone.

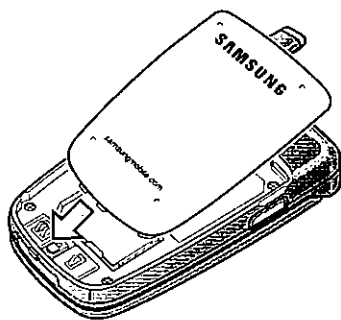

5. Press the battery until it clicks into place. Make sure that the battery is properly installed before switching on the power.

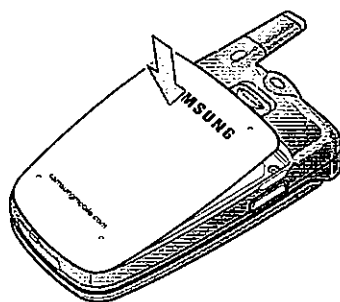

Charging the Battery


Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

The travel adapter allows you to use the phone while the battery is charging, but this causes the phone to charge more slowly.


Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

Getting Started

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

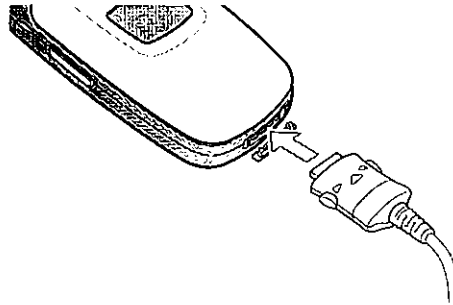

2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling out the connector.

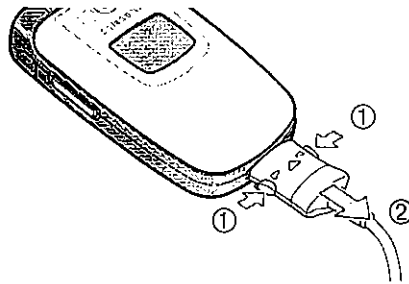


Note: You must unplug the adapter before removing the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, your phone will turn off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.


Switching On or Off the Phone

1. Open the phone.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter a password, enter the password and press the **OK** soft key or **i** key. The password is preset to "00000000" at the factory. For further details, see page 165.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or **i** key. For further details, see page 166.

The phone searches for your network and, after finding it, the idle screen appears on the display, as illustrated below. Now, you can make or receive calls.

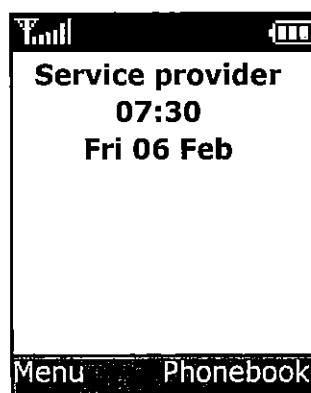

Note: The display language is preset to English at the factory. To change the language, use the **Language** menu (**Menu 9.5**). For further details, see page 155.

5. When you wish to switch off the phone, hold down the  key until the power-off image displays.



Call Functions

Making a Call

When the idle screen displays, enter the area code and phone number, then press the **C** key.

Note: When you activate the **Auto redial** option in the **Extra settings** menu (**Menu 9.7**), the phone will automatically redial up to ten times if the person does not answer the call or is already on the phone. See page 160 for further details.

Making an International Call

1. Press and hold the **0** key.
The **+** character appears.
2. Enter the country code, area code and phone number and press the **C** key.

Correcting the Number

To clear	Press the
the last digit displayed	C key.
any other digit in the number	Left or Right key until the cursor is immediately the right of the digit to be cleared. Press the C key. You can also insert a missing digit simply by pressing the appropriate key.
the whole display	C key and hold it for more than one second.

Call Functions



Ending a Call


When you want to end your call, briefly press the  key or close the phone.

Redialling the Last Number

The phone stores the numbers of the calls you've dialled, received, or missed, if the call recipient or caller is identified. See "Call records" on page 126 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialled or received them.
3. Use the Up and Down keys to scroll through the numbers until the number you want highlights.

4. To	Press the
dial the number	 key.
edit the number	Options soft key or i key and select Edit . Change the number, referring to "Correcting the Number" on page 23.
delete the number	Options soft key or i key and select Delete .

4. To	Press the
delete all of the numbers on the Call log list	Options soft key or <i>i</i> key and select Delete all . For details, see page 72.

Making a Call from Phonebook

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called Phonebook.


Once you have stored a number in Phonebook, you can dial it by pressing a few keys. you can assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see page 34.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.

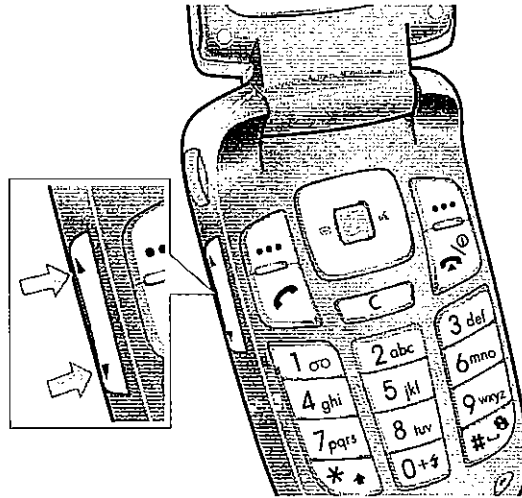



In Idle mode with the phone open, you can also adjust the keypad tone volume using these keys.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.


The caller's phone number or name, if stored in Phonebook, displays.

1. If necessary, open the phone. Press the  key or the **Accept** soft key to answer the incoming call.

When the **Anykey answer** option in the **Extra settings** menu (**Menu 9.7**) is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. See page 160.

When the **Active folder** option in the **Extra settings** menu (**Menu 9.7**) is activated, you can answer the call simply by opening the phone. See page 160.

Note: To reject the call, press and hold the Volume keys before opening the phone, or press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using Phonebook or menu features. After ending the call, the display returns to the function screen you were using.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who is calling you so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, open the phone.
2. Press the **View** soft key or **i** key.


The number for the most recent missed call displays, if available.

3. To	Press the
scroll through the missed calls	Up or Down key.
call the number displayed	 key.
edit or delete a missed call number	Select soft key or i key. See below.

Editing a Missed Call Number


Note: When the number for the missed call is not available, the **Edit** option does not display.

1. Press the **Options** soft key or **i** key and then select the **Edit** option using the Up or Down key.
2. Press the **Select** soft key or **i** key.
3. Change the number.

4. To	Press the
call the number	 key.
store the number	Save soft key and enter a name and the location. For further details, see page 34.

Deleting a Missed Call


1. Press the **Options** soft key or **i** key.
2. If necessary, press the Up or Down key to highlight the **Delete** option.
3. Press the **Select** soft key or **i** key.

You can press the  key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the **Missed calls** menu (**Menu 2.1**). For further details, see page 70.


Quickly Switching to Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theatre for example.

In Idle mode, press and hold the **#** key until the "Silent mode" message and the Vibration icon () display. The phone also vibrates.

In Silent mode, your phone changes the sound settings as follows:



Option	New Setting
Alert type	Vibration
Keypad tone	Off
SMS/MMS tone	Light + Vibration
SMS-CB tone	Light
Folder tone	Off
Power off tone	Off
Extra tones	Off

To exit and reactivate the previous sound settings, press and hold the **#** key again until "Exit silent mode" appears. The Vibration icon () no longer displays.

Notes:

- When you turn off the phone, Silent mode is automatically deactivated.
- Activating Silent mode will not turn off the camera shutter sound.


Selecting Functions and Options

Your phone offers a set of functions that allow you to customise it. These functions are arranged in menus and sub-menus, accessed using the two soft keys,  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

Using the Soft Keys

The roles of the soft keys vary depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.

Example:

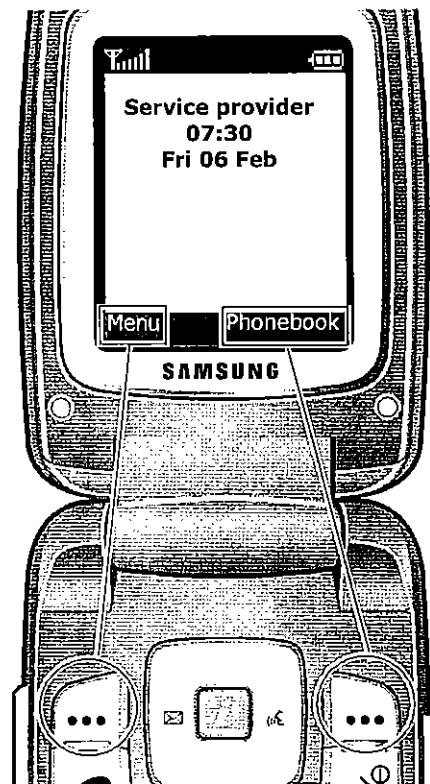

Press the left soft key to access Menu mode.

Press the right soft key to access the Phonebook feature.

Selecting Functions and Options

In each main menu, one of the most popular sub menus is assigned to the left soft key – for example, if you select the **Sound settings** menu, **Ringtone** is assigned to the left soft key. This allows you to quickly access the most popular menus.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.

2. To	Press the
select the: <ul style="list-style-type: none">• function displayed• option highlighted	i key or Select soft key.
view the next function or highlight the next option on a list	Down key or ▼ key on the left side of the phone.
move back to the previous function or option on a list	Up key or ▲ key on the left side of the phone.
move back up one level in the menu structure	↶ soft key or C key.
exit the menu structure without changing the settings	☎ key.

Selecting Functions and Options

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key or **i** key.

Note: When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.



Phonebook

You can store phone numbers and their corresponding names in both your SIM card and your phone's memory. They are physically separate but are used as a single entity, called Phonebook.

Note: Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

Storing a Number with a Name




There are two ways to store a number:

- Using the **Save** soft key or **i** key in Idle mode
- Using the **Add entry** option in the Phonebook menu

Storing a Number in Idle mode

1. Enter the number you want to store.

Note: If you make a mistake while entering a number, correct it using the **C** key. For further details, see page 23.

2. When you are sure that it is correct, press the **Save** soft key or **i** key.
3. Select an icon to identify the category in which the number is to be stored. Three categories are available:
 -  : Mobile phone number
 -  : Office number
 -  : Home number

To select the category, press the Left or Right key and press the **Select** soft key or **i** key.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key or **i** key.


Note: When you change phones, any numbers stored in your SIM card are automatically available with the new phone, whereas any numbers stored in the phone's memory will need to be reentered.

5. Enter a name and press the **OK** soft key or **i** key.

For further details about how to enter characters, see page 48.


6. If you do not want to save the number and name in the suggested location, press the **C** key to clear the location number and enter another location by pressing the number keys.
7. Press the **OK** soft key or **i** key to store the name and number.

After storing, the phone displays the Phonebook entry or name you just created.

8. To	Press the
use the entry options	Options soft key or i key. For further details, see page 37.
return to the idle screen	 key.

Storing a Number Using the Phonebook Menu

1. When the idle screen displays, press the **Phonebook** soft key.
2. Scroll to **Add entry** by pressing the Up or Down key and press the **Select** soft key or **i** key.
3. Select an icon to identify the category of the number to be stored by pressing the Left or Right key, and press the **Select** soft key or **i** key.

Note: The E-mail icon () is available in this step. It allows you to save an e-mail address instead of a phone number.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key or **i** key.

Note: When you are saving an e-mail address, SIM is not available.

5. Enter a name and press the **OK** soft key or **i** key.

For further details about how to enter characters, see page 48.

6. Enter the number or address you want to store and press the **Save** soft key or **i** key.
7. Continue the procedure from step 6 on page 35 to store the number.

Using Phonebook Entry Options

While accessing any Phonebook entry, press the **Options** soft key or **i** key to access the options for the entry.

To	Press the
select the highlighted option	Select soft key or i key.
highlight a different option	Up or Down key until the option you want highlights.

The following options are available:

Photo caller ID: allows you to assign one of the photos you took using the camera as a caller ID image to be displayed when you receive a call from the selected number. For details about the Camera feature, see page 126.

Select a photo: allows you to select a photo for the number.

Take photos: allows you to take a new photo to be used as a caller ID.

View: displays the photo assigned to the number.

Delete caller ID: cancels the photo caller ID setting for the number.

Edit: allows you to edit the name and number.


Select **One entry** to change the name and/or phone number for the selected entry. If you change the name, the number is saved separately with the new name.

Select **All entry** to change only the name of the entry.

Phonebook

Copy: allows you to copy the number to another location. You can select the memory location, either **SIM** or **Phone**, and the location number.

Paste: allows you to paste the number into the normal dialling mode. Use this option to dial a number similar to one in Phonebook, such as a different extension in the same office.

Use the **C** key to change the number as required; see page 23 for further details. When you are ready to dial, press the  key.

Delete: allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key or **i** key.

Caller group: allows you to organise your Phonebook entries in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No group** option.

For further details about how to change caller group properties, see page 44.

Add entry: allows you to add a new number to the currently selected name.


Send via IrDA: allows you to send all entries or one entry of the selected name to other IrDA-compatible phones. For further details, see page 151.

Dialling a Number from Phonebook

Once you have stored phone numbers in Phonebook, you can dial them easily and quickly by using the location numbers that were assigned to them in Phonebook.

Note: If you cannot remember a location number, you must go into the **Search** menu in the **Phonebook** menu to search for the entry by name. For details, see page 42.

Dialling a Number from the SIM Card


1. Enter the location number for the phone number you want to dial.
2. Press the **#** key. The list of the entries in the SIM card appears, with the desired number highlighted.
3. You can press the Up or Down key to find other numbers on the list.
4. Press the **Dial** soft key,  key, or **i** key when you have selected the number you want.

Dialling a number from the Phone's Memory

1. In Idle mode, press and hold the **0** key. A **+** appears.
2. Enter the location number of the phone number you want and press the **#** key.

The list of entries in the phone's memory appears.

Phonebook

3. You can press the Up or Down key to find other numbers on the list.
4. Press the **Dial** soft key,  key, or **i** key when you have selected the number you want.

Speed Dialling

You can assign up to eight phone numbers from your Phonebook list that you use most frequently to the number keys (**2 to 9**), and then dial them easily whenever you want, simply by pressing and holding the associated number key.




Setting Up Speed-dial Entries

1. When the idle screen displays, press the **Phonebook** soft key.
2. Scroll to **Speed dial** by pressing the Up or Down key and press the **Select** soft key or **i** key.
3. Select the key to which you wish to assign the speed-dialling number, from among the **2 to 9** keys, and press the **Select** soft key or **i** key.

Note: Memory location 1 is reserved for your Voice Mail server number.

If you have already assigned a number to the key, the **Options** soft key replaces the **Select** soft key. Go to step 6.

4. Select an entry from the list and press the **View** soft key or **i** key.

5. Select a number, if the entry has more than one, by pressing the Up or Down key and press the **Select** soft key or **i** key.
6. Once you have assigned a number to the key, you can use the following options by pressing the **Options** soft key or **i** key:
 - **Change**: allows you to assign a different number to the key.
 - **Delete**: allows you to clear the setting so that no number is assigned to the key.
 - **Delete all**: allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.
 - **Number**: allows you to view the number assigned to the key. You can dial the number by pressing the  key.
7. When you are finished, press the  soft key or  key.

Speed-dialling

To speed-dial the numbers assigned to the **2** to **9** keys, press and hold the appropriate key.

Searching for and Dialling a Number in Phonebook


After storing numbers in Phonebook, you can search for them in two ways; by name and by caller group.

Searching for a Number by Name

1. When the idle screen displays, press the **Phonebook** soft key.
2. Press the **Select** soft key or **i** key when **Search** highlights. You are asked to enter a name.
3. Enter the first few letters of the name that you want to find.

The Phonebook entries are listed, starting with the first entry matching your input.

4. To	Press the
view the highlighted entry	View soft key or i key.
select a different entry	Up or Down key until the entry highlights.
look for a name starting with a different letter	key labelled with the letter you want to find.

5. Once you have found the entry, press the  key to dial the number.

Press the **Options** soft key or **i** key to access the Phonebook entry options; for further details, see page 37.

Searching for a Number by Caller Group


1. When the idle screen displays, press the **Phonebook** soft key.
2. Scroll to **Group search** by pressing the Up or Down key and press the **Select** soft key or **i** key. You are asked to enter a group name.
3. Enter the first few letters of the group name that you want to find.

The caller groups are listed, starting with the first group matching your input.

4. If necessary, scroll to a group by pressing the Up or Down key and press the **View** soft key or **i** key.



The Phonebook entries in the caller group are listed.

5. To	Press the
view the highlighted entry	View soft key or i key.
select a different entry	Up or Down key until the entry you want highlights.

6. Once you have found the entry, press the  key to dial the number.

Press the **Options** soft key or **i** key to access the Phonebook entry options; for further details, see page 37.

Editing a Caller Group

1. When the idle screen displays, press the **Phonebook** soft key.
2. Scroll to **Group edit** by pressing the Up or Down key and press the **Select** soft key or **↓** key.
3. Scroll through the group list by pressing the Up or Down key.
4. When the group you want highlights, press the **Options** soft key or **↓** key.
5. Select each option and change the settings, as required. The following options are available:
 - **Call ringtone:** allows you to set a ring tone to be used when you receive a call from a number of that group.
 - **SMS tone:** allows you to set a ring tone to be used when you receive a message from a number of that group.
 - **Graphic:** allows you to set a graphic icon to be displayed when you receive a call from a number of that group.
 - **Group name:** allows you to assign a name to the group. For further details about how to enter characters, see page 48.
6. When you are finished, press the  soft key or  key.

Deleting All of the Phonebook Entries

You can delete all of your entries in the selected memory or both memories.

1. When the idle screen displays, press the **Phonebook** soft key.
2. Scroll to **Delete all** by pressing the Up or Down key and press the **Select** soft key or **i** key.
3. To place a check mark by the memory you want to empty, **All**, **SIM**, or **Phone**, press the **i** key.

You can remove the check mark by pressing the **i** key again.

4. When you have finished marking, press the **Delete** soft key to delete the entries in the selected memory location(s).
5. Enter the phone password and press the **OK** soft key or **i** key.

Note: The password is preset to "00000000" at the factory. To change it, see page 157.



6. When the confirmation message appears, press the **Yes** soft key or **i** key.

To cancel the deletion, press the **No** soft key.

7. When the display asks for confirmation again, press the **Yes** soft key or **i** key.

Checking the Memory Status


You can check how many names and numbers are stored in Phonebook, in both the SIM card and the phone's memory. You can also see the capacity of both memories.

1. When the idle screen displays, press the **Phonebook** soft key.
2. Select the **Memory status** option by pressing the Up or Down key and press the **Select** soft key or **i** key.
3. Press the Up or Down key to view the number of the entries you stored and the total number of the entries you can store in the SIM card and the phone's memory.
4. When you are finished, press the  soft key or  key.

Using the Service Dialling Numbers

You can view the list of Service Dialling Numbers (SDN) assigned by your network provider. These numbers include emergency numbers, directory enquiries, and voice mail numbers.

1. When the idle screen displays, press the **Phonebook** soft key.
2. Select the **SDN** option by pressing the Up or Down key and press the **Select** soft key or **i** key.
3. Scroll through the numbers by using the Up or Down key.

4. To dial the number displayed, press the **Dial** soft key,  key, or **i** key.

Note: This menu is available only when your SIM card supports Service Dialling Numbers.



Entering Text

When using your phone, you will often need to enter text, such as when storing a name in Phonebook, creating your personal greeting, or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, when you press the **5** key once, twice, or three times, J, K, or L displays. However, T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

- **Alphabet mode**

This mode allows you to enter letters by pressing the key labelled with the letter you want. Press the key once, twice, three, or four times until it displays.

- **Number mode**

This mode allows you to enter numbers.


- **Symbol mode**

This mode allows you to enter various symbols and special characters.




Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

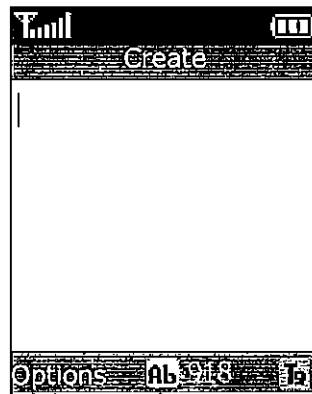Example: Writing a text message



Text input
mode indicator

To select	Press the right soft key until
T9 mode	 displays. See page 50.
Alphabet mode	 displays. See page 52.
Number mode	 displays. See page 53.
Symbol mode	the symbol list displays. See page 53.

Note: Additional text input modes may be available, depending on your country.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key or the Up or Down key repeatedly to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" use the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:


1. After pressing the keys corresponding to the word you want to add, press the **0** or Down key to display the alternative words.
2. When you press the **0** or Down key at the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key.
3. If necessary, clear the word using the **C** key and enter the word you want to add using Alphabet mode; see page 52.
4. Press the **OK** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.

Example: The **1** key is used twice to display two punctuation marks:

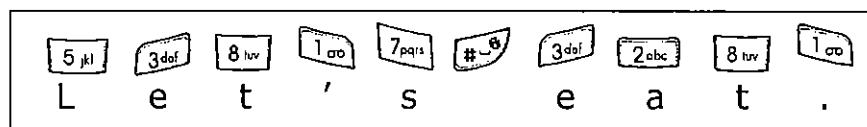

- To shift case in T9 mode, use the ***** key. There are three cases; Initial capital (**Ab**), Capital lock (**AB**), and Lower case (**ab**).
- You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Entering Text

Using Alphabet Mode

Use the **1** to **0** keys to enter your text.

1. Press the keys labelled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Refer to the table below for further details about available characters:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ÷ §	. % @ _ £ \$ ¥ ¤ §
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 Λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	0 * # , ; ' " =	/ : - + () < >

Note: The characters available in Alphabet mode may be different depending on your country.

- To insert a space, press the **#** key.
- To shift case in Alphabet mode, use the ***** key. There are three cases; Initial capital (**Ab**), Capital lock (**AB**), and Lower case (**ab**).
- You can move the cursor using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols into a text message.

To	Press the
select a symbol	corresponding number key.
display more symbols	Up or Down key.
insert the symbol(s) into your message	OK soft key or i key.
clear the symbol(s) you entered	C key.



Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold


You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in Phonebook.

For details about searching for a number in Phonebook, see page 42.

2. Press the  key to dial the second call.

The first call is automatically put on hold.

Or,


1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

Options During a Call

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

Using the Menu Functions

You can access the main menu functions during a call.

1. Press the **Options** soft key or **i** key and then press the **OK** soft key or **i** key when the **Menu** option highlights.
2. Press the Up or Down key to scroll through the menu list.
Note: You cannot use some menus during a call. They are deactivated on this list.
3. When the menu you want highlights, press the **Select** soft key or **i** key.
4. If the selected menu has sub-options, repeat steps 2 and 3.

For further details about available menu functions, see the list on page 64.

Switching off the Microphone (Mute)

You can temporarily switch off your phone's microphone so that the other person on the phone cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key or **i** key.
2. Press the Down key to highlight the **Mute** option.
3. Press the **OK** soft key or **i** key.

The other person on the phone can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key or **i** key.
2. If necessary, press the Down key to highlight the **Unmute** option.
3. Press the **OK** soft key or **i** key.

The other person on the phone can hear you again.

Muting and Sending DTMF Tones

The **Mute keys** and **Send keys** options allow you to turn off or on the key tones. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerised telephone systems, the **Send keys** option must be selected.

Sending a Sequence of DTMF Tones

You can send the DTMF tones as a group after entering the entire numbers you need to send.

This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

To send the DTMF tones:

1. While connected to the teleservice system, press the **Options** soft key or **i** key.
2. Press the Down key to highlight the **Send DTMF** option.
3. Press the **OK** soft key or **i** key.
4. Enter the number you want to send and press the **OK** soft key or **i** key.

The tones are sent.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key or **i** key.
2. Press the Down key to highlight the **Phonebook** option.
3. Press the **OK** soft key or **i** key.

The Phonebook entries are listed.

4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.



5. To view the highlighted entry, press the **View** soft key or **i** key.

For further details about the Phonebook feature, see page 34.

Call Waiting

You can answer an incoming call while you have a call in progress, if your network supports this service and you have set the **Call waiting** menu (**Menu 3.3**) to **Activate**; see page 79. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.
3. To end the call on hold, press the **Options** soft key or  key and select the **End held call** option.

To end the current call, press the  key.

Making a Multi-party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call. For more information about subscribing to this service, contact your service provider.

Setting a the Multi-party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.

Options During a Call

3. To join the first participant to the multi-party call, press the **Options** soft key or **ⓘ** key and select the **Join** option. Press the **OK** soft key or **ⓘ** key.
4. To add a new person to the multi-party call, call the new person in the normal way and press the **Options** soft key or **ⓘ** key. Select the **Join** option and press the **OK** soft key or **ⓘ** key.

You can add incoming callers by answering the call, pressing the **Options** soft key or **ⓘ** key, and selecting the **Join** option. Repeat as required.

Having a Private Conversation with One Participant

1. Press the **Options** soft key or **ⓘ** key and choose the **Select one** option. Press the **OK** soft key or **ⓘ** key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key and press the **↶** key.
3. When the **Private** option highlights, press the **OK** soft key or **ⓘ** key.

Now you can talk privately to that person. The other participants can still converse with each other.


4. To return to the multi-party call, press the **Options** soft key or **ⓘ** key and select the **Join** option. Press the **OK** soft key or **ⓘ** key.

All the multi-party call participants can now hear each other.


Dropping One Participant

1. Press the **Options** soft key or **i** key and choose the **Select one** option. Press the **OK** soft key or **i** key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key and press the  key.
3. Press the Down key to select the **Remove** option and press the **OK** soft key or **i** key.

The call with that participant ends, but you can continue to talk to the others.

4. When you want to end the multi-party call, close the phone or press the  key.



Using the Menus

The phone offers a range of functions that allow you to tailor it to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Phone settings** for example. Press the **i** key to enter the menu.

Note: When you select a main menu, the left soft key allows you to quickly access its most popular submenus.

3. If the menu contains submenus, **Language** for example, you can access them by scrolling using the Up or Down key and pressing the **i** key or the **Select** soft key.

If the menu that you have selected contains further options, repeat this step.

4.	To	Press the
	scroll through the menus	Up or Down key, or use the Volume keys.
	confirm the chosen setting	Select soft key or the i key.

4. To	Press the
return to the previous menu level	 soft key or C key.
exit the menu without changing the settings	 key.

Using Shortcuts

Menu items, such as menu, sub-menus, and options, can be accessed quickly by using their shortcut numbers.

Press the **Menu** soft key and enter the number of the menu you want.

Notes:

- The numbers assigned to each menu may differ, depending on the services supported by your SIM card.
- For menu number 10, use the **0** key.

Example: Accessing the **Language** menu.

1. Press the **Menu** soft key.
2. Press the **9** key for **Phone settings**.
3. Press the **5** key for **Language**.

The languages available display.

List of Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option and the page where you can find a description of each feature.

1. SIM AT

2. Call records (see page 126)

- 2.1 Missed calls
- 2.2 Received calls
- 2.3 Dialed calls
- 2.4 Delete all
- 2.5 Call time
 - 2.5.1 Last call time
 - 2.5.2 Total sent
 - 2.5.3 Total received
 - 2.5.4 Reset timers
- 2.6 Call costs*
 - 2.6.1 Last call cost
 - 2.6.2 Total cost
 - 2.6.3 Max cost
 - 2.6.4 Reset counters
 - 2.6.5 Set max cost
 - 2.6.6 Price/unit

3. Network services (see page 75)

- 3.1 Call diverting
 - 3.1.1 Divert always
 - 3.1.2 Busy
 - 3.1.3 No reply
 - 3.1.4 Unreachable
 - 3.1.5 Cancel all

* Shows only if supported by your SIM card.

3. Network services (continued)

- 3.2 Call barring
 - 3.2.1 All outgoing
 - 3.2.2 International
 - 3.2.3 International except to home
 - 3.2.4 All incoming
 - 3.2.5 Incoming while abroad
 - 3.2.6 Cancel all
 - 3.2.7 Change barring password
- 3.3 Call waiting
- 3.4 Network selection
- 3.5 Caller ID
- 3.6 Closed user group
 - 3.6.1 Index list
 - 3.6.2 Outside access
 - 3.6.3 Default group
 - 3.6.4 Deactivate*
- 3.7 Band selection

4. Sound settings (see page 84)

- 4.1 Ringtone
- 4.2 Ring volume
- 4.3 Alert type
- 4.4 Keypad tone
- 4.5 Message tone
 - 4.5.1 SMS tone
 - 4.5.2 SMS-CB tone
 - 4.5.3 MMS tone
- 4.6 Folder tone
- 4.7 Power on/off
- 4.8 Alert on call
- 4.9 Extra tones

* Shows only if the Closed User Group Feature is active.

Using the Menus

5. Messages (see page 89)

- 5.1 Text messages
 - 5.1.1 Create
 - 5.1.2 Inbox
 - 5.1.3 Outbox
 - 5.1.4 Templates
 - 5.1.5 Settings
- 5.2 Multimedia messages
 - 5.2.1 Create
 - 5.2.2 Inbox
 - 5.2.3 Outbox
 - 5.2.4 Draft
 - 5.2.5 Templates
 - 5.2.6 Settings
 - 5.2.7 MMS profile
- 5.3 Push messages
 - 5.3.1 Inbox
 - 5.3.2 Receive
 - 5.3.3 Delete all
- 5.4 Delete all
 - 5.4.1 Text messages
 - 5.4.2 Multimedia messages
- 5.5 Voice mail
 - 5.5.1 Connect to voice server
 - 5.5.2 Voice server number
- 5.6 Broadcast messages
 - 5.6.1 Read
 - 5.6.2 Receive
 - 5.6.3 Channel list
 - 5.6.4 Language
- 5.7 Memory status
 - 5.7.1 Text messages
 - 5.7.2 Multimedia messages

6. Funbox (see page 114)

- 6.1 WAP browser
 - 6.1.1 Home
 - 6.1.2 Bookmarks
 - 6.1.3 Http://
 - 6.1.4 WAP profiles
 - 6.1.5 Clear cache
- 6.2 Games
- 6.3 Sounds
- 6.4 Images
- 6.5 Delete all
- 6.6 Memory status
 - 6.6.1 Games
 - 6.6.2 Sounds & Images

7. Organiser (see page 126)

- 7.1 Alarm
 - 7.1.1 Once
 - 7.1.2 Daily
 - 7.1.3 Morning call
 - 7.1.4 Remove alarm
 - 7.1.5 Autopower
- 7.2 Calendar
- 7.3 Time & date
 - 7.3.1 Set time
 - 7.3.2 Set date
 - 7.3.3 World time
 - 7.3.4 Time format
- 7.4 Calculator
- 7.5 To do list
- 7.6 Voice memo
 - 7.6.1 Record voice
 - 7.6.2 Voice list
 - 7.6.3 Delete all
 - 7.6.4 Memory status
- 7.7 Currency exchange

Using the Menus

8. Camera (see page 139)

- 8.1 Take photos
- 8.2 My photos
- 8.3 Video
 - 8.3.1 Record
 - 8.3.2 Video clips
- 8.4 Memory status

9. Phone settings (see page 148)

- 9.1 Activate infrared
 - 9.1.1 With PC
 - 9.1.2 With other phone
- 9.2 Display settings
 - 9.2.1 Wallpaper
 - 9.2.2 Front LCD display
 - 9.2.3 Font size
 - 9.2.4 Menu style
 - 9.2.5 Back light
 - 9.2.6 Service light
 - 9.2.7 Graphic logo
- 9.3 Greeting message
- 9.4 Own number
- 9.5 Language
- 9.6 Security
 - 9.6.1 PIN check
 - 9.6.2 Change PIN
 - 9.6.3 Phone lock
 - 9.6.4 Change password
 - 9.6.5 Privacy
 - 9.6.6 SIM lock
 - 9.6.7 FDN mode*
 - 9.6.8 Change PIN2*
- 9.7 Extra settings
- 9.8 Short cut
 - 9.8.1 Key up
 - 9.8.2 Key down
- 9.9 Reset settings

* Shows only if supported by your SIM card.



SIM AT

This menu is available if you use a SIM AT card that provides additional services, such as news, weather, sports, entertainment, and location services.

Available services may vary, depending on your service provider's plans.

For further details, see your SIM card instructions or contact your service provider.




Call records

In this menu, you can view the:

- calls you missed, received, or dialled.
- length of your calls.
- cost of your calls, if your SIM card supports it.


Notes:

- You can access the numbers in the three types of call records by pressing the  key in Idle mode.
- The number of call records the phone can store may vary depending on your SIM card.

Missed calls *(Menu 2.1)*

This menu lets you view the 20 most recent numbers of the calls you received, but did not answer.

The number or name, if available, displays together with the time and date the call was received.

Press the  key to dial the number.

By pressing the **Options** soft key or **i** key, you can use the following options:


Edit: allows you to edit the number and dial it or save it in Phonebook.

Delete: deletes the call from the list.

Received calls *(Menu 2.2)*

This menu lets you view the 20 most recent numbers of the calls you received.

The number or name, if available, displays together with the time and date the call was received.

Press the  key to dial the number.

By pressing the **Options** soft key or **i** key, you can use the following options:


Edit: allows you to edit the number and dial it or save it in Phonebook.

Delete: deletes the call from the list.

Dialled calls *(Menu 2.3)*

This menu lets you view the 20 most recent numbers you dialled.

The number or name, if available, displays together with the time and date the call was made.

Press the  key to dial the number.

By pressing the **Options** soft key or **i** key, you can use the following options:

Edit: allows you to edit the number and dial it or save it in Phonebook.

Delete: deletes the call from the list.

Call records

Delete all *(Menu 2.4)*

This menu allows you to delete all of the records in each call type separately. You can also delete all of your call records at one time.

1. To	Press the
select a call log type to clear	Up or Down key. To delete all of your call records, select All calls .
place or remove a check mark	i key.

2. Press the **Delete** soft key to delete the marked records.
3. When a confirmation message displays, press the **Yes** soft key or **i** key to confirm.
4. When the phone asks for confirmation again, press the **Yes** soft key or **i** key.

Call time *(Menu 2.5)*

This menu lets you view the timers for calls you made and received.

Note: The actual time invoiced by your service provider may vary, depending on network features, rounding-off for billing purposes, and so on.

The following options are available:

Last call time: length of the last call.

Total sent: total length of all calls you have made since the timer was last reset.

Total received: total length of all calls you have received since the timer was last reset.

Reset timers: option used to reset the call timers. You must first enter the phone password and then press the **OK** soft key or **i** key.

Note: The password is preset to "00000000." To change this password, see page 157.

Call records

Call costs *(Menu 2.6)*

This network feature lets you view the cost of calls. This menu may not be available, depending on your SIM card.

The following options are available:

Last call cost: cost of the last call you made.

Total cost: total cost of all calls you have made since the cost counter was last reset. If the total cost exceeds the maximum cost set in the **Set max cost** menu, you can no longer make any calls until you reset the counter.

Max Cost: maximum cost set in the **Set max cost** menu.

Reset counters: option used to reset the cost counter. You must first enter your PIN2 (see page 167) and then press the **OK** soft key or **i** key.

Set max cost: option used to enter the maximum cost that you authorise for your calls. You must first enter your PIN2 (see page 167) and then press the **OK** soft key or **i** key.

Price/Unit: option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls. You must first enter your PIN2 (see page 167) and then press the **OK** soft key or **i** key.



Network services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting *(Menu 3.1)*

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

You can use the following options to divert voice calls and/or data calls:

Divert always: all calls are diverted.

Busy: calls are diverted when you are already on another call.

No reply: calls are diverted when you do not answer the phone.

Unreachable: calls are diverted when you are not in an area covered by your service provider or when your phone is switched off.

Cancel all: all of the call diverting options are cancelled.

To set your call diverting options:

1. Select a call diverting option by pressing the Up or Down key, and then press the **Select** soft key or **i** key.

Network services

2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key or **i** key.

The current status displays. If the option has already been set, the number to which the calls are diverted displays.

3. If you selected **No reply** in step 1, select the length of time the network waits before diverting a call and press the **Select** soft key or **i** key.

4. To	Press the
activate call diverting	Activate soft key or i key. Go to step 4.
change the number to be called	Change soft key or i key. Go to step 4.
deactivate call diverting	Remove soft key.

5. Enter the number to which the calls are to be diverted and press the **OK** soft key or **i** key.

To enter an international code, press the **0** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

You can deactivate all call diverting settings by selecting **Cancel all**.

Call barring *(Menu 3.2)*

The call barring network service allows you to restrict your calls.

You can use the following options to restrict voice calls and/or data calls:

All outgoing: calls cannot be made.

International: international calls cannot be made.

International except to home: when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.

All incoming: calls cannot be received.

Incoming while abroad: calls cannot be received when you are using your phone outside of your home country.

Cancel all: all call barring settings are deactivated; calls can be made and received normally.

To set your call barring options:

1. Select a call barring option by pressing the Up or Down key, and then press the **Select** soft key or **i** key.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key or **i** key



Network services

3. Press the **Activate** soft key or **ⓘ** key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

To deactivate specific call barring settings:

1. Select the call barring option to be deactivated.
2. Select the type of calls to which this option applies.
3. Press the **Deactivate** soft key or **ⓘ** key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

You can also deactivate all call barring settings by selecting **Cancel all**.

Change barring password: you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

Call waiting *(Menu 3.3)*

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, voice or data, to which you want to apply the call waiting option by pressing the Up or Down key, and then press the **Select** soft key or **i** key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key, or **i** key respectively.

You can also deactivate all call waiting settings by selecting **Cancel all**.

Network selection *(Menu 3.4)*

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

Network services

To automatically or manually select the network to be used when roaming:

1. Press the Up or Down key until the appropriate option highlights and then press the **OK** soft key or **↵** key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, go to step 2.

2. Press the Up or Down key until the network you want highlights and then press the **OK** soft key or **↵** key.

The phone will scan for that network and you will be connected.

Caller ID *(Menu 3.5)*

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available:

Default: the default setting provided by the network is used.

Hide number: your number does not display on the other person's phone.

Send number: your number is sent each time you make a call.

Closed user group (CUG) *(Menu 3.6)*

Closed User Group (CUG) is a network service which allows incoming and outgoing calls to be restricted to a selected user group. You can create up to ten user groups.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

For details on how to create and use a closed user group, contact your service provider.

When you select the **Closed user group** menu, you can enter the CUG function. You can access the following options:

Index list: lets you list, add, or delete CUG index numbers.

Add a new CUG index as advised by your service provider or delete a group.

To	Press the
scroll through existing CUG indexes	Up or Down key.
add a new CUG index	Options soft key or i key, select the Add option, and enter the index.
delete a CUG index	Options soft key or i key and select the Delete option.
activate a CUG index	Options soft key or i key and select the Activate option.

Network services

Outside access: lets you enable or disable calls to numbers other than those in the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

Default group: you may set a default CUG with your service provider. If you have done so, you can enable the **Default group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Deactivate: deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

Band selection *(Menu 3.7)*

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of the following types of networks:

- Combined GSM 900/1800
- GSM 1900

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you must remember to change to an appropriate band.

1. Press the Up or Down key until the appropriate option highlights and press the **OK** soft key or **i** key.
2. When the display confirms the network band you selected, press the **Yes** soft key or **i** key.

To cancel the selection, press the **No** soft key.

Network services

When you select a new band, your phone displays a confirmation message and then automatically searches for all available networks. Your phone registers with a preferred network within the band.



Sound settings

You can use the Sound Settings feature to customise various settings, such as the:

- ring melody, volume, and type.
- sounds made when you press a key, receive a message, open/close the phone, or switch on/off your phone.
- alert tone made every minute during a call, when you make an error, or when your call is connected to the system.

Note: When the phone is in Silent mode (see page 30), you cannot change the sound settings.

Ringtone *(Menu 4.1)*

This menu allows you to select a ring melody.

You can choose between many different melodies. If you have downloaded sounds from the Internet or the optional EasyGPRS programme, you can use them in this menu.

Ring volume *(Menu 4.2)*

This menu allows you to adjust the ring volume to one of five levels.

Use the Up and Down keys or the Volume keys on the left side of the phone to increase or decrease the volume.

Alert type *(Menu 4.3)*

This menu allows you to specify how you are to be informed of incoming calls.

The following options are available:

Light only: the service light flashes; the phone neither rings nor vibrates.

Melody: the phone rings using the selected ring tone or alarm melody.

Vibration: the phone vibrates but does not ring.

Vibra+Melody: the phone first vibrates three times and then starts ringing.

Keypad tone *(Menu 4.4)*

This menu allows you to select the tone that the phone sounds when you press a key.

To turn off the sound, select **Off**.

Message tone *(Menu 4.5)*

This menu allows you to select how the phone informs you that a new message has been received.

SMS tone *(Menu 4.5.1)*

The following options are available for alerting you to new SMS messages:

Off: the phone does not use an SMS tone.

Light only: the service light flashes.

Sound settings

Vibration: the phone vibrates.

Single beep: the phone beeps once.

SMS tone x: the phone uses one of several SMS tones.

SMS-CB tone *(Menu 4.5.2)*

The following options are available for alerting you to new cell broadcast messages:

Off: the phone does not use a CB tone.

Light only: the service light flashes.

Vibration: the phone vibrates.

Single beep: the phone beeps once.

SMS-CB tone x: the phone uses one of several CB tones.

MMS tone *(Menu 4.5.3)*

The following options are available for alerting you to new multimedia messages:

Off: the phone does not use an MMS tone.

Light only: the service light flashes.

Vibration: the phone vibrates.

Single beep: the phone beeps once.

MMS tone x: the phone uses one of several MMS tones.

Folder tone *(Menu 4.6)*

This menu allows you to select the tone that the phone sounds when you open or close the folder.

To turn off the sound, select **Off**.

Power on/off *(Menu 4.7)*

This menu allows you to select the melody that the phone sounds when it is switched on and off.

To turn off the sound, select **Off**.

Alert on call *(Menu 4.8)*

This menu allows you to choose whether or not the phone informs you when you receive a new message or when the time for an alarm comes during a call.

The following options are available:

Off: the phone doesn't actively alert you to incoming messages or alarms. It only displays the corresponding notification.

On: the phone alerts you with a beep and displays the corresponding notification.

Sound settings

Extra tones *(Menu 4.9)*

You can customise additional tones for the phone.

To turn a given tone	Press the
on	Mark soft key or i key. A check mark displays in front of the option.
off	Unmark soft key or i key. The check mark no longer displays.

The following options are available:

Error tone: sets whether or not the phone informs you when you make a mistake.

Minute minder: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.

Connect tone: sets whether or not your phone beeps when your call is connected to the system.




Messages

Using the **Messages** menu, you can use various message features, such as:

- short text messages
- multimedia messages
- WAP push messages
- voice mail
- cell broadcast messages

Text message *(Menu 5.1)*

Short Message Service (SMS) allows you to send and receive short text messages to and from other GSM mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Text Message icon () appears, you have received new text messages. If the memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in each message box to delete the obsolete ones.

Messages

Create (Menu 5.1.1)

In this menu, you can write and send a text message.

Note: When you add media objects to a message, the number of characters you can enter decreases.

Creating a Simple Text Message

1. Create your message.

Note: For further details about entering characters, see page 48.

2. When you finish entering the message, press the **Options** soft key or **i** key. The following options are available:
 - **Send only:** allows you to send the message. The message is deleted after sending.
 - **Save and send:** allows you to save a copy of the message and then send the message. You can read the message in your Outbox.
 - **Save only:** allows you to save the message so that it can be sent later. You can read the message in your Outbox.
 - For further details about **Text formatting**, **Add content**, **Add templates**, **Add from phonebook**, **Add from bookmarks**, and **Language** options, see page 91.
3. Select **Send only** or **Save and send**, and press the **Select** soft key or **i** key.

If you want to just save the message, select **Save only**. After saving the message, the phone returns to the **Text message** menu screen.
4. If you select a save option, choose the memory location and press the **OK** soft key or **i** key.

5. Enter a destination number and press the **OK** soft key or **i** key.

The message is sent.

Note: When the phone fails to send the message, it asks you if you want to retry. Press the **Yes** soft key or **i** key to confirm. Otherwise, press the **No** soft key to return to the Create screen.

Creating a Text Message Using Options

1. Create a message.
2. Press the **Options** soft key or **i** key.
3. Select one of the following options by using the Up and Down keys and pressing the **Select** soft key or **i** key:

- **Text formatting:** allows you to format the style of the text.

For the **Size** attribute, **Small**, **Normal**, and **Large** sizes are available. For the **Bold**, **Italic**, **Underline**, and **Strikethrough** attributes, select **On** or **Off**.

These attributes can be combined.

- **Add content:** allows you to add a sound, melody, picture, or animated image to the message. Select the category of the object to be added. In each category, you can select from the various factory-set items or choose an item received from other sources, such as the Internet or other phones.
- **Add templates:** allows you to apply one of the preset message templates to the text. Select one of five items stored in the **Templates** box (**Menu 5.1.4**). For further details, see page 94.

Messages

- **Add from phonebook:** allows you to add a Phonebook entry to your message. Select one from the list.
 - **Add from bookmarks:** allows you to add a web page's address stored in your Bookmarks list (**Menu 6.1.2**). Select one from the list.
 - **Language:** allows you to change the language to be used in T9 input mode. Select the language you want to use.
4. Complete the message, and send or save it by following the procedure from step 2 on page 90.

Inbox (*Menu 5.1.2*)

This message box is used to store messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Phonebook.

1. Select a message from the list and press the **View** soft key or **i** key to read the message contents.
2. To scroll through the contents, press the Up or Down key.
3. To scroll to the previous or next message, press the ***** or **#** key.

While reading a message, you can choose the following options by pressing the **Options** soft key or **i** key:

Delete: allows you to delete the message.

Send: allows you to send/resend the message. For further details, see page 90.

Text reply: allows you to send a reply to the sender by sending a text message.

Call back: allows you to call the sender.

Save address: allows you to extract the sender's number and URL, e-mail addresses, or phone numbers from the message text.

Move to Phone: allows you to move the message from the SIM card to the phone's memory. This option is only available when you select a message stored in the SIM card.

Move to SIM: allows you to move the message from the phone's memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Select content: allows you to save media contents, such as sounds or images, from the message into your phone. You can use the contents when writing a message. For details, see page 91.

Outbox *(Menu 5.1.3)*

This message box is used to store messages that you have sent or will send.

When you access this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

1. Select a message from the list and press the **View** soft key or **i** key to read the message contents.
2. To scroll through the contents, press the Up or Down key.
3. To scroll to the previous or next message, press the * or # key.

Messages

While reading a message, you can choose the following options by pressing the **Options** soft key or **i** key:

Delete: allows you to delete the message.

Send: allows you to send/resend the message. For further details, see page 90.

Save address: allows you to extract the destination number and URL, e-mail addresses, or phone numbers from the message text.

Move to Phone: allows you to move the message from the SIM card to the phone's memory. This option is only available when you select a message stored in the SIM card.

Move to SIM: allows you to move the message from the phone's memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Select content: allows you to save media contents, such as sounds or images, from the message into your phone. You can use the contents when writing a message. For details, see page 91.

Templates *(Menu 5.1.4)*

Using this menu, you can preset a maximum of five messages that you use most frequently.

Select an empty location or the message template you want and press the **Options** soft key or **i** key.

The following options are available:

Edit: allows you to write a new message template or edit an existing message template.

Note: For further details about how to enter characters, see page 48.

Send: allows you to retrieve the message templates. Once you have completed the message, you can send, save and send, or simply save it. For further details about how to send a message, see page 90.

Delete: allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key or **i** key.

Settings *(Menu 5.1.5)*

In this menu, you can set up default SMS/EMS information. A setting group is a collection of settings required to send text messages. The number of setting groups available depends on the capacity of your SIM card.

Notes:

- The setting options available in this menu may vary, depending on your service provider.
- The last setting you accessed is automatically activated for sending subsequent messages.

Setting x (where **x** is the setting group number): each group has its own sub-menu.

Setting name: allows you to give a name to the setting group currently being defined.

Service centre: allows you to store or change the number of your message centre, which is required when sending messages. You must obtain this number from your service provider.

Default destination: allows you to store a default destination number. The number automatically displays on the Destination screen when you create a message.

Messages

Default type: allows you to set the default message type to **Text**, **Fax**, **Email**, or **Paging**. The network can convert the messages into the selected format.

Validity period: allows you to set the length of time your text messages are stored in the message centre while attempts are made to deliver them.

Common setting: The following options are available:

Reply path: allows the recipient of your message to send you a reply through your message centre, if your network supports this service.

Delivery reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer selection: allows you to choose either **GSM** or **GPRS**, depending on your network.

Character support: allows you to choose a character type from **GSM-Alphabet**, **Uni-Code**, or **Automatic**.

If you select **Uni-Code** and your recipient's phone does not support it, your recipient may not be able to read your message.

Multimedia message *(Menu 5.2)*

This menu allows you to use the Multimedia Message Service.

Multimedia Message Service (MMS) is a messaging service very similar to Short Message Service (SMS). It provides automatic and immediate delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. An MMS message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the MMS feature, your phone can receive and send multimedia messages that contain multimedia files, such as photos, sounds, and images you downloaded from the Internet, and voice memos you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.

Messages

Create (Menu 5.2.1)

This menu allows you to create a new multimedia message and then send it to multiple destinations.



Creating and Sending a Multimedia Message

1. Enter the subject of your message and press the **Next** soft key or **⏏** key.


For further details about entering characters, see page 48.

2. When **Add here** highlights, press the **Options** soft key or **⏏** key and add the message contents using one of the following options:

- **Add text:** enter the message text and press the **OK** soft key or **⏏** key.
- **Add photo:** allows you to add a photo you took using the camera on your phone. Select **Take photos** to take a new photo, or **Select photos** to add one of the photos stored in the phone's memory. For further details about using the camera, see page 126.
- **Add picture:** allows you to add a picture stored in the **Images** folder (**Menu 6.4**). You may not be able to add some downloaded images if they are not in the correct format.
- **Add sound:** allows you to add a sound file. Select **Record voice** to record a new voice memo, or select **Voice list** or **Sounds list** to add one of the sounds in the phone's memory. You may not be able to add some downloaded sounds if they are not in the correct format.
- **Send:** allows you to send the message. Use this option when you finish creating the message.

- **Save:** saves the message in the **Draft (Menu 5.2.4)** or **Templates (Menu 5.2.5)** box for later use. For further details, see page 106.
- **Settings:** allows you to change the message settings. For further details about each setting option, see page 107. After changing the settings, you need to press the  soft key or **C** key to go back to the Options screen.
- **Add destination:** allows you to enter destination numbers or addresses. See steps 6 to 11. After adding them, you need to press the  soft key or **C** key to go back to the Options screen.
- **Preview:** shows your message as it will display on the recipient's phone.

Note: You can add text, an image, and a sound once for each page.


3. Repeat step 2 until you have finished creating your message.
4. If you want to change the added items, press the Up or Down key to highlight one and press the **Options** soft key or  key to display the Options list.

Note: Available options are different depending on whether the item you select on the message screen is text, an image, a sound or the Page field.

The following options are available:


- **Edit text/picture/sound:** allows you to change the text or replace the image or sound with another one.

Messages

- **Add page:** allows you to add up to five pages. After you add a page, the display shows you the current page number and memory space used for the page. You can move to each page using the Left or Right key on the message screen.
 - **Delete:** deletes the item from your message.
 - **Duration:** allows you to set when and how long text, an image, a sound, or a page displays on the message presentation screen. If the duration you set is shorter than the content duration, for example the length of a video or sound clip for a particular page, the content duration is automatically decreased.
 - **Send:** allows you to send the message.
 - **Save:** saves the message in the **Draft (Menu 5.2.4)** or **Templates (Menu 5.2.5)** box for later use. For further details, see page 106.
 - **Settings:** allows you to change the message settings. For further details about each setting option, see page 107.
 - **Add destination:** allows you to enter destination numbers or addresses. See steps 6 to 11. After adding them, you need to press the  soft key or **C** key to go back to the Options screen.
5. When you have finished creating the message, choose **Send** and press the **Select** soft key or **i** key.
 6. Select a destination type (**To**, **Cc** or **Bcc**) and press the **Select** soft key or **i** key.



7. Choose one of the following options and press the **Select** soft key or **i** key:
 - **Phone number**: allows you to enter the phone number you want.
 - **E-mail**: allows you to enter the e-mail address of the recipient.
 - **Phonebook**: allows you to retrieve a number from your Phonebook.
8. Enter a number or an e-mail address, or select a number from Phonebook.
9. When the correct number or address displays, press the **OK** soft key or **i** key.
10. To add a destination, choose **Add destination** and press the **Select** soft key or **i** key. Repeat from step 7.

If you want to edit the destinations, select one and press the **Select** soft key or **i** key. You can change or delete it.
11. To enter additional numbers or addresses to the other destination types, press the  soft key or **C** key and repeat steps 6 through 10.


You can enter up to 10 destinations each for **To**, **Cc**, and **Bcc**.
12. When you have finished entering the destinations, press the **Select** soft key or **i** key when **Send message** highlights.

Your phone sends the message.

Messages

Inbox (Menu 5.2.2)

Viewing a Message When You Receive it

When a new multimedia message comes in, the display shows the MMS Message icon () and a text notification along with the message subject.

1. Press the **View** soft key or **i** key to view brief information about the message, such as the sender's number, the message size and the subject.

If you want to view the message later in the Inbox, press the **Exit** soft key or **C** key.


2. To scroll through the message information, press the Up or Down key.

You can use the following options by pressing the **Options** soft key or **i** key:

- **Retrieve**: retrieves the message from the MMS server.
- **Delete**: deletes the message.
- **More properties**: shows you detailed information about the message.






3. To read the message, choose **Retrieve** and press the **Select** soft key or **i** key.

Your phone retrieves the message contents from the server and displays it.

4. To scroll through the message, press the Up or Down key.
5. When you are finished, press the  key.

Viewing a Message form the Inbox

When you access the **Inbox** menu (**Menu 5.2.2**), the list of multimedia messages you have received displays with the senders' phone numbers, if they are available in your Phonebook, or subjects. The icons on the left tell you the status of the messages:

- : Messages that have been opened.
- : Messages you requested from to the MMS server.
- : Messages the phone is retrieving from the MMS server.
- : Messages the phone couldn't retrieve.
- : Messages that are unopened.

1. Select a message on the list and press the **View** soft key or **i** key.

The message displays and scrolls to the next page, if it has one, after a specified time.

2. Press the **OK** soft key or **i** key to go to the message view screen.

Or, the display automatically switches to the screen after a few seconds.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

While viewing a message, you can choose the Message options by pressing the **Options** soft key or **i** key.

Messages

If you are viewing a new message, the options are the same as when you view a message at the time of its receipt. See page 102.

When you are reviewing a message retrieved from the MMS server, the following options are available:

Delete: deletes the message.

Reply: allows you to reply to the sender by sending a text or multimedia message.

Callback: allows you to call the sender.

Save address: allows you to extract the sender's number or e-mail address and URL, e-mail addresses, or phone numbers from the message text.

Forward: allows you to forward the message to another person. When the message contains media contents locked by your service provider, this option is not available.






Save picture: allows you to save an image from the message into your phone. Pictures are stored in the **Images** folder (**Menu 6.4**).

Save sound: allows you to save a sound from the message into the **Sounds** folder (**Menu 6.3**).

Properties: shows you information about the message, such as the message status, subject, sender's e-mail address or phone number, message size, priority, and the time and date the message was received.

Outbox (Menu 5.2.3)

When you access this menu, the list of the multimedia messages you have sent or saved displays. The icons on the left tell you the status of the messages.

- : Messages currently being sent
 - : Messages sent
 - : Messages your phone couldn't send
 - : Messages to be sent
 - : Messages deferred
1. Select a message on the list and press the **View** soft key or **i** key.

The message displays and scrolls to the next page, if it has one, after a specified time.

2. Press the **OK** soft key or **i** key to go to the message view screen.

Or, the display automatically switches to the screen after a few seconds.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

Messages

While viewing a message, you can choose the following options by pressing the **Options** soft key or **i** key:

Delete: deletes the message.

Save address: allows you to extract the destination numbers or e-mail addresses and URL, e-mail addresses, or phone numbers from the message text.

Send: allows you to send/resend the message.

Edit: allows you to change the message contents, sound, picture, or text.

Properties: shows you information about the message, such as the message status, subject, sender and recipients' e-mail addresses or phone numbers, message size, and the time and date the message was sent.

Draft *(Menu 5.2.4)*


After creating a multimedia message, you can store it in this message box for later sending.

For further details about viewing a message, see "Outbox" on page 105.

Templates *(Menu 5.2.5)*

This menu stores messages you saved as templates so that you can use them to make new messages.

1. Scroll through the template list using the Up or Down key.
2. When the message template you want highlights, press the **View** soft key or **i** key.

3. Press the **OK** soft key or **z** key to use the following options, or the display automatically shows the options after a specified time:
 - **Edit**: allows you to send a message using the template. For further details about how to send a message, see page 98.
 - **Delete**: allows you to delete the message template. You are asked to confirm the deletion by pressing the **Yes** soft key or **z** key.
4. Press the  key to return to Idle mode.

Settings *(Menu 5.2.6)*

You can change the default settings for sending or receiving multimedia messages.

The following options are available:

Delivery report: when this option is enabled, the network informs you whether or not your message has been delivered.

Read reply: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

Auto download: you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications.

Off: you need to manually download new messages by using the **Retrieve** option.

On: the phone automatically retrieves new messages from the server. As soon as you receive a message you can use more options while you are reading. See page 104 for details about the options.

Messages

Off when roaming: the phone automatically downloads new messages unless you are roaming on another network or in another country.

Message acceptance: you can specify the category of messages you want to receive.

Hide ID: when this option is enabled, your phone number does not display on the recipient's phone.

Validity period: you can select the length of time your messages are stored in the message centre after they are sent.

Delivery time: you can set a delay time before the phone sends your messages.

Priority: you can select the priority level of your messages.

Report allowed: when this option is enabled, the sender of an incoming message receives a delivery report from the network.

Page duration: you can set the length of time one page of an outgoing message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.

MMS profile *(Menu 5.2.7)0*

In this menu, you can configure various network settings that are required when you send or receive multimedia messages.

Notes:

- The last profile you accessed is automatically activated for sending subsequent messages.
- If you change the MMS settings without first checking with your service provider, the MMS feature may not work properly.
- The availability of the setting options may vary depending on your country.

The following options are available for each profile:

Profile name: enter a name that you wish to assign to the MMS server.

Connection URL: enter the address of your MMS server.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-secure**.

IP address: enter the gateway address required to connect to the MMS server.

User name: enter the user ID required to connect to the MMS server.

Password: enter the password required to connect to the MMS server.

APN: enter the access point name used for the address of the MMS server.

For further details, contact your service provider.

Messages

Push messages *(Menu 5.3)*

In this menu, you can receive and access web messages from the server.

The following options are available:

Inbox: allows you to read the messages received from the web server.

Receive: allows you to set whether or not your phone receives web messages. Select **Always** to receive web messages, or **Never** to reject web messages.

Delete all: allows you to delete all of the web messages.

Delete all *(Menu 5.4)*

This menu allows you to delete all of the messages in each message box separately. You can also delete all of your messages at one time.

1. Select a message type and press the **Select** soft key or **i** key.

2. To	Press the
select a message box to clear	Up or Down key. To delete all of your messages, select All messages .
place or remove a check mark	i key.

3. Press the **Delete** soft key to delete the marked messages.

4. When a confirmation message displays, press the **Yes** soft key or **↓** key to confirm.
5. When the display asks for confirmation again, press the **Yes** soft key or **↓** key.

Voice mail *(Menu 5.5)*

This menu allows you to access your voice mail box, if your network supports this service.

The following options are available:

Connect to voice server: before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **OK** soft key or **↓** key to listen to your messages.

You can quickly connect to the voice server by pressing and holding the **1** key in Idle mode.

Voice server number: allows you to change the voice mail server number, if necessary.

Note: Voice Mail is a network feature. Please contact your service provider for further details.



Messages

Broadcast messages *(Menu 5.6)*

This network service allows you to receive text messages on various topics, such as the weather or traffic. Cell Broadcast (CB) messages display as soon as they are received, provided that:

- the phone is in Idle mode.
- the **Receive** option is set to **Enable**.
- the message channel is currently active on the channel list.

The following options are available:

Read: lets you view the received messages.

The **Volatile** box displays messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message by using the Up and Down keys.

You can save a CB message in the **Archive** box for later retrieval. When a text notification appears, press the **Options** soft key or **⌵** key and select **Save**.

Receive: allows you to enable or disable the reception of broadcast messages.

Channel list: allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:

Select: use to enable or disable channels on the list by marking or unmarking them, respectively. A check mark displays in front of each selected channel.

Add channel: use to enter the ID and title for a new channel.

Delete: use to remove a channel from the list.

Edit: use to change the ID and title of an existing channel.

Language: allows you to select your preferred language in which to display cell broadcast messages.

Please contact your service provider for further details.

Memory status *(Menu 5.7)*

You can check the amount of memory being used and the amount remaining for messages.

The following options are available:

Text messages: shows the number of messages currently stored and the total number of messages you can store in the SIM, Phone, and Broadcast memories. Press the Up or Down key to scroll through the screen.

Multimedia messages: shows the total space, including free and used space, and how much space is currently occupied by each message box. Press the Up or Down key to scroll through the screen.



Funbox

The **Funbox** menu contains several fun options.

WAP browser *(Menu 6.1)*

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.


Home *(Menu 6.1.1)*

Selecting this menu connects the phone to the network and loads the homepage of the Wireless Web service provider. You can also press the **i** key in Idle mode.

The contents of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

Note: To access the startup homepage from any other screen in the WAP browser, use the **Home** option. For further details about the WAP Browser menu options, see page 116.

Exiting the WAP Browser

To exit the browser at any time, simply press and hold the  key.

Navigating the WAP Browser

To	Press the
scroll through and select browser items	Up or Down key. Press the i key, or press the Options soft key and then choose Select .
select a numbered item	corresponding number key.
return to the previous page	C key, or press the Options soft key and then select Back .
access the Bookmarks list	Menu soft key and select Bookmarks . See page 118.
return to the startup homepage	Menu soft key and select Home . For further details about this option, see page 116.

Entering Text in the WAP Browser

When you are prompted to enter text, the current text input mode is indicated on the screen. To change the text input mode, press the **i** key one or more times.

The following modes are available:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Note: You can also enter special characters in Upper-case or Lower-case Character mode. For details about available characters, see page 52.

Funbox

T9 mode (T9): allows you to enter English characters by pressing one key per letter. In this mode, you can use only the **0** key to display alternative words. To change case, press the ***** key.

Number mode (1): allows you to enter numbers.

Selecting and Using Browser Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option:

1. Press the **Menu** soft key.
A menu list displays.
2. Highlight a menu by pressing the Up or Down key.
3. Select an option by pressing the **Select** soft key or **i** key.
4. If necessary, select a secondary option using the Up and Down keys, and press the **Select** soft key or **i** key to confirm.

Note: The menus may vary, depending on your version of the WAP browser.

The following options are available:

Bookmarks: shows the bookmark list. You can bookmark the current web page or access one of bookmarked pages.

Reload: reloads the current page.

Home: takes you back at any time to the home page of the Wireless Web service provider.

Go to URL: allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** soft key or **i** key to go there directly.

Show URL: displays the URL address of the Web page to which you are currently connected to. It also enables you to set the current site as the startup home page.

To	Press the
set the current page as your startup home page	Option soft key or i key and select the Save to home option.
set a bookmark for the current page	Option soft key or i key and select the Save to bookmark option.
cancel your setting	Back soft key or C key.

Clear cache: deletes the information stored in the cache, which stores the most recently accessed Web pages.

Security info: shows security information when you access the Wireless Web with the secured WAP setting activated.

Inbox: allows you to read messages received from the web server.

Show images: shows the images on the current web page in order. Press the **Next** soft key or **i** key to view the next images.



Bookmarks *(Menu 6.1.2)*

This menu allows you to store the URL addresses of up to 16 of your favourite web sites.

To store your favourite web site:

1. Select an empty location and press the **Options** soft key or **i** key.
2. Enter the address you want to store and press the **Enter** soft key or **i** key.

For further details about how to enter characters, see page 48.

3. Enter a name for the item and press the **Enter** soft key or **i** key.

Once you have stored an item, you can use the following options when you press the **Options** soft key or **i** key:

Go to URL: takes you to the corresponding web site.

Edit: allows you to change the address and the name of the item.

Delete: allows you to delete the item.

Http:// *(Menu 6.1.3)*

This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about how to enter characters, see page 48.

WAP profiles *(Menu 6.1.4)*

This menu allows you to set up five proxy servers for the WAP browser. Contact your service provider for details about your WAP profile options.

Note: The availability of the setting options may vary, depending on your country.

For each server, the following options are available:

Profile name: enter a name that you wish to assign to the HTTP proxy server.

Homepage URL: set the address of your startup homepage. When the default homepage displays, you can delete it using the **C** key and enter your own choice.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-secure**.

Bearer: select a bearer to be used for each type of network address accessed; **GPRS** or **Data**.

The remaining options depend on the Bearer setting.

When the bearer is set to **GPRS**:

IP address: enter the WAP gateway address required to connect to the Internet.

User name: enter the user ID required to connect to the GPRS network.

Password: enter the password required to connect to the GPRS network.

APN: enter the access point name used for the address of the GPRS network gateway.

Funbox

When the bearer is set to **Data**:

IP address: enter the WAP gateway address required to connect to the Internet.

Login name: enter the PPP server login ID.

Password: enter the PPP server password.

Dial-up number: enter the PPP server phone number.

Data call type: select a data call type; **Analogue** or **ISDN**.

Note: The WAP browser settings may vary, depending on the service provider. Contact your service provider for further details.

Clear cache *(Menu 6.1.5)*

You can clear the information stored in the cache, the phone's temporary memory in which the most recently accessed Web pages are stored.

Press the **Yes** soft key or **↓** key to confirm the deletion. Otherwise, press the **No** soft key.

Games *(Menu 6.2)*

You can enjoy downloaded Java applications or download applications from the web site provided by your service provider. You can also change the DNS setting required for accessing Java services, if necessary.

Note: Java services may not be available depending on your service provider.

When you access the **Games** menu, the list of the default games appears. Once you have downloaded games, they are added to the list.

Launching a MIDlet

Note: The following procedure is for the default games. For downloaded games, the procedure may be different.

1. Scroll to the MIDlet you want on the Games list and press the **i** key.
2. On the startup screen of the MIDlet, scroll to an option using the Navigation keys or the **2** and **8** keys.


The following options are available:

- **START GAME:** starts a new game.
- **CONTINUE:** allows you to continue the last game you were playing.
- **HIGH SCORE:** shows the high score table. This option may not be available for some games.
- **HOW TO PLAY:** shows how to play the game and the key functions for the game.

Funbox

- **OPTION**: allows you to switch the game sound on or off.

3. Press the **5** key or **i** key to confirm your selection.

While you are playing a game, to	Press the
adjust the sound volume	Volume keys.
stop the game and return to the startup screen	C key.
exit the game	 key.


To view MIDlet information:

1. Scroll to the MIDlet you want on the Games list and press the **Info** soft key.

The display shows information about the MIDlet, such as the file size, application version, and its vendor.

2. If you want to delete the MIDlet, press the **Delete** soft key or **i** key and then press the **Yes** soft key or **i** key to confirm the deletion.

Note: When you select default games from the list, the **Delete** option is not available.

3. To exit and return to the Games list, press the  soft key.

Entering Text

If you need to enter text while using a MIDlet, you can use the following input modes:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Number mode (1): allows you to enter numbers.

Symbol mode: allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the **OK** soft key or **i** key to insert it.

T9 mode (T9): allows you to enter English characters by pressing one key per letter. In this mode, you can change the case by pressing the **0** key. For more information about using T9 mode, see page 50.

To change the text input mode, press the ***** key until the appropriate indicator appears.

Changing the DNS Settings

The DNS (Domain Name Server) is the server that assigns the Java server domain name to an IP address. The DNS setting is preset at the factory, but sometimes you may need to change it at your service provider's instructions.

1. Scroll to **Setting** on the Games list and press the **Select** soft key or **i** key.
2. Enter the primary address using the number keypad and press the **OK** soft key or **i** key.
3. Enter the secondary address and press the **OK** soft key or **i** key.

Sounds *(Menu 6.3)*

In this menu, you can listen to the sounds downloaded or received in multimedia messages. You can set the downloaded sounds as the current ring tone.

Scroll to the sound you want on the Sounds list and press the **Play** soft key or **i** key.

By pressing the **Options** soft key or **i** key, you can use the following options:

Rename: allows you to change the name of the sound.

Delete: deletes the sound.

Set as ringtone: sets the sound as your ring tone.

Images *(Menu 6.4)*

In this menu, you can view the images downloaded or received in messages. You can set the downloaded pictures as the current background image. If you set a photo as your wallpaper for the main or external display, it is designated as **My photo** or **My baby photo** on the list.

Scroll to the image you want on the Images list and press the **View** soft key or **i** key.

By pressing the **Options** soft key or **i** key you can use the following options:

Rename: allows you to change the name of the image.

Delete: deletes the image.

Set as wallpaper: sets the image as your wallpaper for the main or external display.

Delete all *(Menu 6.5)*

This menu allows you to delete all of the downloaded contents in the **Games**, **Sounds** and **Images** folders separately. You can delete all of the contents at one time.

1. To	Press the
select a folder to clear	Up or Down key. To delete all of your items, select All .
place or remove a check mark	i key.

2. Press the **Delete** soft key to delete the marked items.
3. When a confirmation message displays, press the **Yes** soft key or **i** key to confirm.
4. When the display asks for confirmation again, press the **Yes** soft key or **i** key.

Memory status *(Menu 6.6)*

You can check the amount of the memory being used and the memory remaining for games, sounds, and images.

The following options are available:

Games: When you select this option, you can view the total, used, and free memory, and also the number of games you have downloaded.

Sounds & images: When you select this option, you can view the total, used, and free memory, including the memory status used for objects in the **Sounds** and **Images** menus.



Organiser

The Organiser feature enables you to:

- set an alarm so that the phone rings at a specific time, for example to remind you of an appointment.
- view the calendar and organise your schedule.
- set the current time and date.
- define a list of things to do.
- record voice memos.
- use the phone as a calculator for basic mathematical equations or currency exchange operations.

Alarm *(Menu 7.1)*

This feature allows you to:

- set the alarm to ring at a specific time.
- set the phone to switch on automatically and ring the alarm, even if the phone is switched off.

The following options are available:

Once: the alarm rings only once and is then deactivated.

Daily: the alarm rings every day at the same time.

Morning call: the alarm rings to wake you up in the morning.

To set an alarm:


1. Choose the type of alarm to be set and press the **Select** soft key or **i** key.
2. Enter the time for the alarm to sound.

Note: Your phone is preset to a 24-hour format.
To change the format, see page 131.

If you want to use the alarm options, press the **Options** soft key. The following options are available:

- **Remove alarm:** deactivates the current alarm.
- **Alarm sound set:** allows you to select the alarm melody.

3. Press the **i** key.
4. If applicable, select **AM** or **PM** and press the **Select** soft key or **i** key.
5. If you select **Morning call** in step 1, choose the repeat option, **Monday to friday** or **Monday to saturday**, and press the **Select** soft key or **i** key.

To stop the alarm when it rings, press the **Exit** soft key, one of the Volume keys, **i** key, **C** key, or  key.

Remove alarm: deactivates all alarm settings.

Autopower: when this option is set to **Enable**, the alarm rings at the specified time, even if the phone is switched off.

If the option is set to **Disable** and the phone is switched off at the specified time, the alarm does not ring.

Calendar *(Menu 7.2)*

With the Calendar feature, you can:

- consult the calendar and check your memos.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder.

Consulting the Calendar

When you select the **Calendar** menu, today's date is automatically highlighted and the latest memo stored at that day displays at the bottom, if you have stored any memo. The following options are available when you press the **Options** soft key:

Search all: displays all of the memos, starting with the oldest, regardless of the day. To scroll through the memos, press the Up or Down key.

Delete all: allows you to delete all of the memos. You are asked to confirm your action.

Go to date: allows you to go to a specific date.

Exit: exits the Calendar feature and returns to Idle mode.

Writing a Memo

You can make up to 30 memos for the calendar.

To write or edit a memo on a specific date:

1. Select a date on the calendar, using the Navigation keys.

Note: To skip to the previous or next month, press the Volume keys on the left side of the phone.

2. Press the **i** key.

An empty memo screen displays allowing you to enter your memo.

3. Enter your memo and then press the **OK** soft key or **i** key.

Note: For further details about how to enter characters, see page 48.

You are asked if you wish to set an alarm.

4. If you want an alarm to ring on the chosen day, press the **i** key.

Otherwise, press the **Skip** soft key. The memo is saved and the display returns to the calendar.

5. If you pressed the **i** key at the previous step, enter the time for the alarm and press the **i** key.

Note: Your phone is preset to use 24-hour format. To change the format, see page 131.

You can also select the melody for the alarm by pressing the **Melody** soft key.

6. If applicable, select **AM** or **PM** and press the **Select** soft key or **i** key.

The colour of the date on the calendar changes to green to indicate that a memo exists for that date.

Viewing a Memo

When you select a day on which more than one memo exists, the latest memo for the day displays.

In that case, press the Up or Down key to scroll to the previous or next memo.

Press the **⌵** key to add a new memo for the day.

You can use the following options by pressing the **Options** soft key or **⌵** key:

New: allows you to write a new memo.

Edit: allows you to change the memo text.

Alarm: allows you to set an alarm to ring at a specified time to remind you of the memo. If you have set an alarm for that memo, you can change or delete the alarm.

Delete: deletes the memo.

Copy to: allows you to copy the memo to another date.

Move to: allows you to change the date of the memo.

Send via IrDA: allows you to send the memo to another phone via the IrDA port. For further details, see page 151.

Time & Date *(Menu 7.3)*

This menu allows you to change the current time and date displayed. You can also find out what time it is in another part of the world.

The following options are available:

Set time: allows you to enter the current time.

Note: Before setting the time, you must specify your time zone in the **World time** menu (**Menu 7.3.3**).

Set date: allows you to enter the day, month, and year.

World time: allows you to find out what time it is in another part of the world, using the Left and Right keys.

The screen shows the:

- city name.
- current time and date.
- time difference between the selected city and your city if you have set your local time; see below for further details.
- city selected as your time zone.

To select your time zone:

1. Select the city corresponding to your time zone by pressing the Left or Right key one or more times.

The local time and date display.

2. Press the **Set** soft key or **i** key.

Time format: allows you to change the time format to **12 hours** or **24 hours**.

Calculator *(Menu 7.4)*

With this feature, you can use the phone as a calculator. The calculator provides basic arithmetic functions: addition, subtraction, multiplication, and division.

1. Enter the first number using the numeric keys.

Notes:

- To delete mistakes or clear the display, press the **C** key.
- To include a decimal point or a bracket, press the left soft key until the symbol you want displays.

2. Enter the operation for your calculation by pressing the Navigation keys, according to the illustration on the display.
3. Enter the second number.
4. To view the result, press the **=** key.
5. Repeat steps 1 to 4 as many times, as required.

To do list *(Menu 7.5)*

This feature allows you to:

- enter a list of tasks to be done.
- assign a priority and a deadline to each task.
- sort the tasks by priority and status.

Creating the To do list

1. Press the **New** soft key or **i** key.




You can also press the **Options** soft key and press the **Select** soft key or **i** key when **New** is highlighted.

2. Enter the first task.

Note: For further details about how to enter characters, see page 48.

3. Press the **OK** soft key or **i** key.
 4. Select a priority level of high, normal, or low using the Up and Down keys and press the **Select** soft key or **i** key.
 5. Enter your deadline and press the **i** key.
- Otherwise, press the **Skip** soft key. The task is saved.

Editing the To do list

When you select the **To do list** menu the current contents display with the status mark, if the task has been done, and priority;  for High,  for Normal, and  for Low.

Organiser

You can use the following options:

Action	Procedures
View the details for a specific task	<ul style="list-style-type: none">① Highlight the task.② Press the i key.③ You can scroll through the task contents using the Up and Down keys, if necessary.
Change the status of a specific task	<ul style="list-style-type: none">① Highlight the task.② Press the * key to mark the task as completed as of the current time and date. or <ul style="list-style-type: none">① Highlight the task.② Press the Options soft key.③ Select the Mark option.④ Select the appropriate status (Done or Undo).
Create a new task	<ul style="list-style-type: none">① Press the Options soft key.② Select the New option.③ Enter the text, priority, and/or deadline for the task.
Edit an existing task	<ul style="list-style-type: none">① Highlight the task.② Press the Options soft key.③ Select the Edit option.④ Change the text, priority, and/or deadline for the task.
Sort the existing tasks by priority or status	<ul style="list-style-type: none">① Press the Options soft key.② Select the Sort option.③ Select the sort criterion (High, Low, Done, or Undo).

Action	Procedures
Copy a task	① Highlight the task. ② Press the Options soft key. ③ Select the Copy option. ④ Change the text, priority, and/or deadline for the task.
Copy a task to the calendar	① Highlight the task. ② Press the Options soft key. ③ Select the Copy to calendar option. ④ Change the text and deadline for the task, and set the alarm.
Delete a task	① Highlight the task. ② Press the Options soft key. ③ Select the Delete option.
Delete all tasks	① Press the Options soft key. ② Select the Delete all option. ③ Confirm the deletion by pressing the Yes soft key or i key. ④ Again confirm by pressing the Yes soft key or i key.
Exit the To Do list	① Press the Options soft key. ② Select the Exit option.

Voice memo *(Menu 7.6)*

In this menu, you can record voice memos. After recording, you can send a memo to other people via the Multimedia Message Service (MMS).

Record voice *(Menu 7.6.1)*

This menu allows you to record a new memo. When you select this menu, the display shows a 30-second timer.

1. To start recording, press the **Record** soft key or **i** key.
2. Record a memo by speaking into the microphone.
3. When you press the **Stop** soft key or **i** key, or if the recording time expires, the following options display:
 - **Replay**: plays back your memo.
 - **Re-record**: discards the memo and enables you to record another one.
 - **Save**: allows you to save the memo.
 - **Quit**: cancels your recording and exits the **Record voice** menu.
4. To save the memo, choose **Save** and press the **Select** soft key or **i** key.
5. Press the **C** key to clear the default name, if necessary, and enter a name for the memo.

For further details about how to enter characters, see page 48.

6. Press the **OK** soft key or **↓** key.

The memo is saved and then the display shows the memo information.

7. Press the **Options** soft key or **↓** key to use the following memo options:

- **Send**: allows you to send the memo to other people by using the MMS feature. Follow the procedure on page 98.
- **Rename**: allows you to change the memo's name.
- **Delete**: deletes the memo.

8. To exit, press the **Exit** soft key, **C** key, or **↶** key.

Voice list *(Menu 7.6.2)*

This menu shows a list of saved voice memos.

Scroll to a memo and press the **Options** soft key or **↓** key to use the following options:

Play: plays the memo.

Send: allows you to send the memo to other people by using the MMS feature. See page 98 for further details about sending a message.

Rename: allows you to change the memo's name.

Properties: displays information about the memo, such as the name, the date when the memo was made, recording duration, and memory size.

Delete: allows you to delete the memo.

Organiser

Delete all *(Menu 7.6.3)*

In this menu, you can delete all of your voice memos.

When the confirmation message appears, press the **Yes** soft key or **i** key. When the display asks for confirmation again, press the **Yes** soft key or **i** key.

Memory status *(Menu 7.6.4)*

You can check the amount of memory being used and the memory remaining for voice memos.

The display shows the total, free, and used memory, including the number of memos you recorded and the total number of memos you can record.

Currency exchange *(Menu 7.7)*

Using this menu, you can figure out currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key or **i** key.

You can insert a decimal point by pressing the **#** key.

2. Enter the amount to convert and press the **OK** soft key or **i** key.

The amount you entered and its equivalent value display.

3. Press the **S** soft key to exit the currency convertor.



Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in a multimedia message or set a wallpaper or caller ID image.

You can also record videos using your phone as a camcorder.

CAUTION:

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Take photos *(Menu 8.1)*

This menu allows you to take photos. Your camera produces JPEG photos.


You can take photos with the phone open or closed. When the phone is closed, you can use the external display.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Camera

Taking a Photo with the Phone Open

- 1. Accessing the **Take photos** menu turns the camera on. The image to be captured appears on the display.

You can also press and hold the Camera () key on the right side of the phone in Idle mode to turn on the camera.


- 2. Adjust the image by aiming the camera at the subject.

You can use the camera options by pressing the left soft key. See page 141.

Note: You can change the image settings or switch to other modes by using the keypad.
For details, see page 141.

- 3. Press the **i** key or Camera key to take the photo.
- 4. Press the **Save** soft key or **i** key.

To discard the photo, press the **Cancel** soft key.

5. To	Press the
use the photo options	Options soft key or i key. For details, see page 144.
return to Capture mode	Preview soft key or C key.
return to Idle mode	 key.

Using the Number Keys in Capture mode

You can use the number keys to customise your camera settings when you are in Capture mode.

key	Function
1	switches to Record mode. See page 145.
2	changes the image size.
3	changes the image quality.
4	changes the camera mode.
5	changes the colour tone or applies special effects to the photo.
6	removes white lines on the display.
7	selects a decorated frame.
8	sets the timer.
9	switches to the My photos menu (Menu 8.2).
0	turns on or off the flash.
Up/Down	zooms in or out the image.
Left/Right	adjusts the image brightness.
▲/▼	flips the image vertically or horizontally.

Using the Camera options

In Capture mode, you can access various options for the camera by pressing the left soft key.

The following options are available:

Effects: allows you to change the colour tone or apply special effects to the photo.

Camera

Frames: allows you to use a decorated frame. Select a frame from the list using the Navigation keys.

Mode: allows you to take a photo in various modes. Once you change the mode, its indicator appears at the top line of the display.

Normal shot: allows you to take a photo in the normal mode.

Multi-shot: allows you to take a series of action stills. Select the capture speed to **High speed** or **Normal speed** and the number of photos for the camera to take. When you press the **i** key or Camera key, the camera takes photos successively.

After taking photos, press the **Save all** soft key to save all of them or the **Save** soft key to save the selected one.

Night shot: allows you to take a photo of the best quality when it is dark.

Rotation: allows you to rotate the photo. You can see its mirror image or flip the photo vertically.

Self timer: allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press the **i** key or Camera key, the camera takes the photo after the specified time.

Settings: allows you to change the image settings.


Photo size: sets the image size to either **VGA(640x480)**, **QVGA(320x240)**, or **Mobile(176x144)**. The selected image size displays on the capture screen.

Photo quality: allows you to select the image quality from **Economy**, **Normal**, **Fine**, and **Super fine**. The selected quality displays on the capture screen.

Flash light: allows you to select the flash option, **Auto** or **Manual**. When you select **Manual**, press the **0** key to use the flash and press the **0** key again to turn it off.

Taking a Photo with the Phone Closed

Note: If the external display turns off, you first need to turn it on by pressing and holding the Volume keys.

1. When the phone is closed, press and hold the Camera () key on the right side of the phone.

The image to be captured appears on the external display as a mirror image.

2. Adjust the image by aiming the camera at the subject.

You can turn on or off the flash using the Volume keys.



3. Press the Camera key to take the photo.

Your phone automatically saves the photo and returns to Capture mode.

My photos *(Menu 8.2)*

This menu allows you to review your photos.

When you access this menu, your phone displays the photos in Thumbnail mode, which shows them as small images.

Scroll through the photos using the Navigation keys. The  icon indicates that it contains the photos taken in Multi-shot mode. To view the photos on the full screen, press the **i** key. To go back to Thumbnail mode, press the  soft key or **C** key.

Press the **Options** soft key or **i** key to use the following options:

View: shows the photo on the full screen. This option is available only in Thumbnail mode.

Send: allows you to send the photo as a multimedia message. For further details, see page 98.

Rename: allows you to change the name of the photo.

Set as wallpaper: allows you to set the photo as your wallpaper for the main or external display.

Set as caller ID: allows you to set the photo as a caller ID image for a Phonebook entry.

Search: allows you to search for a Phonebook entry.

Add entry: allows you to save a new entry.

Protection: allows you to protect the photo from being deleted.

Delete: allows you to delete the photo.

Delete all: allows you to delete all of the photos saved in your phone.

Properties: shows the properties of the photo, such as the time and date it was taken, file size, photo size, protection status, file format, and file name.

Video *(Menu 8.3)*

You can record a video using your phone as a camcorder.

Record *(Menu 8.3.1)*

You can record up to five videos.

1. When the camera turns on, adjust the image by aiming the camera at the subject.
 - Press the **0** key to turn on or off the flash.
 - Press the **1** key to switch to Capture mode. See page 140.
 - Press the **2** key to change the image size.
 - Press the **9** key to switch to the **Videos clips** menu (**Menu 8.3.2**).
 - Press the left soft key to record the image in the cropping lines.
 - Press the Up or Down key to zoom in or out the image.
 - Press the Left or Right key to adjust the image brightness.
 - Press the Volume keys to flip the image vertically or horizontally.


Camera

2. Press the **i** key or Camera key to start recording.
3. When you are finished, press the **i** key or Camera key to stop recording.

Or, the phone automatically stops when the recording time expires.

4. Press the **Save** soft key or **i** key. The video is saved and the display returns to Record mode.

To discard the video, press the **Cancel** soft key.


5. To	Press the
play the video	i key.
use the video options	Options soft key. For details, see page 147
return to Record mode.	Preview soft key.
return to the Idle mode.	 key.

Video clips *(Menu 8.3.2)*

When you access this menu, the thumbnail images of your videos display.

To play a video:

1. Press the Navigation keys to scroll to the video you want to review.
2. Press the **i** key to start playing the video.

3. To	Press the
pause the playing	Pause soft key.
resume	Play soft key.
stop	Stop soft key.
return to Idle mode	 key.

Press the **Options** soft key on the video list to use the following options:

Rename: allows you to change the file name.

Delete: allows you to delete the current video file.

Delete all: allows you to delete all of your video files.

Protection: allows you to protect the video from being deleted.

Properties: shows the properties of the video, such as the time and date it was recorded, file size, protection status, playing time, and image size.

Memory status *(Menu 8.4)*

You can check the amount of the memory being used and the memory remaining in the camera.

Each time you press the UP or Down key, the display shows the total, used, and free space for photos and videos.



Phone settings


Many different features of your phone can be customised to suit your preferences. All of these features are accessed in the **Phone settings** menu.


Activate infrared *(Menu 9.1)*

This feature allows you to send or receive data to or from IrDA-compatible computers or phones through the infrared port.

With PC *(Menu 9.1.1)*

To use an infrared connection, you must:

- configure and activate an IrDA-compliant infrared port on your PC.
- activate the infrared feature on the phone; the IrDA icon () appears on the top line of the display.
- align the IrDA port on the phone with the IrDA port on your computer or another phone.

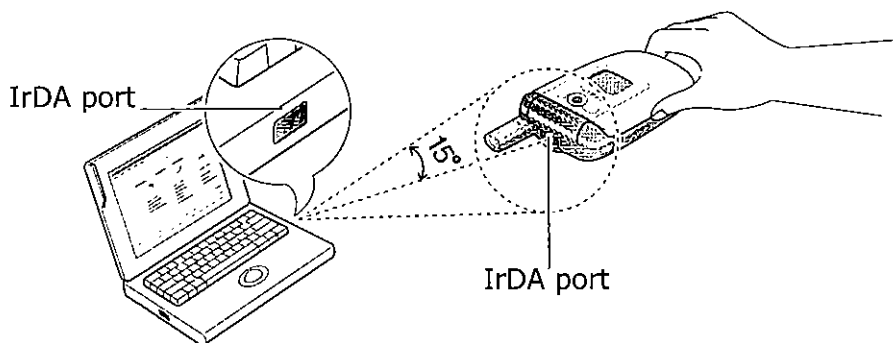

The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

Note: For optimal performance, use an optional data link cable. You can purchase one from your local Samsung dealer.

With other phone *(Menu 9.1.2)*

Using the infrared connection, you can send or receive Phonebook entries and calendar memos from another compliant phone.

Note: If you receive a call while sending or receiving data, you can either answer or reject the call without interrupting the IrDA connection. But, picking up your phone may break the connection between the phones, so use the headset to answer the call.

Receiving Data from Another Phone

1. Align the IrDA ports on both phones with each other.
2. Activate the infrared feature on the phones. For this phone, access the **Infrared activate** menu and select **With other phone**.

The connection between the phones is established and your phone receives data from the other phone. You can receive up to 20 items in succession.

Phone settings

3. When the list of the received data displays, you have two options:

To save an individual item:

- ① Select one on the list and press the **Select** soft key.

The display shows the Phonebook entry.

- ② Press the **OK** soft key.
- ③ Press the **Options** soft key.

The following options are available:

- **Discard**: deletes the data.
- **Save**: allows you to save the selected data in your phone's memory.

- ④ Select **Save** and press the **Select** soft key.

To save all of the data:

- ① Press the **Options** soft key.

The following options are available:

- **Save All**: allows you to save all data.
- **Save All vCard**: saves all the Phonebook entries from the received data.
- **Save All vCalendar**: saves all the calendar memos from the received data.
- **Discard All**: deletes all of the data.
- **Discard All vCard**: deletes all the Phonebook entries from the received data.
- **Discard All vCalendar**: deletes all the calendar memos from the received data.
- **Exit**: exits the IrDA function. When the phone asks if you want to delete the remaining data, press the **Yes** or **No** soft key.

- ② Select a save option and press the **Select** soft key.
4. When FDN (Fixed Dial Number) mode is enabled on your phone, enter the PIN2 and press the **OK** soft key.

For further details about the FDN mode, see page 159.

5. Press the **Save** soft key.

The entries are saved.

Sending Your Phonebook

1. Align the IrDA ports on both phones with each other to establish the IrDA connection.

The IrDA port of the other phone must be activated.

2. Access a Phonebook entry and press the **Options** soft key. See page 38.
3. Press the Up or Down key to scroll to **Send via IrDA** and press the **Select** soft key.
4. Highlight an option, **Selected data** or **All data**, using the Up or Down key and press the **Select** soft key.

Your phone begins sending the data.

Sending a Calendar Memo

1. Align the IrDA ports on both phones with each other to establish the IrDA connection.

The IrDA port of the other phone must be activated.

Phone settings

2. Access the **Calendar** menu and select the memo you want to send. See page 130.
3. Press the **Options** soft key and select **Send via IrDA**.

Your phone begins sending the memo.

Note: If you receive an incoming call while sending, you can either answer the call using the headset or reject it. Your phone continues sending the data.

Display settings *(Menu 9.2)*

In this menu, you can change various settings for the display or the backlight.

Wallpaper *(Menu 9.2.1)*

This menu allows you to change the background image or the colour of the text to be displayed in Idle mode.

The following options are available:

Wallpaper list: you can select a background image to be displayed on the idle screen.

To change the background image:

1. Scroll through the list by pressing the Up or Down key.

You have various preset images available. You can also select a blank background or any images downloaded from the Internet and the optional EasyGPRS programme, or received in messages.

Once you have set a photo as the wallpaper for the main or external display, it is designated as **My photo** or **My baby photo** on this list.

2. Press the **Select** soft key or **i** key when the image you want highlights.
3. When the image displays, press the **Select** soft key or **i** key to display it on the idle screen.

Text display: you can specify whether or not the phone displays the current time and date.

Text color: you can select the colour of the text to be displayed on the idle screen.

Front LCD display *(Menu 9.2.2)*

This menu allows you to select one of the clock images for the external display.

Once you have set a photo as the wallpaper image for the external display, it is designated as **My baby photo** on this list.

Font size *(Menu 9.2.3)*

This menu allows you to select the menu font size. You can choose either **Small**, **Normal**, or **Large**.

Menu style *(Menu 9.2.4)*

This menu allows you to select the menu display style. You can choose either **Grid style**, **Bar style**, or **Page style**.

Phone settings

Back light *(Menu 9.2.5)*

You can select the length of time the backlight is on. The backlight turns on when you press a key or receive a call or message, and remains on for the specified length of time.

Service light *(Menu 9.2.6)*

This menu allows you to select whether or not the service light is used. It also allows you to select a colour in which it flashes.

To use the service light, select one of the seven colour settings. When the phone is ready for use, the service light flashes in the chosen colour.

If you do not wish to use the service light, select **Off**.

Graphic logo *(Menu 9.2.7)*

This menu allows you to display your service provider's logo instead of its name.

Off: the service provider's name displays in Idle mode.

On: the service provider's logo stored in your phone displays in Idle mode; if no logo has been stored, the service provider's name displays.

Greeting message *(Menu 9.3)*

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For further details about how to enter characters, see page 48.

Own number *(Menu 9.4)*

This function is a memory aid, which you can use to check your own phone numbers if you need to do so.

You can:

- assign a name to each of your own phone numbers registered on your SIM card.
- edit the names and numbers.

Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

Language *(Menu 9.5)*

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Note: Depending on your country, service provider, or the software version of the phone, the **Automatic** option may not display.

Security *(Menu 9.6)*

The Security feature enables you to restrict the use of your phone by others and the types of calls.

Various codes and passwords are used to protect features of your phone. They are described in the following sections. Also see pages 165-168.

PIN check *(Menu 9.6.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

Disable: the phone connects directly to the network when you switch it on.

Enable: you must enter the PIN each time the phone is switched on.

Change PIN *(Menu 9.6.2)*

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone lock *(Menu 9.6.3)*

When the Phone Lock feature is enabled, the phone is locked and you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to "00000000" at the factory. To change the phone password, see the **Change password** menu (**Menu 9.6.4**) on page 157.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

Disable: you are not asked to enter the phone password when you switch on the phone.

Enable: you are required to enter the phone password when you switch on the phone.

Change password *(Menu 9.6.4)*

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to "00000000" at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Phone settings

Privacy *(Menu 9.6.5)*

Using this menu, you can lock your media contents, such as multimedia messages, photos, videos, voice memos, images, and sounds. Once you have locked the contents, you must enter the phone password to access the associated menus.

To	Press the
select an item to lock	Up or Down key. To lock all of the contents, select All .
place or remove a check mark	i key.
lock the marked items	OK soft key.

When the phone asks for the phone password, enter the password and press the **OK** soft key or **i** key.

Note: The password is preset to "00000000" at the factory. To change this password, see page 157.

SIM lock *(Menu 9.6.6)*

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code to use a different SIM card.

Once you have entered the lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

FDN mode *(Menu 9.6.7)*

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

Disable: you can call any number.

Enable: you can only call phone numbers stored in Phonebook. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Change PIN2 *(Menu 9.6.8)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Phone settings

Extra settings *(Menu 9.7)*

You can turn on or off the automatic redialling or answering features.

To turn a feature	Press the
on	Mark soft key or i key. A check mark displays in front of the option.
off	Unmark soft key or i key. The check mark no longer displays.



The following options are available:


Auto redial: when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between attempts varies.

Active folder: when this option is checked, you can simply open the phone to answer a call.

When it is unchecked, you must open the phone and press a key to answer a call, depending on the setting of the **Anykey answer** option.

Anykey answer: when this option is checked, you can answer an incoming call by pressing any key, except the  key or the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you must press the  key or **Accept** soft key to answer a call.

Short cut *(Menu 9.8)*

The Up and Down keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the Up or Down key, and press the **Select** soft key or **i** key.
2. Select the menu to be assigned to the key by pressing the Up or Down key.

Note: To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key or **i** key to save the selection.

Reset settings *(Menu 9.9)*

You can easily reset your phone to its default settings.

To reset your phone, enter the 4- to 8-digit phone password and press the **OK** soft key or **i** key.

Note: The password is preset to "00000000." To change this password, see page 157.



Solving Problems

If you are experiencing problems with your phone, perform the following simple checks before contacting a service professional. This may save you the time and expense of an unnecessary service call.

When you switch your phone on, the following messages may appear:

Insert SIM card

- Check that the SIM card is correctly installed.

Enter password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number (PIN) supplied with the SIM card.
- The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu (**Menu 9.6.1**). See page 156.


Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your service provider.


“No service,” “Network failure” or “Not done” displays

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

Your correspondent cannot reach you

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.

Your correspondent cannot hear you speaking

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

Solving Problems

The phone starts beeping and “Warning** Low battery” flashes on the display**

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (📶); the number of bars indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you recall a Phonebook entry

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.



Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorised use.

When requested for any of the codes explained below, enter the appropriate code, displayed as asterisks, and press the **OK** soft key or **i** key. If you make a mistake, press the **C** key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes, can be changed using the **Security** menu (**Menu 9.6**). See page 156 for further details.

Important! Avoid using access codes resembling emergency numbers, such as 112, so that you do not accidentally dial an emergency number.

Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorised use. The phone password is supplied with the phone and is preset to "00000000" at the factory.

To	See
activate/deactivate the Phone Lock feature	page 157 (Menu 9.6.3).
change the phone password	page 157 (Menu 9.6.4).

PIN

The **P**ersonal **I**dentification **N**umber or PIN (4 to 8 digits) protects your SIM card against unauthorised use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To	See
activate/deactivate the PIN Check feature	page 156 (Menu 9.6.1).
change the PIN	page 156 (Menu 9.6.2).

PUK

The 8-digit PUK (**P**IN **U**nblocking **K**ey) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN:

1. Enter the PUK and press the **OK** soft key or **i** key.
2. Enter a new PIN of your choice and press the **OK** soft key or **i** key.
3. When the **Confirm new PIN** message displays, enter the same code again and press the **OK** soft key or **i** key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

PIN2

The PIN2 (4 to 8-digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, see page 159.

PUK2

The 8-digit PUK2 (**PIN Unblocking Key 2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Enter the PUK2 and press the **OK** soft key or **i** key.
2. Enter a new PIN2 of your choice and press the **OK** soft key or **i** key.
3. When the **Confirm PIN2** message displays, enter the same code again and press the **OK** soft key or **i** key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

Barring Password

A 4-digit barring password is required when you use the Call Barring function. You can obtain the password from your service provider when you subscribe to this function.

You can change this password in the **Call barring** menu (**Menu 3.2**). See page 78 for further details.



Health and safety information

SAR certification information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the FCC is 1.6W/kg.*

*In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Health and safety information

SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

FCC certification information for this model phone is attached separation paper.

For body operation

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories

that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. Non-compliance with the above conditions may violate FCC RF exposure guidelines.

For more Information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)
<http://www.fcc.gov>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

U.S.Food and Drug Administration (FDA)
<http://www.fda.gov/cdrh/consumer>

World Health Organization (WHO)
<http://www.who.int/peh-emf/en>

Precautions when using batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

Health and safety information

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and – terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

Health and safety information

4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

Health and safety information

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

Operating environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Health and safety information

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially explosive environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not

Health and safety information

be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press the Sendkey.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years

- Keep the phone and all its parts and accessories out of the reach of small children's.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Health and safety information

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Acknowledging special precautions and the FCC and industry Canada n187otice

Cautions

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Health and safety information

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Appendix A: CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency(RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on safety standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. SAR Tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC

Appendix A: CERTIFICATION INFORMATION (SAR)

that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations(e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR values for this model phone as reported to the FCC are Head: 0.675W/Kg, Body-worn: 0.705 W/Kg.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of

<http://www.fcc.gov/oet/fccid> after searching on FCC ID A3LSGHE610 .

In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Appendix B: Guide to Safe and Responsible Wireless Phone Use

Cellular Telecommunications & Internet Association

"Safety is the most important call you will ever make."

A Guide to Safe and Responsible Wireless Phone Use

TENS OF MILLIONS OF PEOPLE IN THE U.S. TODAY TAKE ADVANTAGE OF THE UNIQUE COMBINATION OF CONVENIENCE, SAFETY AND VALUE DELIVERED BY THE WIRELESS TELEPHONE. QUITE SIMPLY, THE WIRELESS PHONE GIVES PEOPLE THE POWERFUL ABILITY TO COMMUNICATE BY VOICE-ALMOST ANYWHERE, ANYTIME-WITH THE BOSS, WITH A CLIENT, WITH THE KIDS, WITH EMERGENCY PERSONNEL OR EVEN WITH THE POLICE. EACH YEAR, AMERICANS MAKE BILLIONS OF CALLS FROM THEIR WIRELESS PHONES, AND THE NUMBERS ARE RAPIDLY GROWING.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle-whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common sense-keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seat belts and requiring other passengers to do the same.

Appendix B: Guide to Safe and Responsible Wireless

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need. When it comes to the use of wireless phones, safety is your most important call.

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are

Appendix B: Guide to Safe and Responsible Wireless

speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip-dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix-they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your phone at your side, help is only three numbers away. Dial 9-1-1

Appendix B: Guide to Safe and Responsible Wireless

or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

"The wireless industry reminds you to use your phone safely when driving."

Appendix C: Consumer Update on Wireless Phones

Cellular Telecommunications & Internet Association
For more information, please call 1-888-901-SAFE.
For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

Appendix C: Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell, mobile, or PCS phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

2. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that

Appendix C: Consumer Update on Wireless Phones

wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

3. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

Support needed research into possible biological effects of RF of the type emitted by wireless phones;

Appendix C: Consumer Update on Wireless Phones

Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

National Institute for Occupational Safety and Health

Environmental Protection Agency
Federal Communications Commission
Occupational Safety and Health Administration

National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get

Appendix C: Consumer Update on Wireless Phones

from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

4. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

5. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

Appendix C: Consumer Update on Wireless Phones

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

6. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be

Appendix C: Consumer Update on Wireless Phones

discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

7. Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

8. Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others

Appendix C: Consumer Update on Wireless Phones

involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

9. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones

Appendix C: Consumer Update on Wireless Phones

so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

10. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary

Appendix C: Consumer Update on Wireless Phones

brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

11. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

12. Which other federal agencies have responsibilities related to potential RF health effects?

Appendix C: Consumer Update on Wireless Phones

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations.

FCC RF Safety Program:

<http://www.fcc.gov/oet/rfsafety/>

Environmental Protection Agency (EPA):

<http://www.epa.gov/radiation/>

Occupational Safety and Health Administration's (OSHA):

<http://www.osha-slc.gov/SLTC/radiofrequencyradiation/index.html>

National Institute for Occupational Safety and Health (NIOSH):

<http://www.cdc.gov/niosh/emfpg.html>

World health Organization (WHO):

<http://www.who.int/peh-emf/>

International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

National Radiation Protection Board (UK):

<http://www.nrpb.org.uk>

Updated 4/3/2002: US Food and Drug Administration
<http://www.fda.gov/cellphones>

Appendix C: Consumer Update on Wireless Phones

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/ Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or

Appendix C: Consumer Update on Wireless Phones

new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE

Appendix C: Consumer Update on Wireless Phones

EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.
1130 East Arapaho Road
Richardson, Texas 75081
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2002 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.
[080802]





Glossary

To help you understand the main technical terms and abbreviations used in this booklet, and to take full advantage of the features of your mobile phone, here are a few definitions:

Active folder

Ability to answer a call simply by opening the phone.

Call barring

Ability to restrict outgoing and incoming calls.

Call diverting

Ability to reroute calls to another number.

Call holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Call waiting

Informs you that you have an incoming call when you are engaged on another call.

Caller line identification services (Caller ID)

Services allowing subscribers to view or block the telephone numbers of callers.

EMS (Enhanced Message Service)

An adaptation of the Short Message Service (SMS) that allows you to send and receive ring tones and the service provider's logo, as well as combinations of simple media to and from EMS-compliant handsets. Because EMS is based on SMS, it can use SMS centres the same way that SMS does. EMS works on all Global System for Mobile communications (GSM) networks. EMS senders can use text, melodies, photos, sounds, and animations to enhance the expressive power of messages that are limited by the display constraints of mobile devices.

GPRS (General Packet Radio Service)

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS provides continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Glossary

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a MIDlet.

MMS (Multimedia Message Service)

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can be sent by e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and also video clips and presentation information.

Multi-party calling

Ability to establish a conference call involving up to five additional parties.

Phone password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

PIN (Personal Identification Number)

Security code that protects the phone against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

Proxy server

A proxy server resides between a Web client, such as a web browser, and a real Web server and acts as an intermediary between them. When some people browse a web site, their browser is not actually connecting to the web server. The request from their browser goes to a proxy server, and the proxy server makes the request to the web server.

A proxy server can improve performance for groups of users because it caches the results of all requests for a certain amount of time. If a user requests a web page that it already loaded for another user, it reloads the page instead of forwarding the request to the Web server, which can be a time-consuming operation.

PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

Glossary

SDN (Service Dialling Numbers)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

Soft keys

Two keys marked left and Right on the phone, the purpose of which:

- varies according to the function that you are currently using.
- is indicated on the bottom line of the display just above the corresponding key.

Tri band

Ability to handle any of the following types of network; GSM 900, GSM 1800, combined GSM 900/1800 and GSM 1900 MHz bands, for greater call success and wider roaming.

Your phone automatically searches for the last network used. If, for any reason, this network is unavailable, your phone will attempt to register with a different network.

Voice mail

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.



Index

A

- Access codes • 165
- Active folder • 160
- Alarm • 126
- Alert on call • 87
- Alert type • 85
- Alphabet mode, text input • 52
- Answering
 - call • 27
 - second call • 59
- Anykey answer • 160
- Auto redial • 160

B

- Background image • 152
- Backlight
 - description • 15
 - time, set • 154
- Band selection • 82
- Barring, calls • 77
- Battery
 - charging • 20
 - installing • 20
 - low indicator • 21
 - precautions • 170
 - removing • 18
- Broadcast messages • 112
- Browser, WAP • 114

C

- Calculator • 132
- Calendar • 128
- Calendar memos
 - copying • 130
 - deleting • 130
 - sending via IrDA • 151
 - viewing • 130
 - writing • 128
- Call back, message • 93
- Call costs • 74
- Call records
 - dialled • 71
 - missed • 28, 70

- received • 71

- Call time • 73

- Caller groups
 - editing • 44
 - searching • 43

- Caller ID • 80

- Calls
 - answering • 27
 - barring • 77
 - diverting • 75
 - ending • 24
 - holding • 54
 - making • 23
 - redialling • 24
 - rejecting • 27
 - waiting • 59, 79

- Camera

- playing video • 146
 - recording video • 145
 - taking photo • 139
 - viewing photo • 144

- CB (Cell Broadcast) messages • 112

- Characters, enter • 48

- Charging battery • 20

- Closed User Group (CUG) • 81

- Conference call • 59

- Connect tone • 88

- Cost, calls • 74

- Currency exchange • 138

D

- Date, set • 131

- Deleting

- calendar memo • 130
 - call record • 72
 - contacts • 38
 - multimedia message • 104, 106
 - photo • 144
 - task • 135
 - text message • 92, 94
 - video • 147
 - voice memo • 137

Delivery reports, message •
96
Dialled calls • 71
Display
 backlight • 15
 external • 16
 icons • 14
 layout • 13
 settings • 152
Diverting, calls • 75
DTMF tones, send • 57

E

Earpiece volume • 26
Emergency calls • 176
EMS (Enhanced Message
 Service) • 89
Error tone • 88
External display • 16, 153

F

FDN (Fixed Dial Number)
 mode • 159
Flashlight • 17
Folder tone • 87
Forward, multimedia
 message • 104
Front LCD • 16, 153

G

Games • 121
Graphic logo • 154
Greeting message • 155

H

Health and safety • 169
Holding, call • 54

I

Icons, description • 14
Images, downloaded • 124

Inbox, messages
 multimedia • 102
 text • 92
 web 110
Infrared, connect • 148
International calls • 23

K

Key volume • 26
Keypad tones
 selecting • 85
 sending • 57
Keys
 description • 11
 location • 10
 shortcut • 161

L

Language, select • 155
Last number, redial • 24
Locking
 media contents • 158
 phone • 157
 SIM card • 158
Low battery indicator • 21

M

Memory status
 camera • 147
 downloaded items •
 125
 multimedia messages
 • 113
 Phonebook • 46
 text messages • 113
 voice memos • 138
Menus
 access • 62
 list • 64
Message tone • 85
Messages
 cell broadcast • 112
 greeting • 155
 multimedia • 97

Index

- text • 89
- voice • 111
- web • 110
- MIDlets, launch • 121
- Minute minder • 88
- Missed calls • 28, 70
- MMS (Multimedia messages Service) • 97
- Morning call • 126
- Multimedia messages
 - creating/sending • 98
 - deleting • 104, 106
 - editing • 106
 - reading • 102, 105
 - setting • 107
- Multi-party calls • 59
- Muting
 - all sounds • 30
 - key tones • 57
 - microphone • 56

N

- Names
 - entering • 48
 - searching/dialling • 42
- Network band, select • 82
- Network selection • 79
- Network services • 75
- Numbers, phone
 - searching/dialling • 42

O

- On/off switch, phone • 22
- Organiser • 126
- Outbox, messages
 - multimedia • 105
 - text • 93
- Own number • 155

P

- Password
 - call barring • 78, 168
 - phone • 157, 165

Phone

- care and maintenance
 - 178
- display • 13
- icons • 14
- keys • 11
- layout • 10
- locking • 157
- password • 165
- resetting • 161
- switching on/off • 22
- unpacking • 9

Phonebook

- copying • 38
- deleting • 38, 45
- editing • 37
- options • 37
- searching/dialling • 42
- sending via IrDA • 151
- speed-dialling • 39, 45
- storing • 34

Photo

- deleting • 144
- taking • 139
- viewing • 144

PIN

- changing • 156
- description • 166

PIN2

- changing • 159
- description • 167

- Power on/off tone • 87

- Privacy, set • 158

- Problems, solve • 162

- PUK • 166

- PUK2 • 167

R

- Radio-frequency • 169

- Received calls • 71

- Received messages

- multimedia • 102

- text • 92

- Redialling

- automatically • 160

- manually • 24

- Resetting phone • 161
- Ring tone • 84
- Ring type • 85
- Ring volume • 84
- Road safety • 172
- Roaming • 79

S

- Safety
 - information • 169
 - precautions • 7
- SDN (Service Dialling Numbers) • 46
- Searching, Phonebook • 42
- Security, calls • 156
- Sent messages
 - multimedia • 105
 - text • 93
- Service light • 16, 154
- Shortcut, keys • 161
- Silent mode • 30
- SIM card
 - installing • 18
 - locking • 158
- SMS (Short Message Service)
 - Inbox • 92
- Soft keys • 31
- Sounds settings • 84
- Sounds, downloaded • 124
- Speed-dial • 39, 45
- Switch on/off
 - microphone • 56
 - phone • 22
- Symbol, text input • 53

T

- Tasks, to do list
 - creating • 133
 - editing • 133
 - options 134
- Templates
 - multimedia • 106
 - text • 94
- Text input mode • 49
- Text message

- creating/sending • 90
- deleting • 92, 94
- reading • 92, 93
- sending • 90
- setting • 95

- Text, enter • 48

- Time format • 131

- Time, set • 131

- To do list • 133

- Tone

- connect • 88
- error • 88
- folder • 87
- keypad • 85
- message • 85
- minute minder • 88
- power on/off • 87
- ring • 84

- Travel adapter • 20

U

- User group • 81

V

- Vibration • 85

- Video

- deleting • 147
- playing • 146
- recording • 145

- Voice mail • 111

- Voice memo

- deleting • 137
- playing • 137
- recording • 136

- Volume, adjust



- earpiece • 26
- keypad tone • 26
- ring • 84


 



 
 
Index

W


- Waiting call • 59, 79
- Wallpaper • 152
- WAP browser
 - bookmarks • 118
 - cache, clear • 120
 - home, access • 114
- World time • 131
- Writing messages
 - multimedia • 98
 - text • 90


SGH-E610 GPRS Telephone Quick Reference Card

Access the Menu Functions	<ol style="list-style-type: none"> ① Press the Menu soft key. ② Scroll using the Navigation keys through the list of the menus until you reach the menu you want. ③ Press the z key or Select soft key. ④ Scroll using the Up and Down keys through the list of the options until the one you want is selected. ⑤ Press the z or Select soft key.
Each of the two soft keys ( and ) perform the function indicated by the text above it, on the bottom line of the display.	

Switch On/Off	Press and hold the  key.
Make a Call	<ol style="list-style-type: none"> ① Enter the number. ② Press the  key.
End a Call	Briefly press the  key.
View Missed Calls Shortly After Missing Them	<ol style="list-style-type: none"> ① Open the phone and press the View soft key. ② Scroll using the Up and Down keys through the missed calls. ③ To return the call, press the  key.
Answer a Call	Open the phone or press the  key.
Adjust the Volume	Press the  or  key on the left side of the phone.

 

Choose the Alert Type	<ol style="list-style-type: none"> ① Select the Alert type menu (Menu 4.3). ② Select an option: <ul style="list-style-type: none"> • Light only • Melody • Vibration • Vibra+ melody ③ Press the Select soft key.
Store Number in Phonebook	<ol style="list-style-type: none"> ① Enter the number and press the Save soft key. ② Select an icon. ③ Press the Select soft key. ④ Select a memory. ⑤ Press the Select soft key. ⑥ Enter a name. ⑦ Press the OK soft key. ⑧ If necessary, change the location number. ⑨ Press the OK soft key. ⑩ Press the  key to return to Idle mode.

Search for a Number in Phonebook	<ol style="list-style-type: none"> ① Press the Phonebook soft key. ② Select the Search option. ③ Enter the first few letters of the name. ④ To scroll through the names, press the Up or Down key. ⑤ Press the View soft key. ⑥ To scroll through the numbers, press the Up or Down key. ⑦ Press the  key to dial.
Take a Photo	<ul style="list-style-type: none"> • With the phone open <ol style="list-style-type: none"> ① Press and hold the Camera key. ② Press the i key. ③ Press the Save soft key. <ul style="list-style-type: none"> • With the phone closed <ol style="list-style-type: none"> ① Press and hold the Camera key. ② Press the Camera key.