

SGH-E635

P O R T A B L E T r i - B a n d T E L E P H O N E

User Guide

Please read this manual before operating your
phone, and keep it for future reference.

The Samsung logo, consisting of the word "SAMSUNG" in white, bold, sans-serif capital letters, centered within a blue, horizontally-oriented oval.

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Tel: 972.761.7000

Customer Care Center:

1601 E. Plano Parkway, Suite 150

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2005 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

GH68-06940A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

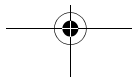
 
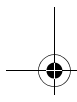
 


Table of Contents

Section 1: Getting Started	5
Activating Your Phone	6
Switching your Phone On or Off	10
Setting Up Your Voice Mail	11
Section 2: Understanding Your Phone	13
Features of Your Phone	14
View of Your Phone	14
Keys	15
Display Layout	17
Section 3: Call Functions	21
Making a Call	22
Adjusting the Call Volume	24
Answering a Call	25
Call Log	26
Call Records	28
Silent Mode	30
Selecting Functions and Options	30
Section 4: Menu Navigation	39
Menu Navigation	40
Menu Outline	41
Section 5: Entering Text	47
Changing the Text Input Mode	48
Using T9 Mode	49
Using ABC Mode	51
Using Symbols	53
Using Numbers	53
Section 6: Understanding Your Phonebook	55
Storing a Number in the SIM Card	56
Storing a Number in the Phone's Memory	57

Finding a Phonebook Entry	58
Using Phonebook Entry Options	59
Dialing a Number from Phonebook	60
Speed Dialing	60
Editing a caller group	61
Dialing a Number from the SIM Card	62
Copying all SIM Phonebook Entries	62
Deleting all Phonebook Entries	62
Finding My Own Phone Number	63
Using the Service Dialing Numbers	64
Checking the Memory Status	64
Section 7: Messaging	67
Types of Messages	68
Voice Messages	68
Text Messages	70
Picture Messages	74
Browser Messages	81
Voice Mail Messages	82
Broadcast Messages (SIM Dependent)	82
Settings	82
IM (Instant Messaging)	84
Memory Status	85
Section 8: Changing Your Settings	87
Time & Date	88
Display Settings	89
Sound Settings	91
Get More Help	93
Greeting Message	94
Language	94
Security	94
Slide Settings	97
Infrared Activation	98

Extra Settings	99
Reset Settings	100
Network Services Settings	100
Section 9: Organizer	105
Alarm	106
Calendar	107
Calculator	110
To Do List	110
Voice Memo	112
Conversion	114
Timer	114
Stopwatch	115
Section 10: Camera	117
Using the Camera	118
Take and Send	118
Accessing Pictures in My Photos	121
Accessing Pictures in My Album	123
My Journal	123
Delete All	123
Settings	124
Memory Status	124
Section 11: Funbox	125
t-zones	126
Sounds	126
Images	126
Games	127
My Photos	129
Delete All	130
Memory Status	130
Melody Composer	131
Section 12: t-zones	135
t-zones	136

Section 13: Health and Safety Information ... 141

Health and Safety Information	142
Consumer Information on Wireless Phones	144
Road Safety	154
Operating Environment	156
Using Your Phone Near Other Electronic Devices	156
Potentially Explosive Environments	158
Emergency Calls	159
FCC Notice and Cautions	160
Other Important Safety Information	161
Product Performance	162
Availability of Various Features/Ring Tones	163
Battery Standby and Talk Time	164
Battery Precautions	164
Care and Maintenance	166

Section 14: Warranty Information 169

Standard Limited Warranty	170
Intellectual Property Statement	176
Samsung Telecommunications America (STA), Inc.	177

Index 179

Section 1: Getting Started

Topics Covered

- Activating Your Phone
 - Switching Your Phone On or Off
 - Setting Up Voicemail
-

This section allows you to start using your phone by activating your service and setting up your voice mail.


Section 1

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

If necessary, switch off the phone by holding down the  key until the power-off image displays.

 
Remove the battery. To do so:

1. Push in the battery lock toward the top of the phone and hold it in that position.
2. Lift the battery away, as shown.




Activating Your Phone

- Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

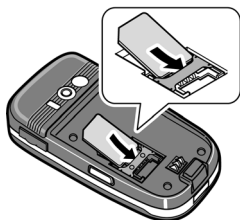

 Note: When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

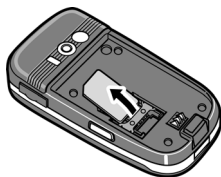

- Place the battery so that the tabs on the end align with the slots at the bottom of the phone.



5. Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.



Section 1

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

Activating Your Phone

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.



2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the AC wall outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.



Note: You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.




Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, your phone does the following:

- Sounds a warning tone.
- Repeats the "Warning Low Battery" message at regular intervals on the display.
- Turns off the display backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns itself off.


Switching your Phone On or Off

1. Slide the phone open.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter the phone password, enter the password and press the **OK** soft key or the  key. The password is preset to "00000000" at the factory. For further details, see "Change Password" on page 95.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN Check" on page 94.

The phone searches for your network and after finding it, the Idle screen appears. Now, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language" on page 94.


Setting Up Your Voice Mail

5. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail

For new users, follow the instructions below to set up voicemail:


To set up your voice mail, use the following steps:

1. Slide your phone open to access the keypad.
2. In idle mode, press and hold the  key on the keypad. You are prompted to enter the password.
3. Follow the tutorial to create a password, a greeting, and your name.


Note: These steps may be different depending on your network.



Accessing Your Voice Mail

To access your voice mail from your keypad, use the following steps:

1. Slide your phone open to access the keypad.
2. From the Idle screen, press and hold the  key.
3. Follow the voice mail prompts to access your messages.






To access your voice mail by using the menu, use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.

3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Call voice mail** and press the **Select** soft key or the  key. Your phone dials the specified voice mail number.
5. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, you may need to change the number. To change your voice mail number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Messages** and press **Select** soft key or the  key.
3. Highlight **Voice mail** and press **Select** soft key or the  key.
4. Highlight **Voice server number** and press the **Select** soft key or the  key.
5. Highlight **Empty** and press the **Select** soft key or the  key.
6. Press **Edit number** to change the number.
7. Press the **OK** soft key to save the update.
8. Press the  key to return to Idle mode.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - View of Your Phone
 - Keys
 - Display Layout
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.



Section 2


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.


- User friendly, menu driven access to features and options
- Instant Messaging capability
- Multimedia capability
- Organizer feature provides calendar, to-do list, alarms, calculator, and conversion capabilities

View of Your Phone

The following illustrations show the main elements of your phone:

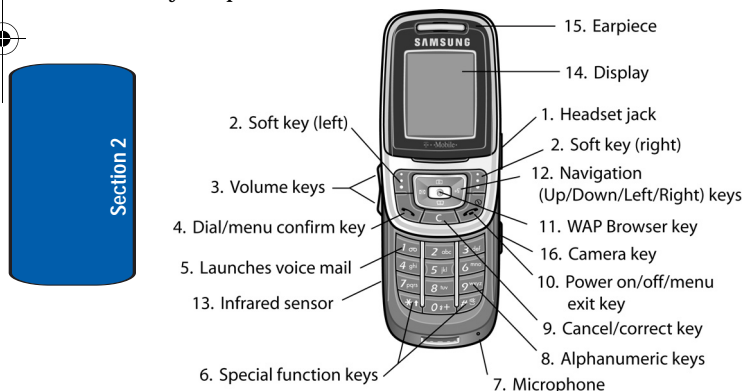 

Keys

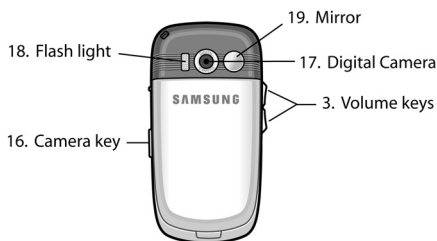 

Keys

The following list correlates to the illustrations.

1. The headset jack is used for the hands-free headset.
2. Performs the functions indicated by the screen text on the bottom line of the display.

3. During a call, adjusts the earpiece volume.

In Idle mode with the phone open, adjusts the keypad tone volume.

4. Makes or answers a call.

In Idle mode, recalls the last number dialed or received when held down.

In Menu mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.

5. In Idle mode, when held down accesses voice mail.
6. Enters special characters. Performs various functions.
7. The microphone used during phone calls and voice memo recordings.

Section 2

8. Enters numbers, letters, and some special characters.
In idle mode, switches phone to silent mode when held down.
9. Deletes characters from the display.
In Menu mode, returns you to the previous menu level.
10. Ends a call. Also switches the phone on and off when held down.
In Menu mode, cancels your input and returns the phone to Idle mode.
11. In Idle mode, launches the WAP (Wireless Application Protocol) browser.
In Menu mode, selects the highlighted menu options.
12. In Menu mode, scrolls through the menus and Phonebook.
When entering text, moves the cursor to the left or right, depending on which side you push.
In Idle mode you can use the following shortcuts:
 - The **Down** key allows you to access the Phonebook Search menu
 - The **Up** key accesses the Camera
 - The **Left** key allows you to write a text message
 - The **Right** key allows you to make a voice recording
13. The infrared sensor is used to send and receive data.
14. Display area where text and graphics are displayed.
15. The earpiece is used to listen to audio from your phone.
16. The camera key is used to launch the camera (with a press and hold) and to take a photo (with a short press).

Display Layout

 
17. The built-in digital camera has video capture capabilities.
18. The built-in flash has manual and automatic capabilities.
19. The mirror allows you to adjust the camera when taking a picture of yourself.

Display Layout

The display on your phone indicates when you have an incoming call or message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the display.




When you close the phone, the display shows the current time on a digital clock. And the backlight gradually dims.

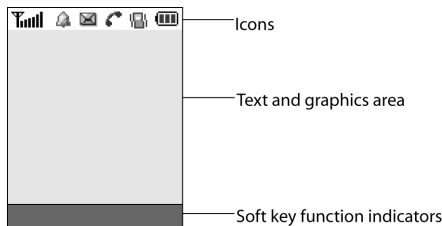The display has 3 areas:



Section 2

Icons

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a new text message has been received.
-  Appears when a new voice mail has been received.



Appears when a new multimedia message has been received.



Appears when the IrDA port is active. For details, see "Infrared Activation" on page 98.



Appears when you set an alarm to ring at a specified time. For details, see page "Alarm" on page 106.



Appears when you are out of your service area.



Appears when a call is in progress.



Appears when the Call Forwarding feature is active. For details, see page "Call Forwarding" on page 100.



Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.



Appears when the flash is set to on.



Appears when Silent mode is active.



Appears when Mute is active.






Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight




A backlight illuminates the display and the keypad. When you press any key or slide open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Backlight** menu. The display turns off after one minute to conserve battery power.

To specify the length of time the backlight is active, set the **Backlight** menu option. To access the **Backlight** menu,

Display Layout

from the idle screen, press the **Menu** (left) soft key, then press  (**Settings**), press  (**Display settings**), and  (**Backlight**). See "Backlight" on page 90 for further details.

   Section 2




Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Log
 - Call Records
 - Silent Mode
 - Selecting Functions and Options
-


This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

Making a Call

When the idle screen displays, enter the area code and phone number, and press the  key.

Note: When you activate the **Auto redial** option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. See "Extra Settings" on page 99 for further details.


Making an International Call

1. Press and hold the **0** key. The + character appears.
2. Enter the country code, area code, and phone number and press the .

Correcting the Number

1. To clear the last digit displayed, press the **C** key.
2. To clear any other digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to be cleared. Press the **C** key. You can also enter a missing digit.
3. To clear the whole display, press and hold the **C** key.




Ending a Call

When you want to finish your call, briefly press the .






Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the call recipient or caller is identified. See "Caller ID" on page 104 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the **Up** and **Down** keys to scroll through the numbers until the number you want highlights.
4. To dial the number, press the  key.

Before you dial the number, you also have the following options:

- To see the details of the number, press the **Options** soft key and select **Details**. Press the **Select** soft key or the  key.
- To dial the number, press the **Options** soft key and select **Call back**. Press the **Select** soft key or the  key.
- To send a message to the number, press the **Options** soft key and select **Send Message**. Press the **Select** soft key or the  key. You have the option of sending a text, picture, or voice message.
- To edit the number, press the **Options** soft key and select **Edit**. Press the **Select** soft key or the  key. Edit the number, then press the **Save** soft key.
- To delete the number, press the **Options** soft key and select **Delete**. Press the **Select** soft key or the  key.
- To delete all of the numbers, press the **Options** soft key and select **Delete all**. Press the **Select** soft key or the  key.

Making a Call from the Phonebook

You can store phone numbers that you use regularly on your SIM card or in your phone's memory. These entries are collectively stored in the Phonebook.

Once you have stored a number in the Phonebook, you can dial the number by pressing a few keys.

You can also assign Speed Dial keys to your most frequently-used numbers.

For further details about the Phonebook feature, see "Using Phonebook Entry Options" on page 59.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.





In Idle mode, you can also adjust the keypad tone volume using these keys.

Answering a Call

 
When somebody calls you, the phone rings and displays the incoming call image.


The caller's phone number, or name if stored in Phonebook, displays.

1. If necessary, open the phone. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the **Extra Settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

If the **Accept Call** option in the **Slide Settings** menu is activated, you can answer the call simply by sliding the phone open.



Note: To reject an incoming call, press and hold the Volume keys on the left side of the phone before opening the phone, or press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Call Log

All incoming, outgoing and missed calls are listed in the Call Log.

1. To access the **Call Log** option, press the  key. A list of calls displays.
2. Press the **Options** soft key to see Details, Call back, Edit, Send message, or Delete the calls.
3. To place a call press the  key.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, open the phone.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

3. To scroll through the missed calls, press the **Up** or **Down** key.
4. To call the number displayed, press the  key.

Editing a Missed Call Number

To edit a missed call number:

1. Press the **View** soft key. Press the **Options** soft key and select **Edit**.

2. Change the number and press the **Save** soft key or the **Ⓢ** key.
3. Select a location (**SIM** or **Phone**) and press the **Select** soft key or the **Ⓢ** key.
4. If you saved the number to **Phone**, highlight a phone type and press the **Select** soft key or the **Ⓢ** key.
5. Enter a name and press the **OK** soft key or the **Ⓢ** key.
6. Press the **Options** soft key to Send message, Assign speed dial, Edit name or number, Delete entry, Copy, or Send via infrared.

Note: When the number corresponding to the missed call is not available, the **Edit** option does not display.

Deleting a Missed Call

1. Press the **View** soft key. A list of missed calls displays.
2. If necessary, press the **Up** or **Down** key to highlight the missed call and press the **Options** soft key.
3. Highlight **Delete** and press the **Select** soft key or the **Ⓢ** key.
4. Select **Yes** to confirm deletion or **No** to cancel.


You can press the **Ⓢ** key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the Missed calls menu.

Call Records

In this menu, you can view:

- missed calls, incoming calls, and outgoing calls.
- length of your calls.

Note: You can access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

Note: The number of call records the phone can store may vary, depending on your SIM card.

Missed calls

This menu lets you view the 20 most recent calls you received, but did not answer.

The number and name, if already stored in your Phonebook, displays with the time and date the call was received.

Incoming calls

This menu lets you view the 20 most recent calls you received.

The number and name, if already stored in your Phonebook, displays with the time and date the call was received.

Outgoing calls

This menu lets you view the 20 most recent calls you dialed.

The number and name, if already stored in your Phonebook, displays with the time and date the call was made.

Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the **Select** soft key or the **Ⓟ** key to make a check mark.
1. Press the **OK** soft key to delete the calls.
2. When a confirmation message displays, press the **Yes** soft key or **Ⓟ** key to confirm.

Call time

This menu lets you view the time log for calls made and received.

Note: The actual time invoiced by your service provider may vary, depending on network features, rounding-off for billing purposes, and so on.

The following time logs are available:

- **Last call:** shows the length of your last call.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.

- **Reset timers:** allows you to reset the call timers. You must first enter the phone password and then press the **OK** soft key or **Ⓢ** key.

Note: The password is preset to “00000000” at the factory. To change this password, see “Change Password” on page 95.

Note: This will not reset the Life time timer option.

Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the **#** key until the “Silent Mode On” message and the Silent Mode icon (Ⓢ) is displayed.

In Silent mode, instead of sounds, your phone will vibrate.

To exit and reactivate the previous sound settings, press and hold the **#** key again until “Exit Silent Mode” appears. The Silent Mode icon (Ⓢ) no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.



Press the left soft key for **Menu** mode.

Press the right soft key to access the **Ph.Book** menu.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the **i** key.
3. To view the next function or highlight the next option on a list, press the **Down** Navigation key.

4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **↶** key.
6. To exit the menu structure without changing the settings, press the **⏏** key.

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key or the **ⓘ** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold


You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Options** soft key, highlight the **Hold** option and press the **Select** soft key or the **ⓘ** key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.

Selecting Functions and Options

2. Press the  key to dial the second call.

The first call is automatically put on hold.


Or

1. Press the **Options** soft key and select **New call**.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you can switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.



When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to another person in the room, but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key or the  key.
2. If necessary, press the **Down** key to highlight the **Mute** option.
3. Press the **Select** soft key or the  key. The other person can no longer hear you.

To switch the microphone back on:

1. Press the **Opt.** soft key or the **P** key.
2. If necessary, press the **Down** key to highlight the **Unmute** option.
3. Press the **Select** soft key or the **P** key. The other person can hear you again.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key.
2. You will receive the confirmation, **Speaker On?**
3. Press the **Yes** soft key.
4. To turn the Speakerphone off, press the **Spkr off** soft key.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key or the **P** key.

Selecting Functions and Options

2. Press the **Down** key to highlight the **Phonebook** option and press the **Select** soft key or the **i** key.
3. Press the **Down** key to highlight the **Search** option and press the **Select** soft key or the **i** key.

The Phonebook entries are listed.

4. Enter the name that you wish to find in the textbox located below the entries.
5. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.
6. To view the highlighted entry, press the **View** soft key.

For further details about the Phonebook feature, see "Finding a Phonebook Entry" on page 58.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to Activate. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the **hook** key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.

To end a call on hold, press the **Options** soft key or the **i** key and select the **End held** call option.

To end the current call, press the **hook** key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key or the **i** key and select **Join**. Press the **OK** soft key or the **i** key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the **i** key. Select the **Join** option and press the **OK** soft key or the **i** key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the **i** key, and selecting **Join**. Repeat as required.

Having a Private Conversation With One Participant

1. Press the **Options** soft key or the **i** key and choose the **Split** option. Press the **Select** soft key or the **i** key. The list of call participants appears.
2. Highlight a person by pressing the **Up** or **Down** key, and press the **Select** soft key, the **↶** key, or the **i** key.

Selecting Functions and Options

Now you can talk privately to that person. The other participants can continue to converse with each other.


3. To return to the multi-party call, press the **Options** soft key or the **i** key and select **Join**. Press the **Select** soft key or the **i** key.

 
 
 
All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key or the **i** key and choose the **Split** option. Press the **Select** soft key or the **i** key.
The list of call participants appears.
2. Highlight a person by pressing the **Up** or **Down** key, and press the **Select** soft key or the **i** key.
3. Press the **Options** soft key. Highlight the **End held multiparty** option. Press the **Select** soft key or the **i** key.

The call with that participant ends, but you can continue to talk to the other participants.

4. When you want to end the multi-party call, close the phone or press the  key.



Section 3

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu **Settings**, for example. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. If the menu contains sub-menus, **Language** for example, you can access them by pressing the **Select** soft key or the **ⓘ** key.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the **ⓘ** key.
6. To return to the previous menu level, press the **⏮** key, or the **⏪** key.
7. To exit the menu without changing the settings, press the **⏮** key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Language menu.

1. Press the **Menu** soft key.
2. Press the **9** key for **Settings**.
3. Press the **6** key for **Language**.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

- 1 **Voice messages**
- 2 **Call records**
 - 2.1 Missed calls
 - 2.2 Incoming calls
 - 2.3 Outgoing calls
 - 2.4 Delete all
 - 2.5 Call time
 - 2.5.1 Last call
 - 2.5.2 Total outgoing
 - 2.5.3 Total incoming
 - 2.5.4 Life time
 - 2.5.5 Reset timers

3 t-zones

- 3.1 Home
- 3.2 Favorites
- 3.3 Go to URL
- 3.4 Clear cache

4 IM

5 Messages

5.1 Text messages

- 5.1.1 Create
- 5.1.2 Inbox
- 5.1.3 Outbox
- 5.1.4 Delete all

5.2 Picture messages

- 5.2.1 Create
- 5.2.2 Inbox
- 5.2.3 Outbox
- 5.2.4 Draft
- 5.2.5 Delete all

5.3 Browser messages

- 5.3.1 Inbox
- 5.3.2 Receive
- 5.3.3 Delete all

5.4 Voice mail

- 5.4.1 Call voice mail
- 5.4.2 Voice server number

5.5 Broadcast messages*

5.6 Settings

- 5.6.1 Text messages
- 5.6.2 Picture messages

5.7 Memory status

- 5.7.1 Text messages
- 5.7.2 Picture messages

6 Fun box

- 6.1 t-zones
- 6.2 Sounds
- 6.3 Images
- 6.4 Games
- 6.5 My photos
- 6.6 Delete all
 - 6.6.1 Sounds
 - 6.6.2 Images
 - 6.6.3 My photos
- 6.7 Memory status
 - 6.7.1 Sounds & Images
 - 6.7.2 Games
- 6.8 Melody composer
 - 6.8.1 Compose melody
 - 6.8.2 Memory status

7 Organizer

- 7.1 Alarm
- 7.2 Calendar
- 7.3 Calculator
- 7.4 To do list
- 7.5 Voice memo
 - 7.5.1 Record voice
 - 7.5.2 Voice memos
 - 7.5.3 Delete all
 - 7.5.4 Settings
 - 7.5.5 Memory status
- 7.6 Conversion

- 7.6.1 Length
- 7.6.2 Weight
- 7.6.3 Volume
- 7.6.4 Area
- 7.6.5 Temperature

7.7 Timer

7.8 Stopwatch

8 Camera

8.1 Take and Send

8.2 My photos

8.3 My Album

8.4 My Journal

8.5 Delete all

8.6 Settings

- 8.6.1 Photo size
- 8.6.2 Shutter sound
- 8.6.3 Flash light
- 8.6.4 Default name

8.7 Memory status

9 Settings

9.1 Time & Date

- 9.1.1 Set date
- 9.1.2 World time
- 9.1.3 Set time
- 9.1.4 Time format
- 9.1.5 Auto update

9.2 Display settings

- 9.2.1 Wallpaper
- 9.2.2 Display
- 9.2.3 Backlight

9.2.4 Brightness control

9.2.5 Dialing font color

9.3 Sound settings

9.3.1 My MegaTones

9.3.2 Get More MegaTones

9.3.3 Ringtones

9.3.4 Ring volume

9.3.5 Alert type

9.3.6 Keypad tone

9.3.7 Message tone

9.3.8 Power on/off

9.3.9 Alerts on call

9.3.0 Silent mode

9.3.* Extra tones

9.4 Get More Help

9.5 Greeting message

9.6 Language

9.6.1 Text language

9.6.2 Input mode

9.7 Security

9.7.1 PIN check

9.7.2 Change PIN

9.7.3 Phone lock

9.7.4 Change password

9.7.5 Privacy

9.7.6 FDN mode

9.7.7 Change PIN2

9.8 Slide settings

9.8.1 Up

9.8.2 Down

9.9 Infrared activation

9.0 Extra settings

9.* Reset settings







- 9.*.1 Sound settings
- 9.*.2 Phone settings
- 9.*.3 All settings

9.# Network services

- 9.#.1 Call forwarding
- 9.#.2 Call waiting
- 9.#.3 Network selection
- 9.#.4 Caller ID
- 9.#.5 Band selection

*** Shows only if supported by your SIM card.**

    

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using T9 Mode
 - Using ABC Mode
 - Using Symbols
 - Using Numbers
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

When using your phone, you will often need to enter text, such as when storing a name in Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

 
Your phone has the following text input modes:




- **ABC mode:** allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three, or four times until it displays.
- **T9 mode:** allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the 5 key can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Symbol mode:** This mode allows you to enter symbols, such as punctuation marks.
- **Number mode:** This mode allows you to enter numbers.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.


Example: Writing a text message.

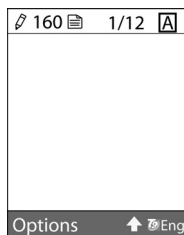Using T9 Mode



1. To change the text input mode, press the  key.
2. Highlight the input option you want, and press the **Select** (left) soft key () or the  key.
3. Choose from the following options:

 Eng: ABC mode

 Eng: T9 mode

 Eng: Number mode

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the **0** key to display the alternative words.
2. When you press the **0** key at the last alternative word, the display shows **Spell** on the bottom line. Press the **Spell** soft key or the **i** key.
3. Enter the word you want to add using ABC mode.
4. Press the **OK** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Note: This feature may not be available for some languages.

Using ABC Mode

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To see all of the symbols, press and hold the ***** key. Use the **Up** and **Down** Navigation keys to page through the different symbols. Press the corresponding number to the symbol you want. Press the **OK** soft key.
- To shift case in T9 mode, use the ***** key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the **Left** and **Right** keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.


Using ABC Mode

To use ABC Mode, use the **1** to **0** keys to enter your text.

1. Press the key labeled with the letter you want:
 - - Once for the first letter
 - - Twice for the second letter
 - - And so on
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

 . @ , - ? ! ' : 1

 A B C 2

a b c 2

Section 5

3 DEF 3

d e f 3

4 GHI 4

g h i 4

5 JKL 5

j k l 5

6 MNO 6

m n o 6

7 PQR 7

p q r 7

8 TUV 8

t u v 8

9 WXYZ 9

w x y z 9

0++ 0

0

 
 
 
 
Using Symbols

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the **C** key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the **Ⓟ** key.

Using Numbers

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

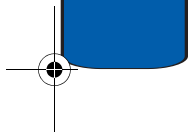

Section 6: Understanding Your Phonebook

Topics Covered

- Storing a Number in the SIM Card
- Storing a Number in the Phone's Memory
- Finding a Phonebook Entry
- Using Phonebook Entry Options
- Dialing a Number from Phonebook
- Speed Dialing
- Editing a Caller Group
- Dialing a Number from the SIM Card
- Copying all SIM Phonebook Entries
- Deleting all Phonebook Entries
- Finding My Phone Number
- Using the Service Dialing Numbers
- Checking the Memory Status



Section 6

This section allows you to manage your daily contacts by storing their name and number in your Phonebook. Phonebook entries can be sorted by name, entry, or group.

Storing a Number in the SIM Card

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **New entry** by pressing the **Up** or **Down** key and press the **Select** soft key or the **ⓘ** key.
3. Highlight the **SIM** option, by pressing the **Up** or **Down** key and press the **Select** soft key or the **ⓘ** key.
4. Enter a phone number and press the **Save** soft key or the **ⓘ** key.
5. Enter a name and press the **OK** soft key or the **ⓘ** key.

For further details about how to enter characters, see "Using ABC Mode" on page 51.

After storing, the phone displays the Phonebook entry number you just created.

6. To use the entry options, press the **Options** soft key.

The following options are available:

- **Send message:** allows you to create a message for the selected Phonebook entry.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Edit number:** allows you to edit the number. Press the **OK** key to save.
- **Edit name:** allows you to edit the number. Press the **OK** key to save.
- **Delete entry:** allows you to delete the entry you have selected. Press **Yes** to confirm delete action, or **No** to cancel.
- **Copy to Phone:** allows you to copy the number to your phone.