

## Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Bluetooth ID : B0XXXXX

www.samsungmobile.com

Printed in Korea  
Code No.:GH68-XXXXXA  
English (EU), 12/2008, Rev. 1.0



### Safety warnings

#### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

#### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

#### Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

#### Safety precautions

##### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

##### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

##### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

##### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

##### Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy. The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements. SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network.

#### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

#### Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

#### Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

#### Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

#### Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded

In general, the closer you are to a wireless base station antenna, the lower the power output. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and as required by the FCC). The highest SAR values for this model phone as reported to the FCC are: GSM850 Head: 0.362 W/Kg, Body-worn: 0.458 W/Kg; GSM1900 Head: 0.222 W/Kg, Body-worn: 0.510 W/Kg. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines. SAR information on this and other model phones can be viewed on-line at [www.fcc.gov/oet/fccid](http://www.fcc.gov/oet/fccid). This site uses the phone FCC ID number, A3LSGHJ700I. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at [www.fcc.gov/cgb/sar](http://www.fcc.gov/cgb/sar).

#### Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

#### Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

# CE 0168

#### FCC Notice and Cautions

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
#### Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

### Important usage information

#### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

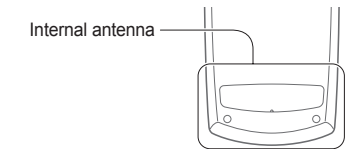

#### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

#### Declaration of Conformity (R&TTE)

We, **Samsung Electronics**  
declare under our sole responsibility that the product

GSM Mobile Phone : SGH-J700i

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY  
EMC  
  
SAR  
  
RADIO

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex(VI) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

The technical documentation kept at :  
**Samsung Electronics QA Lab.**

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*

Yong-Sang Park / S. Manager  
(place and date of issue) (name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

#### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.
- Handle SIM cards and memory cards with care**

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

 
#### Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

#### SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set

## Phone layout

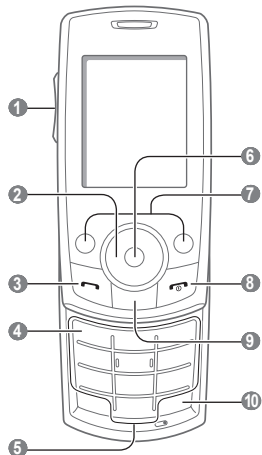

**1**  
**Volume key**  
Adjust the phone's volume;  
Send an SOS message  
▶ Activate and send an SOS  
message

**2**  
**4-way navigation key**  
In Idle mode, access My Menu  
mode (up) or user-defined menus  
(left/right/down); In Menu mode,  
scroll through menu options

**3**  
**Dial key**  
Make or answer a call; In Idle  
mode, retrieve recently dialed,  
missed, or received numbers

**4**  
**Voice mail service key**  
In Idle mode, access voice mails  
(press and hold)

**5**  
**Alphanumeric keys**

**6**  
**Confirm key**  
In Idle mode, launch the web  
browser; In Menu mode, select the  
highlighted menu option or confirm  
an input

**7**  
**Softkeys**  
Perform actions indicated at the  
bottom of the display

**8**  
**Power/Menu exit key**  
Turn the phone on and off (press  
and hold); End a call; In Menu  
mode, cancel input and return to  
Idle mode

**9**  
**Delete key**  
Delete characters or items in an  
application

**10**  
**Silent profile key**  
In Idle mode, activate or deactivate  
Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New email message
	Call diverting active		New voice mail message
	SOS message feature activated		Music playback in progress
	Memory card inserted		FM radio on
	Alarm activated		Normal profile activated
	In Home Zone service area		Silent profile activated
	In City Zone service area		Battery power level

## Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.




2. Insert the battery and replace the battery cover.

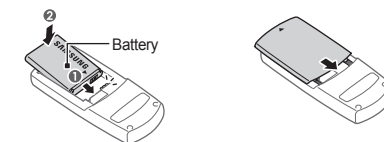

## Charge the battery

 1. Plug the supplied travel adapter.

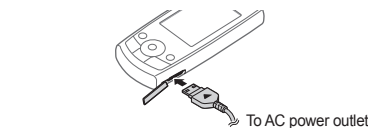

2. When charging is finished, unplug the travel adapter.

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

## Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	<b>Square brackets:</b> phone keys; for example: [Power/Menu exit key] (represents the Power/Menu exit key)
	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

## Turn your phone on or off

To turn your phone on,

1. Slide open the phone.
2. Press and hold [Power/Menu exit key].
3. Enter your PIN and press <OK> (if necessary).
4. When the setup wizard opens, customise your phone as desired by following the screen.

To turn your phone off, repeat steps 1 and 2 above.

## Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [Power/Menu exit key] to dial the number.
3. To end the call, press [Power/Menu exit key].

## Send and view messages

### To send a text message

1. In Idle mode, press <Menu> → Messages → Create new message → Text message.
2. Enter your message text.
3. Press <Options> → Save and send or Send only.
4. Enter a destination number.
5. Press the Confirm key to send the message.

### To view text messages

1. In Idle mode, press <Menu> → Messages → My messages → Inbox.
2. Select a text message.

## Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Idle mode, press <Menu> → Settings → Security → Mobile tracker
2. Enter your password and press <OK>.
3. Scroll left or right to On.
4. Scroll down and press the Confirm key to open the recipient list.

## Answer a call

1. When a call comes in, press [Power/Menu exit key].
2. To end the call, press [Power/Menu exit key].

## Adjust the volume

### To adjust the volume of the ringtone

1. In Idle mode, press <Menu> → Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Options> → Edit.
4. Select Call alert volume.
5. Scroll left or right to adjust the volume level.
6. Press <Save> twice.

### To adjust the volume of voice during a call

While a call is in progress, press [▲/▼] to adjust the earpiece volume.

## Change your ringtone

1. In Idle mode, press <Menu> → Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Option> → Edit.
4. Select Voice call ringtone.
5. Select a ringtone category → a ringtone.
6. Press <Save>.

5. Press the Confirm key to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. When you are finished selecting contacts, press <Options> → Select to return to the recipient list.
9. Press <Options> → Save to save the recipients.
10. Scroll down and enter the sender's name.
11. Press the Confirm key → <Accept>.

## Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

### To activate the SOS message

1. In Idle mode, press <Menu> → Messages → SOS messages → Sending options.
2. Scroll left or right to On.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press the Confirm key to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Options> → Select to return to the recipient list.
8. Press <Options> → Save to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <Save> → <Yes>.

## Call a recently dialed number

1. In Idle mode, press [Power/Menu exit key].
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or [Power/Menu exit key] to dial the number.

## Enter text

### To change the text input mode

- Press and hold [Power/Menu exit key] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [Power/Menu exit key] to change case or switch to Number mode.
- Press and hold [Power/Menu exit key] to switch to Symbol mode.

### T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [Power/Menu exit key] to insert a space. If the correct word does not display, press [0] to select an alternate word.

### ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

### To send an SOS message

1. With the phone closed and the keys locked, press [▲/▼] four times to send an SOS message to preset numbers.  
The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [Power/Menu exit key].

## Use the camera

### Capture photos

1. In Idle mode, press <Menu> → Camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo.
4. Press <Back> to take another photo (step 2).

### View photos

In Idle mode, press <Menu> → My files → Images → My photos → a photo file.

### Number mode

Press the appropriate alphanumeric key to enter a number.

### Symbol mode

Press the appropriate alphanumeric key to select a symbol.

- To move the cursor, press the navigation key.
- To delete characters one by one, press [C]. To delete all of the characters, press and hold [C].
- To insert a space between characters, press [#].
- To enter punctuation marks, press [1].

## Add a new contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select Save → a memory location (phone or SIM) → New.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press the Confirm key or press <Options> → Save to add the contact to memory.

## Listen to music

1. In Idle mode, press <Menu> → Music.
2. Press <Options> → Add music from → a memory type.
3. Select the files you want to include and press <Add>.
4. Press the Confirm key to begin playback.
5. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
▲/▼	Adjust the volume up or down
Navigation	<ul style="list-style-type: none"><li>• Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold)</li><li>• Right: Skip forward; Scan forward in a file (press and hold)</li><li>• Up: Open the playlist</li><li>• Down: Stop playback</li></ul>