

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-XXXXXA
English. 12/2007. Rev. 1.0



SGH-L258

User's Guide



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: **B0XXXXX**
- Java™ is a trademark or registered trademark of Sun Microsystems, Inc.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

 
Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables.

Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 45.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:




Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.



Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.



Indicates a key on the phone.
For example, []



- **Touch screen**

Your phone has a touch-sensitive display. You can access a desired function with a touch on the screen.

Special features of your phone



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.



- **Music player**

Play music files using your phone as a music player. You can use other phone functions while listening to music.



- **FM radio**

Listen to your favourite radio stations anytime, anywhere.



- **Image editor**

Edit or decorate your photos.



- **Photo printing**

Print your photos to preserve your best moments forever.



- **Offline mode**

Switch your phone to Offline mode to use its non-wireless functions while on an aeroplane.



- **Bluetooth**

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **SOS message**

Send SOS messages to your family or friends for help in an emergency.

Contents

Unpack 6

Make sure you have each item

Get started 6

First steps to operating your phone

Assemble and charge the phone	6
Power on or off.....	7
Phone layout.....	8
Keys and icons	9
Access menu functions	12
Enter text	13
Customise your phone	18

Step outside phone 20

Begin with call functions, camera, music player, web browser, and other special features

Make or answer calls	20
Use the camera	22

Play music.....	23
Listen to the FM radio	25
Browse the web	26
Use Phonebook	27
Send messages	27
View messages	29
Use Bluetooth	30
Use Sketch memo	31

Menu functions 33

All menu options listed

Health and safety information 45

Overview of menu functions

To access Menu mode, press <**Menu**> in Idle mode.

1 Call log

- 1 Recent contacts
- 2 Missed calls
- 3 Dialled calls
- 4 Received calls
- 5 Delete all
- 6 IP call
- 7 Area code
- 8 Call time
- 9 Call costs¹

2 Phonebook

- 1 Contact list
- 2 FDN contacts¹
- 3 Create contact
- 4 Group
- 5 Speed dial
- 6 My namecard
- 7 Own number
- 8 Management
- 9 Service number¹

3 Music

4 Browser

- 1 Home
- 2 Anysearch
- 3 Fun club
- 4 Bookmarks
- 5 Enter URL
- 6 Clear cache
- 7 Profile settings
- 8 Current profile

5 Messages

- 1 Create new message
- 2 My messages
- 3 Templates
- 4 Delete all
- 5 Settings
- 6 SOS messages
- 7 Broadcast messages
- 8 Memory status

6 My files

- 1 Images
- 2 Videos
- 3 Music

6 My files

- 4 Sounds
- 5 Other files
- 6 Memory card²
- 7 Memory status

7 Planner

- 1 Calendar
- 2 Memo
- 3 Sketch memo
- 4 World clock
- 5 Calculator
- 6 Converter
- 7 Timer
- 8 Stopwatch

8 Camera

- 1 Take a photo
- 2 Record video
- 3 Go to My photos
- 4 Go to My video clips

9 FM radio

* Applications

- 1 Voice recorder
- 2 Image editor
- 3 Bluetooth
- 4 Java world
- 5 SIM application toolkit¹

0 Alarm

Settings

- 1 Time and date
- 2 Phone settings
- 3 Display settings
- 4 Sound settings
- 5 Touch settings
- 6 Light settings
- 7 Network services
- 8 Security
- 9 Memory status
- 10 Reset settings
- 11 Key management

1. Available only if supported by your SIM card.

2. Available only if a memory card is inserted.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide
- Stylus pen

You can obtain various accessories from your local Samsung dealer.

 


- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.
- Use the purchased accessories with only Samsung-authorized devices. The use of these accessories with other devices could cause problems and any repair costs would not be covered by the warranty.

Get started

First steps to operating your phone


Assemble and charge the phone

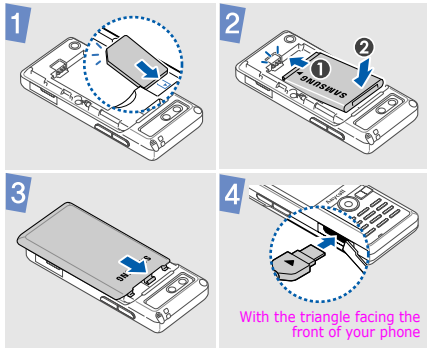




Improperly connecting the adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

 
✓ FRONT



✗ FRONT

 


Removing the battery cover

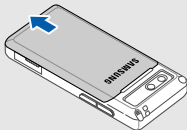 


Power on or off

Switch on

 
1. Press and hold [.
2. If necessary, enter the PIN and press <→>.

Switch off


Press and hold [.

Phone layout

Front view

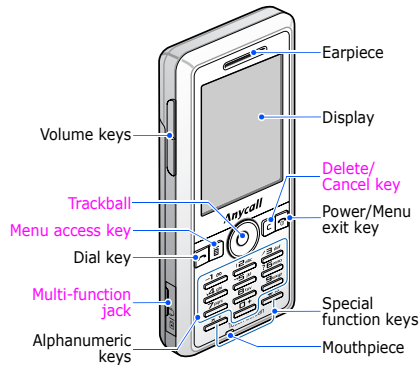

Rear view

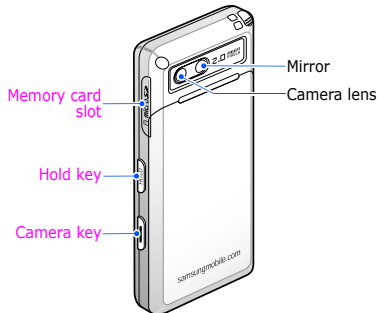 

You can lock the keypad to prevent any unwanted phone operations from accidentally pressing any of the keys. In Idle mode, press **[HOLD]**. To unlock the keypad, press **[]** and then **[*]**.

Keys and icons

Keys



In Idle mode, access menu mode.



Delete characters from the display or items in an application.

In Menu mode, return the display to the pervious menu level.



In Idle mode, scroll up to access My menu mode and scroll down, left, or right to access your favourite menus directly.

In Idle mode, press to launch the web browser.

In Menu mode, scroll through menu options, select the highlighted menu option or confirm input.



Make or answer a call.

In Idle mode, retrieve the numbers recently dialled, missed, or received.



Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, press and hold [**1**] to access your voicemail server. Press and hold [**0**] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [#] to activate or deactivate Silent mode. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.



Lock the exposed keys and screen.



In Idle mode, enter the **Camera** menu. Press and hold to turn on the camera.

In Camera mode, take a photo or record a video.

Icons

The following icons may appear on the top line of the screen to indicate your phone's status. Depending on your country or service provider, the icons shown on the display may vary. **You can change settings or open a menu by tapping some icons.**



Signal strength














Call in progress









 


Out of your service area or Offline mode









Alarm set

	New message: <ul style="list-style-type: none"> : Text message : Multimedia message : Email : Voicemail
	Call diverting active
	Bluetooth active
	Synchronised with PC
	GPRS (2.5G) network
	EDGE network
	Home Zone

	Office Zone
	Music playback in progress
	Music playback paused
	FM radio on
	Memory card inserted
	Bluetooth hands-free car kit or headset connected
	SOS message feature active
	Silent mode (Vibration)
	Silent mode (Mute)



Ringer type





- None: Melody
-  : Increasing melody
-  : Vibration
-  : Melody and vibration
-  : Increasing and vibration
-  : Vibration then melody
-  : Melody then vibration



Battery power level

Access menu functions


Select an option

1. Tap a desired icon.
2. Tap the left or right arrow to scroll left or right.
Tap and drag the scroll bar to scroll up or down.
3. Tap a displayed option or function.
4. Tap  or  to confirm the function displayed or option highlighted.
5. Tap  to move up one level.
Press [] to return to Idle mode.

Use menu numbers

Press the number key corresponding to the option you want.

Enter text

You can use both the touch screen and the keypad to enter characters. To use the touch screen, tap . To use the keypad, press any alphanumeric or special function key.

Using the keypad

Change the text input mode	In the text entry screen, press [#].
Pinyin mode	<p>To enter a word:</p> <ol style="list-style-type: none">1. Press the keys corresponding to the Chinese phonetic spelling, pinyin.2. Scroll left or right to select alternative pinyins.

3. Press [*] for tones.

4. If necessary, scroll up or down to find the character you want.

5. Press the trackball. Numbers are added to each character.

6. Press the number key corresponding to the character.

Predictive text

When you enter a character, your phone displays additional characters that are commonly used to make words and phrases. This helps you enter phrases or words with minimal key presses.

Stroke mode

To enter a word:

1. Press the keys corresponding to a character's component strokes.
2. If necessary, scroll up or down to find the character you want.
3. Press the trackball. Numbers are added to each character.
4. Press the number key corresponding to the character you want.

Predictive text

When you enter a character, your phone displays additional characters that are commonly used to make words and phrases. This helps you enter phrases or words with minimal key presses.

ABC mode

To enter a word:

Press the appropriate key until the character you want appears on the display.



English word mode	<p>To enter a word:</p> <ol style="list-style-type: none"> 1. Press [2] to [9] to start entering a word. 2. Enter the whole word before editing or deleting characters. 3. When the word displays correctly, press [0] to insert a space. Otherwise, scroll down to select a word from the word choices.
Number mode	Press the keys corresponding to the digits you want.

Symbol mode	Press the keys corresponding to the symbols you want.
Other operations	<ul style="list-style-type: none"> • Press [1] to enter punctuation marks or special characters in ABC mode and English word mode. • Press [*] to change case in ABC mode or English word mode. • Press [0] to insert a space. • Press the Navigation keys to move the cursor. • Press [C] to delete characters one by one. • Press and hold [C] to clear the entire display.

 
Using the touch screen

Change the text input mode



 

 
In the text entry screen, tap:

-  to switch to Virtual keypad mode.
-  to switch to Handwriting mode.

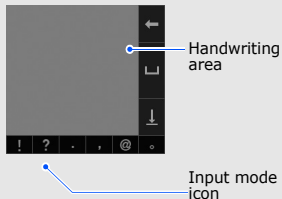 
Handwriting mode



To enter a word:

1. Tap the input mode icon to select the mode you want.
 - : English
 - : Pinyin
 - : Stroke
 - : Number
 - : Symbol
2. Write a character at a time on the screen.
3. For handwriting tips, see page 17.
4. Tap one of the choices to enter it into text.

Virtual keypad mode



Input mode icon

To enter a word:

1. Tap the input mode icon to select the mode you want.
2. Tap the character you want.


Handwriting tips

A		N	
B		O	
C		P	
D		Q	
E		R	
F		S	
G		T	
H		U	
I		V	
J		W	
K		X	
L		Y	
M		Z	



a	ᵃ	n	ᵐ ᵑ ᵒ
b	ᵇ ᵇ²	o	ᵒ ᵒ¹ ᵒ²
c	ᶜ	p	ᵖ ᵖ¹ ᵖ²
d	ᵀ ᵀ¹ ᵀ² ᵀ³	q	ᵑ ᵑ¹ ᵑ² ᵑ³
e	ᵉ	r	ᵣ
f	ᶠ	s	ᵀ
g	ᵍ ᵍ¹	t	ᵀ ᵀ¹ ᵀ² ᵀ³
h	ᵂ ᵂ¹ ᵂ²	u	ᵁ
i	ᵢ ᵢ¹ ᵢ²	v	ᵁ
j	ᵋ ᵋ¹ ᵋ²	w	ᵁ
k	ᵏ ᵏ¹ ᵏ² ᵏ³	x	ᵁ ᵁ¹ ᵁ² ᵁ³
l	ᵁ ᵁ¹ ᵁ²	y	ᵁ ᵁ¹ ᵁ² ᵁ³
m	ᵐ ᵐ¹ ᵐ²	z	ᵁ ᵁ¹ ᵁ² ᵁ³

Customise your phone

Display language

1. In Idle mode, tap  → **Settings** → **Phone settings** → **Language** → **Display**.
2. Select a language.


 
Call ringer melody

1. In Idle mode, tap  → **Ring tone**.
2. Scroll left or right.
3. Select a ringtone.
4. Tap .


Key tone volume

In Idle mode, press [Volume] to adjust the key tone volume.


Idle mode wallpaper

1. In Idle mode, tap  → **Settings** → **Display settings** → **Wallpaper** → **Wallpaper**.
2. Select an image category.
3. Select an image.
4. Tap .


Menu mode skin colour

1. In Idle mode, tap  → **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.


 
 
Menu shortcuts

1. In Idle mode, tap  → **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Silent mode

You can switch the phone to Silent mode to avoid disturbing other people. In Idle mode, **tap and hold** , or **press and hold** [**#**].

Phone lock





1. In Idle mode, **tap**  → **Settings** → **Security** → **Phone lock**.
2. Select **Enable**.
3. Enter a new 4- to 8-digit password and **tap** .
4. Enter the new password again and **tap** .

Step outside phone



Begin with call functions, camera, music player, web browser, and other special features

Make or answer calls


Make a call

1. In Idle mode, enter an area code and phone number and press [].
Alternatively, tap  to open the onscreen keypad and enter the phone number. And then, tap . Press [Volume] to adjust the volume during a call.
2. Press [] to end the call.

Answer a call

1. When the phone rings, press [].
2. Press [] to end the call.

Use the speakerphone feature

During a call, press the trackball and tap  to activate the speaker.

Press the trackball again to switch back to the earpiece.

Make a multi-party call



1. During a call, call the second participant.
The first call is put on hold.
2. Press <Options> and select **Join**.
3. Repeat step 1 and 2 to add more participants.

-
4. During a multi-party call:

- Press <Options> and select **Split** to have a private conversation with one participant.
- Press <Options> and select **Remove** to drop one participant.

5. Press [] to end the multi-party call.

Make an IP call

1. In Idle mode, enter an area code and phone number. Alternatively, tap  and enter an area code and phone number.
2. Tap  → **IP call**.

Use the camera



Take a photo

1. In Idle mode, press and hold **[Camera]** to turn on the camera.
2. Aim the lens at the subject and make any desired adjustments.
3. Press **the trackball** or **[Camera]** to take a photo. The photo is saved automatically.
4. Press **<Ⓢ>** to take another photo.

View a photo

1. In Idle mode, press **[Camera]** and select **Go to My photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press **[Camera]** and select **Record video**.
2. Press **the trackball** or **[Camera]** to start recording.
3. Press **[Camera]** or tap  to stop recording. The video is saved automatically.
4. Tap  to record another video.

View a video

1. In Idle mode, press **[Camera]** and select **Go to My video clips**.
2. Select the video you want.


Play music

Prepare music files





Use these methods:

- Download from the wireless web.
- Download from a PC using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card and insert the card into the phone.
- Copy to a memory card. See the next section.






Copy music files to a memory card








1. Insert a memory card into the phone.
2. In Idle mode, tap  → **Settings** → **Phone settings** → **USB settings** → **Mass storage**.
3. Connect your phone and PC with an optional PC data cable.
4. Select **Open folder to view files** when a pop-up window appears on your PC.
5. Copy files from the PC to the memory card.
6. When you have finished, disconnect the phone from the PC.

Create a playlist

1. In Idle mode, tap  → **Music**.
2. Tap  → **Add music from** → a memory location.
3. Press the trackball or tap  to select files and tap .




Play music files






1. From the music player screen, press the trackball or tap .
2. During playback, use the following actions:
 - Press the trackball, or tap  or  to pause or resume playback.
 - Scroll left or tap  to return to the previous file. Tap and hold  to scan backward in a file.

- Scroll right or tap  to skip to the next file. Tap and hold  to scan forward in a file.
 - Tap , , or  to change the repeat mode.
 - Tap  to play tracks in random order.
 - Tap  to display the volume adjustment indicator.
 - Scroll up to open the playlist.
 - Press [Volume] to adjust the volume.
3. Scroll down to stop playback.

Listen to the FM radio



Listen to the radio

1. Plug the connector of the supplied headset into the multi-function jack on the phone.
2. In Idle mode, tap  → **FM radio**.
3. Press the trackball or tap  to turn on the radio.
4. When you turn on the FM radio for the first time, tap  to start automatic tuning.
Available radio stations are automatically saved.



5. Scroll up or down to find the radio station you want.
Alternatively, scroll left or right to select a stored radio station.
6. While listening to the radio, use the following icons:
 -  or  - : open the saved station list.
 - : display the volume adjustment indicator.
7. Press the trackball or tap  to turn off the radio.

Store radio stations

By automatic tuning:

1. From the radio screen, tap  → **Self-tuning**.
2. Tap  to confirm. Available radio stations are automatically saved.

By manual setup:




1. From the radio screen, scroll up or down to find the radio station you want.
2. Tap  → **Add**.
3. Tap .

Browse the web

Launch the web browser



In Idle mode, press the trackball and tap **Home**. The homepage of your service provider opens.

Navigate the web


- To scroll through browser items, scroll up or down.
- To select an item, press the trackball or tap .
- To return to the previous page, tap  or press [**C**].
- To access browser options, select  or press [*****].
- To access other phone menus, press [**#**].
- To return to the homepage, press and hold [**C**].


Use Phonebook

Add a contact

1. In Idle mode, enter a phone number and **tap** .
2. **Tap Save** → a memory location → **New**.
3. For **Phone**, select a number type.
4. Specify contact information.
5. **Tap**  → **Save** to save the contact.



Find a contact

1. In Idle mode, **tap** .
2. Enter the first few letters of the name you want.


-
3. Select a contact.
 4. Scroll to a number and press [] to dial, or **tap any field** to edit contact information.



Send messages

Send a text message


1. In Idle mode, **tap** .
2. Enter the message text.
3. **Tap**  → **Save and send** or **Send only**.
4. Enter destination numbers.
5. **Press the trackball to send the message to send the message.**



Send a multimedia message

1. In Idle mode, tap  → **Messages** → **Create new message** → **Multimedia message**.
2. Tap **Subject**.
3. Enter the message subject and press the trackball to send the message.
4. Tap **Image or video** and add an image or a video clip.
5. Tap **Music or sound** and add a music file or a sound clip.
6. Tap **Text**.

7. Enter the message text and press the trackball.
8. Tap  → **Send**.
9. Tap a destination field.
10. Enter destination numbers or email addresses and press the trackball.
11. Tap  → **Send**.


Send an email

1. In Idle mode, tap  → **Messages** → **Create new message** → **Email**.
2. Tap **Subject**.
3. Enter the email subject and press the trackball.


-
4. Tap **Message**.
 5. Enter the email text and press the **trackball**.
 6. Tap **File attach**.
 7. Add media files, contacts, calendar items, or other files.
 8. Tap  → **Send**.
 9. Tap a destination field.
 10. Enter email addresses and press the **trackball**.
 11. Tap  → **Send** to send the email.

View messages



View a text message

1. In Idle mode, tap  → **Messages** → **My messages** → **Inbox**.
2. Select a text message.

View a multimedia message

1. In Idle mode, tap  → **Messages** → **My messages** → **Inbox**.
2. Select a multimedia message.


View an email

1. In Idle mode, tap  → **Messages** → **My messages** → **Email inbox**.
2. Tap **Check new mail**.
3. Select an email or a header.
4. If you selected a header, tap  → **Retrieve** to view the body of the email.


Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.



Turn on Bluetooth

1. In Idle mode, tap  → **Applications** → **Bluetooth** → **Activation** → **On**.
2. Tap **My phone's visibility** → **On** to allow other devices to locate your phone.


 
Search for and pair with a Bluetooth device

1. In Idle mode, tap  → **Search new device**.
 2. Select a device.
 3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and tap →.
- When the owner of the other device enters the same code, pairing is complete.

Send data




1. Access an application, such as **Phonebook**, **My files**, **Calendar**, **Memo**, or **Sketch memo**.
2. Select an item.
3. Tap  → **Send via** → **Bluetooth**.
4. For sending a contact, select which data you want to send.
5. Search for and select a device.
6. If necessary, enter a Bluetooth PIN and tap .





Receive data

1. If necessary, enter the Bluetooth PIN and tap .
2. Tap  to confirm that you are willing to receive.

Use Sketch memo

Create a new sketch memo

1. In Idle mode, tap .
2. Draw a sketch using the stylus pen on the screen. You can use the following sketch tools on the screen:
 -  : use a pen.
 -  : use a brush.

- : erase the drawing as you move the pen.
- : cancel your last action.
- : change the line thickness. This option is not available when you use a brush.
- : change the pen or brush colour.

3. Tap .

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Call log

Menu	Description
Recent contacts, Missed calls, Dialled calls, Received calls	Check the most recent calls dialled, received, or missed.
Delete all	Delete all of the records in each call type.
IP call	Select a default IP call prefix number. You can also add new prefix numbers.

Menu	Description
Area code	Find and retrieve area and country codes to quickly and easily dial phone numbers.
Call time	Check the time record for calls made and received.
Call costs	Check the cost of your calls, if supported by your SIM card.

Phonebook

Menu	Description
Contact list	Search for contact information stored in Phonebook.

Menu	Description
FDN contacts	Create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature.
Create contact	Add a new contact to Phonebook.
Group	Organise your contacts in caller groups.
Speed dial	Assign a speed dial number for your most frequently dialled numbers.
My namecard	Create a name card and send it to other people.

Menu	Description
Own number	Check your phone numbers, or assign a name to each of the numbers.
Management	Manage contacts in Phonebook or change the default settings for Phonebook.
Service number	View the SDN (Service Dialling Number) list assigned by your service provider, if supported by your SIM card.

Music

Listen to music. You can also make your own music playlists.

Browser

Menu	Description
Home	Connect your phone to the network and load the homepage of the wireless web service provider.
Anysearch	Use this Java-based application to search for various information from the wireless web. Your phone's skin colour, menu background image, and keytone settings do not affect this application.

Menu	Description
Fun club ¹	Access Samsung Fun Club, the preset website providing Samsung mobile phone users with attractive download services of up-to-date ringtones and wallpapers.
Bookmarks	Save URL addresses in order to quickly access web pages.
Enter URL	Enter a URL address and access the associated web page.

Menu	Description
Clear cache	Clear the cache, which is a temporary memory site that stores recently accessed web pages.
Profile settings	Set up connection profiles for the web browser.
Current profile	Select a connection profile to be used for accessing the wireless web.

1. All rights and responsibilities for the Java-based games embedded in your phone and media contents provided by Samsung Fun Club, such as images, sounds, and Java applications, belong to their respective owners.

Messages

Menu	Description
Create new message	Create and send text, multimedia, or email messages.
My messages	Access messages that you have received, sent, or that have failed during sending.
Templates	Make and use templates of frequently used messages or passages.
Delete all	Delete messages in each message folder all at once.
Settings	Set up various options for using the messaging services.

Menu	Description
SOS messages	Specify options for sending and receiving an SOS message. You can send an SOS message by pressing [Volume] 4 times in idle mode, when the phone is closed and the exposed keys are locked.
Broadcast messages	Change the settings for receiving broadcast messages.
Memory status	Check information about the memory currently in use.

My files

Menu	Description
Images, Videos, Music, Sounds, Other files	Access media files and other files.
Memory card	Access the files stored on a memory card. This menu is only available when you insert a memory card into the phone.
Memory status	Check information about the memory currently in use.

Planner

Menu	Description
Calendar	Keep track of your schedule.
Memo	Make memos for things that are important and manage them.
Sketch memo	Create memos by drawing a sketch using the stylus pen on the touch screen.
World clock	Set your local time zone and find out the current time in another part of the world.
Calculator	Perform arithmetic functions.

Menu	Description
Converter	Do conversions, such as length and temperature.
Timer	Set a period of time for the phone to count down.
Stopwatch	Measure elapsed time.

Camera

Menu	Description
Take a photo	Take photos in various modes.
Record video	Record a video of what is displayed on the camera screen.
Go to My photos	Access the list of photos you have taken.

Menu	Description
Go to My video clips	Access the list of videos you have recorded.

FM radio

Listen to music or news via the FM radio on your phone.

Applications

Menu	Description
Voice recorder	Record voice memos and any other sounds.
Image editor	Edit your photos using various editing tools.

Menu	Description
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.
Java world ¹	Access Java games and applications.
SIM application toolkit	Use a variety of additional services offered by your service provider. Depending on your SIM card, this menu may be available but labelled differently.

1. All rights and responsibilities for the Java-based games embedded in your phone and media contents provided by Samsung Fun Club, such as images, sounds, and Java applications, belong to their respective owners.

Alarm

Set a wake-up call to wake you up in the morning or an alarm to alert you to an event at a specific time.

Settings

Menu	Description
Time and date	Change the time and date displayed on your phone.
Phone settings → Language	Select a language for the display text. Also, select Fuzzy pinyin pairs so that you can easily enter characters that are similar in phonetic spelling.

Menu	Description
Phone settings → Greeting message	Enter the greeting that is displayed briefly when the phone is switched on.
Phone settings → Shortcuts	Use the Navigation keys as shortcuts to access specific menus directly from Idle mode. [Up] is fixed as a shortcut to My menu mode.
Phone settings → My menu	Set up a menu of your own using your favourite menu items, which can be easily accessed by pressing [Up] in Idle mode.

Menu	Description
Phone settings → Advanced shortcuts	Activate the advanced shortcut feature, which allows you to access SMS, alarm, calendar, converter, and calculator applications from the dialling screen. This menu may not be available, depending on the font type on the dialling screen.
Phone settings → Volume key	Set how the phone reacts if you press and hold [Volume] when a call comes in.
Phone settings → USB settings	Select a USB mode that will be used when you connect your phone to another device via USB interface.

Menu	Description
Phone settings → Extra settings	Change additional settings for using the phone.
Phone settings → Offline mode	Switch the phone to Offline mode, in which the phone functions requiring network connection are deactivated.
Display settings → Wallpaper	Change the background image that is displayed in Idle mode.
Display settings → Main menu style	Select a display style for the main menu screen.
Display settings → Text display	Change the display settings for the text displayed on the idle screen.

Menu	Description
Display settings → Skin	Select a skin colour pattern for Menu mode.
Display settings → Brightness	Adjust the brightness of the display for varying lighting conditions.
Display settings → Dialling display	Customise the settings for the display while dialling.
Display settings → Calendar	Display the calendar of the current month on the idle screen. This menu may not be available depending on the wallpaper type.
Display settings → Show caller ID	Set the phone to display or block caller information on all missed calls and incoming messages.

Menu	Description
Sound settings → Incoming call	Change the sound settings for incoming calls.
Sound settings → Keypad tone	Select the tone that the phone sounds when you press a key. This menu may not be available, depending on the font type on the dialling screen.
Sound settings → Message tone	Change the sound settings for incoming messages individually according to message type.
Sound settings → Touch tone	Set your phone to sound when you touch the screen.
Sound settings → Power-on/off tone	Set your phone to sound when it is switched on or off.

Menu	Description
Sound settings → On-time alarm	Set the phone to sound an alert every hour on the hour.
Sound settings → Silent mode	Set how the phone acts to alert you to a specific event while in Silent mode.
Sound settings → Extra tones	Customise additional tones for the phone.
Touch settings → Calibration	Calibrate your phone's touch screen by tapping the cross hair object firmly and precisely.
Touch settings → Hand writing	Customise settings for using hand writing input mode.

Menu	Description
Light settings → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Light settings → Keypad light	Set how the phone controls the use of the keypad light.
Network services → Call diverting	Set the phone to reroute incoming calls to a phone number that you specify.
Network services → Call barring	Set the phone to restrict calls.
Network services → Call waiting	Set the phone to inform you when someone is calling you while on another call.

Menu	Description
Network services → Network selection	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network services → Caller ID	Set the phone to hide your phone number from the person you are calling.
Network services → Voice mail server	Store the number of the voicemail server and access your voicemails.
Network services → Band selection	Change to an appropriate band when you travel abroad.
Security → PIN check	Activate your PIN to protect your SIM card against unauthorised use.

Menu	Description
Security → Change PIN	Change the PIN.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security → Change password	Change the phone password.
Security → Privacy	Lock access to call records, contacts, messages, files, or all menu functions on the phone.
Security → SIM lock	Set the phone to work only with the current SIM card by assigning a SIM lock password.

Menu	Description
Security → FDN mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your SIM card.
Security → Change PIN2	Change your current PIN2, if supported by your SIM card.
Memory status	Check information about the memory currently in use.
Reset settings	Reset the phone's settings you have changed.
Key management	Manage the licence keys you have acquired to activate media files locked by DRM systems.

Health and safety information

The names and content of toxic and hazardous substances or elements

Part	Toxic and hazardous substances or elements					
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
PBA	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Metal	X	O	O	O	O	O
Battery	X	O	O	O	O	O
Accessory	X	O	O	O	O	O

O: Indicates that the toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

X: Indicates that the toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.

The information provided in this table is based on figures presented by supply manufacturers and tests conducted by Samsung. All toxic and hazardous substances or elements are used at the minimum level allowed by current technology. Samsung continues to make every effort to reduce the need for these substances or elements through improved technology.



The “environmental protection use period” for this product is 20 years and the corresponding logo is as shown on the left. Exchangeable parts, such as batteries, may have different periods of warranty. The “environmental protection use period” is valid only when the product is used under normal conditions, as described in the user’s guide.

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so

as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

When approval test is done, no Samsung supplied accessories are available but maybe available later after approval.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

GSM1900 Head: 0.569 W/Kg,
Body-worn: 0.874 W/Kg.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that

positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3LSGHL258. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and

Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the

source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any

biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and

to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The

following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies,

however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers.

None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects,

such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). FDA has been a leading participant in the World Health Organization international

Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs

in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically

with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in

the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a

metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted

cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other

medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World Health Organization (WHO):

- <http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless

phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.

If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number

when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

“The wireless industry reminds you to use your phone safely when driving.”

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to

another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care

facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other

official emergency number). Emergency numbers vary by location.

3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

- ☑ • This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and,

- ☑ if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the

phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/ Ring Tones

Many services and features are network dependent and may require additional

subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.

- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not

in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals

of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone

repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.