- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



© Vodafone Group 2007. Vodafone, the Vodafone logos, and Vodafone live! are trade marks of the Vodafone Group. Other product and company names mentioned herein may be the trade marks of their respective owners.

User Manual SGH-L400V





Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
 Bluetooth QD ID: B0XXXXX
- Java[™] is a trademark or registered trademark of Sun Microsystems, Inc.
- Picsel and Picsel Viewer[™] are trademarks of Picsel Technologies, Inc.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 29.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:

- Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
 - Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [] Indicates a key on the phone. For example, [~]
- < > Indicates a soft key, whose function is displays on the phone screen. For example, <**Select**>



3 G

Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

Special features of your phone



Camera and camcorder

Use the camera module on your phone to take a photo or record a video.



Media player

Play media files on your phone. You can enjoy high quality videos and music.



Bluetooth

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



Email

Send and receive emails with image, video, and audio attachments.



• File viewer

Open documents in various formats on the phone without corruption.



Postcard

Send photos to your family or friends as an actual postcard.



Messenger

Have a conversation with other people by sending and receiving instant messages.



Calendar

Keep track of your daily, weekly, and monthly schedule.



Web browser

Access the wireless web to get up-to-the-minute information and a wide variety of media content.

Contents

Unpack	6
Make sure you have each item	
Get started	6
First steps to operating your phone	
Assemble and charge the phone Power on or off Phone layout Keys and icons Access menu functions Use Toolbar menu icons Enter text Customise your phone	
Step outside the phone	14
Begin with call functions, camera, web browser, special features	and other
Make or answer calls Use the camera Play music Browse the web	15 15
Use Contacts	18

lealth and safety information	29
All menu options listed	
Menu functions	22
Switch applications	21
Jse Bluetooth	20
/iew messages	20
Send messages	18
3	

Overview of menu functions

To access Menu mode, press < Menu > in Idle mode.

1 Entertainment

- 1 My games
- 2 Camera
- 3 Mobile TV
- 4 My Videos

2 Vodafone Live!

- 1 Vodafone Live!
- 2 Enter URL
- 3 Bookmarks
- 4 History
- 5 Advanced
- 6 Browser settings 7 Saved pages
- 8 Games
- 9 Ringtones 10 Pictures
- 11 News
- 12 Sports
- 3 Calls

4 Music

- 1 My music
- 2 Radio DJ1
- Music store
- 4 My wishlist1

Messaging

- 1 Create message
- 2 Inbox
- Email inbox
- 4 Drafts
- 5 Outbox
- 6 Sent message
- Mv folder 8 Templates
- 9 Messenger¹
- 10 Voice mail
- 11 live! Studio1
- 12 Delete all
- 13 Messaging settings
- 14 Memory status

6 My files

Pictures Videos Ringtones Games

6 My files

Music

Applications

Themes

Voice recordings

Other documents live! Studio1

Memory status

Organiser & Tools

- 1 Vodafone²
- 2 Alarms
- My Applications
- 4 Calendar
- 5 Bluetooth
- 6 Synchronise 7 Calculator
- 8 Converter
- 9 Task
- 10 Memo
- 11 Voice recorder
- 12 World clock 13 Timer
- 14 Stopwatch
- 15 Memory status

8 Contacts

9 Settings

- 1 Phone settings
- Display settings
- Messaging settings Call settings
- Contact settings
- 6 Calendar settings
- Camera settings
- Media player settings
- 9 Network settings
- 10 Security
- 11 Memory settings
- 1. Available only if supported by your country.
- 2. Available only if supported by vour USIM or SIM card.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide
- Headset

You can obtain various accessories from your local Samsung dealer.




 The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Get started

First steps to operating your phone

Assemble and charge the phone

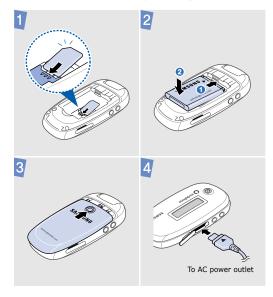

Removing the battery cover



Power on or off

Switch on	 Open the phone. Press and hold []. If necessary, enter the PIN
	and press <confirm></confirm> .
Switch off	 Open the phone. Press and hold [♠].

Low battery indicator

When the battery is low:

- a warning tone sounds,
- · the low battery message displays, and
- the empty battery icon (blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

Phone layout

With the phone open



 
With the phone closed



Keys and icons

Keys

Perform the function indicated on the bottom line of the display.



Up: Vodafone Live!

Down: Contacts
 Left: Messaging
 Right: My files

You can assign a shortcut to a key. See page 26

In Menu mode, scroll through menu options.

In Idle mode, access Menu mode.
In Menu mode, select the highlighted menu option or confirm input.

Make or answer a call.

In Idle mode, retrieve numbers recently dialled, missed, or received.

Delete characters from the display or items in an application.

Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.

Enter numbers, letters, and some special characters.

O Next

In Idle mode, press and hold [1] to access your voicemail server. Press and hold [0] to enter an international call prefix (the + symbol).

Enter special characters or perform special functions.

In Idle mode, press and hold [#] to activate or deactivate the Silent profile. Press and hold [*] to enter a pause between numbers.

①	Adjust the phone volume.
\bigcirc	Open the application switch window to access other applications without exiting the current application.
(a)	In Idle mode, press and hold to turn on the camera, or make a video call. In Camera mode, take a photo or record a video. In the dialling screen, make a video call.
Icons	
screen to ind	icons may appear on the top line of the licate your phone's status. Depending try or service provider, the icons shown y may vary.
السخ	Signal strength
r _G	GPRS (2.5G) network
©	Connecting to GPRS (2.5G) network or transferring data in GPRS (2.5G) network

E	EDGE network
	Connecting to EDGE network or transferring data in EDGE network
=	UMTS (3G) network
E ĝi	Connecting to UMTS (3G) network or transferring data in UMTS (3G) network
	Voice call in progress
X.	Out of your service area
	Video call in progress
	Out of your service area
<u></u>	Roaming network
*	Bluetooth active
9	Connected with PC via a USB port
0	Browsing Internet
⊕ ê	Connected to secured web page
SS	Memory card inserted
	_

(111)

뗃 New message: E: Text message • 📳: Multimedia message or Voicemail • 🕮: Email • 🐼 : Push • 🔂 : Configuration message 4 Profile setting 4: Normal 🦸 : Silent 🚓 : Car • 🖀 : Meeting 🖳 : Outdoor **La**: Sleeping • 📓 : Flight

Battery power level

Access menu functions

Select an option	 Press a desired soft key. Press the Navigation keys to move to the next or previous option.
	 Press Select> or [Centre] to confirm the function displayed or option highlighted.
	4. Press < Back > to move up one level. Press [♠] to return to Idle mode.
Use menu numbers	Press the number key corresponding to the option you want.

Use Toolbar menu icons

In Idle mode, there are icons on the centre of the display, which give you easy access to popular menus.

menus.	
Navigate around the Toolbar screen	 To access Toolbar menu icons, press < Toolbar> in Idle mode. To scroll through menu icons, press [Left] or [Right]. To scroll through submenus in a menu, press [Up] or [Down]. To open a menu window, press [Centre]. To close a menu window, press < Exit>.
Available menu icons	 access the Vodafone Live! menu. access a missed call log list. create a new message or view received messages. change the profile settings. assign or change your shortcut assignments. view missed event alarms and access the calendar.

Enter text

Change the text input mode	 Press and hold [*] to switch between T9 mode and ABC mode. Press [*] to change case or switch to Number mode. Press and hold [#] to switch to Symbol mode.
ABC mode	To enter a word: Press the appropriate key until the character you want appears on the display.
T9 mode	 To enter a word: Press [2] to [9] to start entering a word. Enter the whole word before editing or deleting characters. When the word displays correctly, press [#] to insert a space. Otherwise, press [0] to display alternative word choices.
Number mode	Press the keys corresponding to the digits you want.

Symbol mode

Press the corresponding number key to select a symbol.

Other operations

- Press [1] to enter punctuation marks or special characters.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one.
- Press and hold [C] to clear the entire display.

Customise your phone

Display language

- In Idle mode, press <Menu> and select Settings → Phone settings → Language → Screen text.
- 2. Select a language and press <**OK**>.
- Press < Options > and select Save.

Call ringer melody

To change the profile properties:

- In Idle mode, press <Menu> and select Settings → Phone settings → Phone profiles.
- 2. Scroll to the sound profile you are using.
- Press < Options > and select Edit.
- 4. Select **Voice call ringtone** → a ringtone.
- 5. Select **Video call ringtone** → a ringtone.
- Press < Options > and selectSave.

To change the sound profile:

- In Idle mode, press <Menu> and select Settings → Phone settings → Phone profiles.
- 2. Select the profile you want.
- 3. Press [Centre].

Key tone volume

In Idle mode, press [+/-] to adjust the key tone volume.

Idle mode wallpaper

- In Idle mode, press <Menu> and select Settings → Display settings → Main display → Wallpaper.
- Select an image category and press < Edit >.
- 3. Select an image.
- 4. Press **<Set>**.

Menu shortcuts

- In Idle mode, press <Menu> and select Settings → Phone settings → Shortcuts.
- 2. Select a key.
- 3. Select a menu to be assigned to the key.
- 4. Press **<Save>**.

Silent profile

You can activate the Silent profile to avoid disturbing other people. In Idle mode, press and hold [#].

Phone lock

- In Idle mode, press <Menu> and select Settings → Security → Phone lock.
- 2. Select **Enable** and press <**Save**>.
- Enter a new 4- to 8-digit password and press < Confirm>.
- 4. Enter the new password again and press **<Confirm>**.

Step outside the phone

Begin with call functions, camera, web browser, and other special features



Services might not be available in all countries.

Make or answer calls

Make a call

To make a voice call:

- 1. In Idle mode, enter an area code and phone number.
- 2. Press [_____]. Press [+/-] to adjust the volume.
- 3. Press [] to end the call.

To make a video call:

- 1. In Idle mode, enter an area code and phone number.
- 2. Press [同].
- 3. Press [] to end the call.

Answer a call

- 1. When the phone rings, press $[\frown].$
- 2. Press [to end the call.

Use the speakerphone feature

During a call, press [Centre] and then < Yes> to activate the speaker.

Press [Centre] again to switch back to the earpiece.

Make a multiparty call

- 1. During a call, call the second participant.
 - The first call is put on hold.
- 2. Press < Options > and select Conference call.
- 3. Repeat step 1 and 2 to add more participants.
- 4. During a multi-party call:
 - Press < Options > and select Private call to have a private conversation with one participant.
 - Press < Options > and select End → Select participant → a participant you want to $drop \rightarrow Drop$ to drop one participant.
- 5. Press [to end the multiparty call.

Use the camera

Take a photo

- 1. In Idle mode, press and hold [窗] to turn on the camera.
- Aim the lens at the subject and make any desired adjustments.
- 3. Press [Centre] or [窗] to take a photo. The photo is saved automatically.
- Press [Centre] to send a message, or <>>> to take another photo.

View a photo

- In Idle mode, press <Menu> and select My files → Pictures.
- 2. Select the photo you want.

Record a video

- 1. In Idle mode, press and hold [固] to turn on the camera.
- 2. Press [1] to switch to Record mode.
- 3. Press [Centre] or [窗] to start recording.

- 4. Press [Centre] or [窗] to stop recording. The video is saved automatically.
- Press < Back > to record another video.

View a video

- In Idle mode, press < Menu> and select My files → Videos.
- 2. Select the video you want.

Play music

Copy music files to the phone

Use these methods:

- Download from Vodafone Live!
- Download from a computer using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- · Receive via Bluetooth.
- Copy to a memory card and insert the card into the phone.

Play music files

- In Idle mode, press <Menu> and select Music → My music.
- Select a music category → a music file.
- During playback, use the following keys:
 - Centre: pause or resume playback.
 - Left: return to the previous file. Press and hold to scan backward in a file.
 - Right: skip to the next file.
 Press and hold to scan forward in a file.
 - +/-: adjust the volume.
- 4. Press [Down] to stop playback.

Create a playlist

- From the music player screen, press < Options> and select
 Open playlist → All → Playlists.
- Press < Options > and select Create playlist.
- 3. Enter the title of the playlist and press **Save**>.

- 4. Press **<Back>** to return to the list of music categories.
- 5. Select a music category and scroll to a music file.
- Press < Options> and select
 Add to Playlist → Selected
 or More.
- 7. For **More**, select the files you want and press **Add**>.
- 8. Select the added playlist.
- 9. Press [Centre] to play music.

Browse the web

Launch the web browser

In Idle mode, press <Menu> and select Vodafone Live! → Vodafone Live! The Vodafone Live! homepage opens.

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [Centre].
- To return to the previous page, press <Back>.

Use the browser options

Press **Options**> to access the following options:

- **Go to**: go to the linked web page.
- Go: move backward or forward through pages in history.
- **Reload**: reload the page with updated information.
- Desktop view/Smart-fit view: change the display mode of the browser.
- **Page size**: change the web page size.
- **Page Pilot**: pan and zoom the web page.
- **Go to homepage**: return to the homepage.
- Add to Bookmarks: add the page to your bookmark list.
- View bookmarks: access the bookmark list.
- Send URL: send the URL of the page as a data file via multimedia message, email, or Bluetooth.

- Enter URL: enter the URL address of the web page you want to access.
- Copy URL: send the URL address of the web page by adding it to the message text.
- Save: save images on the web page or the entire web page.
- Saved pages: access the web pages you have saved.
- Last viewed page: access the web page you have accessed recently.
- History: access the list of web pages you have accessed.
- Advanced: change the various settings for the browser.
- Exit: exit the web browser.

Use Contacts

Add a contact

- In Idle mode, enter a phone number and press < Options>.
- Select Add to Contacts → a memory location → New.
- For **Phone**, select a number type.
- 4. Specify contact information.
- Press **Options**> and select **Save** to save the contact.

Find a contact

- In Idle mode, press < Menu> and select Contacts.
- 2. Enter the first few letters of the name you want.
- Select a contact.
- Scroll to a number and press

 [] to dial, or press
 Options> and select Edit to edit contact information.

Send messages

Send a text message

- In Idle mode, press <Menu> and select Messaging → Create message → Message.
- 2. Enter your message.
- 3. Press [Up] to move to the recipient field.
- 4. Enter a destination number.
- 5. Press **Options** and select **Send** to send the message.

Send a multimedia message

- In Idle mode, press <Menu> and select Messaging → Create message → Message.
- 2. Enter your message.
- 3. Press **<Options>** and select **Advanced** → **Add subject**.
- 4. Press < **OK** > .
- 5. Enter the message subject.
- Press < Options> and select
 Advanced → Add
 attachment or Insert.

- 7. Add a media file, Contacts entry, Calendar item, or bookmark item.
- 8. Press [Up] to move to the recipient field.
- 9. Enter destination numbers or email addresses.
- 10. Press < Options > and select **Send** to send the message.

Send a postcard

- In Idle mode, press < Menu> and select **Messaging** → Create message → live! Postcard.
- 2. Press [Down] and enter your message.
- 3. Select **Picture** → an image.
- 4. When you have finished, select [Recipient] → Contacts or New address.
- If you select Contacts, select a postal address. If you select **New address**, specify the destination information.

6. When you have finished, press < Options > and select **Send** to send the postcard.

Depending on the country, this feature may be unavailable or labelled differently.

Send an email

- 1. In Idle mode, press < Menu> and select **Messaging** → Create message → Email.
- 2. Enter the email text.
- 3. Press [Up] and enter the subject of the email.
- 4. Press < Options > and select Add attachment or Create item
- 5. Add a media file, Contacts entry, Calendar item, or a bookmark item.
- 6. Press [Up] to move to the recipient field.
- 7. Enter email addresses.
- 8. Press < Options > and select Send to send the email.

View messages

View a text message

- In Idle mode, press <Menu> and select Messaging → Inbox.
- 2. Select a text message.

View a multimedia message

- In Idle mode, press <Menu> and select Messaging → Inbox.
- 2. Select a multimedia message.

View an email

- In Idle mode, press <Menu> and select Messaging → Email inbox.
- Press < Options > and select Download.
- 3. Select an email or a header.
- If you selected a header, press < Options> and select Retrieve to view the body of the email.

Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

- In Idle mode, press <Menu>
 and select Organiser & Tools
 → Bluetooth → Activation →
 On.
- Select My phone's visibility
 → On to allow other devices to
 locate your phone.

Search for and pair with a Bluetooth device

- In Idle mode, press < Menu> and select Organiser & Tools → Bluetooth → My devices → Search new device.
- 2. Select a device.
- Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and press <**OK**>.
 When the owner of the other device enters the same code, pairing is complete.

Send data

- Access an application, such as Contacts, My files, Calendar, Task, or Memo.
- 2. Select an item.
- Press < Options> and select Send contact detail via or Send → Bluetooth or Via Bluetooth.
- 4. Search for and select a device.
- If necessary, enter the Bluetooth PIN and press < OK>.

Receive data

- When a device attempts to access your phone, press <**Yes**> to permit the connection.
- If necessary, press < Yes> to confirm that you are willing to receive.

Switch applications

You can switch to other applications from a menu, without closing the menu screen you were using.

Switch to an application

- 1. While using a menu, press [Application switch].
- 2. Select an application.

Available applications

- **Call**: open the dialling screen.
- Messaging: access the Messaging menu.
- **Vodafone Live!**: launch the web browser.

Close all running applications

- 1. Press [Application switch].
- 2. Scroll to End all?.
- 3. Press < Yes>.

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Services might not be available in all countries.

Entertainment

Menu	Description
My games	Access the embedded Java games and download Java applications.
Camera	Use the camera embedded in your phone to take photos and record videos.
Mobile TV	Access the Vodafone online TV service to watch TV and use various Mobile TV services.
My Videos	Access and play video files.

Vodafone Live!

Menu	Description
Vodafone Live!	Connect your phone to the network and load the Vodafone Live! homepage of the wireless web service provider.
Enter URL	Enter a URL address and access the associated web page.
Bookmarks	Save URL addresses in order to quickly access web pages.
History	Access the list of pages you have accessed recently.
Advanced	Access the advanced browser options and customise the settings.
Browser settings	Select a connection profile to be used for accessing the wireless web.
Saved pages	Access the list of pages you have saved while online.

Menu	Description
Games	Access the website preset by Vodafone Live! and download new games.
Ringtones	Access the website preset by Vodafone Live! and download ringtones.
Pictures	Access the website preset by Vodafone Live! and download pictures.
News	Access the website preset by Vodafone Live! and download recent news.
Sports	Access the website preset by Vodafone Live! and download sports news.

Calls

Check the most recent calls dialled, received, or missed.

Music

Menu	Description
My music	Access and listen to all music files sorted by criteria. You can also make your own music playlists.
Radio DJ	Listen to your favourite tracks, discover new music, and create your personal channels. You can also download music files you have just heard on the radio. This menu may not be available, depending on the country.
Music store	Access the website preset by Vodafone and download music.
My wishlist	Access a list of tracks you added while using Radio DJ. This menu may not be available, depending on the country.

Messaging

Menu	Description
Create message	Create and send text, multimedia, voice, or email messages, and postcards.
Inbox	Access messages that you have received.
Email inbox	Access emails that you have received.
Drafts	Access messages that you have saved to send at a later time.
Outbox	Access messages that the phone is attempting to send or has failed to send.
Sent message	Access messages that you have sent.
My folder	Create new folders and organise your messages.

Menu	Description
Templates	Make and use templates of frequently used messages or passages.
Messenger	Chat via the Instant Messaging service using your mobile phone with your friends or family.
Voice mail	Access the voicemail server.
live! Studio	Access your live! Studio online media album to upload media files and save multimedia messages on the web.
Delete all	Delete messages in each message folder all at once.
Messaging settings	Set up various options for using the messaging services.
Memory status	Check information about the memory currently in use.

My files

Menu	Description
Pictures, Videos, Ringtones, Games, Music, Applications, Themes, Voice recordings, Other documents	Access media files and other files stored in the phone's memory.
live! Studio	Access your live! Studio web page and upload media files and multimedia messages to safe storage on the web.
Memory status	Check information about the memory currently in use.

Organiser & Tools

Menu	Description
Vodafone	Use a variety of additional services offered by Vodafone. This menu is available only if supported by your USIM or SIM card.
Alarms	Set a wake-up call to wake you up in the morning or an alarm to alert you to an event at a specific time.
My Applications	Access applications stored in the phone memory.
Calendar	Keep track of your schedule.
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.
Synchronise	Synchronise your Contacts with the web server you have specified.
Calculator	Perform arithmetic functions.

Menu	Description
Converter	Do conversions, such as length and temperature.
Task	Create a list of tasks you need to complete.
Memo	Make memos for things that are important and manage them.
Voice recorder	Record voice memos and any other sounds.
World clock	Set your local time zone and find out the current time in another part of the world.
Timer	Set a period of time for the phone to count down.
Stopwatch	Measure elapsed time.
Memory status	Check memory information for calendar items.

Contacts

Search for contact information stored in Contacts.

Settings

Menu	Description
Phone settings → Phone profiles	Change the sound settings of the phone for different events or situations.
Phone settings → Language	Select a language for the display text.
Phone settings → Shortcuts	Use the Navigation keys as shortcuts to access specific menus directly from Idle mode.
Phone settings → Time & date	Change the time and date displayed on your phone.
Phone settings → Volume key function	Set how the phone reacts if you press and hold [+/-] when a call comes in.
Phone settings → Camera key	Set a default function for [窗].

Menu	Description
Phone settings → Cover keypad lock	Set the phone to lock the keypads on the cover.
Phone settings → USB	Select a USB mode that will be used when you connect your phone to a PC via USB interface.
Phone settings → Transaction tracking	Set the phone to keep track of your online purchases made on your phone.
Phone settings → Expiry reminder	Set the phone to remind you of purchased items' expiry dates.
Display settings → Main display	Customise the properties of the main display.
Display settings → Cover display	Customise the properties of the external display.
Messaging settings	Set up various options for using the messaging services.
Call settings → All calls	Change the default settings for voice calls, video calls, and data calls.

Menu	Description
Call settings → Voice call	Access network services for voice calls.
Call settings → Video call	Change the default settings for using the video call feature.
Call settings → Data call	Change the default settings for using the data call feature.
Contact settings → Speed dial	Assign speed dial numbers for your most frequently dialled numbers.
Contact settings → Save new contacts to	Select a default memory location for saving contacts.
Contact settings → View contacts from	Select a memory location from which Contacts shows entries.
Contact settings → Own number	Check your phone numbers, or assign a name to each of the numbers.
Calendar settings → Starting day	Select which day of the week the calendar starts with.

Menu	Description
Calendar settings → Default view mode	Select the default calendar view mode.
Camera settings	Change the default settings for taking photos or recording videos.
Media player settings	Change the default settings for playing music or video files.
Network settings → Network selection	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network settings → Network mode	Change to an appropriate band when you travel abroad.
Network settings → Preferred networks	Add a new network to your preferred network list, if your USIM or SIM card supports it.
Network settings → Connections	Create and customise the profiles containing the settings for connecting your phone to the network.

Menu	Description
Network settings → Browser settings	Select a connection profile to be used for accessing the wireless web.
Network settings → Streaming settings	Activate a connection profile to be used for accessing streaming servers.
Network settings → RDJ settings	Select a connection profile to be used for using the Radio DJ feature.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.
Security → SIM lock	Set the phone to work only with the current USIM or SIM card by assigning a SIM lock password.
Security → PIN lock	Activate your PIN to protect your USIM or SIM card against unauthorised use.
Security → Privacy lock	Lock access to messages, files, call logs, contacts, or calendar items.

Menu	Description
Security → Fixed dialling mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your USIM or SIM card.
Security → Change phone password	Change the phone password.
Security → Change PIN code	Change the PIN.
Security → Change PIN2 code	Change your current PIN2, if supported by your USIM or SIM card.
Security → Mobile tracker	Set the phone to send the preset tracking message to your family or friends when someone tries to use your phone with another USIM or SIM card. This feature may be unavailable due to certain features supported by your service provider.
Memory settings	Manage your phone's memory or a memory card.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are:

GSM1900 Head: 0.822W/Kg, Body-worn: 0.138~W/Kg.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines whenused with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3LSGHL400V. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone

is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at

the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancercausing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions

about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably

very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

 "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the

distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Handsfree kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either

configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless. phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

 FCC RF Safety Program: http://www.fcc.gov/oet/rfsafety/

 Environmental Protection Agency (EPA): http://www.epa.gov/radiation/ Occupational Safety and Health Administration's (OSHA):

http://www.osha.gov/SLTC/ radiofrequencyradiation/index.html

 National institute for Occupational Safety and Health (NIOSH):

http://www.cdc.gov/niosh/emfpg.html

 World health Organization (WHO): http://www.who.int/peh-emf/

 International Commission on Non-Ionizing Radiation Protection:

http://www.icnirp.de

National Radiation Protection Board (UK):

http://www.nrpb.org.uk

 Updated 4/3/2002: US food and Drug Administration

http://www.fda.gov/cellphones

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Position your wireless phone within easy reach.
 Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
- 4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

- 7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- 8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
- Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10. Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special nonemergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you

would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1. If the phone is not on, switch it on.
- Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice



- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
 These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery march Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag

- or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fullyextended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- · Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- · Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsungapproved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.

- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator.
 The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.