

TRI BAND GPRS Series SGH-P716 Portable Digital Telephone User Manual

**Please read this manual before operating your phone,
and keep it for future reference.**

**2nd version
(11 26)**



Printed in Korea
Code No.: GH68-xxxxxA
English.11/2003. Rev. 1.0

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1130 E. Arapaho Road
Richardson, TX 75081
Tel: 972-761-7000
Fax: 972-761-7001

Customer Care Center:

1601 E. Plano Parkway
Suite 150
Plano, TX 75047
Tel: 888-987-HELP (4357)
Fax: 972-761-7501

Internet Address: <http://www.samsungusa.com/wireless>

©2003 Samsung Telecommunications America. All rights reserved. No reproduction in whole or in part allowed without prior written approval. Samsung is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Table of Contents

Important Safety Precautions.....	7
Unpacking	9
Your Phone	10
Phone Layout	10
Display	13
Service Light	16
Camera	16
Getting Started	17
Installing the SIM Card	17
Charging the Battery	19
Switching the Phone On or Off	21
Call Functions	23
Making a Call.....	23
Adjusting the Volume	25
Answering a Call	26
Viewing Missed Calls.....	27
Quickly Switching to Silent Mode.....	29
Selecting Functions and Options.....	31
Phonebook.....	33
Storing a Number with a Name	33
Using Phonebook Entry Options.....	36
Searching for and Dialing a Number in Phonebook	37
Editing a Caller Group.....	39
Speed-dialing	40
Deleting All of the Phonebook Entries.....	41
Checking the Memory Status	42

Entering Text	43
Changing the Text Input Mode	44
Using T9 Mode	45
Using Alphabet Mode	47
Using Number Mode	48
Using Symbol Mode	48
Options During a Call	49
Putting a Call on Hold	49
Switching the Microphone Off (Mute)	50
Muting or Sending Key Tones	51
Sending a Sequence of DTMF Tones	51
Searching for a Number in Phonebook	52
Using the Message Service	52
Call Waiting	53
Making a Multi-party Call	53
Using the Menus	57
Accessing a Menu Function by Scrolling	57
Using Shortcuts	58
List of Menu Functions	58
Messages	65
Text Messages (<i>Menu 1.1</i>)	65
Multimedia Messages (<i>Menu 1.2</i>)	71
E-Mail Messages (<i>Menu 1.3</i>)	80
Push Message (<i>Menu 1.4</i>)	86
Delete All (<i>Menu 1.5</i>)	87
Voice Mail (<i>Menu 1.6</i>)	88
Memory Status (<i>Menu 1.7</i>)	89
Settings (<i>Menu 1.8</i>)	89

Call Records	97
Missed Calls (<i>Menu 2.1</i>)	97
Received Calls (<i>Menu 2.2</i>)	98
Dialled Calls (<i>Menu 2.3</i>)	98
Delete All (<i>Menu 2.4</i>)	99
Call Time (<i>Menu 2.5</i>)	99
Call Cost (<i>Menu 2.6</i>)	100
Camera	101
Take and Send (<i>Menu 3.1</i>)	101
My Photo (<i>Menu 3.2</i>)	104
MPEG (<i>Menu 3.3</i>)	106
Sound Settings	109
Ring Tone (<i>Menu 4.1</i>)	109
Ring Volume (<i>Menu 4.2</i>)	109
Alert Type (<i>Menu 4.3</i>)	110
Keypad Tone (<i>Menu 4.4</i>)	110
Message Tone (<i>Menu 4.5</i>)	110
Folder Tone (<i>Menu 4.6</i>)	112
Power On/Off (<i>Menu 4.7</i>)	112
Extra Tones (<i>Menu 4.8</i>)	112
Phone Settings	113
Infrared Activate (<i>Menu 5.1</i>)	113
Display Settings (<i>Menu 5.2</i>)	117
Greeting Message (<i>Menu 5.3</i>)	119
Own Number (<i>Menu 5.4</i>)	120
Language (<i>Menu 5.5</i>)	120
Security (<i>Menu 5.6</i>)	120
Extra Settings (<i>Menu 5.7</i>)	124
Short Cut (<i>Menu 5.8</i>)	125
TTY Settings (<i>Menu 5.9</i>)	125
Reset Settings (<i>Menu 5.10</i>)	126

Organizer.....	127
Alarm (Menu 6.1)	127
Calendar (Menu 6.2)	129
Time & Date (Menu 6.3)	131
Calculator (Menu 6.4).....	133
To Do List (Menu 7.5).....	133
Voice Memo (Menu 6.6)	136
Currency Exchange (Menu 6.7)	138
Pims Sync (Menu 6.8)	138
Network Services.....	139
Call Forwarding (Menu 7.1)	139
Call Barring (Menu 7.2)	140
Call Waiting (Menu 7.3)	142
Network Selection (Menu 7.4)	143
Caller ID (Menu 7.5)	144
Closed User Group (CUG) (Menu 7.6)	144
Band Selection (Menu 7.7)	146
Funbox	147
mMode (Menu 8.1).....	147
Games (Menu 8.2)	153
Sounds (Menu 8.3)	155
Images (Menu 8.4)	156
Delete All (Menu 8.5)	157
Memory Status (Menu 8.6).....	157
Solving Problems.....	159
Access Codes	163
Phone Password.....	163
PIN	164
PUK.....	164
PIN2	165
PUK2.....	165

Health and Safety Information	166
Usage guidelines:	
All about performance and safety	166
Maintaining Safe Use of and Access to Your Phone....	168
Caring for the Battery.....	171
Acknowledging Special Precautions and FCC	172
FDA Consumer Update.....	174
CTIA Safety Information	183
Owner's Record	187
User Guide Proprietary Notice	187
STANDARD LIMITED WARRANTY	188
Glossary	193
Index.....	198

Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Road Safety at All Times

Do not use a hand-held phone while driving; park the vehicle first.

Switching Off When Refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching Off in an Aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching Off in Hospitals

Switch your phone off near medical equipment. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special Regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency Call

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features before you can make an emergency call. Give all the necessary information as accurately as possible. Do not cut off the call until given permission to do so.

Water Resistance

Your phone is not water-resistant. Keep it dry.

Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorized accessories could damage your phone and may be dangerous.

Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see “Health and Safety Information” on page 166.

Unpacking

Your package contains the following items:



Handset



Travel Adapter



Battery



Ear-microphone



User's Manual



Hand Strap



Holster

Note: The items supplied with your phone may be different, depending upon your country or service provider.

You can obtain the following accessories for your phone from your local Samsung dealer:

- Standard/extended batteries
- Simple hands-free kit
- Cigarette lighter adapter
- Travel charger/adaptor
- Battery case
- Ear-microphone
- Car holder
- Road antenna
- Battery charger

Your Phone

Phone Layout

The following illustrations show the main elements of your phone:




Key(s)	Description
	In Menu mode, scroll through the menu options and Phonebook. In Idle mode, allow you to access your favorite menu options directly. For further details about shortcuts, see page 125.
	In Menu mode, the Left key returns to the previous menu level and the Right key selects the current menu. When entering text, move the cursor to the left and right respectively. In Idle mode, allow you to access your favorite menu options directly. For further details about shortcuts, see page 125.
 (soft keys)	Perform the functions indicated by the text above them, on the bottom line of the display.
	In Idle mode, access the Camera menu to allow you to use the camera application. Turns the camera on when held down. In Capture mode, works as a camera shutter.
	In Idle mode, launches the WAP (Wireless Application Protocol) browser.
	Makes or answers a call. In Idle mode, recalls the last number you dialed or received when held down. In Menu mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.

Key(s)	Description (Continued)
	Deletes characters from the display. In Menu mode, returns to the previous menu level.
	Ends a call. Also switches the phone on and off when held down. In Menu mode, cancels your input and returns to Idle mode.
	In Idle mode, quickly accesses your voice mail when held down.
 	Enter numbers, letters and some special characters.
 	Enter special characters. Perform various functions.
	(on the left side of the phone) During a call, adjust the earpiece volume. In Idle mode with folder open, adjust the keypad tone volume. With the folder closed, turn on the external display when held down. In Menu mode, scroll through the menu options and Phonebook.

Display

Display Layout

The display has three areas:

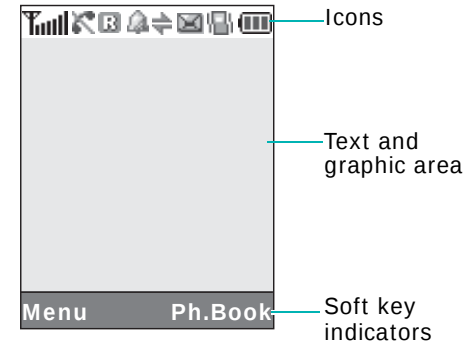

Area	Description
First line	Displays various icons. See page 14.
Middle lines	Displays messages, instructions and any information that you enter, such as the number you are dialing.
Last line	Shows the current functions assigned to the two soft keys.

Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the stronger the signal.
	Appears when a call is in progress.
	Appears when you are out of your service area. When it displays, you cannot make or receive a call.
	Appears when you are connected to the GPRS network.
	Appears when you are out of your home area and have logged onto a different network; for example, when travelling in other countries.
	Appears when a new text message has been received.
	Appears when a new voice mail message has been received.
	Appears when a new multimedia message has been received.
	Appears when you set an alarm to ring at a specified time.
	Appears when Silent mode is active or when you set the Alert Type menu (Menu 4.3) so that the phone vibrates when you receive a call. For further details, see page 29 and page 110 respectively.
	Appears when the IrDA port is active. For details, see page 113.

Icon Description (Continued)

	Appears when Mute mode is active.
	Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

The backlight illuminates the display and the keypad. When you press any key or open the folder, the backlight turns on and remains on for a given period of time, depending on your setting in the **Back Light** menu (**Menu 5.2.4**). When no keys are pressed, the display turns off after one minute to conserve your battery power.

To specify the length of time the backlight is active, set the **Back Light** menu. See page 118 for further details.

External Display

Your phone has an external display on the folder. It indicates when you have an incoming call or a message. It also alerts


you at the specified time when you have set an alarm by displaying the corresponding icon on it.

When you close the folder, the display shows the current time on both a digital clock and an analogue clock. You can set the display to show the current date instead of the analogue clock using the **Front LCD Display** menu (**Menu 5.2.7**). You can also select how long the date or analogue clock displays. For details, see page 119.

Service Light

The service light is on the top right corner of the phone. It flashes when services are available on the phone.

To activate or deactivate the service light, set the **Service Light** menu (**Menu 5.2.5**). See page 118 for further details.

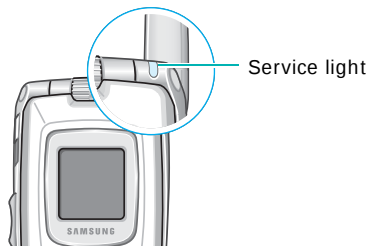

Camera

The camera module on the top center of your phone allows you to take a photo and record a video while on the move.

For further details about the Camera feature, see page 101.

Getting Started


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and so on.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.


Keep all SIM cards out of the reach of small children.

1. If necessary, switch off the phone by holding down the  key until the power-off image displays.
2. Remove the battery. To do so:
 - ① Slide the battery lock towards the top of the phone.
 - ② Lift the battery away, as shown.

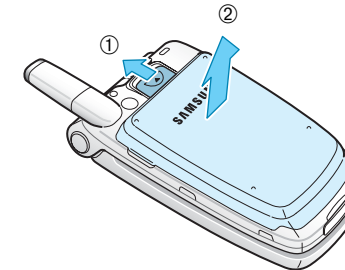


- Slide the SIM card into the SIM card socket, as shown, so that it locks the card into position.


Make sure the gold contacts of the card face into the phone.

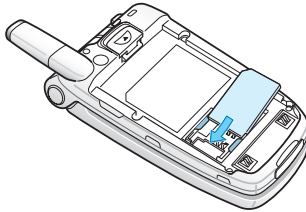


Note: When you need to remove the SIM card, slide it upwards, as shown, and take it out of the socket.

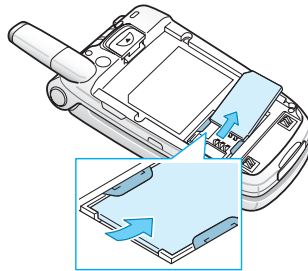

- Place the battery so that the tabs on the end align with the slots at the bottom of the phone.

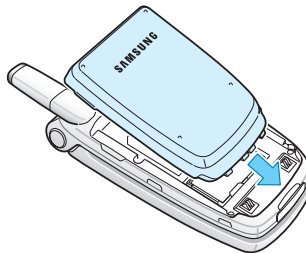

- Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching the power on.

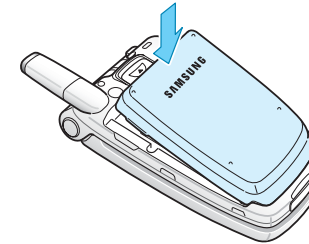


Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.


The travel adapter allows you to use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

- With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

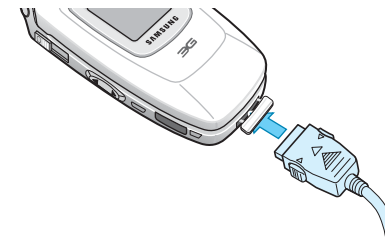

2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.

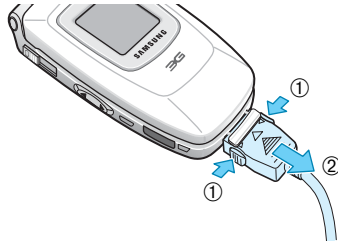

Note: You must unplug the adapter before removing the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and a message repeats at regular intervals on the display. If this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Open the folder.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter a password, enter the password and press the **OK** soft key. The phone password is preset to “00000000” at the factory. For further details, see page 163.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key. For further details, see page 164.

The phone searches for your network and, after finding it, the idle screen appears on the display. Now, you can make or receive a call.

Note: The display language is preset to English at the factory. To change the language, use the **Language** menu (**Menu 5.5**). For further details, see page 120.

5. When you wish to switch the phone off, press and hold the  key until the power-off image displays.

Call Functions

Making a Call

When the idle screen displays, enter the area code and phone number, and then the  key.

Note: When you activate the **Auto Redial** option in the **Extra Settings** menu (**Menu 5.7**), the phone automatically redials up to ten times if the person does not answer the call or is already on the phone. See page 124 for further details.

Making an International Call

1. Press and hold the **0** key.
The **+** character appears.
2. Enter the country code, area code and phone number and press the  key.

Correcting the Number

To clear	Press the
the last digit displayed	C key.
any other digit in the number	Left or Right key until the cursor is immediately to the right of the digit to be cleared. Press the C key. You can also insert a missing digit simply by pressing the appropriate key.
the whole display	C key and hold it for more than one second.

Ending a Call

When you want to end your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers you've dialed, received or missed if the caller is identified. See "Call Records" on page 97 for further details.

To recall any of these numbers:

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the last numbers in the order you made or received them.
3. Use the Up and Down keys to scroll through the numbers until the number you want highlights.

4. To	Press the
dial the number	 key.
edit the number	Options soft key and select Edit . Change the number, referring to "Correcting the Number" on page 23.
delete the number	Options soft key and select Delete .
delete all of the numbers on the Call Log list	Options soft key and select Delete All . For further details, see page 97.


Making a Call from Phonebook

You can store the phone numbers that you use regularly in the SIM card or the phone's memory, which are collectively called Phonebook. Simply select a name to recall the associated number. For further details about the Phonebook features, see page 33.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the  key to increase the volume level and the  key to decrease the level.

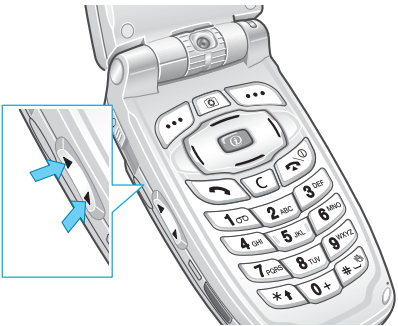

In Idle mode with the folder open, you can also adjust the keypad tone volume using these keys.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

When the caller can be identified, the caller's phone number, or name if stored in your Phonebook, displays.

1. If necessary, open the folder. Press the  key or the **Accept** soft key to answer the incoming call.

When the **Anykey Answer** option in the **Extra Settings** menu (**Menu 5.7**) is activated, you can press any key to answer a call except for the  key and the **Reject** soft key. See page 124.

When the **Active Folder** option in the **Extra Settings** menu (**Menu 5.7**) is activated, you can answer the call simply by opening the folder. See page 124.

Note: To reject the call, press and hold one of the Volume keys, or press the **Reject** soft key or  key.

2. End the call by closing the folder or pressing the  key.

Note: You can answer a call while using Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Viewing Missed Calls

When you are unable to answer a call for any reason, you can find out who called you so that you can call the person back.

The number of calls you missed displays on the idle screen immediately after a call is missed.

To view the missed call immediately:

1. If the phone is closed, open the folder.
2. Press the **View** soft key.

The number for the most recent missed call displays, if available.

3. To	Press the
scroll through the missed calls	Up or Down key.
call the number displayed	 key.
edit or delete a missed call number	Select soft key. See below.

Editing a Missed Call Number

Note: When the number for the missed call is not available, the **Edit** option does not display.

1. Press the **Options** soft key.
2. Press the Up or Down key to highlight the **Edit** option.
3. Press the **Select** soft key.

4. Change the number.

5. To	Press the
call the number	 key.
store the number	Save soft key and enter the name and location. For further details, see page 33.

Deleting a Missed Call

1. Press the **Options** soft key.
2. If necessary, press the Up or Down key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the **Missed Calls** menu (**Menu 2.1**). For further details, see page 97.

Quickly Switching to Silent Mode

Silent mode is convenient when you wish to stop the phone from ringing, in a theatre for example.

In Idle mode, press and hold the **#** key until the “Silent Mode” message and the Vibration icon () display.

In Silent mode, your phone changes the sound settings as follows:

Option	New Setting
Alert Type (Menu 4.3)	Vibration
Keypad Tone (Menu 4.4)	Off
Message Tone (Menu 4.5)	Light + Vibration
Folder Tone (Menu 4.6)	Off
Power on tone	Off
Extra Tones (Menu 4.8)	Off

To exit and reactivate the previous sound settings, press and hold the **#** key again until “Exit Silent Mode” appears. The Vibration icon () no longer displays.


Note: When you turn the phone off, Silent mode is automatically deactivated.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys marked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the function you are currently using; the labels on the bottom line of the display just above each key indicate its current role.

Example:

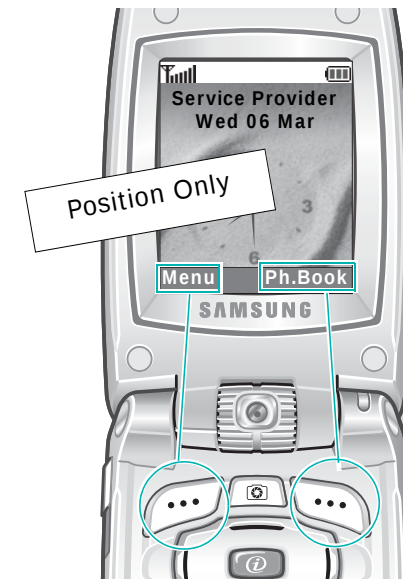

Press the left soft key to access Menu mode.

Press the right soft key to access the Phonebook features.

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.

To	Press the
select the: • function displayed • option highlighted	Select soft key or the Right key.
view the next function or highlight the next option on a list	Down key or the ▼ key on the left side of the phone.
move back to the previous function or option on a list	Up key or the ▲ key on the left side of the phone.
move back up one level in the structure	Left key,  soft key or C key.
exit the structure without changing the settings	 key.

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key.

Note: When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active so that you can select it directly.

Phonebook

You can store phone numbers and their corresponding names in both your SIM card and your phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Storing a Number with a Name

There are two ways to store a number:

- Using the **Save** soft key in Idle mode
- Using the **New Entry** option in the Phonebook menu

Storing a Number in Idle Mode

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in Phonebook.

1. Enter the number you want to store.

Note: If you make a mistake while entering a number, correct it using the **C** key. For further details, see page 23.

2. When you are sure that it is correct, press the **Save** soft key.
3. Select an icon to identify the category of the number to be stored. Three categories are available:
 -  : Mobile phone number
 -  : Office number
 -  : Home number

To select the category, press the Left or Right key and press the **Select** soft key.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key.

Note: When you change phones, any numbers stored in your SIM card memory are automatically available with the new phone, whereas any numbers stored in the phone's memory must be reentered.

5. Enter a name and press the **OK** soft key.

For further details about how to enter characters, see page 43.

6. If you do not want to save the number and name in the suggested location, press the **C** key to clear the location number and enter another location by pressing the number keys.

7. Press the **OK** soft key to store the name and number.

After storing, the phone displays the Phonebook entry or name you just created.

8. To	Press the
use the entry options	Options soft key. For further details, see page 36.
return to the idle screen	 key.

Storing a Number Using the Phonebook Menu

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **New Entry** by pressing the Up or Down key and press the **Select** soft key.
3. Select an icon to identify the category of the number to be stored by pressing the Left or Right key, and press the **Select** soft key.

Note: The E-mail icon () is available in this step. It allows you to save an e-mail address instead of a phone number.

4. Select a memory location, either **SIM** or **Phone**, by pressing the Up or Down key and press the **Select** soft key.

Note: When you are saving an e-mail address, **SIM** is not available.

5. Enter a name and press the **OK** soft key.

For further details about how to enter characters, see page 43.

6. Enter the number or e-mail address you want to store and press the **Save** soft key.
7. Continue the procedure from step 6 on page 34 to store the number.

Using Phonebook Entry Options

While accessing any Phonebook entry, press the **Options** soft key to access the options for the entry.

To	Press the
select the highlighted option	Select soft key or the Right key.
highlight a different option	Up or Down key until the option you want highlights.

The following options are available:

Paste: allows you to paste the number into the normal dialing mode. Use this option to dial a number similar to one in Phonebook, such as a different extension in the same office.

Use the **C** key to change the number as required; see page 23 for further details. When you are ready to dial, press the  key.

Edit: allows you to edit the name and number.

Select **One Entry** to change the name and/or one number for the selected entry. If you change the name, the number is saved separately with the new name.

Select **All Entry** to change only the name of the entry.

Photo Caller ID: allows you to assign one of the photos you took using the camera as a caller ID image to be displayed when you receive a call from the selected number. For details about the Camera feature, see page 101.

Delete: allows you to delete the selected number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.

Copy: allows you to copy the number to another location. You can select the memory and the location number.

Caller Group: allows you to organize your Phonebook entries in caller groups so that the phone alerts you in a specific way when a person from one of your groups calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No Group** option.

For further details about how to change caller group properties, see page 39.

Add Entry: allows you to add a new number to the currently selected name.

Send via IrDA: allows you to send all numbers or one number of the selected name to other IrDA-compatible phones. For further details, see page 116.

Searching for and Dialing a Number in Phonebook

After storing numbers in Phonebook, you can search for them in two ways; by name and by caller group.

Searching for a Number by Name

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Press the **Select** soft key when **Search** highlights. You are asked to enter a name.

3. Enter the first few letters of the name that you want to find.

The Phonebook entries are listed, starting with the first entry matching your input.

4. To	Press the
view the highlighted entry	View soft key.
select a different entry	Up or Down key until the entry highlights.
look for a name starting with a different letter	key labeled with the letter you want.

5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Phonebook entry options; for further details, see page 36.

Searching for a Number by Caller Group

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Group Search** by pressing the Up or Down key and press the **Select** soft key. You are asked to enter a group name.
3. Enter the first few letters of the group name that you want to find.

The caller groups are listed, starting with the first group matching your input.

4. If necessary, scroll to a group by pressing the Up or Down key and press the **View** soft key.

The Phonebook entries in the caller group are listed.

5. To	Press the
view the highlighted entry	View soft key.
select a different entry	Up or Down key until the entry you want highlights.

6. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the Phonebook entry options; for further details, see page 36.

Editing a Caller Group

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Group Edit** by pressing the Up or Down key and press the **Select** soft key.
3. Scroll through the group list by pressing the Up or Down key.
4. When the group you want highlights, press the **Options** soft key.
5. Select each option and change the settings, as you want. The following options are available:
 - **Call Ring Tone:** allows you to set a ring tone to be used when you receive a voice call from a person in the group.
 - **SMS Tone:** allows you to set a ring tone to be used when you receive a message from a person in the group.

- **Graphic:** allows you to set a graphic icon to be displayed when you receive a call from a person in the group.
- **Group Name:** allows you to assign a name to the group. For further details about how to enter characters, see page 43.

6. When you are finished, press the **C** or  key.

Speed-dialing

Once you have stored phone numbers in Phonebook, you can set up to eight speed-dial entries and then dial them easily whenever you want, simply by pressing the associated number key.

Setting Up Speed-dial Entries

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Speed Dial** by pressing the Up or Down key and press the **Select** soft key.
3. Select the key to which you wish to assign the speed-dialing number, from the **2** to **9** keys, and press the **OK** soft key.

Note: Memory location 1 is reserved for your Voice Mail server number.

If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to step 6.

4. Select a Phonebook entry from the list and press the **View** soft key.

5. Select a number, if the entry has more than one, by pressing the Up or Down key and press the **Select** soft key.
6. Once you have assigned a number to the key, you can use the following options by pressing the **Options** soft key:
 - **Change:** allows you to assign a different number to the key.
 - **Delete:** allows you to clear the setting so that no number is assigned to the key.
 - **Delete All:** allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.
 - **Number:** allows you to view the number assigned to the key.
7. When you are finished, press the **C** or  key.

Speed-dialing from Phonebook

To speed-dial the numbers assigned to keys **2** to **9**, press and hold the appropriate key.

Deleting All of the Phonebook Entries

You can delete all of entries in the selected memory or both memories.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Scroll to **Delete All** by pressing the Up or Down key and press the **Select** soft key.

3. To place a check mark by the memory you want to empty, **All**, **SIM** or **Phone**, press the **Mark** soft key.

You can remove the check mark by pressing the **Unmark** soft key.

4. When you are finished marking, press the **Delete** soft key to delete the entries in the selected memory.
5. Enter the phone password and press the **OK** soft key.

Note: The password is preset to "00000000" at the factory. To change this password, see page 122.

6. When the confirming message appears, press the **Yes** soft key.

To cancel the deletion, press the **No** soft key.

7. When you are finished, press the **C** or  key.

Checking the Memory Status

You can check how many names and numbers are stored in Phonebook, in both the SIM card and phone memories. You can also see the capacity of both memories.

1. When the idle screen displays, press the **Ph.Book** soft key.
2. Select the **Memory Status** option by pressing the Up or Down key and press the **Select** soft key.
3. Press the Up or Down key to view the number of existing and total entries available in the SIM card and phone's memory.
4. When you are finished, press the **C** or  key.

Entering Text

When using your phone, you will often need to enter text, such as when storing a name in Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

● T9 mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, when you press the **5** key once, J, K or L displays. T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

● Alphabet mode

This mode allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three or four times until it displays.

● Number mode

This mode allows you to enter numbers.


● Symbol mode

This mode allows you to enter various symbols and special characters.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message

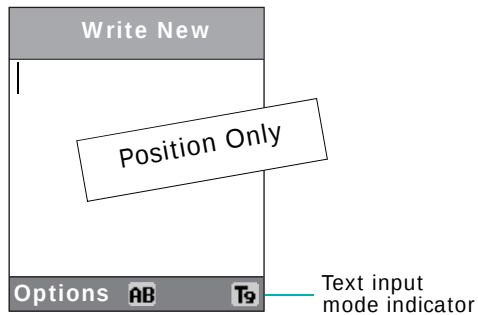

To select	Press the right soft key until
T9 mode	T9 displays. See page 45.
Alphabet mode	A displays. See page 47.
Number mode	1 displays. See page 48.
Symbol mode	the symbol list displays. See page 48.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter "HELLO" in T9 mode, press the **4**, **3**, **5**, **5** and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If not, press the **0** key or the Up or Down key repeatedly to display alternative word choices for the keys that you have pressed.

Example: Both "OF" and "ME" use the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.

 
To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the **0** or Down key to display the alternative words.
2. When you press the **0** or Down key at the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key.
3. If necessary, clear the word using the **C** key and enter the word you want to add using Alphabet mode. See page 47.
4. Press the **OK** soft key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress.

- To enter periods, hyphens or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: The **1** key is used twice to display two punctuation marks:



- To shift the case in T9 mode, use the **✕** key. There are three cases; Initial Capital (**Ab**), Capital lock (**AB**) and Lower case (**ab**).
- You can move the cursor by using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Alphabet Mode

Use the **1** to **0** keys to enter your text.

1. Press the keys labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Refer to the table below for further details about the characters available:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ¿ §	. @ % _ £ \$ ¥ ¤ §
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	0 * # , ; ' " =	/ : - + () < >

- To insert a space, press the **#** key.
- To shift the case in Alphabet mode, use the **✕** key. There are three cases; Initial Capital (**Ab**), Capital lock (**AB**) and Lower case (**ab**).
- You can move the cursor using the Left and Right keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols into a text message.

To	Press the
select a symbol	corresponding number key.
display more symbols	Up or Down key.
clear the symbol(s)	C key. When the input field is empty, this key returns the screen to the previous mode.
insert the symbol(s) into your message	OK soft key.
return to the previous mode	Back soft key.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in Phonebook.

For details about searching for a number in Phonebook, see page 37.

2. Press the  key to dial the second call.

The first call is automatically put on hold.

Or,

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other person.

When you want to finish, end each call normally by pressing the  key.

Switching the Microphone Off (Mute)

You can temporarily switch your phone's microphone off so that the other person on the phone cannot hear you.

Example: You wish to say something to another person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other person can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key.
2. If necessary, press the Down key to highlight the **Unmute** option.

3. Press the **OK** soft key.

The other person can hear you again.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute Keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send Keys** option must be selected.

Sending a Sequence of DTMF Tones

You can send the DTMF tones after entering the entire numbers you need to send.

This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

To send the DTMF tones:

1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the Down key to highlight the **Send DTMF** option.
3. Press the **OK** soft key.
4. Enter the number you want to send and press the **OK** soft key.

The tones are sent.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key.
2. Press the Down key to highlight the **Phonebook** option.
3. Press the **OK** soft key.

The Phonebook entries are listed.

4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Phonebook entries are listed, starting with the first entry matching your input.

5. To view the highlighted entry, press the **View** soft key.

For further details about the Phonebook feature, see page 33.

Using the Message Service

If you receive an SMS (Short Message Service) message during a call, the Message icon () flashes on the display. The **SMS Service** option enables you to read the message or send a new message.

For further details about the Message feature, see page 65.

Call Waiting

You can answer an incoming call while you have a call in progress, if your network supports this service and you have set the **Call Waiting** menu (**Menu 7.2**) to **Activate**; see page 142. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.
3. To end the call on hold, press the **Options** soft key and select the **End Held Call** option.

To end the current call, press the  key.

Making a Multi-party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call. For more information about subscribing to this service, contact your service provider.

Setting up the Multi-party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **OK** soft key.

4. To add a new person to the multi-party call, call the person in the normal way and press the **Options** soft key. Select the **Join** option and press the **OK** soft key.

You can add incoming callers by answering the call, pressing the **Options** soft key, and selecting the **Join** option. Repeat as required.

Having a Private Conversation With One Participant

1. Press the **Options** soft key and choose the **Select One** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key, and press the **Select** soft key or the  key.
3. When the **Private** option highlights, press the **OK** soft key.

Now you can talk privately to that person. The other participants can still converse with each other.

4. To return to the multi-party call, press the **Options** soft key and select the **Join** option. Press the **OK** soft key.

All the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key and choose the **Select One** option. Press the **OK** soft key.

The list of call participants appears.

2. Highlight a person from the list by pressing the Up or Down key, and press the **Select** soft key or the  key.
3. Press the Down key to select the **Remove** option and press the **OK** soft key.

The call ends with that participant, but you can continue to talk to the others.

4. When you want to end the multi-party call, press the  key.

Using the Menus

The phone offers a range of functions that allow you to tailor it to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Up or Down key to reach a main menu, **Phone Settings** for example. Press the **Select** soft key or the Right key to enter the menu.
3. If the menu contains sub-menus, **Language** for example, you can access them by scrolling using the Up or Down key and pressing the **Select** soft key or the Right key.

If the menu that you have selected contains further options, repeat this step.

4. To	Press the
scroll through the menus	Up or Down key, or use the Volume keys.
confirm the chosen setting	Select soft key or the Right key.
return to the previous menu level	 soft key or the Left key.
exit the menu without changing the settings	 key.

Using Shortcuts

When the menu style is set to **Bar Style** or **Page Style** (see page 117), the menu items, such as menu, sub-menu and options, can be accessed quickly by using their shortcut number.

Notes:

- The numbers assigned to each menu are indicated on the list on page 59. They may not match the menu number on the phone, depending on the services supported by your SIM card.
- For the menu numbers, 10, 11 and 12, use the **0**, ***** and **#** keys respectively.

Example: Accessing the **Language** menu.

1. Press the **Menu** soft key.
2. Press the **5** key for **Phone Settings**.
3. Press the **5** key for **Language**.

The languages available display.

List of Menu Functions

The following list shows the menu structure available and indicates the number assigned to each option and the page where you can find a description of each feature.

Note: If you use a SIM AT card that provides additional services, the **SIM AT** menu displays when you press the **Menu** soft key to enter Menu mode. For further details, see your SIM card instructions.

1. Messages (see page 65)

- 1.1 Text Messages
 - 1.1.1 Write New
 - 1.1.2 Inbox
 - 1.1.3 Outbox
 - 1.1.4 Templates
- 1.2 Multimedia Messages
 - 1.2.1 Write New
 - 1.2.2 Inbox
 - 1.2.3 Outbox
 - 1.2.4 Draft
 - 1.2.5 Templates
- 1.3 E-Mail Messages
 - 1.3.1 Write New
 - 1.3.2 Inbox
 - 1.3.3 Outbox
 - 1.3.4 Draft
 - 1.3.5 Templates
- 1.4 Push Message
 - 1.4.1 Inbox
 - 1.4.2 Receive
 - 1.4.3 Delete All
- 1.5 Delete All
 - 1.5.1 Text Message
 - 1.5.2 Multimedia Message
 - 1.5.3 E-Mail Message
- 1.6 Voice Mail
 - 1.6.1 Connect to Voice Server
 - 1.6.2 Voice Server Number
- 1.7 Memory Status
 - 1.7.1 Text Messages
 - 1.7.2 Multimedia Messages
 - 1.7.3 E-Mail Messages

1. Messages (continued)

- 1.8 Settings
 - 1.8.1 Text Messages
 - 1.8.2 Multimedia Messages
 - 1.8.3 E-Mail Messages
 - 1.8.4 MMS Profile
 - 1.8.5 E-mail-Profile
- 1.9 Broadcast

2. Call Records (see page 97)

- 2.1 Missed Calls
- 2.2 Received Calls
- 2.3 Dialed Calls
- 2.4 Delete All
- 2.5 Call Time
 - 2.5.1 Last Call Time
 - 2.5.2 Total Sent
 - 2.5.3 Total Received
 - 2.5.4 Life Time
 - 2.5.5 Reset Timers
- 2.6 Call Cost*
 - 2.6.1 Last Call Cost
 - 2.6.2 Total Cost
 - 2.6.3 Maxt Cost
 - 2.6.4 Reset Counters
 - 2.6.5 Set Max Cost
 - 2.6.6 Price/Unit

* Shows only if supported by your SIM card.

3. Camera (see page 109)

- 3.1 Take and Send
- 3.2 My Photo
- 3.3 MPEG
 - 3.3.1 Record
 - 3.3.2 Files
 - 3.3.3 Sample File
- 3.4 Memory Status

4. Sound Settings (see page 109)

- 4.1 Ring Tone
- 4.2 Ring Volume
- 4.3 Alert Type
- 4.4 Keypad Tone
- 4.5 Message Tone
 - 4.5.1 SMS Tone
 - 4.5.2 SMS-CB Tone
 - 4.5.3 MMS Tone
- 4.6 Folder Tone
- 4.7 Power On/Off
- 4.8 Extra Tones

5. Phone Settings (see page 113)

- 5.1 Infrared Activate
 - 5.1.1 With PC
 - 5.1.2 With other Phone
- 5.2 Display Settings
 - 5.2.1 Wallpaper
 - 5.2.2 Menu Style
 - 5.2.3 Brightness
 - 5.2.4 Back Light
 - 5.2.5 Service Light
 - 5.2.6 Graphic Logo
 - 5.2.7 Front LCD Display

5. Phone Settings (continued)

- 5.3 Greeting Message
- 5.4 Own Number
- 5.5 Language
- 5.6 Security
 - 5.6.1 PIN Check
 - 5.6.2 Change PIN
 - 5.6.3 Phone Lock
 - 5.6.4 Change Password
 - 5.6.5 Privacy
 - 5.6.6 SIM Lock
 - 5.6.7 FDN Mode
 - 5.6.8 Change PIN2
- 5.7 Extra Settings
- 5.8 Short Cut
 - 5.8.1 Key Up
 - 5.8.2 Key Down
 - 5.8.3 Key Right
 - 5.8.4 Key Left
- 5.9 TTY Settings
- 5.10 Reset Settings

6. Organizer (see page 127)

- 6.1 Alarm
 - 6.1.1 Once Alarm
 - 6.1.2 Daily Alarm
 - 6.1.3 Morning Call
 - 6.1.4 Remove Alarm
 - 6.1.5 Autopower
- 6.2 Calendar
- 6.3 Time & Date
 - 6.3.1 Set Time
 - 6.3.2 Set Date
 - 6.3.3 World Time
 - 6.3.4 Time Format
 - 6.3.5 Set Time from Network
- 6.4 Calculator

6. Organiser (continued)

- 6.5 To Do List
- 6.6 Voice Memo
 - 6.6.1 Record
 - 6.6.2 Memo List
 - 6.6.3 Delete All
 - 6.6.4 Memory Status
- 6.7 Currency Exchange
- 6.8 Pims Syinc
 - 6.8.1 Sync Executing
 - 6.8.2 View Sync Result
 - 6.8.3 Sync Setting
 - 6.8.4 Network Setting
 - 6.8.5 API Test

7. Network Services (see page 139)

- 7.1 Call Forwarding
 - 7.1.1 Forward Always
 - 7.1.2 Busy
 - 7.1.3 No Reply
 - 7.1.4 Unreachable
 - 7.1.5 Cancel All
- 7.2 Call Barring
 - 7.2.1 All Outgoing
 - 7.2.2 International
 - 7.2.3 International Except to Home
 - 7.2.4 All Incoming
 - 7.2.5 Incoming While Abroad
 - 7.2.6 Cancel All
 - 7.2.7 Change Barring password
- 7.3 Call Waiting
- 7.4 Network Selection
- 7.5 Caller ID
- 7.6 Closed User Group
- 7.7 Band Selection

8. Funbox (see page 147)

- 8.1 mMode
 - 8.1.1 Home
 - 8.1.2 Bookmarks
 - 8.1.3 http://
 - 8.1.4 Settings
 - 8.1.5 Clear Cache
- 8.2 Games
- 8.3 Sounds
- 8.4 Images
- 8.5 Delete All
- 8.6 Memory Status
 - 8.6.1 Games
 - 8.6.2 Sounds & Images

Messages

Using the **Messages** menu, you can use various message features, such as:

- short text messages
- multimedia messages
- e-mail messages
- WAP push messages
- voice mail
- cell broadcast messages

Text Messages *(Menu 1.1)*

Short Message Service (SMS) allows you to send and receive short text messages to and from other GSM mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Text Message icon () appears, you have received new text messages. If the memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in each message box to delete the obsolete ones.

Write New *(Menu 1.1.1)*

In this menu, you can write and send a text message.

Note: When you add media objects to the message, the number of characters you can enter decreases.

Creating a Simple Text Message

1. Create your message.

Note: For further details about entering characters, see page 43.

2. When you finish entering the message, press the **Options** soft key. The following options are available:

- **Send Only:** allows you to send the message. The message is deleted after sending.
- **Save and Send:** allows you to save a copy of the message and then send the message. You can read the message in your Outbox.
- **Save Only:** allows you to save the message so that it can be sent later. You can read the message in your Outbox.
- For further details about **Text Formatting**, **Add Objects**, **Add Templates**, **Add Phonebook**, **Add Bookmark** and **Language** options, see page 67.

3. Select **Send Only** or **Save and Send**, and press the **Select** soft key.

If you want to just save the message, select **Save Only**. After saving the message, the phone returns to the **Text Messages** menu.

4. If you select a save option, choose the memory location and press the **OK** soft key.

5. Enter a destination number and press the **OK** soft key.

The message is sent.

Note: When the phone fails to send the message, it will ask you if you want to retry. Press the **OK** soft key to confirm. Otherwise, press the **Exit** soft key to return to the Write New screen.

Creating a Message Using the Options

1. Create a message.

2. Press the **Options** soft key.

3. Select one of the following options by using the Up and Down keys and pressing the **Select** soft key:

- **Text Formatting:** allows you to format the style of the text.

For the **Size** attribute, **Normal**, **Large** and **Small** sizes are available. For the **Underline** and **Strikethrough** attributes, select **On** or **Off**.

These attributes can be combined.

- **Add Objects:** allows you to add a sound, melody, picture or animated image to the message. Select the category of the object to be added. In each category, you can select from the various factory-set items or choose an item received from other sources, such as the Internet or other phones.

- **Add Templates:** allows you to apply one of the preset message templates to the text. Select one of nine messages stored in the **Templates** menu (**Menu 1.1.4**). For further details, see page 70.

- **Add Phonebook:** allows you to add a Phonebook entry to your message. Select one from the list.

- **Add Bookmark:** allows you to add a web page's address stored in your Bookmark list. Select one from the list.

- **Language:** allows you to change the language to be used in T9 input mode. Select the language you want to use.

4. Complete the message, and send or save it by following the procedure from step 2 on page 66.

Inbox (Menu 1.1.2)

This message box is used to store the messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Phonebook. The icons on the left tell you the status of the messages:

- : Messages that have been opened.
 - : Messages that are unopened.
1. Select a message from the list and press the **View** soft key to read the message contents.
 2. To scroll through the contents, press the Up or Down key.
 3. To scroll to the previous or next message, press the * or # key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

Delete: allows you to delete the message.

Send: allows you to send/resend the message. For further details about how to send a message, see page 66.

Text Reply: allows you to reply to the sender by sending a text message.

Call Back: allows you to call the sender back.

Cut Address: allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text.

Move to Phone: allows you to move the message from the SIM card to the phone's memory. This option is only available when you select a message stored in the SIM card.

Move to SIM: allows you to move the message from the phone's memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Select Object: allows you to save media objects, such as sounds or images, from the message into your phone. You can use the objects when writing a message. For details, see page 67.

Outbox (Menu 1.1.3)

This message box is used to store the messages that you have already sent or will send.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook. The icons on the left tell you the status of the messages:

- : Messages currently being sent
 - : Messages sent
 - : Messages your phone couldn't send
 - : Messages to be sent
 - : Messages deferred
1. Select a message from the list and press the **View** soft key to read the message contents.
 2. To scroll through the contents, press the Up or Down key.
 3. To scroll to the previous or next message, press the * or # key.

While reading as message, you can choose the following options by pressing the **Options** soft key:

Delete: allows you to delete the message.

Send: allows you to send/resend the message. For further details about how to send a message, see page 66.

Cut Address: allows you to extract the destination number and URL, e-mail addresses or phone numbers from the message text.

Move to Phone: allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

Move to SIM: allows you to move the message from the phone's memory to the SIM card. This option is only available when you select a message stored in the phone's memory.

Select Object: allows you to save media objects, such as sounds or images, from the message into your phone. You can use the objects when writing a message. For details, see page 67.

Templates *(Menu 1.1.4)*

Using this menu, you can use one of preset messages to make new messages.

Select a message from the list and press the **Options** soft key.

The following options are available:

Edit: allows you to write a new message or edit the message.

Note: For further details about how to enter characters, see page 43.

Send Message: allows you to retrieve the message. Once you have completed the message, you can send, save and send, or simply save it. For further details about how to send a message, see page 65.

Delete: allows you to delete the message. You are asked to confirm the deletion by pressing the **Yes** soft key.

Multimedia Messages *(Menu 1.2)*

This menu allows you to use the Multimedia Message Service.

Multimedia Message Service (MMS) is a messaging service very similar to Short Message Service (SMS). It provides automatic and immediate delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice and audio clips. An MMS message is a multimedia presentation in a single entry. It is not a text file with attachments.

Using the MMS feature, your phone can receive and send messages that contain multimedia files, such as your photos, sounds and images you downloaded from the Internet and voice memos you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia message features can receive and display multimedia messages.

Write New (Menu 1.2.1)

This menu allows you to create a new multimedia message and then send it to multiple destinations.

Creating and Sending a Picture Message

1. Enter the subject of your message and press the **OK** soft key.

For further details about entering characters, see page 43.

2. When **Add Here** highlights, press the **Options** soft key and add the message contents using one of the following options:

- **Add Text**: enter the message text and press the **OK** soft key.
- **Add My Photo**: allows you to add a picture you took using the camera on your phone. Select **Take Photos** to take a new picture, or **My Photos** to add one of the pictures store in the phone. For further details about using the camera, see page 101.
- **Add Picture**: allows you to add a picture stored in the **Images** folder (**Menu 8.4**). Choose a picture and press the **Select** soft key. You may not be able to add some downloaded images if they are not in the correct format.
- **Add Sound**: allows you to add a sound file. Select **Record** to record a new voice memo, or **Sound List** to add one of the sounds in the **Sounds** folder (**Menu 8.3**) or voice memo list (**Menu 6.6.2**). You may not be able to add some downloaded sounds if they are not in the correct format.
- **Send**: allows you to send the message. Use this option when you finish creating the message.

- **Save**: saves the message in the **Draft (Menu 1.2.4)** or **Templates (Menu 1.2.5)** box for later use.
- **Settings**: allows you to change the message settings. For details about setting options, see page 91. After changing the settings, you need to press the **↶** soft key or the **C** key to go to back to the options screen.
- **Add Destination**: allows you to enter destination numbers or addresses. See steps 6 to 10 starting from page 74. After adding them, you need to press the **↶** soft key or the **C** key to go to back to the options screen.
- **Preview**: shows your message as it will display on the recipient's phone.

Note: You can add text, an image and a sound once for each page.

3. Repeat step 2 until you finish creating your message.
4. If you want to change the added items, press the Up or Down key to highlight one and press the **Options** soft key.

Note: The options available are different depending on whether the item you select on the message screen is text, an image, sound or the page field.

The following options are available:

- **Edit Text/Picture/Sound**: allows you to change the text or replace the image or sound with another one.
- **Add Page**: allows you to add more pages.
After you add a page, the display shows you the current page number and the memory space used for the page. You can move to each page using the Left or Right key on the message screen.
- **Delete**: deletes the item from your message.

- **Duration:** allows you to set when a text, an image or a sound displays on the message presentation screen and the length of time it will display for. When the message is opened, the display shows the item after a specified time in **Set Start Time** and scrolls to the next item after a specified time in **Set Duration**.
 - **Send:** allows you to send the message.
 - **Save:** saves the message in the **Draft (Menu 1.2.4)** or **Templates (Menu 1.2.5)** box for later use.
 - **Settings:** allows you to change the message settings. For details about setting options, see page 91.
 - **Add Destination:** allows you to enter destination numbers or addresses. See steps 6 to 10.
 - **Preview:** shows your message as it will display on the recipient's phone.
5. When you are finished creating the message, choose **Send** from the options and press the **Select** soft key.
 6. Select a destination type (**To**, **Cc** or **Bcc**) and press the **Select** soft key.
 7. Choose one of the following options and press the **Select** soft key:
 - **Phone Number:** allows you to enter the phone number you want.
 - **E-Mail Address:** allows you to enter the e-mail address of the recipient.
 - **Phone Book:** allows you to retrieve a number from your Phonebook.
 8. Enter a number or an e-mail address, or select a number from Phonebook.

9. When the correct number or address displays, press the **OK** soft key.
10. To add a destination, press the **Select** soft key when **Add Destination** highlights. Repeat from step 7.

If you want to edit the destinations, select one and press the **Select** soft key. You can change or delete it.
11. To enter additional numbers or addresses to the other destination types, press the **C** key or the  soft key and repeat steps 6 through 10.

You can enter up to 10 destinations each for **To**, **CC** and **Bcc**.
12. When you are finished entering the destinations, select **Send Message** and press the **Select** soft key.

Your phone sends the message.

Inbox *(Menu 1.2.2)*

Viewing a Message When You Receive it

When a new multimedia message comes in, the display shows a text notification along with the sender's number.

1. Press the **Select** soft key to view brief information about the message, such as the sender's number, the message size and the subject.

If you want to view the message later in the Inbox, press the **Exit** soft key.
2. To scroll through the message information, press the Up or Down key.

3. Press the **Options** soft key to use the following options:

- **Retrieve**: retrieves the message from the MMS server.
- **Delete**: deletes the message.
- **More Properties**: shows you detailed information about the message.

4. To read the message, press the **Select** soft key when **Retrieve** is highlighted.

Your phone retrieves the message contents from the server and displays it.

5. To scroll through the message, press the Up or Down key.

6. When you are finished, press the  key.

Viewing a Received Message in the Inbox

When you access the **Inbox** menu (**Menu 1.2.2**), the list of multimedia messages you received displays with the senders' phone numbers, if they are available in your Phonebook, or subjects. The icons on the left tell you the status of the messages.

- : Messages that have been opened.
- : Messages that are unopened.

1. Select a message on the list and press the **Select** soft key.

The message displays and scrolls to the next page, if it has one, after a specified time; for details about setting the time, see page 91.

2. Press the **OK** soft key to go to the message view screen.

Or, the display automatically switches to the screen after a few seconds.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

While viewing a message, you can choose the Message options by pressing the **Options** soft key.

If you are viewing a new message, the options are the same as when you view a message as soon as you receive it. See page 76.

When you are reviewing a message retrieved from the MMS server, the following options are available:

Delete: deletes the message.

Reply: allows you to reply to the sender by sending a text or multimedia message.

Call Back: allows you to call the sender back.

Cut Address: allows you to extract the sender's number or e-mail address and URL, e-mail addresses or phone numbers from the message text.

Forward: allows you to forward the message to another person.

Save Picture: allows you to save an image from the message into your phone. Images are stored in the **Images** folder (**Menu 8.4**).

Save Sound: allows you to save a sound from the message into the **Sounds** folder (**Menu 8.3**).

Properties: shows you information about the message, such as the message status, subject, sender's address or phone number, message size, priority and the time and date when the message was received.

Outbox (Menu 1.2.3)

When you access this menu, the list of the multimedia messages you sent or saved displays. The icons on the left tell you the status of the messages.

-  : Messages currently being sent
-  : Messages sent
-  : Messages your phone couldn't send
-  : Messages to be sent
-  : Messages deferred

1. Select a message on the list and press the **View** soft key.

The message displays and scrolls to the next page, if it has one, after a specified time; for details about setting the time, see page 91.

2. Press the **OK** soft key to go to the message view screen.

Or, the display automatically switches to the screen after a few seconds.

3. To scroll through the message, press the Up or Down key.

If the message has more than one page, you can scroll through the pages by using the Left and Right keys.

While viewing a message, you can choose the following options by pressing the **Options** soft key:

Delete: deletes the message.

Cut Address: allows you to extract the destination numbers or e-mail addresses and URL, e-mail addresses or phone numbers from the message text.

Send: allows you to resend the message.

Edit Message: allows you to change the message contents, sound, picture or text.

Properties: shows you information about the message, such as the message status, subject, sender and recipients' addresses or phone numbers, message size, priority and the time and date when the message was sent.

Draft (Menu 1.2.4)

After creating a multimedia message, you can store it in this message box for later sending.

For further details about viewing a message, see "Outbox" on page 78.

Templates (Menu 1.2.5)

This menu stores messages you saved as templates so that you can use them to make new messages.

1. Scroll through the template list using the Up and Down keys.
2. When the message template you want highlights, press the **Select** soft key.
3. Press the **OK** soft key to use the following options, or the display automatically shows the options after a specified time:

- **Edit Message**: allows you to send a message using the template. For further details about how to send a message, see page 72.

- **Delete**: allows you to delete the message. You are asked to confirm the deletion by pressing the **Yes** soft key.

4. Press the  key to return to Idle mode.

E-Mail Messages *(Menu 1.3)*

You can send or receive e-mail messages directly using your phone. Using the E-mail feature, you can receive or send sounds and pictures, as well as Phonebook entries or calendar memos.

To use this feature, you need to subscribe to an e-mail message service and set up your e-mail account. For further details, contact your service provider.

Write New *(Menu 1.3.1)*

To write and send an e-mail message:

1. Enter the subject of your e-mail and press the **OK** soft key.
For further details about entering characters, see page 43.
2. Enter the e-mail text and press the **Options** soft key.
3. Press the Up or Down key to select an option and press the **Select** soft key.

The following options are available:

- **Add Attachments:** enables you to attach one of your Phonebook entries, memos stored on your calendar, pictures or sounds. After selecting the file type you want to add, choose an item from the list. After adding, press the  soft key or the **C** key to go back to the Write Option screen.
If you want to remove an attached item, select **Attachment View** and select it on the list. Press the **View** soft key and then the **Discard** soft key.
- **Send:** sends your message.
- **Save:** saves the message in the **Draft (Menu 1.3.4)** or **Templates (Menu 1.3.5)** box for later use.

- **Add Destination:** allows you to add destination addresses. See steps 5 to 9. After adding, press the  soft key or the **C** key to go back to the Write Option screen.

- **Information:** shows the e-mail subject, the list of the recipients you added, if any, and message text.

4. When you have finished creating the e-mail, choose **Send** from the options and press the **Select** soft key.
5. Select **To**, **Cc**, or **Bcc** to enter a destination address and press the **Select** soft key.
6. Choose one of the following options and press the **Select** soft key:
 - **Direct Enter:** allows you to directly enter the e-mail address you want.
 - **Phone Book:** allows you to retrieve an e-mail address from your Phonebook.
7. Enter an e-mail address and press the **OK** soft key, or select one from Phonebook and press the **Select** soft key.
8. When the correct address displays, select **To**, **Cc**, or **Bcc** and press the **Select** soft key.
9. When there is an e-mail address already entered in the selected destination type, press the **Select** soft key when **Add Destination** highlights. Repeat from steps 6 to 8.
If you want to edit the destinations, select one and press the **Select** soft key. You can change or delete it.
10. When you have finished adding the destinations, press the **Select** soft key when **Send E-Mail** highlights.

Your phone sends the e-mail.

Inbox (Menu 1.3.2)

This menu allows you to access your e-mail Inbox and read the e-mail messages you received.

1. Press the **Select** soft key when **Check E-Mail** highlights.
2. Select the e-mail account from which you want to retrieve e-mails and press the **Select** soft key.

Note: For further details about setting up an e-mail account, see page 89.

The list of e-mail messages you received displays. The icons on the left tell you the status of each message:

- : The header hasn't been read
- : The header has been read.
- : The contents have been read.
- : The message has attachments and the contents have been read.
- : The message has been deleted from both the phone and e-mail server. This icon disappears when you disconnect the phone from the server.

3. Scroll to an e-mail from the list and press the **Select** soft key.

When the e-mail is not read, the display shows you its header, such as sender's name, e-mail address, Cc address(es), date when the message was sent and subject.

If the e-mail has already been read, the display immediately shows you its text. Skip to step 6.

4. Press the **Options** soft key.

The following options are available:

- **Retrieve:** retrieves the e-mail text from the e-mail server.
- **Delete:** deletes the e-mail. You can select to either delete it from your phone or from both the phone and e-mail server.
- **Disconnect:** disconnects your phone from the e-mail server.

5. Select **Retrieve** and press the **Select** soft key.

The phone displays the e-mail text.

6. To scroll through the text, press the Up or Down key.

You can read the next or previous pages using the Right and Left keys.

After opening an e-mail, you can use the following options by pressing the **Options** soft key:

Delete: deletes the e-mail. You can select to either delete it from your phone or from both the phone and e-mail server.

Reply: allows you to send a reply to the sender.

Forward: allows you to forward the e-mail to another person.

Cut Address: allows you to extract the sender's address, the Cc addresses and URL, e-mail addresses or phone numbers from the message text.

Attachments: allows you to view the attachments, such as Phonebook entries, calendar memos, sounds or pictures. You can save them into your phone's memory.

Disconnect: disconnects your phone from the e-mail server.

Information: shows the e-mail header, such as the sender's name and e-mail address, Cc address(es), subject and e-mail text.

Outbox (Menu 1.3.3)

When you select this menu, the list of the e-mail messages you sent or failed to send displays along with the message status and subject. The icons on the left tell you the messages' status:

- : E-mail your phone couldn't send.
- : E-mail with attachments your phone couldn't send.
- : E-mail your phone successfully sent.
- : E-mail with attachments your phone successfully sent.
- : E-mail your phone is sending.
- : E-mail with attachments your phone is sending.
- : E-mail your phone will send.
- : E-mail with attachments your phone will send.

1. Select a message from the list and press the **Select** soft key to read it.

The display shows you the recipients' addresses, time and date when the message was sent, and message text.

2. To scroll through the contents, press the Up or Down key.

After opening an e-mail, you can use the following options by pressing the **Options** soft key:

Delete: deletes the e-mail.

Cut Address: allows you to extract the destination addresses and URL, e-mail addresses or phone numbers from the message text.

Send: allows you to resend the e-mail.

Save: allows you to save the e-mail in the **Draft (Menu 1.3.4)** or **Templates (Menu 1.3.5)** box for later use.

Edit E-Mail: allows you to change the message subject or contents.

Add Attachments: enables you to attach another item to the message.

Draft (Menu 1.3.4)

In this menu, you can retrieve the messages you saved.

When you select this menu, the list of the e-mail messages you saved displays. The icons on the left tell you the messages' status:

- : Saved e-mail.
- : Saved e-mail with attachments.

For further details about selecting a message and using the message options, see page 84.

Templates (Menu 1.3.5)

This menu stores the e-mail messages you saved as templates so that you can use them to make new messages.

When you select this menu, the list of the e-mail messages you saved displays. The icons on the left tell you the messages' status:

- : Saved e-mail.
- : Saved e-mail with attachments.

Scroll to the template you want using the Up or Down keys and press the **Select** soft key. The display shows the message information.

Press the **Options** soft key to use the following options:

Edit E-mail: allows you to change the message subject or contents.

Send: allows you to send the message.

Save: makes a copy of the message in the **Draft (Menu 1.3.4)** or the **Templates (Menu 1.3.5)** box for later use.

Delete: deletes the selected message.

Add Attachments: enables you to attach one of your Phonebook entries, memos stored on your calendar, pictures or sounds. See page 80 for further details.

Push Message *(Menu 1.4)*

In this menu, you can receive and access web messages from the server.

The following options are available:

Inbox: allows you to read the messages received from the web server.

Receive: allows you to set whether or not your phone receives web messages. Select **Always** to receive web messages or **Never** to reject web messages.

Delete All: allows you to delete all of the web messages.

Delete All *(Menu 1.5)*

This menu allows you to delete all of the messages in each message box. You can also delete all of your messages at one time.

1. Select a message type and press the **Select** soft key.

To	Press the
select a message box to clear	Up or Down key. To delete all of your messages, select All Messages .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.

3. To delete the marked messages, press the **Delete** soft key.

4. When a confirming message displays, press the **Yes** soft key to confirm.

Voice Mail *(Menu 1.6)*

This menu allows you to access your voice mailbox, if your network supports this service.

The following options are available:

Connect to Voice Server: before using the Voice Mail feature, you must enter the voice server number obtained from your service provider; see menu option **1.6.2**. You can then select this option and press the **OK** soft key to listen to your messages.

You can quickly connect to the voice server by pressing and holding the **1** key in Idle mode.

Voice Server Number: allows you to change the voice mail server number, if necessary.

To	Press the
enter the server number	corresponding numeric keys.
correct a digit	C key.
move the cursor to the left or right without clearing a digit	Left or Right key.

Note: Voice Mail is a network feature. Please contact your service provider for further details.

Memory Status *(Menu 1.7)*

You can check the amount of the memory being used and the memory remaining for messages.

Text Messages: shows the number of messages currently stored and the total number of messages you can store in the SIM, Phone and CB memories. If necessary, press the Up or Down key to scroll through the screen.

Multimedia Messages: shows the space, including the free and used space, and how much space is currently occupied by each message box, press the Up or Down key to scroll through the screen.

E-Mail Messages: shows the total space, including the free and used space. It also shows how much space is currently occupied by each message box.

Settings *(Menu 1.8)*

This menu allows you to configure various settings for using the Message feature.

Text Messages *(Menu 1.8.1)*

In this menu, you can set up default SMS/EMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

Notes:

- The setting options available in this menu may be different depending on your service provider.
- The last setting you accessed is automatically activated for sending messages.

Setting x (where **x** is the setting group number): each group has its own sub-menu.

Service Centre: allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.

Default Destination: allows you to store the default destination number. The number automatically displays on the Destination screen when you create a message.

Default Type: allows you to set the default message type to **Text**, **Fax**, **Email** or **Paging**. The network can convert the messages into the selected format.

Default Validity: allows you to set the length of time your text messages are stored in the message center while attempts are made to deliver them.

Setting Name: allows you to give a name to the setting group currently being defined.

Common Setting: The following options are available:

Reply Path: allows the recipient of your message to send you a reply through your message center, if your network supports this service.

Delivery Reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer Selection: allows you to choose either **GSM** or **GPRS**, depending on your network.

Multimedia Messages *(Menu 1.8.2)*

You can change the default settings for sending or receiving multimedia messages.

The following options are available:

Delivery Report: when this option is enabled, the network informs you whether or not your message has been delivered.

Read Reply: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

Auto Download: you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications. As soon as you receive a message, you can use more options while you are reading it. See page 68 for details about the options.

Message Acceptance: you can specify the category of messages you want to receive.

Hide ID: when this option is enabled, your phone number does not display on the recipient's phone.

Expiry Date: you can select the length of time your messages are stored in the message centre after they are sent.

Delivery Time: you can set a delay time before the phone sends your messages.

Priority: you can select the priority level of your messages.

Report Allowed: when this option is enabled, the sender of an incoming message receives a delivery report from the network.

Page Duration: you can set the length of time one page of a received message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.

E-Mail Messages *(Menu 1.8.3)*

You can change the default setting options for using the E-mail message feature.

The following options are available:

Account: you can configure up to five e-mail accounts using different service providers. The last account you accessed is automatically activated for sending or receiving e-mail messages.

For each account, the following options are available:

Account Name: enter a name for the current account.

Connect Name: select one of the profiles set in the **E-mail-Profile** menu (**Menu 1.8.5**).

Name: enter the name to be displayed in your outgoing messages as the sender name.

E-Mail Address: enter your e-mail address.

Protocol Type: specify an e-mail protocol type for the incoming server, either **POP3** or **IMAP4**. Contact your e-mail service provider for more information.

For the IMAP4 protocol, you can set whether or not the phone retrieves e-mails with attachments. You can also select the number of e-mail headers you want to retrieve.

Incoming Server: enter the IP address or domain name of the server to be used for receiving messages. Your e-mail service provider can give you this information.

User ID: enter your e-mail ID.

Password: enter your e-mail password.

Outgoing Server: enter the IP address or domain name of the server to be used for sending messages. Your e-mail service provider can give you this information.

Check Interval: allows you to select how often the phone checks the server for incoming messages.

Signature: allows you to attach your name, phone number, simple memo or tag line as a signature to your e-mail messages.

Send Copy to Self: allows you to set whether or not your phone sends a copy of the outgoing e-mail to the e-mail address specified in your account.

MMS Profile *(Menu 1.8.4)*

In this menu, you can configure various network settings that are required when you send or receive multimedia messages.

Notes:

- The last profile you accessed is automatically activated for sending messages.
- If you change the MMS settings without first checking with your service provider, the MMS feature may not work properly.
- The availability of the setting options may vary depending on your country.

The following options are available for each profile:

Profile name: enter a name that you wish to assign to the MMS server.

Connection URL: enter the address of your MMS server.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-secure**.

IP address: enter the gateway address required to connect to the MMS server.

User name: enter the user ID required to connect to the MMS server.

Password: enter the password required to connect to the MMS server.

APN: enter the access point name used for the address of the MMS server.

For further details, contact your service provider.

E-mail-Profile *(Menu 1.8.5)*

In this menu, you can configure various network settings that are required when you send or receive e-mail messages.

Notes:

- Your service provider can give you information about each setting.
- If you change the e-mail settings without first checking with your service provider, the E-mail feature may not work properly.

The following options are available for each profile:

Profile Name: enter a name that you wish to assign to the e-mail profile.

Connect Name: enter a descriptive name for the connection.

User Name: enter the user ID required to access the GPRS network.

Password: enter the password required to access the GPRS network.

APN: enter the access point name used for the address of the GPRS network gateway.

Broadcast *(Menu 1.9)*

This network service allows you to receive text messages on various topics, such as the weather or traffic. Cell Broadcast (CB) messages display as soon as they are received, provided that:

- the phone is in Idle mode.
- the **Receive** option is set to **Enable**.
- the message channel is currently active on the channel list.

The following options are available:

Read: lets you view the received message. The **Volatile** box displays the messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message by using the Up and Down keys. While reading a message, press the **Save** soft key to store the message in the **Archive** box for later retrieval.

Receive: allows you to enable or disable the reception of broadcast messages.

Channel list: allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:

Select: use to enable or disable channels on the list by marking or unmarking them respectively. A check mark displays in front of each selected channel.

Add channel: use to enter the ID and title for a new channel.

Delete: use to remove a channel from the list.

Edit: use to change the ID and title of an existing channel.

Call Records

In this menu, you can view the:

- calls you missed, received or dialed.
- length of your calls.
- cost of your calls.

Notes:

- You can access the numbers in the three types of call records by pressing the  key in Idle mode.
- The number of call records the phone can store may be different depending on your SIM card.

Missed Calls *(Menu 2.1)*

This menu lets you view the last 20 numbers of the calls you received, but did not answer.

The number or name, if available, display together with the time and date when the call was received.

By pressing the **Options** soft key, you can:

- edit the number, if available, and dial it or save it in Phonebook.
- delete the call from the list.

You can also dial the number by pressing the  key.

Received Calls (Menu 2.2)

This menu lets you view the last 20 numbers of the calls you received.

The number or name, if available, display together with the time and date when the call was received.

By pressing the **Options** soft key, you can:

- edit the number, if available, and dial it or save it in Phonebook.
- delete the call from the list.

You can also dial the number by pressing the  key.

Dialled Calls (Menu 2.3)

This menu lets you view the last 20 numbers you dialed.

The number or name, if available, display together with the time and date when the call was made.

By pressing the **Options** soft key, you can:

- edit the number and dial it or save it in Phonebook.
- delete the call from the list.

You can also dial the number by pressing the  key.

Delete All (Menu 2.4)

This menu allows you to delete all of the records in each call record. You can also delete all of your call records at one time.

To	Press the
select a call record to clear	Up or Down key. To delete all of your call records, select All Calls .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.
delete the marked records	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Call Time (Menu 2.5)

This menu lets you view the timers for calls you made and received.

Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so on.

The following options are available:

Last Call Time: length of the last call.

Total Sent: total length of all calls you made since the timer was last reset.

Total Received: total length of all calls you received since the timer was last reset.

Life Time: the number and total duration of all calls made to or from your phones since the phone was shipped from the factory. This timer cannot be reset.

Reset Timers: option used to reset the call timers. You must first enter the phone password and then press the **OK** soft key.

Note: The password is preset to “00000000” at the factory. To change this password, see page 122.

Call Cost *(Menu 2.6)*

This network feature lets you view the cost of calls. This menu may not be available depending on your SIM card.

The following options are available:

Last Call Cost: cost of the last call you made.

Total Cost: total cost of all calls you made since the cost counter was last reset. If the total cost exceeds the maximum cost set in the **Set Max Cost** option, you can no longer make any calls until you reset the counter.

Max Cost: maximum cost set in the **Set Max Cost** option. See below.

Reset Counters: option used to reset the cost counter. You must first enter your PIN2 (see page 165) and then press the **OK** soft key.

Set Max Cost: option used to enter the maximum cost that you authorize for your calls. You must first enter your PIN2 (see page 165) and then press the **OK** soft key.

Price/Unit: option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls. You must first enter your PIN2 (see page 165) and then press the **OK** soft key.

Camera

Using the camera module embedded in your phone, you can take photos of people or events while on the move. Additionally, you can send photos to other people in a multimedia message or set one as a wallpaper.

You can also record videos using your phone as a camcorder.

CAUTION

- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Take and Send *(Menu 3.1)*

In this menu, you can take a photo. The camera produces JPEG photos.

Note: When you take a photo in direct sunlight or in bright conditions, shadow may appear on the photo.

1. Accessing the **Take and Send** menu turns on the camera on the top center of the phone. Or you can press and hold the  key in Idle mode.

The image to be captured appears on the display.

2. Adjust the image by rotating the camera module and aiming it at the subject.



- Use the Left key to adjust the display size.
- Use the Right key to zoom in or out.
- Use the Up and Down keys to adjust the brightness of the image.
- Use the Volume keys on the left side of the phone to flip the image vertically.
- To use the flash when it is dark, press the right soft key.
- To use the camera options, press the left soft key. For details, see page 103.

3. Press the  key or **Take** soft key to take the photo.

4. Press the **Save** soft key.

To discard the photo and return to the capture mode, press the **Cancel** soft key.

5. Enter a name for the photo, if necessary, press the **C** key to clear the default name.

For further details about entering characters, see page 43.

6. Press the **OK** soft key to save the name.

7. To	Press the
use the photo options	Options soft key. For further details, see page 103.
return to Capture mode	Cancel soft key or C key.
return to Idle mode	 key.

When you press the **Options** soft key after saving a photo, the following options are available:

Send by MMS: allows you to send the photo using a multimedia message. For further details, see page 72.

Set This Photo: allows you to set the image as your wallpaper for the idle screen or a caller icon image for the Phonebook entries.

Protection: allows you to set the protection to keep the photo from being deleted.

Using the Camera options

In Capture mode, you can use various options by pressing the **Options** soft key.

To	Press the
scroll to an option	Up or Down key.
select the highlighted option	Select soft key or the Right key.
return to Capture mode	 soft key or C key.

The following options are available:

Effects: allows you to change the color tone or apply special effects to the photo.

Frames: allows you to use a decorated frame. Select a frame from the list using the Navigation keys.

Multi-Shot: allows you to take a series of action stills. Set up the **Speed** and **Time** options and select the number of photos for the camera to take.

After taking photos, press the **Save All** soft key to save all of them or the **Save** soft key to save the selected one.

Rotation: rotates the photo. You can reverse the photo as a mirror image or flip the photo vertically.

Self Timer: allows you to have a delay time before the camera takes the photo. Select the length of time you want. When you press the  key, the camera takes the photo after a specified time.

Photo Size: sets the image size to either **MY Display(176x160)**, **QCIF(176x144)**, **QVGA(320x240)**, **CIF(352x288)** or **VGA(640x480)**. The selected image size displays on the capture screen.

Image Quality: allows you to select the image quality from **Super Fine**, **Fine**, **Normal**, and **Economy**. The selected quality displays on the capture screen.

My Photo *(Menu 3.2)*

This menu allows you to review your photos. When you access this menu, your phone displays the latest photo on the full screen. Use the Left and Right keys to scroll to the photos.

To change the view mode, press the right soft key, labeled with the following modes:

Properties: shows the properties about the photo with the thumbnail image.

2x2: show up to four thumbnail image on one screen.

3x3: shows up to nine thumbnail images on one screen.

View: shows the photo on the full screen, which is the default mode.

Press the **Options** soft key to use the following options:

Send by MMS: allows you to send the photo as a multimedia message. For further details, see page 72.

Set This Photo as: allows you to set the image as your wallpaper for the idle screen or a caller icon image for an incoming call.

Protection: allows you to set the protection to keep the photo from being deleted.

Delete This: deletes the photo.

Delete All: deletes all of the photos saved in your phone. When there is a protected photo, the display asks you if you want to delete it. Press the **Yes** or **No** soft key.

Rename: allows you to change the name of the photo.

Edit: allows you to change the color tone or apply special effects to the photo.

View Properties: shows the properties of the photo, such as time and date it was saved, file size, photo size and quality, protection status, file format and file name.

MPEG (Menu 3.3)

You can record a video that is currently displayed on the camera screen and save it as a MPEG file. You can also view the sample file stored in your phone.

Record (Menu 3.3.1)

You can record up to **ten** videos.

1. Choose quality for the video image and press the **Select** soft key.
2. When the camera turns on, adjust the image by rotating the camera module and aiming it at the subject.
 - Use the Up and Down keys to adjust the brightness of the image.
 - Use the Left key, **Small** or **Large** soft key to adjust the display size.
 - Use the Volume keys on the left side of the phone to flip the image vertically.
3. Press the  key or **Record** soft key to start recording.
4. When you are finished, press the **Stop** soft key.

Or, the phone automatically stops when the recording time expires.
5. Press the left soft key.
6. Enter a name for the video, if necessary, press the **C** key to clear the default name.

For further details about entering text, see page 43.

7. Press the **OK** soft key.

The video is saved and the display returns to Record mode.

Files (Menu 3.3.2)

When you access this menu, the video file list displays.

To play a video:

1. Select the video you want to view using the Up and Down keys.
2. To play the video file, press the **Play** soft key.

When you want to use options, press the **Options** soft key. For further details about the options, see below.

3. To	Press the
search backward through a file	Left key.
search forward through a file	Right key.
pause or play	Up key.
stop	Down key.
adjust the volume	Volume keys.

When you press the **Options** soft key, you can use the following options:

Send by MMS: allows you to send the photo as a multimedia message. For further details, see page 72.

Protection: allows you to set the protection to keep the video from being deleted.

Delete: deletes the current video file.

Delete All: deletes all of your video files. When there is a protected video, the display asks you if you want to delete it. Press the **Yes** or **No** soft key.

Rename: allows you to change the file name.

View Properties: allows you to view information of the video, such as the file name, the time and date the video was recorded, protection status and file size.

Sample File *(Menu 3.3.3)*

This menu allows you to view the default video file. For further details, see page 107.

Memory Status *(Menu 3.4)*

You can check the amount of memory available for the Camera feature.

The display shows the total space, including the space used for photos and videos and the space remaining.

Sound Settings

You can use the Sound Settings feature to customize various settings, such as the:

- ring melody, volume and type.
- sounds made when you press a key, receive a message, open/close the folder or switch your phone on/off.
- alert tone made every minute during a call, when you make an error or when your call is connected to the system.

Note: When the phone is in Silent mode (see page 29), you cannot change the sound settings.

Ring Tone *(Menu 4.1)*

This menu allows you to select a ring melody.

You can choose between many different melodies. If you have downloaded sounds from the Internet or the optional EasyGPRS programme, you can use them in this menu.

Ring Volume *(Menu 4.2)*

This menu allows you to adjust the ring volume to one of five levels.

Use the Up and Down keys or the Volume keys on the left side of the phone to increase or decrease the volume.

Alert Type *(Menu 4.3)*

This menu allows you to specify how you are to be informed of incoming calls or the alarm settings.

The following options are available:

Light Only: the service light flashes; the phone neither rings nor vibrates.

Melody: the phone rings using the selected ring tone or melody in the **Ring Tone** menu (**Menu 4.1**); see page 109.

Vibration: the phone vibrates but does not ring.

Vibra+Melody: the phone first vibrates three times and then starts ringing.

Keypad Tone *(Menu 4.4)*

This menu allows you to select the tone that the phone sounds when you press a key.

To turn the sound off, select **Off**.

Message Tone *(Menu 4.5)*

This menu allows you to select how the phone informs you that a new message has been received.

SMS Tone *(Menu 4.5.1)*

The following options are available for alerting you to new SMS messages:

OFF: the phone does not use an SMS tone.

Light Only: the service light flashes.

Vibration: the phone vibrates.

Single Beep: the phone beeps once.

SMS Tonex: the phone uses one of several SMS tones.

SMS-CB Tone *(Menu 4.5.2)*

The following options are available for alerting you to new cell broadcast (CB) messages:

OFF: the phone does not use a CB tone.

Light Only: the service light flashes.

Vibration: the phone vibrates.

Single Beep: the phone beeps once.

SMS-CB Tonex: the phone uses one of several CB tones.

MMS Tone *(Menu 4.5.3)*

The following options are available for alerting you to new multimedia messages:

OFF: the phone does not use an MMS tone.

Light Only: the service light flashes.

Vibration: the phone vibrates.

Single Beep: the phone beeps once.

MMS Tonex: the phone uses one of several MMS tones.

Folder Tone *(Menu 4.6)*

This menu allows you to select the tone that the phone sounds when you open or close the folder.

To turn the sound off, select **Off**.

Power On/Off *(Menu 4.7)*

This menu allows you to select the melody that the phone sounds when it is switched on and off.

To turn the sound off, select **Off**.

Extra Tones *(Menu 4.8)*

You can customize additional tones used for the phone.

To turn a given tone	Press the
on	On soft key. A check mark displays in front of the option.
off	Off soft key. The check mark no longer displays.

The following options are available:

Error Tone: sets whether or not the phone informs you when you make a mistake.

Minute Minder: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.

Connect Tone: sets whether or not the phone beeps when your call is connected to the system.

Phone Settings

Many different features of your phone can be customized to suit your preferences. All of these features are accessed in the **Phone Settings** menu.


Infrared Activate *(Menu 5.1)*

This feature allows you to send or receive data to or from IrDA-compatible computers or phones through the infrared port.

With PC *(Menu 5.1.1)*

To use an infrared connection, you must:

- configure and activate an IrDA-compliant infrared port on your PC.
- activate the infrared feature on the phone; the IrDA icon (☞) appears on the top line of the display.
- align the IrDA port on the phone with the IrDA port on your computer.

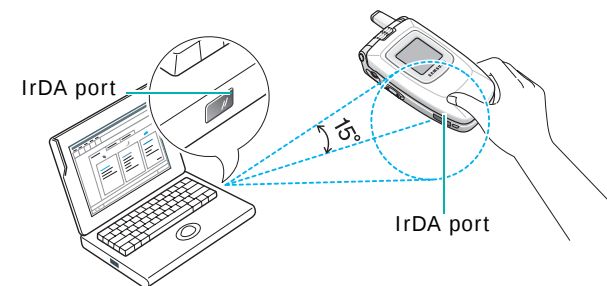

The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

Note: For optional performance, use an optional data link cable. You can purchase one from your local Samsung dealer.

With other Phone *(Menu 5.1.2)*

Using the infrared connection, you can send or receive Phonebook entries and calendar memos from another compliant phone.

Note: If you receive a call while sending or receiving data, you can either answer or reject the call without interrupting the IrDA connection. But, picking up your phone may break the connection between the phones, so use the ear-microphone to answer the call.

Receiving Data from Another Phone

1. Align the IrDA ports on both phones with each other.
2. Activate the infrared feature on the phones. For this phone, access the **Infrared Activate** menu (**Menu 5.1**) and select **With Other Phone**.

The connection between the phones is established and your phone receives data from the other phone. You can receive up to 20 items in succession.

3. When the list of the received data displays, you have two options:

To save an individual item:

- ① Select one on the list and press the **Select** soft key.

The display shows the Phonebook entry.

- ② Press the **OK** soft key.

- ③ Press the **Options** soft key.

The following options are available:

- **Discard**: deletes the data.
- **Save**: allows you to save the selected data in your phone's memory.

- ④ Select **Save** and press the **Select** soft key.

To save all of the data:

- ① Press the **Options** soft key.

- The following options are available:
- **Save All**: allows you to save all data.
- **Save All vCard**: saves all the Phonebook entries from the received data.
- **Save All vCalendar**: saves all the calendar memos from the received data.
- **Discard All**: deletes all of the data.
- **Discard All vCard**: deletes all the Phonebook entries from the received data.
- **Discard All vCalendar**: deletes all the calendar memos from the received data.
- **Exit**: exits the IrDA function. When the phone asks if you want to delete the remaining data, press the **Yes** or **No** soft key.

- ② Select a save option and press the **Select** soft key.

4. When FDN (Fixed Dial Number) mode is enabled on your phone, enter the PIN and press the **OK** soft key.

For further details about the FDN mode, see page 123.

5. Press the **Save** soft key.

The entries are saved.

Sending Your Phonebook

1. Align the IrDA ports on both phones with each other to establish the IrDA connection.

The IrDA port of the other phone must be activated.
2. Access a Phonebook entry and press the **Options** soft key.
See page 37.
3. Press the Up or Down key to scroll to **Send via IrDA** and press the **Select** soft key.
4. Highlight an option, **Selected Data** or **All Data**, using the Up or Down key and press the **Select** soft key.

Your phone begins sending the data.

Sending a Calendar Memo

1. Align the IrDA ports on both phones with each other to establish the IrDA connection.

The IrDA port of the other phone must be activated.
2. Access the **Calendar** menu (**Menu 6.2**) and select the memo you want to send. See page 131.
3. Press the **Options** soft key and select **Send via IrDA**.

Your phone begins sending the memo.

Display Settings (Menu 5.2)

In this menu, you can change various settings for the display or backlight.

Wallpaper (Menu 5.2.1)

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

Wallpaper List: you can select a background image to be displayed on the idle screen.

To change the background image:

1. Scroll through the list by pressing the Up or Down key.

You have various preset images available. You can also select a blank background or any images downloaded from the Internet and the optional EasyGPRS programme or received in messages.
2. Press the **Select** soft key when the image you want highlights.
3. When the image displays, press the **Select** soft key to display it on the idle screen.

Text Display: you can specify whether or not the phone displays the time and date.

Text Color: you can select the color of the text to be displayed on the idle screen.

Menu Style (Menu 5.2.2)

This menu allows you to select the menu display style. You can choose either **Grid Style**, **Bar Style** or **Page Style**.

Brightness *(Menu 5.2.3)*

This menu allows you to adjust the brightness of the front or main LCD to see it better in different lighting conditions.

Adjust the brightness by using the Up and Down keys or the ▲ and ▼ keys.

Back Light *(Menu 5.2.4)*

You can select the length of time the backlight is on. The backlight turns on when you press a key, open the folder or receive a call or message and remains on for the specified length of time.

Service Light *(Menu 5.2.5)*

This menu allows you to select whether or not the service light is used. It also allows you to select a clock in which it flashes.

Select one of the seven color settings. When the phone is ready for use, the service light flashes in the chosen color.

If you do not wish to use the service light, select **Off**.

Graphic Logo *(Menu 5.2.6)*

This menu allows you to display your service provider's logo instead of its name.

Off: the service provider's name displays in Idle mode.

On: the service provider's logo stored in your phone displays in Idle mode; if no logo has been stored, the service provider's name displays.

Front LCD Display *(Menu 5.2.7)*

This menu allows you to adapt the external display to your preferences.

Display Type: allows you to change the type of the external display.

No Display: the display shows only the current time on a digital clock.

Date Display: the display shows the current time and date.

Analog Clock: the display shows the current time both on digital and analogue clocks.

Light Timer: allows you to select the length of time the external display remains shows the date or analogue clock.

Greeting Message *(Menu 5.3)*

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

To	Press the
clear the existing message	C key and hold it down until the message is cleared.
enter a new message	appropriate alphanumeric keys.
change the text input mode	right soft key.

For further details about how to enter characters, see page 43.

Own Number *(Menu 5.4)*

This function is a memory aid, which you can use to check your own phone numbers if you need to do so.

You can:

- assign a name to each of your own phone numbers registered on your SIM card.
- edit the names and numbers.

Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

Language *(Menu 5.5)*

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Security *(Menu 5.6)*

The Security feature enables you to restrict the use of your phone to others and the types of calls.

Various codes and passwords are used to protect features of your phone. They are described in the following sections. Also see pages 163-165.

PIN Check *(Menu 5.6.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before disabling the PIN Check feature, you must enter your PIN.

The following options are available:

Disable: the phone connects directly to the network when you switch it on.

Enable: you must enter the PIN each time the phone is switched on.

Change PIN *(Menu 5.6.2)*

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Phone Lock *(Menu 5.6.3)*

When the Phone Lock feature is enabled, the phone is locked and you must enter an 8-digit phone password each time the phone is switched on.

The password is preset to “00000000” at the factory. To change the phone password, see the **Change Password** menu (**Menu 5.6.4**).

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

Disable: you are not asked to enter the phone password when you switch the phone on.

Enable: you are required to enter the phone password when you switch the phone on.

Change Password *(Menu 5.6.4)*

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to “00000000” at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

Privacy *(Menu 5.6.5)*

Using this menu, you can lock your media contents, such as multimedia messages, photos, videos, voice memos, images and sounds. Once you have locked the contents, you must enter the phone password to access the associated menus.

To	Press the
select an item to lock	Up or Down key. To lock all of the contents, select All .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.
lock the marked items	OK soft key.

When the phone asks for the phone password, enter the password and press the **OK** soft key.

Note: The password is preset to “00000000” at the factory. To change this password, see page 122.

SIM lock *(Menu 5.6.6)*

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code to use a different SIM card.

Once you have entered the lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

FDN Mode *(Menu 5.6.7)*

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

Disable: you can call any number.

Enable: you can only call phone numbers stored in Phonebook. You must enter your PIN2.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Change PIN2 *(Menu 5.6.8)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Extra Settings (Menu 5.7)

You can turn the automatic redialing or answering features on or off.

To turn a feature	Press the
on	Mark soft key. A check mark displays in front of the option.
off	Unmark soft key. The check mark no longer displays.

The following options are available:

Auto Redial: when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two attempts varies.

Active Folder: when this option is checked, you can simply open the folder to answer a call.

When it is unchecked, you must press a key to answer a call, depending on the setting of the **Anykey Answer** option. See below.

Anykey Answer: when this option is checked, you can answer an incoming call by pressing any key, except the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you can only press the  key or **Accept** soft key.

Short Cut (Menu 5.8)

The Navigation keys can be used as shortcut keys. In Idle mode, they allow you to access specific menus directly.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the Up or Down key, and press the **Select** soft key.
2. Select the menu to be assigned to the key by pressing the Up or Down key.

Note: To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key to save the selection.

TTY Settings (Menu 5.9)

TTY, a TDD or Text Telephone, is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone. In this menu, you can enable your phone's TTY feature.

The following options are available:

Enable: allows you to communicate with other TTY users. You can communicate with other TTY users by connecting certain portable TTY terminal models to your phone using an optional adapter.

Disable: does not allow you to communicate with other TTY users.

Reset Settings *(Menu 5.10)*

You can easily reset your phone to its default settings. To reset your phone:

1. Select the **Reset Settings** menu.
2. Enter the 8-digit phone password and press the **OK** soft key.

Note: The password is preset to "00000000." To change this password, see page 122.

Organizer

The Organizer feature enables you to:

- set an alarm so that the phone rings at a specific time, such as to remind you of an appointment.
- view the calendar and organise your schedule.
- set the current time and date.
- define a list of things to do.
- record voice memos.
- use the phone as a calculator for basic mathematical equations or currency exchange operations.

Alarm *(Menu 6.1)*

This feature allows you to:

- set the alarm to ring at a specific time.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

Once Alarm: the alarm rings only once and is then deactivated.

Daily Alarm: the alarm rings every day at the same time.

Morning Call: the alarm rings to wake you up in the morning.

To set an alarm:

1. Choose the type of alarm to be set and press the **Select** soft key.

2. Enter the time for the alarm to sound.

Note: Your phone is preset to use 12-hour format. To change the format, see page 132.

If you want to use the alarm options, press the **Options** soft key. The following options are available:

- **Remove Alarm:** deactivates the current alarm.
- **Alarm Sound Set:** allows you to select the alarm melody.

3. Press the **OK** soft key.

4. Select **AM** or **PM** and press the **Select** soft key.

5. If you select **Morning Call** in step 1, choose the repeat option, **Monday to Friday** or **Monday to Saturday**, and press the **Select** soft key.

To stop the alarm when it rings, press the **Exit** soft key.

Remove Alarm: deactivates all alarm settings.

Autopower: when this option is set to **Enable**, the alarm rings at the specified time, even if the phone is switched off.

If the option is set to **Disable** and the phone is switched off at the specified time, the alarm does not ring.

Calendar *(Menu 6.2)*

With the Calendar feature, you can:

- consult the calendar to check your memos.
- write memos to keep track of your schedule.
- set an alarm to act as a reminder, if necessary.

Consulting the Calendar

When you select the **Calendar** menu (**Menu 6.2**), the calendar displays with today's date highlighted. The following options are available when you press the **Options** soft key:

Search All: displays all of the memos, starting with the oldest regardless of the day. To scroll through the memos, press the Up or Down key.

Delete All: allows you to delete all of the memos. You are asked to confirm your action.

Go to Date: allows you to go to a specific date.

Exit: exits the Calendar feature and returns to Idle mode.

Writing a Memo

You can make up to 30 memos for one day.

To write or edit a memo on a specific date:

1. Select a date on the calendar, using the Navigation keys.

Note: To skip to the previous or next month, press the Volume keys.

2. Press the **Select** soft key.

An empty memo screen displays allowing you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

Note: For further details about how to enter characters, see page 43.

You are asked if you wish to set an alarm.

4. If you want an alarm to ring on the chosen day, press the **Yes** soft key.

Otherwise, press the **No** soft key. The memo is saved.

5. If you pressed the **Yes** soft key, enter the time for the alarm and press the **OK** soft key.

Note: Your phone is preset to use 12-hour format. To change the format, see page 132.

You can also select the melody for the alarm by pressing the **Melody** soft key.

6. Select **AM** or **PM** and press the **Select** soft key.

The color of the date on the calendar changes to green to indicate that a memo exists for that date.

Viewing a Memo

When you select a day for which a memo already exists on the calendar, the latest memo for the day displays.

If more than one memo is stored, press the Up or Down key to scroll to the previous or next memo.

Press the **New** soft key to add a new memo for the day.

You can use the following options by pressing the **Options** soft key:

Edit: allows you to change the memo text.

Alarm: allows you to set an alarm to ring at a specified time to remind you of the memo. If you set the alarm earlier, you can change or delete it.

Delete: allows you to delete the memo.

Copy to: allows you to copy the memo to another date.

Move to: allows you to change the date of the memo.

Send via IrDA: allows you to send the memo to another phone via the IrDA port. For further details, see page 116.

Time & Date *(Menu 6.3)*

This menu allows you to change the current time and date displayed. You can also find out what time it is in another part of the world.

The following options are available:

Set Time: allows you to enter the current time. You can choose the time format in the **Time Format** menu (**Menu 6.3.4**).

Note: Before setting the time, you must specify your time zone, in the **World Time** menu (**Menu 6.3.3**).

Set Date: allows you to enter the day, month and year.

World Time: allows you to find out what time it is in another part of the world, using the Left and Right keys.

The screen shows the:

- city name.
- current date and time.
- time difference between the selected city and your city if you have set the local time (see below for further details).
- city selected as your time zone.

To select your time zone:

1. Select the city corresponding to your time zone by pressing the Left or Right key one or more times.

The local time and date display.

2. Press the **Set** soft key.

Time Format: allows you to change the time format to **24 Hours** or **12 Hours**.

Set Time from Network: allows you to receive time information from your service provider's network.

Manual: you need to manually set the time and date according to the current time zone using the **Set Time** menu (**Menu 6.3.1**).

Auto: the phone automatically updates the time and date according to the current time zone using the network service.

Confirm First: the phone asks for a confirmation before the update.

Note: Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.

Calculator *(Menu 6.4)*

With this feature, you can use the phone as a calculator. The calculator provides basic arithmetic functions; addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.

Notes:

- To delete mistakes or clear the display, press the **C** key.
- To include a decimal point or a bracket, press the left soft key until the symbol you want displays.

2. Press the right soft key until the arithmetic symbol you want appears: **+** (addition), **-** (subtraction), ***** (multiplication), **/** (division).
3. Enter the second number.
4. To view the result, press the  key.
5. Repeat steps 1 to 4 as many times as required.

To Do List *(Menu 7.5)*

This feature allows you to:

- enter a list of tasks to be done.
- assign a priority and a deadline to each task.
- sort the tasks by priority and status mark.

Creating the To Do List

1. Press the **New** soft key.
2. Enter the first task.

Note: For further details about how to enter characters, see page 43.

3. Press the **OK** soft key.

4. Select a priority status of high, normal or low using the Up and Down keys and press the **Select** soft key.

5. Enter your deadline and press the **OK** soft key.

If you do not want to set a deadline, press the **Skip** soft key.

Editing the To Do List

When you select the **To Do List** menu (**Menu 6.5**), the current contents display with the status mark. If the task has been done, and priority;  for High,  for Normal and  for Low.

Action	Procedure
View the details for a specific task	① Highlight the task. ② Press the View soft key. ③ Scroll through the tasks using the Up and Down keys, if necessary.
Change the status of a specific task	① Highlight the task. ② Press the ✕ key to mark the task as completed as of the current time and date. or ① Highlight the task. ② Press the Options soft key. ③ Select the Mark option. ④ Select the appropriate status (Done or Undo).
Create a new task	① Press the Options soft key. ② Select the New option. ③ Enter the text, priority and/or deadline for the task.

Action	Procedure
Edit an existing task	① Highlight the task. ② Press the Options soft key. ③ Select the Edit option. ④ Change the text, priority and/or deadline for the task.
Sort the existing tasks by priority or status	① Press the Options soft key. ② Select the Sort option. ③ Select the sort criterion (High , Low , Done or Undo).
Copy a task	① Highlight the task. ② Press the Options soft key. ③ Select the Copy option. ④ Change the text, priority and/or deadline for the task.
Copy a task to the calendar	① Highlight the task. ② Press the Options soft key. ③ Select the Copy to Calendar option. ④ Change the text and deadline for the task and set the alarm.
Delete a task	① Highlight the task. ② Press the Options soft key. ③ Select the Delete option.
Delete all tasks	① Press the Options soft key. ② Select the Delete All option. ③ Confirm the deletion by pressing the OK soft key.
Exit the To Do list	① Press the Options soft key. ② Select the Exit option.

Voice Memo *(Menu 6.6)*

You can record voice memos. After recording, you can send a memo to other people using the Multimedia Message Service.

Record *(Menu 6.6.1)*

This menu allows you to record a new memo. When you select this option, the display shows the 30-second timer.

1. To start recording, press the **Record** soft key.
2. Record a memo by speaking into the microphone.
3. When you press the **Stop** soft key, or if the recording time expires, the following options display:
 - **Replay**: plays back your memo.
 - **Re-record**: discards the memo and enables you to record another one.
 - **Save**: allows you to save the memo.
 - **Quit**: cancels your recording and exits the **Record** menu.
4. To save the memo, choose **Save** from the options and press the **Select** soft key.
5. Press the **C** key to clear the default name, if necessary, and enter a name for the memo.

For further details about how to enter characters, see page 43.

6. Press the **OK** soft key.

The memo is saved and then the display shows the memo information.

7. Press the **Options** soft key to use the following memo options:

- **Send**: allows you to send the memo to other people by using the MMS feature. Follow the procedure on page 72.
- **Rename**: allows you to change the memo's name.
- **Delete**: deletes the memo.

8. To exit, press the **C** or  key.

Memo List *(Menu 6.6.2)*

This menu shows your voice memo list. Scroll to a memo and press the **Options** soft key. The following options are available:

Play: plays the memo.

Send: allows you to send the memo to other people by using the MMS feature. See page 72 for further details about sending a message.

Rename: allows you to change the memo's name.

Information: displays information about the memo, such as the name, date when the memo was made, recording duration and memory size.

Delete: deletes the memo.

Delete All *(Menu 6.6.3)*

In this menu, you can delete your voice memos.

When the confirming message appears, press the **Yes** soft key. To cancel the deletion, press the **No** soft key.

Memory Status *(Menu 6.6.4)*

You can check the amount of memory for voice memos.

The display shows you the total space, including used and free space.

Currency Exchange *(Menu 6.7)*

Using this menu, you can figure out currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key.

You can insert a decimal point by pressing the **#** key.

2. Enter the amount to convert and press the **OK** soft key.

The amount you entered and its equivalent value display.

3. Press the **Exit** soft key to exit the currency convertor.

Pims Sync *(Menu 6.8)*

Data Required!!

Network Services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call Forwarding *(Menu 7.1)*

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holidays.

You can use the following options to forward voice calls and/or data calls:

Forward Always: all calls are forwarded.

Busy: calls are forwarded when you are already on another call.

No Reply: calls are forwarded when you do not answer the phone.

Unreachable: calls are forwarded when you are not in an area covered by your service provider.

Cancel All: all call forwarding options are canceled.

To set your call forwarding options:

1. Select a call forwarding option by pressing the Up or Down key, and then press the **Select** soft key.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.

3. To	Press the
activate call forwarding	Activate soft key. Go to step 4.
change the number to be called	Change soft key. Go to step 4.
deactivate call forwarding	Remove soft key.

4. Enter the number to which the calls are to be forwarded and press the **OK** soft key.

To enter an international code, press the **0** key until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

You can deactivate all call forwarding settings by selecting the **Cancel All** option.

Call Barring *(Menu 7.2)*

The call barring network service allows you to restrict your calls.

You can use the following options to restrict voice calls and/or data calls:

All Outgoing: calls cannot be made.

International: international calls cannot be made.

International Except to Home: when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.

All Incoming: calls cannot be received.

Incoming while Abroad: calls cannot be received when you are using your phone outside of your home service area.

Cancel All: all call barring settings are deactivated; calls can be made and received normally.

To set your call barring options:

1. Select a call barring option by pressing the Up or Down key, and then press the **Select** soft key.
2. Select the type of calls, voice or data, by pressing the Up or Down key, and then press the **Select** soft key.
3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

To deactivate specific call barring settings:

1. Select the call barring option to be deactivated.
2. Select the type of calls to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

You can also deactivate all call barring settings by selecting the **Cancel All** option.

Change Barring Password: you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

Call Waiting *(Menu 7.3)*

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, voice or data, to which you want to apply the call waiting option by pressing the Up or Down key, and then press the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.

Network Selection *(Menu 7.4)*

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between them.

To automatically or manually select the network when roaming:

1. When **Network Selection** displays, highlights and press the **Select** soft key.
2. Press the Up or Down key until the appropriate option highlights and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to step 3.

3. Press the Up or Down key until the network you want highlights and then press the **OK** soft key.

You are connected to that network.

Caller ID *(Menu 7.5)*

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available:

Default: the default setting provided by the network is used.

Hide Number: your number does not display on the other person's phone.

Send Number: your number is sent each time you make a call.

Closed User Group (CUG) *(Menu 7.6)*

This network service allows incoming and outgoing calls to be restricted to a selected user group. You can create up to ten user groups.

For details about how to create and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

Activating a Closed User Group

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key:

Index List: lets you list, add or delete CUG index numbers. The list of current CUG indexes appears. Add a new CUG index as advised by your service provider or delete a group.

To	Press the
scroll through the existing CUG indexes	Up or Down key.
add a new CUG index	Options soft key, select the Add option and enter the index.
delete a CUG index	Options soft key and select the Delete option.
activate a CUG index	Options soft key and select the Activate option.

Outside Access: lets you enable or disable calls to numbers other than those in the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

Default Group: you may set a default CUG with your service provider. If you have done so, you can enable the Default Group option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Deactivate: deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

Band Selection *(Menu 7.7)*

For the phone to make and receive phone calls, it must register with one of the available networks. Your phone can handle any of the following types of networks:



- GSM 1800
- Combined GSM 850/1900

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you must remember to change to an appropriate band.

1. When **Band Selection** displays, press the **Select** soft key.
2. Press the Up or Down key until the appropriate option and press the **OK** soft key.
3. When the display confirms the network band you selected, press the **Yes** soft key.

To cancel the selection, press the **No** soft key.

When you select a new band, your phone displays a confirmation message and then automatically searches for all of the available networks. Your phone registers with a preferred network within the band.

Funbox

The **Funbox** menu contains several fun options.

mMode *(Menu 8.1)*

Your phone is equipped with a WAP (Wireless Application Protocol) browser to allow you to access and navigate the Wireless Web using your phone.

Home *(Menu 8.1.1)*

Selecting this menu connects the phone to the network and loads the homepage of the Wireless Web service provider. You can also press the  key in Idle mode.

The contents of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the Up and Down keys.

Note: To access the startup homepage from any other screen in the WAP browser, use the **Home** option. For further details about the WAP Browser menus, see page 149.

Exiting the WAP Browser

To exit the browser at any time, simply press the  key.

Navigating the WAP Browser

To	Press the
scroll through and select browser items	Up or Down key until the symbol ► points to the item, and then press the Select soft key to confirm the selection.
select a numbered item	corresponding numeric key.
return to the previous page	Back soft key or the C key.
return to the startup homepage	* key for more than two seconds and select the Home option. For further details about this option, see page 149.



Entering Text in the WAP Browser

When you are prompted to enter text, the current text input mode is indicated on the screen. To change the text input mode, press the @ key or more times.

The following modes are available:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Note: You can also enter special characters in Upper-case or Lower-case Character mode. For details about available characters, see page 47.

T9 mode (T9): allows you to enter English characters by pressing one key per letter. In this mode, you can use only the 0 key to display alternative words. To change the case, press the * key.

Number mode (1): allows you to enter numbers.

Selecting and Using Browser Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option:

1. Press and hold the * key.
A menu list displays.
2. Highlight a menu by pressing the Up or Down key.
3. Select an option by pressing the **Select** soft key.
4. If necessary, select a secondary option using the Up and Down keys, and press the **Select** soft key to confirm.

Note: The menus may vary, depending on your version of the WAP browser.

The following options are available:

Reload: reloads the current page.

Home: takes you back at any time to the home page of the Wireless Web service provider.

Go to URL: allows you to manually enter the URL address of a Web page. After entering an address, press the **OK** soft key to go there directly.

Show URL: displays the URL address of the Web page to which you are currently connected. It also enables you to set the current site as the startup home page.

To	Press the
set the current page as your startup home page	Option soft key and select the Save to Home option.
set a bookmark for the current page	Option soft key and select the Save to Bookmark option.
cancel your setting	Back soft key.

Edit Home: allows you to change the startup home page manually. Enter the URL and press the **OK** soft key. For further details about entering text, see page 148.

Clear Cache: deletes the information stored in the cache, which stores the most recently accessed Web pages.

Inbox: allows you to read messages received from the web server.

Bookmarks *(Menu 8.1.2)*

This menu allows you to store the URL addresses of up to ten of your favorite web sites. You can access this menu directly by pressing and holding the **#** key while using the WAP browser.

To store a URL address:

1. Select an empty location and press the **Options** soft key.
2. Enter the address and press the **Enter** soft key.
For further details about how to enter characters, see page 43.
3. Enter a name for the favorite item and press the **Enter** soft key.

After saving favorite items, you can use the following options by pressing the **Options** soft key:

Go To URL: takes you to the site.

Edit: allows you to edit the address and name.

Delete: deletes the address.

http:// *(Menu 8.1.3)*

This menu allows you to manually enter the URL address of the Web site that you wish to access.

For further details about how to enter characters, see page 43.

Settings *(Menu 8.1.4)*

This menu allows you to set up five proxy servers for the WAP browser. Contact your service provider for details about your Settings options.

For each server, the following options are available:

Profile Name: enter a name that you wish to assign to the HTTP proxy server.

Homepage URL: set the address of your startup homepage. When the default homepage displays, you can delete it using the **C** key and enter your own choice.

Security: select a data transmission mode. Choose **Secure** to protect your data against unauthorized access; otherwise, choose **Non-Secure**.

Bearer: select a bearer to be used for each type of network address accessed; **GPRS** or **Data**.

The remaining options depend on the Bearer setting.

When the bearer is set to **GPRS**:

IP Address: enter the WAP gateway address required to connect to the Internet.

User Name: enter the User ID required to connect to the GPRS network.

Password: enter the password required to connect to the GPRS network.

APN: enter the access point name used for the address of the GPRS network gateway.

When the bearer is set to **Data**:

IP Address: enter the WAP gateway address required to connect to the Internet.

Login Name: enter the PPP server login ID.

Password: enter the PPP server password.

Dial-up Number: enter the PPP server phone number.

Data Call Type: select a data call type; **Analogue** or **ISDN**.

Note: The WAP browser settings may vary, depending on the service provider. Contact your service provider for further details.

Clear Cache *(Menu 8.1.5)*

You can clear the information stored in the cache, the phone's temporary memory which stores the most recently accessed Web pages.

Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

Games *(Menu 8.2)*

You can download MIDlets (Java applications running on mobile phones) from various sources using the WAP Browser and store them in your phone.

When you access the **Games** menu, the list of the default games appears.

Note: Java services may not be available depending upon the service provider.

Downloading a New Game

You can download more games from the web site given by your service provider using the **New Games** option.

Launching a MIDlet

Note: The procedure explained below is for the default games. For downloaded games, the procedure may be different.

1. Scroll to the MIDlet you want on the Games list and press the **Launch** soft key.
2. On the startup screen of the MIDlet, scroll to an option using the Navigation keys.

The following options are available:

- **START GAME**: starts a new game.
- **CONTINUE**: allows you to continue the last game you were playing.
- **HIGH SCORE**: shows the high score table. This option may not be available for some games.
- **HOW TO PLAY**: shows how to play the game and the key functions for the game.
- **OPTION**: allows you to switch the game sound on or off.

3. Press the **ⓘ** key to confirm your selection.

While you are playing a game, to	Press the
adjust the sound volume	Volume keys
stop the game and return to the startup screen	C key.
exit the game	Ⓜ key.

Viewing MIDlet Information

1. Scroll to the MIDlet you want and press the **Info** soft key.
The display shows information about the MIDlet, such as the file size, application version and its vendor.
2. To scroll to other MIDlet information, press the Navigation keys.
3. If you want to delete the MIDlet, press the **Delete** soft key and then press the **Yes** soft key to confirm the deletion.
4. To exit and return to the Games list, press the **Back** soft key or the **C** key.

Note: When you select the default games from the list, the **Delete** option is not available, so that you cannot delete them.

Entering Text

If you need to enter text while using a MIDlet, you can use the following input modes:

Upper-case character mode (A): allows you to enter upper-case English characters.

Lower-case character mode (a): allows you to enter lower-case English characters.

Number mode (1): allows you to enter numbers.

Symbol mode: allows you to enter symbols. After highlighting a symbol by pressing the Navigation keys, press the **ⓘ** key to insert it.

T9 mode (T9): allows you to enter English characters by pressing one key per letter. In this mode, you can change the case by pressing the **0** key.

To change the text input mode, press the ***** key until the appropriate indicator appears.

Sounds *(Menu 8.3)*

In this menu, you can view the list of sounds downloaded from the web server or received in multimedia messages. You can set the downloaded sounds as the current ring tone or send them to other phones.

By pressing the **Options** soft key, you can use the following options:

Rename: allows you to change the name of the sound.

Delete: deletes the sound.

Set as Ring Tone: sets the sound as your ring tone.

Using the **mMode Downloads** option on the sounds list, you can access the web site provided by your service provider and download new sounds.

Images (Menu 8.4)

In this menu, you can view the list of pictures downloaded from the web server or received in messages. You can set the downloaded pictures as the current background image or send them to other phones.

If you set a photo as your wallpaper, it displays as **My_Photo** on the list.

By pressing the **Options** soft key, you can use the following options:

Rename: allows you to change the name of the image.

Delete: deletes the image.

Set as Wallpaper: sets the image as your wallpaper for the idle screen.

Using the **New Wallpapers** option on the images list, you can access the web site provided by your service provider and download new images.

Delete All (Menu 8.5)

This menu allows you to delete all of the downloaded items in the Games, Sounds or Images folders. You can delete all of the items at one time.

To	Press the
select a folder to clear	Up or Down key. To delete all of your items, select All .
place a check mark	Mark soft key.
remove a check mark	Unmark soft key.
delete the marked items	Delete soft key.

When a confirming message displays, press the **Yes** soft key to confirm.

Memory Status (Menu 8.6)

You can check the amount of the memory being used and the memory remaining for games, sounds and images.

Games: the display shows the total, free and used space and the number of games you downloaded.

Sounds & Images: the display shows the total, used and free space, including each space used by sounds and images.

Solving Problems

If you are experiencing problems with your phone, perform the following simple checks before contacting a service professional. This may save you the time and expense of an unnecessary service call.

When you switch your phone on, the following messages may appear:

Insert SIM Card

- Check that the SIM card is correctly installed.

Phone Locked Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number (PIN) supplied with the SIM card.
- The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN Check** menu (**Menu 6.6.1**).

Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your service provider.

“No service,” “Network failure” or “Not done” displays

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

Your correspondent cannot reach you

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?

Your correspondent cannot hear you speaking

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth?
The microphone is located at the bottom of the phone.

The phone starts beeping and “Warning** Low Battery” flashes on the display**

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (); the number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialed when you recall a Phonebook entry

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

When requested for any of the codes explained below, enter the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the **C** key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes, can be changed using the **Security** menu (**Menu 5.6**). See page 120 for further details.

Important! Avoid using access codes resembling emergency numbers, such as 911, so that you do not accidentally dial an emergency number.

Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorized use. The phone password is supplied with the phone and is preset to “00000000” at the factory.

To	See
activate/deactivate the Phone Lock feature	page 121 (Menu 5.6.3).
change the phone password	page 122 (Menu 5.6.4).

PIN

The **P**ersonal **I**dentification **N**umber or PIN (4 to 8 digits) protects your SIM card against unauthorized use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To	See
activate/deactivate the PIN Check feature	page 120 (Menu 5.6.1).
change the PIN	page 121 (Menu 5.6.2).

PUK

The 8-digit PUK (**P**IN **U**nblocking **K**ey) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN:

1. Enter the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the **Confirm New PIN** message displays, enter the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

PIN2

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, see page 123 (**Menu 5.6.7**).

PUK2

The 8-digit PUK2 (**P**IN **U**nblocking **K**ey 2), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Enter the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the **Confirm PIN2** message displays, enter the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

Health and Safety Information

Usage guidelines: All about performance and safety

Getting the Most Out of Your Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN THE U.S.A., USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET.

Using Your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and redial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when you stationary or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.

- Dial **9,1,1** to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call special non-emergency wireless number when necessary.

Following Safety Guidelines

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Restricting Children's Access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Samsung-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 104° F (0° C to 40° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.

Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month

32° F to 104° F (0° C to 40° C)

Disposal of Lithium Ion (Li-Ion) Batteries

For safe disposal options of your Li-Ion batteries, contact your nearest Samsung-authorized service center.

- For safety, do not handle a damaged or leaking Li-Ion battery.
- Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and FCC

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 2.0 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

SAR Values

- Head: 1.16 (W/kg)
- Body-worn: 0.938 (W/kg)
- Distance: 1.5 (cm)

FDA Consumer Update

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that it is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to a interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Committee
- Occupational Safety and Health Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities about wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the wireless exposures that people get from these base stations are typically thousands of times lower than those they get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

What kinds of phones are the subject of this update?

The term “wireless phones” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS”. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones” which have a base unit connected to the phone wiring in a house, typically operate at far lower per levels, and thus produce RF exposures far below the FCC safety limits.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could Accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions

under which people use wireless phones, so we don’t know with certainty what results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glaucoma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health threat?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years’ follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. FCC established these guidelines in consultation with FDA and other federal health and safety agencies. The FCC limit for exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissue that absorb energy from the wireless phone and is set well below levels known to have effects.

Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

What has FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless hand sets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,"

sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Where can I find additional information?

- For additional information, please refer to the following resources:
- FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)
- Federal Communications Commission (FCC) RF Safety Program
(<http://www.fda.gov/oet/rfsafety>)
- International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)
- World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)
- National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk>)

CTIA Safety Information

Exposure to radio frequency signals

Your wireless hand held portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standard bodies:

- ANSI C95.1 (1992)
- NCRP Report 86 (1986)
- ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

Antenna care

Use only the specified of approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on efficient operation:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless telephones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving--driving safety is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Electronic devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should ALWAYS keep the phone more than six inches from their pacemaker when the pacemaker is turned on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives.) Optional for each phone manufacturer.

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

Potentially explosive environments

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include fueling areas such as gasoline stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

For vehicles equipped with an airbag

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: SGH-p716

Serial No.:

User Guide Proprietary Notice

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

STANDARD LIMITED WARRANTY

What is Covered and For How Long? SAMSUNG TELECOMMUNICATIONS AMERICA, L.P. (SAMSUNG) warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case/Pouch	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are the Limits On SAMSUNG's Liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM

THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED

BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, L.P.

1130 East Arapaho Road

Richardson, Texas 75081

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2003 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice. [080802]

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features of your mobile phone, here are a few definitions:

Active Folder

Ability to answer a call simply by opening the folder.

Call Forwarding

Ability to reroute calls to another number.

Call Holding

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

Call Waiting

Informs you that you have an incoming call when you are engaged on another call.

Caller Line Identification Services (Caller ID)

Services allowing subscribers to view or block the telephone numbers of callers.

EMS (Enhanced Message Service)

An adaptation of the Short Message Service (SMS) that allows you to send and receive ring tones and service provider's logo, as well as combinations of simple media to and from EMS-compliant handsets. Because EMS is based on SMS, it can use SMS centres the same way that SMS does. EMS works on all Global System for Mobile communications (GSM) networks. EMS senders can use text, melodies, pictures, sounds, and animations to enhance the expressive power of messages that are limited by the display constraints of mobile devices.

GPRS (General Packet Radio Service)

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS provides continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a MIDlet.

MMS (Multimedia Message Service)

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can be sent by e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and also video clips and presentation information.

Multi-party Calling

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

PIN (Personal Identification Number)

Security code that protects the phone against unauthorized use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

Proxy Server

A proxy server resides between a Web client, such as a web browser, and a real Web server and acts as an intermediary between them. When some people browse a web site, their browser is not actually connecting to the web server. The request from their browser goes to a proxy server, and the proxy server makes the request to the web server. A proxy server can improve performance for groups of users because it cache the results of all requests for a certain amount of time. If a user requests a web page that it already loaded for another user, it reloads the page instead of forwarding the request to the Web server, which can be a time-consuming operation.

PUK (PIN Unblocking Key)

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

Roaming

Use of your phone when you are outside your home area (when travelling for example).

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

Soft Keys

Two keys marked  and  on the phone, the purpose of which:

- varies according to the function that you are currently using.
- is indicated on the bottom line of the display just above the corresponding key.

Tri Band

Ability to handle any of the following types of network; GSM 850, GSM 1800, combined GSM 850/ 1800 and GSM 1900 MHz bands, for greater call success and wider roaming.

Your phone automatically searches for the last network used. If, for any reason, this network is unavailable, your phone will attempt to register with a different network.

Voice Mail

Computerized answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

Index

A

- Access codes 163
- Active folder 124
- Alarm 127
- Alert type 110
- Alphabet mode, text input 47
- Answering
 - call 26
 - second call 53
- Anykey answer 124
- Auto redial 124

B

- Background image 117
- Backlight
 - description 15
 - time 118
- Band selection 146
- Battery
 - charging 19
 - installing 18
 - low indicator 20
 - removing 17
- Battery care 171
- Broadcast messages 95

C

- Calculator 133
- Calendar memos
 - copying 131
 - deleting 131
 - sending via IrDA 116
 - viewing 130
 - writing 129
- Call back, message 68
- Call cost 100
- Call records
 - incoming 98
 - missed 27, 97
 - outgoing 98

- Call time 99
- Caller groups
 - editing 39
 - searching 38
- Caller ID 144
- Calls
 - answering 26, 53
 - ending 23
 - forwarding 139
 - holding 49
 - making 23
 - redialing 24
 - rejecting 26
 - waiting 53, 142
- Camera
 - options 103
 - playing videos 107
 - recording videos 106
 - taking photos 101
 - viewing photos 104
- CB (Cell Broadcast) messages 95
- Characters, enter 43
- Charging battery 19
- Conference call 53
- Connect tone 112
- Cost, calls 100
- Currency exchange 138

D

- Dangerous Areas 170
- Date, set 131
- Deleting
 - calendar memos 131
 - call records 97
 - e-mail message 83, 84
 - multimedia messages 77, 78
 - phonebook 37
 - photo 105
 - task 135
 - text messages 68, 70
 - video 107
 - voice memos 137

- Delivery reports, message 90
- Display
 - backlight 15
 - external 15
 - icons 14
 - layout 13
 - settings 117
- DTMF tones, send 51

E

- Earpiece volume 25
- E-mail messages
 - creating/sending 80
 - deleting 83, 84
 - reading 82, 84
 - setting 89
- E-mail profile 94
- EMS (Enhanced Message Service) 65
- Error tone 112
- External display 15

F

- FCC Notice 172
- FDN (Fixed Dial Number) mode 123
- Flying 170
- Folder tone 112
- Forwarding
 - e-mail message 83
 - multimedia message 77
- Forwarding, calls 139
- Funbox 147

G

- Games 153
- Graphic logo 118
- Greeting message 119

H

- Health and safety 166
- Holding, calls 49

I

- Icons, description 14
- Images, downloaded 156
- Inbox, messages
 - e-mail 82
 - multimedia 75
 - text 68
- Infrared, connect 113
- International calls 23
- Internet 147

J

- Java service 153

K

- Key volume 25
- Keypad tones
 - selecting 110
 - sending 51
- Keys
 - description 11
 - location 10
 - shortcut 125

L

- Language, select 120
- Last number, redial 24
- Locking
 - media contents 122
 - phone 121
 - SIM card 123
- Low battery indicator 20

M

- Memory status
 - downloaded items 157
 - e-mail messages 89
 - phonebook 42
- Menu style 117
- Menus
 - accessing 57
 - list 58

Message tone 110
Messages
 cell broadcast 95
 e-mail 80
 greeting 119
 multimedia 71
 text 65
MIDlets 153
Minute minder 112
Missed calls 27, 97
MMS (Multimedia Message Service)
 71
Morning call 127
Multimedia messages
 creating/sending 72
 deleting 77, 78
 editing 79
 reading 75, 78
Multi-party calls 53
Muting
 all sounds 50
 key tones 51
 microphone 50

N

Names
 entering 43
 searching/dialing 37
Network band, select 146
Network selection 143
Network services 139
Numbers, phone
 searching/dialing 37
 storing 33

O

On/off switch, phone 21
Organizer 127
Outbox, messages
 e-mail 84
 multimedia 78
 text 69
Own number 120
Owner's Record 187

P

Password
 call barring 142
 phone 122, 163
Peak Performance 167
Phone
 display 13
 icons 14
 keys 11
 layout 10
 locking 121
 password 163
 resetting 126
 switching on/off 21
 unpacking 9
Phone while driving 168
Phonebook
 copying 37
 deleting 37, 41
 editing 36
 options 36
 searching/dialing 37
 sending via IrDA 116
 speed-dialing 40
 storing 33
Photos
 deleting 105
 taking 101
 viewing 104
PIMs Sync 138
PIN
 changing 121
 description 164
PIN2
 changing 123
 description 165
Power on/off tone 112
Power Save feature 166
Privacy 122
Problems, solve 159
PUK 164
PUK2 165

R

Radio Frequency 167
Received calls 98
Received messages
 e-mail 82
 multimedia 75
 text 68
Reception 166
Recording
 videos 106
 voice memos 136
Redialing
 automatically 124
 manually 24
Resetting phone 126
Ring tone 109
Ring type 110
Ring volume 109
Roaming 143

S

Safe Use of and Access to Your
 Phone 168
Safety
 information 166
 precautions 7
Schedule 129
Searching, phonebook 37
Security, calls 120
Sent messages
 e-mail 84
 multimedia 78
 text 69
Service light 16, 118
Shortcut, menu 125
Silent mode 29
SIM card
 installing 17
 locking 123
SMS (Short Message Service)
 inbox 68
 outbox 69
Soft keys 31

Sound settings 109
Sounds, downloaded 155
Special Precautions 172
Speed-dialing 40
Switching on/off
 microphone 50
 phone 21

T

T9 mode, text input 45
Tasks, to do list
 creating 133
 editing 134
Templates
 e-mail 85
 multimedia 79
 text 70
Text input mode 44
Text messages
 creating/sending 65
 deleting 68, 70
 reading 68, 69
Text, enter 43
Time format 132
Time, set 131
To do list 133
Tone
 connect 112
 error 112
 folder 112
 keypad 110
 message 110
 minute minder 112
 power on/off 112
 ring 109
Travel adapter 19
TTY Settings 125

U

User Guide Proprietary Notice 187

V

Vibration 29, 110

Video

- deleting 107

- playing 107

- recording 106

Voice memos

- deleting 137

- playing 137

- recording 136

Voice server 88

Volume, adjust

- earpiece 25

- keypad tone 25

- ring 109

W

Waiting call 142

Wallpaper 117

WAP browser

- accessing 147

- cache, clear 152

- favorites 150

- setting 151

World time 131

Writing messages

- e-mail 80

- multimedia 72

- text 65



Tri Band SGH-P716 GPRS Telephone
Quick Reference Card

Access the Menu Functions	① Press the Menu soft key. ② Scroll using the Up and Down keys through the list of the menus until you reach the menu you want. ③ Press the Select soft key. ④ Scroll using the Up and Down keys through the list of the options until the one you want is selected. ⑤ Press the Select soft key.	Switch On/Off	Press and hold the  key.
		Make a Call	① Enter the number. ② Press the  key.
		End a Call	Briefly press the  key.
		View Missed Calls Immediately After Missing Them	① Open the phone and press the View soft key. ② Scroll using the Up and Down keys through the missed calls. ③ To return the call, press the  key.
		Answer a Call	Open the phone or Press the  key.
Each of the two soft keys ( and ) perform the function indicated by the text above it on the bottom line in the display.		Adjust the Volume	Press the  or  key on the left side of the phone.

Choose the Alert Type	① Select the Alert Type menu option (Menu 4.3). ② Select an option: • Light only • Melody • Vibration • Vibra+Melody ③ Press the Select soft key.	Search for a Number in the Phonebook	① Press the Ph.Book soft key. ② Select the Search option. ③ Enter the first few letters of the name. ④ To scroll through the names, press the Up or Down key. ⑤ Press the View soft key. ⑥ To scroll through the numbers, press the Up or Down key. ⑦ Press the  key to dial.
Store Numbers in the Phonebook	① Enter the name and press the Save soft key. ② Select an icon. ③ Press the Select soft key. ④ Select a memory. ⑤ Press the Select soft key. ⑥ Enter the name. ⑦ Press the OK soft key. ⑧ If necessary, change the location number. ⑨ Press the OK soft key. ⑩ Press the  key to return to Idle Mode.	Take a Photo	① Press and hold the  key. ② Press the  key or Take soft key. ③ Press the Save soft key. ④ Enter a name for the photo. ⑤ Press the OK soft key.