

\* Some of the contents in this manual may differ from your phone,  
depending on the software installed or your service provider.



# **SGH-S307**

## **WAP Browser**

## **User's Manual**



Printed in Korea

Code No.: GH68-xxxxxA

English. 12/2002. Rev. 1.0

World Wide Web

<http://www.samsungmobile.com>



## What is WAP?

WAP (Wireless Application Protocol) is the gateway to a new world of mobile data. It provides a universal standard, enabling you to access web-based interactive information services and applications directly from your mobile phone.

## Contents

---

<b>About the WAP Browser .....</b>	<b>4</b>
<b>Setting Up the WAP Browser .....</b>	<b>5</b>
Accessing the WAP Browser .....	5
Configuring the WAP Browser .....	7
Starting the WAP Browser .....	10
Exiting the WAP Browser .....	10
<b>Using the WAP Browser .....</b>	<b>11</b>
Using the Soft Keys .....	11
Navigating the WAP Browser .....	11
Entering Text, Numbers or Symbols .....	12
<b>Using the WAP Browser Menus .....</b>	<b>13</b>
Using and Selecting Menu Options .....	13
Reload .....	13
Home .....	13
Go to URL .....	14
Show URL .....	14
Edit Home .....	15
Inbox .....	15



## About the WAP Browser

Your phone comes equipped with a WAP (Wireless Application Protocol) browser, making it possible for you to access the Wireless Web.

The WAP Browser allows you to:

- access up-to-the-minute information via your phone
- view specially designed text versions of popular Internet sites including Yahoo!®, CNN Mobile<sup>SM</sup> and the Weather Channel®

Browsing the Wireless Web using your phone is unlike using your computer, in that site providers have:

- selected only the critical aspects of their site for wireless phone users
- removed most graphics

Each time you start the WAP Browser, the phone connects to the Wireless Web and the service indicator icon (📶) appears on the display to inform you that you are:

- are connected to the Wireless Web
- will be billed accordingly (rates vary according to your service option)

 
The WAP Browser ends the network connection after a certain period of inactivity and automatically reconnects as necessary. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize your bill.

## Setting Up the WAP Browser

 
### Accessing the WAP Browser



 
To enter the **WAP Browser** menu to access the WAP browser:

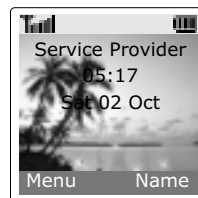 
1. When the idle screen is displayed, press the **Menu** soft key to enter menu mode.



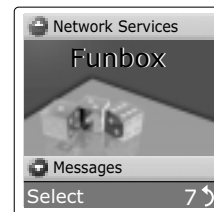

 
2. Press the **Left Arrow** or **Right Arrow** key until the **Funbox** menu option is displayed, and then press the **Select** soft key. You can also press the **7** key directly.

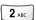

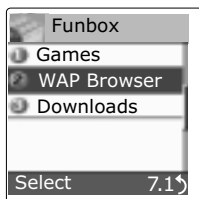
3. Press the  or  key one or more times to highlight **WAP Browser**, then press the **Select** soft key. You can also press the  key directly.



4. Press the  or  key one or more times to highlight the required option and then press the **Select** soft key.

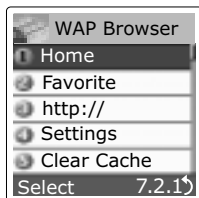




Option	Description
<b>Home</b>	Connects the phone to the network and loads the homepage of the Wireless Web service provider.
<b>Favorite</b>	Allows you to store the URL addresses of your favourite Web sites. You can access this menu directly by pressing and holding the  key while using the WAP Browser.


Option	Description
<b>Favorite</b> (continued)	To store a URL address, select an empty location and enter the address. Three submenus are available: <ul style="list-style-type: none"> <li>• <b>Goto URL</b>: quickly accesses you to the site.</li> <li>• <b>Edit</b>: edits the selected address.</li> <li>• <b>Erase</b>: deletes the selected address.</li> </ul>
<b>http://</b>	Allows you to manually enter the URL address of the website that you want to access.
<b>Clear Cache</b>	Clears the information stored in the cache (the phone's temporary memory used to store the most recently accessed Web pages).
<b>Push Message</b>	Allows you to set whether or not you will receive Web messages from the server, and read or delete the messages received.

## Configuring the WAP Browser

To configure the WAP Browser:

1. In the WAP Browser menu, highlight **Settings** using the  and  keys, and then press the **Select** soft key. You can also press the  key directly.

2. Select a proxy server and enter the parameters required. Contact your service provider for details.

Parameter	Description
<b>Profile Name</b>	Name that you wish to assign to the HTTP proxy server.
<b>Homepage URL</b>	Address of your startup homepage. When the default homepage displays, you can delete it using the  key and enter your own choice.
<b>Security</b>	Data transmission mode. Choose <b>Secure</b> to protect your data against unauthorised access; otherwise, choose <b>Non-Secure</b> .
<b>IP Address</b>	WAP gateway address required to connect to the Internet.
<b>Bearer</b>	Bearer to be used for each type of network address accessed: <b>GPRS</b> or <b>Data</b> .


The remaining options depend on the **Bearer** setting, as indicated below.

*When the bearer is set to **Data***

Parameter	Description
<b>Login Name</b>	PPP server login ID.
<b>Password</b>	PPP server password.
<b>Dial-up Number</b>	PPP server phone number.
<b>Data Call Type</b>	Data call type: <b>Analogue</b> or <b>ISDN</b> .



 
*When the bearer is set to **GPRS***

Parameter	Description
<b>User Name</b>	User ID required to connect to the GPRS network.
<b>Password</b>	Password required to connect to the GPRS network.
<b>APN</b>	Access point name used for the address of the GPRS network gateway.


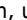 
- Note:** The WAP Browser settings may vary, depending on the service provider. Contact your service provider for more information.
3. After selecting each of these settings, a dialogue box displays; you can either enter the information required or choose between given options. When you are satisfied with your input, press the **OK** soft key.
  4. When you have finished configuring the WAP Browser, press the  key or the right soft key.

## Getting Started

### Starting the WAP Browser

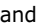
To start the WAP Browser when the idle screen displays, press the **i** key or press the **Menu** soft key, followed by the ,  and  keys.

A connection is established with your service provider and the corresponding homepage displays.

The content of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the  and  keys.



**Note:** To access the startup homepage from any other screen in the WAP Browser, use the **Home** option. For more information on the WAP Browser menus, refer to page 13.

### Exiting the WAP Browser


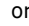 
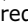 

To exit the browser at any time, simply press the /⓪ key or press and hold the **i** key.

## Using the WAP Browser

### Using the Soft Keys


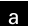 

A bar containing browser commands is located at the bottom of the WAP Browser display. The soft keys   below the bar are used to execute these commands. The two keys are called soft keys because their function changes depending on the WAP Browser application in use.


### Navigating the WAP Browser

 

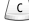 
To	Then
scroll through and select browser items	press the  or  key until the  symbol points to the required item, and then press the <b>OK</b> soft key to confirm the selection.
select a numbered item	press the corresponding numeric key.
return to the previous page	press the <b>Back</b> soft key or the  key.
return to the startup homepage	select the <b>Home</b> menu option; for more information on this option, refer to page 13.

## Entering Text, Numbers or Symbols

When you are prompted to enter text, the current text entry mode is indicated on the screen. The following modes are available:

Mode	Description
 / 	Allows you to enter letters in the alphabet. Press the corresponding key until the required letter displays.
	Allows you to enter numbers.

**Note:** To enter symbols, press the  key until the required symbol displays.

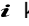




To	Then
change modes	press the  key one or more times.
enter a space	press the  key.
edit text	<ul style="list-style-type: none"><li>• set the cursor to the right of the character(s) to be corrected.</li><li>• press the  key as required.</li><li>• enter the correct character(s).</li></ul>

## Using the WAP Browser Menus

### Using and Selecting Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option:

1. Press and hold down the  key.  
A menu displays.
2. Highlight the required menu option by pressing the  and  keys.
3. Select the option by pressing the **Select** soft key.
4. If necessary, select the secondary option using the  and  keys, and press the **Select** soft key to confirm.

**Note:** The menus may vary, depending on your version of the WAP Browser.

### Reload

This option reloads the current page.

### Home

This option takes you back at any time to the homepage of the Wireless Web service provider.

## Go to URL

---

This option allows you to manually enter the URL address of the required Web page.

After entering an address, press the **OK** soft key to go there directly.

## Show URL

---

This feature displays the URL address of the site to which you are currently connected. It also enables you to declare the current site as the startup homepage.

To	Press the
declare the current page as your startup homepage	<b>Option</b> soft key, select the <b>Save to Home</b> option and press <b>Select</b> .
set a bookmark for the current page	<b>Option</b> soft key, select the <b>Save to Bookmark</b> option and press <b>Select</b> .
cancel your setting	<b>Back</b> soft key.

## Edit Home

---

With this feature, you can change the startup homepage manually.

To change the homepage, enter the required URL and press the **OK** soft key.

For more information on entering text, numbers or symbols, refer to page 12.

## Inbox

---

This menu allows you to read messages received from the web server.