

SGH-T339 Series

**P O R T A B L E T r i p l e - B A N D
M O B I L E P H O N E**

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein St.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)	
Internet Address: http://www.samsungusa.com	

© 2008 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungwireless.com/support

GH68-17342A

Printed in Korea

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark of RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	4	
Activating Your Phone	4	
Switching the Phone On or Off	10	
Setting Up Your Voice Mail	11	
Section 2: Understanding Your Phone	13	
Features of Your Phone	13	
Open View of Your Phone	13	
Keys	14	
Closed View of Your Phone	15	
Display Layout	16	
View Tab	17	
Help	19	
Section 3: Wi-Fi	20	
Introducing Your T-Mobile HotSpot @Home		
Capable Phone	20	
Connecting to Wi-Fi for the First Time	21	
Using Wi-Fi	23	
Connecting to Wi-Fi Networks	23	
Get Security Key	29	
Use Get Security Key	30	
Add New Network	31	
Add From Available Network Option	31	
Create Manually	32	
Troubleshooting	33	
		T-Mobile Wi-Fi Help
		33
Section 4: Call Functions	34	
Making a Call	34	
Adjusting the Call Volume	35	
Answering a Call	36	
Call Records	36	
Silent Mode	38	
Selecting Functions and Options	39	
Muting or Sending Key Tones	42	
Section 5: Menu Navigation	45	
Menu Navigation	45	
Section 6: Entering Text	47	
Changing the Text Input Mode	47	
Using T9 Mode	48	
Using ABC Mode	49	
Using Number Mode	51	
Using Symbolic Mode	51	
Section 7: Understanding Your Phonebook	52	
Using Contact List	52	
Adding a New Contact	52	
Storing a Number in the Phone's Memory	52	
Storing a Number in the SIM Card	53	
Dialing a Number from the SIM Card	55	
Finding a Phonebook Entry	55	

Dialing a Number from Phonebook	57	Phone Settings	85
Speed Dialing	57	Security	86
Editing a Caller Group	57	Reset Settings	88
Block List	58	Call Settings	89
Deleting all of the Phonebook Entries	59	Bluetooth	93
Management	59	Synchronization	94
Own Number	60	Software Update	96
FDN List	61	Section 10: Fun & Apps	97
Section 8: Messages	62	Files	97
Types of Messages	62	Games	105
Text Messages	62	Music Player	106
Picture Messages	64	Camera	106
Audio Postcard	66	Organizer	106
Voice Note	67	Synchronization	114
Inbox	68	Section 11: Music Player	117
Drafts	72	Music Player	117
Outbox	73	Music Player Options	117
Templates	73	Adding Music to a Playlist	118
Voice Mail	74	Playing Music Files	119
Management	74	Transferring Music Files	120
Broadcast Messages (SIM Card Dependent)	77	Deleting Music Files From the Memory Card	120
Instant Messaging (IM)	77	Assigning Music Files	120
Section 9: Changing Your Settings	79	Section 12: Camera	125
Wi-Fi Settings	79	Using the Camera	125
myFaves Settings	79	Take and Send	125
Sound Settings	79	Photos	129
Display Settings	82		

Record video	131	Battery Standby and Talk Time	157
Photos folder	133	Battery Precautions	157
Videos	134	Care and Maintenance	159
My Album	135	Section 15: Warranty Information	160
My Journal	136	Standard Limited Warranty	160
Section 13: t-zones	137	Index	164
t-zones	137		
Browser Settings	140		
Section 14: Health and Safety Information	141		
Health and Safety Information	141		
Samsung Mobile Products and Recycling	142		
UL Certified Travel Adapter	142		
Consumer Information on Wireless Phones	143		
Road Safety	148		
Responsible Listening	150		
Operating Environment	151		
Using Your Phone Near Other Electronic Devices	152		
FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices	152		
Potentially Explosive Environments	154		
Emergency Calls	154		
FCC Notice and Cautions	155		
Other Important Safety Information	156		
Product Performance	156		
Availability of Various Features/Ring Tones	157		

Section 1: Getting Started


This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Installing the SIM Card

Important! The plug-in SIM card and its contacts information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

If necessary, switch off the phone by holding down the  key until the power-off image displays.

1. Remove the battery cover by sliding the battery cover down (in the direction of the arrow).



2. Carefully lift the battery cover away from the bottom of the phone.
3. Carefully slide the SIM card under the metal bracket and into the SIM card socket until the card locks into place. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown below.



Inserting the Memory Card

Your phone supports an optional memory card (microSD™) for data storage of such things as music, pictures, video or other files. This type of memory card is designed for use with this mobile phone and other devices.

Note: The Samsung T339 supports up to a 2 Gigabyte memory card.

Note: If the card is not inserted correctly, the phone does not detect the SIM card. Remove the battery and re-orient the card back into the slot.

1. To unlock the memory cover, use your thumb to slide the memory card cover to the **Unlock** position (as indicated) until you hear a slight clicking sound.



2. Gently lift upward on the edge of the memory card cover.



3. Place the microSD card into the slot (as shown below). Ensure the microSD's gold contact pins face downward and the card is placed so that the indentations on the card face the same direction as those illustrated.



4. Close and lock the memory card cover:

- (1) close the memory card cover using your thumb to push the cover down (as shown below).
- (2) slide the memory card cover back into the **Lock** position.



Removing the memory card


1. Unlock the memory cover by using your thumb to slide the memory card cover to the **Unlock** position (as indicated) until you hear a slight clicking sound.
2. Gently lift upward on the edge of the memory card cover.
3. Carefully remove the memory card.

4. Close and lock the memory card cover:

- (1) close the memory card cover using your thumb to push the cover down (as shown below).
- (2) slide the memory card cover back into the **Lock** position.

Installing the Battery

1. With the cover removed, verify the SIM card is securely inserted.
2. Install the battery by aligning its 3 brass tabs to those located at the bottom of the battery compartment (1). The arrow on the battery should be pointing towards the prongs.
3. Press the battery down until it clicks into place (2).

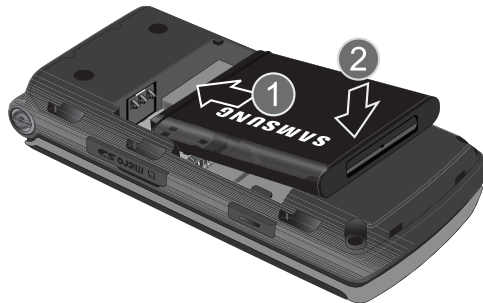

4. Make sure that the battery is properly installed before switching on the phone.
5. Reinstall the battery cover by sliding it back onto the phone until you hear it securely click. Make sure the battery is properly installed before switching on the phone.



1. With the battery installed, temporarily remove the plastic cover on the left side of the phone and plug in the travel adapter's connector into the jack.

Important!: Verify that the handset battery is installed prior to connecting the travel adapter. If the battery is not installed and the travel adapter is connected the handset continuously power cycles and prevents proper operation.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but doing so requires additional charging time.

Note: You **must** fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.



Note: The following illustration is the incorrect method for connecting the charger. If attempted, damage to the accessory port occurs therefore voiding the phone's warranty.



2. Plug the adapter into a standard AC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you must use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

3. When charging is finished, unplug the Travel Adapter from the power outlet and then disconnect it from the phone.
4. Resecure the plastic cover over the interface jack on the phone.



Warning! You must unplug the Travel Adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Warning low battery” message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off


1. Press and hold the  key until the phone switches on.
2. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For more information, refer to “Change password” on page 85.

3. If the phone prompts “**View Tutorial and connect to Wi-Fi?**” press the **Yes** softkey, or otherwise press the **No** soft key to continue.

Note: For more information, refer to “*Connecting to Wi-Fi Networks*” on page 23.


The phone searches for your network and after finding it, T-Mobile displays on the upper, left portion of the screen along with the UMA Signal bars. To view the UMA Signal bar icon, see “*Icons*” on page 17. Now you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the **Language** menu. For more information, refer to “*Language*” on page 83.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.


Setting Up Your Voice Mail


For new users, follow the instructions below to set up voice mail:

1. In Idle mode, press and hold the  key on the keypad.
You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can press and hold the  key on the keypad or use the phone's menu to access your voice mail. To access voice mail using the menu:

1. In Idle mode, press **Menu** → **Messages** → **Voice mail** and press the **Select** soft key or the  key.
2. Press the **Call** soft key to dial the specified voice mail number.
3. When connected, follow the voice prompts from the voice mail center.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that display when the phone is in use.


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 1.3 Megapixel Camera with 4x Digital Zoom
- Bluetooth® Wireless Technology
- T-Mobile HotSpots @ HOME (Wi-Fi connectivity)
- User friendly, menu driven access to features and options
- Instant Messaging capability
- Sound/Image media capability
- Fun & Apps feature provides files, games, camera, alarm, calendar, calculator, tip calculator, notes, world time, unit conversion, timer, stopwatch, music player, image editor, synchronization and tasks.


Open View of Your Phone

The following illustrations show the main elements of your phone:

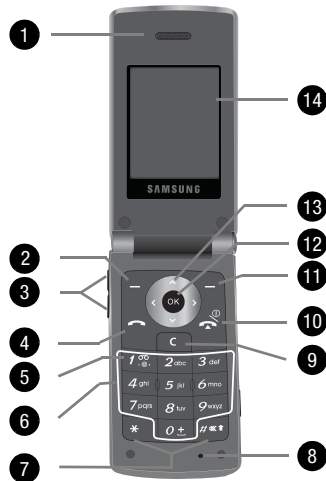

Keys

The following list correlates to the illustrations.

1. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
2. **Left Soft key** allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
3. **Volume keys** allow you to adjust the ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
4. **Send key** allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
5. **Voice mail key** allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
6. **Alphanumeric keys** allow you to enter numbers, letters, and some special characters.
7. **Special function keys** allow you activate unique features while in Idle mode. In Idle mode, if you press and hold the  key, you can turn on the Silent Mode.
8. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
9. **Cancel/Clear key** deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
10. **Power On/Off (Exit) key** ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
11. **Right Soft key** allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your t-zones.
12. **OK (Select) key** allows you to accept the choices offered when navigating through a menu.

13. Navigation key scrolls through the phone's menu options and acts as a shortcut key from standby mode.

In Menu mode, scrolls through the phone's menus and Phonebook.

In Idle mode:

- **Down key:** allows you to directly access your Contact list.
- **Up key:** allows you to directly access the Call records feature.
- **Left key:** allows you to directly access Text messaging (New Message).
- **Right key:** allows you to directly access Voice note.

Note: SIM-dependent features may alter the functionality of the Navigation keys.

Tip: When entering text, use the **Left** or **Right** Navigation key to mark the position of the cursor.

14. Display shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

Closed View of Your Phone

The following illustrations show the external elements of your phone




1. **Volume key(s)** allow you to adjust the ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the down volume key, you can mute the ring tone.

2. **Power/Accessory Interface connector** allows you to connect a power cable or optional accessories, such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
3. **Camera key** allows you to take pictures when you are in camera mode. Launches the camera with a press.
4. **External display** shows the received signal strength, phone battery level, and the time and date.
5. **Camera lens** is used to take pictures.


Display Layout

Your phone's display screen provides a wealth of information about your phone's status and options. When the backlight turns on, both the display turns on and the keypad is illuminated. This display indicates when you receive either an incoming call or message and also displays any alarms for the specified time. The display also shows the date and current time as a digital clock. The display has three main areas:

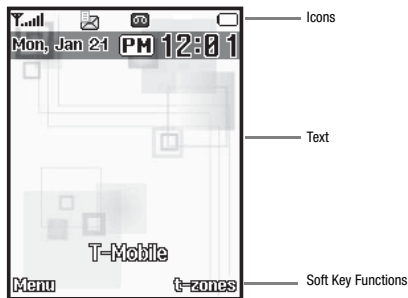





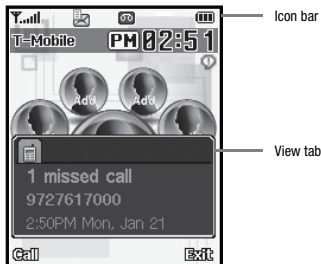





View Tab

When you receive new messages, icons display in two locations: on the phone's screen, View Tab, and in the icon bar at the top of the screen (see *"Display Layout"* on page 16.) and on the View Tab.



Icons

This list identifies the symbols you'll see on your phone's display screen:

-  Displays the received signal strength. The greater the number of bars, the stronger the signal.
-  Displays the UMA signal strength. The greater the number of bars, the stronger the signal.
-  Displays when a microSD card is detected.
-  Displays when a new text message was received.
-  Displays when a new instant message was received.
-  Displays when you set an alarm to ring at a specified time. For more details, see *"Alarm"* on page 107.
-  Displays when you are out of your service area.
-  Displays when a call is in progress.
-  Displays when the Call Forwarding feature is active. For more details, see *"Call forwarding"* on page 88.
-  Displays when Mute is enabled during an active call.



Displays when Silent Mode is active.



Displays while your phone is synchronizing data with the network.



Shows the level of your battery. The more bars you see, the more power remains.






Displays when Bluetooth wireless technology is active.

Backlight

A backlight illuminates the display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight** menu. The display turns off after one minute to conserve battery power.




The **On** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the **Backlight** menu:

1. In Idle mode, press **Menu → Settings → Display settings** and press the **Select** soft key or the  key.
2. Highlight the **Backlight** option and press the **Select** soft key or the  key.
3. Select the **Duration** option and press the **Select** soft key or the  key.
4. In the **On** field, use the **Left** and **Right** Navigation key to select one of the following backlight durations: **15 sec, 30 sec, 1 min, 3 min, or 10 min**.
5. Press the **Down** key to highlight the **Dim** option. Use the **Left** or **Right** Navigation key to select the time the Dimming mode is on. Choose between **Off, 15 sec, 30 sec, 1min, or 3 min**.
6. Press the **Save** soft key to retain your new settings.

Brightness

After you set the backlight duration, set the brightness levels.

1. In Idle mode, press **Menu** → **Settings** → **Display settings** and press the **Select** soft key or the  key.
2. Highlight the **Backlight** option and press the **Select** soft key or the  key.
3. Select the **Brightness** option and press the **Select** soft key or the  key.
4. Use the **Left** or **Right** Navigation key to select the brightness level and press the **Save** soft key to retain your new settings.

Help

Help is designed to work with t-zones to show you some of the unique features of your phone. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.

1. In Idle mode, press the **Menu** → **Help** and press the **Select**  soft key or the  key.


2. The **T-Mobile Help** menu displays with the following options available:

- **Browse Help Topics:** this option gives you a list of different topics from which you can select.
- **Enter a Search:** this option allows you to search based on a keyword.
- **My Account:** this option provides you with account specific information such as your current status, current activity, Bill Summary, Plan & Services, Voicemail Settings, Find a Retail Store, and FAQ's & Info.
- **About:** this option offers general information about **T-Mobile Help** including concept and site design, copyright information, and contact email address.

To access the browser options menu:

1. Press the **Options** soft key.

- Or -

Highlight the Openwave icon at the top left of the page and then press the  key.

Note: The menus may vary, depending on your t-zones subscription.

For more information on browser options, see “*Selecting and Using Menu Options*” on page 138.

Section 3: Wi-Fi

This section introduces you to T-Mobile Wi-Fi compatibility and provides information on Wi-Fi and instructions on how to use this type of connection with your phone.

Introducing Your T-Mobile HotSpot @Home Capable Phone

Your phone is capable of connecting to T-Mobile via Wi-Fi (wireless Internet broadband) and GSM (cellular towers). When making voice calls or using data connections, your phone seamlessly transfers between Wi-Fi and GSM connections, always using the network with the best signal strength.

Your T-Mobile Wi-Fi compatible phone is capable of the following:

- Connect to Wi-Fi at Home

Connect to T-Mobile through Wi-Fi if you have a wireless router set up in your home. Refer to the Get Started Poster (provided with your phone) and the User Manual for your wireless router for more information.

- Connect to Wi-Fi while you're on the go (hotspots)

Connect to T-Mobile HotSpot locations all across the U.S. without needing a T-Mobile HotSpot username and password as well as any open Wi-Fi access point.

- Connect to GSM

Connect to the GSM network when Wi-Fi is not available or if you are not interested in connecting to Wi-Fi.

Here's How it Works

Rather than using GSM radio as your phone normally would to connect to cellular towers, your T-Mobile Wi-Fi compatible phone uses UMA (Unlicensed Mobile Access) technology to use a wireless broadband Internet connection for your mobile phone services. This includes voice calls, mobile browsing, e-mail, Picture Messaging, Text Messaging, and basically any mobile service for which your phone uses a network connection.

UMA technology offers fast, reliable connectivity using your mobile phone for virtually all of your communications. UMA connects your mobile phone to your GSM/GPRS services through WLAN (802.11) and allows you to handle calls, send and receive messages, and check your e-mail. This technology allows you to use your mobile phone in all of the ways you normally do. The only difference with using UMA technology is that you are connecting through a wireless broadband Internet connection (Wi-Fi).

What is Wi-Fi?

Wi-Fi, or Wireless Fidelity, is a term that is used generically to refer to any product or service using any type of 802.11 technology. Wi-Fi networks operate in the unlicensed 2.4 GHz radio bands, operating at up to an 11 Mbps (802.11b) or 54 Mbps (802.11g) data rate.

Wi-Fi enabled devices (laptops and PDAs as well as UMA phones) can send and receive data wirelessly from any location equipped with Wi-Fi access. This is accomplished using wireless routers, installed within a Wi-Fi location. A wireless router transmits an RF signal to Wi-Fi enabled devices that are within range of the router. Depending on the particular router, its range is usually about 300 feet. The speed of the transmission is governed by the speed of the internet connection fed into the wireless router.

What This Means to You

When you are not in range of a Wi-Fi connection, your normal cellular network takes over and keeps you connected. Your phone switches automatically from Wi-Fi to cellular whenever it's necessary to maintain your connection, whether your phone is in Idle mode or in the middle of an active call. The switching process is virtually unnoticeable.

Warning! 9-1-1 Emergency Service available over Wi-Fi may be limited (it won't work during electrical power or broadband outages). Before using this phone to make calls over Wi-Fi, you **MUST** provide us with the primary street address where you will use HotSpot @Home service, and you must furnish us with any address changes. Refer to T-Mobile's Terms and Conditions for other limitations and information.

Connecting to Wi-Fi for the First Time

Important! You must set up your wireless router first before using your phone to connect to Wi-Fi. For T-Mobile routers, run the CD that comes with the router and follow its instructions. If you have a different router, follow its installation procedures and confirm the router is set up properly.

1. Press and hold the  key to power on your phone.

2. Your phone displays a tutorial prompt. Select **Yes** to run the brief tutorial.



3. At the end of the tutorial, your phone detects a Wi-Fi network and attempts to connect to it. If your router requires a security key, it prompts you to enter it. For T-Mobile routers, select Get Security Key, which automatically provides security keys for T-Mobile routers (see “*Get Security Key*” on page 29.)
- If you have a T-Mobile router, select **Yes**. This action acquires the security key or passphrase so that you are not

required to manually type it into your phone.

If you do not have a T-Mobile router, select **No**. You are then required to enter your key or passphrase.

If you are not sure what your key or passphrase (WEP or WPA encryption) is, please refer to your router documentation. (For T-Mobile routers see “*Get Security Key*” on page 29.

4. Save the network when prompted. After the network saves to your Saved Networks list, you automatically connect to that network each time you are within range. For more information, refer to “*Saved Networks*” on page 26.

You are connected to your first Wi-Fi network and can begin making calls using Wi-Fi or your regular T-Mobile GSM network.


To access all of the Wi-Fi features on your phone, go to **Menu > Settings > Wi-Fi**.

If the Tutorial does not display on your phone, see “*Connecting to Wi-Fi Networks*” on page 23.

Using Wi-Fi

Once set up for Wi-Fi connectivity, your phone automatically uses Wi-Fi, when available, for all your mobile phone services. You simply use your phone in a normal manner; there is nothing special you need to do. Your phone switches automatically between Wi-Fi and cellular whenever it's necessary to maintain your connection, whether your phone is idle or on an active call. When connected to Wi-Fi, the signal bars change and the wireless network name displays in the upper left of the idle screen as shown in the following illustration.

Wi-Fi signal bars

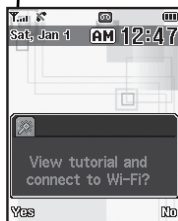

The signal bars are always visible when a call is active. The bars change correctly when you are on a call to indicate which network you are on. The name of your network displays on the idle screen as seen here.

Connecting to Wi-Fi Networks

Connecting to Wi-Fi networks with your phone allows you to make calls using Wi-Fi. The following features were designed to keep you connected to the networks you want:

- View available networks
- View saved networks that you use often
- Find open networks quickly (Quick Connect)

Available Networks

This list of available networks displays all the available Wi-Fi networks to which you can connect. The networks are listed in the order of their signal strength, from the strongest signal to the weakest.


Note: If you want to connect to a secure network (marked by a key icon), you are prompted to provide the security key for that network. If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.

- ||| signal-strength
- ✓ indicates that a network is connected.
- ★ indicates that a network was saved to your Saved Networks list (see next section for details).
- 🔑 indicates that a network is protected with a security key. For more information, refer to “Get Security Key” on page 29.


Note: Set up your wireless router first. For T-Mobile routers, run the CD that comes with the router and follow its instructions. If you have a different router, follow its installation procedures and confirm the router is set up properly.

Connect to Wi-Fi from the Available Networks

1. From the idle screen, press **Menu** → **Settings** → **Wi-Fi** → **Available Networks** option and press the **Select** soft key or the **OK** key.
2. The phone searches for all available networks and then displays a list of available networks.

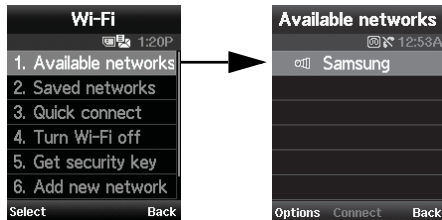





3. Press the **Connect** soft key.
4. Press the **Save** soft key when the selected network displays in the **Profile Name** field.
5. When prompted, press the **Yes** soft key to save the network to your **Saved Networks** list.

6. Create a profile name for your network, press the **Options** soft key, select **Save** and press the **Select** soft key or the  key.

After the network saves to your **Saved Networks** list, you automatically connect to that network each time you are within range (see “*Saved Networks*” on page 26.)


On the Available Networks list, a checkmark indicates a network to which you are currently connected, a star indicates a saved network, and a key indicates a network is protected with a security key.

-  current network connection
-  stored network
-  security key protected
-  signal-strength

Note: Press the **Back** soft key from the Available Networks list to return to the Wi-Fi menu.


Available Networks Options

From the Available Networks menu, press the **Options** soft key to use the following options:

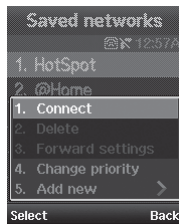

- **Refresh:** Refreshes the list of available networks to include any recent changes, for example new Wi-Fi networks recently set up or others that were removed from service.
- **View details:** Displays the details for the currently highlighted Wi-Fi network. This also includes the MAC address of the phone if needed for MAC address filtering.
- **Save:** Saves the selected network to your **Saved Networks List**. This option displays only if the network is not already saved.

Saved Networks


The Saved Networks list displays all of the Wi-Fi networks that are saved on your phone. If you set up your phone for automatic connections, you automatically connect to a Wi-Fi network on your **Saved Networks List** each time you are within range of that network. On the Saved Networks List, a  indicates a network to which you are currently connected.

Important! Networks displayed on the Saved Networks List are networks that are saved and not necessarily those that are in range and available. Editing a saved network's profile name will not affect the ability to connect to that network. However, changing the SSID field or security settings will impact the ability to connect.

If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.

Note: The Samsung phone has 2 Default profiles on the Saved Networks list: **HotSpot** and **@Home**. This will allow the phone to automatically connect at the T-Mobile HotSpot locations and out-of-the-box to your unsecured T-Mobile router.


Connect to a Specific Saved Network

1. From the idle screen, press **Menu** → **Settings** → **Wi-Fi** → **Saved Networks** and press the **Select** soft key or the  key. The phone displays your **Saved Networks** list.
2. Highlight the network to which you want to connect and press **Options** > **Connect**. Your phone connects to the Wi-Fi network if it is available.
3. On the **Saved Networks** list, a checkmark then indicates a network to which you are currently connected.

Note: Press the **Back** soft key from the Saved Networks list to return to the Wi-Fi menu.

Saved Networks Options

In the Saved Networks menu, press the **Options** soft key to use the following options:

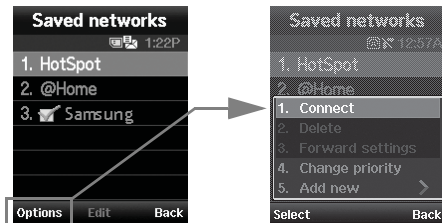


- **Connect:** Connects your phone to the currently highlighted network. This option will not be available if your phone is currently connected to a Wi-Fi network. Alternatively, you can connect to a network on the Saved Networks list.
- **Delete:** Deletes the selected network from the Saved Networks list. Note that this option is not available for your T-Mobile-designated Wi-Fi network profiles.
- **Forward Settings:** Sends the highlighted network's settings to another user. Note that this option is not available for your T-Mobile designated Wi-Fi network profiles.

- **Change Priority:** Lets you change the order of the Wi-Fi networks to which your phone attempts to connect. Connections to networks with a higher priority are tried first.
- **Add new:** Adds a new network to your Saved Networks list. This option also allows you to manually add settings for the new network. The submenu items for the Add New menu are as follows:
 - **From Available Networks:** Allows you to add a new network from the list of Available Networks.
 - **Create Manually:** Allows you to manually enter the new network's settings. You'll need the following information: Wi-Fi name, SSID, and Security (encryption) Type used.

Quick Connect

Select the **Quick Connect** option from the Wi-Fi menu to scan for any available preferred or open Wi-Fi network and connect to the network with the best signal strength. This feature allows you to make a quick Wi-Fi connection in instances where you know you are within range of an open Wi-Fi network.

Note: Quick Connect will not attempt to connect to closed or secured wireless networks that are not part of the Saved Networks List.

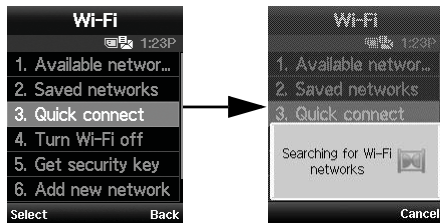

Use Quick Connect

- From the Idle screen, press and hold the key. Your phone connects to the strongest Wi-Fi network within range.

Use the following steps for another method to access the **Quick Connect** option:


1. From the Idle screen, press **Menu → Settings → Wi-Fi → Quick Connect** option and press the **Select** soft key or the key.

Your phone connects to the strongest Wi-Fi network available.

Note: If the Quick Connect option is selected when your phone is in Sleep mode (Wi-Fi OFF), the phone automatically switches to Active Mode (Wi-Fi ON) before attempting to make the connection.

Turn Wi-Fi On/Off

Select the **Turn Wi-Fi ON/OFF** option from the Wi-Fi menu to activate/deactivate the Wi-Fi feature. Your phone's default state is Wi-Fi On (Active Mode). Wi-Fi should be left on to take advantage of the seamless transfer between regular cellular networks.

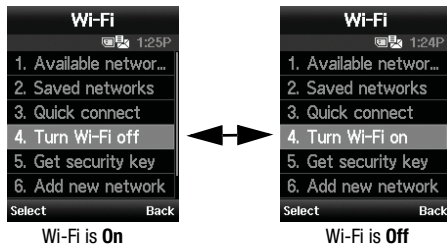


1. In Idle mode, press **Menu → Settings → Wi-Fi** option and press the **Select** soft key.

2. Highlight the **Turn Wi-Fi ON/OFF** option and press the **Select** soft key.

Note: If the **Quick Connect** option is selected when your phone is in **Sleep** mode (Wi-Fi OFF), the phone automatically switches to **Active** mode (Wi-Fi ON) before attempting to make the connection.


Get Security Key

Get Security Key option can only be used with a T-Mobile wireless router. Select the **Get Security Key** option from the Wi-Fi menu to acquire the security key for a T-Mobile Wi-Fi compatible phone from a T-Mobile wireless router. This feature is about exchanging security information between a T-Mobile router and a T-Mobile Wi-Fi phone.

When used with an open network, the Get Security Key process creates a WPA key on the router. This key is automatically transferred to the phone. Manually configure all laptops and devices connected wirelessly for the new security. When used on an already secured network, the key configured on the router is transferred to the phone. For the duration of the process (for example, while the  on the router is blinking), all laptops and devices using the wireless network lose their connection.



For T-Mobile routers without encryption enabled, following this sequence turns on WPA and sends the security key to your T-Mobile phone. If encryption is enabled, the light is constantly lit on the T-Mobile router, and the current router settings are sent to the phone.

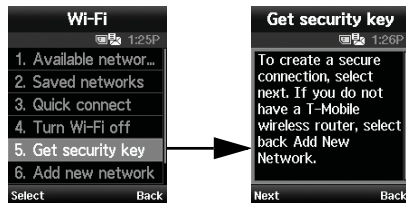
Note: If you change the router settings, you can edit the phone's profile with the new setting or you can create a new phone profile.



Get Security Key option can only be used with a T-Mobile wireless router. Select the **Get Security Key** option from the Wi-Fi menu to acquire automatic security keys for a T-Mobile Wi-Fi compatible phone from a T-Mobile wireless router.

Use Get Security Key

1. From the Idle screen, press **Menu** → **Settings** → **Wi-Fi** option and press the **Select** soft key or the  key.
2. Highlight the **Get Security Key** option and press the **Select** soft key or the  key.
3. Follow the on-screen prompts to step through the process of acquiring security keys.

This process involves pressing the secure button on the front of the router. You can identify the secure button by the  on, or adjacent to the button. The key / passphrase is stored with the profile on your Saved Networks list. The phone tries to connect to a network after successfully securing the key.

You can also enter a security key manually in the phone. If connecting via available networks, the phone prompts you to enter the key for WEP or passphrase for WPA. You can also follow the steps for manually adding a network seen in a subsequent section of the manual. When entering a security key, if numbers are part of the key, press and hold the desired key to quickly access the number, this bypasses the multi-tap text entry mode.

In order to view the security key, you may need to log into your wireless router's administrative site. If you printed or saved your settings when setting up your router, you may reference this as well.

Add New Network


By adding a network to your phone, you can automatically connect to the network when you are in range. If it requires a security key or passphrase, you can enter the key and the phone stores the key or passphrase with the profile.


You can add a new network using one of the following methods:


- When connecting to a network from **Available Networks**, select save when prompted
- Select **Add New Network** > **From Available Networks**
- Select **Add New Network** > **Create Manually**


Add From Available Network Option

To add a new network to your Saved Networks list from your list of available networks:

1. In Idle mode, press **Menu** → **Settings** → **Wi-Fi** option and press the **Select** soft key or the  key.
2. Highlight the **Add New Network** → **From Available Networks** option and press the **Select** soft key. The phone searches for available networks and displays a list of networks in signal-strength order.

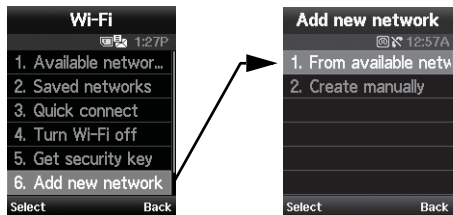


3. Highlight the network you want and press the **Save** soft key. To give the network a new name before saving it, use the **Cancel**  key to delete the name and then type a new network name.

4. Press the  key to save the new network.

Create Manually

To manually add a new network to your Saved Networks list:

1. In Idle mode, press **Menu** → **Settings** → **Wi-Fi** option and press the **Select** soft key.
2. Highlight the **Add New Network** → **Create Manually** option and press the **Select** soft key.

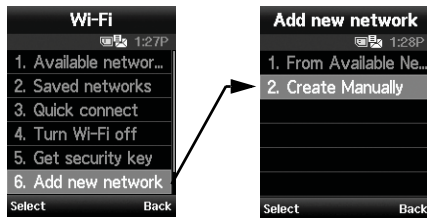



3. Type your desired profile name for the network.
4. Press the **Down** key to highlight the **SSID** option. Enter the new network's **SSID**: option.


The SSID (Service Set Identifier), is the actual name of the wireless network, not the profile name you entered. The profile name is simply a name to help you keep track of which network is which. The SSID is a key piece of information needed to locate and connect to a wireless network.

5. Press the **Down** key to highlight the **Security type** option. Press the **Left** or **Right** key to set to **Key none**, **WEP 64 bit**, **WEP 128 bit**, **WPA-PSK**, or **WPA2-PSK**. The Key field only becomes active if you choose an option other than **None**.

Note: The Security Type refers to the particular security protocol being used for a specific wireless network. WPA is the current security standard for wireless networks and is recommended by T-Mobile. WEP is an older, and less robust security standard, but it provides wider compatibility.

6. Press the **Down** key to highlight the **Key:** option. For information on the key required, see *“Use Get Security Key”* on page 30.

7. Press the **Down** key to highlight **Connection settings**. Press the **Left** or **Right** key to set to **Automatically connect**, or **Don't automatically connect**.
8. Press the **Down** key to highlight the **Non-broadcast SSID** option. Press the  key to place a checkmark in this box if your router does NOT broadcast its SSID. In general, the default setting for most routers will broadcast the SSID.
9. Press the **Down** key to highlight the **Inter AP handovers** option.
10. Press the  key to place a checkmark in this box if you want your phone to perform a fast handoff (for quicker authentication).
11. Press the **Down** key to highlight the **IP setting** option. Press the **Left** or **Right** key to set to **Dynamic** or **Static**. Dynamic is the standard and recommended setting.

If you select **Static** in this step, press the **Down** key to highlight the **IP address** option. Press the  key to enter the IP address menu. If you are using a T-Mobile Router, copy the information regarding the IP address, Subnet Mask, DNS Server, and Gateway from your router into your phone. The IP address you input must be different from the one you use to access the router. If you are connected to a Wi-Fi network that requires Static IP addresses (usually in a corporate environment), please see your System Administrator to get the required information.

12. When finished, press the **Save** soft key.

Troubleshooting

This section provides resources for determining solutions to problems or issues that may occur with your T-Mobile Wi-Fi compatible phone.

T-Mobile Wi-Fi Help


Use the following steps to select the Wi-Fi Help option from the Wi-Fi menu and get specific Wi-Fi assistance.

1. In Idle mode, press **Menu → Settings → Wi-Fi → Wi-Fi Help** option and press the **Select** soft key.

Section 4: Call Functions

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information on Ringtones see “*Ring tone*” on page 77. For more information on Call Forwarding see “*Call forwarding*” on page 88.

 

Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.

 


Note: When you activate the **Auto redial** option, the phone automatically redials up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail.

Making an International Call


Note: Contact your service provider to determine if this service is activated.

1. Press and hold the  key. The + character displays.
2. Enter the country code, area code, and phone number.
3. Press the  key to make the call.

Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to be cleared and then press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.


Ending a Call


- When you want to finish your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.


To recall any of these numbers:

1. Press the  key to return to Idle mode (if you typed characters on the display).
2. Press the Up Navigation key to display a list of the most recent numbers used in the order you dialed or received them.

3. Use the **Up** and **Down** Navigation keys to scroll through the numbers and highlight the number you want.
4. To view details of the number, such as Picture ID and call logs, press the  key.

Before you dial the number, press the **Options** soft key to display the following options:

- **Call back:** Places a call back to the number.
- **Send message:** Allows you to send a Text message, Share Picture, Audio postcard, or Voice note to the number.
- **Save to Phonebook:** Stores the number in your Phone memory, onto your SIM card, or your SIM card(FDN).
- **Delete:** Allows you to delete the Selected number or All call records.
- **Add to block list:** Allows you to block the selected number from being received as an incoming call.
- **View contact details:** Allows you to view the details for this phone number such as Name, Number, Picture ID, Ringtone, or Group association.

5. To dial the number, press the  key.

Making a Call from the Phonebook



You can store regularly used phone numbers into the phone's memory or onto your SIM card. These entries are collectively called the Phonebook.

Once you store a number in the Phonebook, you can press only a few key to dial the stored number. By using the Speed Dial feature you can also assign your most frequently-used numbers to number keys.

For more information, refer to *"Understanding Your Phonebook"* on page 52.

Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone, to adjust the speaker volume.


- Press the  key to increase the volume level and the  key to decrease the speaker volume level.


In Idle mode, you can also adjust the ring volume using these keys or you can use the keys to scroll up or down through a listing of items such as a menu list, or contact list.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the **Answer Options** menu is activated, you can press any key to answer a call except for the  key.

Note: To reject an incoming call, press the **Reject** soft key or  key.

2. Press the  key to end the call.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were previously using.

Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view **Call time** records.

1. In Idle mode, press **Menu** → **Call records** and press the **Select** soft key or the  key to enter the menu.

Note: While in Idle mode, press the  key to access your call records (**All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**).

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, dialed, and missed.

The name or number, if already stored in your Phonebook, displays with the number of occurrences for each number.

Note: At any time while you are in Call Records, you may use the **Left** or **Right** Navigation keys to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer. The name and number, if already stored in your Phonebook, displays with the number of occurrences for each number.


Viewing Missed Calls

When you are unable to answer a call for any reason, your missed call and any information about the caller time or date display on the Missed call tab on your main screen.

To view the missed call:


1. Press the **View** soft key.

The number corresponding to the most recently missed call displays first (at the top of the list).

2. To scroll through these missed calls, press the **Up** or **Down** Navigation key.
3. To call a particular number, highlight the entry and press the  key.
- Or -

Highlight a number from the list and press the **Options** soft key for the following options:

- **Send message:** Allows you to send a Text message, Picture message, or Audio postcard back to the missed number.
- **Save to phonebook:** Stores the number in your Phone memory onto your SIM card, or your SIM card(FDN).
- **Delete:** Allows you to delete the selected number or delete all call records.
- **Add to block list:** Allows you to block the selected number from being received as an incoming call.

Note: You can press the  key at any time to exit the Missed Call feature.

Incoming calls



This menu lets you view the 30 most recent calls you received. The name and number, if already stored in your Phonebook, is then displayed with the number of occurrences for each number.

Outgoing calls


This menu lets you view the 30 most recent calls you dialed. The name and number, if already stored in your Phonebook, is then displayed with the number of occurrences for each number.

Delete all

This menu allows you to delete all of the records in each call type separately, or you can delete all of your call types at one time.

1. In Idle mode, press **Menu** → **Call records** → **Delete all** and press the **Select** soft key or the  key.
2. Highlight the type of calls you want to delete (All calls, Missed calls, Incoming calls, or Outgoing calls) and press the  key to place a check mark adjacent to an category entry.

Note: Selecting the **All calls** check box automatically selects all the entries in the **Delete all** menu.

3. Press the **Delete** soft key to delete the calls.
4. When a confirmation message displays, press the **Yes** soft key or  key to confirm.

Call time

This menu lets you view the time log for calls both made and received.



Note: The actual time invoiced by T-Mobile may differ from times displayed due to network features and service plan.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total outgoing:** shows the total length of all calls made since the timer was last reset.
- **Total incoming:** shows the total length of all calls received since the timer was last reset.
- **Life time:** shows the total length of time for both incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. You cannot clear this information.

 

Silent Mode

Silent Mode is convenient when you wish to stop the phone from making any noise, (in a theater for example).

- In Idle mode, press and hold the  key until the “Silent Mode On” message and the Silent Mode icon () display.

Note: In Silent Mode, instead of sounds, your phone vibrates.

To exit and reactivate the previous sound settings:

- Press and hold the  key again until the “Exit Silent Mode” message displays. The Silent Mode icon () no longer displays.

Selecting Functions and Options

Your phone offers a set of customizable functions. These functions are arranged in menus and sub-menus, and accessed using the two soft keys. Each menu and submenu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.



Press the Left soft key for Menu mode.




Press the Right soft key to access the t-zones.

Selecting Options

To view the various functions and options available, you must select the one you want by:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the  key.
3. To view the next function or highlight the next option on a list, press the **Down** Navigation key.
4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **Back** soft key.
6. To exit the menu structure without changing the settings, press the  key.

In some functions, you are asked for a password or PIN. Enter the correct code and press the **OK** soft key or the  key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it.


Options During a Call

Your phone provides a number of control functions that are available for use during a call.


Putting a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:


1. Press the **Options** soft key, highlight **Hold**, then press the **Select** soft key or the  key.
2. Press the **Resume** soft key to reactivate the call.


To make a new call while a call is in progress:

1. Enter the new phone number that you wish to dial or look it up in the Contact list.
2. Press the  key to dial the second call.

The first call is then automatically put on hold.



- Or -

1. Press the **Options** soft key, select **Hold**, and press the  key. This places the currently active call on hold and allows you to make a new call.

2. Press the **Options** soft key, select **New Call** and press the **Select** soft key or the  key.

When there is an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other call on hold.

To switch between the two calls:

1. Press the **Options** soft key, select **Swap**, and press the  key. The current active call is placed on hold and the call on hold is then reactivated so that you can continue conversing with that person.
2. Press the  key to end the call.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

In Call Options

1. During a call, press the **Options** soft key to access the following:
 - **Hold:** Places the current call on hold.
 - **New Call:** Places the current call on hold and then allows you to enter and dial another number.
 - **Phonebook:** Accesses your Phonebook information.
 - **Message:** allows you to create a new message or access the My messages folder.
 - **Whisper mode on/off:** Increases the microphone sensitivity level so that you do not have to speak louder to so the other party can hear.
 - **Mute keys:** Silences/mutes the key tones when on the call. To turn this feature off (unmute the keypad), return to this option and select Send Keypad Tone.
 - **Send DTMF:** Sends DTMF (Dual Tone Multi-Frequency) tones to the contacts you selected. These DTMF tones are sent as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

If you are in a multi-party call, the following options also display.

- **Swap:** Places the current call on hold and then activates the previous call.
- **Join:** Joins all of the calls you established with your phone (both active and on hold).
- **End held call:** Allows you to end the call that is on hold.

2. Press the  key to end the call.


Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is On, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which then allows you to press keys without hearing annoying key tones during a call.

Important!: To communicate with answering machines or computerized telephone systems, select the **Send DTMF** option.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.


1. In Idle mode, press **Menu → Phonebook → Contact list** and press the **Select** soft key or the  key to enter the menu.

With the Phonebook entries displayed:

2. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.

- Or -

Use the **Up** or **Down** Navigation key to highlight the contact that you desire.

3. To view the highlighted entry, press the **Options** soft key.
4. Highlight the **View** option and press the **Select** soft key or the  key. The Contact information displays.





For further details about the Phonebook feature, see “*Finding a Phonebook Entry*” on page 55.

Call Waiting

The **Call waiting** option must be set to **Activate** before you can answer an incoming call while another call is in progress. For more information, refer to “*Call waiting*” on page 89.

You are then notified of an incoming call with a call waiting tone.

To answer a new call while another call is in progress:


1. Press either the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the  key.
3. To end a call on hold, press the **Options** soft key and select the **End held call** option. Then press the **Select** soft key or the  key.
4. To end the current/remaining call, press the  key.

Making a Multi-Party Call



A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Press the **Options** soft key and select the **New call** option.
3. Call the second participant in the normal way. The first call is automatically placed on hold.
4. To join the first participant to this multi-party call, press the **Options** soft key and select **Join**. Press the **Select** soft key or the  key.

Note: These first two calls are then grouped together on screen and displayed with an adjacent number corresponding to the order in which the calls were made.


5. Press the **Options** → **New call** to add a new person to a second multi-party call group.
6. Press the **Options** soft key or the  key. Select the **Join** option and press the **Select** soft key or the  key.

Note: There are a maximum of two callers that can be joined to a single multi-party line. Additional callers would participate in a new Multiparty session which can be held in conjunction with the previous multiparty call. Each of these multi-party calls can then be placed on hold or swapped.


Having a Private Conversation With One Participant

When there are two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:


1. Press the **Options** soft key and choose the **Split** option.

Press the **Select** soft key or the  key.

The short list of call participants then displays with the first caller selected.

2. Press the **Up** or **Down** Navigation key to highlight the person with which you want to talk privately, and press the **Select** soft key or the  key.


Note: You can now talk privately to that person while the other participants can continue to converse with each other. If there is only one other participant, that person is then placed on hold.

3. To return to the multi-party call, press the **Options** soft key and select **Join**. Press the **Select** soft key or the  key. All of the multi-party call participants can now hear each other again.

Dropping One Participant

1. Highlight the number you want to drop, press the **Options** soft key and select **End held call**.

This option allows you to continue talking to the other participants.

2. Press the  key to end the multi-party call.



Section 5: Menu Navigation

This section explains the menu navigation for your phone.

Menu Navigation


 

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Scroll using the Navigation keys to reach a main menu (for example: **Settings**). Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, (for example, **Security**), after highlighting the sub menu, press the **Select** soft key or the  key to access it.

If the menu you selected contains further options, repeat this step.




4. To scroll through the menus, press the **Up** or **Down** Navigation keys.

5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, press the corresponding number keys (1 to 0) to access any one of the shortcuts.

Example: Accessing the **Security** menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for Phone settings.
4. Press the  key for **Security**.

Section 6: Entering Text

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode


When using your phone, you often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, you press **5^{JKL}** to enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring fewer keystrokes than the traditional ABC mode.
- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the corresponding letter.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field where you can enter characters, the text input mode indicator displays at the bottom right of the screen.

Example: Writing a text message.

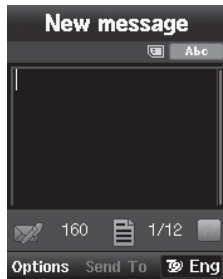

1. Press the **Right** soft key to display the Input mode menu.

The following options are available:

- **T9 mode:** allows you to enter text in T9 mode.
- **ABC mode:** allows you to enter text.
- **Number mode:** allows you to enter numbers.
- **Symbol mode:** displays a selectable matrix of symbols to insert into the text message.

2. Enter text in the text message box using the selected input mode when the input mode indicator that you desire displays.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.


To enter a word in T9 mode:

1. When you are in T9 mode, press the **2** to **9** keys to enter a word. Press each key only once for each letter.

 
Example: To enter “Hello” in T9 mode, press the 4, 3, 5, 5, and 6 keys.

The word that you type displays on the screen. The word may change with each consecutive key that you press.


2. Enter the whole word before editing or deleting the keystrokes.
3. When the word correctly displays, go to step 4.

If the word doesn’t display correctly, press the  key to display alternative word choices for the keys that you pressed.

Example: Both the words “Of” and “Me” use the 6 and 3 keys. The phone displays the most commonly used choice first.

4. Press the  key to insert a space and begin entering the next word.


 
To add a new word into the T9 dictionary:

1. Type in the word that you want to display. If the dictionary cannot predict your word, press the  key.


The Spell soft key displays.

2. Press the **Spell** soft key and enter the word you want to add using ABC mode into the **Add word** field and press the **OK** soft key. For more information, refer to “*Changing the Text Input Mode*” on page 47.

The word is added to the T9 dictionary and displays on your screen.

Note: This feature may not be available for some languages. The  key has some emoticons associated with it. To enter other special characters within the T9 mode, press and hold the  key to cycle through these characters.

To enter periods, hyphens, apostrophes, and other special characters:

- Press the **Right** soft key, scroll to **Symbolic** and press the  key to cycle through the available characters.


 
T9 mode applies grammar rules to ensure that correct punctuation is used.

To shift case in T9 mode:

- Press the  key
- There are 3 cases: Initial capital, Capital lock, and Lower case.

 
 
Note: You can move the cursor by using the Navigation keys.

To delete characters:

- Press the  key. Press and hold the  key to clear the display.

 
 
Using ABC Mode

To use ABC mode, use the **2** to **9** keys to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. Select the other letters in the same way.
 - To enter periods, hyphens, apostrophes, and other special characters, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
 - To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.

Note: You can move the cursor by using the Navigation keys.

To delete letters:





 
 

 
 


 
- Press the  key. Press and hold the  key to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to automatically move to the right, and then select the next letter.

Keys

By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless the Shift key is used). After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order (lowercase characters shown in parentheses):

	. @ , - ? ! : () / 1
	A B C 2 (a b c 2)
	D E F 3 (d e f 3)
	G H I 4 (g h i 4)
	J K L 5 (j k l 5)
	M N O 6 (m n o 6)
	P Q R S 7 (p q r s 7)
	T U V 8 (t u v 8)
	W X Y Z 9 (w x y z 9)
	0 (Adds a space)
	Symbol - Press and hold to access Symbol grid (Spell Checker)
	Shift (Toggles Lower/Uppercase)



Using Number Mode

The Number mode enables you to enter numbers into a text message.

- Press the keys corresponding to the digits you want to enter.

Using Symbolic Mode

Symbolic mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press the Right soft key and select Symbolic from the menu list.

1. Press the corresponding number key to select a symbol.
2. Press the **Up** or **Down** Navigation key to display more symbols.
3. Press the  key to clear the symbol(s). When the input field is empty, this key returns the display to the previous mode.
4. Press the **OK** soft key or the  key to insert the symbol(s) into your message

Section 7: Understanding Your Phonebook

This section explains how to use and manage your Phonebook. You can save phone numbers to your phone's memory or to your SIM card.

Using Contact List

The **Contact List** displays all the phone numbers and contact information stored on both the phone's memory and the SIM card. From this list you can manage your phonebook entries by adding a new contact, storing a number in the phone's memory or on the SIM card, quickly locate and dial a contact phone number, edit a caller group, or delete all of the numbers stored on the phone or SIM.

Note: When storing a Phonebook entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, e-mail, dates, etc., it is important to save that Contact into your phone's onboard memory.


Adding a New Contact

Use the following procedures to store a new contact to your Phone or SIM Card.

Storing a Number in the Phone's Memory

The default storage location for saving phone numbers to your phonebook is your phone's built-in memory. You can also save your numbers to your SIM card or setup a default location so that whenever a new phonebook entry is created, you are prompted to choose between **Phone** or **SIM card**. For information on how to change this setting, see *"Default Saving"* on page 59.


Note: When you copy a phone number from your SIM card to your phone, the number displays twice in your Contact list and each displays an icon that represents the location.

1. In Idle mode, press **Menu** → **Phonebook** → **Add new contact** and press the **Select** soft key or the  key.
2. Enter a first name in the **First Name** text box. Press the **Down** key to tab to the next text box.

For further details about how to enter characters, see *"Using ABC Mode"* on page 49.

3. Enter a last name in the **Last Name** text box. Press the **Down** key to tab to the next text box.
4. Highlight a number Type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.




The following types are available:

- **Mobile:** assigns the number entered to the Mobile entry.
 - **Home:** assigns the number entered to the Home entry.
 - **Office:** assigns the number entered to the Office entry.
 - **Picture ID:** allows you to add a Picture ID assigned to the contact.
 - **Ringtone:** allows you to assign a Ringtone by choosing from one of the following locations: Default melodies, Voice list, Sounds, or Music.
 - **Email:** allows you to enter the email address for the contact.
 - **Fax:** assigns the number entered to the Fax entry.
 - **Other:** allows you to enter more detailed information for the entry.
 - **Group:** allows you to assign this contact to a group.
 - **Notes:** allows you to enter additional information about the contact. Up to 50 characters.
5. Press the **Save** soft key. The number saves to your phone and the new contact information displays.
 6. Press the  key to return to the Idle screen.


Storing a Number in the SIM Card

The default storage location for saving phone numbers to your phonebook is your phone's built-in memory. To save a number to your SIM card, you need to change the **Default Saving** option first. For information on how to change this setting, see "*Default Saving*" on page 59.

Note: When storing a Phonebook entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, e-mail, dates, etc., it is important to save that Contact into your phone's onboard memory.

1. In Idle mode, press the **Menu → Phonebook → Management** and press the **Select** soft key or the  key.
2. Highlight **Default saving** and press the **Select** soft key or the  key.
3. Highlight **SIM card** and press the **Select** soft key or the  key.

Note: You can also set the **Default saving** option to **Ask on saving** in the **Management** menu. With this option, you are prompted for a storage location each time you add a new contact. For more information, refer to "*Default Saving*" on page 59.

4. Press the  key to return to the Idle screen.


Now that your phone is set up to store contacts to your SIM card, follow this procedure to store a number.

Important!: You must select the SIM option in the **View contacts** menu before you can add a new contact to the SIM card.

1. In Idle mode, press the **Menu → Phonebook → Add new contact** and press the **Select** soft key or the  key.

2. Enter a name for your contact into the **Name** field. A SIM fcontact listcard entry only has **one** available name field. Press the **Down** key to tab to the next text box.

For further details about how to enter characters, see *“Using ABC Mode”* on page 49.


3. Use the keypad to enter a number into the contact Phone **Number** field. Press the **Save** soft key or the  key.

The number saves in your SIM card. After storing, the phone displays the Phonebook entry you just created.

4. To use the entry options after saving the number, highlight the **Name** field and press the **Options** soft key.



The following options are available:

- **Edit:** allows you to edit the name and number fields in the entry.
- **Send message:** allows you to send a Text or Picture message, Voice note, or Audio postcard to the recipient.
- **Assign speed dial:** allows you to assign the newly created SIM entry to a speed dial location.
- **Send name card:** allows you to send your name card as an attachment to a Text or Picture message or Bluetooth enabled device.
- **Delete:** allows you to delete the name and number from the SIM card. You are asked to confirm the name and number deletion by pressing the **Yes** soft key. To cancel, press the **No** soft key.
- **Copy to phone:** allows you to copy the selected contacts' information from the SIM to the phone.
- **Add to block list:** allows you to add the currently created contact entry to a list of blocked numbers. These numbers are rejected by the phone.
- **Print via Bluetooth:** allows you to send the Contact list to a Bluetooth enabled printer.



5. Press the  key to return to the Idle screen.

Dialing a Number from the SIM Card

1. In Idle mode, press and hold the keypad corresponding to the speed dial location number for the desired phone number you want to dial.

2. If you don't know the location number, press   and the first location number displays.

Press the **Left** or **Right** key to find other phone numbers stored in the SIM card's list.



3. Press either the **Dial** soft key, the  key, or the  key once you select the number you want to dial.

Finding a Phonebook Entry


You can store phone numbers and their corresponding names onto either your SIM card or phone's built-in memory. They are physically separate but are used as a single entity, called Phonebook.

Depending on the storage size of the particular SIM card, the maximum number of phone numbers the card can store may differ.

1. In Idle mode, press the **Menu → Phonebook → Contact list** and press the **Select** soft key or the  key.

Note: Any contacts that were stored on the SIM card are displayed with a SIM card icon () to the left of the entry. Contacts that were stored on the phone display with a Phone icon () to the left of the entry.

2. Enter the first few letters of the name in the text box.
The Phonebook entries are listed, starting with the first entry matching your input.
3. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.

4. Once you locate the entry, press the  key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:

- **Edit:** allows you to edit the Name and number for the selected contact.
- **Send message:** allows you to send a message to the selected number. You may choose between Text message, Picture message, Audio postcard, or Voice note.
- **New contact:** takes you to the **Add new contact** menu.
- **Call:** allows you to call the currently selected contact.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth enabled device.
- **Delete:** allows you to delete the selected name and number from your Phonebook, delete multiple numbers, or delete all numbers. You are asked to confirm your name and number deletion by pressing the **Yes** soft key. To cancel, press the **No** soft key.
- **Add to block list:** allows you to add the currently created contact entry to a list of blocked numbers. These numbers are rejected by the phone.
- **Copy to Phone/SIM card:** allows you to copy the selected content entry or all contact entries to the Phone, or SIM card.
- **Select language:** allows you to select between English, Français, and Español.

5. Pressing the **View** key displays the entry's information.

6. Press the **Options** soft key after the contact information displays, for these additional options:

- **Edit:** allows you to edit the name and number fields in the entry. You can also add an email address and notes.
- **Send message:** allows you to send a message to the selected number. You may choose between Text message, Picture message, Voice note, or an Audio postcard.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Send name card via:** allows you to send your name card via Text message or Picture message or a Bluetooth enabled device.
- **Delete:** allows you to delete the selected name and number from your Phonebook. You are then asked to confirm the name and number deletion by pressing the **Yes** soft key. Press the **No** soft key to cancel the deletion.
- **Copy to phone/SIM card:** allows you to copy the selected contacts' information to the Phone or SIM card.
- **Add to block list:** allows you to add the currently created contact entry to a list of blocked numbers. These numbers are rejected by the phone.
- **Print via Bluetooth:** allows you to send the Contact list to a Bluetooth enabled printer.

Dialing a Number from Phonebook

Once you store phone numbers in the Phonebook, you can dial them easily and quickly by using the location numbers assigned to them and listed in the Phonebook.



Note: If you cannot remember a location number, you must go into the **Contact list** menu in the **Phonebook** menu to search for the entry by name. For more information, refer to “Finding a Phonebook Entry” on page 55.




Speed Dialing

Once you store phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then easily dial them whenever you want, by pressing the associated numeric key.

- In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries


1. In Idle mode, press **Menu** → **Phonebook** → **Speed dial** and press the **Select** soft key or the  key.
2. Use the **Up** or **Down** Navigation key to select the keypad number key to where you wish to assign the new speed-dialing number and press the **Add** soft key or the  key.



- Select from the **2** to **9** keys, and press the **Add** soft key.
 - The **1** key is pre-reserved for quick dialing your voice mail.
3. Highlight a contact entry number from the contact list and press the **Select** soft key or the  key.
 4. Highlight the **Select** option and press the  key.
 5. You receive a **Saved** confirmation and the **Speed dial** menu displays the number assigned to the number key you selected.
 6. Press the  key to return to the Idle screen.

Note: Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed. The voice server number can be altered via the **Messages** > **Voice mail** > **Voice server number** menu.


Editing a Caller Group

Note: View contacts must be set to Phone and SIM card in order to make the Groups option accessible.

1. In Idle mode, press the **Menu** → **Phonebook** → **Groups** option and press the **Select** soft key or the  key.
2. Highlight the group you want and press the **Options** soft key.


3. Highlight the **Edit** option and press the **Select** soft key or the  key.
4. To edit the Caller group name, modify the text in the **Name** text box.
5. To change the image associated with the Caller group, highlight **Picture ID** and press the  key.

The following options are available:

- **Take picture:** allows you to take a picture with your camera.
 - **Photos:** allows you to choose a photo from Photos folder.
 - **Downloaded images:** allows you to choose a photo from your Downloaded images folder.
 - **Icons:** allows you to choose from pre-defined icons.
6. To change the ringtone associated with the Caller group, highlight **Ringtone** and press the  key.

The following options are available:

- **Default melodies:** allows you to choose between 10 different melodies.
- **Voice list:** allows you to assign a voice clip to this group.
- **Sounds:** allows you to choose a sound from your Sounds folder.
- **Music:** allows you to choose a music file from your Music folder.

7. Press the **Save** soft key when you are finished. Your Caller group settings save.
8. Press the  key to return to the Idle screen.

Block List

1. In Idle mode, press **Menu → Phonebook → Block list** and press the **Select** soft key or the  key.
2. The first time you add to the block list, Highlight **[Add to block list]** and press the **OK** soft key.



After the initial add to block list, press **Options → Add new** and press the **Right Navigation** key.

3. Select a block criteria from one the following categories:
 - **Number:** blocks a specific number.
 - **Contacts:** blocks selected contact entries.
 - **Recent contacts:** blocks selected numbers which are selected from the recent calls list.
 - **Unknown numbers:** blocks incoming calls from unknown numbers.
 - **FDN contacts:** blocks selected FDN contact entries.
4. Press the **Save** soft key to add the information to your block list.



Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, FDN, or All.

Important!: Once Phonebook entries are deleted, they cannot be recovered.

1. In Idle mode, press **Menu → Phonebook → Management** and press the **Select** soft key or the  key.
2. Scroll to **Delete all** and press the **Select** soft key or the  key.
3. Press the **OK** key to place a check mark by the memory location you want to empty (All, Phone, SIM card, or SIM card(FDN)) and press the **Delete** soft key.

Tip: Press the **OK** key to remove the check mark.

4. When the **Delete?** confirmation message displays, press the **Yes** soft key or the  key.
5. Press the **No** soft key to cancel.
6. Press the  key to return to the Idle screen.

Management

The **Management** menu allows you to select where your contacts are saved, copy your SIM contacts to your phone, delete your contacts, sort by contacts, or check your memory status.

View Contacts

This option allows you to view all the contacts stored on the SIM card, Phone, or the Phone and SIM card.

Default Saving

The **Default Saving** option allows you to choose where your contacts are saved. The following options are available:

- **Phone:** new phonebook contacts are saved to your phone. Your phone comes with the default set to Phone memory.
- **SIM card:** new phonebook contacts are saved to your SIM card.
- **Ask on saving:** you are prompted to choose between **Phone** or **SIM Card** whenever you save a new contact.

Copy all to

The **Copy all to** option allows you to copy all the contact information to your Phone or SIM card.

Sort by contacts

The **Sort by contacts** menu option allows you to set the sort function to alphabetize the contacts by **First name** or **Last name**.



 
Delete All

Important!: Once contact entries are deleted, they cannot be recovered.

This option allows you to delete all your contacts from the Phonebook. For more information, refer to “*Deleting all of the Phonebook Entries*” on page 59.

Memory Status


You can check how many names and numbers are stored in the Phonebook, within both the SIM card, Phone memory, and the FDN. You can also see the current storage capacity of both memories.

1. In Idle mode, press **Menu → Phonebook → Management** and press the **Select** soft key or the  key.
2. Select **Memory status** and press the **Select** soft key or the  key.
3. Press the  key or the **Back** soft key when you are finished.

Own Number


 

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. In Idle mode, press **Menu → Phonebook → Own number** and press the **Select** soft key or the  key.

The name and number assigned displays.

To edit your number information:

1. Press the  key. This makes the phone number field accessible.
2. Highlight the name assigned to Own Number and press the  key to backspace and erase the existing entry.
3. Enter the new name and press the Down Navigation key.
4. Press the  key to backspace and erase the existing number.
5. Enter the new number information and press the **Save** soft key.

FDN List


FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers your phone may dial.

Use Security settings to enable FDN mode. For more information on changing this setting, see “*Set FDN mode*” on page 86.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from T-Mobile customer service.

Important!: Your Default saving location must be set to SIM prior to performing this procedure. For more information, refer to “*Default Saving*” on page 59.

1. In Idle mode, press **Menu** → **Phonebook** → **FDN list** and press the **Select** soft key or the  key.

2. Press the **Options** soft key, and select **New FDN contact**.
3. Enter the PIN2 number obtained from T-Mobile’s customer service center and create your restricted phone list.
4. Enter phone number into the list to create the new FDN entry.

Section 8: Messages

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.


Types of Messages

Your phone provides the following message types:

- Text Messages
- Picture Messages
- Audio Postcards
- Voice Mail
- Broadcast Messages (SIM Dependent)
- Instant Messaging

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple graphics, melodies, and animated images in your messages. To use this feature, you must subscribe to T-Mobile's message service.

 
 
The Message icon () displays when you receive a new text message. When the memory is full, the message icon flashes on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

- Use the **Delete** option in each message box to erase obsolete messages.

Create new

In this menu, you can write and send a text message.

Creating a Simple Text Message

1. In Idle mode, press the **Menu → Messages → Create new** option and press the **Select** soft key or the  key.
2. Highlight the **Text message** option and press the **Select** soft key or the  key.
3. Create your message.


Note: For further details about entering characters, see “*Changing the Text Input Mode*” on page 47.

You can enter up to 160 standard Alphabet characters per page in your message. The message can be up to 12 pages long for a total of 1920 characters.

4. When you finish entering your message, press the **Options** soft key. The following options are available:
 - **Insert from:** allows you to insert from the Text templates, Phonebook, or Bookmarks. The Text messages template allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages Text templates menu. Phonebook allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.


- **Add content:** allows you to add a picture, animation, or melody to your message.
 - **Attach:** allows you to attach a Name card, Schedule, Anniversary item, Miscellaneous item, Task, or Note to your message.
 - **Save to Drafts:** save the message to your Phone or SIM card.
 - **Select language:** allows you to set the language to English, Français, and Español.
 - **Text style:** allows you to format the style of the text. For the Text size, Large, Medium, and Small size are available. Text mode options are Normal, Underline, and Strikethrough. The options for Bold and Italic are set by using the  key to place a checkmark next to the style attribute. Alignment options are Left, Center, and Right.
 - **Exit composer:** displays the following options:
 - Save message
 - Don't save
 - Continue writing
5. Press the **Send to**  soft key.
 6. Highlight one of the following send options:
 - **Recent recipients:** allows you to select a number or an address from the last 20 destinations you entered.

- **Phonebook:** allows you to enter the phone number you want from your phonebook.
- **New recipient:** allows you to enter a new phone number.

7. Press  to send the message.


Picture Messages

This menu allows you to use the Multimedia Message Service (MMS).

Picture Messaging is a messaging service that provides delivery of personal picture messages from phone to phone or from phone to email. The Picture Message icon () displays on the phone when you receive a new picture message.

In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

Note: A Picture Messaging message is a multimedia presentation contained in a single file. It is not a text file with attachments.

You must first retrieve a picture message from T-Mobile's network before you can view the message. The  displays in your Inbox list to indicate any not yet retrieved Picture messages.



Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos,



sounds and images that you downloaded from the Internet, audio or sounds you recorded, and voice lists. This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

Create new




This menu allows you to create a new picture message and then send it to one or more destinations.







Creating and Sending a Picture Message


1. In Idle mode, press the **Menu → Messages → Create new** option and press the **Select** soft key or the  key.
2. Highlight the **Picture message** option and press the **Select** soft key or the  key.

3. Highlight **Subject** and press the  key.
4. Enter the subject of your message and press the  key.

Note: For more information about entering characters, see “Using ABC Mode” on page 49.


5. Highlight **Image & Video** and press the  key.
6. Highlight one of the following options and press the **Select** soft key or the  key.
 - **Take picture:** launches the camera for you to take a picture.
 - **Photos:** allows you to select a picture from your photos folder.
 - **Downloaded images:** allows you to select a previously downloaded image to send in the picture message.
 - **Record video:** launches the camcorder for you to shoot video.
 - **Downloaded videos:** allows you to select a previously downloaded video file to send in the picture message.
 - **Videos:** allows you to select a video from your videos folder.
 - **Memory card:** allows you to select an image or video from the memory card.
7. Select an image/video and press the **Add** soft key.
8. Highlight **Sound** and press the  key.

9. Highlight one of the following options and press the **Select** soft key or the  key.
 - **Record audio:** allows you to record a new voice message.
 - **Sounds:** allows you to select a sound from your Sounds folder.
 - **Voice list:** takes you to the Voice list (Recorded audio) folder to select a voice note to add.
 - **Memory card:** allows you to select a sound file from your memory card.
10. Select an audio file and press the **Add** soft key.
11. Highlight **Message** and press the  key.
12. Enter your message and press the  key.
13. To change the Subject or Message, select a category and press the  key. Edit or Change the selected item.
14. To change the image or sound with another one, select a category and press the  key. Depending on the category selected, press the  key. to Change the selected item.
15. When you finish creating the message, press the **Send to** soft key.

16. Highlight one of the following send options, press the  key:

- **Recent recipients:** allows you to select a number or an address from the last 20 destinations you entered.
- **Phonebook:** allows you to enter the phone number you want from your phonebook.
- **New recipient:** allows you to manually enter a phone number or email address.
- **My Album:** allows you to send the contents of this message to My Album.
- **My Journal:** allows you to send the contents of this message to My Journal.

The number or address selected displays in the **To** text box.

17. Press the **Send**  key. Your phone sends the Picture message.

Audio Postcard

In this menu you can select a frame, take a picture and then record a voice message up to one minute long and send it as an Audio Postcard.

1. In Idle mode, press **Menu** → **Audio postcard** and press the **Select** soft key or the  key.

2. Center a subject in the frame and press the **Camera** soft key to take a photo for the postcard.

The photo saves to the Photos folder.

3. Press the **Add voice** soft key to add a voice note to this postcard.

4. Press the **Stop** soft key when you are finished recording the voice message.

5. Press the **Send to** soft key and select one of the following options:

- **Recent recipients:** allows you to select a number or an address from the last 20 destinations you entered.
- **Phonebook:** allows you to enter the phone number you want from your phonebook.
- **New recipient:** allows you to manually enter a phone number.

- **My Album:** allows you to save this Audio postcard to My Album.
- **My Journal:** allows you to save this Audio postcard to My Journal.

6. Press the **Add** soft key and continue adding additional recipients.

- Or -


7. Press the **Send** soft key after you select a recipient.

Voice Note

In this menu, you can record an Voice note of up to one minute long and then immediately send it as a Voice Note message.

Creating and sending a Voice Note

When you access this menu, a timer displays on the screen.

1. In Idle mode, press the **Menu → Messages → Create new → Voice note** and press the **Select** soft key or the  key.

2. Press the **Record** soft key and speak into the phone's microphone.


The display simultaneously displays the elapsed time and the remaining time.

3. Press the **Stop** soft key when you are finished recording. Or, when the recording time is expired, the display advances to the next screen.

Note: Your voice note automatically saves in the Voice list.

4. Press the **Options** soft key for the following options:



- **Send to:** allows you to send the Voice note.
- **Play:** plays back your Voice note.
- **Re-record:** discards the previous Voice note and enables you to record a new voice note.
- **Set default destination:** allows you to remove or edit the default destination.
- **Set as:** allows you to assign the new voice note file as either a Ringtone, Individual ringtone, or Alarm tone.

5. Highlight **Save** and press the **Select** soft key or the  key.

6. Press the **Send** soft key to send the message.

7. Highlight one of the following send options:

- **Recent recipients:** allows you to select either a number or an address from the last 20 destinations you entered.
- **Phonebook:** allows you to enter the phone number you want from your phonebook.

- **New recipient:** allows you to manually enter a phone number or email address.
 - **My Album:** allows you to send the message to My Album.
 - **My Journal:** allows you to send the message to My Journal.
8. Highlight the selection and press the  key.
 9. Follow the instructions depending on which option was selected.
 10. If you selected more than one recipient, press the **Options** soft key for the following options:
 - **Add recipients:** allows you to add additional recipients to this Voice note.
 - **Change recipient:** allows you to select **To**, **Cc** or **Bcc** additional numbers.
 11. Press the  key to send this voice note.

Your phone sends the message. The message saves to the Outbox after it successfully sends.

Inbox

The Inbox stores received messages. You can tell what kind of message was received by the icon displayed. If the icon envelope is open then the message was read, otherwise a closed envelope displays.

The following types of messages may display in your Inbox list:



Text message



Picture message



Audio postcard





Voice note





Push message

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Phonebook. After you read the message, the open envelope icon displays.

Tip: Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Outbox**, and **Drafts**.

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight the **Inbox** option and press the **Select** soft key or the  key.


Viewing a Text Message from the Inbox

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight the **Inbox** option and press the **Select** soft key or the  key.
3. Select a text message from the list and press the **Options** soft key.

The following options display:

- **Reply via:** allows you to send a reply to the sender by sending a Text message, Picture message, Audio postcard, or Voice note.
- **Call back:** allows you to call the sender of the text message.
- **Forward:** allows you to forward the text message to another person.
- **Delete:** deletes the selected text message or multiple messages.

- **Move to phone/SIM card:** allows you to move the message from the SIM card into the phone's memory or from the phone's memory to the SIM card. Depends on where the current message was saved.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- **Lock/Unlock:** allows you to protect the message from deletion or unlock the message for deletion.


4. Press the **View**  key (from the main listing) to read the message contents.
5. To scroll through the text, press the **Up** or **Down** Navigation key.

Press the **Options** soft key while reading a text message to display the following:


- **Reply via:** allows you to send a reply to the sender by sending a Text message, Picture message, Audio postcard, or Voice note.
- **Call back:** allows you to call the sender of the text message.
- **Forward:** allows you to forward the message to another number.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.

- **Delete:** allows you to delete the message.
- **Print via Bluetooth:** allows you to send the selected text message to a Bluetooth enabled printer.
- **Move to phone/SIM card:** allows you to move the message from the SIM card into the phone's memory or from the phone's memory to the SIM card. Depends on where the current message was saved.
- **Lock/Unlock:** allows you to protect the message from deletion or unlock the message for deletion.



Viewing a Picture Message from the Inbox

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight **Inbox** and press the **Select** soft key or the  key.
3. Highlight a picture message from the list and press the **Options** soft key. The following options display:
 - **Reply via:** allows you to send a reply to the sender by sending a Picture message, Text message, or Voice note.
 - **Reply all via:** allows you to send a reply to the sender by sending a Picture message or Voice note.
 - **Call back:** allows you to call the sender back.
 - **Forward:** allows you to forward the message to another number.
 - **Delete:** deletes either a selected or multiple picture messages.

- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
 - **Lock/Unlock:** allows you to protect the message from deletion or unlock the message for deletion.
 - **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, and priority.
4. Press the **View**  soft key (from the main listing) to begin the retrieval process and view the message contents.
 5. Press the **Options** soft key while viewing the Picture message. The following options display:
 - **Reply via:** allows you to send a reply to the sender by sending a Picture message, Text message, or Voice note.
 - **Reply all via:** allows you to send a reply to the sender by sending a Picture message or Voice note.
 - **Call back:** allows you to call the sender back.
 - **Forward:** allows you to forward the message to another number.
 - **Replay:** allows you to redisplay the picture.
 - **Save address:** allows you to save the phone number or email address of the person who sent this Picture message.
 - **Save media:** allows you to save the media to the appropriate folder.

- **Delete:** deletes the selected picture message.
 - **Lock/Unlock:** allows you to protect the message from deletion or unlock the message for deletion.
 - **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, and priority.
6. To scroll through the contents, press the **Up** or **Down** Navigation keys.
 7. Press the **Back** soft key or the  when you are finished viewing the message.

Listening to a Voice Note from the Inbox

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight the **Inbox** option and press the **Select** soft key or the  key.
3. Select a **Voice Note** from the list and press the **Options** soft key.

The following options display:

- **Reply via:** allows you to send a reply to the sender by sending a Voice note, Text message, or Picture message.
 - **Reply all via:** allows you to send a reply to the sender by sending a Voice note or Picture message.
 - **Call back:** allows you to call the sender back.
 - **Forward:** allows you to forward the message to another number.
 - **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
 - **Delete:** allows you delete either a selected or multiple saved voice notes.
 - **Lock/Unlock:** allows you to protect the message from deletion or unlock the message for deletion.
 - **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, and priority.
4. Press the **Play**  key (from the main listing) to listen to the message contents.

Press the **Options** soft key while listening to the message and choose from the following:


- **Reply via:** allows you to send a reply to the sender by sending a Voice note, Text message, or Picture message.
- **Reply all via:** allows you to send a reply to the sender by sending a Voice note or Picture message.
- **Call back:** allows you to call the sender back.
- **Forward:** allows you to forward the message to another number.
- **Replay:** allows you to replay the voice note.
- **Save address:** allows you to cut and paste the address to send a text message, or picture message.
- **Save media:** allows you to save message media to your Voice list.
- **Delete:** allows you to delete the selected message.
- **Lock/Unlock:** allows you to protect the message deletion.
- **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.

Viewing a Picture Message After You Receive It

When a new picture message arrives, the screen displays the Picture Messaging Message icon at the top of the screen.

1. Press the **View** soft key to view the message.



Press the **Exit** soft key if you want to view the message later in the Inbox.

2. Press the **Options** soft key to access the various options described above.
3. Press the  key to return to the Idle screen.


Drafts


This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

1. In Idle mode, press **Menu → Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight **Drafts** and press the **Select** soft key or the  key.

Note: Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Outbox**, and **Drafts**.

3. Select a message from the list and press the **Options** soft key.
4. Highlight the **Edit** option and press the **Select** soft key or the  key to edit the message contents.



5. Press the **Send**  soft key (while viewing the message) to send the message.

Tip: Press the **Options** soft key while reading a message to select alternate options.


Outbox

This message box stores messages that you sent.

When you enter this menu, the list of messages in the Outbox displays with the recipients' phone numbers or names, if available in your Phonebook.

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight **Outbox** and press the **Select** soft key or the  key.




Note: Press the **Left** or **Right** Navigation keys to scroll between **Inbox**, **Outbox**, and **Drafts**.



3. Select a message from the list and press the **View**  key to view the message contents.

Tip: Press the **Options** soft key while reading a message to select alternate options.

Templates

Besides entering message text using the keypad keys, you can speed up message composition by including copies of stored text or picture (Templates) in your message.

1. In Idle mode, press **Menu** → **Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight **Templates** and press the **Select** soft key or the  key.
3. Highlight either the **Text templates** or **Picture message templates** option and press the **Select** soft key or the  key.
 - **Text templates:** consist of a pre-created list of frequently used sentences.
 - **Picture message template:** consists of previously created audio/video segments.
4. Highlight a template entry and press the **Options** soft key. You can choose from ten predefined sentences that you can add to your text message to save time.

5. Highlight the **Send** option, press either **Text message** or **Picture message**, and press the **Select** soft key or the  key.
6. Press the **Send**  soft key to send the message.

Voice Mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press **Menu → Messages** and press the **Select** soft key or the  key to enter the menu.
2. Highlight **Voice mail** and press the **Call** soft key.



Note: Voice mail is a network feature. Please contact T-Mobile customer service for further details.

Management

The Management menu allows you to select where your contacts are saved, copy your contacts to your phone or SIM card, delete your contacts, or check your memory status.

Messages Settings

In this menu, you can set up a default text message or a picture message. The last setting you accessed is automatically activated for sending subsequent messages.

1. In Idle mode, press **Menu → Messages → Management → Messages settings** and press the **Select** soft key or the  key.
2. Select one of the following options and press the **Select** soft key or the  key.

Text message

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from T-Mobile customer service.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number always displays in the Recipient list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

Picture message

Use the following options to set Send and Receive settings for Picture messages.

Send Settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message was delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** set the length of time your messages are stored in the message center while the network attempts to deliver them.
- **Delivery time :** you can set a delay time before the phone sends your messages.



Receive Settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** you can set your phone to automatically receive advertising messages.
- **Report allowed:** you can set the option to receive a delivery report.

Delete all

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

Important!: Once messages are deleted, they cannot be recovered.

1. In Idle mode, press **Menu** → **Messages** → **Management** → **Delete all** and press the **Select** soft key or the  key.
2. Press the **Up** or **Down** Navigation key to select a message box to clear. To delete all of your messages, select the **All** option.
3. Press the  key to place or remove a check mark.
4. Press the **Delete** soft key to delete the marked objects.
5. After you receive the **Delete?** confirmation, press the **Yes** soft key to delete or press the **No** soft key to cancel.

Memory Status

You can view the amount of the allocated memory and the memory available for picture messages.

The display shows the total space including the used and free space. You can also view how much space and the number of messages currently occupying each message box type:

- **Text Message** (saved on the phone)
- **Text Message** (saved on the SIM card)
 - Inbox
 - Outbox
 - Draft
- **Picture message**
 - Inbox
 - Outbox
 - Draft
 - Template
- **Push messages**

Broadcast Messages (SIM Card Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

- Please contact T-Mobile's customer service center for further details.




Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered real time to users online.



Before using this feature, you need to subscribe to a messenger service. Your handset has 4 pre-loaded Messaging services (AIM, ICQ, Windows Live, and Yahoo!).

Note: Contact T-Mobile customer service for further details.

Starting your Instant Messaging

1. In Idle mode, press **Menu** → **IM** and press the **Select** soft key or the  key to enter the menu.
2. Highlight the messenger service to which you have previously subscribed to by using the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
3. Highlight the **Sign on**, **Connect**, or **Sign in** option, depending on your messenger service and press the **Select** soft key or the  key.
4. Enter the required sign on information such as ID and password, then press the **Down** Navigation key.

Note: The information required for sign on varies depending on the Instant Messaging provider you use.

5. Fill in all the appropriate fields and press the **Sign in** soft key or the  key.
6. Agree to the terms and conditions of use for this service and press the **I agree** soft key or the  key.
7. Follow the on-screen instructions to read, reply to, compose, send, and manage your Instant Messaging account.

Using the Instant Messenger Options

After selecting an Instant Messaging service, the following options display:

- **Sign on/Connect/Sign in:** allows you to login to your Instant Messaging account.
- **Saved conversations:** displays permanent records of your Instant Messaging conversations.
- **Offline conversations:** displays a listing of any conversations received while you were offline (this options applies only to AIM and ICQ messenger).
- **Preferences:** allows you to change your Preferences.
- **Help:** provides helpful information about IM providers such as: Sign up, Sign on, Buddies, Sending IMs, Receiving IMs, Privacy, and Away.

Section 9: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, and memory memory settings associated with your phone.

Wi-Fi Settings

Once set up for Wi-Fi connectivity, your phone automatically uses Wi-Fi, when available, for all your mobile phone services. For more information, refer to “Wi-Fi” on page 20.

myFaves Settings

myFaves Settings displays only if you subscribe to this service. From this menu you can modify the myFaves display, menu style, icons, refresh your contacts, or gather information About myFaves.

Sound Settings

You can customize various sound settings.

Incoming call

Note: When downloading **Mega Tones**® or **HiFi Ringers**™, charges may apply.

Browse MegaTones

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the t-zone browser.

- ▶ Press the **Connect** soft key to purchase additional sound files.



Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access the T-Mobile website and use the t-zone browser to download new HiFi Ringers.

- ▶ Press the **Connect** soft key to purchase additional ringtones.

Ring tone

This menu allows you to select a ring melody.

1. Highlight **Ring tone** and press the  key.
2. Use the **Up** or **Down** key to highlight a ring tone or press the **Left** or **Right** key to select a file from either the **Default melodies**, **Voice list**, **Downloaded sounds**, or **Music** folders.
3. Press the **Select** soft key or the  key.

Volume

This menu allows you to adjust the ring volume to one of 7 levels.

- Use the **Right** or **Left** key to increase or decrease the volume.

Alert type

This menu allows you to specify how you are to be informed of incoming calls.


- Use the **Right** or **Left** key to select a Alert type.



The following options are available:

- **Melody**: the phone rings using the ring melody selected in the **Ring tone** menu.
- **Vibration**: the phone vibrates but does not ring.
- **Melody and vibration**: the phone rings using the ring melody, and also vibrates.
- **Vibration then melody**: the phone vibrates 3 times and then starts ringing.
- **Melody then vibration**: the phone rings using the ring melody, then vibrates.

Message tone




This menu allows you to set up the ringer for incoming messages. You can set the Tone, Alert type, and Repetition.

1. Highlight the **Tone** field and use the  key to display the options. Select Message tone 1, Message tone 2, Message tone 3, or Message tone 4, and press the **Select** soft key.
2. Highlight the **Alert type** field and use the **Left** or **Right** Navigation keys to highlight one of the following, and press the **Select** soft key.
 - **Melody**: the phone rings using the ring melody selected in the **Ring tone** menu.
 - **Vibration**: the phone vibrates but does not ring.
 - **Melody and vibration**: the phone rings using the ring melody and vibrates at the same time.
 - **Vibration then melody**: the phone vibrates 3 times and then starts ringing.
 - **Off**: turns off all message alert types.
3. Scroll to **Repetition** using the **Up** or **Down** Navigation keys.
4. Press the **Left** or **Right** Navigation keys to select how many times the tone is repeated: Once, Every 1 min, or Every 2 min.

5. Press the **Save** soft key or the  key to save your change.
Otherwise, Press the  key to return to the Idle screen.

Keypad tone

This menu allows you to select the key tone and volume that the phone sounds when you press a key.

1. Highlight the **On/Off** field and use the **Right** or **Left** Navigation keys to make your selection.
2. Highlight the **Key Tone** field and press the  key to display the Keypad tone options.
3. Highlight one of the following and press the **Select** soft key.
 - **Xylophone**
 - **Beep**
 - **Voice**
4. Scroll to Volume using the **Up** or **Down** Navigation keys.
5. Press the **Left** or **Right** Navigation keys to adjust the volume (levels 1-7).
6. Press the **Save** soft key or the  key to save your change. Otherwise, press the **Cancel** soft key or the  key to return to Idle mode.

Power-on/off tone

This menu allows you to select the melody that the phone sounds when it is switched on and off.



- To turn off the sound, select **Off**.

Flip tone

This menu allows you to choose from four tones, or Off when you flip open your phone.

Extra tones

You can customize additional tones for the phone.

1. Press the  key to turn a selected tone **On**. A check mark displays in front of the option. Press the **Save** soft key to save the setting.
2. Press the  key twice to turn a selected tone **Off**. The check mark no longer displays in front of the option.

The following options are available:

- **Minute minder**: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone**: sets whether or not the phone beeps when your call is connected to the system.
- **Alerts on call**: sets whether or not you receive tones when a message arrives while you are on a call.


3. Press the **Save** soft key to save the setting, otherwise press the **Cancel** soft key.

Display Settings

In this menu, you can change various settings for the display or backlight.



Wallpaper

This menu allows you to change the background image to be displayed in Idle mode.

1. Highlight the **Wallpaper** option and press the  key to open the following options:
 - **Browse Wallpapers**: allows you to download additional wallpapers from t-zones.
 - **Default wallpapers**: allows you to choose from a list of wallpapers included with your phone.
 - **Photos**: allows you to choose a photo from Photos folder.
 - **Downloaded images**: allows you to choose a photo from your downloaded images folder.

To change the background image:

1. Press the Navigation keys to scroll through the list and select a wallpaper.

2. Place a checkmark on the **Menu background** option by pressing the  key.
3. Highlight the **Transparency** option and press the **Left** or **Right** Navigation key to determine the amount of transparency for the background.
4. Make a selection and press the **Save** soft key or the  key.

Theme

This menu allows you to change the background color to Black or White.

Home Screen

This option allows you to display the calendar as a background wallpaper or select None.

Info display



You can select the text style and text color of the informational text displayed on the Main LCD.

1. Highlight an option and press the **Left** or **Right** Navigation keys to change the settings.
2. Press the **Save** soft key to apply your changes, or the **Cancel** soft key to cancel.


Dialing display


 
This menu allows you to select the size and color of your dialing font and the background color.

To change the size of the font:



1. Highlight the **Font size** option and press the **Select** soft key or the  key.
2. Use the **Left** or **Right** key to select between: **Large**, **Medium**, or **Small**.
3. Press the **Save** soft key or the  key to save your change. Otherwise, press the **Cancel** soft key.

To change the color of the font:

1. Highlight the **Font color** option and press the **Select** soft key or the  key.
2. Use the **Left** or **Right** key to select either **Basic** (black), **Rainbow**, **Monochrome** or **Gradation**. If you select **Monochrome** or **Gradation**, you can select another option by using the **Down** Navigation key and then scrolling through the available choices.

3. Choose from up to 15 different options.
4. Press the **Save** soft key or the  key to save your change. Otherwise, press the **Cancel** soft key or the  key.

To change the background color:

1. Highlight the **Background color** option and press the **Select** soft key or the  key.
2. Use the **Left** or **Right** key to select between 20 different colors or None.
3. Press the **Save** soft key or the  key to save your change. Otherwise, press the **Cancel** soft key.

Greeting message

This menu allows you to set a text greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see “*Entering Text*” on page 47.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

The **On** setting is how long the keypad backlight is on. You can select **15 sec**, **30 sec**, **1 min**, **3 min**, or **10 min**.




The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select **Off**, **15 sec**, **30 sec**, **1 min**, or **3 min**.

For example, if you set **On** for **30 sec** and **Dim** for **15 sec**, after 30 seconds the backlight on the keys would turn off and 15 seconds later the display light would turn off.

1. Press the **Left** or **Right** Navigation keys to change each field's settings.
2. Press the **Save** soft key to save your changes, or the **Cancel** soft key to cancel.

Brightness

You can adjust the display brightness to see it better in different lighting conditions.

1. In Idle mode, press **Menu** → **Settings** → **Display settings** → **Backlight** and press the **Select** soft key or the  key.
2. Highlight **Brightness** and press the **Select** soft key or the  key.
3. Use the **Left** or **Right** Navigation key to select the brightness level and press the **Save** soft key.
4. Press the  key to return to the Idle screen.


Contrast

You can adjust the display contrast on the Main or Front LCD to see it easier under different lighting conditions.

1. Press the **Up** or **Down** Navigation keys to change the contrast.
2. Press the **Save** soft key to apply your changes, or the **Cancel** soft key to cancel.


Phone Settings

You can customize various phone settings.

1. In Idle mode, press **Menu** → **Settings** → **Phone settings** and press the **Select** soft key or the  key. The following options display:

Time & Date

This menu allows you to change the current time and date displayed.

1. In Idle mode, press **Menu** → **Settings** → **Phone settings** → **Time & date** option and press the **Select** soft key or the  key.

The following options are available:

- **Time zone updating:** allows you to set the parameter for updating the on board time to either: **Automatic** (via carrier sync up), **Manual only** (user-defined), **Prompt first** (User is prompted for time change, if available).
- **Time zone:** identifies the current time zone by its relationship to GMT (Greenwich Mean Time).
- **Daylight saving time:** allows you to turn the daylight saving time feature On or Off.
- **Time:** allows you to change the hour and minute.
- **Date:** allows you to enter the month, day, and year.

- **Time format:** allows you to select whether your time displays in either a 12 hour or 24 hour format.
- **Date format:** allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.

To change your time and date settings:

1. Use the **Up** or **Down** Navigation key to select the option you wish to change.
2. Use the **Left** or **Right** key to position the cursor over the number you wish to change.
3. Enter the desired number.
4. To change other options, use the Navigation keys to select the desired setting.
5. Press the **Save** soft key when you are finished changing your settings; otherwise press the **Cancel** soft key.


Note: Automatic updates of time and date do not change the time set for alarm settings or calendar memos.

Language

This menu allows you to select a display language for Text language and Input mode. Choose from Automatic, English, Français, and Español.

Airplane mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Notes, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

1. To turn a feature on, highlight the **Airplane mode** option and press the **Select** soft key or the  key.
2. Highlight **On** or **Off** and press the **Save** soft key.

USB mode

This menu selects the method of communication for the USB port, the options include:


- **Modem:** allows you to use the phone as a wireless modem for communication between a computer and the Internet.
- **Mass storage:** allows you to utilize the onboard storage capacity of the phone to store and upload files. This option allows your computer to detect the phone as a removable storage drive.

Note: You must select Modem to connect to PC Studio.

HAC Mode

Enabling HAC (Hearing Aid Compatibility) Mode adjusts the volume for HAC compliant devices used with this handset.

Important!: Important!: Enabling the HAC mode can affect the quality of the phone (voice) conversation.

1. To turn a feature on, highlight HAC mode and press the **Select** soft key or the  key.
2. Highlight **Off** or **On** and press the **Save** soft key.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict outgoing calls.

Various codes and passwords are used to protect the features of your phone.

Lock phone

When the Lock phone feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.




Once the correct password is entered, you can use the phone until you switch it off.

The following options are available:

- **Disable:** you are not asked to enter the phone password when you switch on the phone.
- **Enable:** you are required to enter the phone password when you switch on the phone.

Lock application

With this feature you can lock your applications which provide access to information such as call records, phonebook, messages, images, and sounds. Once you lock the contents, you must enter the phone's password to access the associated menus.

1. Press the **Up** or **Down** Navigation key to select an item to lock
2. Press the  key to place a check mark on the selected item.
 - To lock all of the contents, select **All**.
3. Highlight the previously selected item and press the  key to remove a check mark.
4. Press the **Save** soft key to lock the marked items.
5. Enter a password and press the **OK** soft key or the  key.

Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Once you enter a new password, you are asked to confirm the change by entering the password again.

Note: If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before enabling or disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Disable:** the phone connects directly to the network when you switch it on.
- **Enable:** you must enter the PIN each time the phone is switched on.

Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.

Set FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number.
- **Enable:** you can only call phone numbers stored in Phonebook. You must enter your PIN2. You can obtain your PIN2 from T-Mobile's customer service.

Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you enter a new PIN2, you are asked to re-enter the new PIN2 to as confirmation.

Note: Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.



Reset

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

- **All:** Phone, Display, Sound and WLAN settings are returned to default values.
- **Phone settings:** only phone settings are returned to default values.
- **Display settings:** only display settings are returned to default values.
- **Sound settings:** only sound settings are returned to default values.
- **WLAN settings:** only WLAN settings are returned to default values.
- **Bluetooth settings:** only Bluetooth settings are returned to default values.
- **Call settings:** only Call settings are returned to default values.

To reset your settings:

1. Highlight one of the options and press the  key to place a check mark next to the option.
2. Press the **Reset** soft key.
3. You are prompted with **Reset settings?**. Press the **Yes** soft key.
4. Enter the 4- to 8-digit password and press the **OK** soft key or the  key. You receive a **reset** confirmation message.

Restore Factory Settings



From this menu you can reset your phone and sound settings to the factory default settings.

The following options are available:

- **Clear User Data:** deletes all the information saved to the phone including Picture messages and phonebook entries. Restore settings: changes your device settings to factory default values.
- **Restore settings:** changes your device settings to factory default values.
- **Restore and clear:** restores your device to factory default settings.

Important!: You lose setting changes and information saved to the device.

To perform a factory reset:


1. Highlight one of the options and press the  key.
2. Enter six zeros into the field and press the  key.


Important!: Do not power off the phone during this reset. The reset may take up to two minutes to complete.

Call Settings

 
Answer Options

The Answer Options menu allows you to select how your phone answers incoming calls. Use the Up or Down Navigation key to highlight your selection.

Press the  key to make your selection. Press the **Save** soft key to save your new selection. Options include:

- **Send key:** answers an incoming call by pressing either the Accept soft key or the  key.
- **Open flip:** answers an incoming call by just opening the phone.
- **Any key:** answers an incoming call by pressing any key on your phone.


Auto Redial

In this menu, you can automatically redial the last number if the call was either cut off or you were unable to connect. Press the  key to make your selection. Press the **Save** soft key to save your new selection. Options include:

- **Off:** keeps the phone from automatically redialing the last number if the call was disconnected or the call was cut off.
- **On:** causes the phone to automatically redial the number.

Show my number

In the Show my number menu you can select how your ID is handled when an outgoing call is initiated.

Use the Up or Down Navigation key to highlight your selection. Press the  key to make your selection. Press the **Save** soft key to save your new selection. Options include:

 

- **Set by network:** uses the default network information to identify you to the other party.
- **Hide number:** hides your identifying information from the other recipient.
- **Show number:** displays your identifying information to the other recipient.

Call forwarding

This network service enables incoming calls to be re-routed to a secondary number that you specify.


Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:


1. Select the **Call forwarding** option and then press the **Select** soft key or the  key.
2. Press the **Up** or **Down** Navigation key to select a call forwarding option and then press the **Select** soft key or the  key.


The following options are available:

- **Always:** all calls are forwarded until this feature is cancelled.
- **If Busy:** calls are forwarded when you are already on another call.
- **If no reply:** calls are forwarded when you do not answer the phone.
- **If out of reach:** calls are forwarded when you are not in an area covered by T-Mobile or when your phone is switched off.
- **Cancel all:** all call forwarding options are canceled.

3. Press the **Up** or **Down** Navigation key to select **Voice calls** or **Data calls** and then press the **Select** soft key or the  key.

The current status displays. If the option was already set, the number to which the calls are forwarded displays.

4. Use the **Left** or **Right** Navigation key to activate call forwarding.
The **Forward to** field activates.
5. Enter the number in which to forward the calls in the **Forward to** text box and press the **Select** soft key or the  key.

Tip: To enter an international code, press and hold the  key until the + sign displays.

6. To deactivate call forwarding, select **Deactivate** by using the **Left** or **Right** key.
7. When you select **No reply** in step 2, select the length of time the network waits for before forwarding a call.
The phone sends your settings to the network and the network's acknowledgement displays.

Call barring (SIM Card Dependent)

Call Barring allows you to restrict specific types of incoming and outgoing calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

Call waiting



This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Press the **Up** or **Down** Navigation key to apply the call waiting option to **Voice calls** or **Data calls**.

The screen informs you whether call waiting is activated or deactivated.

2. Press the **Select** soft key or the  key to access the call's status menu.
3. Highlight **Deactivate** or **Activate** and press the **Select** soft key or the  key.

Call waiting is either activated or deactivated for that type of call.



4. Select the **Cancel all** option to deactivate Call waiting on all voice and data calls.

Network selection

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.




Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To change the Network Selection mode:

1. Highlight the **Search now** option and press the **Select** soft key or the  key.
2. Press the **Up** or **Down** Navigation key until the network you want is highlighted and then press the **Select** soft key or the  key.

The phone scans for that network and, if available, you are connected.

To change your Default setup:

1. Highlight the **Default setup** option and press the **Select** soft key or the  key.
2. Highlight one of the following options and press the **Select** soft key or the  key:
 - **Automatic:** you are connected to the first available network when roaming.
 - **Manual:** the phone begins searching for available networks. Press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the  key. The phone scans the selected network and attempts to connect. If a connection is available, you are connected.

Bluetooth

About Bluetooth


Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The following Bluetooth options are available:


Turn Bluetooth On/Off

This option allows you to turn Bluetooth **On** or **Off**.

- Make a selection and press the **Select** soft key or the  key.

My devices

This option allows you to search for new Bluetooth devices.

- Highlight the **Search new device** option and press the **Select** soft key or the  key. The phone then searches for available devices.

My visibility

 
 
When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect additional Bluetooth devices.

Allowing your phone to promote its visibility can pose a security risk and incite unauthorized connection. This feature should be paired with a Bluetooth security option.

- Highlight **On/Off** and the **Select** soft key or the  key.

My Phone Name

When your phone's Bluetooth visibility is turned On, it identifies itself using the name entered into this text field. This name can be altered by selecting the pre-existing text and selecting a new text string in its place. This feature should be paired with a Bluetooth security option.

1. Press the  key to erase the previous name.
2. Use the phone's keypads to enter a new name. The default input entry method is Abc, where the initial character is Uppercase and each consecutive character in that same word is left as lowercase text. For more information, refer to "Entering Text" on page 46.
3. Press the  key to save the new name.

Security modes

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and incite unauthorized connection to your phone. It is recommended that you activate your phone's Bluetooth security.

► Highlight **On/Off** and press the **Select** soft key or the  key.

Features

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices integrate.

The following Service profiles are available:

- **Headset:** the remote Bluetooth headset enables both incoming and outgoing calls.
- **Handsfree:** the remote Bluetooth car kit enables both incoming and outgoing calls.
- **Bluetooth stereo headset:** used to make calls and listen to music through the Bluetooth stereo headset.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object push:** used to exchange personal data (namecards, Phonebook contacts, etc.) with Bluetooth devices.

- **Basic printing:** used to print images, text messages, personal data such as namecards and appointments, etc. through a remote Bluetooth printer.
- **Dial-up networking:** used to provide Internet access for Bluetooth devices through the phone's modem.
- **Serial port:** used to connect to other Bluetooth devices through a virtual serial port.


HAC Mode

To insure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call.

Synchronization

The first time you access the synchronization feature the handset prompts with the following message:

"Would You Like To Store A Copy Of Your Contacts On [Http://my.t-mobile.com](http://my.t-mobile.com) So You Can Manage Them Online?"

1. Press the  key to agree to the copying of the contact information.

Once the process is complete a new message displays:

"Synchronization complete! Phone will automatically sync on every phonebook edit you make. To change sync settings go to, Settings > Synchronization. To manage your contacts, go to: "t-mobile.com".



This feature allows you to back up (synchronize) Contact information, Calendar, Tasks, and Notes stored on your phone with your T-Mobile account on the network. Each time you edit contact information your phone automatically synchronizes with the web Address Book.

2. Press the **OK** soft key to complete the process and return to the idle screen.

Important!: Synchronization is a service offered to T-Mobile customers.

Sync Now

Once you establish the information you want to synchronize (using the Data to Sync option), this feature allows you to synchronize with the T-Mobile network.




1. In Idle mode, press **Menu → Settings → Synchronization** and press the **Select** soft key or the  key.
2. Highlight **Sync Now** and press the **Select** soft key or the  key.

The information synchronizes with the T-Mobile network and a confirmation dialog displays when finished.

3. Press the  key to return to the Idle screen.




Data to Sync

This feature allows you to synchronize your Contacts, Calendar events, Task lists or Notes with your T-Mobile account on the network.

1. In Idle mode, press **Menu → Settings → Synchronization** and press the **Select** soft key or the  key.
2. Highlight **Data to Sync** and press the **Select** soft key or the  key.
3. Highlight the type of data to synchronize (Contacts, Calendar, Tasks, or Notes) and press the **OK** soft key to display a check mark next to the item to synchronize.
4. Press the  key to return to the Idle screen.

View log

This feature creates a log of the synchronization activity for viewing.

1. In Idle mode, press **Menu → Settings → Synchronization** and press the **Select** soft key or the  key.
2. Highlight **View Log** and press the **Select** soft key or the  key.
3. The **View Log** screen displays the **Start time, Status, Phone to server** and **Server to phone** information.
4. Press the **Back** soft key when you are finished viewing the log.
5. Press the  key to return to the Idle screen.


About Sync

This feature displays information about how the synchronization feature works and provides a URL for more specific synchronization information.

Note: Your t-zones feature must be activated by T-Mobile for this feature to work.

Software Update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone.


1. In Idle mode, press **Menu → Settings → Software update** and press the **Select** soft key or the  key.
2. Follow the on screen instructions.

Section 10: Fun & Apps

This section outlines the various applications that are available on your phone.



Files

Files allows you to manage your sounds and images and view your memory status in one convenient location.

1. In Idle mode, press the **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.

Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

1. In Idle mode, press **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **Sounds** and press the **Select** soft key or the  key.

Note: When downloading **MegaTones®** or **HiFi Ringers™**, charges may apply.

The following options are available:

Browse MegaTones

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the t-zone browser. Press the **Select** soft key to purchase additional MegaTones.

Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access T-Mobile website and use the t-zone browser to download new HiFi Ringers. Press the **Select** soft key to purchase additional ringtones.

Sounds


Highlight an item in the **Sounds** menu and press the **Options** soft key. The following options are available:

- **Download new:** opens your web browser where you can download new sounds.
- **Send via:** allows you to send the sound file via a Picture message or to a Bluetooth enabled device.
- **Set as:** allows you to set the sound as a default Ringtone, Individual ringtone, or an Alarm tone.
- **Delete:** allows you to delete the selected sound or multiple sounds.

- **Move to memory card:** allows you to move the original file to an installed memory card.
- **Copy to memory card:** allows you to move a copy of the selected file to an installed memory card.
- **Rename:** allows you to change the name of the sound.
- **Bluetooth visibility:** allows you to share the selected sound file, or multiple sound with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the sound to protect it from deletion, or unlock an already locked sound.
- **Properties:** displays the sound name, date, format, length, size, and Lock/Unlock status.

Voice list

The Voice list contains your recorded audio messages.

1. Press the  key to play the selected audio message.
- or -

Highlight an item and press the **Options** soft key. The following options are available:

- **Send via:** allows you to send the audio message via a Picture message.
- **Set as:** allows you to set this audio message as a Default Ringtone, Caller ringtone, or an Alarm tone.
- **Delete:** allows you to delete the selected audio message or multiple audio messages.

- **Move to memory card:** allows you to move the original file to an installed memory card.
- **Copy to memory card:** allows you to move a copy of the selected file to an installed memory card.
- **Rename:** allows you to change the name of the audio message.
- **Bluetooth visibility:** allows you to share the selected voice file, or multiple voice files with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the audio message to protect it from deletion, or unlock an already locked audio message.
- **Properties:** displays the audio message name, date, format, length, size, and Lock/Unlock status.



Memory Card

In this menu you can view and manage the images, videos, music, sounds, Other files, Video, Graphics, and Audio stored on your memory card. Highlight an item and press the Options soft key. The following options are available:

- **Create folder:** allows you to create a new folder.
- **Bluetooth visibility:** allows you to share all the data on the memory card.
- **Properties:** allows you to view the details of the selected file or folder such as Name, Size, Contains, Created time, and Last modified time.
- **Memory card info.:** allows you to view the Capacity, Used space, and Free space on the memory card.

Images



In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

1. In Idle mode, press the **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **Images** and press the **Select** soft key or the  key.

The following options are available:

Browse Wallpapers



Using the **Browse Wallpapers** option, allows you to access the T-Mobile website and download new images using the t-zone browser.

1. In Idle mode, press the **Menu → Fun & Apps → Images** and press the **Select** soft key or the  key.
2. Highlight **Browse Wallpapers** and press the  key.

Note: When downloading Wallpapers, charges may apply.

Photos

In this menu you can review the photos you've taken.

1. In Idle mode, press the **Menu → Fun & Apps → Images** and press the **Select** soft key or the  key.
2. Highlight **Photos** and press the  key.
3. Highlight a photo and press the **Options** soft key to choose from the following options:
 - **Send to My Album:** allows you to send your photos to My Album.
 - **Send via:** allows you to send your photos as an attachment to a Picture message.
 - **Set as:** allows you to set the photo as your Wallpaper or as a Picture ID.
 - **Delete:** allows you to delete the selected photo or multiple photos.
 - **Default destination:** allows you to Remove or Change where your photos are sent after you take them.
 - **Move to memory card:** allows you to move the original file to an installed memory card.
 - **Copy to memory card:** allows you to move a copy of the selected file to an installed memory card.
 - **Edit image:** allows you to the a selected photograph by using some presets features such as: Effects, Frames, Emoticons, and Clip Art.
 - **Rename:** allows you to rename the photo.



- **Display mode:** allows you to view the photos in Line view or Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Bluetooth visibility:** allows you to select one or multiple sounds to share with other Bluetooth devices.
- **Print via Bluetooth:** sends the selected photo to a Bluetooth enabled device.
- **Lock/Unlock:** allows you to lock the photo to protect it from deletion, or unlock an already locked photo.
- **Properties:** displays the image name, date, format, resolution, size, and Lock/Unlock status.



My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text. For more information, see “*My Album*” on page 133.

Use the following procedures to access **My Album**.

Note: When accessing My Album, charges may apply.

1. In Idle mode, press the **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **My Album** and press the **Select** soft key or the  key.

3. Photos sent to this folder are stored in the **Inbox Album**.
4. Use the **Up** or **Down** key to highlight a particular image and press the  key to view the photos.
5. Press the  key to exit t-zones and return to the Idle screen.



My Journal

Use a web browser to make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories and send email invitations to ask people to view and comment on your album. See your service provider for more information. For more information, refer to “*My Journal*” on page 134.

Note: When making notes on My Journal, charges may apply.

Downloaded images

This menu allows you to access your downloaded images.

1. In Idle mode, press **Menu → Fun & Apps → Files → Images** and press the **Select** soft key or the  key.
2. Highlight **My Journal** and press the **Select** soft key or the  key.

3. Scroll to the image you want to view and press the

Options soft key to access the following options:

- **Download new:** opens your web browser where you can download new images.
- **Send via:** allows you to send an image via a Picture message.
- **Set as:** allows you to set the image as Wallpaper or as a Caller ID.
- **Delete:** allows you to delete the selected image or multiple images.
- **Move to memory card:** moves the selected image or multiple images to the memory card.
- **Copy to memory card:** copies the selected image or multiple images to the memory card.
- **Rename:** allows you to change the name of the image.
- **Display mode:** allows you to set the display mode to Line view or Thumbnail view.
- **Slide show:** allows you to set the time for the slide show to cycle through the images. Choose 1 second or 3 seconds.
- **Bluetooth visibility:** allows you to share all the downloaded images with other Bluetooth enabled devices.
- **Print via Bluetooth:** allows you to send the selected image to a Bluetooth enabled printer.
- **Lock/Unlock:** allows you to lock the image to protect it from deletion, or unlock an already locked image.
- **Properties:** displays the image name, date, format, resolution, size, quality, and Lock/Unlock status.

Memory Card

In this menu you can view and manage the images, videos, music, sounds, Other files, Video, Graphics, and Audio stored on your memory card. Highlight an item and press the Options soft

key. The following options are available:

- **Create folder:** allows you to create a new folder.
- **Bluetooth visibility:** allows you to share all the data on the memory card.
- **Properties:** allows you to view the details of the selected file or folder such as Name, Size, Contains, Created time, and Last modified time.
- **Memory card info.:** allows you to view the Capacity, Used space, and Free space on the memory card.

Icons

This menu allows you to personalize your favorite numbers with downloadable icon types.



- **myFaves icons** displays a list of downloaded icon types for you to use.
- **Browse myFaves icons** navigates to the t-zones so you can download additional myFaves icon types.

Videos

In this menu, you can view a list of videos downloaded from the web server, received in multimedia messages, or recorded via the phone. The following options are available:

Downloaded videos

This menu allows you to access your downloaded video clips.

1. In Idle mode, press the **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **Downloaded images** and press the **Select** soft key or the  key.

Scroll to the video you want to view. By pressing the **Options** soft key you can access the following options:

- **Send via:** allows you to send the video via Picture message or Bluetooth.
- **Delete:** allows you to delete the Selected video clip or to delete Multiple video clips.
- **Default destination:** allows you to remove or change the default destination.
- **Move to memory card:** allows you to move the video to the microSD memory card.
- **Copy to memory card:** allows you to copy the video to the microSD memory card.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Lock/Unlock:** allows you to lock the video to protect it from deletion, or unlock an already locked video.

- **Properties:** displays the video Name, Date, Format, Size, Resolution, Length, Quality and Lock/Unlock status.

Videos

In this menu you can review the videos you've taken. Highlight a video and press the **Options** soft key to choose from the following options:

- **Send to My Album:** allows you to send the selected video to My Album.
- **Send via:** allows you to send the video via Picture message.
- **Delete:** allows you to delete the selected video or delete Multiple videos.
- **Default destination:** allows you to remove or change the default destination.
- **Move to memory card:** allows you to move the video to the microSD memory card.
- **Copy to memory card:** allows you to copy the video to the microSD memory card.
- **Rename:** allows you to change the name of the video.
- **Display mode:** allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Bluetooth visibility:** allows you to share the selected or multiple video files visible with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the video to protect it from deletion, or unlock an already locked video.

- **Properties:** displays the video Name, Date, Format, Size, Length, Quality, Resolution and Lock/Unlock status.

Memory Card




In this menu you can view and manage the images, videos, music, sounds, Other files, Video, Graphics, and Audio stored on your memory card. Highlight an item and press the Options soft

key. The following options are available:


- **Create folder:** allows you to create a new folder.
- **Bluetooth visibility:** allows you to share all the data on the memory card.
- **Properties:** allows you to view the details of the selected file or folder such as Name, Size, Contains, Created time, and Last modified time.
- **Memory card info.:** allows you to view the Capacity, Used space, and Free space on the memory card.

Music

This options allows you to access your audio files in either your Music list or from your Memory card.

1. In Idle mode, press the **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to scroll between the **Music** or **Memory card** options and press the **Select** soft key or the  key.
 - The Memory card option displays only if a microSD card was installed into the internal slot below the battery. For more information, refer to “*Inserting the Memory Card*” on page 5.

Important!: To be accessible Music must be stored into the Music folder on the memory card.

4. Highlight the **Music** folder and press the  key.
5. Highlight a music file and press the **Options** soft key to choose from the following options:
 - **Send via Bluetooth:** allows you to send the select music file to another Bluetooth enabled device.

- **Set as:** allows you to set the selected audio as a default Ringtone, Individual ringtone, or Alarm tone.
- **Delete:** allows you to delete either the selected audio file or multiple files.
- **Move to memory card:** moves the selected audio file to the memory card.
- **Copy to memory card:** copies the selected audio file to the memory card.
- **Rename:** allows you to rename the selected audio file.
- **Bluetooth visibility:** allows you to share the selected or multiple music files visible with other Bluetooth devices.
- **Lock/Unlock:** allows you to lock the audio file to protect it from deletion, or unlock an already locked audio file.
- **Properties:** displays the Name, Date, Format, Bit rate, Length, Size, and Lock/Unlock status of the selected music file.

Memory Card

In this menu you can view and manage the images, videos, music, sounds, Other files, Video, Graphics, and Audio stored on your memory card. Highlight an item and press the Options soft

key. The following options are available:

- **Create folder:** allows you to create a new folder.
- **Bluetooth visibility:** allows you to share all the data on the memory card.

- **Properties:** allows you to view the details of the selected file or folder such as Name, Size, Contains, Created time, and Last modified time.
- **Memory card info.:** allows you to view the Capacity, Used space, and Free space on the memory card.

Other files

This option allows you to view other types of files that you have stored on your phone. This includes Excel spreadsheets, text files, wmf files, PowerPoint presentations, PDFs, MHTML and Word documents. You can send these files by picture message. You can also move or copy the files to your memory card.

Memory Card

You can check the contents of your microSD memory card and see what was saved there.


1. Press the **Up** or **Down** navigation keys to scroll between Images, Videos, Music, Sounds, Other files, Video and Graphics.

Note: The Memory card option only displays if a microSD memory card was pre-inserted in your phone.

2. After selecting a folder, press the **Options** soft key for the following options:
 - **Create folder:** allows you to create a new folder.
 - **Bluetooth visibility:** allows you to share all the data on the memory card.
 - **Properties:** allows you to view the details of the selected file or folder such as Name, Size, Contains, Created time, and Last modified time.
 - **Memory card info.:** allows you to view the Capacity, Used space, and Free space on the memory card.

Games




You can download MIDlets (Java applications that run on mobile phones) from various sources using t-zones browser and then store them in the My Games folder.

- In Idle mode, press **Menu → Fun & Apps → Games** option and press the **Select** soft key or the  key.

When you access the **Games** menu, the list of default games displays. Once you download new games, they are then added to the list.



Creating a New Games Folder


When you download a game using t-zones the file automatically stores in the My Games folder, however, you can organize and categorize your games by creating new folders for each game type and then moving the games into those folders.

1. In Idle mode, press **Menu → Fun & Apps → Games** and press the **Select** soft key or the  key.
2. Highlight **My Games** and press the **Options** soft key.
3. Highlight the **Add folder** option and press the **Select** soft key or the  key.
4. Enter a folder name in the text field.
5. When finished, press the **Save** soft key or the  key. The new folder is added to the Games menu.
6. Move the game into the new folder. For more information, refer to “Moving a Game into a New Games Folder” on page 105.

Moving a Game into a New Games Folder



Once you have created a new Games folder you can move your games into the folders. This option allows you to organize your games by time or other criteria.

1. In Idle mode, press **Menu → Fun & Apps → Games** and press the **Select** soft key or the  key.
2. Highlight **My Games** and press the **Open** soft key or the  key

3. Press the **Options** soft key and select **Move to**, then press the **Right** Navigation key.
4. Highlight the name of the new folder and press the **Select** soft key or the  key.

Browse Games

You can download more games from the T-Mobile website by using the **Browse Games** option.

1. In Idle mode, press **Menu** → **Fun & Apps** → **Games** and press the **Select** soft key or the  key.
2. Highlight **Browse Games** and press the **Connect** soft key or the  key.

The t-zones screen displays with options.

Note: When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

My games

This folder contains the default downloaded games and any other games you downloaded. After selecting a game, press the **Options** soft key for the following options:

Note: Some options are greyed out and not editable (Move to, Delete, and Unlock).

- **Move to:** allows you to move the selected game to another user-created folder.
- **Delete:** allows you to delete the game from this folder.
- **Lock/Unlock:** allows you to lock the game to protect it from being used.
- **Properties:** displays some of the game development information such as: name, supplier/vendor, software version, file size, etc...
- **Memory status:** displays the memory status such as: total available memory, Used memory, game allocation, and folder memory used.

Music Player

For information on using your music player, see “*Music Player*” on page 117.

Camera

For information on using your camera, see “*Camera*” on page 125.

Organizer

The Organizer allows you to set alarms, view the calendar, create Tasks, perform simple math calculations, check world time, perform synchronization, perform unit conversions, compose notes, set a timer, use a tip calculator, and use a stopwatch.

Alarm

This feature allows you to:


- Set up to 3 alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.





The following options are available:

- **Alarm 1:** set the day, time, and tone for this alarm.
- **Alarm 2:** set the day, time, and tone for this alarm.
- **Alarm3:** set the day, time, and tone for this alarm.
- **Auto power-up:** alarm rings at the specified time even if the phone is turned off.

If the option is set to **Off** and the phone is switched off at the specified time, the alarm does not ring.

To set the alarm:

1. Highlight an alarm and press the **Select** soft key or the  key.
2. Highlight the **Alarm** option and press the **Right** navigation key to set Alarm to **On**.
3. Press the **Down** key to highlight the **Alarm time** option. Enter the time you want the Alarm to sound.

4. Press the **Down** key to highlight the **Monday-Sunday** checkboxes. Press the  key to bring up a list of days.
5. Place a checkmark next to the days you want the alarm to sound. To place or remove a check mark, press the  key. Press the **OK** soft key.
6. Press the **Down** key to highlight the **Alarm tone** option. Press the  key to bring up a list of alarm melodies.
7. Press the **Up** or **Down** Navigation key to highlight a default alarm melody. Or, press the **Right** navigation key to display a list of sounds that you may choose from.
8. Press the **Save** soft key.
9. Press the  key to return to the Idle screen.

Note: Your phone is preset to a 12-hour format. To change the time format, see “*Time & Date*” on page 83.

10. To stop the alarm when it rings, press any key or press the **Snooze** soft key.

Calendar

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries
- Create a miscellaneous event.
- Create tasks.
- Set an alarm to act as a reminder, if necessary.
- Check your memory status.

When you select the **Calendar** menu, the following options are available:

Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

At the bottom of the calendar, the following icons display along with the number of entries for each:



Schedule items

Anniversary events

Tasks

Miscellaneous items

The number of entries next to each icon reflects the number of entries for the selected day on the calendar.

The following options are available when you press the **Options** soft key:

- **View mode:** takes you to the Day view or Week view of the selected day.
- **Create new:** allows you to create a Schedule, Anniversary, or Miscellaneous.
- **Go to:** takes you to the Today's date or another date highlighted.
- **Delete:** allows you to delete all events for a selected date, delete all events for a specified period, or delete all events for this month dates. You can also delete all event.

Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted.

The following options are available when you press the **Options** soft key:

- **View mode:** takes you to the Day view or Month view of the selected day.
- **Create new:** allows you to create a Schedule, Anniversary, or Miscellaneous.
- **Go to:** takes you to today's date or another date highlighted.

- **Delete:** allows you to delete all events for a selected date, delete all events for a specified period, or delete all events for this weeks dates. You can also delete all events.



Day view

When you select this option, you are taken to the Day view of the selected day with any events listed. The following options are available when you press the **Options** soft key:

- **Create new:** allows you to create a new Schedule, Anniversary, or Miscellaneous.
- **Send via:** allows you to send this event via a Text message or Picture message.
- **View mode:** allows you to choose between Month view or Week view.
- **Delete:** allows you to delete all events for a selected date, or delete all events for this days' dates. You can also delete all events.
- **Print via Bluetooth:** allows you to send selected information to a Bluetooth enabled printer.

Schedule



This option allows you to write memos to a schedule.

1. Highlight the **Schedule** option and press the **Select** soft key or the  key.
2. Press the **Options** soft key.
3. Highlight the **Create new** option and press the **Select** soft key or the  key.

4. Enter the subject in the **Subject** text box then press the **Down** soft key.
5. Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, AM/PM, Location, Alarm, before, Alarm tone and Repeat.
6. Press the **OK** soft key to check the Repeat option.
7. Press the **Save** soft key when you are finished. Your Schedule information saves to the Calendar.

Anniversary



This option allows you to record Anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

1. Highlight the **Anniversary** option and press the **Select** soft key or the  key.
2. Press the **Options** soft key.
3. Highlight the **Create new** option and press the **Select** soft key or the  key.
4. Enter the occasion in the **Occasion** text box then press the **Down** soft key.

5. Continue to enter other information including Date, Alarm, before, Alarm time, AM/PM, Alarm tone, and Repeat every year.
6. Press the **Save** soft key when you are finished. Your Anniversary information saves to the Calendar.



Miscellaneous

This option allows you to record miscellaneous dates or events in your calendar.


1. Highlight the **Miscellaneous** option and press the **Select** soft key or the  key.
2. Press the **Options** soft key.
3. Highlight the **Create new** option and press the **Select** soft key or the  key.
4. Enter the subject in the **Subject** text box then press the **Down** soft key.
5. Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, and AM/PM.
6. Press the **Save** soft key when you are finished. Your Miscellaneous information saves to the Calendar.

Missed alarm events

You can check on all of the alarmed events.

1. Highlight the **Missed alarm events** option and press the **Select** soft key or the  key.
2. To view an event information, highlight an event and press the  key.

The missed alarm event information displays.




3. To acknowledge and remove the event, press the **Confirm** soft key or the  key. The event is removed from the **Missed alarm events** menu.

Memory status

This menu item shows the number of calendar events that are stored on the handset as well as how much available memory space is left for additional calendar events. Events are broken down by Schedule, Anniversary, Miscellaneous, and Tasks.

Tasks

This feature allows you to enter a list of tasks.






1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Highlight **Tasks** and press the **Select** soft key or the  key.
The t-zones screen displays with options.
3. Press the **Options** soft key.
4. Highlight the **Create new** option and press the **Select** soft key or the  key.
5. Enter the Item to do in the **Task** text box then press the **Down** soft key.
6. Continue to enter other information including Start date, Due date, Priority, and Alarm.
7. Press the **Save** soft key when you are finished. Your Task list saves to the Calendar.

Editing the Tasks List

When you select the Tasks list menu, the current contents display with a status checkbox and a priority marker.




If the item was done, a check displays in the checkbox.

High priority items display a red explanation mark, Normal priority items display a blue explanation mark, and Low priority items display a gray explanation mark.

1. To mark an item **Done**, highlight the item and press the **Options** soft key.
2. Highlight **Mark as done** and press the  key. The status checkbox next to the Task item displays a check mark.
3. Highlight the item and press the  key to view the task.
4. Press the  key to edit the task.
5. Highlight the **Edit** option and press the **Select** soft key or the  key.
6. Edit the items you wish to change.
7. Press the  key to save your edits.

Notes

This feature allows you to create a note.

1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Select **Notes** and press the **Select** soft key or the  key.
3. Highlight **Create new note** and press the **OK** soft key.
4. Enter the note in the Notes text field. For more information, refer to “*Entering Text*” on page 47.
5. Press the  key.

Notes Options

While accessing any Notes entry, press the **Options** soft key to use the options for the entry.




 

The following options are available:

- **Edit:** allows you to edit the notes.
- **Create new note:** creates a note.
- **Send via:** attaches the note to a Text or Picture message.
- **Delete:** deletes the currently selected note or all notes.
- **Print via Bluetooth:** allows you to send these notes to a Bluetooth enabled printer.

- **Memory status:** displays the number of notes and how much memory remains for additional notes.



Calculator


With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
1. Highlight **Calendar** and press the **Select** soft key or the  key.
2. Enter the first number using the numeric keys.
3. Enter the operation for your calculation by pressing the navigation key according to the illustration on the display. Use the  key for the decimal. You can also use the  key to create brackets.
4. Enter the next number.
5. To view the result, press the  key.
6. Repeat steps 1 to 4 as many times as required.

Tip calculator

This feature provides the percentage amount for tip. Use the following procedures to calculate a tip amount.


1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Highlight **Tip calculator** and press the **Select** soft key or the  key.
3. In the **Bill** field, enter the check amount.

Note: To enter the decimal point for the exact dollar amount, use the  key.

4. Use the **Down** Navigation key to highlight **Tip(%)** percentage. 15 is the default value but this can be changed.
5. The **Tip(\$)** field value is calculated according to the values entered.
6. Use the **Down** Navigation key to move to the **# paying** field to change the number of people contributing to the tip amount.
7. The **You pay** field displays what each individual is to pay.

World Time

This feature allows you to assign two separate time zones to your phone by using the **Left** and **Right** Navigation keys. You can set the first setting to your home city and then use the second setting to check other city times.

1. Highlight the first field using your **Up** and **Down** Navigation keys.
2. Use your **Left** and **Right** Navigation keys to then assign the time zone for that time zone.
3. Repeat steps 1 & 2 for the next time zone entry.
4. Press the **Options** soft key for the following options:
 - **Save:** this allows you to save your world time settings.
 - **Apply daylight saving time:** use the  key to place a checkmark next to the cities that you want to set daylight savings time. Each city listed represents a time zone.

Synchronization

This feature allows you to back up (synchronize) Contact information, Calendar, Tasks and Notes stored on your phone with your T-Mobile account on the network. Each time you edit contact information your phone automatically synchronizes with the web Address Book.

Important!: Synchronization is a free service offered to T-Mobile customers.

For more information, refer to “*Synchronization*” on page 92.

Sync Now

For more information, refer to “*Sync Now*” on page 93.

Data to Sync

For more information, refer to “*Data to Sync*” on page 93.

View log

For more information, refer to “*View log*” on page 94.

About Sync

This feature displays information about how the synchronization feature works and provides a URL for more specific synchronization information.



Note: Your t-zones feature must be activated by T-Mobile for this feature to work.


Unit Conversion


The conversion menu provides the following conversion categories:

- **Currency**
- **Length**
- **Weight**
- **Volume**
- **Area**
- **Temperature**

To convert a currency, length, weight, volume, area, or temperature, do the following:

1. In Idle mode, press **Menu** → **Fun & Apps** → **Organizer** and press the **Select** soft key or the  key.
2. Highlight **Unit conversion** and press the **Select** soft key or the  key.



3. Scroll to the conversion feature you wish to use and press the **Select** soft key or the  key.
4. Enter the quantity you want converted.



Note: To include a decimal point, press the  key.

5. Use the Navigation keys to select the From and To units of measure for the quantity you want converted.
6. Press the **Options** soft key and select the function to perform with the information entered in the From and To units of measure.
7. Press the **Back** soft key to return to the **Unit conversion** menu.

Timer

You can use this menu to set a timer. To enable the Timer:

1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Highlight **Timer** and press the **Select** soft key or the  key.
3. Press the **Set** soft key to enter the length of time.

4. Enter the time and press the **OK** soft key.
5. Press the  key to start the timer. Press the  key again to stop the timer.

Stopwatch

This feature allows you to use a stopwatch.







1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Highlight **Stopwatch** and press the **Select** soft key or the  key.
3. Press the  key to start the stopwatch.
4. Press the **Reset** soft key to erase all previously recorded stopwatch times.
5. Press the  key for the lap time. You can use up to 4 separate lap times.

Image Editor

The Image editor option allows you to edit the selected image by adding effects, adding a frame, emoticon or clip art. You can also set the edited image as wallpaper or a Caller ID icon.

1. In Idle mode, press **Menu → Fun & Apps → Organizer** and press the **Select** soft key or the  key.
2. Highlight **Image editor** and press the **Select** soft key or the  key.
3. At the Load an image prompt, press the **Options** soft key and select **New image** then press the Right Navigation key.
4. Select **Open** or **Take photo**.

Once you select a photo or take one, you can select the Load option.

5. With the image loaded, press the **Options** soft key and select one of the following options:
 - **Send via**: sends this edited image as a Picture message, E-mail or to a Bluetooth enabled device.
 - **New image**: opens another image, or takes a photo.
 - **Save as**: saves this edited image as a Wallpaper.
 - **Effects**: adds a special effect to the image such as: Black and White, Negative, Sepia, Emboss or Sketch.

- **Adjust**: adjusts the brightness, contrast or color.
- **Transform**: rotates or flips the loaded photo.
- **Insert**: inserts a frame, Emoticons or Clip Art into the current image screen.
- **Set as**: displays the selected image as Wallpaper or as a Caller ID icon.
- **Bluetooth visibility**: allows you to enable Bluetooth so you can share the selected file with other Bluetooth devices.
- **Print via Bluetooth**: allows you to send the selected image to a Bluetooth enabled device.
- **Undo**: allows you to undo image edits.

Section 11: Music Player

This section describes how to use the Music Player to play downloaded music files.

Music Player

The Music Player allows you to play music files stored on the phone.



Note: The following characters cannot be used in the filename:

◀ < > " ? / \ : * |

Important! You must organize your playlist before you get started.

Music Player Options

Use the Options menu to access the Playlist. The Playlist soft key (Up Navigation key) allows you to change the settings such as repeat or shuffle.

1. In Idle mode, press **Menu** → **Fun & Apps** → **Music player** and press the **Select** soft key or the  key.
2. Press the **Options** soft key and select one of the following music player application options then press the  key.

The first time you use the **Options** menu these options display:

- **Play:** allows you to play the music in the selected playlist.
- **Rename:** allows you to rename the selected playlist.



Select a playlist and press  to view the contents.

Press Options to view the available playlist options:

- **Add music from:** allows you to add music from either your phone or inserted memory card. The memory card should contain a Music folder to house the desired music files.
- **Move to:** allows you to move the selected music file to another playlist (1-10).
- **Copy to:** copies the selected music file to another playlist (1-10).
- **Remove:** allows you to remove the selected music file or all of the music files from the playlist.
- **Set as:** allows you to set the selected music file as a Ringtone, Individual ringtone, or Alarm tone.
- **Send via Bluetooth:** allows you to send the selected music file to another Bluetooth enabled device.

- **Properties:** displays information about the selected music file such as Name, Date, Format, Bitrate, Length, Size, and Lock/Unlock status.

Music Player Shortcut Keys

1. In Idle mode, press **Menu** → **Fun & Apps** → **Music player** and press the **Select** soft key or the  key.
2. Press the **Options** soft key, select **Shortcuts**, then press either the **Select** soft key or the  key.



Press to increase the volume



Press to decrease the volume



Up allows you to change the settings such as repeat or shuffle.

Down stops the currently playing song.



Left plays the previous song title.

Right Advances to the next song title.



While playing a song if pressed it displays the music player options.



While playing a song if pressed it displays the Playlists.



Press once to toggle the play state of the current song (Play/Pause).



Toggles through the Repeat mode:

Repeat one: repeats the currently active song.

Repeat all: replays each song in the current list and as the last song in the list ends, the player begins replaying all of the songs in the order they appear within the current list.







Toggles the Shuffle mode **On** or **Off**.

- **Shuffle:** the current list of songs are randomly shuffled for playback.

Adding Music to a Playlist


Before music can be played directly via the Music Player, it is necessary that the desired playlist be active before music is added. Unless otherwise selected, **Playlist 1** is the default playlist when new music is added from either the phone or memory card.



1. In Idle mode, press **Menu** → **Fun & Apps** → **Music player** and press the **Select** soft key or the  key.

2. Press the **Playlist** soft key.
3. Highlight a playlist and press the **Options** soft key.
4. Select **Open** and press the **Select** soft key or the  key.
5. Press the **Options** soft key and select **Add music from** and press the **Right Navigation** key.
6. Select **Phone** or **Memory card** and press the **Select** soft key or the  key.
7. With the music list displayed press the  key to place a check mark next to the song to add to this playlist or press the **All** option.
8. Press the **Add** soft key to associate all of the selected songs to the currently active playlist.

Playing Music Files

Music can either be played indirectly (without the use of the Media player or playlists) by using the **Fun & Apps > Files > Music** feature (page 103) or directly by selecting a desired playlist of songs which are then played through the media player.

1. In Idle mode, press **Menu → Fun & Apps → Music player** and press the **Select** soft key or the  key.




2. Press the **Playlist** soft key, highlight a playlist and press the **Options** soft key.
3. Highlight a playlist and press **Options → Open**.
4. Highlight the song to play and press the  key.
The select song plays.
5. While listening to a music file, press the **Options** soft key for the following options:
 - **Pause**: allows you to pause the song you are listening to. Press the  key to resume the song.
 - **Transfer to Bluetooth stereo headset**: the selected music file is replayed through the Bluetooth stereo headset.
 - **Set as**: allows you to set the selected music file as a Ringtone, Individual ringtone, or Alarm tone.
 - **Add to**: allows you to add the selected music file to another playlist.
 - **Remove**: allows you to remove the actively playing song from the current playlist.
 - **Properties**: displays the file properties such as: file name, creation date, format, bitrate, length, file size, and lock/unlock state.
 - **Shortcuts**: displays the current shortcut key functions related to the media player application.


Transferring Music Files

Music files can be downloaded to the phone via one of two methods:

- Downloaded to the phone from t-zones > Downloads.
 - Music files can be directly stored on your phone from this site.
 - For more information, refer to “*t-zones*” on page 137.
- Downloaded to the phone via a direct USB connection.
 - Music files are stored into a Music folder on the microSD card.
 - For more information, refer to “*USB mode*” on page 84.




Deleting Music Files From the Memory Card

 
1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Memory card** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to highlight the Music folder which contains the songs you want to delete and press the  key.
4. Press the **Up** or **Down** navigation keys to highlight the song to delete.
5. Press the **Options** soft key, highlight **Delete**, and press the **Right Navigation** key.

6. Select either **Selected** (to delete a single song) or **Multiple** (to delete several songs).
 - If you selected **Multiple**, you select a song by first highlighting it and then pressing the **Delete** soft key or the  key. Selecting **All** places a checkmark next to all detected songs.
7. At the “**Delete?**” prompt, press the **Yes** soft key to accept the deletion or the **No** soft key to cancel the process.


 

Assigning Music Files

 

You can choose to assign music files as the Default Ringtone, Caller ringtone or as an Alarm tone. Songs used for these types of assignments must be copied to the phone.

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to scroll between Music or Memory card options and press the **Select** soft key or the  key.
 - The Memory card option displays only if a microSD card was installed into the internal slot below the battery. For more information, refer to “*Inserting the Memory Card*” on page 5.
 - Music must be stored in the Music folder.







- If you selected **Memory card**, you must highlight the Music folder and press the  key.
4. Highlight a music file and press the **Options** soft key.
 5. Highlight the **Set as** option and then press the **Right** Navigation key to assign the selected song to a ring type.
 - **Set as:** allows you to set the selected audio as a Default Ringtone, Caller ringtone, or Alarm tone.
 - This type of audio assignment requires the song to be stored on the phone.
 - If the selected song is on the memory card, you are prompted to copy the music file to the phone prior to use. Press the **Yes** soft key to continue copying the song to the phone or **No** to cancel the operation.

Assigning a music file as a ringtone





1. In Idle mode, press **Menu → Fun & Apps → Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to scroll between Music or Memory card options and press the **Select** soft key or the  key.

- The Memory card option displays only if a microSD card was installed into the internal slot below the battery. For more information, refer to *“Inserting the Memory Card”* on page 5.
 - Music must be stored in the Music folder.
 - If you selected **Memory card**, you must highlight the Music folder and press the  key.
4. Highlight a music file and press the **Options** soft key.
 5. Highlight the **Set as** option and then press the **Right** Navigation key to assign the selected song to a ring type.
 - **Set as:** allows you to set the selected audio as a Default Ringtone, Caller ringtone, or Alarm tone.
 - This type of audio assignment requires the song to be stored on the phone.
 - If the selected song is on the memory card, you are prompted to copy the music file to the phone prior to use. Press the **Yes** soft key to continue copying the song to the phone or **No** to cancel the operation.
 6. Highlight the **Default Ringtone** option and press the **Select** soft key or the  key.
 7. At the **“Copy to phone and set as ringtone?”** prompt, press the **Yes** soft key to continue copying the song to the phone or **No** to cancel the operation.



Assigning a music file as an Individual ringtone

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to scroll between Music or Memory card options and press the **Select** soft key or the  key.
 - The Memory card option displays only if a microSD card was installed into the internal slot below the battery. For more information, refer to “*Inserting the Memory Card*” on page 5.
 - Music must be stored in the Music folder.
 - If you selected **Memory card**, you must highlight the Music folder and press the  key.
4. Highlight a music file and press the **Options** soft key.
5. Highlight the **Set as** option and then press the **Right** Navigation key to assign the selected song to a ring type.
 - **Set as:** allows you to set the selected audio as a Default Ringtone, Caller ringtone, or Alarm tone.
 - This type of audio assignment requires the song to be stored on the phone.
- If the selected song is on the memory card, you are prompted to copy the music file to the phone prior to use. Press the **Yes** soft key to continue copying the song to the phone or **No** to cancel the operation.
6. Highlight the **Caller ringtone** option and press the **Select** soft key or the  key.
7. From the Contact list, press the **Up** and **Down** Navigation keys to highlight a contact entry and press the **Select** soft key or the  key to assign the song. The selected audio file is assigned to the contact entry as part of their Caller ID. When this contact calls you, the associated music file plays.

Assigning a music file as an alarm tone

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Press the **Up** or **Down** navigation keys to scroll between Music or Memory card options and press the **Select** soft key or the  key.
 - The Memory card option displays only if a microSD card was installed into the internal slot below the battery. For more information, refer to “*Inserting the Memory Card*” on page 5.
 - Music must be stored in the Music folder.
 - If you selected **Memory card**, you must highlight the Music folder and press the  key.
4. Highlight a music file and press the **Options** soft key.
5. Highlight the **Set as** option and then press the **Right** Navigation key to assign the selected song to a ring type.
 - **Set as:** allows you to set the selected audio as a Default Ringtone, Caller ringtone, or Alarm tone.
 - This type of audio assignment requires the song to be stored on the phone.




- If the selected song is on the memory card, you are prompted to copy the music file to the phone prior to use. Press the **Yes** soft key to continue copying the song to the phone or **No** to cancel the operation.


6. Highlight the **Alarm tone** option and press the **Select** soft key or the  key.
7. From the Alarm list, press the **Up** and **Down** Navigation keys to highlight an alarm entry and press the **Select** soft key or the  key to open the properties of the alarm.
8. Press the **Save** soft key to store the music file to the selected alarm.

Moving and Copying Music Files





You can move or copy music files from the phone to the memory card or from the memory card to the phone's memory.

Moving a Music file

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Select **Music** or **Memory card** and press the  key.

4. Highlight the music file and press the **Options** → **Move to phone/memory card** soft key.
5. elect **Move to**, then press the **Right** Navigation key.
6. Select **Phone** or **Memory card** and press the  key.
7. Press the **Move** soft key.





 

Copying a Music file

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Select **Music** or **Memory card** and press the  key.
4. Highlight the music file and press the **Options** → **Copy to**, then press the **Right** Navigation key.
5. Select **Phone** or **Memory card** and press the  key.
6. Press the **Copy** soft key.

The files copy to the phone or memory card.

Renaming a Music File

Using the Rename feature you can customize the name of your music files.

1. In Idle mode, press **Menu** → **Fun & Apps** → **Files** and press the **Select** soft key or the  key.
2. Highlight **Music** and press the **Select** soft key or the  key.
3. Select **Music** or **Memory card** and press the  key.
4. Scroll to the music file and press **Options** → **Rename** and press the  key.
5. Press the  key to backspace over the name of the file and then enter the new name. For more information, refer to “Using ABC Mode” on page 49.
6. Press  to save the new file name.

Section 12: Camera

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

Using the Camera


Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send a link to your My Album online to other people, set the picture as a Wallpaper, or as a Picture ID image.

Note: Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.


Take and Send

Your camera produces photos in JPEG format.



Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.

Tip: Press the **Camera** key on the right side of the phone as a shortcut access to the camera module.


2. Highlight **Take and Send** and press the **Select** soft key or the  key.
3. Adjust the image by aiming the camera at the subject.
4. Prior to taking a picture, press the **Menu** soft key to access the camera options. For details, see “*Configuring Camera Options*” on page 127.


Tip: You can use the keypad to quickly change the camera options.


5. Press the  or  key to take the photo. The screen displays the **Send to: My Album Online ?** option.
 6. Press the **Add voice** soft key if you want to add a voice message to the photo.
 7. Press the **Stop** soft key when you are finished recording.
- Or-

8. Press the **Yes** soft key if you want to send the photo to your T-Mobile **My Album Online** service. The phone's default destination is set to **My Album**. The photo automatically saves in the **Photos** folder in the phone's memory.


Note: To change the default destination for your pictures, press the **Options** soft key when **Send to: My Album Online?** displays on the screen. Highlight the **Default destination** option and the **Change** option. You can then change your default destination to a Recent recipients, Phonebook, Phone number, Email address, My Album, and My Journal.

9. Press the **Options** soft key and select **Send to** to send the newly taken photograph then press .
10. Select from one of the following destinations by pressing the **Up** or **Down** Navigation key:
 - **Recent recipients:** allows you to send to one of the recent recipients.
 - **Phonebook:** allows you to select a recipient from the phonebook.
 - **New recipient:** allows you to enter the phone number and e-mail address of a new recipient.
 - **My Album:** sends the message to My Album.
 - **My Journal:** sends the message to My Journal.
11. Press the **Back** soft key to return to **Capture** mode.
12. Press the **Options** soft key and select **Take another**.

13. Press the  key to take another picture.

14. Press the  key to return to the Idle screen.

 

Configuring Picture Options

After you take a picture, press the  key to access the photo's **Options** menu for the current photograph. This list of options differ from the Camera's main menu which allows you to configure options for the camera and not for the picture.

The following options are available:

- **Take another:** returns you to camera mode to take another photo.
- **Send to:** displays the **Send to** menu and allows you to select a destination for the currently taken photograph. This destination can be a single or multiple recipient(s) (such as, Recent recipients, Phonebook, Phone number or Email address) or to a remote folder such as My Album or My Journal.
- **Send in Message:** allows you to send the newly taken photo as a New picture message.



Note: To change the default destination for your pictures, highlight the **Default destination** option, press the **Right** Navigation key, then select **Change**.

- **Default destination:** allows you to Remove a current destination location or Change the current location by establishing a new folder in which to place the pictures. Select from the following options: Recent recipients, Phonebook, Phone number, Email address, My Album, or My Journal.
- **Set as:** allows you to use the current photo as an Picture ID or Wallpaper.
- **Go to photos:** takes you to your Photos folder.
- **Delete:** allows you to delete the selected photo.
 1. To return to the **Capture** mode, press the  key.
 2. Press the  key to return to Idle mode.

Configuring Camera Options

1. In Capture mode (prior to taking a new photo), press the **Menu** soft key to use various options for the camera module.

The following options are available:

- **Camera/Camcorder:** allows you to take a picture or record a video.
- **Shooting mode:** takes a photo in various modes. Once you change the mode, the corresponding indicator displays at the top left of the display.
 - **Single shot:** takes a single photo and allows you view it before returning to the shooting mode.
 - **Multi-shot** takes a succession of consecutive photos.
 - **Mosaic shot** Takes up to four photos and then groups them together into a single final photo.
 - **Frame shot:** displays a frame on the screen so you can center the photo in your shot like a postcard.
- **Size:** allows you to set the image size to either: 1280x1024, 1024x768, 800x600, 640x480, and 320x240. The selected image size displays on the capture screen.
- **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay you want and press the **Select** soft key. When you press the  or  key, the camera takes the photo after the specified time has elapsed.
- **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Effects:** allows you to change the color tone or apply special effects to the photo.
 - Options include: No Effects, Black & White, Negative, Sepia, and Emboss.
- **Default destination:** allows you to **Remove** a current destination location or **Change** the current location by establishing a new folder in which to place the pictures.
- **Shortcuts:** allows you to view a quick list of shortcuts such as Mode, Shooting mode, Timer and Viewfinder mode.

Camera Shortcuts

- You can change options using your keypad in capture mode. The following short cuts are available:



takes the photo.



Up and **Down** navigation keys zoom in and out.



Left and **Right** navigation keys adjust the image brightness.



Up arrow zooms in or enlarges the view of the photo.



Down arrow zooms out or decreases the view of the photo.



toggles between camera and video mode.



allows you to select a custom frame border for your photo.



sets a time delay.



changes the viewfinder mode.

General Settings

During capture mode press the Menu soft key and scroll to the right until General settings displays.

1. Highlight General settings and press the key.
2. Use the Navigation keys to select and set the following settings:
 - **Zoom sound:** allows you to turn zoom sound On or Off.
 - **Brightness sound:** allows you to turn brightness sound On or Off.

Camera Settings


During capture mode press the Menu soft key and scroll to the right until Camera Settings displays.

1. Highlight Camera settings and press the key.
2. Use the Navigation keys to select and set the following settings:
 - **Shutter sound:** allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Shutter1, Shutter2, and Shutter3.
 - **Viewfinder mode:** allows you to set the view finder to Full screen, Full screen & Indicator, Full screen & Guideline, or Actual screen.


 
- **Scene program:** allows you to set the camera options to capture normal or night scene.
- **Exposure metering:** allows you to set how the camera measures or meters the light source: Normal, Center-weighted, or Spot.
- **Single shot:** allows you to select whether you want the single shot option set to Take and Send or Take and Preview.

Photos

1. In Idle mode, press the **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.

2. Select **Photos** and press the **Select** soft key or the  key.

When you access this menu, your phone displays the photos in Line view or Thumbnail view, depending on which mode was selected in the Photos options. Use the Navigation keys to scroll through the photos.

3. To view the photos on the full screen, press the  key. To go back to Line view, press the **Back** soft key or the  key.
4. Press the **View** soft key to view the selected photo.





5. Press the **Options** soft key to use the following options:

- **Send to My Album:** allows you to send your photos to My Album.
- **Send via:** allows you to send the selected photo as a Picture message or to a Bluetooth enabled device.
- **Set as:** allows you to set the photo as your Wallpaper or as a Picture ID.
- **Default destination:** allows you to Change or Remove where your photos are sent after you take them.
- **Edit image:** allows you to edit the selected image.
- **Delete:** allows you to deleted the selected image.
- **Move to memory card::** allows you to move the selected photo to the memory card.
- **Copy to memory card::** allows you to copy the selected photo to the memory card.
- **Rename:** allows you to rename the photo.
- **Slide Show:** allows you to see all of your photos in a slide show presentation. Choose from 1 or 3 seconds intervals.
- **Bluetooth visibility:** allows you to enable this photo so it is visible to other Bluetooth devices.
- **Print via Bluetooth::** allows you to send the selected photo to a Bluetooth enabled printer.
- **Lock:** allows you to protect the photo from being deleted.

- **Properties:** shows the properties of the photo, such as the file name, file date, file format, image resolution, file size, and lock/unlock.



Deleting a Photo

You can delete photos one by one or all at one time.



1. In Idle mode, press the **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.
2. Select **Photos** and press the **Select** soft key or the  key.
3. From the **Photos** menu, highlight the photo you want to delete. Press the **Options** soft key and select **Delete** and press the **Right Navigation** key.
4. Select a deletion of either the currently **Selected** image or **Multiple** images and press the **Select** soft key or the  key.
5. Press the **Yes** soft key to confirm the deletion.
6. Press the  key to return to Idle mode.

Record video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by putting the light source behind you.

1. In Idle mode, press the **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.
2. Select **Record video** then press the **Select** soft key or the  key.
3. Before filming the video, press the **Menu** soft key to access camcorder options (see below).
4. Adjust the image by aiming the camera at the subject.
5. Press the  key to begin shooting video.
6. Press the **Stop** soft key to stop the recording.
- Or -
Press the  key to stop the recording and save the video file to your Videos folder.
7. Once the file saves, press the  key to play back your video for review.

Camcorder Options

1. Before shooting the video, press the **Menu** soft key to access the camcorder options.
 - **Camera/Camcorder:** allows you to take a picture or record a video.
 - **Limit for message:** allows you to select No limit, or Limit for message.
 - **Size:** allows you to set the video size to either: 176x144, 160x120 or 128x96.. The selected image size displays on the capture screen.
 - **Timer:** allows you to set a time delay before the video starts to record. Select the length of delay you want and press the **Select** soft key. When you press the  or  key, the video begins recording after the specified time has elapsed.
 - **White balance:** allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- **Effects:** allows you to change the color tone or apply special effects to the photo.
 - Options include: No Effects, Black & White, Negative, Sepia, and Emboss.
- **Sound:** allows you to turn audio On or Off.
- **Default destination:** allows you to **Remove** a current destination location or **Change** the current location by establishing a new folder in which to place the videos.

- **Shortcuts:** allows you to view a quick list of shortcuts such as Mode, Recording mode, and Timer.
 - **General settings:** allows you to turn the Zoom and Brightness sound On or Off.
2. Press the **OK** key to return to the video viewer.
 3. You can use the keypad to quickly change the video options using the Camcorder shortcut keys. For more information on camera shortcut keys, see “*Camcorder Shortcuts*” on page 132.

Once the video is recorded, the following options are available:

- **Record another:** allows you to record another video.
- **Send to:** allows you to send this video to Recent recipients, Phonebook, New recipient, My Album or My Journal.
- **Send in message:** allows you to send the newly taken photo as a New picture message.
- **Default destination:** Allows you to remove or change where your videos are sent after shooting them.
- **Go to videos:** Allows you to move the selected files to the video folder.
- **Delete:** allows you to delete the video.

Camcorder Shortcuts

Shortcut keys allow you to change options using your keypad, Navigation keys, and Volume key in capture mode. The following options are available.



shoots video.



Up arrow zooms in on the video.



Down arrow zooms out on the video.



Up and **Down** navigation keys zoom in or out.



Left and **Right** navigation keys adjust the image brightness.



switches the handset between camcorder and camera mode.



changes the recording mode.



changes the recording mode.

Videos

To access your videos:

1. In Idle mode, press the **Menu** → **Fun & Apps** → **Camera** and press the **Select** soft key or the key.
2. Select **Videos** and press the **Select** soft key or the key.

When you access this menu, your phone displays the videos in Line view or Thumbnail view depending on which option was selected in the Display mode. Use the Navigation keys to scroll through the videos. The Video folder contains a list of videos you have recorded, videos downloaded from the web server, or videos received in multimedia messages.

3. Press the key to view a selected video.
- Or -
4. Select a video clip from your Videos folder by scrolling to the video you want to view, highlighting it and pressing the **Options** soft key to choose from the following options:
 - **Send to My Album:** moves the video to your My Album folder.






- **Send via:** sends the video using a picture message or to another Bluetooth enabled device.
- **Delete:** deletes the selected video or multiple videos.
- **Default destination:** allows you to change where your videos are sent after you take them: Recent recipients, Phonebook, Phone number, Email address, My Album, or My Journal.
- **Move to memory card:** allows you to move the Selected or Multiple videos to the Memory card.
- **Copy to memory card:** allows you to copy the Selected or Multiple videos to the Memory card.
- **Rename:** changes the name of the video.
- **Display mode:** allows you to view the pictures in **Line view** or **Thumbnail view**.
- **Bluetooth visibility:** allows you to enable this video so it is visible to other Bluetooth devices.
- **Lock/Unlock:** locks the video to protect it from deletion or unlocks it to allow deletion.
- **Properties:** displays the video name, date, format, resolution, date, length, quality, and lock/unlock status.

My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access **My Album**.



Note: When accessing My Album, charges may apply. The feature is not activated until you send your first image to the remote My Album location.

1. In Idle mode, press the **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.
2. Select **My Album** and press the **Select** soft key or the  key. The t-zones browser is then launched and the T-Mobile Web page displays.
3. Select the **My Albums Menu** link and press the **Select** soft key or the  key.
4. Photos sent to this folder are stored in the **Inbox Album**. Press the  key to view the photos.
5. Press the  key to exit t-zones and return to the Idle screen.

My Journal

Make notes in My Journal, your online diary and Weblog. Keep it private to store your personal memories, or send email invitations to ask people to view and comment on your album. Contact T-Mobile customer service for more information.

Note: Charges may apply when accessing My Journal. Contact your T-Mobile service representative.

1. In Idle mode, press the **Menu → Fun & Apps → Camera** and press the **Select** soft key or the  key.
2. Select **My Journal** and press the **Select** soft key or the  key. The t-zones browser is then launched and the T-Mobile Web page displays.


Important! You must log in from a web browser and set up My Journal before you can access it.

Section 13: t-zones


This section outlines the t-zones features available on your phone. For more information, contact T-Mobile.

t-zones

Your phone is equipped with a JAVA-based browser which provides wireless connectivity and access to the Web using your phone.

Tip: Press the t-zones  soft key while in Idle mode to bypass the t-zones menu.

To access t-zones via the menu, follow these steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **t-zones** icon. Press the **Select** soft key or the  key to enter the menu.

-OR-

To access t-zones directly, follow these steps:

- In Idle mode, press the **t-zones** soft key to access the **t-zones** menu.

The following options are available:


Home

Press the **Menu** soft key to select this menu and connect the phone to the network and loads the t-zones homepage.


The content of the t-zones startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen in the t-zones, use the **Home** option. For more information on the t-zones menus, see “*Selecting and Using Menu Options*” on page 138.

Exiting the t-zones

- Simply press the  key to exit the browser at any time.

Navigating the t-zones

1. To scroll through browser items, press the **Up** or **Down** Navigation key.
2. To select browser items, press the  key.
3. To return to the previous page, press the **Back** soft key.
4. To return to the startup homepage, press the **Options** soft key, highlight **Home** and press the **Select** soft key.

Entering Text in the t-zones

While you are navigating the t-zones you often need to enter text, such as when entering a URL. You can enter alphanumeric characters by using your phone's keypad. For more information, refer to “*Entering Text*” on page 47.

Selecting and Using Menu Options

Various menus are available when you are using t-zones to navigate the Wireless Web.

To access the browser options menu:

- Press the **Options** soft key.

Note: The menus may vary, depending on your version of t-zones.

The following options are available:

- **Reload:** reloads the current page.
- **Page size:** allows you to select the page size to view (Large, Normal or Small).
- **Go to:** navigates to the URL address, Homepage, Bookmarks, History, or Saved pages.
- **Save:** allows you to save the Image or Page.
- **Add to bookmark:** adds the current URL to Bookmarks.
- **Send URL via message:** sends the currently viewed URL to a recipient as a message.
- **Page details:** allows you to view details about the current page such as: Title, URL, Mimetype, and Size.
- **Browser settings:** Various settings are available, see “*Browser Settings*” on page 140.
- **Exit browser:** exits the browser page you are viewing and returns to the Home page.

Enter URL

This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about entering characters, see “*Entering Text*” on page 47.


Bookmarks

This menu stores up to 15 URL addresses.

To store a URL address:

1. Press the **Options** soft key and select **Add bookmark**.
2. Enter a name for the favorite item in the **Title** text box and press the **Down** Navigation key.
3. Enter the address in the URL text box and press the **Save** soft key.

Note: For further details about how to enter characters, see “*Entering Text*” on page 47.



4. Highlight an item after saving favorite items, then press the **Options** soft key to access the following:
 - **Edit bookmark:** allows you to edit the address.
 - **Delete:** allows you to delete the select address or multiple addresses.
 - **Add bookmark:** allows you to add another bookmark.
 - **Send URL via message:** allows you to send the selected URL as a text message.
5. Select the favorite item and press the  key. Your browser displays the site.



Saved Pages

This option displays a list of the pages that were saved while navigating the browser.

History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

1. In Idle mode, press the Menu soft key to access Menu mode.
2. Using the Navigation keys, scroll to the t-zones icon. Press the Select soft key or the  key to enter the menu.
3. Highlight the History option and press the **Select** soft key or the  key.
4. Use the Up or Down Navigation key to highlight an entry from the list.
5. Press the **Options** soft key.

6. Highlight the **Open** option and press the **Select** soft key or the  key.
7. Press the  key to return to the Idle screen.

Browser Settings

Various settings are available when you are using the t-zones browser to navigate the wireless web.

Clear cache

You can clear the information stored in the cache, which is the phone's temporary memory which stores the most recently accessed web pages.


- At the **Clear cache?** prompt, press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

Cookies

The Cookie mode allows you to define how your browser handles cookies. Options are: Accept all cookies, Reject all cookies, or Prompt before receiving a cookie.

Delete cookies

Cookies identify who you are when you visit favorite web sites; however, they are also used to track your web surfing habits. Deleting all the cookies provides security.

1. Highlight Delete cookies and press the  key.
2. At the **Delete cookies?** prompt, press the **Yes** soft key.

Preferences

The Preferences option allows you to set t-zones preferences such as Run JavaScript, Display images, Play sound, View mode, and Revalidate Cache.

Certificates

The Certificates option allows you to view internet certificates.

- **Root Certificate:** provides several root certificates from which to choose.
- **CA Certificate:** provides several CA certificates from which to choose.

About Browser

About Browser displays information about the browser such as the type and version.

Section 14: Health and Safety Information

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of

absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that

contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

- GSM850 Head: 0.436 W/kg, Body-worn: 0.765 W/kg.
- GSM1900 Head: 0.733 W/kg, Body-worn: 0.600 W/kg.
- WLAN: Head: 0.249 W/kg, Body-worn: 0.113 W/kg.

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar. after searching on FCC ID A3LSGHT339.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://www.samsung.com/us/consumer/type/type.do?group=mobilephones&type=mobilephones> for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the

health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with

cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can

provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone

away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000.

They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it

was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing

more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims.

According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested

wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/1/2006):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/homepage.html>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>

- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.hpa.org.uk/radiation>
- US Food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.ctia.org.

Important!: If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, you noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Voice: (301) 496-7243

Email: nidcdinfo@nih.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

National Institute for Occupational Safety and Health

Hubert H. Humphrey Bldg.

200 Independence Ave., SW

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.


The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5

is considered acceptable for normal use. A sum of 6 is considered for best use.

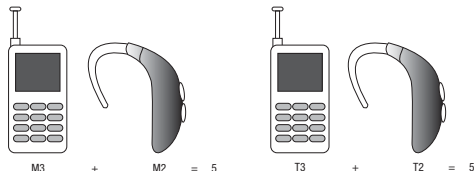

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless phone. "Normal usage" in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules.

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls


This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).

Emergency numbers vary by location.

3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ✓ -Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269. Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call. For more information, refer to *"Disabling Bluetooth or WLAN"* on page 14.
- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all

features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and

lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Section 15: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number

removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service

facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG.

If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY?

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY

OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE

OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT

IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2008 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

A

- ABC mode** 46
- Accessing a Menu Function** 44
- Alert type** 78
- Audio Postcard** 65

B

- Backlight**
 - brightness 18
 - description 17
 - settings 82
- Battery**
 - charging 9
 - installation 8
 - installing 8
 - low indicator 10
- Bluetooth**
 - about 91
 - features 92
 - help 92
 - searching for new devices 91
 - turning bluetooth on and off 91
- Broadcast Messages** 75

C

- Calendar** 106
- Call Barring** 89
- Call Functions** 33
 - adjusting the call volume 34
 - answering a call 35
 - call records 35
 - correcting the Number 33
 - ending a call 33
 - making a call 33
 - making a call from phonebook 34
 - redialing last number 33
 - silent mode 37
- Call Records**
 - all calls 35
 - call time 37
 - delete all 37
 - incoming calls 36
 - missed calls 36
 - outgoing calls 36
- Call Waiting** 41, 89
- Camcorder Options** 129

- Camera** 104, 123
 - taking photos 123
- Camera Shortcuts**
 - shortcut keys 130
- Change password** 85
- Charging battery** 9
- Configuring Picture Options** 124
- Copying a Music file** 122

D

- Delete All** 74
- Deleting Music Files** 118
- Dialing a Number**
 - phonebook 56
 - SIM card 54
- Dialing display** 81
 - background color 81
 - font color 81
 - font size 81
- Display**
 - backlight 17
 - icons 16
- Drafts** 71
- DTMF** 40

E

Entering Text 46

- Changing the Text Entry Mode 46
- using ABC mode 48
- using number mode 50
- using symbol mode 50
- using T9 mode 47

Extra tones 79

F

Factory settings

- restoring 87

Files 95

Flip tone 79

Fun & Apps 95

Functions and Options 38

G

Games 103

- create a new Games folder 103

Getting Started 4

- activating your phone 4
- voice mail 11

H

HAC 148

HAC Mode 84

Health and Safety Information 137

Help 18

HiFi Ringers 77, 95

I

Icons, description 16

Information display 80

Inserting

- memory card 5

Instant Messaging 75

- options 76
- starting 75

International Call 33

K

Keypad Tone 79

L

Lock phone 84

Low battery indicator 10

M

Making a Call

- phonebook 34

MegaTones 77, 95

Memory Card

- inserting 5

Memory Status 74

Menu Navigation 44

Message settings

- picture message 74
- receive settings 74
- send settings 74
- text message 73

Message Tone 78

Messages 61

Messaging

- types of messages 61

Missed Call

- viewing 36

Moving a Music file 121

M-Ratings 149

Multi-Party Call 41

- dropping one participant 43
- private conversation 42
- setting up 42

Music

- copying a music file 122
- moving a music file 121

Music files

moving and copying 121

Music Player 115

adding music 116

assigning 118

assigning alarm tone 121

assigning an individual ringtone 120

assigning ringtone 119

options 115

playing music 117

shortcuts 116

My Album 98, 131**My Journal** 98, 132**My Phone Name** 91**My visibility** 91**N****Network Selection** 90**Network Services**

Call Barring 89

Call Forwarding 88

Call Waiting 89

Network Selection 90

Notes 110**Number mode** 46**O****On/off switch, phone** 10**Options**

during a call 39

making a new call while in a call 39

putting a call on hold 39

Organizer 104

alarm 105

calculator 110

calendar 106

Stopwatch 113

synchronization 112

timer 113

tip calculator 111

unit conversion 112

world time 111

Outbox 72**Own Number** 59**P****Phone**

icons 16

switching on/off 10

Phone Keys 13**Phone Safety** 147**Phone Settings** 83**Phonebook**

searching for a number 40

Photos

Accessing pictures 127

Deleting pictures 128

Picture Message

viewing 69

viewing after receiving 71

Picture Messages 63**PIN**

change PIN code 86

check PIN code 85

PIN2 code

change 86

R**Recording Video** 128**Reset settings** 86**Restore Factory Settings** 87**Ring tone** 77**Ring Volume** 78

S

SAR values 137

Security 84

Security modes 92

Settings 77

 bluetooth 91

 Call Settings 87

 display 80

 phone 83

 reset 86

 security 84

 sound 77

 synchronization 92

 Time & Date 83

Shortcuts 45

SIM card

 installing 4

Soft Keys 38

Software Update 94

Sound Settings

 alert type 78

 extra tones 79

 flip tone 79

 HiFi ringers 77

 incoming call 77

 keypad tone 79

 MegaTones 77

 power on/off tone 79

 ring tone 77

 ring volume 78

Speakerphone 39

Speed Dial

 setting up entries 56

Standard Limited Warranty

 156

Stopwatch 113

Storing a Number

 phone's memory 51

 SIM card 52

Switching on/off

 phone 10

Symbol mode 46

T

T9 mode 46

Take and Send 123

Task List 109

Templates 72

Text input mode

 changing 46

Text Message

 viewing 68

Text Messages 61

Timer 113

Transferring Music Files 118

T-Ratings 149

Travel adapter 9

t-zones 133

 bookmarks 135

 Browser settings 136

 Enter URL 134

 entering Text 134

 exiting 133

 History 135

 home 133

 navigating 134

 Saved pages 135

U

UL Certification 138

Understanding Your Phone 12

closed view 14

open view 12

phone features 12

Understanding Your Phonebook 51

adding a new contact 51

finding a phonebook entry 54

using contact list 51

USB mode 84

V

Videos 99

View tab 16

Voice Mail 11, 73

Voice Note 66

listening 70

W

Warranty Information 156

Wi-Fi

add new network 29

available networks 22

connection 20

help 32

quick connect 26

security key 28



Hearing Aid Compatibility with Mobile Phones

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.