

SGH-T609

P O R T A B L E Q u a d - B a n d

T E L E P H O N E

User Guide

Please read this manual before operating your
phone, and keep it for future reference.

SAMSUNG

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein St.
Richardson, TX 75082	Plano, TX 75074
	Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2006 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.



Printed in Korea.






GH68-08880A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

     

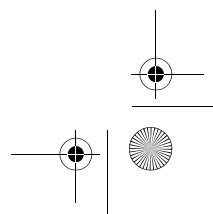
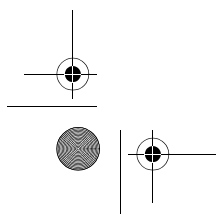
 
 
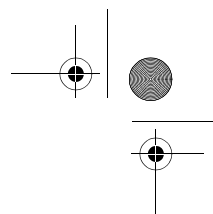
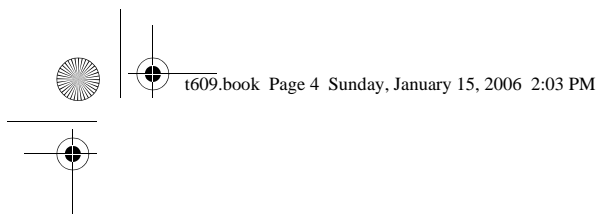


Table of Contents

Section 1: Getting Started	5
Activating Your Phone	6
Switching the Phone On or Off	10
Setting Up Your Voice Mail	11
Section 2: Understanding Your Phone	13
Features of Your Phone	14
View of Your Phone	14
Keys	15
Display Layout	17
Get More Help	19
Section 3: Call Functions	21
Making a Call	22
Adjusting the Call Volume	24
Answering a Call	24
Call Records	25
Silent mode	29
Selecting Functions and Options	29
Section 4: Menu Navigation	37
Menu Navigation	38
Menu Outline	39
Section 5: Entering Text	45
Changing the Text Input Mode	46
Using ABC Mode	47
Using T9 Mode	49
Using Number Mode	51
Using Symbol Mode	51
Section 6: Understanding Your Phonebook	53
Storing a Number in the Phone's Memory	54
Storing a Number in the SIM Card	55






Table of Contents

Finding a Phonebook Entry	57
Speed Dialing	60
Editing a Caller Group	61
Copying all SIM Phonebook Entries	62
Deleting all of the Phonebook Entries	63
My Name Card	64
Finding My Own Phone Number	65
Management	66
Section 7: Messages	69
Voice Notes	70
Text Messages	72
Picture Messages	75
Inbox	78
Sentbox	85
Outbox	85
Drafts	86
Email	87
Templates	88
Voice Mail	89
Delete All	90
Settings	90
Broadcast Messages (SIM Dependent)	92
Instant Messaging	92
Memory Status	93
Section 8: Changing Your Settings	95
Time & Date Settings	96
Phone Settings	97
Display Settings	99
Sound Settings	102
Network Services Settings	104
Bluetooth	108
Security Settings	110

Voice Recognition Settings	113
Reset Settings	115
Section 9: Fun & Apps	117
File Manager	118
Games	127
Audio Player	127
Camera	129
Voice Recognition	130
Organizer	134
PIM Sync ???	144
Section 10: Camera and Camcorder	145
Using the Camera and Camcorder	146
Take and Send	146
Record Video	150
My Photos	152
My Videos	154
My Album	156
My Journal	157
Section 11: t-zones	159
t-zones	160
Section 12: Health and Safety Information ...	165
Health and Safety Information	166
Consumer Information on Wireless Phones	168
Road Safety	178
Operating Environment	180
Using Your Phone Near Other Electronic Devices	180
Potentially Explosive Environments	183
Emergency Calls	184
FCC Notice and Cautions	185
Other Important Safety Information	186
Product Performance	187
Availability of Various Features/Ring Tones	188



Battery Standby and Talk Time	189
Battery Precautions	189
Care and Maintenance	191
Section 13: Warranty Information	193
Standard Limited Warranty	194
Index	201

     

Section 1: Getting Started

Topics Covered

- Activating Your Phone
- Switching the Phone On or Off
- Setting Up Your Voicemail

This section describes how to start using your phone by activating your service and setting up your voice mail.

Section 1

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

If necessary, switch off the phone by holding down the  key until the power-off image displays.

1. Remove the battery cover.

To do so, press the ridged area on the battery cover using your thumb (1) and gently slide it in the direction of the arrow (2). Remove the battery cover.



Activating Your Phone


-
2. Grasp the top of the battery with your finger and lift up in the direction of the arrow (1). Remove the battery.



-
-
3. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.



Note: When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

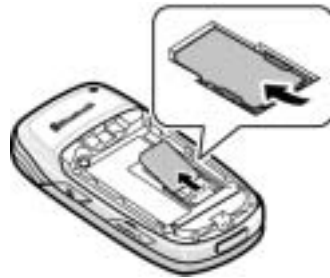

4. Place the battery so that the 3 brass tabs on the end align with the 3 brass prongs at the bottom of the battery compartment (1). The arrow on the battery should be pointing down. Press the battery down until it clicks into place (2).



5. Replace the battery cover. Make sure that the battery is properly installed before switching on the phone.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position in the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.



2. Plug the adapter into a standard AC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you **must** use an adaptor of the proper configuration for the power outlet. Use of the wrong adaptor could damage your phone and void your warranty.

3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector (1) and pulling the connector out (2).




Note: You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator


When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the "Battery low" message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off


1. Open the phone.
2. Press and hold the  key until the phone switches on.

Setting Up Your Voice Mail

3. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN check" on page 110.


The phone searches for your network and after finding it, the name of your service provider appears on your display. Now, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language" on page 97.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.


Setting Up Your Voice Mail

For new users, follow the instructions below to set up voicemail:





1. Open your phone to access the keypad.
2. In Idle mode, press and hold the  key on the keypad.
3. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail





You can access your Voice Mail by pressing and holding the  key on the keypad or by going to the menu. To access Voice Mail using the menu:

1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Call voice mail** and press the **OK** soft key or the  key.
5. Highlight **Voice mail** and press the **OK** soft key or the  key. Your phone dials the specified voice mail number.
6. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, should you need to change the number or add a second Voicer server number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Voice server number** and press the **OK** soft key or the  key. Highlight **Voice mail** and press the **OK** soft key.
5. Press the **Edit** soft key. Edit the number, then press the **OK** soft key. The number will be saved.
6. Press the  key to return to Idle mode.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
- View of Your Phone
- Keys
- Display Layout
- Get More Help

This section outlines some key features of your phone. It also describes the screen and the icons that are displayed when the phone is in use.



Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- 1.3 Megapixel Camera and Camcorder
- Bluetooth® Wireless Technology
- Instant Messaging capability
- Voice Recognition capability
- Multimedia capability
- Fun & Apps feature provides file manager, audio player, games, alarms, calendar, task list, calculator, world time, unit converter, timer, and stopwatch.

View of Your Phone

The following illustrations show the main elements of your phone:



Keys



Keys

The following list correlates to the illustrations.

1. Performs the functions indicated by the screen text on the bottom line of the display.
2. The headset jack is used for the hands-free headset.
3. Makes or answers a call.
In Idle mode, recalls the last number dialed or received when held down.
4. In Idle mode, accesses voice mail when held down.
5. During a call, adjusts the earpiece volume.
In Idle mode with the phone open, adjusts the ring volume. With the phone closed, turns on the external display when held down.
6. Enters special characters. Performs various functions.
7. Plug your battery charger cable or your USB cable here.
8. The microphone used during phone calls and voice note recordings.
9. Enters numbers, letters, and some special characters.

Section 2

10. TransFlash memory card slot. This expansion slot allows you to insert a TransFlash memory card to add additional memory and storage capacity.

11. The Cancel key deletes characters from the display.

In Menu mode, it returns you to the previous menu level.

12. Ends a call. Also switches the phone on and off when held down.

In Menu mode, cancels your input and returns the phone to Idle mode.

13. OK/Select key. In Menu mode, selects the highlighted menu options.

When the Left soft key shows **Options**, it is the short-cut key to select the first option in the options list.

14. Used to launch the camera/camcorder with a press and hold.

15. In Menu mode, scrolls through the menus and Phonebook.

In Idle mode:

- **Down key:** allows you to access your Contact list directly.
- **Up key:** allows you to access the Camera or Camcorder feature directly.
- **Left key:** allows you to access Text messaging directly.
- **Right key:** allows you to access the Voice Recognition feature directly.

When entering text, moves the cursor to the left or right, depending on which side you press.

16. Display area where text and graphics are displayed.

Display Layout







- 17. Used to listen to audio from your phone.
- 18. The external display shows the received signal strength, the phone battery level, the date, and the time.
- 19. The built-in digital camera/camcorder has video capture capabilities.










Display Layout

The display has 4 areas:



Icons

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a TransFlash memory card has been inserted.
-  Appears when a new text message has been received.
-  Appears when a new voice mail has been received.
-  Appears when a new multimedia message has been received.
-  Appears when you set an alarm to ring at a specified time. For details, see page "Alarm" on page 134.

-  Appears when you are out of your service area.
-  Appears when a call is in progress.
-  Appears when the Call Forwarding feature is active. For details, see page "Call forwarding" on page 104.
-  Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.
-  Appears when Silent Mode is active.
-  Appears when Mute is active.
-  Shows the level of your battery. The more bars you see, the more power you have remaining.
-  Appears when Bluetooth wireless technology is active.
-  Appears when t-zones is active.

Section 2

Backlight




A backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

[Get More Help](#)



To specify your Backlight settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Display settings** option and press the **Select** soft key or the  key.
4. Highlight the **Back light** option and press the **Select** soft key or the  key.
5. Highlight the **On** option. Use the **Left** or **Right** Navigation key to select the time that the backlight is on. You may choose between 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
6. Press the Down key to take you to the **Dim** option. Use the **Left** or **Right** Navigation key to select the time that Dimming mode is on. You may choose between Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.
7. Press the **Save** soft key to save your settings.

Get More Help

Get More Help is designed to show you some of the features of your phone using t-zones. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.


1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Using the Navigation keys, scroll to the **Fun & Apps** icon. Press the **Select** soft key or the  key.
3. Highlight the **Get More Help** option. Press the **Select** soft key or the  key.
4. You will enter t-zones and the Get More Help menu will be displayed.

The following options are available:

- **Browse Help Topics:** this option gives you a list of different topics that you can select.
- **Enter a Search:** this option allows you to enter a keyword to search on.
- **About:** this option offers general information about Get More Help including concept and site design, copyright information, and contact email address.

To access the browser options menu:

1. Press the **Menu** soft key to see the Browser Options.
2. Make a selection and press the **Select** soft key or the  key.

Note: The menus may vary, depending on your t-zones subscription.

For more information on browser options, see "Selecting and Using Menu Options" on page 162.


Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Records
 - Silent Mode
 - Selecting Functions and Options
-



This section describes how to make or answer a call. It also includes information on the features and functionality associated with making or answering a call.

Making a Call




When the idlescreen displays, enter the number you wish to dial and press the  key.

Note: When you activate the **Auto redial** option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. See page "Extra settings" on page 98 for further details.


Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number and press the  key.

Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** navigation key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.

Ending a Call


When you want to finish your call, briefly press the  key.


Redialing the Last Number



The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

Making a Call

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

3. Select **All calls** and press the **Select** soft key or the  key.
4. Use the **Up** and **Down** keys to scroll through the numbers and highlight the number you want.
5. To dial the number, press the  key.

Before you dial the number, you may press the **Options** soft key for the following options:

- **Detail:** Displays details of the number including name, number, and dates and times of calls.
- **Call back:** Places a call back to the number.
- **Send message:** Allows you to send a text message, picture message, or voice notes to the number.
- **Save to phonebook:** Stores the number in your phonebook.
- **Delete:** Allows you to delete the number or delete all call records.

Making a Call from the Phonebook

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see "Section 6: Understanding Your Phonebook" on page 53.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.




In Idle mode, you can also adjust the ring volume using these keys while the phone is open.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.


1. If necessary, open the phone. Press the  key or the


Call Records

Accept soft key to answer the incoming call.

If the **Anykey answer** option in the **Extra Settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

If the **Open to answer** option in the **Extra Settings** menu is activated, the call is answered as soon as you open the phone.


Note: To reject an incoming call, press the **Reject** soft key or  key.


2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view Call time records.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, sent, and missed.

The number or name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Note: at any time while you are in Call Records, you may use the **Left** or **Right** Navigation key to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Viewing Missed Calls without Using the Menu

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.


The number of calls you have missed displays on the idle screen immediately after a call is missed.


To view a missed call immediately:

1. If the phone is closed, flip the phone open.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

Call Records

3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
4. To call the number displayed, press the  key.
5. Press the **Options** soft key for the following options:
 - **Detail:** Displays details of the number including name, number, and dates and times of calls.
 - **Call back:** Places a call back to the number.
 - **Send message:** Allows you to send a text message, picture message, or voice notes to the number.
 - **Save to phonebook:** Stores the number in your phonebook.
 - **Delete:** Allows you to delete the number or delete all call records.

You can press the  key at any time to exit the Missed Call feature.

Incoming calls

This menu lets you view the 30 most recent calls you received.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.



Outgoing calls

This menu lets you view the 30 most recent calls you dialed.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the  key to make a check mark.
2. Press the **Delete** soft key to delete the calls.
3. When a confirmation message displays, press the **Yes** soft key or  key to confirm.

Call time

This menu lets you view the time log for calls made and received.

Note: The actual time invoiced by your service provider may differ from times displayed due to network features and service plan.


The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.

To reset a call timer:

1. Use the **Up** or **Down** navigation key to highlight the timer you want to reset.



Silent mode

2. Press the **Reset** soft key. Enter the phone password and then press the **OK** soft key or  key.



Note: The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 111.

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the  key until the "Silent Mode" message and the Silent mode icon () display.

In Silent mode, instead of sounds, your phone will vibrate.

To exit and reactivate the previous sound settings, press and hold the  key again until "Exit silent mode" message appears. The Silent mode icon () no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

Section 3



Press the Left soft key for Menu mode.

Press the Right soft key to access the t-zones menu.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the **OK** key.
3. To view the next function or highlight the next option on a list, press the **Down** Navigation key.
4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **Back** soft key.
6. To exit the menu structure without changing the settings, press the **End** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two

Selecting Functions and Options


options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call


Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Options** soft key, highlight the **Hold call** option, then press the **Select** soft key or the  key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call.

The first call is automatically put on hold.


Or:

1. Press the **Options** soft key and select **Hold call**.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Options** soft key and select **Swap**.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.


When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)


You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key and highlight the **Mute** option.
2. Press the **Select** soft key or the  key. The other person can no longer hear you. The Mute icon is displayed.

To switch the microphone back on:

1. Press the **Options** soft key and highlight the **Unmute** option.
2. Press the **Select** soft key or the  key. The other person can hear you again.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key to turn the Speakerphone on.
2. To turn the Speakerphone off, press the **Spkr off** soft key.


Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.


Send DTMF

You can use the **Send DTMF** option to send a key string or number during a phone call. For example, you can send a calling card number by DTMF while on a call.

1. Press the **Options** soft key.
2. Highlight the **Send DTMF** option and press the **Select** soft key or the  key.
3. Enter a number and press the **OK** soft key. The number is sent.

Searching for a Number in Phonebook



You can search for a number in Phonebook during a call.

1. Press the **Options** soft key.
2. Press the **Down** key to highlight the **Phonebook** option and press the **Select** soft key or the  key.

Your Contact list is listed.

3. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.

Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.



4. To view the highlighted entry, press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the  key. The Contact is displayed.
6. Press the  key to dial the call.


For further details about the Phonebook feature, see "Finding a Phonebook Entry" on page 57.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to **Activate**. You are notified of an incoming call by a call waiting tone. See "Call waiting" on page 106 for more information on setting up Call waiting.

To answer a call while you have a call in progress:

1. Press the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the  key.

To end a call on hold, press the **Options** soft key and select the **End held call** option. Then press the **Select** soft key or the  key.

Selecting Functions and Options





To end the current call, press the  key.


Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.



For further details about subscribing to this service, contact your service provider.

Setting up a Multi-Party Call



1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **Select** soft key or the  key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the  key. Select the **Join** option and press the **Select** soft key or the  key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the  key, and selecting **Join**. Repeat as required.

Having a Private Conversation With One Participant




1. Press the **Options** soft key or the  key and highlight the **Select one** option. Press the **Select** soft key or the  key.

The list of call participants appears.


2. Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Options** soft key.
3. Highlight the **Split** option and press the **OK** soft key.
Now you can talk only to that person. The other participants can continue to converse with each other.
4. To return to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **Select** soft key or the  key.

All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key and highlight the **Select one** option. Press the **Select** soft key or the  key.
The list of call participants appears.
2. Highlight the person you want to keep. Press the **Options** soft key and highlight the **Split** option. Press the **OK** soft key.
3. Press the **Options** soft key or the  key and highlight the **End held multiparty**. Press the **Select** soft key or the  key.

The call with the participant on hold will end, but you can continue to talk to the other participants.

4. When you want to end the multi-party call, close the phone or press the  key.







Section 4: Menu Navigation

Topics Covered

    - Menu Navigation
- Menu Outline




 

 
 
This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.



Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Security** for example, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.



Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their

Menu Outline

shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Security menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Security**.

Section 4

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

- 1 Voice notes**
- 2 Call records**
 - 2.1 All calls
 - 2.2 Missed calls
 - 2.3 Incoming calls
 - 2.4 Outgoing calls
 - 2.5 Delete all
 - 2.6 Call time
- 3 t-zones**
 - 3.1 Home
 - 3.2 Favorites
 - 3.3 Go to URL
 - 3.4 Clear cache

4 Instant Messaging

4.1 AIM

- 4.1.1 Sign on
- 4.1.2 Saved conversations
- 4.1.3 Offline conversations
- 4.1.4 Settings
- 4.1.5 Help

4.2 ICQ

- 4.2.1 Connect
- 4.2.2 Saved conversations
- 4.2.3 Offline conversations
- 4.2.4 Settings
- 4.2.5 Help

4.3 MSN

- 4.3.1 Sign in
- 4.3.2 Saved convers.
- 4.3.3 Offline convers.
- 4.3.4 Preferences
- 4.3.5 Help

4.4 Yahoo!

- 4.4.1 Sign in
- 4.4.2 Saved conversations
- 4.4.3 Offline conversations
- 4.4.4 Settings
- 4.4.5 Help

5 Messages

5.1 Create new

- 5.1.1 Text message
- 5.1.2 Picture message
- 5.1.3 Voice note

5.2 Inbox

5.3 Sent box

Menu Outline



- 5.4 Outbox
- 5.5 Drafts
- 5.6 Email
- 5.7 Templates
- 5.8 Voice mail
 - 5.8.1 Call voice mail
 - 5.8.2 Voice server number
- 5.9 Delete all
- 5.0 Settings
 - 5.0.1 Text message
 - 5.0.2 Picture message
- 5.* Broadcast messages*
- 5.# Memory status

6 Fun & Apps

- 6.1 File manager
 - 6.1.1 Sounds
 - 6.1.2 Images
 - 6.1.3 Videos
 - 6.1.4 Music
 - 6.1.5 Other files
 - 6.1.6 Memory status
- 6.2 Games
- 6.3 Audio player
- 6.4 Camera
 - 6.4.1 Take and send
 - 6.4.2 Record video
 - 6.4.3 My photos
 - 6.4.4 My videos
 - 6.4.5 My Album
 - 6.4.6 My Journal
- 6.5 Voice recognition

6.6 Organizer

- 6.6.1 Alarm
- 6.6.2 Calendar
- 6.6.3 Task
- 6.6.4 Calculator
- 6.6.5 World time
- 6.6.6 Unit conversion
- 6.6.7 Timer
- 6.6.8 Stopwatch

6.7 PIM sync

7 Get More Help

8 Phonebook

- 8.1 Add new contact
- 8.2 Contact list
- 8.3 Group
- 8.4 Speed dial
- 8.5 My name card
- 8.6 Own number
- 8.7 Management
 - 8.7.1 Default saving
 - 8.7.2 Copy all to phone
 - 8.7.3 Sort by contacts
 - 8.7.4 Delete all
 - 8.7.5 Memory status

9 Settings

- 9.1 Time & Date
- 9.2 Phone settings
 - 9.2.1 Language
 - 9.2.2 Greeting message
 - 9.2.3 Volume key

Menu Outline



- 9.2.4 Extra settings
- 9.3 Display settings**
 - 9.3.1 Wallpaper
 - 9.3.2 Info display
 - 9.3.3 Interior display
 - 9.3.4 LCD brightness control
 - 9.3.5 Front LCD contrast control
 - 9.3.6 Back light
 - 9.3.7 Dialing display
 - 9.3.8 Show caller information
- 9.4 Sound settings**
 - 9.4.1 Incoming call
 - 9.4.2 Keypad tone
 - 9.4.3 Message tone
 - 9.4.4 Power on/off
 - 9.4.5 Folder tone
 - 9.4.6 Silent mode
 - 9.4.7 Extra tones
- 9.5 Network services**
 - 9.5.1 Call forwarding
 - 9.5.2 Call barring*
 - 9.5.3 Call waiting
 - 9.5.4 Network selection
 - 9.5.5 Caller ID
- 9.6 Bluetooth**
 - 9.6.1 Turn Bluetooth On/Off
 - 9.6.2 My devices
 - 9.6.3 My visibility
 - 9.6.4 My phone name
 - 9.6.5 Security modes
 - 9.6.6 Features
- 9.7 Security**
 - 9.7.1 PIN check
 - 9.7.2 Change PIN

Section 4

- 9.7.3 Phone lock
- 9.7.4 Change password
- 9.7.5 Privacy
- 9.7.6 FDN mode
- 9.7.7 Change PIN2

9.8 Voice recognition settings

- 9.8.1 Choice lists
- 9.8.2 Sensitivity
- 9.8.3 Digit dialing
- 9.8.4 Sound
- 9.8.5 About

9.0 Reset settings

*** Shows only if supported by your SIM card.**

Section 5: Entering Text

Topics Covered


- Changing the Text Input Mode
- Using ABC Mode
- Using T9 Mode
- Using Number Mode
- Using Symbol Mode

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

When using your phone, you will often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. How many times you press the key determines which letter or number appears.
- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing  can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message.

Using ABC Mode



1. To change the text input mode, press the Right soft key.
2. Each time you press the Right soft key, a different Text input mode indicator will be displayed at the lower right corner of your display.

The following options are available:

Eng: T9 mode

Eng: ABC mode

Eng: Number mode

Eng: Symbol mode

3. When the text input mode indicator that you desire is displayed, you may enter text in the text message box using the selected text input mode.





Using ABC Mode

To use ABC mode, use the number keys to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter

- And so on

2. Select the other letters in the same way.

- To enter periods or hyphens, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

 .@ , - ? ! : () / _ 1

 ABC2

abc2

 DEF3

def3

 GHI4

ghi4

Using T9 Mode

JKL 5

jkl5

MNO 6

mno6

PQRS 7

pqrs7

TUV 8

tuv8

WXYZ 9

wxyz9

+ = < > € £ \$ % & ¥ □ 0

Section 5

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.


Example: To enter "Hello" in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.




Section 5

The word that you are typing appears on the display. It may change with each key that you press.





2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the  key and start entering the next word.





To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the  key to display the alternative words.
2. When you press the  key at the last alternative word, the display shows **Add** on the bottom line. Press the **Add** soft key or the  key.
3. Enter the word you want to add using ABC mode.
4. Press the **OK** soft key or the  key.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

Note: This feature may not be available for some languages.

Using Number Mode



- To enter periods, hyphens, or apostrophes, press the  key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

 
 
 
 
 

 
 
Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the  key.

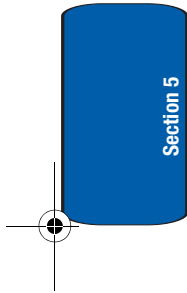

Section 6: Understanding Your Phonebook

Topics Covered

- Storing a Number in the Phone's Memory
 - Storing a Number in the SIM Card
 - Finding a Phonebook Entry
 - Speed Dialing
 - Editing a Caller Group
 - Copying all SIM Phonebook Entries
 - Deleting all of the Phonebook Entries
 - My Name Card
 - Finding My Own Phone Number
 - Management
-

This section describes how to manage your contacts by storing their name and number in your Phonebook. You can save phone numbers to your phone's memory or to your SIM card.

Section 6



Storing a Number in the Phone's Memory

The default for saving phone numbers to your phonebook is your phone's memory. You can also save it to your SIM card or you can set your default so that whenever a new phonebook entry is created, you will be prompted to choose between **Phone** or **SIM card**. See "Default saving" on page 66 for information on how to change this setting.

Also, numbers that have been stored on your SIM card can be copied to your phone's memory.


Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

Section 6

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter your Phonebook.
3. The **Add new contact** option will be highlighted. Press the **Select** soft key or the  key.
4. Enter a first name in the **Name** text box. Tab to the next text box by pressing the **Down** key.
For further details about how to enter characters, see "Using ABC Mode" on page 47.
5. Enter a last name in the text box.
6. Highlight a number Type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.




The following types are available:

Storing a Number in the SIM Card


- **Mobile:** assigns the number entered to the Mobile entry.
 - **Home:** assigns the number entered to the Home entry.
 - **Office:** assigns the number entered to the Office entry.
 - **Fax:** assigns the number entered to the Fax entry.
 - **Other:** allows you to enter more detailed information for the entry.
 - **Email:** assigns the address to the Email entry.
7. Continue to scroll down using the **Down Navigation** key to enter Picture ID, Ringtone, Group, and Notes if desired.
 8. Press the **Save** soft key. The number is saved to your phone and the new contact information is displayed.
 9. To return to the Idle screen, press the  key.

Storing a Number in the SIM Card

The default for saving phone numbers to your phonebook is your phone's memory. To store a number in your SIM card, you need to change the **Default Saving** option first.



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter your Phonebook.
3. Scroll to **Management** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Highlight **Default saving** and press the **Select** soft key or the  key.

Section 6

5. Highlight **SIM card** and press the **Select** soft key or the  key.


Note: You can also set the **Default saving** option to **Ask on saving** in the Management menu. With this option, you will be prompted for storage location each time you add a new contact. See "Default saving" on page 66 for more information.

Now that your phone is set up to store numbers to your SIM card, follow this procedure to store a number.


1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter your Phonebook.
3. Highlight the **Add new contact** option and press the **Select** soft key or the  key.
4. Enter a name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 51.

Note: Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, you will have to enter first and last name in the name field if so desired.

5. Enter the phone number you want to store.
6. Continue to scroll down using the **Down** Navigation key to enter Picture ID, Ringtone, or Group if desired. To select one of these options, press the  key.


Finding a Phonebook Entry

7. When you are finished, press the **Save** soft key or the  key. The number is saved in your SIM card.

After storing, the phone displays the Phonebook entry you just created.

8. Press the **Options** soft key for the following options:

- **Edit**: allows you to edit the name and number fields in the entry.
- **Send message**: allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call**: allows you to call the number.
- **Copy to**: allows you to copy the number to your Phone, SIM card or FDN.
- **Send name card via**: allows you to send your name card via Text message or Picture message.
- **Assign speed dial**: allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete**: allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.



9. To return to the Idle screen, press the  key.

Section 6


Finding a Phonebook Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Contact list** and press the **Select** soft key or the  key.

Note: Steps 1-3 can be bypassed by pressing the **Down** navigation key while in Idle mode.

4. Enter the first few letters of the name in the text box.
The Phonebook entries are listed, starting with the first entry matching your input.
5. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
6. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:
 - **View:** shows details of the Phonebook entry.
 - **Edit:** allows you to edit the contents of your contact.
 - **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
 - **New contact:** takes you to the New Contact menu.
 - **Call:** places a call to the number.

Finding a Phonebook Entry

- **Copy to:** allows you to copy the contact to your Phone or SIM card.
- **Copy all to phone:** allows you to copy all numbers stored on your SIM card to your phone
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the selected name and number from your Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.
- **Language select:** allows you to select between English, French, or Spanish.

7. If you select the **View** option, press the **Options** soft key after the contact information is displayed, for these additional options:

- **Edit:** allows you to edit the name and number fields in the entry. You can also add email address and notes.
- **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call:** places a call to the number.
- **Copy to:** allows you to copy the number to your phone, SIM card or FDN.
- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.




After viewing one Phonebook entry, you can scroll through all Phonebook entries by pressing the **Right** or **Left** Navigation keys.

Speed Dialing


Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing and holding the associated numeric key.

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries



 

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Scroll to **Speed dial** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Use the **Up** or **Down** Navigation key to select the number key to which you wish to assign the speed-dialing number. Select from the **2** to **9** keys, and press the **Options** soft key.
5. Highlight the **Add** option and press the **Select** soft key or the  key.

Editing a Caller Group

6. Your Contact list will be displayed. Highlight the number you wish to assign the speed dial to and press the **Select** soft key or the  key.
7. The number will be assigned to your speed dial.


Note: Memory location 1 is reserved for your Voice mail server number and cannot be changed.

Editing a Caller Group

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Group** option and press the **Select** soft key or the  key.
4. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
5. Highlight the group you want and press the **Options** soft key.
6. Highlight the **Edit** option and press the **Select** soft key or the  key.
7. To edit the Caller group name, modify the text in the **Name** text box.
8. To change the image associated with the Caller group, press the **Down** key to highlight the Picture ID icon. Press the  key.

The following options are available:


- **Take picture:** allows you to take a picture with your camera.
- **My photos:** allows you to choose a photo from My photos folder.
- **My downloads:** allows you to choose a photo from your downloaded images folder.
- **Icons:** allows you to choose from pre-defined icons
- **Do not assign:** removes any image that was previously used and sets to Not assigned status.

9. To change the ringtone associated with the Caller group, press the **Down** key to highlight the Ringtone icon. Press the  key.

The following options are available:

- **Default sounds:** allows you to choose between 25 different melodies.
- **My sounds:** allows you to assign a Ringtone from your My sounds folder.
- **Music:** allows you to assign a Ringtone from your Music list.
- **Do not assign:** removes any Ringtone that was previously used and sets to Not assigned status.

10. When you are finished, press the **Save** soft key. Your Caller group settings will be saved.



 
11. Press the  key to return to Idle mode.

Copying all SIM Phonebook Entries

You can copy all SIM entries to the Phone using this option. When you copy entries to the phone, duplicate entries are created in your Phonebook.

1. In Idle mode, press the **Menu** soft key to access Menu mode.

Deleting all of the Phonebook Entries



2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Management** and press the **Select** soft key or the  key.
4. Highlight **Copy all to phone** and press the **Select** soft key or the  key.
5. After receiving the **Copy all to phone?** confirmation message, press the **Yes** soft key.





Note: Options are available for entries stored to your phone that are not available when stored to the SIM card. For details see "Storing a Number in the Phone's Memory" on page 54.

Deleting all of the Phonebook Entries



You can delete all your entries from your phone's memory, your SIM card, or both.

Important! Once Phonebook entries have been deleted, they cannot be recovered.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Management** and press the **Select** soft key or the  key.


4. Scroll to **Delete all** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
5. Press the  key to place a check mark by the memory location you want to empty; All, Phone, or SIM card.
You can remove the check mark by pressing the  key again.
6. Press the **Delete** soft key. Enter your password and press the **OK** soft key or the  key.

Note: The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 111.



7. When the **Delete all?** confirmation message appears, press the **Yes** soft key or the  key.
8. To cancel the deletion, press the **No** soft key.
9. When you are finished, press the  key to return to Idle mode.

My Name Card

My Name Card allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.




Finding My Own Phone Number



3. Highlight **My name card** and press the **Select** soft key or the  key.
4. My Name Card opens with the **Name** field highlighted.
5. Enter information in each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
6. When finished, press the **Options** soft key and highlight the **Save** option. Press the **Select** soft key or the  key.
7. Your Name Card will be saved.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Phonebook** icon. Press the **Select** soft key or the  key to enter the menu.
3. Select the **Own number** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Highlight the **Number 1** option and press the **Options** soft key or the  key.

5. Highlight the **Edit** option and press the **Select** soft key or the  key.
6. Your phone number is displayed. You may edit the name and number if you wish. Press the **Save** soft key or the  key.

Management

The Management menu allows you to select where your contacts will be saved, copy your SIM contacts to your phone, sort your contacts, delete your contacts, or check your memory status.

Default saving

The Default saving option allows you to choose where your contacts will be saved. The following options are available:

- **Phone:** new phonebook contacts will be saved to your phone.
- **SIM card:** new phonebook contacts will be saved to your SIM card.
- **Ask on saving:** you will be prompted to choose between **Phone** or **SIM card** whenever you save a new contact.

Copy all to phone

This option allows you to copy all contacts from your SIM card to your phone. For more information, see "Copying all SIM Phonebook Entries" on page 62.

Sort by contacts

This options allows you to have your contacts sorted by first name or last name.

Management

Note: Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, they will be sorted on the first letter of the name entered in the **Name** field.

Delete all







This option allows you to delete your contacts. You may delete from All, Phone, or SIM card. For more information, see "Deleting all of the Phonebook Entries" on page 63.

Important! Once contact entries have been deleted, they cannot be recovered.

Memory status

You can check how many names and numbers are stored in the Phonebook, in both SIM card and the phone memory. You can also see the capacity of both memories. Your phone memory can hold up to 1000 contacts and your SIM card can hold up to 250 contacts.

      Section 6



Section 7: Messages

Topics Covered

- Voice Notes
- Text Messages
- Picture Messages
- Inbox
- Sentbox
- Outbox
- Drafts
- Email
- Templates
- Voice mail
- Delete All
- Settings
- Broadcast Messages (SIM Dependent)
- Instant Messaging
- Memory Status

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages


Your phone provides the following message types:

- Voice Notes
- Text Messages
- Picture Messages
- Voice Mail Messages
- Email
- Broadcast Messages (SIM Dependent)
- Instant Messaging


 

Voice Notes

In this menu, you can record a voice note of up to one minute long and then immediately send it by Picture message.

When you access this menu, a timer appears on the screen.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Voice notes** icon. Press the **Select** soft key or the  key to enter the menu.
3. Press the **Record** soft key to start recording.
4. Record a memo by speaking into the microphone.
The display shows the elapsed time and the remaining time at one time.
5. When you are finished, press the **Stop** soft key. Or, when the recording time is expired, the display switches to the next screen.


Voice Notes

6. The Voice note is saved to your Voice list.
7. Press the **Options** soft key for the following options:
 - **Send**: allows you to send the Voice note.
 - **Play**: plays back your Voice note.
 - **Re-record**: discards the Voice note and enables you to record another one.
 - **Set default destination**: allows you to remove or edit the default destination.
 - **Save**: saves the Voice note and continues to the **Send** option.
8. To send the Voice note, press the **Send** soft key or select the **Send** option in the **Options** menu and press the **Select** soft key or the  key.
9. Highlight one the following options:
 - **Recent log**: allows you to select a number or an address from the 20 last destinations you entered for sending the last messages.
 - **Phonebook**: allows you to enter the phone number you want from your phonebook. Use the  key to check the selected entries.
 - **Phone number**: allows you to enter a phone number.
 - **Email address**: allows you to enter an email address to send the voice note to.
 - **My Album**: allows you to send the voice note to My Album.
 - **My Journal**: allows you to send the voice note to My Journal.
10. Press the **Select** soft key or the  key.
11. Select where you would like to send your voice note and it will be entered in the **Send** menu in a **To** field.

12. To add another destination, select an empty **To** field and press the **Options** soft key.

Note: When entering multiple destinations, you can also choose **Add group**, **Change recipient**, and **Back** options in addition to the other send options.


13. Repeat from step 9. You can enter up to 20 destinations.

14. When you have finished entering the destinations, press the **Options** soft key, highlight the **Send** option and press the **Select** soft key or the  key.

Your phone sends the message and saves the message in the Sentbox.

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Message icon () appears, you have received new text messages. When the memory is full, the message icon will flash on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

Use the **Delete** option in each message box to delete obsolete messages.

Create new


In this menu, you can write and send a text message.


Creating a Simple Text Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the **[OK]** key to enter the menu.
3. Highlight the **Create new** option and press the **Select** soft key or the **[OK]** key.
4. Highlight the **Text message** option and press the **Select** soft key or the **[OK]** key.
5. Create your message.

Notes: For further details about entering characters, see "Section 5: Entering Text" on page 45.
You can enter up to 1836 characters in a text message.


6. When you finish entering your message, press the **Options** soft key. The following options are available:
 - **Send:** allows you to send the message.
 - **Insert text via:** allows you to insert Text templates, Phonebook, or Favorites. The Text templates option allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages template menu. Phonebook allows you to add names and phone numbers to your message. Favorites allows you to add Internet addresses to your message.
 - **Add content:** allows you to add a picture, animation, or melody to your message.

- **Attach:** allows you to attach a Name card, Schedule, Anniversary, Miscellaneous, or To do items to your message.
- **Save to drafts:** save the message to your Phone or SIM.
- **Language select:** allows you to set the language to English, French, or Spanish.
- **Text style:** allows you to format the style of the text. For the Text size, Large, Medium, and Small size are available. Text mode options are Normal, Underline, and Strikethrough. The options for Bold and Italic are set by using the  key to place a checkmark by them. Alignment options are Left, Center, and Right.
- **Back:** allows you save to your draft folder without sending.

7. Highlight the **Send** option and press the **Select** soft key or the  key.

8. Highlight one of the following options:

- **Recent log:** allows you to select from recipients of your previous messages.
- **Phonebook:** allows you to select the phone number(s) you want from your phonebook.
- **Phone number:** allows you to enter a number to send your message to.

9. If you chose **Recent log** or **Phonebook**, use the  key to place checkmarks next to the entry or entries you want your message sent to and press the **Send** soft key.


10. If you chose **Phone number**, enter the number in the **To** text box.

11. To add another destination, select an **Empty** option and press the **Options** soft key.

Picture Messages

Note: When entering multiple destinations, you can also choose **Group** and **Save to Drafts** options in addition to the other send options.

12. Repeat from step 8. You can enter up to 20 destinations.

13. When you have finished entering the destinations, press the **Options** soft key, highlight the **Send** option and press the **Select** soft key or the  key.

Your phone sends the text message. After sending, the message is saved in the Sentbox.

Picture Messages

This menu allows you to use the Multimedia Message Service.

Picture Messaging is a messaging service that provides delivery of personal multimedia messages from phone to phone or from phone to email.






In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. A Picture Messaging message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, videos, sounds and images you downloaded from the Internet and voice notes you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.




Create new

This menu allows you to create a new multimedia message and send to one or multiple destinations.


Creating and Sending a Multimedia Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Create new** option and press the **Select** soft key or the  key.
4. Highlight the **Picture message** option and press the **Select** soft key or the  key.
5. Highlight **Subject** and press the  key.
6. Enter the subject of your message and press the  key.






Note: For more information about entering characters, see "Section 5: Entering Text" on page 45.


7. To add a picture or video clip, highlight the **Image & Video** option and press the  key.
8. Highlight **Add Image** or **Add video** and press the **Select** soft key or the  key.
9. Select an image or video from the various options available.
10. Press the **Options** soft key. Highlight the **Add** option and press the **Select** soft key or the  key to add it to your message.

Picture Messages

11. To add a sound, highlight the **Sound** option and press the  key.

Note: if you attached a video clip to your message, you will not be able to add audio to the message.





12. Highlight the **Add Sound** option and press the **Select** soft key or the  key.
13. Select a Sound or Voice note from the various options and press  key. Press the **Add** soft key to add the sound to your message.
14. To add a message, highlight **Message** and press the  key.
15. Enter your message and press the  key.
16. When you have finished creating the message, press the **Options** key and highlight the **Send** option. Press the **Select** soft key or the  key.
17. Highlight one of the following options:
 - **Recent log:** allows you to select from recipients of your previous messages.
 - **Phonebook:** allows you to enter the phone number you want from your phonebook.
 - **Phone number:** allows you to enter a phone number.
 - **Email address:** allows you to enter an email address.
 - **My Album:** allows you to send the message to the My Album folder.
 - **My Journal:** allows you to send the message to My Journal.

18. After selecting where to send your message, press the **Options** soft key and highlight the **Send** option. Press the **Select** soft key or the  key. Your phone sends the message.

Inbox

The Inbox stores messages that you have received. You can tell what kind of message it is by the icon displayed. If the icon envelope is open then the message has been read, otherwise it will appear closed.

The following types of messages may appear in your inbox:



-  Voice notes
-  Text messages
-  Multimedia messages
-  Push messages

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Phonebook. After you have read the message, the envelope in the icon will appear opened.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.

Inbox

 
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Inbox** option and press the **Select** soft key or the  key.

Viewing a Text Message in Inbox

1. Select a text message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the text message.
- **Reply via:** allows you to send a reply to the sender by sending a text or picture message.
- **Call back:** places a call to the selected number.
- **Delete:** deletes the selected text message or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.

2. Highlight the **View** option and press the **Select** soft key or the  key to read the message contents.
3. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a text message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message.
- **Call back:** places a call to the selected number.
- **Forward:** allows you to forward the message to another number.

- **Delete:** allows you to delete the message.
- **Move to phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.
- **Move to SIM card:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the media in a message.
- **Protection:** allows you to lock the message to protect it from being deleted.


Viewing a Picture Message in Inbox

1. Highlight a picture message from the list and press the **Options** soft key.

The following options will appear:

- **View:** read the picture message.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Delete:** deletes the selected picture message or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- **Protection:** allows you to lock the message to protect it from being deleted.

Inbox

- **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.
2. Highlight the **View** option and press the **Select** soft key or the  key to read the message contents.
 3. To scroll through the contents, press the **Up** or **Down** Navigation key.

While viewing a picture message, you may choose the following options by pressing the **Options** soft key:


- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Forward:** allows you to forward the message to another number.
- **Delete:** allows you to delete the message.
- **Replay:** allows you to view the message again.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the picture or video to your My downloads folder.
- **Protection:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as subject, who the message was from, message size, transaction ID, msg class, MMS version, who the message was to, priority, and date and time message was received.

Viewing a Voice Note in Inbox

1. Highlight a Voice note from the list and press the **Options** soft key.

The following options will appear:

- **Play:** listen to the voice note and view message details.
- **Reply via:** allows you to send a reply to the sender by sending a picture message, text message, or voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.
- **Call back:** places a call to the selected number.
- **Delete:** allows you to delete the selected Voice note or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- **Protection:** allows you to lock the Voice note to protect it from being deleted.
- **Properties:** shows you information about the Voice note, such as time and date the Voice note was received, the sender's email address or phone number, recipient's email address or phone number, Cc, Voice note size, priority, and class.

2. Highlight the **Play** option and press the **Select** soft key or the  key to listen to the message contents.

While listening to the message, you may choose the following options by pressing the **Options** soft key:

- **Reply via:** allows you to send a reply to the sender by sending a text or picture message or a voice note.
- **Reply all via:** allows you to send a reply to All by sending a picture message or voice note.

Inbox

- **Forward:** allows you to forward the message to another number.
- **Delete:** allows you to delete the voice note.
- **Replay:** allows you to listen to the voice note again.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media:** allows you to save the message to different areas or to your vCard or vCalendar.
- **Protection:** allows you to lock the message to protect it from being deleted.
- **Properties:** shows you information about the message, such as time and date the message was received, the sender's email address or phone number, recipient's email address or phone number, Cc, message size, priority, and class.

Viewing a Push Message in Inbox


A Push message is a way of delivering content (e.g. images, ringtones, etc.) to mobile phones that are WAP enabled. With a Push message you don't actually send the content in the text message, you direct the mobile phone where to get it from.

1. Select a Push message from the list and press the **Options** soft key.

The following options will appear:

- **View:** listen to the Voice note and view message details.
- **Delete:** allows you to delete the selected message or all messages.
- **Sort by:** allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.

- **Protection:** allows you to lock the message to protect it from being deleted.



2. Highlight the **View** option and press the **Select** soft key or the  key to view the message contents.

While reading the message, you may choose the following options by pressing the **Options** soft key:

- **Go to URL:** allows you to go to the website on your WAP browser.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Delete:** allows you to delete the message.
- **Protection:** allows you to lock the message to protect it from being deleted.

Viewing a Message When You Receive It

When a new multimedia message comes in, the display shows the Picture Messaging Message icon.

1. Press the **View** soft key to view the message.
Press the **Exit** soft key if you want to view the message later in the Inbox.
2. Press the **Options** soft key or the  key to access the various options described above.
3. When you are finished, press the  key.




Sentbox

Sentbox

This message box stores messages that you have sent.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Sentbox** option and press the **Select** soft key or the  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the  key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.




While viewing a message, you can choose different options by pressing the **Options** soft key.

Outbox

This message box stores messages that you have attempted to send but have not actually been sent yet.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Outbox** option and press the **Select** soft key or the  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **View** option and press the **Select** soft key or the  key to view the message contents.
6. To scroll through the contents, press the **Up** or **Down** Navigation key.

While reading a message, you can choose different options by pressing the **Options** soft key.




Drafts

This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

Email


Note: By pressing the **Left** or **Right** Navigation keys, you may scroll between Inbox, Sentbox, Outbox, and Drafts.




1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Drafts** option and press the **Select** soft key or the  key.
4. Select a message from the list and press the **Options** soft key.
5. Highlight the **Edit** option and press the **Select** soft key or the  key to edit the message contents.
6. To send the message, press the **Options** soft key and highlight the **Send** option.

While viewing a draft message, you can choose different options, depending on the type of message, by pressing the **Options** soft key.

Email

The Email option allows you to directly access various email services.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.

3. Highlight the **Email** option and press the **Select** soft key or the  key.
4. At the **Use network?** screen, select an option using the  key and press the **OK** soft key.
5. After reading the Welcome screen, press the **Next** soft key.
6. Highlight the email services you would like to access using the **Up** or **Down** Navigation key. Press the  key to mark your selection(s).
7. Press the **Save** soft key.
8. A list of your selections will be displayed. Highlight the email service you wish to use and press the **Menu** soft key.

The following options are available:

- **Sign In:** allows you to sign in to the email service.
 - **Edit Services:** allows you to select another email service.
 - **About:** displays information about the email service.
9. Highlight the **Sign In** option and press the **Select** soft key.
 10. Continue to follow screen prompts until you have signed in to your email service.




Section 7

Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.



1. In Idle mode, press the **Menu** soft key to access Menu mode.

Voice Mail

2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Templates** option and press the **Select** soft key or the  key.
4. Highlight the sentence you wish to have inserted and press the  key. The sentence will be placed in a text message display.
You can choose from ten predefined sentences that you can add to your text message to save time.
5. Continue to write your text message. For more information, see "Creating a Simple Text Message" on page 73.



Voice Mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Messages** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Voice mail** option and press the **Select** soft key or the  key.

The following options are available:

- **Call voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **Select**


soft key or the  key to listen to your messages. You can also connect to the voice server by pressing and holding the  key in Idle mode.

- **Voice server number:** allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. Please contact your service provider for further details.

Delete All

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

1. To select a message box to clear, press the **Up** or **Down** Navigation key. To delete all of your messages, select the **All** option.
2. To place or remove a check mark, press the  key.
3. Press the **Delete** soft key to delete the marked objects.
4. After you receive a confirmation message, press the **Yes** soft key to delete the selected message box contents. Otherwise, press the **No** soft key.

Settings

In this menu, you can set up default text message, picture message, and push message information. The last setting you accessed is automatically activated for sending subsequent messages.

[Settings](#)

Text message

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number will always appear in the Send list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** when this option is checkmarked, the network informs you whether or not your message has been delivered.

Picture message

The following options are used to set Send and Receive settings for Picture messages.

Send Settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** The expiration date is how long the message receiver has to retrieve the message.
- **Delivery time:** you can set a delay time before the phone sends your messages.

Section 7

Retrieve Settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** allows you to receive advertisements.
- **Report allowed:** you can set the option to receive a delivery report.

Broadcast Messages (SIM Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.



Please contact your service provider for further details.

Instant Messaging

Instant Messaging (IM) is a way of sending short, simple messages that are delivered immediately to users online at that moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

Starting your Instant Messaging

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Instant messaging** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the messenger service to which you subscribed using the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.

Memory Status

4. Highlight the **Sign on**, **Connect**, or **Sign in** option, depending on your messenger service and press the **Select** soft key or the  key.
5. Enter the required sign on information such as ID and password and press the **OK** soft key.

Note: The information required for sign on will vary depending on the instant messaging provider you are using.

6. Follow the on-screen instructions to read, reply to, compose, send, and manage your IM account.

Using the Instant Messenger Options

On the sign-on screen of the messenger, press the **Options** soft key to access the following options:

 
 
 
 
- **Sign on/Connect/Sign in:** allows you to login to your IM account.
- **Saved conversations:** shows permanent records of your IM conversations.
- **Offline conversations:** shows dynamic records of your last 10 IM conversations.
- **Settings:** allows you to change your Default community and Community settings.
- **Help:** provides various help information depending on the community you have selected.

Memory Status

You can check the amount of the memory being used and the memory remaining for text, picture, broadcast, and push messages.



The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.



Section 8: Changing Your Settings

Topics Covered

- Time & Date Settings
- Phone Settings
- Display Settings
- Sound Settings
- Network Services Settings
- Bluetooth
- Security Settings
- Voice Recognition Settings
- Reset Settings

This section explains the sound and phone settings for your phone. It includes display settings, security settings, and extra settings associated with your phone.

Section 8



Time & Date Settings

This menu allows you to change the current time and date displayed.

The following options are available:

- **Set time:** allows you to change the hour and minute.
- **AM/PM:** allows you to set either AM or PM.
- **Time format:** allows you to select whether your time is displayed in 12 hour or 24 hour format.
- **Set date:** allows you to enter the month, day, and year.
- **Date format:** allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.
- **Auto update:** allows you to receive time information from your service provider's network.
 - **On:** the phone automatically updates the time and date according to the current time zone using the network service.
 - **Confirm first:** the phone asks for a confirmation before the update.
 - **Off:** you need to manually set the time and date according to the current time zone using the Set time menu.

To change your time and date settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the  key to enter the menu.
3. Highlight the **Time & Date** options and press the **Select** soft key or the  key.

Phone Settings

4. Use the **Up** or **Down** Navigation key to select the option you wish to change.
5. To set **Set time** or **Set date**, use the **Left** or **Right** navigation key to position the cursor over the number you wish to change.
6. Enter the desired number.
7. To change other options, use the **Left** or **Right** navigation key to select the desired setting.
8. When you are finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Back** soft key.

Section 8

Note: Automatic updates of time and date do not change the time you have set for alarm settings or calendar memos.

Phone Settings

You can customize various phone settings.

Language

This menu allows you to select a display language for Text language and Input mode. Choose from English, French, and Spanish.

Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see "Section 5: Entering Text" on page 45.



Volume key

This menu allows you to set how your volume key will operate when you receive an incoming call. The following options are available:

- **Mute:** when this option is selected, the volume keys will act as a Mute button to turn the sound off when you receive a call.
- **Reject:** when this option is selected, the volume keys will act as a Reject button to reject a call when it is received.

Extra settings



 
You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, highlight the feature and press the  key. A check mark displays in front of the option.
2. To turn a feature off, highlight the checked feature and press the  key. The check mark no longer displays.

The following options are available:

- **Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between call attempts varies.

- **Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key or the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key. When this option is unchecked, you must press the  key or **Accept** soft key to answer a call.
- **Open to answer:** when this option is checked, you can simply open the phone to answer a call. When it is unchecked,

Display Settings

you must open the phone and press a key to answer a call, depending on the setting of the **Anykey answer** option.

3. When you have finished changing your settings, press the **Save** soft key to save your settings. Otherwise press the **Back** soft key.

Display Settings

In this menu, you can change various settings for the display or backlight.

Wallpaper

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.


The following options are available:

- **Get more wallpaper:** this option takes you to t-zones where you can download wallpapers.

Note: When downloading wallpapers, charges may apply.

- **Default wallpapers:** allows you to choose from a list of wallpapers included with your phone.
- **My downloads:** allows you to choose a photo from your downloaded images folder.
- **My photos:** allows you to choose a photo from My photos folder.

To change the background image:

1. After selecting one of the above options, scroll through the list by pressing the Navigation keys and select an image.
2. Press the **Select** soft key or the  key.

3. The image will be saved as your wallpaper.

Info display

This menu allows you to set text style and text color. Press the **Left** or **Right** Navigation key to change the settings.

Interior display

You can select the color of the menus displayed. There are two different patterns to choose from.

LCD brightness control

You can adjust the display brightness to see it better in different lighting conditions.

Press the **Left** or **Right** Navigation key or press the **Volume** keys to adjust the brightness.

Front LCD contrast control

You can adjust the contrast of the external display screen.

Press the **Left** or **Right** Navigation key or press the **Volume** keys to adjust the contrast.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.