

SGH-t719

P O R T A B L E Q u a d - B a n d T E L E P H O N E

User Guide

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2006 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Printed in Korea.

GH68-08581A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	7
Activating Your Phone	7
Switching the Phone On or Off	10
Setting Up Your Voice Mail	10
Section 2: Your Phone	13
Features of Your Phone	13
View of Your Phone	14
Keys	15
Display Layout	16
Section 3: Call Functions	19
Making a Call	19
Adjusting the Call Volume	21
Answering a Call	21
Accessing Call Records	22
Switching Silent Mode	24
Selecting Functions and Options	25
Section 4: Menu Navigation	31
Menu Navigation	31
Menu Outline	33
Section 5: How to Enter Text	35
Changing the Text Input Method	35
Understanding Keypad Functions	37
Using the Multi-tap Input Method	37
Using the SureType™ Input Method	39
Entering Numbers and Special Characters	39
Section 6: Phonebook	41
Storing a Number	41
Finding a Phonebook Entry	43
Speed Dialing	44
Managing Caller Groups	45
Copying all SIM Phonebook Entries	46
Deleting all of the Phonebook Entries	47

Creating My Name Card	47
Setting My Own Phone Number	48
Checking the Memory Status	48
Section 7: BlackBerry Messaging	49
Composing and Sending a Text Message	49
Composing and Sending a Picture Message	51
Composing and Sending a PIN message	52
Sending a Voice Note Message	53
Composing and Sending an Email	54
Accessing Messages	54
Using Text Templates	58
Searching for Messages	58
Section 8: Other Messaging	59
Voice Notes	59
Voice Mail	61
Broadcast Messages (SIM dependent)	61
Instant Messaging	61
Section 9: Settings	65
Changing Settings	65
Time & Date Settings	66
Phone Settings	66
Display Settings	68
Sound Settings	70
Network Services Settings	72
Bluetooth	74
Security Settings	76
Voice Recognition Settings	77
Reset Settings	78
Message Settings	79
Section 10: Applications	83
Setting Up BIS	83
Using Alarm	84
Using File Manager	85
Using Calculator	90
Playing Games	90
Using Voice Recognition	91
Viewing World time	94

Using a Converter	95
Using the Timer	95
Using the Stopwatch	96
Synchronizing PIM Data	96
Accessing Help	97
Using the Calendar	98
Section 11: Camera and Camcorder	101
Taking a Photo	101
Recording a Video	104
Accessing Photos or Videos	106
Section 12: t-zones	109
Accessing the Homepage of t-zones	109
Using Favorites	111
Accessing a Website by Entering a URL address	112
Clearing the Cache	112
Section 13: Health and Safety Information	113
Exposure to Radio Frequency (RF) Signals	113
Consumer Information on Wireless Phones	114
Road Safety	120
Operating Environment	121
Using Your Phone Near Other Electronic Devices	121
Potentially Explosive Environments	123
Emergency Calls	123
FCC Notice and Cautions	124
Other Important Safety Information	125
Product Performance	125
Availability of Various Features/Ring Tones	126
Battery Standby and Talk Time	126
Battery Precautions	127
Care and Maintenance	128
Section 14: Warranty Information	131
Standard Limited Warranty	131
Index	135

Section 1: Getting Started

Topics Covered

- Activating Your Phone
 - Switching the Phone On or Off
 - Setting Up Your Voice Mail
-

This section describes how to start using your phone by activating your service and setting up your Voice Mail.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

 
Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by pressing and holding the  key until the power-off image displays.

1. Remove the battery.


To do so, press the ridged area on the battery using your thumb (1) and gently lift it in the direction of the arrow (2). Remove the battery.

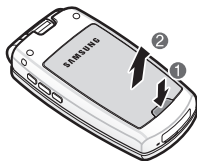

 
- Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card are face down.

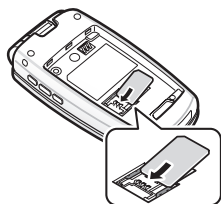

 Note: When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

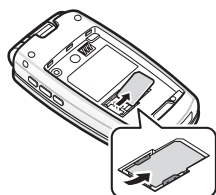

 - Replace the battery. Place the three tabs into the three holes located on the back of the phone (1). Press the battery into place (2).

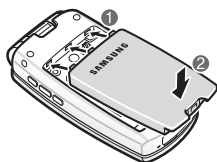

Make sure that the battery is properly installed before switching on the phone.

 
Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position in the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

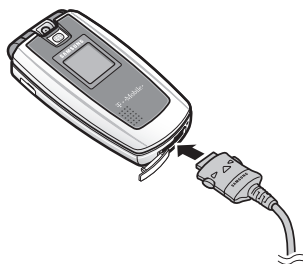

2. Plug the travel adapter into a standard AC wall outlet.

Note: For connection to an electrical supply not located in the U.S., you must use an adapter of the proper configuration for the power outlet. Use of the wrong adapter could damage your phone and void your warranty.

3. When charging is finished, unplug the travel adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector (1) and pulling the connector out (2).



Note: You must unplug the travel adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the "Warning low battery" message repeats at regular intervals on the display. When this happens, your phone turns off the backlight to conserve the remaining battery power.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Open the phone.
2. Press and hold the  key until the phone switches on.
3. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN check" on page 76.

The phone searches for your network and after finding it, the Idle screen appears. Now, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the **Language** menu. For further details, see "Language" on page 66.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail

For new users, follow the instructions below to set up voicemail:

1. Open your phone to access the keypad.
2. In Idle mode, press and hold  on the keypad.
3. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can access your Voice Mail box by pressing  on the keypad or by going to the menu. To access Voice Mail using the menu:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Applications** and press the **Select** soft key or the  key.
3. Highlight **Utilities** and press the **Select** soft key or the  key.
4. Highlight **Voice mail** and press the **Select** soft key or the  key.
5. Highlight **Call voice mail** and press the **OK** soft key or the  key. Your phone dials the specified voice mail number.
6. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, if you need to change the number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Applications** and press the **Select** soft key or the  key.
3. Highlight **Utilities** and press the **Select** soft key or the  key.
4. Highlight **Voice mail** and press the **Select** soft key or the  key.
5. Highlight **Voice server number** and press the **OK** soft key or the  key.
6. Edit the number and press the **OK** soft key. The number will be saved.
7. Press the  key to return to Idle mode.

Section 2: Your Phone

Topics Covered

- Features of Your Phone
 - View of Your Phone
 - Keys
 - Display Layout
-

This section outlines some key features of your phone. It also describes the screen and the icons that are displayed when the phone is in use.


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- Blackberry® Email
- 1.3 Megapixel camera and camcorder
- Bluetooth® Wireless Technology
- Web browser
- Instant Messaging capability
- Voice Recognition capability
- Applications feature provides file manager, games, alarms, calendar, calculator, world time, unit converter, timer, stopwatch, and PIM Sync.

View of Your Phone

The following illustrations show the main elements of your phone:

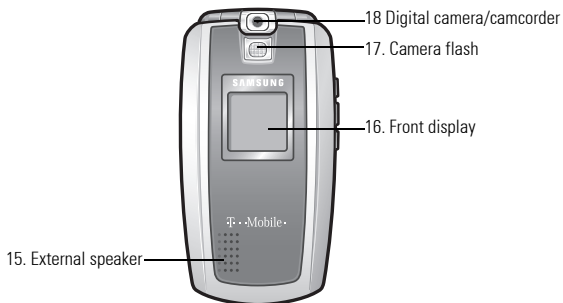 

Keys

The following list correlates to the illustrations.

1. **Navigation keys:** In Menu mode, scrolls through the menus and Phonebook.

In Idle mode:

- **Up key:** allows you to access the Camera or Camcorder feature directly.
- **Down key:** allows you to access the **Contacts list** menu directly.
- **Left key:** allows you to access the **Messages** menu directly.
- **Right key:** allows you to launch the Voice Recognition feature directly.

 
When entering text, moves the cursor to the left or right, depending on which side you press.

2. **Soft key:** Performs the functions indicated by the screen text on the bottom line of the display.
3. **Headset jack:** Is used for the hands-free headset.
4. **Dial key:** Makes or answers a call.
In Idle mode, dials the last number dialed or received when held down.
5. **Alphanumeric keypad:** Enters numbers, letters, and some special characters.
 - 1:** In Idle mode, accesses voice mail when held down.
 - ***: Inserts a pause (P) when held down while entering a phone number.
 - 0:** In Idle mode, inserts an international call prefix when held down.
 - #:** In Idle mode, enters or exits Silent mode.
6. **Travel adapter/PC data cable jack:** Plug your travel adapter for charging the battery, or your PC data cable for a connection with a PC here.
7. **Microphone:** This is used during phone calls and voice note recordings.
8. **Cancel/delete key:** Deletes characters from the display.
In Menu mode, it returns you to the previous menu level.
9. **Power on/off/menu exit key:** Ends a call. Also switches the phone on and off when held down.
In Menu mode, cancels your input and returns the phone to Idle mode.
10. **Voice Recognition/confirm key:** In Idle mode, initiates voice recognition when held down.
In Menu mode, selects the highlighted menu option when held down.
11. **Volume keys:** During a call, adjusts the earpiece volume.
In Idle mode with the phone open, adjusts the ring volume. With the phone closed, turns on the external display when held down.

12. **Web access/confirm key:** In Idle mode, launches the WAP (Wireless Application Protocol) browser.
- In Menu mode, selects the highlighted menu option.
- When the Left soft key shows **Options**, it is the short-cut key to select the first option in the options list.
13. **Main display:** Display area where text and graphics are displayed.
14. **Earpiece:** Is used to listen to audio from your phone.
15. **External speaker:** Speaker used for Speakerphone mode.
16. **Front display:** Shows the received signal strength, the phone battery level, the date, and the time.
17. **Camera flash:** Used to take pictures when light is not adequate.
18. **Digital camera/camcorder:** The built-in digital camera/camcorder has image/video capture capabilities.

Display Layout

The display has four areas:

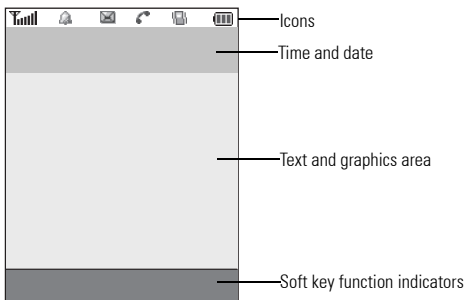

Icons



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Appears when you are out of your service area.



Appears when a call is in progress.



Appears when you set an alarm to ring at a specified time. For details, see "Using Alarm" on page 84.



Appears when a new text message has been received.



Appears when a new multimedia message has been received.



Appears when a new voice mail has been received.



Appears when the Call Forwarding feature is active. For details, see page "Call forwarding" on page 72.



Appears when PIM synchronization is in progress.



Appears when you set the phone to vibrate when you receive a call.



Appears when Silent mode is active.



Appears when Mute mode is active.



Shows the level of your battery. The more bars you see, the more power you have remaining.



Appears when BlackBerry is active ???

Backlight

A backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Backlight** menu. The display turns off after one minute to conserve battery power.

To specify your Backlight settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key or the **Enter** key to enter the menu.

3. Highlight **Display settings** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **ⓘ** key.
4. Highlight **Backlight** and press the **Select** soft key or the **ⓘ** key.
5. Highlight **On**. Use the **Left** or **Right** Navigation key to select how long the backlight stays on. You may choose between 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
6. Press the **Down** Navigation key to take you to **Dim**. Use the **Left** or **Right** Navigation key to select how long the display stays on after the backlight turns off. You may choose between Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.
7. Press the **Save** soft key to save your settings.

Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Accessing Call Records
 - Switching Silent Mode
 - Selecting Functions and Options
-

This section describes how to make or answer a call. It also includes information on the features and functionality associated with making or answering a call.

Making a Call

When the idle screen displays, enter the number you wish to dial and press the  key.

Note: When you activate the **Auto redial** option from the **Extra settings** menu in **Phone settings**, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to Voice Mail. See page "Extra settings" on page 67 for further details.

Making an International Call

1. Press and hold . The **+** character appears.
2. Enter the country code, area code, and phone number and press the  key.

Correcting the Number

1. To clear the last digit displayed, press .
2. To clear any other digit in the number, press the **Left** or **Right** Navigation key until the cursor is immediately to the right of the digit to be cleared. Press . You can also enter a missing digit.
3. To clear the whole display, press and hold .

Ending a Call

When you want to finish your call, briefly press the  key or close the phone.

Redialing the Last Number

The phone stores the numbers of the calls you have dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. In Idle mode, press the  key.
2. Use the **Up** and **Down** Navigation keys to scroll through the numbers and highlight the number you want.
3. To dial the number, press the  key.

Before you dial the number, you may press the **Options** soft key for the following options:

- **Detail:** displays details of the number including name, number, and dates and times of calls.
- **Call back:** places a call back to the number.
- **Send message:** allows you to send a text message, picture message, or voice notes to the number.
- **Save to phonebook:** stores the number in the Phonebook.
- **Delete:** allows you to delete the number or delete all call records.

For further details about call records, see "Accessing Call Records" on page 22.

Making a Call from the Phonebook

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see "Section 6: Phonebook" on page 41.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the right side of the phone.

Press the ▲ key to increase the volume level and the ▼ key to decrease the level.



In Idle mode, you can also adjust the ring volume using these keys while the phone is open.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image. The caller's phone number, or name if stored in Phonebook, displays.

1. If necessary, open the phone. Press the ☞ key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option from the **Extra Settings** menu in **Phone Settings** is activated, you can press any key to answer a call except for the ☞ key and the **Reject** soft key.

If the **Open to answer** option from the **Extra Settings** menu in **Phone Settings** is activated, the call is answered as soon as you open the phone.

Note: To reject an incoming call, press the **Reject** soft key or ☞ key.

2. End the call by closing the phone or pressing the ☞ key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Accessing Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view call time records.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

The following Call Record options are available:

All calls

This menu lets you view the most recent calls you have received, sent, and missed.

The number and name, if already stored in the Phonebook, displays with the number of occurrences of each number.

Note: At any time while you are in Call Records, you may use the **Left** or **Right** Navigation key to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

Missed calls

This menu lets you view the most recent calls you have received, but did not answer.

The number and name, if already stored in the Phonebook, displays with the number of occurrences of each number.

Viewing Missed Calls without Using the Menu

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, flip the phone open.
2. Press the **View** soft key.
The number corresponding to the most recent missed call displays, if available.
3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.

4. To call the number displayed, press the  key.
5. Press the **Options** soft key for the following options:
 - **Detail:** Displays details of the number including name, number, and dates and times of calls.
 - **Call back:** Places a call back to the number.
 - **Send message:** Allows you to send a text message, picture message, or voice notes to the number.
 - **Save to phonebook:** Stores the number in the Phonebook.
 - **Delete:** Allows you to delete the number or delete all call records.
6. Press the  key to return to Idle mode.

Incoming calls

This menu lets you view the most recent calls you have received.

The number and name, if already stored in the Phonebook, displays with the number of occurrences of each number.

Outgoing calls

This menu lets you view the most recent calls you have dialed.

The number and name, if already stored in the Phonebook, displays with the number of occurrences of each number.

Delete all

This menu allows you to delete all of the records in each call type separately. You can also delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the  key to make a check mark.
2. Press the **Delete** soft key.
3. When a confirmation message displays, press the **Yes** soft key or the  key to confirm.

Call time

This menu lets you view the time log for calls you have made or received.

Note: The actual time invoiced by your service provider may differ from times displayed due to network features and service plan.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. This information cannot be cleared.

To reset a call timer:

1. Use the **Up** or **Down** Navigation key to highlight the timer you want to reset.
2. Press the **Reset** soft key. Enter the phone password and then press the **OK** soft key or the  key.

Note: The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 76.

Switching Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold  until the "Silent mode" message and the Silent mode icon () display.

In Silent mode, instead of making sounds, your phone will vibrate.

To exit and reactivate the previous sound settings, press and hold  again until "Exit silent mode" message appears. The Silent mode icon () no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and change the settings of a particular function.

Using Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.



Press the Left soft key to access **Menu** mode.

Press the Right soft key to access the **Phonebook** menu.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press a desired soft key.
2. Use the Navigation keys to highlight a menu.
3. To select the function displayed or the option highlighted, press the **Select** soft key or the .
4. To view the next function or highlight the next option on a list, press the **Down** Navigation key.
5. To move back to the previous function or option on a list, press the **Up** Navigation key.
6. To move back up one level in the menu structure, press the **Back** soft key.
7. To exit the menu structure without changing the settings, press the .

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Options** soft key, highlight **Hold call**, then press the **Select** soft key or the  key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call.

The first call is automatically put on hold.

You can also do as follows:

1. Press the **Options** soft key and highlight **Hold call**.
2. Press the **Select** soft key or the  key.
3. Make the second call in the normal way.

Answering a Second Call

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call waiting** menu to **Activate**. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the **Accept** soft key or the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the  key.
3. To end a call on hold, press the **Options** soft key and select **End held call**. Then press the **Select** soft key or the  key.
4. To end the current call, press the  key.

Switching Between Two Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Options** soft key and select **Swap**.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key and highlight **Mute**.
2. Press the **Select** soft key or the  key. The other person can no longer hear you. The Mute icon  is displayed.

To switch the microphone back on:

1. Press the **Options** soft key and highlight **Unmute**.
2. Press the **Select** soft key or the  key. The other person can hear you again. The Mute icon  is no longer displayed.

Using the Speakerphone

While on a call, you can activate the Speakerphone feature to listen and speak to the phone without holding it to your ear:

1. Press the **Spkr on** soft key to turn Speakerphone mode on.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

Muting or Sending Key Tones

You can turn the key tones off or on.

1. Press the **Options** soft key.
2. Highlight **Mute keys** or **Send keys** and press the **Select** soft key or the  key.

If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

Sending DTMF Tones

You can use the **Send DTMF** option to send a key string or number during a phone call. For example, you can send a calling card number by DTMF while on a call.

1. Press the **Options** soft key.
2. Highlight **Send DTMF** and press the **Select** soft key or the **ⓘ** key.
3. Enter a number and press the **OK** soft key. The number is sent.

Searching for a Number in the Phonebook

You can access the Phonebook and search for a number during a call.

1. Press the **Options** soft key.
2. Highlight **Phonebook** and press the **Select** soft key or the **ⓘ** key.
The contact list is displayed.
3. Enter the name that you wish to find in the text box located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.
You can also use the **Up** or **Down** Navigation key to highlight the contact that you desire.
4. To view the highlighted entry, press the **Options** soft key.
5. Highlight **View** and press the **Select** soft key or the **ⓘ** key. The contact information is displayed.
6. Press the **↶** key to dial the call.

For further details about the Phonebook feature, see "Finding a Phonebook Entry" on page 43.

Making a Multi-party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

To set up a multi-party call:

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key and highlight **Join**. Press the **Select** soft key or the **ⓘ** key.

- To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the  key. Highlight **Join** and press the **Select** soft key or the  key.

You can add incoming callers by answering the call and pressing the **Options** soft key and selecting **Join**. Repeat as required.

To have a private conversation with one participant:

- Press the **Options** soft key and highlight **Select one**. Press the **Select** soft key or the  key.
The list of call participants appears.
- Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Options** soft key.
- Highlight **Split** and press the **OK** soft key.
Now you can talk only to that person. The other participants can continue to converse with each other.
- To return to the multi-party call, press the **Options** soft key or the  key and highlight **Join**. Press the **Select** soft key or the  key.
All of the multi-party call participants can now hear each other.

To disconnecting one participant:

- Press the **Options** soft key and highlight **Select one**. Press the **Select** soft key or the  key.
The list of call participants appears.
- Highlight the person you want to keep.
- Press the **Options** soft key and highlight **Split**. Press the **OK** soft key.
- Press the **Options** soft key or the  key and highlight **End held multiparty**. Press the **Select** soft key or the  key.
The call with the participant on hold will end, but you can continue to talk to the other participants.
- When you want to end the multi-party call, close the phone or press the  key.

Section 4: Menu Navigation

Topics Covered

- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Security** for example, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.

If the menu that you have selected contains further options, repeat this step.

4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key or the  key.
6. To return to the previous menu level, press the **Back** soft key or .
7. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the **Security** menu.

1. Press the **Menu** soft key.
2. Press  for **Settings**.
3. Press  for **Security**.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

1 Voice notes (See page 59)

2 Camera (See page 101)

- 2.1 Take and send
- 2.2 Record video
- 2.3 My photos
- 2.4 My videos
- 2.5 My Album
- 2.6 My Journal

3 Call records (See page 22)

- 3.1 All calls
- 3.2 Missed calls
- 3.3 Incoming calls
- 3.4 Outgoing calls
- 3.5 Delete all
- 3.6 Call time

4 Instant Messaging (See page 61)

5 BlackBerry (See page 49)

6 Calendar (See page 98)

7 t-zones (See page 109)

- 7.1 Home
- 7.2 Favorites
- 7.3 Go to URL
- 7.4 Clear cache

8 Applications (See page 83)

- 8.1 Search messages
- 8.2 Alarm
- 8.3 File manager
 - 8.3.1 Sounds
 - 8.3.2 Images
 - 8.3.3 Videos
 - 8.3.4 Other files
 - 8.3.5 Memory status
- 8.4 Calculator
- 8.5 Games
- 8.6 Utilities
 - 8.6.1 Voice recognition
 - 8.6.2 World time
 - 8.6.3 Converter
 - 8.6.4 Timer
 - 8.6.5 Stopwatch
 - 8.6.6 Voice mail
- 8.7 PIM sync
- 8.8 Get More Help
- 8.9 SIM-AT

9 Settings (See page 65)

- 9.1 Time & Date
- 9.2 Phone settings
 - 9.2.1 Language
 - 9.2.2 Greeting message
 - 9.2.3 Volume key
 - 9.2.4 Extra settings
 - 9.2.5 Side key
- 9.3 Display settings
 - 9.3.1 Wallpaper
 - 9.3.2 Info display
 - 9.3.3 Interior display
 - 9.3.4 LCD brightness control

- 9.3.5 Front LCD contrast control
- 9.3.6 Backlight
- 9.3.7 Dialing display
- 9.3.8 Show caller information
- 9.4 Sound settings
 - 9.4.1 Incoming call
 - 9.4.2 Keypad tone
 - 9.4.3 Message tone
 - 9.4.4 Power on/off
 - 9.4.5 Folder tone
 - 9.4.6 Silent mode
 - 9.4.7 Extra tones
- 9.5 Network services
 - 9.5.1 Call forwarding
 - 9.5.2 Call barring*
 - 9.5.3 Call waiting
 - 9.5.4 Network selection
 - 9.5.5 Caller ID
- 9.6 Bluetooth
 - 9.6.1 Turn Bluetooth On/Off
 - 9.6.2 My devices
 - 9.6.3 My visibility
 - 9.6.4 My phone name
 - 9.6.5 Security modes
 - 9.6.6 Bluetooth features
- 9.7 Security
 - 9.7.1 PIN check
 - 9.7.2 Change PIN
 - 9.7.3 Change password
 - 9.7.4 FDN mode
 - 9.7.5 Change PIN2
- 9.8 Voice recognition settings
 - 9.8.1 Choice lists
 - 9.8.2 Sensitivity
 - 9.8.3 Digit dialing
 - 9.8.4 Sound
 - 9.8.5 About
- 9.9 Reset settings
- 9.10 Message settings
 - 9.10.1 Email
 - 9.10.2 Text message
 - 9.10.3 Picture message
 - 9.10.4 Broadcast message
 - 9.10.5 Calendar view mode
 - 9.10.6 BlackBerry options

* Shows only if supported by your SIM card.

Section 5: How to Enter Text

Topics Covered

- Changing the Text Input Method
 - Understanding Keypad Functions
 - Using the Multi-tap Input Method
 - Using the SureType™ Input Method
 - Entering Numbers and Special Characters
-

This section describes how to select the desired text input method when entering characters into your phone. This section also describes how to use the SureType™ Input Method to reduce the number of key strokes associated with entering text.

 
Changing the Text Input Method

When using your phone, you will often need to enter text, such as when writing a message, storing a name in the Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **SureType™ Input Method:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing  can enter G or H. However, the SureType™ input method automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the Multi-tap input method.
- **Multi-tap Input Method:** this method allows you to enter letters by pressing the key labeled with the letter you want. How many times you press the key determines which letter or number appears.

When you are in a field that allows characters to be entered, you will notice the text input method indicator on the display.

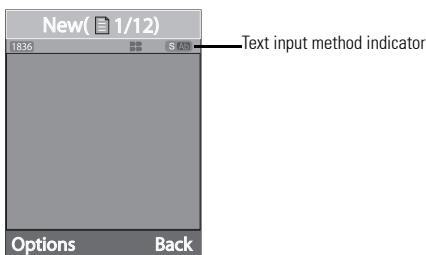

1. To change the text input method, press and hold .

 
Each time you press and hold , a different text input method indicator will be displayed at the upper right corner of your display.

The following options are available:

- : Multi-tap Input Method
 - : SureType™ Input Method
2. When the text input method indicator that you desire is displayed, enter text in the message box using the selected text input method.
 3. To change the case of the text before you type, press and hold . The text input method indicator will change to show which case has been selected as shown below. The following options are available for both text input methods:
 - : All upper-case letters. For example, **SAMSUNG**.
 - : All lower-case letters. For example, **samsung**.
 - : Leading upper-case. For example, **Samsung**.

Understanding Keypad Functions

This phone features a QWERTY keypad which is similar to most typewriters and computer keyboards.

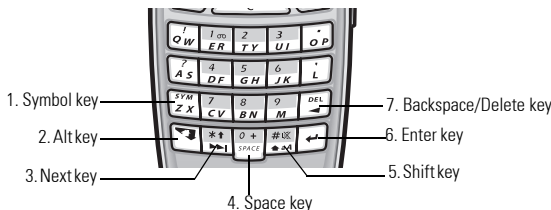

1. **Symbol key:** Press this key to access a list of symbols and special characters after pressing the Alt key.
2. **Alt key:** Press this key before pressing a key to have that character displayed on the upper half of each alphanumeric key.
3. **Next key:** Press this key to highlight the next word choice in SureType™ mode. Also used for special characters.
4. **Space key:** Press this key to insert blank spaces between words.
5. **Shift key:** This key functions as a Caps Lock.
6. **Enter key:** This key functions as a Carriage return.
7. **Backspace/Delete key:** Press this key to delete or backspace.

Using the Multi-tap Input Method

To use the Multi-tap input method, use the keypad to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter
2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys



First press is **Q** or **q**, second press is **W** or **w**.



First press is **E** or **e**, second press is **R** or **r**.



First press is **T** or **t**, second press is **Y** or **y**.



First press is **U** or **u**, second press is **I** or **i**.



First press is **O** or **o**, second press is **P** or **p**.



First press is **A** or **a**, second press is **S** or **s**.



First press is **D** or **d**, second press is **F** or **f**.



First press is **G** or **g**, second press is **H** or **h**.



First press is **J** or **j**, second press is **K** or **k**.



First press is **L** or **l**. No second press is needed.



First press is **Z** or **z**, second press is **X** or **x**.



First press is **C** or **c**, second press is **V** or **v**.



First press is **B** or **b**, second press is **N** or **n**.



First press is **M** or **m**. No second press is needed.

You can move the cursor by using the Navigation keys. To delete letters, press . Press and hold  to clear the display.

Using the SureType™ Input Method

The SureType™ Input Method is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in the SureType™ Input Method:

1. Start entering a word by pressing the numeric keys. Press each key only once for each letter.

Example: To enter “Hello” in T9 mode, press the following keys:



H E L L O

The word that you are typing appears on the display. It may change with each key that you press. The word choices for your key presses appear on the soft key indicator field. You can select another word by pressing the **Left** or **Right** Navigation key or .

2. Enter the whole word before editing or deleting the keystrokes.

If the word does not display correctly, a list of alternative words will appear at the bottom of the display. Use the navigation keys to highlight the word you desire and press the key.

3. Confirm the word by pressing the Right soft key or insert a space by pressing and start entering the next word.

The SureType™ Input Method applies grammar rules to ensure that correct punctuation is used.

You can move the cursor by using the Navigation keys. To delete letters, press . Press and hold to clear the display.

Entering Numbers and Special Characters

In either text input method, to enter numbers, symbols, and special characters, follow these steps:

- To enter numbers, press , and then the desired number key.

Note: After pressing , release it before pressing another key.

- To enter a period, press , and then press .
- To enter a comma, press , and then press .
- To enter an exclamation mark, press , and then press .
- To enter a question mark, press , and then press .

- To enter other symbols, press , and then press . A numbered list of symbols and special characters is listed. Enter the number corresponding to the desired character and press the **OK** soft key.
- By pressing  multiple times you can enter the following characters: **@ . , ? ! ' : () /**

Section 6: Phonebook

Topics Covered

- Storing a Number
 - Finding a Phonebook Entry
 - Speed Dialing
 - Managing Caller Groups
 - Copying all SIM Phonebook Entries
 - Deleting all of the Phonebook Entries
 - Creating My Name Card
 - Setting My Own Phone Number
 - Checking the Memory Status
-

This section describes how to manage your contacts by storing their name and number in your Phonebook.

Storing a Number

You can store phone numbers and their corresponding names on your SIM card or phone's memory. They are physically separate but are used as a single entity, called Phonebook. Also, numbers that have been stored on your SIM card can be copied to your phone's memory.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your contact list.

Changing the Default Saving Location

The default for saving phone numbers to your phonebook is your phone's memory. You can also save it to your SIM card or you can set your default so that whenever a new phonebook entry is created

To change the default memory location, do as follows:

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Management** and press the **Select** soft key or the **ⓘ** key.
3. Highlight **Default saving** and press the **Select** soft key or the **ⓘ** key.

4. Highlight **Phone, SIM**, or **Ask on saving** and press the **Select** soft key or the  key.

If you select **Ask on saving**, you will be prompted to choose between **Phone** or **SIM card** each time you try to store a number in the Phonebook.

5. To return to the Idle screen, press the  key.

Storing a Number in the Phone's Memory

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Add new contact** and press the **Select** soft key or the  key.
3. Enter a first name in the **First name** text box. Tab to the next text box by pressing the **Down** key.
For further details about how to enter characters, see "Using the Multi-tap Input Method" on page 37.
4. Enter a last name in the text box.
5. Highlight a number type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

- **Mobile**: assigns the number entered to the Mobile entry.
 - **Home**: assigns the number entered to the Home entry.
 - **Office**: assigns the number entered to the Office entry.
 - **Fax**: assigns the number entered to the Fax entry.
 - **Other**: allows you to enter more detailed information for the entry.
 - **Email**: assigns the address to the Email entry.
6. Continue to scroll down using the **Down** Navigation key to set a picture ID, ringtone, group, memo, and PIN if desired.
 7. Press the **Save** soft key. The number is saved to your phone and the new contact information is displayed.
 8. To return to the Idle screen, press the  key.

Storing a Number on the SIM Card

The default for saving phone numbers to the Phonebook is your phone's memory. To store a number on your SIM card, you need to change the default saving location to **SIM** first. For details, see page 41.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Add new contact** and press the **Select** soft key or the  key.

3. Enter a name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using the Multi-tap Input Method" on page 37.

Note: Contacts stored to your SIM card do not have first and last names as separate fields. Therefore, you will have to enter first and last name in the name field if so desired.

4. Enter the phone number you want to store.

Note: To set a picture ID, ringtone, or group, you must save the number in the phone's memory.

5. Press the **Save** soft key or the  key. The number is saved on your SIM card.
After storing, the phone displays the Phonebook entry you just created.
6. To return to the Idle screen, press the  key.

Finding a Phonebook Entry

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Contacts list** and press the **Select** soft key or the  key.

Note: Steps 1 to 3 can be bypassed by pressing the Down navigation key while in Idle mode.

3. Enter the first few letters of the name in the text box.
The Phonebook entries are listed, starting with the first entry matching your input.
4. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.
5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:
 - **View:** shows details of the Phonebook entry.
 - **Edit:** allows you to edit the contents of your contact.
 - **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
 - **Add new contact:** allows you to add a Phonebook entry.
 - **Call:** places a call to the number.
 - **Copy to:** allows you to copy the contact to your phone's memory or SIM card.
 - **Copy all to phone:** allows you to copy all numbers stored on your SIM card to your phone.

- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
 - **Delete:** allows you to delete the selected name and number from the Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.
 - **Language select:** allows you to select between English, French, or Spanish.
6. If you select the **View** option, press the **Options** soft key after the contact information is displayed, for these additional options:
- **Edit:** allows you to edit the name and number fields in the entry. You can also add email address and notes.
 - **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
 - **Call:** places a call to the number.
 - **Copy to:** allows you to copy the number to your phone's memory, SIM card, or FDN.
 - **Send name card via:** allows you to send the selected Phonebook entry as a digital name card format (VCF) via Text message, Picture message, or Bluetooth.
 - **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
 - **Delete:** allows you to delete the name and number from the Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

After viewing one Phonebook entry, you can scroll through all Phonebook entries by pressing the **Right** or **Left** Navigation keys.

Speed Dialing

Once you have stored phone numbers from the Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing and holding the associated numeric key.

Setting Up Speed Dial Entries

1. At the Idle screen, press the **Ph.book** soft key.
2. Scroll to **Speed dial** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **Ⓟ** key.
3. Use the Navigation key to select the number key to which you wish to assign the speed-dialing number. Select one from the **2** to **9** keys, and press the **Options** soft key.

4. Highlight **Add** and press the **Select** soft key or the **Ⓢ** key.
5. Your Contact list will be displayed. Highlight the entry you wish to assign the speed dial to and press the **Select** soft key or the **Ⓢ** key.
6. If the entry has more than one number, highlight the one you want and press the **Select** key of the **Ⓢ** key.

The number will be assigned to your speed dial.

Note: Memory location 1 is reserved for your Voice Mail server number and cannot be changed.

Dialing a Speed Dial entry

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Managing Caller Groups

The Phonebook provides you with caller groups to allow you to organize your contacts by category. You can edit the properties of those caller groups or create a new caller group.

Editing a Caller Group

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Group** and press the **Select** soft key or the **Ⓢ** key.
3. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
4. Highlight the group you want and press the **Options** soft key.
5. Highlight **Edit** and press the **Select** soft key or the **Ⓢ** key.
6. To edit the caller group name, modify the text in the **Name** text box.
7. To change the image associated with the caller group, press the **Down** key to highlight the Picture ID icon. Press the **Ⓢ** key.

The following options are available:

- **Take a photo:** allows you to take a photo with your camera.
- **My photos:** allows you to choose one of the photos in the **My photos** folder.
- **Downloaded images:** allows you to choose one of the downloaded images.
- **Icons:** allows you to choose one of the embedded icons.
- **Do not assign:** removes any image that was previously used and sets to **Not assigned** status.

8. To change the ringtone associated with the Caller group, press the **Down** key to highlight the Ringtone icon. Press the **⌵** key.

The following options are available:

- **Default sounds:** allows you to choose one of 30 different melodies.
- **Downloaded sounds:** allows you to assign one of the ringtones in the **My sounds** folder.

9. When you are finished, press the **Save** soft key. Your caller group settings will be saved.
10. Press the **⏪** key to return to Idle mode.

Adding a new group

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Group** and press the **Select** soft key or the **⌵** key.
3. Press the **Options** soft key.
4. Enter a group name.
5. Set a picture ID and ringtone, and save the group by following from step 7 in "Editing a Caller Group" on page 45.

Copying all SIM Phonebook Entries

You can copy all SIM entries to the phone's memory using this option. When you copy entries to the phone's memory, duplicate entries are created in the Phonebook.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Management** and press the **Select** soft key or the **⌵** key.
3. Highlight **Copy all to phone** and press the **Select** soft key or the **⌵** key.
4. After receiving the **Copy all to phone?** confirmation message, press the **Yes** soft key.

Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, or both.

Important! Once Phonebook entries have been deleted, they cannot be recovered.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Management** and press the **Select** soft key or the  key.
3. Highlight **Delete all** and press the **Select** soft key or the  key.
4. Press the  key to place a check mark by the memory location you want to empty; **All, Phone, or SIM card**.

You can remove the check mark by pressing the  key again.

5. Press the **Delete** soft key.
6. Enter your password and press the **OK** soft key or the  key.

Note: The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 76.

7. When the **Delete all?** confirmation message appears, press the **Yes** soft key or the  key.
To cancel the deletion, press the **No** soft key.
8. When you are finished, press the  key to return to Idle mode.

Creating My Name Card

My Name Card allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **My name card** and press the **Select** soft key or the  key.
The name card screen opens with the **First name** field highlighted.
3. Enter information in each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
4. When finished, press the **Options** soft key and highlight **Save**. Press the **Select** soft key or the  key. Your name card will be saved.

Setting My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so. You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Own number** and press the **Select** soft key or the **Ⓜ** key.
3. Highlight **Number 1** and press the **Options** soft key..
4. Highlight **Edit** and press the **Select** soft key or the **Ⓜ** key.

Your phone number is displayed.

5. Edit the name and number if you wish, and press the **Save** soft key or the **Ⓜ** key.
6. Press the **⏪** key to return to Idle mode.

Checking the Memory Status

You can check how many names and numbers are stored in the Phonebook both on the SIM card and in the phone's memory. You can also see the capacity of both memories.

1. At the Idle screen, press the **Ph.book** soft key.
2. Highlight **Management** and press the select soft key or the **Ⓜ** key.
3. Highlight **Memory status** and press the **Select** soft key or the **Ⓜ** key.

Memory information in each storage location appears.

4. Press the **⏪** key to return to Idle mode.

Section 7: BlackBerry Messaging

Topics Covered

- Composing and Sending a Text Message
 - Composing and Sending a Picture Message
 - Composing and Sending a PIN message
 - Sending a Voice Note Message
 - Composing and Sending an Email
 - Accessing Messages
 - Using Text Templates
 - Searching for Messages
 - Searching for Messages
-

This section describes how to send or receive BlackBerry messages. It also includes the features and functionality associated with messaging.

BlackBerry is a mobile system which allow you to quickly and easily compose messages on the phone with the advanced keyboard technology to support the enhanced messaging features required.

BlackBerry provides the following message types:

- Text messages
- Picture messages
- PIN messages
- Voice note message
- Email

Composing and Sending a Text Message

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple graphics, melodies, and animated images in your messages.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the  key to enter the menu.

3. Press the **Compose** soft key or the **Left** Navigation key.
4. Highlight **Text message** and press the **Select** soft key or the **Ⓢ** key.
5. Enter the message text.

Notes: For further details about entering characters, see "Section 5: How to Enter Text" on page 35.

6. When you finish entering your message, press the **Options** soft key. The following options are available:
 - **Send:** allows you to send the message.
 - **Insert text via:** allows you to insert text templates, Phonebook entries, or URL addresses in Favorites. The **Text templates** option allows you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages template menu. **Phonebook** allows you to add names and phone numbers to your message. **Favorites** allows you to add Internet addresses to your message.
 - **Add content:** allows you to add a picture, animation, or melody to your message.
 - **Attach:** allows you to attach a name card to your message.
 - **Save to drafts:** saves the message as a draft for sending at a later time.
 - **Language select:** allows you to set the language to English, French, or Spanish.
 - **Text style:** allows you to format the style of the text.
For the text size, **Large**, **Medium**, and **Small** size are available. Text mode options are **Normal**, **Underline**, and **Strikethrough**. The options for **Bold** and **Italic** are set by using the **Ⓢ** key to place a check mark by them. Alignment options are **Left**, **Center**, and **Right**.
7. Highlight **Send** and press the **Select** soft key or the **Ⓢ** key.
8. Highlight one of the following options and press the **Select** soft key or the **Ⓢ** key:
 - **Recent log:** allows you to select one of the recipients of your previous messages.
 - **Phonebook:** allows you to select a phone number from the Phonebook.
 - **Phone number:** allows you to manually enter a phone number.
9. If you chose **Recent log**, use the **Ⓢ** key to place check marks next to the entries you want your message sent to and press the **Add** soft key.
If you chose **Phonebook**, highlight the entry you want and press the **Select** soft key or the **Ⓢ** key.
If you chose **Phone number**, enter the number in the **To** text box.
10. To add another destination, enter a number in the **To** text box, or press **Options** soft key, select **Recent log**, **Add address book**, or **Add group**, and select the entries you want.
11. When you have finished entering the destinations, press the **Options** soft key, highlight **Send** and press the **Select** soft key or the **Ⓢ** key. Your phone sends the message.

Composing and Sending a Picture Message

Picture Messaging is a messaging service that provides delivery of personal multimedia messages from phone to phone or from phone to email.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. A Picture Messaging message is a multimedia presentation in a single file. It is not a text file with attachments.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. Press the **Compose** soft key.
4. Highlight **Picture message** and press the **Select** soft key or the **ⓘ** key.
5. Highlight **Subject** and press the **ⓘ** key.
6. Enter the subject of your message and press the **ⓘ** key.

Note: For more information about entering characters, see "Section 5: How to Enter Text" on page 35.

7. To add a picture or video clip, highlight **Image & Video** and press the **ⓘ** key.
8. Highlight **Add Image** or **Add video** and press the **Select** soft key or the **ⓘ** key.
9. Select an image or video file from the various options available.
10. Press the **Options** soft key. Highlight **Add** and press the **Select** soft key or the **ⓘ** key to add it to your message.
11. To add a sound, highlight **Sound** and press the **ⓘ** key.

Note: if you attached a video clip to your message, you will not be able to add audio to the message.

12. Highlight **Add Sound** and press the **Select** soft key or the **ⓘ** key.
13. Select a sound file or voice note from the various options.
14. To add the message text, highlight **Message** and press the **ⓘ** key.
15. Enter the text and press the **ⓘ** key.
16. When you have finished entering the message, press the **Options** key and highlight **Send**. Press the **Select** soft key or the **ⓘ** key.
17. Highlight one of the following options:
 - **Recent log:** allows you to select one of the recipients of your previous messages.
 - **Phonebook:** allows you to select a phone number from Phonebook.

- **Phone number:** allows you to manually enter a phone number.
- **Email address:** allows you to manually enter an email address.
- **My Album:** allows you to send the message to your online photo album on t-zones.
- **My Journal:** allows you to send the message to your online personal journal site on t-zones.

18. After selecting or entering where to send your message, press the **Options** soft key and highlight **Send**. Press the **Select** soft key or the  key. Your phone sends the message.

Composing and Sending a PIN message

A personal identification number (PIN) uniquely identifies each BlackBerry device on the network. If you know another person's PIN, you can send a PIN message to that person by entering the PIN as the destination.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the  key to enter the menu.
3. Press the **Compose** soft key.
4. Highlight **PIN message** and press the **Select** soft key or the  key.
5. When **PIN address** is highlighted, press the **Select** soft key or the  key.
6. Scroll to the PIN you want to send and press the **OK** soft key or the  key.
7. Enter the message subject and press the Down Navigation key.
8. When you finish entering your message, press the **Options** soft key. The following options are available:
 - **Send:** allows you to send the message.
 - **Add address:** allows you to enter additional to, cc, bcc addresses.
 - **Save to drafts:** saves the message as a draft for sending at a later time.
 - **Options:** allows you to set the importance level and sensitivity level of the message.
 - **Language select:** allows you to set the language to English, French, or Spanish.
9. Highlight **Send** and press the **Select** soft key or the  key. Your phone sends the message.

Sending a Voice Note Message

You can record a voice note and send it as part of a message.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the  key to enter the menu.
3. Press the **Compose** soft key.
4. Highlight **Voice note** and press the **Select** soft key or the  key. The recorder screen appears.
5. Press the **Record** soft key or the  key and record a note by speaking into the microphone.
6. When you have finished, press the **Stop** soft key or Down Navigation key.
7. Press the **Send** soft key to access the following options:
8. Highlight **Send** and press the **Select** soft key or the  key.
9. Highlight one the following options:
 - **Recent log:** allows you to select a number or an address from the 20 last destinations you entered for sending the last messages.
 - **Phonebook:** allows you to enter the phone number you want from your Phonebook. Use the  key to check the selected entries.
 - **Phone number:** allows you to manually enter a phone number.
 - **Email address:** allows you to manually enter an e-mail address.
 - **My Album:** allows you to send the message to your online photo album on t-zones.
 - **My Journal:** allows you to send the message to your online personal journal site on t-zones.
10. Press the **Select** soft key or the  key.
11. Select where you would like to send your voice note and it will be entered in the **Send** menu in a **To** field.
12. To add another destination, select an empty **To** field, press the **Options** soft key. Repeat from step 9.

Note: When entering multiple destinations, you can also choose **Add group**, **Change recipient**, and **Back** options in addition to the other send options.

13. When you have finished entering the destinations, press the **Options** soft key, highlight **Send** and press the **Select** soft key or the  key. Your phone sends the message

Composing and Sending an Email

You can send an email.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the  key to enter the menu.
3. Press the **Compose** soft key.
4. Highlight **Email** and press the **Select** soft key or the  key.
5. Highlight **[Email address]** or **[Phonebook]** and press the **Select** soft key or the  key.
6. Select the email address to which you want the e-mail to be sent. The selected address is inserted in the **To** text box.
7. To enter additional address, press the **Options** soft key, select **Add address** to enter additional to, cc, bcc addresses.
8. Press the **Down** Navigation key and enter the message subject.
9. Press the **Down** Navigation key and enter the message text.
10. When you have finished entering the message text, press the **Options** soft key.

The following options are available:

- **Send**: allows you to send the message.
 - **Add address**: allows you to enter additional to, cc, bcc addresses.
 - **Save to drafts**: saves the message as a draft for sending at a later time.
 - **Options**: allows you to set the importance level and sensitivity level of the message.
 - **Language select**: allows you to set the language to English, French, or Spanish.
11. Highlight **Send** and the **Select** soft key or the  key. Your phone sends the message.

Accessing Messages

When you access the **BlackBerry** menu, a list of all types of messages appears in the order of the time and date when they were created or received.

You can tell what kind of message it is by the icon displayed. If the icon envelope is open then the message has been read, otherwise it will appear closed.

The following icons of messages may appear on the Messages list:

Message type		Message status	
	 Voice notes		 Retrieved
	 Text messages		 Being retrieved
	 Picture messages		 To be retrieved
	 PIN messages		 Sent
	 Emails		 Being sent
	 Push messages		 To be sent
			 Failed to send

Note: On the message list, you can resend the selected message by pressing the **Left** Navigation key. Also, you can compose and send a new text message by pressing the **Right** Navigation key.

Accessing Messages by Category

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. Highlight a date bar and press the **Options** soft key.
4. Highlight **View folder** and press the **Select** soft key or the **ⓘ** key.
5. Highlight **BlackBerry email** to access incoming or outgoing emails or select **SMS/MMS** to access other messages, and press the **Select** soft key or the **ⓘ** key.
6. Highlight one of the following message folders and press the **Select** soft key or the **ⓘ** key.
 - **Inbox:** stores received messages.
 - **Sentbox:** stores messages successfully sent.
 - **Outbox:** stores messages to be sent or ones failed to be sent.
 - **Drafts:** stores messages as drafts for sending at a later time.
7. Highlight a message and press the **Select** soft key or the **ⓘ** key

Viewing an Incoming Message

1. Select a received message from the Messages list or the Inbox list and press the **Options** soft key.

The following options will appear. Depending on the type of the selected message, available options vary:

- **Open**: allows you to read the message.
 - **Play**: plays the voice note and view message details, if it is a voice note message.
 - **Mark opened**: switches the message status opened. The message icon changes to an unopened envelope.
 - **Reply**: allows you to send a reply to the sender by sending a text or picture message.
 - **Forward**: allows you to forward the message to other numbers.
 - **Delete**: deletes the selected message or all messages.
 - **Call back**: places a call to the selected number.
2. Highlight **Open** and press the **Select** soft key or the  key to read the message contents.
 3. To scroll through the contents, press the **Up** or **Down** Navigation key.

To scroll to other messages in the same folder, press  or .

While reading a received message, you may choose the following options by pressing the **Options** soft key. Depending on the type of the selected message, available options vary:

- **Reply via**: allows you to send a reply to the sender by sending a text or picture message.
- **Reply all via**: allows you to send a reply to all recipients by sending a picture message or voice note, if it is a picture message or voice note message.
- **Call back**: places a call to the selected number.
- **Forward**: allows you to forward the message to other numbers.
- **Replay**: allows you to view the message or listen to the note again, if it is a picture message or voice note message.
- **Delete**: allows you to delete the message.
- **Move to phone**: moves the message from the SIM card to the phone's memory. This option is only available for messages stored on the SIM card.
- **Move to SIM card**: moves the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.
- **Go to URL**: allows you to go to the website corresponding to the selected URL address in the message, if it is a push message from a web server.
- **Save address**: allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Save media**: allows you to save the media file in a message.

- **Protection:** allows you to lock the message to protect it from being deleted.

Viewing a Message When You Receive It

When a new multimedia message comes in, the display shows the Picture Messaging Message icon.

1. Press the **View** soft key to view the message.
Press the **Exit** soft key if you want to view the message later in the Inbox.
2. Press the **Options** soft key or the  key to access the various options described above.
3. When you are finished, press the  key.

Accessing an Outgoing Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the  key to enter the menu.
3. Select a message from the Messages list or the Sentbox or Outbox list and press the **Options** soft key.
4. Highlight **Open** and press the **Select** soft key or the  key to read the message contents.
5. To scroll through the contents, press the **Up** or **Down** Navigation key.

To scroll to other messages in the same folder, press  or .

While viewing a message, you can choose different options by pressing the **Options** soft key.

- **Send again:** allows you to send the message again.
- **Forward:** allows you to forward the message to other numbers.
- **Delete:** allows you to delete the message.
- **Save address:** allows you to extract the sender's number and URL, email addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Protection:** allows you to lock the message to protect it from being deleted.

Using Text Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the **Ⓢ** key to enter the menu.
3. Highlight a date bar and press the **Options** soft key.
4. Highlight **Text message templates** and press the **Select** soft key or the **Ⓢ** key.
5. Highlight the sentence you want.
6. To edit the sentence, press the **Ⓢ** key. Change the sentence and press the **Ⓢ** key to save changes.

To send a new message using the sentence, press the **Options** soft key and select **Send message**, then a message type. The sentence will be placed on a message display. Continue to write your message. For more information, see "Composing and Sending a Text Message" on page 49 or "Composing and Sending a Picture Message" on page 51.

Searching for Messages

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **BlackBerry**. Press the **Select** soft key or the **Ⓢ** key to enter the menu.
3. Highlight a date bar and press the **Options** soft key.
4. Highlight **Search messages** and press the **Select** soft key or the **Ⓢ** key.
5. Set the following search options:
 - **Name**: allows you to set a sender or recipient's name.
 - **In**: allows you to specify which field the phone searches for the entered name.
 - **Subject**: allows you to set a subject.
 - **Message**: allows you to the message text.
 - **Folder**: allows you to specify which folder the phone searches.
6. Press the **Search** soft key. The phone begins searching for the messages matching your input and displays the results.
7. Highlight the message you want and compose a new message or access options.

Section 8: Other Messaging

Topics Covered

- Voice Notes
 - Voice Mail
 - Broadcast Messages (SIM dependent)
 - Instant Messaging
-

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Your phone also provides these message types:

- **Voice Notes:** You can record a voice note and then send it as a message.
- **Voice Mail Messages:** If you do not answer a call, the call may be diverted to Voice Mail so that the caller can leave you a voicemail. You can connect to the voice mail center anytime and check your voicemails.
- **Broadcast Messages (SIM dependent):** Your phone can receive text messages related various topics, such as traffic, news, weather forecast, sports, entertainment, from T-Mobile.
- **Instant Messaging:** You can log onto an online community and have a chat with your friends or family by sending and receiving instant messages.

Voice Notes

In this menu, you can record a voice note of up to one minute long and then immediately send it by Picture message.

When you access this menu, a timer appears on the screen.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Voice notes**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. Press the **Record** soft key or the **ⓘ** key to start recording.
4. Record a memo by speaking into the microphone.
The display shows the elapsed time and the remaining time
5. When you are finished, press the **Stop** soft key or the **Down** navigation key.
The Voice note is saved to your Voice list.

6. Press the **Options** soft key to access the following options:
 - **Send**: allows you to send the voice note.
 - **Play**: plays back the voice note.
 - **Re-record**: discards the Voice note and enables you to record another one.
 - **Set default destination**: allows you to set the default destination. Once a destination is set as default, the phone will ask you if you want to send the voice note to the destination right after recording.
 - **Save**: saves the voice note and continues to the **Send** option.
7. To send the Voice note, press the **Send** soft key or select **Send** from the **Options** menu and press the **Select** soft key or the **Ⓢ** key.
8. Highlight one the following options:
 - **Recent log**: allows you to select a number or an address from the 20 last destinations you entered for sending the last messages.
 - **Phonebook**: allows you to enter the phone number you want from your Phonebook. Use the **Ⓢ** key to check the selected entries.
 - **Phone number**: allows you to manually enter a phone number.
 - **Email address**: allows you to manually enter an e-mail address.
 - **My Album**: allows you to send the voice note to your online photo album on t-zones.
 - **My Journal**: allows you to send the voice note to your online personal journal on t-zones.
9. Press the **Select** soft key or the **Ⓢ** key.
10. Select where you would like to send your voice note and it will be entered in the **Send** menu in a **To** field.
11. To add another destination, select an empty **To** field and press the **Options** soft key. Repeat from step 9.

Note: When entering multiple destinations, you can also choose **Add group**, **Change recipient**, and **Back** options in addition to the other send options.

12. When you have finished entering the destinations, press the **Options** soft key, highlight **Send** and press the **Select** soft key or the **Ⓢ** key.

Voice Mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Utilities** and press the **Select** soft key or the  key.
4. Highlight **Voice mail** and press the **Select** soft key or the  key.

The following options are available:

- **Call voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then select this option and press the **Select** soft key or the  key to listen to your messages. You can also connect to the voice server by pressing and holding  in Idle mode.
- **Voice server number:** allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. Please contact your service provider for further details.

Broadcast Messages (SIM dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Please contact your service provider for further details.

Instant Messaging

Instant Messaging (IM) is a way of sending short, simple messages that are delivered immediately to users online at that moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

Starting your Instant Messaging

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Instant Messaging**. Press the **Select** soft key or the  key to enter the menu.

3. Highlight the messenger service to which you subscribed using the **Up** or **Down** Navigation key and press the **Select** soft key or the  key.
4. Highlight **Sign on**, **Connect**, or **Sign in**, depending on your messenger service, and press the **Select** soft key or the  key.
5. Enter the required information, such as your ID and password, and press the **OK** soft key.

Note: The information required for sign on will vary depending on the instant messaging provider you are using.

6. Follow the on-screen instructions to read, reply to, compose, send, and manage your IM account.
7. While on a conversation, press the **Options** soft key to access the following options:
 - **Send IM:** allows you to send the instant message you have typed to the people you are chatting with.
 - **Insert:** allows you to insert information, such as text templates, emoticons, URL addresses in Favorites, and Phonebook entries for your convenience.
 - **Save conversation:** saves your conversation while you are chatting with people.
 - **Language select:** allows you to change the language for entering messages.
 - **End:** finishes the current conversation.
 - **Go to Contact list:** allows you to access the IM contact list.
 - **Add contact:** allows you to add the current contact to the IM contact list, if the contact has not been saved before.
 - **Delete contact:** deletes the contact if the current contact already exists on the IM contact list.

Using the Instant Messenger Options

On the sign-on screen of the messenger, press the **Options** soft key to access the following options:

- **Sign on/Connect/Sign in:** allows you to login to your IM account.
- **Saved conversations (convers.):** shows permanent records of your IM conversations.
- **Offline conversations (convers.):** shows dynamic records of your last 10 IM conversations.
- **Settings/Preferences:** allows you to change your default community and community settings, such as automatic sign-in or sounds.
- **Help:** provides various help information depending on the community you have selected.

Managing IM Contacts

1. In Online mode, press the **Options** soft key.
2. Highlight **Contact list** and press the **Select** soft key or the **ⓘ** key to access a list of your IM contacts.
3. Highlight a contact and press the **Options** soft key to access the following options.
 - **Open**: opens a new message screen allowing you to compose and send a instant message to the contact.
 - **End**: ends the conversation, if you are chatting with the contact.
 - **Send IM**: allows you to send an instant message to the contact.
 - **Manage contact**: allows you to add or delete contacts.
 - **Contact info.**: displays the contact details.
 - **Block contact**: allows you to block instant messages from the contact.
 - **My status**: allows you to change your presence status.
 - **Sign out**: allows you to log out from the IM community.
4. When you have finished, press the **Back** soft key.

Section 9: Settings

Topics Covered

- Changing Settings
 - Time & Date Settings
 - Phone Settings
 - Display Settings
 - Sound Settings
 - Network Services Settings
 - Bluetooth
 - Security Settings
 - Voice Recognition Settings
 - Reset Settings
 - Message Settings
-

This section explains the sound and phone settings for your phone. It includes display settings, security settings, and extra settings associated with your phone.

Changing Settings

To change a setting option, do as follows:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Settings**. Press the **Select** soft key or the **?** key to enter the menu.
3. Highlight a menu, for example, **Phone settings**, and press the **Select** soft key or the **?** key.
4. Highlight a submenu, for example, **Language**, and press the **Select** soft key or the **?** key.
5. Highlight the setting option you want, or press the Navigation keys to change the setting.
6. Press the **Select** soft key or the **?** key to save changes.

Time & Date Settings

This menu allows you to change the current time and date displayed.

The following options are available:

- **Set time:** allows you to change the hour and minute.
- **AM/PM:** allows you to set either AM or PM.
- **Time format:** allows you to select whether your time is displayed in 12 hour or 24 hour format.
- **Set date:** allows you to enter the month, day, and year.
- **Date format:** allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.
- **Auto update:** allows you to receive time information from your service provider's network.

On: the phone automatically updates the time and date according to the current time zone using the network service.

Confirm first: the phone asks for a confirmation before the update.

Off: you need to manually set the time and date according to the current time zone using the Set time menu.

Note: Automatic updates of time and date do not change the time you have set for alarm settings or calendar memos.

Phone Settings

You can customize various phone system settings.

Language

This menu allows you to select a display language for Text language and Input mode. Choose one of English, Français (French), and Español (Spanish).

Greeting message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see "Section 5: How to Enter Text" on page 35.

Volume key

This menu allows you to set how the Volume keys function when you receive an incoming call. The following options are available:

- **Mute:** allows you to turn the ringer off by pressing and holding the Volume keys.
- **Reject:** allows you to reject calls by pressing and holding the Volume keys.

Extra settings

You can turn the automatic redialing or answering features on or off.

1. To turn a feature on, highlight the feature and press the  key. A check mark displays in front of the option.
2. To turn a feature off, highlight the checked feature and press the  key. The check mark no longer displays.

The following options are available:

- **Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between call attempts varies.

- **Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except for the **Reject** soft key or the  key. To reject the call, press the **Reject** soft key or the  key. When this option is unchecked, you must press the **Accept** soft key or the  key to answer a call.
 - **Open to answer:** when this option is checked, you can simply open the phone to answer a call. When it is unchecked, you must open the phone and press a key to answer a call, depending on the setting of the **Anykey answer** option.
3. When you have finished changing your settings, press the **Save** soft key to save your settings. Otherwise, press the **Back** soft key.

Side key

You can specify how the keys on the right side of your phone function in Idle mode.

The following options are available:

- **Middle (Others):** allows you to set  to confirm your selection, or to function the same as one of the soft keys in Menu mode.
- **Middle (Idle):** allows you to set  as a shortcut to access one of your favorite menu when held down in Idle mode.

- **Up (Short):** allows you to set the **Up** Volume key as a shortcut to access one of your favorite menu.
- **Up (Long):** allows you to set the **Up** Volume key as a shortcut to access one of your favorite menu when held down.
- **Down (Short):** allows you to set the **Down** Volume key as a shortcut to access one of your favorite menu.
- **Down (Long):** allows you to set the **Down** Volume key as a shortcut to access one of your favorite menu when held down.

Display Settings

In this menu, you can change various settings for the display or backlight.

Wallpaper

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

- **Get more wallpaper:** takes you to t-zones where you can download wallpapers.
- **Default wallpapers:** allows you to choose from a list of wallpaper embedded your phone.
- **My downloads:** allows you to choose one of the downloaded or received images.
- **My photos:** allows you to choose one of the photos you have captured with your camera.

To change the background image:

1. Scroll through the list by pressing the Navigation keys and select an image.
2. Press the **Select** soft key or the **⌂** key.

The image will be saved as your wallpaper.

Info display

This menu allows you to set text style and text color. Press the **Left** or **Right** Navigation key to change the settings.

Interior display

You can select the color of the menus displayed. There are two different patterns to choose from.

Brightness/Contrast control

You can adjust the brightness of the main display and the front display, or the contrast of the front display to see them better in different lighting conditions.

1. Highlight **LCD brightness control** or **Front LCD contrast control**.
2. Press the **Left** and **Right** Navigation keys or the Volume keys to adjust the settings.
3. Press the **OK** soft key or the **Ⓢ** key to save your settings.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

- **On**: allows you to set how long the keypad backlight stays on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
- **Dim**: allows you to set how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

For example, if you set **On** for 30 seconds and **Dim** for 15 seconds, after 30 seconds the backlight of the display and keypad would turn off and 15 seconds later the display would turn off.

Press the **Left** or **Right** Navigation key to adjust the settings.

Dialing display

This menu allows you to select the color of your dialing font.

To change the color of the font:

1. Highlight **Color style** and use the **Left** or **Right** Navigation key to select either **Basic** (black), **Rainbow**, or **Monochrome**.
2. If you select **Monochrome**, press the **Down** Navigation key and select the monochrome color.
3. Press the **Save** soft key or the **Ⓢ** key to save your settings. Otherwise, press the **Back** soft key.

Show Caller Information

By turning this option on, when you miss a call, caller information such as name will be displayed on your display when your missed calls are listed. You can also select **With front LCD** to have information displayed on the front display screen.

Sound Settings

You can customize various sound settings for your phone.

Incoming call

You can set up the options for the incoming call ringer.

- **Get more MegaTones:** allows you to access the website preset by T-Mobile and download new sounds.
- **Get more HiFi Ringers:** allows you to access the website preset by T-Mobile and download new HiFi Ringers.
- **RingTone:** allows you to select a ringtone. Use the **Up** or **Down** Navigation key and select **My sounds** or **Default sounds**. Then, press the **Select** soft key or the **ⓘ** key to select a ringtone.
- **Volume:** allows you to adjust the ringer volume to one of 5 levels. Use the **Right** or **Left** Navigation key to increase or decrease the volume level.
- **Alert type:** This menu allows you to specify how you are to be informed of incoming calls. Use the **Right** or **Left** Navigation key to select a ring tone. The following options are available:

Melody: the phone rings using the ring melody selected in the **RingTone** menu.

Vibration: the phone vibrates but does not ring.

Vibration then melody: the phone vibrates 3 times and then starts ringing.

Keypad tone

This menu allows you to turn the key tone on or off, and select a key tone type or volume level. You can also select a different key tone for using BlackBerry if you wish.

Message tone

This menu allows you to set the message tone for incoming Text, Picture, Email, and Broadcast messages.

- **Tone:** allows you to select a ringtone. You can choose one of 10 MMS tones.
- **Alert type:** This menu allows you to specify how you are to be informed of incoming messages. Use the **Right** or **Left** Navigation key to select a ringtone. The following options are available:

Melody: the phone rings using the ring melody selected in the **Tone** menu.

Vibration: the phone vibrates but does not ring.

Vibration then melody: the phone vibrates 3 times and then starts ringing.

- **Repetition:** allows you to set the phone to repeat alerting you to an incoming message. If you do not want the phone to repeat alerting, select **Once**. The phone will alert only one time when a message come in.

Power on/off

This menu allows you to select the melody that the phone sounds when it is switched on and off.

To turn off the sound, select **Off**.

Folder tone

This menu allows you to select the melody that the phone sounds when you open or close the phone. You may choose between four different tones.

To turn off the sound, select **Off**.

Silent mode

This menu allows you to select how the phone reacts instead of making sounds in Silent mode. You may choose between **Vibration** and **Mute**.

Extra tones

You can customize additional tones for the phone.

1. To turn a given tone on, press the  key. A check mark displays in front of the option.
2. To turn a given tone off, press the  key. The check mark no longer displays in front of the option.

The following options are available:

- **Minute minder:** allows you to set whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** allows you to set whether or not the phone beeps when an outgoing call is connected to the system.
- **Alerts on call:** allows you to set whether or not the phone beeps when you receive a new message or the time for an alarm comes during a call.

Network Services Settings

You can set up network services supported by your service provider.

Call forwarding

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:

1. Select a call forwarding option by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the  key.

The following options are available:

- **Forward always:** all calls are forwarded.
- **Busy:** calls are forwarded when your phone is busy.
- **No reply:** calls are forwarded when your phone is not answered.
- **Unreachable:** calls are forwarded when you are not in an area covered by your service provider or when your phone is switched off.
- **Cancel all:** all call forwarding options are canceled.

2. Select the type of calls, **Voice calls** or **Data calls**, by pressing the **Up** or **Down** Navigation key, and then press the **Select** soft key or the  key.

The current status displays. If the option has already been set, the number to which the calls are forwarded displays.

3. To activate call forwarding, select **Activate** by using the **Left** or **Right** Navigation key.

To deactivate call forwarding, select **Deactivate** by using the **Left** or **Right** Navigation key.

4. Enter the number to which the calls are to be forwarded in the **Forward to** text box and press the **Select** soft key or the  key. To enter an international code, press and hold  until the **+** sign displays.

The phone sends your settings to the network and the network's acknowledgement displays.

Call barring (SIM dependent)

Call Barring allows you to restrict specific types of incoming and outgoing calls for your phone. This is useful if you allow someone to use your phone for a short period of time.

Call waiting

This network service informs you when someone is trying to reach you during another call. You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

1. Select the type of calls, **Voice calls** or **Data calls**, to which the call waiting option is to be applied by pressing the **Up** or **Down** Navigation key and then press the **Select** soft key or the **ⓘ** key.
The screen informs you whether call waiting is activated or deactivated.
2. Highlight **Activate** or **Deactivate** and press the **Select** soft key or the **ⓘ** key.
The phone sends your settings to the network and the network's acknowledgement displays.

Note: Select the **Cancel all** option to deactivate Call waiting on all voice calls and data calls.

Network selection

The Network Selection feature enables you to manually select the network used when roaming outside of your home area, or let the phone automatically select an available one.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To change Network Selection mode:

1. Highlight **Search now** and press the **Select** soft key or the **ⓘ** key.
2. Press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the **ⓘ** key.
The phone will scan for that network and you will be connected.

To change the default setting:

1. Highlight **Default setup** and press the **Select** soft key or the **ⓘ** key.
2. Highlight either **Automatic** or **Manual** and press the **Select** soft key or the **ⓘ** key.
If you select **Automatic**, you are connected to the first available network when roaming.
3. If you select **Manual**, press the **Up** or **Down** Navigation key until the network you want highlights and then press the **Select** soft key or the **ⓘ** key.
The phone will scan for that network and you will be connected.

Caller ID

You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow you to change this setting.

The following options are available:

- **Default:** the default setting provided by the network is used.
- **Hide number:** your number does not display on the other person's phone.
- **Send number:** your number is sent each time you make a call.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

The following Bluetooth options are available:

Turn Bluetooth On/Off

This option allows you to turn Bluetooth **On** or **Off**. Make a selection and press the **Select** soft key or the  key.

My devices

This option allows you to search for new Bluetooth devices.

1. Highlight **Search new device** and press the **Select** soft key or the  key. The phone will search for available devices.
2. Highlight the device you want and press the **Select** soft key or the  key.
3. Enter a Bluetooth PIN and press the **OK** soft key. When the owner of the device enters the same PIN, the two devices are paired and connected.

My visibility

This option allows you to turn your visibility to **On** or **Off**. Make a selection and press the **Select** soft key or the  key.

My phone name

This option shows the name given to your phone for Bluetooth purposes. You can edit the name if needed. This name will display on other devices when they searches for available Bluetooth devices.

Security modes

This option allows you to set Security mode for Bluetooth to **On** or **Off**. Make a selection and press the **Select** soft key or the  key. When Security mode is enabled, user of other devices, except for authorized ones, must enter the PIN each time accessing your phone.

Bluetooth features

This options shows the service profiles that you can use on your phone via a Bluetooth connection.

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices will not work together.

The following service profiles are available:

- **Headset:** the remote Bluetooth headset enables outgoing and incoming calls.
- **Handsfree:** the remote Bluetooth car kit enables outgoing and incoming calls.
- **Serial port:** the remote Bluetooth device acts as a virtual serial port.
- **Dial up networking:** the remote Bluetooth device enables Internet access through a phone modem.
- **File transfer:** the remote Bluetooth device enables users to transfer files from their handset to others.
- **Object push:** the remote Bluetooth device enables the transfer of personal data (e.g. vCard, vCalendar, etc.) to other devices.

Security Settings

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls. Various codes and passwords are used to protect the features of your phone.

PIN check

When the PIN Check feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your permission.

Note: Before enabling or disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Disable:** the phone connects directly to the network when you switch it on.
- **Enable:** you must enter the PIN each time the phone is switched on.

Change PIN

This feature allows you to change your current PIN, provided that the PIN check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

Change password

This feature allows you to change your current password to a new one. It is preset to “00000000” at the factory.

1. Enter the default password, **00000000**, and press the **OK** soft key.
2. Enter a new 4- to 8-digit password and press the **OK** soft key.
3. Enter the new password again and press the **OK** soft key.

FDN mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

- **Disable:** you can call any number.
- **Enable:** you can only call phone numbers stored in Phonebook. You must enter your PIN2. You can obtain your PIN2 from your service provider.

Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

Voice Recognition Settings

You can adjust the settings and preferences for VoiceSignal by opening the Voice recognition settings menu.

Note: You can also press the **Right** Navigation key in Idle mode and press the **Settings** soft key to access the Voice Recognition setting options.

The following options are available:

- **Choice lists:** if VoiceSignal is not absolutely confident that it has correctly identified a name or number, it can display a choice list of up to three possibilities, and prompt you to confirm the correct one. You can control when choice lists appear by changing the Choice Lists setting to the following:

Automatic: VoiceSignal displays a choice list when it is not confident it has identified the correct choice from among multiple alternatives.

Always On: when there are multiple alternatives, VoiceSignal always displays a choice list.

Always Off: VoiceSignal never displays a choice list. Instead, the application picks the best from among the possible choices.

- **Sensitivity:** in VoiceSignal, sensitivity controls the balance between rejecting too much, which means the phone frequently does not recognize names, numbers, or commands, and rejecting too little, which means it frequently recognizes something even if nothing was said. When VoiceSignal rejects an utterance, it displays a message such as "Please repeat..." or "No match found."

If you frequently experience these messages, you might be able to get better recognition by adjusting the Sensitivity setting toward **Reject Less**.

If you frequently experience false activations (VoiceSignal detects a wrong match), you might be able to get better performance by adjusting the Sensitivity setting toward **Reject More**.

- **Digit dialing:** You can adapt digit dialing to your voice.

Adapt digits: lets you adapt digits, which can improve voice recognition of phone numbers. Adaptation takes about 60 seconds.

Reset digits: erases any digit adaptation you have done and resets digit recognition to the factory default. If you have not adapted digits, this option is grayed out.

- **Sound:** you can customize the VoiceSignal user interface by turning playback on or off for prompts, names, and numbers. You can also change the speed and volume of name playback.

Prompts: turns playback on or off for prompts such as "Please say a command."

Digits: turns playback on or off for digits, for example, when confirming a phone number.

Names: turns playback on or off for names.

Name settings: adjusts the speed and volume of name playback.

- **About:** displays information about VoiceSignal including version number, build number, and device number.

Reset Settings

In this menu, you can reset your phone's settings to their default settings.

The following options are available:

- **All settings:** Phone, Display, and Sound settings will be returned to default values.
- **Phone settings:** only phone settings will be returned to default values.
- **Display settings:** only display settings will be returned to default values.
- **Sound settings:** only sound settings will be returned to default values.

To reset your settings:

1. Highlight one of the options and press the **Ⓢ** key to place a check mark in front of the option.
2. Press the **Reset** soft key.
3. You will be prompted with **Reset settings?**. Press the **Yes** soft key.
4. Enter the 4- to 8-digit password and press the **OK** soft key or the **Ⓢ** key.

Note: The password is preset to "00000000." To change this password, see "Change password" on page 76.

Message Settings

You can set up various options for using the messaging service. You can also select the calendar view and specify options for using the Blackberry messaging service.

Email

The following options are available for email settings:

- **Email reconciliation:** allows you to set up the options for synchronizing with the email server.

Delete on: deletes an e-mail in the phone's memory or on the server after retrieving. If you select **Prompt**, the phone will ask you to delete an e-mail.

Wireless reconciliation: allows whether the phone automatically synchronizes e-mails with the server when retrieving.

On conflicts: allows you to set the priority of synchronization when your e-mail data in the phone and on the server is not reconciled.

- **Menu setup:** allows you to set the length of time an e-mail displays its details in 3-line view after an e-mail is highlighted on the Messages list.

Text message

The following options are available for sending text messages.

- **Service center:** allows you to store or change the number of your message center, which is required when sending messages. You must obtain this number from your service provider.
- **Destination address:** allows you to enter a number that you would like to send all messages to. You can still message others, but this number will always appear on the Send list.
- **Validity period:** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report:** when this option is marked, the network informs you whether or not your message has been delivered.

Picture message

The following options are available for sending and receiving Picture messages.

Send settings

- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- **Priority:** you can select the priority level of your messages.
- **Expiry date:** the expiration date is how long the message receiver has to retrieve the message.
- **Delivery time:** you can set a delay time before the phone sends your messages.

Receive settings

- **Anonymous reject:** you can set your phone to automatically reject anonymous messages.
- **Ads allowed:** allows you to receive advertisements.
- **Report allowed:** allows the network to inform the sender when a message has been delivered to you.

Broadcast message

The following options are available for receiving Broadcast messages.

- **Receive:** allows whether or not the phone receives broadcast messages.
- **Channel:** allows you to select the channels from which you want to receive broadcast messages.
- **Language:** allows you to select the preferred languages in which broadcast messages display on your phone.

Calendar view mode

Use this option to select the default for your Calendar view. Select between Month view, Week view, or Day view. After making your selection, press the **Save** soft key.

BlackBerry Options

Network

You can set options for a network connection.

- **Reconnection:** reconnects the phone to the network.
- **Network:** allows you to suspend the current network connection, or resume the connection.

Host routing table

You can register, view, or delete host routing tables.

Message services

You can select the default message account.

Owner

You can set up BlackBerry owner information.

- **Owner name:** allows you to set your BlackBerry user name.
- **Owner info.:** allows you to set user information.

Security

You can set options for securing BlackBerry.

- **Password:** allows you to enable or disable the use of the password. To enable Privacy, you need to enable the password.
- **Security timeout:** allows you to set an interval for the phone to ask for the password.
- **Privacy:** allows you to enable or disable Privacy. Once it is enabled, you need to enter the password each time you access any phone functions.
- **Change password:** allows you to set a password or change it.

Service book

You can select the default service you want to use for BlackBerry messaging.

GPRS review

You can check GPRS information, such as MCC, MNC, IMEI, IMSI, ICCID, your phone's Blackberry PIN number, model name, device type, and system and stack versions.

IT Policy

You can check the current status of the security settings for your phone.

- **Set password timeout:** shows the timeout for the password input. The phone will ask you to enter the password in a specified interval.
- **Max security timeout:** shows the maximum security timeout. The security will be disabled in the specified time.
- **User can change timeout:** shows whether or not you are able to change the timeout length.
- **Password required:** shows whether or not the phone requires a password.
- **Password pattern check:** shows the pattern of your password.
- **Maximum password age:** shows the maximum age of the password before you are prompted to change it.
- **Minimum password length:** shows the minimum length of an acceptable security password.
- **Password attempts:** shows how many attempts the phone permits when you enter a wrong password.
- **Long-term timeout:** shows whether the long-term security timeout is enabled or disabled on the phone. When it is enabled, the phone prompts you for your password every hour.
- **User can disable PW:** shows whether or not you are able to disable the password.
- **Email reconciliation:** shows whether the email reconciliation is enabled or disabled. When it is enabled, the phone automatically connects to the email server at regular intervals to check for new emails.

Reset blackberry data

You can clear all BlackBerry data and reset your BlackBerry settings.

Section 10: Applications

Topics Covered

- Setting Up BIS
 - Using Alarm
 - Using File Manager
 - Using Calculator
 - Playing Games
 - Using Voice Recognition
 - Viewing World time
 - Using a Converter
 - Using the Timer
 - Using the Stopwatch
 - Synchronizing PIM Data
 - Accessing Help
 - Using the Calendar
-

This section outlines the various applications that are available on your phone.

Your phone provides you with applications for your conveniences and entertainment, such as a alarm clock, calculator, java games, converter, file manager, and PIM sync manager.

Setting Up BIS

You can configure your BlackBerry service via on online manager service using web browser.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. Highlight **Setup BIS** and press the **Select** soft key or the **ⓘ** key.
4. Enter the URL address of the BIS manager and press the **Setup** soft key.

Using Alarm

The **Alarm** application allows you to:

- set up to three alarms to ring at specified times.
- set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- **Wake up call:** the alarm rings to wake you up in the morning.
- **Alarm1/2:** the alarm rings at the specified time and date. You can set the day, time, and tone for this alarm.
- **Auto power:** alarms ring at the specified time even if the phone is turned off. If the option is set to **Off** and the phone is switched off at the specified time, the alarm does not ring.

Setting an Alarm

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the **⌂** key to enter the menu.
3. Highlight **Alarm** and press the **Select** soft key or the **⌂** key.
4. Highlight the **Alarm** option and press the **Right** Navigation key to set to **On**.
5. Press the **Down** Navigation key to highlight the **Alarm time** option. Enter the time for the alarm to sound.

Note: Your phone is preset to a 12-hour format. To change the time format, see "Time & Date Settings" on page 66.

6. Press the **Down** Navigation key to highlight **AM/PM**. Press the **Left** or **Right** Navigation key to set to **AM** or **PM**.
7. Press the **Down** Navigation key to highlight **Repeat**. Press the **Left** or **Right** Navigation key to select a repeat option.
8. Press the **Down** key to highlight **Alarm tone**. Press the **⌂** key to bring up a list of alarm tone locations.
9. Press the **Up** or **Down** Navigation key to highlight **My sounds** or **Default sounds**. Press the **Select** soft key or the **⌂** key.

10. Press the **Up** or **Down** Navigation key to select an alarm tone. Press the **Select** soft key or the  key.
11. Press the **Save** soft key.

Stopping an Alarm

- To stop an alarm when it rings, press any key.
- To deactivate an alarm set, access it from the Alarm list and select **Off** in the Alarm box.

Using File Manager

The **File Manager** menu allows you to manage your sounds, images, videos, and other files in one convenient location.

To access **File Manager**:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **File Manager** and press the **Select** soft key or the  key.
4. Highlight a file type and press the **Select** soft key or the  key.
5. Highlight a folder or download option and press the **Select** soft key or the  key.

Sounds

The **Sounds** menu stores sounds you have recorded, downloaded from the web server, or received in multimedia messages. You can set a downloaded sound as the current ringtone.

The following options are available:

Get more MegaTones

Using the **Get more MegaTones** option on the sounds list, you can access the website preset by T-Mobile and download new sounds.

Get more HiFi Ringers

Using the **Get more HiFi Ringers** option on the sounds list, you can access the website preset by T-Mobile and download new HiFi Ringers.

My sounds

Highlight an item in the **My sounds** menu and press the **Options** soft key. The following options are available:

- **Download new:** takes you to t-zones where you can download new sounds.
- **Play:** plays back the sound.
- **Send via:** allows you to send the sound via Picture message or Bluetooth.
- **Set as:** allows you to set the sound as your ringtone, a caller ringtone, or an alarm tone.
- **Delete:** allows you to delete the sound or all sounds.
- **Rename:** allows you to change the sound name.
- **Share for Bluetooth:** allows the sound or all sounds to be shared or released for the use of another Bluetooth device.
- **Protection:** allows you to lock the sound to protect it from deletion.
- **Properties:** displays the sound name, date, format, length, size, and protection.

Voice list

The Voice list stores audio messages you have recorded. Highlight an item in the **Voice list** menu and press the **Options** soft key. The following options are available:

- **Play:** plays back the audio message.
- **Send via:** allows you to send the audio message via Picture message or Bluetooth.
- **Delete:** allows you to delete the audio message or all audio messages.
- **Rename:** allows you to change the name of the audio message.
- **Share for Bluetooth:** allows the audio message or all messages to be shared or released for the use of another Bluetooth device.
- **Protection:** allows you to lock the audio message to protect it from deletion.
- **Properties:** displays the audio message name, date, format, length, size, and protection.

Images

The **Images** menu stores images you have taken, downloaded from the web server, or received in messages. You can set a downloaded image as your wallpaper.

The following options are available:

Get more wallpapers

Using the **Get more wallpapers** option, you can access the website preset by T-Mobile and download new images.

My album

This folder provides the ability for you to view the photos you have stored in your online photo album on t-zones. Use the following procedures to access **My album**.

1. In your t-zone browser, select the **My Albums Menu** link and press the **Select** soft key or the  key.
2. Photos sent to this folder are stored in the **Inbox Album**. Press the **Select** soft key to view the photos.
3. Press the  key to exit t-zones and return to the Idle screen.

My journal

This folder provides the ability for you to store your photos in your online personal journal on t-zones.

My downloads

This folder allows you to access your downloaded images.

Highlight an image and press the **Options** soft key. The following options are available:

- **Download new:** takes you to t-zones where you can download new images.
- **View:** displays the image.
- **Send via:** allows you to send the image via Picture message or Bluetooth.
- **Set as:** allows you to set the image as you wallpaper or as a caller ID.
- **Delete:** allows you to delete the image or all images.
- **Rename:** allows you to change the image name.
- **Display mode:** allows you to see your images displayed in Line view or in Thumbnail view.
- **Slide show:** allows you to see all of your photos in a slide show presentation.
- **Share for Bluetooth:** allows the image or all images to be shared or released for the use of another Bluetooth device.
- **Protection:** allows you to lock the image to protect it from deletion.
- **Properties:** displays the image name, date, format, resolution, size, quality, and protection.

My photos

In this folder, you can review photos you've taken. Highlight a photo and press the **Options** soft key to access the following options:

- **View**: displays the photo.
- **Send to My Album**: allows you to send the photo to **My Album**.
- **Send via**: allows you to send the image via Picture message or Bluetooth.
- **Default destination**: allows you to remove or replace the default destination.
- **Set as**: allows you to set the photo as your wallpaper or as a caller ID.
- **Delete**: allows you to delete the photo or all photos.
- **Rename**: allows you to change the photo name.
- **Display mode**: allows you to see your images displayed in Line view or in Thumbnail view.
- **Slide show**: allows you to see all of your photos in a slide show presentation.
- **Share for Bluetooth**: allows the photo or all photos to be shared or released for the use of another Bluetooth device.
- **Protection**: allows you to lock the image to protect it from deletion.
- **Properties**: displays the image name, date, format, resolution, size, and protection.

Videos

The **Videos** menu stores videos you have recorded, downloaded from the web server, or received in multimedia messages. The following options are available:

Downloaded videos

This folder allows you to access your downloaded video clips.

Highlight a video and press the **Options** soft key. The following options are available:

- **Play**: plays the video.
- **Send via**: allows you to send the video via Picture message or Bluetooth.
- **Delete**: allows you to delete the video or all videos.
- **Rename**: allows you to change the video name.
- **Display mode**: allows you to see your videos displayed in a Line view or in Thumbnail view.
- **Share for Bluetooth**: allows the video or all videos to be shared or released for the use of another Bluetooth device.

- **Protection:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video name, date, format, resolution, size, length, quality, and protection.

My videos

In this folder, you can review videos you've recorded.

Highlight a video and press the **Options** soft key to access the following options:

- **Play:** plays back the video.
- **Send via:** allows you to send the video via Picture message or Bluetooth.
- **Delete:** allows you to delete the video or all videos.
- **Rename:** allows you to change the video name.
- **Display mode:** allows you to see your videos displayed in Line view or in Thumbnail view.
- **Share for Bluetooth:** allows the video or all videos to be shared or released for the use of another Bluetooth device.
- **Protection:** allows you to lock the video to protect it from deletion.
- **Properties:** displays the video name, date, format, resolution, size, length, quality, and protection.

Other files

This menu allows you to view other types of files that you have stored on your phone. This includes Excel spreadsheets, text files, WMF files, PowerPoint presentations, PDFs, MHTML, JPEGs, GIFs, BMPs, and Word documents. You can send these files by picture message or Bluetooth.

Memory status

You can check the amount of memory in use and memory remaining for sounds, images, videos, and other files. Select an option and press the **Left** or **Right** Navigation key to toggle between size and count.

Using Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Calculator** and press the **Select** soft key or the  key.
4. Enter the first number using the number keys.
5. Enter the operation for your calculation by pressing the Navigation keys:
 - **Left**: subtraction (-)
 - **Right**: addition (+)
 - **Up**: multiplication (x)
 - **Down**: division ($\div$)
6. If necessary, press the Left soft key to insert a decimal point or brackets.
7. Enter the second number.
8. Press the  key to view the result.
9. Repeat from step 5 to continue the calculation.

Playing Games

You can download MIDlets (Java applications that run on mobile phones) from various sources using t-zones and store them in your phone.

Playing a Game

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Games** and press the **Select** soft key or the  key.

The list of the embedded games appears. Once you have downloaded games, they are added to the My games list.

Note: Java services may not be available, depending on your service provider.

4. Highlight **My games** and press the **Select** soft key or the  key.

5. Scroll to the MIDlet you want and press the **⌂** key. The startup screen of the MIDlet will be displayed along with game options.
6. Use the Navigation keys to scroll between options. Press the **⌂** key to make a selection.

Note: MIDlet game options will differ depending on the MIDlet you select.

Downloading a Game

To download more games from the web site preset by T-Mobile, highlight **Get more games** from the Games list and press the **Select** soft key or the **⌂** key. After connecting to the game web site, download games by following the instructions on the screen.

Using Voice Recognition

VoiceSignal is advanced speech recognition software that can be used to activate a wide-variety of functions on your phone. VoiceSignal software automatically voice activates all contacts for voice dialing and searching, no pre-recording or training needed. Speak phone numbers naturally to dial, and use voice commands to launch applications and navigate phone menus.

VoiceSignal Options

The following is a list of functions that you can perform using VoiceSignal speech recognition on your phone.

- **Call <Name or #>:** dial by saying either a name or a number in the Contacts list.
- **Send text <Name>:** send a text message to a number or to someone in your Contacts List.
- **Lookup <Name>:** open the contact record for any name in the Contacts list.
- **Go to <App>:** open any application installed on your device.
- **Check <Item>:** provides details of your network coverage, signal strength, and battery power level.

Digit Dialing

Digit Dial allows you to dial any phone number by simply speaking the digits into the phone. No training is necessary, and Digit Dial is programmed to understand natural speech.

1. In Idle mode, select the VoiceSignal shortcut (**Right Navigation key**). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.

2. After a brief pause, a list of optional commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Call” and the area code and number that you want to dial at a distance of 3-12 inches from the phone in a natural voice.
4. If VoiceSignal is not sure of the number that you said, a list of possible matches appears on the display. You’re asked to confirm the correct number as VoiceSignal displays the results. Say “Yes” or “No” to confirm or reject the number when prompted.

The number that you said is repeated through the earpiece then your phone will dial the number.

Name Dialing

To use Name Dial, you’ll need to have entries stored in your Phonebook. See ‘Section 6: Phonebook’ on page 41 for information on creating Phonebook entries.

1. In Idle mode, select the VoiceSignal shortcut (**Right Navigation key**). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.
2. After a brief pause, a list of optional commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Call” and the name of the contact that you want to dial.
The name that you said is repeated through the earpiece and your phone dials the number.
4. If VoiceSignal is not sure of the name that you said, a list of possible matches appears on the display. You’re asked to confirm the correct number as VoiceSignal displays the results. Say “Yes” or “No” to confirm or reject the number when prompted.

The number that you said is repeated through the earpiece then your phone will dial the number.

Sending a Text Message

1. In Idle mode, select the VoiceSignal shortcut (**Right Navigation key**). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.
2. A list of commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Send Text” at a distance of 3-12 inches from the microphone. “Say the Name or Number” plays through the earpiece.

4. After you say a name or number, you might be prompted, "Did you say?" To confirm a name or number, wait for the beep and then say "Yes."

You can also choose the correct name or number from the choice list using the phone's arrow keys.

5. When a new text message screen is launched, compose and send a text message. For further information, see "Composing and Sending a Text Message" on page 49.

Looking Up a Name

To perform a name lookup, you'll need to have some entries in the Contacts list.

1. In Idle mode, select the VoiceSignal shortcut (**Right Navigation** key). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.
2. A list of commands appears in the display and the audio prompt "Say a command" plays through the earpiece.
3. Say "Lookup" at a distance of 3-12 inches from the microphone. "Say the name" plays through the earpiece.
4. Say the name exactly as it is displayed in your Contacts list, first name followed by last name. The contact name appears in the display with other information that you've entered for that contact.

Opening Applications

You can open an application or access a menu on your phone using VoiceSignal.

1. In Idle mode, select the VoiceSignal shortcut (**Right Navigation** key). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.
2. A list of commands appears in the display and the audio prompt "Say a command" plays through the earpiece.
3. Say "Go To" at a distance of 3-12 inches from the microphone. A list of options displays and a prompt of "Please choose" plays through the earpiece. If the option you desire is not listed, say "Next Menu" to scroll to the next page. The menu option spoken opens.

Checking Phone Status

Use the Check command to see and hear status information from your phone, including its phone number, status, current signal strength, network coverage, and battery level.

To check phone status:

1. In Idle mode, select the VoiceSignal shortcut (**Right** Navigation key). You can also select **Voice recognition** from the **Utilities** menu in **Applications**.
2. A list of commands appears in the display and the audio prompt “Say a command” plays through the earpiece.
3. Say “Check” at a distance of 3-12 inches from the microphone. A list of options displays and a prompt of “Please choose” plays through the earpiece.
The phone status menu option spoken is displayed.

Viewing World time

You can find out what time it is another part of world

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the **⌂** key to enter the menu.
3. Highlight **Utilities** and press the **Select** soft key or the **⌂** key.
4. Highlight **World time** and press the **Select** soft key or the **⌂** key.
5. Scroll through time zones by pressing the **Left** and **Right** Navigation keys.

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.

6. Press the **Options** soft key to access the following options:
 - **Save**: saves your world time settings.
 - **Set daylight saving time**: use the **⌂** key to place a check mark next to the cities that you want to set daylight savings time. Each city listed represents a time zone.

Using a Converter

The **Converter** menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert any of the above categories, do the following:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Utilities** and press the **Select** soft key or the  key.
4. Highlight **Converter** and press the **Select** soft key or the  key.
5. Scroll to the conversion feature you wish to use and press the **Select** soft key or the  key.
6. Press the **Left** or **Right** Navigation key to select the original unit in the From field.
7. Enter the quantity to be converted in the text box and press the **Down** Navigation key.

Note: To include a decimal point, press the  key. To change the temperature to above zero (+) or below zero (-) in the Temperature converter, press the  key

8. Press the **Left** or **Right** Navigation key to select the unit to which you want to convert.
The converted number will be displayed.

Using the Timer

You can set a timer to alert you when a specified period of time passes. Note that running a timer drains the battery power faster.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key to enter the menu.
3. Highlight **Utilities** and press the **Select** soft key or the  key.

4. Highlight **Timer** and press the **Select** soft key or the **ⓘ** key.
5. Press the **Set** soft key to enter the length of time.
6. Enter the time and press the **OK** soft key.
7. Press the **ⓘ** key to start the timer. You can use other functions, while the timer is running in the background.
8. Press the **ⓘ** key again to stop the timer when it rings.

Using the Stopwatch

You can use a stopwatch to check the elapsed time.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
3. Highlight **Utilities** and press the **Select** soft key or the **ⓘ** key.
4. Highlight **Converter** and press the **Select** soft key or the **ⓘ** key.
5. Press the **ⓘ** key to start the stopwatch.
6. Press the **ⓘ** key for the lap time. You can have up to 4 lap times.
7. Press the **Reset** soft key to erase all stopwatch times recorded.

Synchronizing PIM Data

In this menu, you can synchronize your personal and business contacts with the online phonebook on a remote server.

Creating a Synchronization Profile

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the **ⓘ** key to enter the menu.
1. Highlight **PIM sync** and press the **Select** soft key or the **ⓘ** key.
1. Press the **Options** soft key.
2. Highlight the **New sync profile** option and press the **Select** soft key or the **ⓘ** key.

- Specify the following information for the profile:
 - Profile name:** allows you to enter the profile name.
 - Address:** allows you to enter the URL address of the remote server you want to synchronize with.
 - Login ID:** allows you to enter the login ID required for accessing to the server.
 - Password:** allows you to enter the password required for accessing to the server.
 - Sync category:** shows the application you can synchronize. You can synchronize Phonebook data.
 - Sync type:** allows you to select a synchronization type.
- Press the **Save** soft key to save the profile.

Starting Synchronization

- From the PIM sync screen, select the profile you want to use.
- Press the  key, or press the **Options** soft key and select **Start sync**.

Using Profile Options

From the PIM sync screen, press the **Options** soft key to access the following options:

- Start sync:** starts synchronization for the selected profile.
- View result:** displays the result of the last synchronization.
- New sync profile:** allows you to add a new profile.
- Edit sync profile:** allows you to change the properties of the profile.
- Delete:** allows you to delete the selected profile or all profiles.

Accessing Help

Get More Help is designed to show you some of the features of your phone using t-zones. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.

- In Idle mode, press the **Menu** soft key to access Menu mode.
- Using the Navigation keys, scroll to **Applications**. Press the **Select** soft key or the  key.
- Highlight **Get More Help** and press the **Select** soft key or the  key.

4. You will enter t-zones and the Get More Help menu will be displayed.

The following options are available:

- **Browse Help Topics:** this option gives you a list of different topics that you can select.
- **Enter a Search:** this option allows you to enter a keyword to search on.
- **About:** this option offers general information about Get More Help including concept and site design, copyright information, and contact email address.

Using the Calendar

With the Calendar feature, you can consult the calendar by month, week, or day and create appointments

Accessing the Calendar

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to **Calendar**. Press the **Select** soft key or the **ⓘ** key.

When you select the **Calendar** menu, the month view will appear showing the current month.

At the bottom of the calendar, the scheduled items icon  is displayed along with the number of entries for the selected day.

Press the **Options** soft key to access the following options:

- **View mode:** allows you to select between Day view or Week view of the selected day.
- **Create appointment:** allows you to create an appointment.
- **Go to:** allows you to see the Month view with today's date highlighted or a specified date.

Changing the View

1. From the calendar, Press the **Options** soft key.
2. Highlight the **View mode** option and press the **Select** soft key or the **ⓘ** key.
3. Highlight a view mode and press the **Select** soft key or the **ⓘ** key.

Depending on which calendar view you are in, the options for the other two views will be displayed. For example, if you are presently in Month view, the available options will be Day view or Week view.

Creating an Appointment

This option allows you to create an appointment.

1. From Month, Week, or Day View, press the **Options** soft key.
1. Highlight the **Create appointment** option and press the **Select** soft key or the **ⓘ** key.
2. Enter the subject in the **Subject** text box then press the **Down** Navigation key.
3. Enter details of the appointment and press the **Down** Navigation key.
4. The **Show time as** text box will be highlighted. Use the **Left** or **Right** Navigation key to select one of **Busy**, **Out of Office**, **Free**, or **Tentative**.
5. Press the **Down** Navigation key and select the **All day** option using the **ⓘ** key if you want to mark the whole day as busy.
6. Continue to enter other information including Start date, Start time, AM/PM, End date, End time, AM/PM, Location, Alarm, Alarm tone, Timezone, and Recurrence. Recurrence can be set to None, Daily, Weekly, Monthly, or Yearly.
7. When you are finished, press the **Options** soft key. Highlight **Save** and press the **Select** soft key or the **ⓘ** key. Your appointment is saved.

Editing an Appointment

After you have created an appointment, you can make changes to it.

1. Go to the Day view of an appointment you would like to edit.
2. Highlight the appointment and press the **ⓘ** key. Details of the appointment will appear in the View menu.
3. Press the **Options** soft key, highlight **Edit** and press the **Select** soft key or the **ⓘ** key.
4. Using the **Up** or **Down** Navigation key, select and edit the fields you want.
5. When you are finished, press the **Options** soft key and select the **Save** option.
6. At the **Save?** prompt, press the **Yes** soft key to save the changes or press the **No** soft key to cancel.

Deleting an Appointment

After you have created an appointment, you can delete it.

1. Go to the Day view of an appoint you would like to delete.
2. Highlight the appointment and press the  key. Details of the appointment will appear in the View menu.
3. Press the **Options** soft key, highlight **Delete** and press the **Select** soft key or the  key.
4. At the **Delete?** prompt, press the **Yes** soft key to delete the appointment or press the **No** soft key to cancel.

Section 11: Camera and Camcorder

Topics Covered

- Taking a Photo
 - Recording a Video
 - Accessing Photos or Videos
-

This section explains how to use the camera and camcorder on your phone. You can take photos and video clips using the built-in camera and camcorder.

Using the camera/camcorder module in your phone, you can take photos or video clips of people or events while on the move. Additionally, you can send photos and video clips to other people in a Picture Messaging message or set a wallpaper or caller ID image.

Notes:

Do not take photos or videos of people without their permission.

Do not take photos or videos in places where cameras are not allowed.

Do not take photos or videos in places where you may interfere with another person's privacy.

Taking a Photo

You can send a message after taking a photo. Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press the **Up** Navigation key to turn on the camera.

You can also press the **Menu** soft key to access Menu mode, highlight **Camera**, and press the **Select** soft key or the **ⓘ** key to enter the menu. Highlight **Take and send** and press the **Select** soft key or the **ⓘ** key.

2. Make any desired adjustments.

- Press the Left soft key to access camera options. For details, see “Using Camera Options.”
- You can also use the keypad to quickly change the camera options. For details, see “Camera shortcuts” on page 103.

3. Press the **ⓘ** key to take the photo. **Send to My Album?** is displayed.

4. Press the **Yes** soft key if you want to send the photo to your T-Mobile **My Album** service. The phone's default destination is set to **My Album**. The photo is automatically saved in **My photos** in the phone.

Note: To change the default destination for your pictures, press the **Options** soft key when **Send To: My Album?** appears on the display. Highlight the **Default destination** option. You can then remove your default destination or change it to a phone number, email address, Phonebook, My Album, My Journal, or a Recent log.

To use the photo options, press the **Options** soft key.

To return to Capture mode, press .

To return to Idle mode, press the  key.

Using Camera Options

In Capture mode, you can use various options for the camera by pressing the Left soft key.

The following options are available:

- **Record video:** switches from camera to camcorder.
- **Shooting mode:** allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top right of the display. The following modes are available:

Single shot: allows you to take a photo in the normal mode. Select the save mode.

Multi shot: allows you to take a series of action stills. Select the capture speed and the number of photos the camera will take. When you press the  key, the camera takes photos successively.

Mosaic shot: allows you to take several photos to combine in a mosaic. Select the image layout and the save mode.

- **Effects:** allows you to change the color tone or apply special effects to the photo.
- **Frames:** allows you to select a decorative frame. Select a frame from the list using the Navigation keys and press the  key to save your setting.
- **Flash:** allows you to set the flash option to **Off**, **Shooting only**, or **Permanent**. To use the flash for taking photos or recording videos, select **Shooting only**. By setting the option to **Permanent**, you can use your phone as a flashlight if needed.
- **Timer:** allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press  key, the camera takes the photo after the specified time has elapsed.
- **Go to My photos:** takes you to the **My photos** folder.

- **Settings:** allows you to change the image settings.

Size: allows you to set the image size.

Viewfinder: allows you to set the view finder to Full screen, Full screen & indicator, Full screen & Guideline, or Standard ratio.

Shutter sound: allows you to select a tone for the shutter sound. Choose between 4 tones.

Zoom sound: allows you to turn zoom sound on or off.

Brightness sound: allows you to turn brightness sound on or off.

Default name: allows you to change the default name assigned to your photo.

- **Camera shortcuts:** shows you how to change options using your keypad in Capture mode.
The following shortcuts are available:



Up and **Down** Navigation keys zoom in and out.



Left and **Right** Navigation keys adjust the image brightness.



Up Volume key flips the image vertically.



Down Volume key shows the mirror image.



switches between Camera mode and Camcorder mode.



changes the photo resolution.



changes the camera shot mode.



changes the color tone or applies a special effect to a photo.



selects a decorative frame.



sets a time delay.



takes you to the **My photos** folder.



changes the preview screen.



turns the flash on or off.