

 
 
 
 
 


SGH-T809

P O R T A B L E Q u a d - B a n d T E L E P H O N E

User Guide

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Tel: 972.761.7000

Customer Care Center:

1000 Klein St.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2005 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Printed in Korea.

GH68-07931A

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

 
 
 
 
 


Table of Contents

Section 1: Getting Started	5
Activating Your Phone	6
Switching the Phone On or Off	10
Setting Up Your Voice Mail	10
Section 2: Understanding Your Phone	13
Features of Your Phone	14
View of Your Phone	14
Keys	15
Display Layout	17
Get More Help	19
Section 3: Call Functions	21
Making a Call	22
Adjusting the Call Volume	24
Answering a Call	24
Call Records	25
Silent mode	28
Selecting Functions and Options	29
Section 4: Menu Navigation	37
Menu Navigation	38
Menu Outline	39
Section 5: Entering Text	45
Changing the Text Input Mode	46
Using ABC Mode	47
Using T9 Mode	49
Using Number Mode	51
Using Symbol Mode	51
Section 6: Understanding Your Phonebook ...	53
Storing a Number in the SIM Card	54
Storing a Number in the Phone's Memory	55

Finding a Phonebook Entry	57
Dialing a Number from Phonebook	59
Speed Dialing	59
Editing a Caller Group	60
Dialing a Number from the SIM Card	62
Copying all SIM Phonebook Entries	62
Deleting all of the Phonebook Entries	63
My Name Card	64
Finding My Own Phone Number	64
FDN List	65
Management	65
Section 7: Messages	69
Voice Notes	70
Text Messages	72
Picture Messages	75
Inbox	78
Sentbox	85
Outbox	86
Drafts	87
Templates	88
Voice Mail Messages	89
Delete All	89
Settings	90
Broadcast Messages (SIM Dependent)	91
Instant Messaging	91
Memory Status	93
Section 8: Changing Your Settings	95
Time & Date Settings	96
Phone Settings	97
Display Settings	99
Sound Settings	103
Network Services Settings	106

Bluetooth	109
Security Settings	111
Memory Status	114
Reset Settings	115
Section 9: Fun & Apps	117
File Manager	118
MP3 Player	126
Games	127
Image Editor	128
Organizer	129
Section 10: Camera and Camcorder	141
Using the Camera and Camcorder	142
Take and Send	142
Record Video	146
My Photos	149
My Videos	151
My Album	153
My Journal	154
Section 11: t-zones	155
t-zones	156
Section 12: Health and Safety Information ...	161
Health and Safety Information	162
Consumer Information on Wireless Phones	164
Road Safety	174
Operating Environment	176
Using Your Phone Near Other Electronic Devices	176
Potentially Explosive Environments	179
Emergency Calls	180
FCC Notice and Cautions	181
Other Important Safety Information	182
Product Performance	183
Availability of Various Features/Ring Tones	184

Battery Standby and Talk Time	185
Battery Precautions	185
Care and Maintenance	187
Section 13: Warranty Information	189
Standard Limited Warranty	190
Intellectual Property Statement	196
Samsung Telecommunications America (STA), Inc.	197
Index	199

Section 1: Getting Started

Topics Covered

- Activating Your Phone
 - Switching the Phone On or Off
 - Setting Up Your Voicemail
-

This section allows you to start using your phone by activating your service and setting up your voice mail.


Section 1

Activating Your Phone

 
When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by holding down the  key until the power-off image displays.

1. Remove the back cover. To do so, slide the back cover off in the direction of the arrow (1).
2. Lift the back cover away, as shown (2).

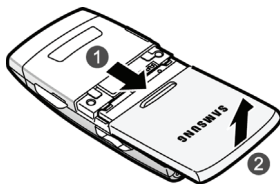


Activating Your Phone

 
3. Remove the battery. Grasp the bottom of the battery (1) and lift up. Pull the battery out and away (2).

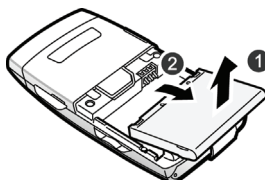

 4. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

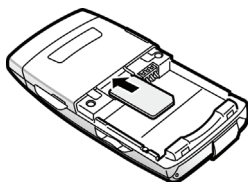


 Note: When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

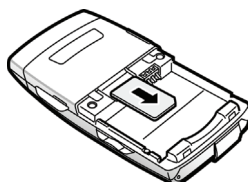

Section 1

 5. Place the battery so that the 3 brass tabs on the end align with the 3 brass prongs at the bottom of the battery compartment (1). Press the battery down until it clicks into place (2).

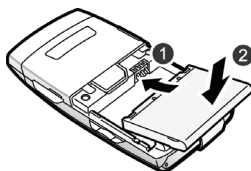

6. Replace the back cover. Make sure that the battery is properly installed before switching on the phone.

Section 1

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position in the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.

Activating Your Phone



2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone.



Note: You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.



Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Battery low” message repeats at regular intervals on the display.

When this happens, your phone turns off the backlight to conserve the remaining battery power.


When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Slide the phone open.
2. Press and hold the  key until the phone switches on.
3. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN check" on page 111.


The phone searches for your network and after finding it, the Idle screen appears. Now, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language" on page 97.

4. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail




For new users, follow the instructions below to set up voicemail:

1. Open your phone to access the keypad.
2. In Idle mode, press and hold the  key on the keypad.
3. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail



You can access your Voice Mail by pressing the  key on the keypad or by going to the menu. To access Voice Mail using the menu:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.
4. Highlight **Call voice mail** and press the **Select** soft key or the  key. Your phone dials the specified voice mail number.
5. When connected, follow the voice prompts from the voice mail center.





Section 1

Changing the Voice Mail Number

Your SIM card gives you the default service number of the voice mail center. However, should you need to change the number, use the following procedures:

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Messages** and press the **Select** soft key or the  key.
3. Highlight **Voice mail** and press the **Select** soft key or the  key.


Section 1

4. Highlight **Voice server number** and press the **Select** soft key or the  key. Highlight **Empty** and press the **Options** soft key.
5. Highlight **Edit** and press the **Select** soft key or the  key. Or, you may highlight **Delete** to delete the number.
6. Edit the name if desired, and then press the **Down** Navigation key to edit the number.
7. Press the **Options** soft key, highlight the **Save** option, and press the **Select** soft key or the  key.
8. Press the  key to return to Idle mode.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - View of Your Phone
 - Keys
 - Display Layout
 - Get More Help
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.



Section 2

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- Bluetooth Technology
- Instant Messaging capability
- Multimedia capability
- Fun & Apps feature provides file manager, MP3 player, games, image editor, alarms, calendar, calculator, world time, unit conversion, timer, and stopwatch.

View of Your Phone

The following illustrations show the main elements of your phone:



Keys

 
The following list correlates to the illustrations.

1. During a call, adjusts the earpiece volume.
In Idle mode with the phone open, adjusts the ring volume. With the phone closed, turns on the external display when held down.
2. Performs the functions indicated by the screen text on the bottom line of the display.
3. Makes or answers a call.
In Idle mode, recalls the last number dialed or received when held down.
4. In Idle mode, accesses voice mail when held down.
5. The headset jack is used for the hands-free headset.
6. Enters special characters. Performs various functions.
7. External speakers allow you to hear sounds and music.
8. The microphone used during phone calls and voice note recordings.
9. Enters numbers, letters, and some special characters.
10. TransFlash memory card slot. This expansion slot allows you to insert a TransFlash memory card to add additional memory and storage capacity.
11. The Cancel key deletes characters from the display.
In Menu mode, it returns you to the previous menu level.







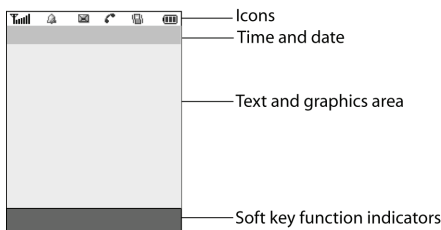


- 12.** Ends a call. Also switches the phone on and off when held down.
In Menu mode, cancels your input and returns the phone to Idle mode.
- 13.** In Idle mode, launches the WAP (Wireless Application Protocol) browser.
In Menu mode, selects the highlighted menu options.
When the **Left** soft key shows **Options**, it is the short-cut key to select the first option in the options list.
- 14.** In Menu mode, scrolls through the menus and Phonebook.
In Idle mode:
- **Down key**: allows you to access the Phonebook Search menu directly.
 - **Up key**: allows you to access the Camera or Camcorder feature directly.
 - **Left key**: allows you to access Text messaging directly.
 - **Right key**: allows you to access the Voice notes feature directly.
- When entering text, moves the cursor to the left or right, depending on which side you press.
- 15.** Display area where text and graphics are displayed.
- 16.** Used to listen to audio from your phone.
- 17.** The built-in digital camera/camcorder has video capture capabilities.






Display Layout

The display has 4 areas:



Icons

-  Shows the received signal strength. The greater the number of bars, the stronger the signal.
-  Appears when a TransFlash memory card has been inserted.
-  Appears when a new text message has been received.
-  Appears when a new voice mail has been received.
-  Appears when a new multimedia message has been received.
-  Appears when you set an alarm to ring at a specified time. For details, see page "Alarm" on page 130.
-  Appears when you are out of your service area.
-  Appears when a call is in progress.
-  Appears when the Call Forwarding feature is active. For details, see page "Call forwarding" on page 106.

-  Appears when Alert type is vibration or you set the phone to vibrate when you receive a call.
-  Appears when Silent Mode is active.
-  Appears when Mute is active.
-  Shows the level of your battery. The more bars you see, the more power you have remaining.
-  Bluetooth: appears when Bluetooth wireless technology is active.


Backlight

A backlight illuminates the display and the keypad. When you press any key or slide the phone open, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **On** setting is how long the keypad backlight is on. You can select 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select Off, 5 seconds, 15 seconds, 30 seconds, 1 minute, or 3 minutes.

To specify your Backlight settings:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Settings** icon. Press the **Select** soft key or the  key to enter the menu.

[Get More Help](#)

3. Highlight the **Display settings** option and press the **Select** soft key or the **Ⓢ** key.
4. Highlight the **Backlight** option and press the **Select** soft key or the **Ⓢ** key.
5. Highlight the **On** option. Use the **Left** or **Right** Navigation key to select the time that the backlight is on. You may choose between 15 seconds, 30 seconds, 1 minute, 3 minutes, or 10 minutes.
6. Press the Down key to take you to the **Dim** option. Use the **Left** or **Right** Navigation key to select the time that Dimming mode is on. You may choose between Off, 5 seconds, 15 seconds, 30 seconds, 1 minute, or 3 minutes.
7. Press the **Save** soft key to save your settings.

Get More Help

Get More Help is designed to show you some of the features of your phone using t-zones. You can search help files on the fly while traveling, at home or anywhere, using help.wap.t-mobile.com.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Get More Help** icon. Press the **Select** soft key or the **Ⓢ** key.
3. You will enter t-zones and the Get More Help menu will be displayed.

The following options are available:

- **Browse Help Topics:** this option gives you a list of different topics that you can select.
- **Enter a Search:** this option allows you to enter a keyword to search on.
- **About:** this option offers general information about Get More Help including concept and site design, copyright information, and contact email address.

To access the browser options menu:

1. Press the **Menu** soft key to see the Browser Options.
2. Make a selection and press the **Select** soft key or the **?** key.

Note: The menus may vary, depending on your version of t-zones.

For more information on browser options, see "Selecting and Using Menu Options" on page 158.


Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Records
 - Silent Mode
 - Selecting Functions and Options
-

 

This section describes how to make or answer a call. It also includes information on the features and functionality associated with making or answering a call.

Making a Call


 

When the idle screen displays, enter the number you wish to dial and press the  key.

Note: When you activate the **Auto redial** option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. See page "Extra settings" on page 99 for further details.


Making an International Call

1. Press and hold the  key. The + character appears.
2. Enter the country code, area code, and phone number and press the  key.

Correcting the Number

1. To clear the last digit displayed, press the  key.
2. To clear any other digit in the number, press the **Left** or **Right** key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also enter a missing digit.
3. To clear the whole display, press and hold the  key.

Ending a Call




When you want to finish your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

Making a Call

1. If you have typed characters on the display, press the  key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
3. Use the **Up** and **Down** keys to scroll through the numbers and highlight the number you want.
4. To dial the number, press the  key.

Before you dial the number, you may press the **Options** soft key for the following options:

- **Details:** Displays details of the number including name, number, and dates and times of calls.
- **Call back:** Places a call back to the number.
- **Store to phonebook:** Stores the number in your phonebook.
- **Send message:** Allows you to send a text message, picture message, or voice notes to the number.
- **Delete:** Allows you to delete the number or delete all call records.

Making a Call from the Phonebook



You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the Phonebook.

Once you have stored a number in the Phonebook, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phonebook feature, see "Section 6: Understanding Your Phonebook" on page 53.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.

Press the  key to increase the volume level and the  key to decrease the level.





In Idle mode, you can also adjust the ring volume using these keys while the phone is open.


Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Phonebook, displays.

1. If necessary, slide the phone open. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the **Extra Settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.


Note: To reject an incoming call, press the **Reject** soft key or  key.


2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using the Phonebook or menu features. After ending the call, the phone returns to the function screen you were using.

Call Records

All incoming, outgoing and missed calls are listed in the Call Records. You can also view Call time records.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Using the Navigation keys, scroll to the **Call records** icon. Press the **Select** soft key or the  key to enter the menu.

Note: You can also access the call records of incoming, outgoing, and missed calls by pressing the  key in Idle mode.

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, sent, and missed.

The number or name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Note: at any time while you are in Call Records, you may use the **Left** or **Right** Navigation key to scroll between **All calls**, **Missed calls**, **Incoming calls**, and **Outgoing calls**.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:


1. If the phone is closed, slide the phone open.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
4. To call the number displayed, press the  key.
5. Press the **Options** soft key for the following options:
 - **Details:** Displays details of the number including name, number, and dates and times of calls.

Call Records

- **Call back:** Places a call back to the number.
- **Store to phonebook:** Stores the number in your phonebook.
- **Send message:** Allows you to send a text message, picture message, or voice notes to the number.
- **Delete:** Allows you to delete the number or delete all call records.

You can press the  key at any time to exit the Missed Call feature.

Incoming calls

This menu lets you view the 30 most recent calls you received.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.


Outgoing calls

This menu lets you view the 30 most recent calls you dialed.

The number and name, if already stored in your Phonebook, displays with the number of occurrences of each number.

Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call records at one time.

1. Highlight the type of calls you want to delete and press the  key to make a check mark.
2. Press the **Delete** soft key to delete the calls.

- When a confirmation message displays, press the **Yes** soft key or **OK** key to confirm.

Call time

This menu lets you view the time log for calls made and received.

Note: The actual time invoiced by your service provider may differ from times displayed due to network features and service plan.

The following time logs are available:

- **Last call time:** shows the length of your last call.
- **Total incoming:** shows the total length of all calls you have received since the timer was last reset.
- **Total outgoing:** shows the total length of all calls you have made since the timer was last reset.
- **Life time:** shows the total length of time for incoming and outgoing calls. The length of call time must be at least 1 minute to increment this field. This information cannot be cleared.
- **Reset timers:** allows you to reset the call timers. At the **Are you sure?** prompt, press the **Yes** soft key. Enter the phone password and then press the **OK** soft key or **OK** key.

Note: The password is preset to "00000000" at the factory. To change this password, see "Change password" on page 113.

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the **[*] [5]** key until the "Silent Mode On" message and the Silent mode icon (🔇) display.

Selecting Functions and Options

In Silent mode, instead of sounds, your phone will vibrate.

 
To exit and reactivate the previous sound settings, press and hold the **[*] [0]** key again until “Exit Silent Mode” message appears. The Silent mode icon (📵) no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.

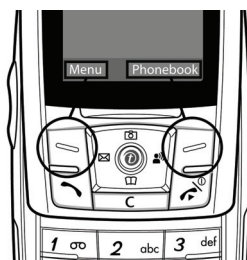

Press the left soft key for **Menu** mode.

Press the right soft key to access the **Phonebook** menu.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the **Ⓢ** key.
3. To view the next function or highlight the next option on a list, press the **Down** Navigation key.
4. To move back to the previous function or option on a list, press the **Up** key.
5. To move back up one level in the menu structure, press the **Back** soft key.
6. To exit the menu structure without changing the settings, press the **Ⓢ** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

Selecting Functions and Options

To place a call on hold, simply press the **Options** soft key, highlight the **Hold** option, then press the **Select** soft key or the **Ⓟ** key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the **⌂** key to dial the second call.

The first call is automatically put on hold.

Or:

1. Press the Options soft key and select **Hold**.
2. Make the second call in the normal way.

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

To switch between the two calls, simply press the **Options** soft key and select **Swap**.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.

When you want to finish, end each call normally by pressing the **Ⓜ** key.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key and highlight the **Mute** option.
2. Press the **Select** soft key or the **ⓘ** key. The other person can no longer hear you. The Mute icon is displayed.

To switch the microphone back on:

1. Press the **Options** soft key and highlight the **Unmute** option.
2. Press the **Select** soft key or the **ⓘ** key. The other person can hear you again.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

1. Press the **Spkr on** soft key to turn the Speakerphone on.
2. To turn the Speakerphone off, press the **Spkr off** soft key.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

Send DTMF

You can use the **Send DTMF** option to send a key string or number during a phone call. For example, you can send a calling card number by DTMF while on a call. Select the **Send DTMF** option and enter a number. Press the **OK** soft key and the number is sent.

Searching for a Number in Phonebook

You can search for a number in Phonebook during a call.

1. Press the **Options** soft key.
2. Press the **Down** key to highlight the **Phonebook** option and press the **Select** soft key or the **?** key.
3. Press the **Down** key to highlight the **Contact list** option and press the **Select** soft key or the **?** key.

The Phonebook entries are listed.

4. Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Phonebook entries are listed starting with the first entry matching your input.

Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.



5. To view the highlighted entry, press the **Options** soft key.
6. Highlight the **View** option and press the **Select** soft key or the **?** key. The Contact is displayed.


For further details about the Phonebook feature, see "Finding a Phonebook Entry" on page 57.


Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to Activate. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Options** soft key, highlight **Swap** and press the **Select** soft key or the  key.

To end a call on hold, press the **Options** soft key and select the **End held call** option. Then press the **Select** soft key or the  key.

To end the current call, press the  key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.

Selecting Functions and Options

3. To join the first participant to the multi-party call, press the **Options** soft key or the **Ⓜ** key and select **Join**. Press the **Select** soft key or the **Ⓜ** key.
4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the **Ⓜ** key. Select the **Join** option and press the **Select** soft key or the **Ⓜ** key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the **Ⓜ** key, and selecting **Join**. Repeat as required.

Having a Private Conversation With One Participant

1. Press the **Options** soft key or the **Ⓜ** key and choose the **Split** option. Press the **Select** soft key or the **Ⓜ** key.
The list of call participants appears.
2. Highlight a person you wish to talk privately with by pressing the **Up** or **Down** Navigation key, and press the **Select** soft key or the **Ⓜ** key.

Now you can talk only to that person. The other participants can continue to converse with each other.

3. To return to the multi-party call, press the **Options** soft key or the **Ⓜ** key and select **Join**. Press the **Select** soft key or the **Ⓜ** key.

All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key or the **Ⓜ** key and choose the **Split** option. Press the **Select** soft key or the **Ⓜ** key.

 
 
 


The list of call participants appears.

2. Highlight the person you want to keep. Press the **Options** soft key and highlight **End held multiparty**. Press the **Select** soft key or the **Ⓟ** key.

The call with the participant on hold will end, but you can continue to talk to the other participants.

3. When you want to end the multi-party call, close the phone or press the **Ⓡ** key.



Section 4: Menu Navigation

Topics Covered






- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains sub-menus, **Security** for example, you can access them by pressing the **Select** soft key or the  key after the sub-menu has been highlighted.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
5. To confirm the chosen setting, press the **Select** soft key, or the  key.
6. To return to the previous menu level, press the **Back** soft key, or the  key.
7. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their

shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Security menu.

1. Press the **Menu** soft key.
2. Press the  key for **Settings**.
3. Press the  key for **Security**.



Section 4

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

1 Voice notes

2 Call records

- 2.1 All calls
- 2.2 Missed calls
- 2.3 Incoming calls
- 2.4 Outgoing calls
- 2.5 Delete all
- 2.6 Call time
 - 2.6.1 Last call time
 - 2.6.2 Total incoming
 - 2.6.3 Total outgoing
 - 2.6.4 Life time
 - 2.6.5 Reset timers

3 t-zones

- 3.1 Home

Section 4

3.2 Favorites

3.3 Go to URL

3.4 Clear cache

4 Instant messaging

4.1 AIM

- 4.1.1 Sign on
- 4.1.2 Saved conversations
- 4.1.3 Offline conversations
- 4.1.4 Settings
- 4.1.5 Help

4.2 ICQ

- 4.2.1 Connect
- 4.2.2 Saved conversations
- 4.2.3 Offline conversations
- 4.2.4 Settings
- 4.2.5 Help

4.3 Yahoo!

- 4.3.1 Sign In
- 4.3.2 Saved conversations
- 4.3.3 Offline conversations
- 4.3.4 Settings
- 4.3.5 Help

5 Messages

5.1 Create new

- 5.1.1 Text message
- 5.1.2 Picture message
- 5.1.3 Voice note

5.2 Inbox

5.3 Sentbox

5.4 Outbox

5.5 Drafts

5.6 Templates

5.6.1 Text template

5.6.2 Picture message template

5.7 Voice mail

5.7.1 Call voice mail

5.7.2 Voice server number

5.8 Delete all

5.9 Settings

5.9.1 Text message

5.9.2 Picture message

5.0 Broadcast messages*

5.* Memory status

6 Fun & Apps

6.1 File manager

6.1.1 Sounds

6.1.2 Images

6.1.3 Videos

6.1.4 Music

6.1.5 Other files

6.1.6 Memory card

6.1.7 Memory status

6.2 MP3 player

6.3 Games

6.4 Image editor

6.5 Organizer

6.5.1 Alarm

6.5.2 Calendar

6.5.3 Calculator

6.5.4 World Time

6.5.5 Unit conversion

6.5.6 Timer



6.5.7 Stopwatch

7 Get More Help

8 Camera

8.1 Take and send

8.2 Record video

8.3 My photos

8.4 My videos

8.5 My Album

8.6 My Journal

9 Settings

9.1 Time & Date

9.2 Phone settings

9.2.1 Language

9.2.2 Greeting message

9.2.3 Slide settings

9.2.4 Volume key

9.2.5 USB settings

9.2.6 Extra settings

9.3 Display settings

9.3.1 Wallpaper

9.3.2 Main menu style

9.3.3 Info display

9.3.4 Interior display

9.3.5 Brightness control

9.3.6 Backlight

 
 
 
9.3.7 Dialing display

9.3.8 Calendar

9.3.9 Show caller information

9.4 Sound settings

9.4.1 Incoming call







- 9.4.2 Keypad tone
- 9.4.3 Message tone
- 9.4.4 Power on/off
- 9.4.5 Slide tone
- 9.4.6 Silent mode
- 9.4.7 Extra tones
- 9.5 Network services**
 - 9.5.1 Call forwarding
 - 9.5.2 Call barring*
 - 9.5.3 Call waiting
 - 9.5.4 Network selection
 - 9.5.5 Caller ID
- 9.6 Bluetooth**
 - 9.6.1 Turn Bluetooth On/Off
 - 9.6.2 My devices
 - 9.6.3 My visibility
 - 9.6.4 My phone name
 - 9.6.5 Security modes
 - 9.6.6 Features
 - 9.6.7 Help
- 9.7 Security**
 - 9.7.1 PIN check
 - 9.7.2 Change PIN
 - 9.7.3 Phone lock
 - 9.7.4 Change password
 - 9.7.5 Privacy
 - 9.7.6 FDN mode
 - 9.7.7 Change PIN2
- 9.8 Memory status**
 - 9.8.1 Shared memory
 - 9.8.2 Messages
 - 9.8.3 File manager
 - 9.8.4 Calendar
 - 9.8.5 Phonebook
 - 9.8.6 Games



9.9 Reset settings

*** Shows only if supported by your SIM card.**

    

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using ABC Mode
 - Using T9 Mode
 - Using Number Mode
 - Using Symbol Mode
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

 
When using your phone, you will often need to enter text, such as when storing a name in your Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. How many times you press the key determines which letter or number appears.
- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing **5** can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message.

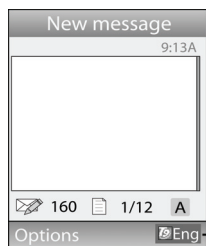

Text Input Mode Indicator

1. To change the text input mode, press the **Right** soft key.
2. Each time you press the **Right** soft key, a different Text input mode indicator will be displayed at the lower right corner of your display.

The following options are available:

Eng: T9 mode

Eng: Number mode

Eng: Symbol mode

 
 


Eng: ABC mode

3. When the text input mode indicator that you desire is displayed, you may enter text in the text message box using the selected text input mode.

Using ABC Mode


To use ABC mode, use the number keys to enter your text.

1. Press the key labeled with the letter you want:
 - Once for the first letter
 - Twice for the second letter

- And so on
- 2. Select the other letters in the same way.**
- To enter periods or hyphens, press the  key. ABC mode applies grammar rules to ensure that correct punctuation is used.
 - To shift case in ABC mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
 - You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

 Keys

 . @ , - ? ! : () / 1

 A B C 2

a b c 2

 D E F 3

d e f 3

 G H I 4

g h i 4

Using T9 Mode

5 jkl 5

jkl5

6 mno 6

mno6

7 pqrs 7

pqrs7

8 tuv 8

tuv8

9 wxyz 9

wxyz9

0 + = < > € £ \$ % & ¥ ¤ 0

Section 5

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

 
To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.


Example: To enter "Hello" in T9 mode, press the **4**, **3**, **5**, **5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.





2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

 If the word doesn't display correctly, press the  key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

  4. Insert a space by pressing the  key and start entering the next word.





To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the  key to display the alternative words.
2. When you press the  key at the last alternative word, the display shows **Spell** on the bottom line. Press the **Spell** soft key or the  key.
3. Enter the word you want to add using ABC mode.
4. Press the **OK** soft key or the  key.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

 Note: This feature may not be available for some languages.

Using Number Mode



- To enter periods, hyphens, or apostrophes, press the  key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the  key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the  key. Press and hold the  key to clear the display.

 
 
 
 
Using Number Mode

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the  key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the  key.

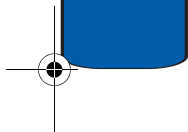

Section 6: Understanding Your Phonebook

Topics Covered

- Storing a Number in the SIM Card
 - Storing a Number in the Phone's Memory
 - Finding a Phonebook Entry
 - Dialing a Number from Phonebook
 - Speed Dialing
 - Editing a Caller Group
 - Dialing a Number from SIM Card
 - Copying all SIM Phonebook Entries
 - Deleting all of the Phonebook Entries
 - My Name Card
 - Finding My Phone Number
 - FDN List
 - Management
-

**Section 6**

This section allows you to manage your contacts by storing their name and number in your Phonebook. Phonebook entries can be sorted by name, entry, or group.

Storing a Number in the SIM Card

1. At the Idle screen, press the **Phonebook** soft key.
2. Scroll to **Add new contact** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **ⓘ** key.
3. Highlight **SIM card** and press the **Select** soft key or the **ⓘ** key.

Note: You can set the Default saving option to SIM card, Phone memory or Ask on saving in the Management menu. So if you always want to save your new contacts to your phone, for example, this step of the procedure will be eliminated in the future. See "Default Saving" on page 65 for more information.

4. Enter a name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 47.

5. Enter a number you want to store and press the **Save** soft key or the **ⓘ** key. The number is saved in your SIM card.

After storing, the phone displays the Phonebook entry you just created.

6. To use the entry options **before** saving the number, press the **Options** soft key.

The following options are available:


- **Save:** saves the number in the SIM card.
- **Language select:** allows you to select between English, French, or Spanish.

Storing a Number in the Phone's Memory

- **Cancel:** cancels the Add New Contact screen and returns you to the previous menu.
7. To use the entry options **after** saving the number, press the **Options** soft key.

The following options are available:

- **Edit:** allows you to edit the name and number fields in the entry.
- **Send message:** allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call:** allows you to call the number.
- **Assign speed dial:** allows you to assign a speed dial key number to the selected Phonebook entry.
- **Copy to:** allows you to copy the number to your Phone, SIM card or FDN.
- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

8. To return to the Idle screen, press the  key.

Storing a Number in the Phone's Memory

If you want to store a number in your phone's memory, you have 2 different options. You can save it to your SIM card and then copy it to your phone, or you can change your Default Saving option to Phone so that all your new contacts will be saved to Phone. See "Default Saving" on page 65 for information on how to change this setting.

Note: When you copy a phone number from your SIM card to your phone, the number will appear twice in your Contact list.

1. At the Idle screen, press the **Phonebook** soft key.
2. Scroll to **Add new contact** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **?** key.
3. Highlight **Phone** and press the **Select** soft key or the **?** key.

Note: You can set the Default saving option to SIM card, Phone memory or Ask on saving in the Management menu. So if you always want to save your new contacts to your phone, for example, this step of the procedure will be eliminated in the future. See "Default Saving" on page 65 for more information.

4. Enter a first name in the **Name** text box. Tab to the next text box by pressing the **Down** key.

For further details about how to enter characters, see "Using ABC Mode" on page 47.

5. Enter a last name in the text box.
6. Highlight a number Type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box.

The following types are available:

- **Mobile:** assigns the number entered to the Mobile entry.
- **Home:** assigns the number entered to the Home entry.
- **Office:** assigns the number entered to the Office entry.
- **Fax:** assigns the number entered to the Fax entry.

Finding a Phonebook Entry


- **Other:** allows you to enter more detailed information for the entry.
7. Continue to scroll down using the **Down** Navigation key to enter Email address, Picture ID, Ringtone, Group, and Notes if desired.
 8. Press the **Save** soft key or press the **Options** soft key and highlight the **Save** option and press the **Select** soft key or the **Ⓢ** key. The number is saved to your phone and the new contact information is displayed.
 9. To return to the Idle screen, press the **Ⓜ** key.

Finding a Phonebook Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. When the idle screen displays, press the **Phonebook** soft key.
2. Highlight **Contact list** and press the **Select** soft key or the **Ⓢ** key.
3. Enter the first few letters of the name in the text box.
The Phonebook entries are listed, starting with the first entry matching your input.
4. If needed, press the **Up** or **Down** Navigation key until the entry you want is highlighted.

5. Once you have found the entry, press the  key to dial the number, or press the **Options** soft key to access the following Phonebook entry options:

- **View**: shows details of the Phonebook entry.
- **Send message**: allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **New contact**: takes you to the New Contact menu.
- **Call**: places a call to the number.
- **Delete**: allows you to delete the selected name and number from your Phonebook or delete all numbers. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.
- **Assign speed dial**: allows you to assign a speed dial key number to the selected Phonebook entry.
- **Language select**: allows you to select between English, French, or Spanish.

6. If you select the **View** option, press the **Options** soft key after the contact information is displayed, for these additional options:

- **Edit**: allows you to edit the name and number fields in the entry. You can also add email address and notes.
- **Send message**: allows you to send a message to the selected number. You may choose between Text messages, Picture messages, or Voice notes.
- **Call**: allows you to call the number.
- **Assign speed dial**: allows you to assign a speed dial key number to the selected Phonebook entry.
- **Copy to**: allows you to copy the number to your phone, SIM card or FDN.

Dialing a Number from Phonebook

- **Send name card via:** allows you to send your name card via Text message, Picture message, or Bluetooth.
- **Delete:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key. To cancel, press the **No** soft key.

After viewing one Phonebook entry, you can scroll through all Phonebook entries by pressing the **Right** or **Left** Navigation keys.

Dialing a Number from Phonebook

Once you have stored phone numbers in the Phonebook, you can dial them easily and quickly by using the location numbers that were assigned to them in the Phonebook.

Note: If you cannot remember a location number, you must go into the **Contact list** menu in the **Phonebook** menu to search for the entry by name. For details, "Finding a Phonebook Entry" on page 57.

Speed Dialing

Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing the associated numeric key.

In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries

1. When the Idle screen displays, press the **Phonebook** soft key.

2. Scroll to **Speed dial** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **Ⓜ** key.
3. Use the **Up** or **Down** Navigation key to select the number key to which you wish to assign the speed-dialing number. Select from the **2** to **9** keys, and press the **Add** soft key.
4. Highlight **Contact list** or **FDN list** and press the **Select** soft key or the **Ⓜ** key.
5. Highlight the entry that you want to assign the speed dial number to and press the **Select** soft key or the **Ⓜ** key.

Note: Memory location 1 is reserved for your Voice mail server number and cannot be changed.

Editing a Caller Group

1. When the idle screen displays, press the **Phonebook** soft key.
2. Highlight the **Group** option and press the **Select** soft key or the **Ⓜ** key.
3. Scroll through the group list by pressing the **Up** or **Down** Navigation key.
4. Highlight the group you want and press the **Options** soft key.
5. Highlight the **Edit** option and press the **Select** soft key or the **Ⓜ** key.
6. To edit the Caller group name, modify the text in the **Name** text box.

Editing a Caller Group

7. To change the image associated with the Caller group, press the **Down** key to highlight the Picture ID icon. Press the **?** key.

The following options are available:


- **Take Photo:** allows you to take a picture with your camera.
- **My photos:** allows you to choose a photo from My photos folder.
- **Downloaded images:** allows you to choose a photo from your downloaded images folder.
- **Icons:** allows you to choose from pre-defined icons
- **My videos:** allows you to choose a video from your My videos folder.
- **Downloaded videos:** allows you to choose a video from your Downloaded videos folder.
- **Not assigned:** removes any image that was previously used and sets to Not assigned status.

8. To change the ringtone associated with the Caller group, press the **Down** key to highlight the Ringtone icon. Press the **?** key.



The following options are available:

- **Default melodies:** allows you to choose between 25 different melodies.
- **Voice list:** allows you to assign a Ringtone from your Voice list.
- **My sounds:** allows you to assign a Ringtone from your My sounds folder.
- **Music:** allows you to assign a Ringtone from your Music list.

 
 
9. When you are finished, press the **Save** soft key. Your Caller group settings will be saved.

10. Press the  key to return to Idle mode.



Dialing a Number from the SIM Card

1. In Idle mode, enter the location number for the phone number you want to dial and press the  key or the  key.

The entry associated with the location number will be displayed.



2. If you don't know the location number, press   and the first location number will be displayed.

You can then press the **Left** or **Right** key to find other numbers in the list.

3. Press the **Dial** soft key, the  key, or the  key when you have selected the number you want to dial.

Copying all SIM Phonebook Entries

You can copy all SIM entries to the Phone using this option. When you copy entries to the phone, duplicate entries are created in your Phonebook.

1. Press **Phonebook** soft key.
2. Highlight **Management** and press the **Select** soft key or the  key.
3. Highlight **Copy all to phone** and press the **Select** soft key or the  key.
4. After receiving the **Sure to copy all?** confirmation message, press the **Yes** soft key.

Deleting all of the Phonebook Entries


Note: Options are available for phone entries that are not available when stored to the SIM card. For details see "Storing a Number in the Phone's Memory" on page 55.

Deleting all of the Phonebook Entries

You can delete all your entries from your phone's memory, your SIM card, or both.



Important! Once Phonebook entries have been deleted, they cannot be recovered.

1. When the idle screen displays, press the **Phonebook** soft key.
2. Highlight **Management** and press the **Select** soft key or the **ⓘ** key.
3. Scroll to **Delete all** by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **ⓘ** key.
4. Press the **ⓘ** key to place a check mark by the memory location you want to empty; All, Phone, SIM Card, or SIM Card (FDN).
You can remove the check mark by pressing the **ⓘ** key again.
5. Press the **Delete** soft key to delete the entries in the selected memory location.
6. When the **Delete?** confirmation message appears, press the **Yes** soft key or the **ⓘ** key.
7. To cancel the deletion, press the **No** soft key.

- When you are finished, press the  key to return to Idle mode.

My Name Card

My Name Card allows you to create a virtual business card. Once completed, you can send the card to recipients as a V-card attachment.

- When the idle screen displays, press the **Phonebook** soft key.
- Highlight **My name card** and press the **Select** soft key or the  key.
- My Name Card opens with the **Name** field highlighted.
- Enter information in each of the fields as desired. Use the Navigation keys to move between fields, then use the keypad to enter information.
- When finished, press the **Save** soft key or press the **Options** soft key and highlight the **Save** option. Press the **Select** soft key or the  key.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

- When the idle screen displays, press the **Phonebook** soft key.

2. Select the **Own number** option by pressing the **Up** or **Down** Navigation key and press the **Select** soft key or the **?** key.
3. Highlight the **Empty** option and press the **Options** soft key or the **?** key. Your phone number is displayed. You may edit the number if you wish. Press the **Save** soft key or the **?** key.

FDN List

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers that your phone may dial.

FDN mode must first be enabled in the Security settings. See "FDN mode" on page 113 for more information on changing this setting.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from your service provider.

Management

The Management menu allows you to select where your contacts will be saved, copy your SIM contacts to your phone, delete your contacts, or check your memory status.

Default Saving

The Default Saving option allows you to choose where your contacts will be saved. The following options are available: