

SGH-X490_Draft

P O R T A B L E T r i / D u a l -
M o d e

T E L E P H O N E

User Guide

Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), Inc.

Headquarters:

1301 E. Lookout Drive

Richardson, TX 75082

Tel: 972.761.7000

Customer Care Center:

1601 E. Plano Parkway, Suite 150

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsungusa.com>

©2005 Samsung Telecommunications America, Inc. is a registered trademark of Samsung Electronics America, Inc. and its related entities.

GH68-xxxx

Openwave® is a registered Trademark of Openwave, Inc.

RSA® is a registered Trademark RSA Security, Inc.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Section 1: Getting Started

Topics Covered

- Activating Your Phone
 - Setting Up Voicemail
-

This section allows you to start using your phone by activating your service and setting up your voice mail.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available, and many others.

 
Installing the SIM Card

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by holding down the  key until the power-off image displays.

Remove the battery. To do so:


1. Slide the battery lock toward the top of the phone and hold it in that position.
2. Lift the battery away, as shown.

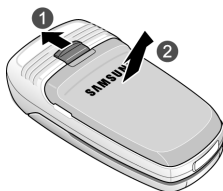

 3. Slide the SIM card into the SIM card socket so that the card locks into place. Make sure the gold contacts of the card face into the phone.

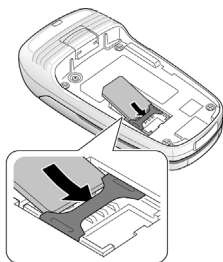

 Note: When you need to remove the SIM card, slide it, as shown, and take it out of the socket.

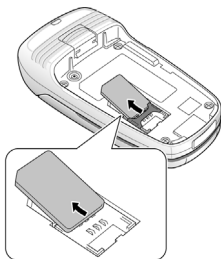

4. Place the battery so that the tabs on the end align with the slots at the bottom of the phone.



5. Press the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter comes with your phone for charging the battery. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

 
You can use the phone while the battery is charging, but this causes the phone to charge more slowly.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 200 minutes.

1. With the battery in position on the phone, plug the connector of the travel adapter into the jack at the bottom of the phone.



2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and disconnect it from the phone by pressing the buttons on both sides of the connector and pulling the connector out.

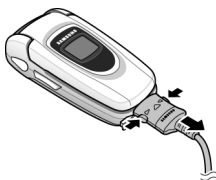

Note: You must unplug the adapter before you remove the battery from the phone during charging; otherwise, the phone could be damaged.




Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, a warning tone sounds and the “Warning Low Battery” message repeats at regular intervals on the

display. When this happens, your phone turns off the backlight to conserve the remaining battery power.


When the battery level becomes too low, the phone automatically turns off.

Switching On or Off the Phone

1. Open the phone.
2. Press and hold the  key until the phone switches on.
3. If the phone asks you to enter the phone password, enter the password and press the **OK** soft key or the  key. The password is preset to "00000000" at the factory. For further details, see "Change Password" on page 89.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key or the  key. For further details, see "PIN Check" on page 88.

The phone searches for your network and after finding it, the Idle screen appears. Now, you can make or receive calls.


Note: The display language is preset to English at the factory. To change the language, use the Language menu. For further details, see "Language Settings" on page 87.

5. When you wish to switch off the phone, press and hold the  key until the power-off image displays.

Setting Up Your Voice Mail

To access your voice mail from your keypad, use the following steps:

1. Open the phone to access your keypad.


2. From an Idle screen, press and hold the  key.
3. Follow the voice mail prompts to access messages.

Accessing Your Voice Mail

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Highlight **Recent Calls** and press the ✕ key.
3. Highlight **Voice mail** and press the ✕ key.
4. Highlight **Call voice mail** and press the ✕ key. Your phone dials the specified voice mail number.
5. When connected, follow the voice prompts from the voice mail center.

Changing the Voice Mail Number

Your SIM card gives you default service number of the voice mail center. However, you may need to change the number. Use the following procedures to change your voice mail number.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Highlight **Recent Calls** and press the ✕ key.
3. Highlight **Voice mail** and press the ✕ key.
4. Highlight **Voice server number** and press the ✕ key. Select the Voice server 1 or 2 options and press the ✕ key.
5. Press the **Edit** soft key to change the number.
6. Press the **OK** soft key to save the update.
7. Press the  key to return to Idle mode.

Section 2: Understanding Your Phone

Topics Covered

- Features of Your Phone
 - Front View of Your Phone
 - Command Keys
 - Understanding the Display Screen
-

This section outlines some key features of your phone. It also displays the screen and the icons that are displayed when the phone is in use.

Features of Your Phone


Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

User friendly, menu driven access to features and options.

- Instant Messaging capability
- Multimedia capability
- Personal Assistant feature provides calendar, to-do list, alarms, calculator, and currency exchange.

Front View of Your Phone

The following illustrations show the main elements of your phone:

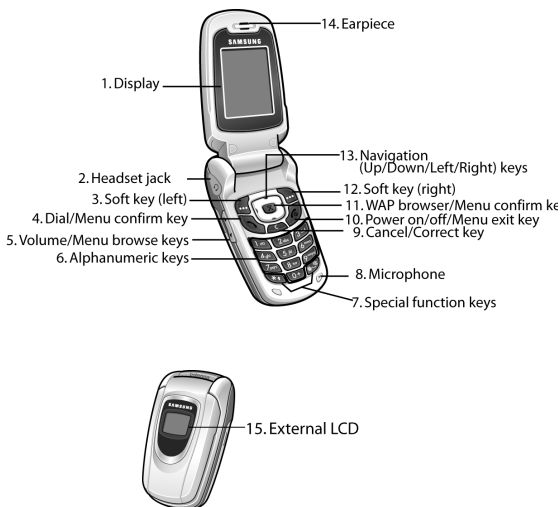 

Keys

 
The following list correlates to the front and rear illustrations.

1. Display area where text and graphics are displayed.
2. The headset jack is used for the hands-free headset.
3. Performs the functions indicated by the screen text on the bottom line of the display.
4. Makes or answers a call.
In Idle mode, recalls the last number dialed or received when held down.
In Menu mode, selects a menu function or stores information that you have entered, such as a name in the phone or SIM memory.
5. During a call, adjusts the earpiece volume.
In Idle mode with the phone open, adjusts the ring volume. With the phone closed, turns on the external display when held down.
6. Enters numbers, letters, and some special characters.
7. Enters special characters. Performs various functions.
8. The microphone used during phone calls and voice memo recordings.
9. Deletes characters from the display.
In Menu mode, returns you to the previous menu level.

10. Ends a call. Also switches the phone on and off when held down.
In Menu mode, cancels your input and returns the phone to Idle mode.
11. In Idle mode, launches the WAP (Wireless Application Protocol) browser.
In Menu mode, selects the highlighted menu options.
12. Performs the functions indicated by the screen text on the bottom line of the display.
13. In Menu mode, scrolls through the menus and Phone book.
In Idle mode, the Down key allows you to access the **Phone book** menu directly.
When entering text, moves the cursor to the left or right, depending on which side you push.
14. The earpiece is used to listen to audio from your phone.
15. The external display shows the received signal strength, the phone battery level, the date and time.

Display Layout

The display has 3 areas:

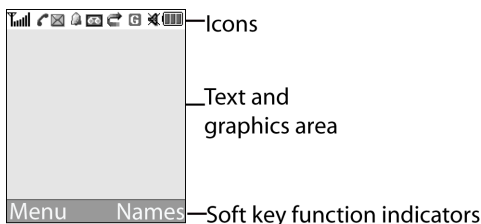

Icons



Shows the received signal strength. The greater the number of bars, the stronger the signal.



Appears when a new text message has been received.



Appears when a new voice mail has been received.



Appears when a new multimedia message has been received.



Appears when you set an alarm to ring at a specified time. For details, see page "Alarm" on page 98.



Appears when you are out of your service area.






Appears when a call is in progress.

Appears when you are connected to a WAP service.



Appears when the Call Forwarding feature is active. For details, see page "Call Forwarding" on page 92.

-  Appears when Silent mode is active or you set the phone to vibrate when you receive a call.
-  Appears when Mute mode is active.
-  Shows the level of your battery. The more bars you see, the more power you have remaining.

Backlight

A backlight illuminates the display and the keypad. When you press any key or open the phone, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting in the **Back light** menu. The display turns off after one minute to conserve battery power.

To specify the length of time the backlight is active, set the **Back light** menu. See "Backlight" on page 84 for further details.

External Display

Your phone has an external display on the front of the phone. It indicates when you have an incoming call or message. It also alerts you at a specified time when you have set an alarm. The backlight turns on and the corresponding icon appears on the external display.

When you close the phone, the display shows the current time on a digital clock.


Section 3: Call Functions

Topics Covered

- Making a Call
 - Adjusting the Call Volume
 - Answering a Call
 - Call Log
 - Silent Mode
-


This section allows you to make or answer a call. It also includes the features and functionality associated with making or answering a call.

Making a Call

When the idle screen displays, enter the area code and phone number, and press the  key.

Note: When you activate the Auto redial option in the Extra settings menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. See page "Extra Settings" on page 100 for further details.


Making an International Call

1. Press and hold the 0 key. The + character appears.
2. Enter the country code, area code, and phone number and press the  key.

Correcting the Number

1. To clear the last digit displayed, press the C key.
2. To clear any other digit in the number, press the Left or Right key until the cursor is immediately to the right of the digit to be cleared. Press the C key.
3. To clear the whole display, press and hold the C key.

Ending a Call








When you want to finish your call, briefly press the  key.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the call recipient or caller is identified. See "Caller ID" on page 116 for further details.

To recall any of these numbers:

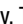1. If you have typed characters on the display, press the .

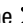- key to return to Idle mode.
2. Press the  key to display a list of the most recent numbers used in the order you dialed or received them.
 3. Use the **Up** and **Down** keys to scroll through the numbers until the number you want highlights.
 4. To dial the number, press the  key.
 5. To delete the number, press the **Options** soft key and select **Delete**. Press the **Select** soft key or the  key. To confirm deletion, press the **Select** soft key or the  key to return.
 6. To delete all of the numbers, press the **Options** soft key and select **Delete All**. Press the **Select** soft key or the  key.
 7. Highlight the call list to delete and press the **Select** soft key or the  key. Press the **OK** soft key to delete. To confirm deletion, press the **Yes** soft key or the **No** key to return.
 8. Press the  key to return to Idle mode.

Making a Call from the Address Book

You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called Address book.

Once you have stored a number in the Address Book, you can dial it by pressing a few keys. You can also assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details about the Phone book feature, see "Finding a Address Book Entry" on page 52.

Adjusting the Call Volume

During a call, if you want to adjust the earpiece volume, use the Volume keys on the left side of the phone.


Press the ▲ key to increase the volume level and the ▼ key to decrease the level.


In Idle mode, you can also adjust the keypad tone volume using these keys.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.


The caller's phone number, or name if stored in Phone book, displays.

1. If necessary, open the phone. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey answer** option in the **Extra settings** menu is activated, you can press any key to answer a call except for the  key and the **Reject** soft key.

If the **Open to Answer** option in the **Extra settings** menu is activated, you can answer the call simply by opening the phone.



Note: To reject an incoming call, press and hold the Volume keys on the left side of the phone before opening the phone, or press the **Reject** soft key or  key.

2. End the call by closing the phone or pressing the  key.

Note: You can answer a call while using the Phone book or menu features. After ending the call, the phone returns to the function screen you were using.

Call Log

All incoming, outgoing and missed calls are listed in the Call Log.

1. To access the Call Log option, press the  key. A list of calls displays.
2. Press the **Options** soft key to get Details, Call Back, Paste, Send Message, or Delete the calls.
3. To place a call press the  key.

Viewing Missed Calls


When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you have missed displays on the idle screen immediately after a call is missed.

To view a missed call immediately:

1. If the phone is closed, open the phone.
2. Press the **Missed** soft key.

The number corresponding to the most recent missed call displays, if available.

3. To scroll through the missed calls, press the **Up** or **Down** key.
4. To call the number displayed, press the  key.

5. To delete a missed call number, press the **Options** soft key or the ✕ key. See below.

Editing a Missed Call Number

When the number corresponding to the missed call is not available, the Edit number option does not display.

1. Press the **Options** soft key.
2. Press the **Up** or **Down** key to highlight the **Paste** option.
3. Press the **Select** soft key or the ✕ key.
4. Press the **Left** or **Right** key to change the number.
5. To store the number, press the **Save** soft key or the ✕ key. Select a new location, type, and enter a name. Press the **OK** soft key to save.
6. To call the number, press the ↵ key.

Deleting a Missed Call

1. Press the **Options** soft key or the ✕ key.
2. If necessary, press the **Up** or **Down** key to highlight the **Delete** option.
3. Press the **Select** soft key or the ✕ key.
4. To confirm deletion, press the **Yes** soft key or the **No** key to return.

You can press the ⏏ key at any time to exit the Missed Call feature.

Note: You can access the Missed Call feature at any time by selecting the Missed calls menu.

Silent Mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

In Idle mode, press and hold the **#** key until the “Silent mode” message and the Vibration icon (🔊) display.

In Silent mode, instead of sounds, your phone will vibrate, or flash its light, depending on the function and the situation.

 
To exit and reactivate the previous sound settings, press and hold the **#** key again until “Exit silent mode” appears. The Vibration icon (🔊) no longer displays.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize it. These functions are arranged in menus and sub-menus, accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using; the labels on the bottom line of the display just above each key indicate their current role.

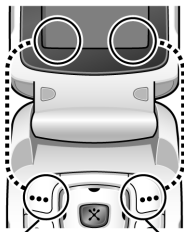

Press the left
soft key for
Menu mode.

Press the right
soft key to access
the Address Book menu.

Selecting Options

To view the various functions and options available and to select the one you want:

1. Press the appropriate soft key.
2. To select the function displayed or the option highlighted, press the **Select** soft key or the **X** key.
3. To view the next function or highlight the next option on a list, press the **Down** key or the **▼** key on the left side of the phone.
4. To move back to the previous function or option on a list, press the **Up** key or the **▲** key on the left side of the phone.
5. To move back up one level in the menu structure, press the **Left Navigation** key or the **↶** key.
6. To exit the menu structure without changing the settings, press the **End** key.

In some functions, you may be asked for a password or PIN. Enter the code and press the **OK** soft key or the **X** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

Options During a Call


Your phone provides a number of control functions that you can use during a call.

Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if your network supports this service.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Resume** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Address Book.
2. Press the  key to dial the second call.

The first call is automatically put on hold.


Or

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

When you have an activate call and a call in hold, you may switch between the two calls, changing the one on hold to activate and placing the other on hold.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with that person.



When you want to finish, end each call normally by pressing the  key.

Switching off the Microphone (Mute)


You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key or the  key.
2. If necessary, press the **Down** key to highlight the **Mute** option.
3. Press the **Select** soft key or the  key. The other person can no longer hear you.

To switch the microphone back on:

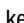1. Press the **Options** soft key or the  key.
2. If necessary, press the **Down** key to highlight the **Unmute** option.

3. Press the **Select** soft key or the **X** key. The other person can hear you again.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the **Send keys** option must be selected.

Searching for a Number in Address Book

You can search for a number in Address Book during a call.

1. Press the **Options** soft key or the **X** key.
2. Press the **Down** key to highlight the **Address Book** option.
3. Press the **OK** soft key or the **X** key.

The Phone book entries are listed.


4. Enter the name that you wish to find.
5. If you enter the first few letters of the name, the Phone book entries are listed starting with the first entry matching your input.
6. To view the highlighted entry, press the **View** soft key or the **X** key.

For further details about the Phone book feature, see "Finding a Phone Book Entry" on page 52.


Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the Call waiting menu to Activate. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.

To end a call on hold, press the **Options** soft key or the  key and select the **End held** call option.



To end the current call, press the  key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact your service provider.

Setting up a Multi-Party Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multi-party call, press the **Options** soft key or the  key and select **Join**. Press the **OK** soft key or the  key.

4. To add a new person to the multi-party call, call the new person in the normal way and then press the **Options** soft key or the ✕ key. Select the **Join** option and press the **OK** soft key or the ✕ key.

You can add incoming callers by answering the call and pressing the **Options** soft key or the ✕ key, and selecting **Join**. Repeat as required.

Having a Private Conversation With One Participant

1. Press the **Options** soft key or the ✕ key and choose the **Select** one option. Press the **OK** soft key or the ✕ key.
The list of call participants appears.
2. Highlight a person by pressing the **Up** or **Down** key, and press the **Select** soft key, the ↵ key, or the ✕ key.
3. When the **Private** option highlights, press the **OK** soft key or the ✕ key.

Now you can talk privately to that person. The other participants can continue to converse with each other.

4. To return to the multi-party call, press the **Options** soft key or the ✕ key and select **Conference**. Press the **OK** soft key or the ✕ key.

All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press the **Options** soft key or the ✕ key and choose the **Select** one option. Press the **OK** soft key or the ✕ key.
The list of call participants appears.

2. Highlight a person by pressing the Up or Down key, and press the Select soft key, the ✕ key.
3. Press the **Down** key to select the **Remove** option and press the **OK** soft key or the ✕ key.

The call with that participant ends, but you can continue to talk to the other participants.

4. When you want to end the multi-party call, close the phone or press the 📞 key.

Section 4: Menu Navigation

Topics Covered




- Menu Navigation
 - Menu Outline
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.


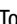


Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu **Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. Select **Phone Settings** and press the **Select** soft key or the  key.
4. If the menu contains sub-menus, **Language** for example, you can access them by pressing the **Select** soft key or the  key.

If the menu that you have selected contains further options, repeat this step.

5. To scroll through the menus, press the **Up** or **Down** key or the Volume keys.
6. To confirm the chosen setting, press the **Select** soft key, or the  key.
7. To return to the previous menu level, press the  key, the  key or the **Left Navigation** key.
8. To exit the menu without changing the settings, press the  key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access any one of them by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the Language menu.

1. Press the **Menu** soft key.
2. Press the **9** key for **Settings**.
3. Press the **2** key for **Phone Settings**.
4. Press the **6** key for **Language**.

The languages available display.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

1. Voice messages
2. Call records
 - 2.1 Missed calls
 - 2.2 Incoming calls
 - 2.3 Outgoing calls
 - 2.4 Delete all
 - 2.5 Call time
 - 2.5.1 Last call
 - 2.5.2 Total outgoing

2.5.3 Total incoming

2.5.4 Reset timers

3. t-zones

3.1 Home

3.2 Favorites

3.3 Go to URL

3.4 Clear cache

4. IM

5. Messages

5.1 Text messages

5.1.1 Create

5.1.2 Inbox

5.1.3 Outbox

5.1.4 Delete all

5.2 Picture messages

5.2.1 Create

5.2.2 Inbox

5.2.3 Outbox

5.2.4 Draft

5.2.5 Delete all

5.3 Browser messages

5.3.1 Inbox

5.3.2 Receive

5.3.3 Delete all

5.4 Voice mail

5.4.1 Call voice mail

5.4.2 Voice server number

5.5 Broadcast messages*

5.6 Settings

5.6.1 Text messages

5.6.2 Picture messages

5.7 Memory status

5.7.1 Text messages

5.7.2 Picture messages

6. Funbox

6.1 t-zones

6.2 Sounds

6.3 Images

6.4 Games

6.5 My photos

6.6 Delete all

6.7 Memory status

7. Organizer

7.1 Alarm

7.2 Calendar

7.3 Calculator

7.4 To do list

7.5 Voice memo

7.5.1 Record voice

7.5.2 Voice memos

7.5.3 Delete all

7.5.4 Settings

7.5.5 Memory status

7.6 Conversion

7.7 Timer

7.8 Stopwatch

8. Camera

8.1 Take and Send

8.2 My Photos

8.3 My Album

8.4 My Journal

8.5 Delete all

8.6 Settings

8.6.1 Photo size

8.6.2 Shutter sound

8.6.3 Default name

8.7 Memory status

9. Settings

9.1 Time & Date

9.1.1 Set date

9.1.2 World time

9.1.3 Set time

9.1.4 Time format

9.1.5 Auto update

9.2 Display settings

9.2.1 Wallpaper

9.2.2 Interior display

9.2.3 Backlight

9.2.4 Brightness control

9.2.5 Service light

9.3 Sound Settings

9.3.1 My MegaTones

9.3.2 Get More MegaTones

9.3.3 Ringtones

9.3.4 Ring volume

9.3.5 Alert type

9.3.6 Keypad tone

9.3.7 Message tone

9.3.8 Power on/off

9.3.9 Alerts on call

9.3.10 Extra tones

9.4 Get More Help

9.5 Greeting message

9.6 Language

9.7 Security

9.7.1 PIN check

9.7.2 Change PIN

9.7.3 Phone lock

9.7.4 Change password

9.7.5 Privacy

9.7.6 SIM lock

9.7.7 FDN mode

9.7.8 Change PIN2

9.8 Extra settings

9.9 Reset settings

9.10 Network services

9.10.1 Call forwarding

9.10.2 Call waiting

9.10.3 Network selection

9.10.4 Caller ID

9.10.5 Band selection

* Shows only if supported by your SIM card.

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using T9 Mode
 - Using Alphabet Mode
 - Using Symbols
 - Using Numbers
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the amount of key strokes associated with entering text.

Changing the Text Entry Mode

When using your phone, you will often need to enter text, such as when storing a name in the Address Book, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

ABC mode

This mode allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three, or four times until it displays.

T9 mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the 5 key can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional Alphabet mode.

Symbol mode

This mode allows you to enter symbols, such as punctuation marks.

 
Number mode

This mode allows you to enter numbers.

Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message.

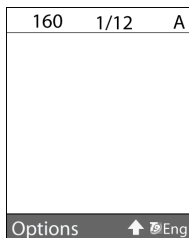

Text input mode indicator

1. To select change the text input mode, press the key.
2. Highlight the input option, and press the **Select** soft key or the key.
3. Choose from the following options:

Eng: ABC mode

Eng: T9 mode

Eng: Number mode

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the 2 to 9 keys. Press each key only once for each letter.

Example: To enter “Hello” in T9 mode, press the 4, 3, 5, 5, and 6 keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.
If the word doesn’t display correctly, press the 0 key or the **Up** or **Down** key to display alternative word choices for the keys that you have pressed.

Example: Both “Of” and “Me” have the 6 and 3 keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the 0 key or the **Up** or **Down** key to

display the alternative words.

2. When you press the **0** key or the **Up** or **Down** key at the last alternative word, the display shows Add on the bottom line. Press the **Spell** soft key or the ✕ key.
3. If necessary, clear the word using the **C** key and enter the word you want to add using ABC mode. See page "Changing the Text Entry Mode" on page 44.
4. Press the **OK** soft key or the ✕ key.

The word is added to the T9 dictionary and becomes the first word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the **Left** and **Right** keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using Alphabet Mode


To use the Alphabet Mode use the **2** to **9** keys to enter your text.


1. Press the key labeled with the letter you want:
 - - Once for the first letter
 - - Twice for the second letter
 - - And so on

2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.


Keys


 . , - ? ! @ : () / 1 _

A B C 2
 a b c 2


D E F 3
 d e f 3

G H I 4
 g h i 4

J K L 5
 j k l 5

M N O 6
 m n o 6

P Q R S 7
 p q r s 7

T U V 8
 t u v 8



W X Y Z 9
w x y z 9

Entering Symbols

Symbol mode allows you to enter symbols by pressing the key labeled with the letter you want. When in a text message screen, press the soft key to access the Symbol mode. The Symbol screen displays the available symbols for each key. Use the **Up** or **Down** Navigation keys to cycle through all available symbols.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the **C** key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the key.

Using Numbers

Number mode allows you to enter numbers by pressing the key labeled with the number you want. When in a text message screen, press the soft key to access the Number mode.

Section 6: Understanding Your Address Book

Topics Covered

- Finding a Address Book Entry
 - Adding a New Address Book Entry
 - Using Address Book Entry Options
 - Dialing a Number from Address Book
 - Dialing a Number from SIM Card
 - Storing a Number Using the Address Book Menu
 - Speed Dialing
 - Deleting all of the Address Book Entries
 - Editing an Existing Address Book Entry
 - Checking the Memory Status
 - Finding My Address Number
-

This section allows you to manage your daily contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

Finding a Address Book Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. Press the **Menu** soft key and select **Address Book**.
2. Press the **Select** soft key or the **X** key when Search highlights. You are asked to enter a name.
3. Enter the first few letters of the name.

The Address Book entries are listed, starting with the first entry matching your input.

4. To view the highlighted entry, press the **OK** soft key.
5. Press the **** key to dial the number, or press the **Options** soft key to access the Address Book entry options.

Storing a Number to the Phone's Memory


1. Press the **Menu** soft key and select **Address Book**.
2. Scroll to **New entry** by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Enter a number you want to store and press the **Save** soft key or the **X** key.
4. Select the **Phone** memory location by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.

5. Select a category of the number to be stored by pressing the **Up** or **Down** key, and press the **Select** soft key or the **X** key.
6. Enter a name and press the **OK** soft key or the **X** key.
For further details about how to enter characters, see "Create" on page 66.
After storing, the phone displays the Address Book entry or name you just created
7. To use the entry options, press the **Options** soft key. For more information see, "Using Address Book Entry Options" on page 54.
8. Tab through the options to assign the Address Book entry Group, Image, and Ringtone settings.
9. To return to the Idle screen, press the **End Call** key.

Storing a Number to the SIM Memory

1. Press the **Menu** soft key and select **Address Book**.
2. Scroll to **New entry** by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Enter a number you want to store and press the **Save** soft key or the **X** key.
4. Select the **SIM** memory location, by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
5. Enter a name and press the **OK** soft key or the **X** key.
For further details about how to enter characters, see "Create" on page 66.

After storing, the phone displays the Address Book entry number you just created

6. To use the entry options, press the **Options** soft key. For more information see, “Using Address book Entry Options”.
7. To return to the Idle screen, press the  key.

Using Address Book Entry Options

While accessing any Address Book entry, press the **Options** soft key to use the options for the entry.

The following options are available:

Edit Number: allows you to edit the number.

Change Name: allows you to edit the name.

Send Message: allows you to send a message to the selected number.

Copy: allows you to copy the number to another location. You can select the memory location, either SIM or Phone, and the location number.

Delete Entry: allows you to delete the name and number from Address Book. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.

Speed Dialing

Once you have stored phone numbers from your Address Book list, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by pressing the associated numeric key.

Setting Up Speed Dial Entries

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **X** key.
2. Scroll to **Speed Dial** by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Select the key to which you wish to assign the speed-dialing number, from the 2 to 9 keys, and press the **Select** soft key or the **X** key.

Note: Memory location 1 is reserved for your Voice mail server number.

4. Highlight **Edit Number** and press the **Select** soft key or the **X** key. Enter a number or press the **Names** soft key to display entries in the Address Book.
5. Select an entry from the Address Book list and press the **OK** soft key or the **X** key.
6. Press the **OK** soft key or the **X** key.

Dialing a Number from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by using the location numbers that were assigned to them in the Address Book.

Note: If you cannot remember a location number, you must go into the **Search** menu in the **Address Book** menu to search for the entry by name. For details, "Finding a Address Book Entry" on page 52.

Dialing a Number from the SIM Card

1. In Idle mode, enter the location number for the phone number you want to dial and press the **#** key.
The list of entries in the SIM card appears, with the desired number highlighted.
2. You can press the **Up** or **Down** key to find other numbers on the list.
3. Press the **Dial** soft key, the **↵** key, or the **✕** key when you have selected the number you want.

Delete All

You can delete all your entries from your phone's memory, your SIM card, or both.

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **✕** key.
2. Scroll to **Delete all** by pressing the **Up** or **Down** key and press the **Select** soft key or the **✕** key.
3. To place a check mark by the memory location you want to empty, All, SIM, or Phone, press the **Select** soft key or the **✕** key.
You can remove the check mark by pressing the **Select** soft key or the **✕** key.
4. Press the **OK** soft key to delete the entries in the selected memory location. A confirmation "Sure to Delete" displays. Press **Yes** to delete or **No** to cancel.
5. Enter the phone password and press the **OK** soft key or the **✕** key.

Note: The password is preset to "00000000" at the factory. To change this password, see page "Change Password" on page 98.

6. When you are finished, press the **C** key or the **✕** key.

Own Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any affect the actual subscriber numbers on your SIM card.

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **✕** key.
2. Select the **Own Number** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **✕** key.
3. Highlight **Edit Number** and press the **Select** soft key or the **✕** key. Enter the phone number you want and press the **OK** soft key or the **✕** key.
4. Highlight **Change Name** and press the **Select** soft key or the **✕** key. Enter the name and press the **OK** soft key or the **✕** key.
5. Highlight **Delete** and press the **Select** soft key or the **✕** key. Select **Yes** to confirm deletion or **No** to cancel.

Group Setting

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **X** key.
2. Scroll to **Group Setting** by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Scroll through the group list by pressing the **Up** or **Down** key.
4. When the group you want highlights, press the **Select** soft key or the **X** key.
5. Select each option and change the settings, as required.
The following options are available:

Ringtone: allows you to set the ring tone to be used when you receive a voice call from a member of that group.

Change Name: allows you to rename the selected group setting.



View Image: allows you to view the graphic displayed when you receive a voice call from a member of that group.

6. When you are finished, press the **C** key or the **End Call** key.

Memory Status

You can check how many names and numbers are stored in Address Book, in both SIM card and the phone memory. You can also see the capacity of both memories.

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **X** key.

2. Select the **Memory status** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Displayed are the total numbers stored in the **Phone** and **SIM**.
4. When you are finished, press the  soft key or the  key.

Service Dialing Number

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, directory enquiries and voice mail numbers.

1. When the Idle screen displays, press the **Menu** soft key. Highlight **Address Book** and press the **Select** soft key or the **X** key.
2. Select the **Service Number** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **X** key.
3. Scroll through the numbers by using the **Up** or **Down** key.
4. To dial the number displayed, press the **Select** soft key or the **X** key.

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Section 7: Messaging

Topics Covered

- Types of Messages
 - Message Alerts
 - Retrieving New Messages
 - Voicemail
 - Deleting Messages
 - Clearing the Message Icon
-

This section allows you to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Using Instant Messenger

Instant Messenger (IM) is a way of sending short, simple messages that are delivered immediately to users online at the moment.

Before using this feature, you need to subscribe to a messenger service. For further details, contact our service provider.

Note: Your phone is set to use your service provider's messenger service by default. You can change the configurations for Instant Messenger, such as the default community or auto sign on.

Start Your Messenger

Note: The p207 handset supports the following Instant Messaging Applications: AIM, ICQ, and Yahoo.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging** and then highlight **IM** and press the **Select** soft key or the **X** key.
3. Highlight your established IM application and press the **Select** soft key or the **X** key.
4. Select **Sign On** and press the **Select** soft key or the **X** key.
5. Enter your **Logon ID** (this field title will change reflect the name used in each instant message application) and your **Password** and press the **OK** soft key.

Note: Use the Down Navigation key to the **Auto-Sign On** option and press the **✕**. Press the **OK** soft key to continue.

6. Press the **Options** soft key and select **Buddy List**. The subscribers of the messenger service displays.
7. Select the person you want to talk to.
8. Start the conversation with the person as you would on a normal messenger for a PC.
9. When you want to end the conversation, press the **Options** soft key and select **Sign Off**.

Viewing the Conversation Log

You can view the log of your conversations in the Instant messenger Conversation log.


Online or offline, press the **Options** soft key and select **Conversation Log**.

Creating and Sending New Messages

This section guides you through the procedure to send various types of messages.


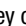
Creating and Sending a Simple Text Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Create New Message** and press the **Select** soft key or the **✕** key.
3. Highlight **Text Message** and press the **Select** soft key or the **✕** key. The **Write New** screen appears.


Note: Use the  key to change text input settings.

4. Create your message.
5. When you have finished writing the message, press the **Options** soft key. Choose from the following options:
 - Send to Number: allows you to select from Save and Send or Send Only to the specified number.
 - Send to Email: allows you to Save and Send or Send only to the specified email address.
6. Select **Send Only** to send the message. Continue to the next step.
Alternatively, select **Save and Send** to save the message in the **Sent** folder.

Note: For details about using other options, see the next page.

7. Choose from **Add Address Book** or **Add Group** or enter a destination number. If you want to send the message to multiple destinations, press the **OK** soft key after entering a number and repeat this step.
8. When you have finished entering destination numbers, press the  key or the  key.

Creating and Sending on Enhanced Text Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Create New Message** and press the **Select** soft key or the  key.

3. Highlight **Text Message** and press the **Select** soft key or the **X** key. The **Write New** screen appears.
4. Create your message.
5. While entering the message text, press the **Options** soft key to access the following options to enhance your message:

Note: When you add media items to a message, the number of characters you can enter decreases.





- **Send to Number:** allows you to select from **Save and Send** or **Send Only** to the specified number.
 - **Send to Email:** allows you to **Save and Send** or **Send only** to the specified email address.
 - **Insert:** allows you to add text from the **Templates** folder, an entry in **Address Book**, or a **URL** address in the **Favorites** folder.
 - **Add Media:** allows you to add one from various default media items, such as **Pictures**, **Animations**, **Melodies** and **Downloads**.
 - **Attach:** you can add entries from the **Name Card (vCard)** and an **vEvent** or **vTodo** from the **Calendar (vCalendar)**.
 - **Save Message to:** allows you to save the message to **Draft** or to **My Folder**.
 - **Language Select:** allows you to change the language to be used in **T9** input mode.
 - **Text Style:** allows you to format the style of the text. For the **Size** attribute, **Medium**, **Large**, and **Small** sizes are available. For the **Bold**, **Italic**, **Underline** and **Strike throughs** attributes, select **Off** or **On**.
6. Complete the message, and send or save it by following the procedure from "Creating and Sending a Simple Text Message" on page 63.

Creating a Long Text Message

When you write a text message, the phone automatically splits it into several messages if your message exceeds the maximum number of characters allowed for sending. The number of split messages to be sent is shown each time your message is split. Depending on your service provider, the maximum number of characters may vary.

Creating and Sending an Multimedia Message



1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Create New Message** and press the **Select** soft key or the **X** key.
3. Highlight **Multimedia Message** and press the **Select** soft key or the **X** key.
4. When **Add Here** highlights, press the **Options** soft key and add the message contents using one of the following options:
 - **Add Text**: enter the message text and press the **X** key. While entering text, you can add a message template or an entry in Address Book, or change the input language by pressing the Options soft key.
 - **Add Graphic**: allows you to add an image or photo. You can take a new photo or add one of the photos stored in the phone's memory.
Select **Take Photo** to take a new photo, or **Photo Album** to add one of the photos stored in the phone's memory, or **Downloads** to add one of the graphics stored in your graphics folder. For further details about using the camera, see "Using the Camera" on page 134.

- **Add Video:** allows you to add a video clip. You can record a new video clip or add one of video clips stored in the phone's memory.
Select **Record Video** to take a new video, or **Video Album** to add one of the video's stored in the phone's memory, or **Downloads** to add one of the videos stored in your video folder. For further details about using the camera, see "Using the Camera" on page 134.
- **Add Audio:** allows you to add a sound file. You can record a new audio clip or add an existing audio clip, or select one of sound clips stored in the Audio folder.
Select **Record Audio** to record a new voice memo or **Audio List** to add one of the voice memos or sound clips stored in the phone's memory. You can add Downloaded sounds if they are in correct format and your service provider supports them.
- **Add Subject:** allows you to enter text for the subject.
- **Send:** allows you to send the message.
- **Save to:** saves the message to Draft or My Folder.
- **Settings:** allows you to change the message settings. After changing the settings, press the  soft key or the  key to go back to the message screen.
- **Add Destination:** allows you to enter destination numbers or addresses. After adding them, press the  key or the  key to go back to the message screen.
- **Preview:** shows the message you created.

Note: You can add text, an image, and a sound only once for each page.

5. If you need to add another page for additional information, use the **Up** or **Down** Navigation keys to highlight **Page 1/x**. Press the **Options** soft key and select **Add Page**.

6. Repeat step 4 until you have finished creating your message.
7. If you want to change the added items, scroll to the one you want and press the **Options** soft key or **⌘** key.
8. When you have finished creating the message, press the **Options** soft key and choose **Send**.
9. Select a destination type, **To**, **Cc**, or **Bcc**.
10. Choose one of the following options:
 - Phone Number: allows you to enter the phone number you want.
 - Email Address: allows you to enter the email address of the recipient.
 - Address Book: allows you to retrieve a number from your Address Book.
11. Enter a Phone Number or an Email Address, or select a number from the Address Book.
12. When the correct number or address displays, press the **OK** soft key or the **⌘** key.
13. To add a destination, select **Add Destination** and repeat from step 9.



If you want to edit the destinations, select the one you want. You can change or delete it.
14. To enter additional numbers or addresses to the other destination types, press the  key or the  soft key and repeat steps 8 through 12.

You can enter up to 10 destination search to **To**, **CC**, and **Bcc**.

15. When you have finished entering the destinations, select **Send Message**. Your phone sends the message.



Creating and Sending an Email

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Create New Message** and press the **Select** soft key or the **X** key.
3. Highlight **Email** and press the **Select** soft key or the **X** key.
4. Enter the subject of your email and press the **OK** soft key or the **X** key.
5. Enter the email text and press the **Options** soft key.
6. Select **Add Attachments** and the following options are available:
 - Add vCard: allows you to attach a vCard from your Address Book to the email.
 - Add vCalendar: allows you to attach the a memo from the Personal Organizer.
 - Add Graphic: allows you to add attach a photo recently taken, or from your Photo Album, or an attachment stored in the Downloads folder.
 - Add Video: allows you to add a video recently taken, from your Video Album, or an attachment stored in the Downloads folder.
 - Add Audio: allows you to add a Voice Memo you've recorded or previously recorded audio stored in the Audio List, or audio stored in the Downloads folder.

After selecting the file type you want to add, choose an item from the list. You can add up to 9 items. After adding, press the  soft key or the  key to go back to the email screen.

- **View Attachment:** allows you to view the information included in the email attachment .

If you want to remove an attached item, select **Attachment View** soft key and then the **Discard** soft key.

7. Select **Insert** to add a message text from the **Text Templates** folder, an entry in **Address Book**, or a URL address in the **Favorites** folder.
8. Select **Language** to change the language to be used in T9 input mode.
9. Select **Send Only** to send the email.
10. Select **Save and send** to save the email to the **Sent** folder and also sends it to the recipient.
11. Select **Save to** to save the email the **Draft** or **My** folder.
12. Select **Add Destination** to allow you to add destination addresses. After adding, press the  soft key or  key to go back to the email screen.
Select a destination type **To**, **Cc**, or **Bcc**.
13. Select **Properties** to show the email subject, the list of the recipients you added, if any, and message text.
14. To add more addresses, select **To**, **Cc**, or **Bcc**.
15. Choose one of the following options:
 - **Direct Enter:** allows you to directly enter the email address you want.
 - **Address Book:** allows you to retrieve an email address from your **Address Book**.
16. When there is an email address already entered in the selected destination type, select **Add Destination**.

17. When you are finished adding the destinations, select **Send Email**. Your phone sends the email.

Using Message Templates


Your phone has message templates to allow you to retrieve them when creating a message. You can change the templates as your preferences or send a message immediately.




1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Templates** and press the **Select** soft key or the **X** key.
3. Select a template and press the **Options** soft key to access the following options:
 - Edit: allows you to change the template.
 - Send Message: allows you to send an SMS message using the template.
 - Delete: deletes the template.
 - Add New: allows you to add a frequently used message to the template list.
4. When you have finished, press the **End** key.

Retrieving New Messages


While text messages from other phones are delivered directly to your phone, MMS messages and emails will be stored in the Inbox of the message server and the server will alert you to new messages. Therefore you need to retrieve new messages to your phone and read them on the phone.


Retrieving an MMS Message

When a new MMS message comes in, the display shows the MMS Message icon () and a text notification along with the sender's number.

1. Press the **View** soft key or the  key to view brief information about the message, such as the sender's number, the message size, and the subject.
If you want to view the message later in the Inbox, press the **Exit** soft key.
2. Press the **Options** soft key or the  key to access the following options:
 - **Retrieve**: retrieves the message from the MMS server.
 - **Delete**: deletes the message.
 - **More Information**: shows you detailed information about the message.
3. **Select Retrieve.**
Your phone retrieves the message contents from the server and displays it.
4. To scroll through the message, press the **Up** or **Down** key.
5. When you have finished, press the  key.

Retrieving an Email

When a new email comes in, the display shows the Email icon () and a text notification.

1. Press the **View** soft key or the **X** key to view email information.
2. Press the **Options** soft key and select **Retrieve**.
Your phone retrieves the new emails from the server and displays them on the Inbox list.
3. To read an email, select it on the list.
4. When you have finished, press the  key.

Viewing Messages




The My Messages screen provides 6 message folders:

- **Inbox:** stores incoming SMS, MMS, CB, and WAP message
- **Email Inbox:** stores incoming emails.
- **Sent:** stores the messages your phone successfully have sent.
- **Outbox:** stores the messages and emails your phone is attempting to send temporarily.
- **Draft:** stores the messages and emails you have saved without sending or tried to send.
- **My Folders:** allows you to create a folder that is used to store messages. You can create up to 5 message folders to manage your messages and emails.

Viewing a Message

1. In Idle mode, press the **Menu** soft key to access Menu mode.

2. Select **Messaging**. Highlight **My Messages** and select the message folder. The message list opens.
The icons on the left of the number indicates the message type

- : indicates SMS
- : indicates MMS
- : indicates email

The icons on the right of the message subject indicate the memory location and the lock status.

From the message list, you can access the following options by pressing the **Options** soft key.


3. Select a message on the list. The message content displays.

For a Multimedia message, the display presents the message and then switches to the message view screen.

4. Press the **Up** or **Down** key to scroll through the message screen. For a Multimedia message, press the **Left** or **Down** key to scroll to other pages, if the message has more than one message.

You can access the message options by pressing the **Options** soft key.

- View: allows you to view the message received.
- Delete: deletes the message.
- Move to Myfolder: allows you to move your messages to a folder you have defined.
- Sort by: allows you to sort this message by Date, name, Subject, Size and Type.
- Protection: allows you to set the protection for a message.

5. Press the * or # key to scroll to the previous or next message.
6. When you have finished, press the  key.

Using Message Options

While viewing a message, press the **Options** soft key to access the following options:

Options for SMS Messages

- Reply: allows you to reply to the message received
- Forward: allows you to forward the message to another destination.
- Delete: deletes the currently selected message.
- Callback: allows you to dial the number that the message has listed.
- Move to Myfolder: allows you to move the message to a specific folder. You must create a folder in the My Folders option.
- Move to Phone/SIM : allows you to move the message to the Phone or SIM card's memory.
- Save Address: allows you to save the address from which the message originated.
- Save Media/Attach: allows you to move the attachment to a specific folder.
- Protection: allows you to set the protection for the message.

Options for Multimedia Messages

- Reply: allows you to reply to the destination from which the message originated. Choose from Reply via Text Message or Reply via Multimedia Message.
- Reply All: allows you to reply to all addresses listed in the recipient list.

- Forward: allows you to forward the message to another destination. You may Add Subject or simply Send.
- Delete: deletes the message.
- Callback: allows you to dial the number from which the message was originated.
- Move to Myfolder: allows you to move this sent message to a folder you have previously created.
- Save Address: allows you to extract the recipient or sender's number or address, and URL, email addresses or phone numbers from the message text so that you can make a call, send an SMS message, or save them in your phone's memory.
- Save Contents: allows you to save the Picture, Video, or Sound from the message received.
- Properties: shows you information about the message.

Options for Email Messages

- Reply: allows you to reply to the message.
- Forward: allows you to forward the message to other Email addresses or phone numbers.
- Delete: deletes the message.
- Callback: allows you to call the phone numbers from the message text.
- Move to Myfolder: allows you to move the message to one of the folders you have defined.
- Move to Phone/SIM: moves the message to the phone's memory or SIM card.
- Save Address: allows you to save the recipient or sender's number and URL, Email addresses or phone numbers from the message text.
- Save Media/Attach: allows you to save media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message.

- **Protection:** allows you to lock the message keeping it from being deleted or unlocks the message.

Managing Your Own Message Folders

You can create up to 5 message folders to store messages separately from the default message folders.

Creating a Message Folder

1. From the message folder list, press the **Options** soft key.
2. Select **Create Folder**.
3. Enter a folder name and press the **OK** soft key or the **X** key.
4. When you have finished, press the **End** key.

Moving a Message to a Folder

1. From any message list, select the message you want to move and press the **Options** soft key.
2. Select **Move to Myfolder**.
3. Select one of the folders you have defined. The message is moved to the folder.
4. When you have finished, press the **End** key.

Renaming a Message Folder

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **My Messages** and select the **My Folders**. The folder list opens.
3. Scroll to the folder you want to rename.
4. Press the **Options** soft key and select **Rename Folder**.
5. Clear the current name and enter a new name.

6. Press the **OK** soft key or the **X** key.
7. When you have finished, press the **End** key.

Deleting a Message Folder

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **My Messages** and select the **My Folders**. The folder list opens.
3. Scroll to the folder you want to delete.
4. Press the **Options** soft key and select **Delete Folder**.
5. Press the **Yes** soft key or the **X** key to confirm the deletion.
6. When you have finished, press the **End** key.

Deleting Messages

You can delete the messages in each message folder one by one or all at one time. You can also delete all of your messages at one time.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging**. Highlight **Delete All** and press the **Select** soft key or the **X** key.
3. Scroll to the message folder you want to delete and place a check mark by pressing the **X** key. Repeat this step to select more message folders.
To delete all of the messages in the folder, select **All Messages**.
4. Press the **Delete** soft key.

5. A “Delete All” confirmation message displays. Press the ✕ key to mark the “Include Protection” option. Press the Yes soft key to confirm the deletion.
6. A message “Are you Sure?” displays, press the Left soft key or the ✕ key.
7. When you have finished, press the ⏮ key.

Changing Message Settings

You can set up various options for using messaging services.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Messaging** and highlight **Settings**. Press the **Select** soft key or the ✕ key.
3. Select the type of messages for which you want to change. Press the **Select** soft key or the ✕ key.

IM

The following options are available:

Default Community: allows you to select the community you want to join by default.

Profile: allows you to choose the profile information required to access the instant message utility.

Text Message

The following options are available:

Sending Profile: allows you to set the options for sending text messages. Choose from the following options:

- SMS Settings

- Email Settings
- Empty

Reply Path: allows the recipient of your message to send you a reply through your message center, if your network supports this service.

Delivery Report: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer Selection: allows you to select either GSM or GPRS, depending on your network.

Preferred Memory (Sent, Outbox, Draft): allows you to select a default memory where your outgoing or incoming messages are stored. Choose from **In Card** or **In Phone**.

Multimedia Message

The following options are available:

Delivery Report: when this option is enabled, the network informs you whether or not your message has been delivered.

Read Reply: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

Auto Download: you can set whether or not your phone retrieves new incoming messages from the MMS server without notifications.

Off: you need to manually download new messages by using the **Retrieve** option.

On: the phone automatically retrieves new messages from the server. As soon as you receive a message you can use more options while you are reading.

Message Acceptance: you can specify the category of messages you want to receive.

Expiry Date: you can select the length of time your messages are stored in the message center after they are sent.

Delivery Time: you can set a time delay before the phone sends your messages.

Priority: you can select the priority level of your messages.

Report Allowed: when this option is enabled, the sender of an incoming message receives a delivery report from the network.

Page Duration: you can set the length of time one page of an outgoing message displays on the message presentation screen. After a specified time, the display automatically scrolls to the next page.

Profile: you can select a connection profile to be used for sending and receiving MMS messages.

Email

The following options are available:

Account: You can configure up to 10 email accounts using different service providers. The last account you accessed is automatically activated for sending or receiving email messages.

For each account, the following options are available:

- Account Name: enter a name for the current account.
- Display Name: enter the name to be displayed in your outgoing messages as the sender name.
- Email Address: enter your email address.
- Protocol Type: specify an email protocol type for the incoming server, either POP3 or IMAP4. Contact your email service provider for more information.

Note: For the IMAP4 protocol, you can set whether or not the phone retrieves emails with attachments. You can also select the number of email headers you want to retrieve.

- Incoming Server: enter the IP address or domain name of the server to be used for receiving messages. Your email service provider can give you this information.
- User ID: enter your email ID.
- Password: enter your email password.
- Outgoing Server: enter the IP address or domain name of the server to be used for sending messages. Your email service provider can give you this information.
- Use SMTP Auth.: specify a protocol type for the server used.
- Reply-to Address: enter the reply to address for email address.

Polling Interval: you can select how often the phone checks the server for incoming messages.

Signature: you can attach your name, phone number, simple memo or tag line as a signature to your email.

Send Copy to Self: you can set whether or not your phone sends a copy of the outgoing email to your email address.

Delivery Report: you can activate or deactivate the report function. When this function is activated, the network

informs you whether or not your email has been delivered.

Read Reply: you can set whether or not your phone sends a request for a reply along with your message to the recipient.

Download Method: you can choose the display of the email message. You can select **Header Only** or **Normal**.

Keep on Server: you can set whether or not your emails are deleted from the server after retrieval.

Block Email: you can set up the mail filter to block spam mails. You can enter email address or subject.

Profile: you can select a connection profile to be used for sending and receiving emails.

Push Message

The following options are available:

Receive: you can select whether the phone receive or reject push-messages from the WAP server. Choose from Never, Always, or Only White List.

White List: allows only users on your contact list to push messages.

Broadcast

The following options are available:

Receive: allows you to enable or disable the reception of broadcast messages.

Channel List: allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:

- **Select:** use to enable or disable channels on the list by marking or unmarking them, respectively. A check mark displays in front of each selected channel.
- **Add Channel:** use to enter the ID and title for a new channel.
- **Delete:** use to remove a channel from the list.
- **Edit:** use to change the ID and title of an existing channel.

Language: allows you to select your preferred language in which to display cell broadcast messages.

Please contact your service provider for further details.

Default Text Input Mode

VoiceMode: allows you to set the VoiceMode option as your default text messages.

Predictive Text Mode: allows you to set the default setting for text messages to T9.

Alphabet Mode: allows you to set the default setting for text messages to Alphabet mode.


Checking Memory Status

You can check the memory amount available and remaining for storing the messages.

1. In Idle mode, press the **Menu** soft key to access the Menu mode.
2. Select **Messaging**. Highlight **Memory Status** and press the **Select** soft key or the **✕** key.
3. Select the message type you want.
For **Text Message**, scroll through the memory. The displays shows the number of messages you have stored in the SIM card and memory and the number of

messages you have saved in each folder.

For **Multimedia Message**, **Email**, and **Push Message** the displays show the total memory amount, including the amount of memory available and used for storing messages. It also shows the memory amount used for each message folder.

4. When you have finished, press the  key.

Section 8: Changing Your Settings

Topics Covered

- Time & Date
 - Phone Settings
 - Display Settings
 - Sound Settings
 - Network Settings
 - Security Settings
 - Ringer Settings
 - Resetting Your Phone
-

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Time & Date

This menu allows you to change the current time and date displayed.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** and highlight **Time & Date**. Press the **Select** soft key or the **X** key. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
3. When you have finished, press the **End** key

Set Time

Allows you to enter the current time. You can choose the time format in the **Time format** menu.

Set Date

Allows you to enter the month, day, and year. .

Time Format

Allows you to change the time format to **12 hours** or **24 hours**.

Auto Update

Allows you to receive time information from your service provider's network.

- **Off:** you need to manually set the time and date according to the current time zone using the Set time menu (Menu 9.1.1).
- **On:** the phone automatically updates the time and date according to the current time zone using the network service.

- Confirm first: the phone asks for a confirmation before the update.

Note: Automatic updates of time and date does not change the time you have set for alarm settings or calendar memos.

Phone Settings

To customize the settings for your phone use the following steps:

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** and highlight **Phone Settings**. Press the **Select** soft key or the **X** key.
3. Select a menu and then change the setting. If the menu has submenus, repeat as necessary.
4. When you have finished, press the **End** key

Language

You can select a display or text messaging language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Depending on your country, service provider, or the software version of the phone, the Automatic option may not display.

Greeting Message

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.



Extra Settings


You can turn the automatic redialing or answering features on or off.

1. From the **Phone Settings** menu, Select **Extra Settings**
2. To turn a feature on, press the **On** soft key or the **✕** key.
A check mark displays in front of the option.
3. To turn a feature off, press the **Off** soft key or the **✕** key.
The check mark no longer displays.

The following options are available:

Note: The interval between call attempts varies.

- **Auto redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key or the Reject soft key. To reject the call, press the  key or the Reject soft key.
- **Open to Answer:** when this option is checked, you can simply open the phone to answer a call. When it is unchecked, you must open the phone and press a key to answer a call, depending on the setting of the Anykey answer option. See below.

When this option is unchecked, you must press the  key or Accept soft key to answer a call.

Display Settings

In this menu, you can change various settings for the display or backlight.

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Select **Settings** and highlight **Display Settings** and press the **Select** or **X** key.
3. Select a menu and then change the setting. If the menu has submenus, repeat this step.
For the details of each menu, see the next sections.
4. When you have finished, press the **Back** key

Wallpaper

This menu allows you to change the background image or the color of the text to be displayed in Idle mode.

The following options are available:

- **Shop Graphics:** This menu allows you to access the web site preset by your service provider to download images. Once you have downloaded images, they are saved in the Graphics folder.
- **Animations:** Animation allow you to choose the multi-media or pictures that appear in your phone's display when you turn it on, turn it off, and while in standby mode (wallpaper)
- **Graphics:**
- **Text Position:** you can specify the positioning of the text in the display.
- **Text Color:** you can specify whether or not the phone displays the time and date on the Idle screen.

Skin

This menu allows you to select the menu display style. You can choose either **Pattern 1** or **Pattern 2**.

Back Light Time

You can select the length of time the backlight is on. The backlight turns on when you press a key, when you open the phone or you receive a call or message, and remains on for the specified length of time.

Brightness Control

You can adjust the display brightness to see it better in different lighting conditions.

Press the **Up** or **Down** key or press the **Volume** keys to adjust the brightness.

Main LCD

You can adjust the Main LCD display brightness to see it better in different lighting conditions.

Press the **Up** or **Down** key or press the **Volume** keys to adjust the brightness.

External LCD

You can adjust the external LCD display brightness to see it better in different lighting conditions.

Press the **Up** or **Down** key or press the **Volume** keys to adjust the brightness.