

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys or by using the shortcuts.

Accessing a Menu Function by Scrolling

1. In Idle mode, press the **Menu** soft key to access Menu mode.
2. Scroll using the Navigation keys to reach a main menu, **Settings** for example. Press the **Select** soft key or the **⌵** key to enter the menu.
3. If the menu contains sub-menus, **Language** for example, you can access them by pressing the **Select** soft key or the **⌵** key.
If the menu that you have selected contains further options, repeat this step.
4. To scroll through the menus, press the **Up** or **Down** keys.
5. To confirm the chosen setting, press the **Select** soft key, or the **⌴** key.
6. To return to the previous menu level, press the **⏮** key or the **⏪** key.
7. To exit the menu without changing the settings, press the **⏮** key.

Using Shortcuts

The menu items, such as menus, sub-menus, and options, are numbered and can be accessed quickly by using their shortcut numbers. For the main menus, you can access

any one of them by pressing the number keys (1 to 9) corresponding to their location on the screen.

Example: Accessing the Language menu.

1. Press the **Menu** soft key.
2. Press the **9** key for **Settings**.
3. Press the **5** key for **Language**.
4. Press the **1** key for **Text language**.

The available languages are displayed.

Menu Outline

The following list shows the menu structure and indicates the number assigned to each option.

1. Voice messages

2. Call records

- 2.1 Missed calls
- 2.2 Incoming calls
- 2.3 Outgoing calls
- 2.4 Delete all
- 2.5 Call time
 - 2.5.1 Last call
 - 2.5.2 Total outgoing
 - 2.5.3 Total incoming
 - 2.5.4 Life time
 - 2.5.5 Reset timers

3. t-zones

- 3.1 Home
- 3.2 Favorites
- 3.3 Go to URL
- 3.4 Clear cache

4. IM

5. Messages

5.1 Text messages

- 5.1.1 Create
- 5.1.2 Inbox
- 5.1.3 Outbox
- 5.1.4 Delete all

5.2 Picture messages

- 5.2.1 Create
- 5.2.2 Inbox
- 5.2.3 Outbox
- 5.2.4 Draft
- 5.2.5 Delete all

5.3 Browser messages

- 5.3.1 Inbox
- 5.3.2 Receive
- 5.3.3 Delete all

5.4 Voice mail

- 5.4.1 Call voice mail
- 5.4.2 Voice server number
- 5.5 Broadcast*
- 5.6 Settings
 - 5.6.1 Text messages
 - 5.6.2 Picture messages
- 5.7 Memory status
 - 5.7.1 Text messages
 - 5.7.2 Picture messages

6. Funbox

- 6.1 t-zones
- 6.2 Sounds
- 6.3 Images
- 6.4 Games
- 6.5 Delete all
 - 6.5.1 Sounds
 - 6.5.2 Images

6.6 Memory status

7. Organizer

- 7.1 Alarm
- 7.2 Calendar
- 7.3 Calculator
- 7.4 To do list



7.5 Voice memo

- 7.5.1 Record voice
- 7.5.2 Voice memos
- 7.5.3 Delete all
- 7.5.4 Settings
- 7.5.5 Memory status

7.6 Conversion

- 7.6.1 Length
- 7.6.2 Weight
- 7.6.3 Volume
- 7.6.4 Area
- 7.6.5 Temperature


 
 
 
7.7 Timer

7.8 Stopwatch

8. Sound settings

- 8.1 My MegaTones
- 8.2 Get More MegaTones
- 8.3 Ringtones
- 8.4 Ring volume
- 8.5 Alert type
- 8.6 Keypad tone
- 8.7 Message tone

- 8.7.1 Text messages
- 8.7.2 Picture messages

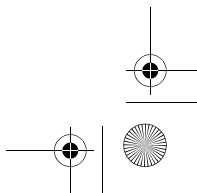

8.8 Power on/off

8.9 Alerts on call

8.0 Extra tones

9. Settings

9.1 Time & Date

9.1.1 Set date

9.1.2 World time

9.1.3 Set time

9.1.4 Time format

9.1.5 Auto update

9.2 Display settings

9.2.1 Wallpaper

9.2.2 Interior display

9.2.3 Backlight

9.2.4 Brightness control

9.2.5 Dialing font color

9.3 Get More Help

9.4 Greeting message

9.5 Language

9.5.1 Text language

9.5.2 Input mode

9.6 Security

9.6.1 PIN check

9.6.2 Change PIN



- 9.6.3 Phone lock
- 9.6.4 Change password
- 9.6.5 Privacy
- 9.6.6 FDN mode
- 9.6.7 Change PIN2

 
 
9.7 Extra settings

9.8 Reset settings


- 9.8.1 Sound settings
- 9.8.2 Phone settings
- 9.8.3 All settings

9.9 Network services

- 9.9.1 Call forwarding
- 9.9.2 Call waiting
- 9.9.3 Network selection
- 9.9.4 Caller ID
- 9.9.5 Band selection



*** Shows only if supported by your SIM card.**

 

Section 5: Entering Text

Topics Covered

- Changing the Text Input Mode
 - Using T9 Mode
 - Using ABC Mode
 - Using Symbols
 - Using Numbers
-

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes associated with entering text.



Section 5

Changing the Text Input Mode

When using your phone, you will often need to enter text, such as when storing a name in Phonebook, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.


Your phone has the following text input modes:

- **ABC mode:** this mode allows you to enter letters by pressing the key labeled with the letter you want. Press the key once, twice, three, or four times until it displays.
- **T9 mode:** this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, pressing the **5** key can enter J, K, or L. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring far fewer keystrokes than the traditional ABC mode.
- **Number mode:** this mode allows you to enter numbers.
- **Symbol mode:** this mode allows you to enter symbols, such as punctuation marks.

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

Example: Writing a text message.

Using T9 Mode

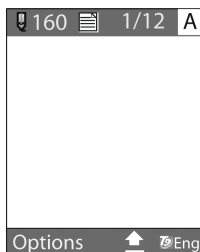

Text input mode indicator

1. To change the text input mode, press the key.
2. Highlight the input option that you want and press the **Select** soft key or the key.
3. Choose from the following options:

Eng: ABC mode

Eng: T9 mode

Eng: Number mode

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

1. When you are in T9 mode, start entering a word by pressing the **2** to **9** keys. Press each key only once for each letter.

Example: To enter "Hello" in T9 mode, press the **4,3,5,5**, and **6** keys.

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. When the word displays correctly, go to step 4.

If the word doesn't display correctly, press the **0** key or the **Up** or **Down** key to display alternative word choices for the keys that you have pressed.

Example: Both "Of" and "Me" have the **6** and **3** keys. The phone displays the most commonly used choice first.

4. Insert a space by pressing the **#** key and start entering the next word.

To add a new word into the T9 dictionary:

1. After pressing the keys corresponding to the word you want to add, press the **0** key to display the alternative words.
2. When you press the **0** key at the last alternative word, the display shows **Spell** on the bottom line. Press the **Spell** soft key or the **Ⓢ** key.
3. Enter the word you want to add using ABC mode. See page "Changing the Text Input Mode" on page 48.
4. Press the **OK** soft key or the **Ⓚ** key.

The word is added to the T9 dictionary and becomes a word for the associated keypress series.

Note: This feature may not be available for some languages.

- To enter periods, hyphens, or apostrophes, press the **1** key. T9 mode applies grammar rules to ensure that correct punctuation is used.
- To shift case in T9 mode, use the ***** key. There are 3 cases: Initial capital, Capital lock, and Lower case.
- You can move the cursor by using the Navigation keys. To delete letters, press the **C** key. Press and hold the **C** key to clear the display.

Using ABC Mode

To use the ABC Mode use the **1** to **0** keys to enter your text.

1. Press the key labeled with the letter you want:

- Once for the first letter
- Twice for the second letter
- And so on

2. Select the other letters in the same way.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move to the right automatically, and then select the next letter.

Keys

1 **abc** . @ , - ? ! ' : 1

2 **abc** A B C 2

a b c 2

Section 5

3 DEF 3

d e f 3

4 GHI 4

g h i 4

5 JKL 5

j k l 5

6 MNO 6

m n o 6

7 PQR 7

p q r 7

8 TUV 8

t u v 8

9 WXYZ 9

w x y z 9

0 0

 
 
 
 

Using Symbols

Symbol mode enables you to insert symbols and punctuation marks into text.

1. To select a symbol, press the corresponding number key.
2. To display more symbols, press the **Up** or **Down** Navigation key.
3. To clear the symbol(s), press the **C** key. When the input field is empty, this key returns the display to the previous mode.
4. To insert the symbol(s) into your message, press the **OK** soft key or the **↵** key.

Using Numbers

Number mode enables you to enter numbers into a text message. Press the keys corresponding to the digits you want to enter.

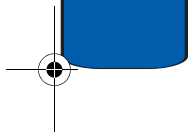

Section 6: Understanding Your Phonebook

Topics Covered

- Finding a Phonebook Entry
- Storing a Number in the Phone's Memory
- Storing a Number in the SIM Memory
- Dialing a Number from the Phonebook
- Dialing a Number from the SIM Card
- Speed Dialing
- Copying SIM Phonebook Entries to Phone
- Deleting all Phonebook Entries
- Group Settings
- Finding My Own Number
- Checking the Memory Status
- Service Dialing Numbers (SDN)

Section 6

This section allows you to manage your daily contacts by storing their name and number in your Phonebook. Phonebook entries can be sorted by name, entry, or group.

Finding a Phonebook Entry

You can store phone numbers and their corresponding names in your SIM card and phone's memories. They are physically separate but are used as a single entity, called Phonebook.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store may differ.

1. At the Idle screen, press the **Ph.Book** soft key.
2. Highlight the **Search** option and press the **Select** soft key or the **Ⓟ** key. You are asked to enter a name.
3. Enter the first few letters of the name.

The Phonebook entries are listed, starting with the first entry matching your input.

4. To view the highlighted entry, press the **View** soft key.
5. Press the **↶** key to dial the number, or press the **Options** soft key to access the Phonebook entry options.

Storing a Number in the Phone's Memory

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **New entry** by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓟ** key.
3. Select the **Phone** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓟ** key.
4. Select a number type by pressing the **Up** or **Down** key, and press the **Select** soft key or the **Ⓟ** key.

The following types are available:

Storing a Number in the Phone's Memory

- **Mobile:** assigns the number entered to the Mobile entry.
 - **Home:** assigns the number entered to the Home entry.
 - **Office:** assigns the number entered to the Office entry.
 - **Fax:** assigns the number entered to the Fax entry.
 - **Other:** allows you to enter more detailed information for the entry.
 - **E-mail:** allows you to enter an e-mail address for the number entered.
5. Enter the number you want to store and press the **Save** soft key or the  key.
6. Enter a name and press the **OK** soft key or the  key.
For further details about how to enter characters, see "Using ABC Mode" on page 51.
After storing, the phone displays the Phonebook entry and name you just created.
7. Tab through the options using the **Right** and **Left** Navigation keys to assign the Phonebook entry Group, Graphic, and Alert settings.
8. To use the entry options, press the **Options** soft key. The following options are available:
- **Send message:** allows you to send a message to the selected number.
 - **Assign speed dial:** allows you to assign a speed dial number to the phone number you entered. For more information, see "Speed Dialing" on page 59.
 - **Edit number:** allows you to edit the number.
 - **Edit Name:** allows you to edit the name.

- **Delete entry:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.
- **Copy to SIM:** allows you to copy the number to your SIM card.

9. To return to the Idle screen, press the  key.

Storing a Number in the SIM Memory

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **New entry** by pressing the **Up** or **Down** key and press the **Select** soft key or the  key.
3. Select the **SIM** memory location, by pressing the **Up** or **Down** key and press the **Select** soft key or the  key.
4. Enter a number you want to store and press the **Save** soft key or the  key.
5. Enter a name and press the **OK** soft key or the  key.

For further details about how to enter characters, see "Using ABC Mode" on page 51.

After storing, the phone displays the Phonebook entry number you just created.

6. To use the entry options, press the **Options** soft key.

The following options are available:

- **Send message:** allows you to send a message to the selected number.
- **Assign speed dial:** allows you to assign a speed dial number to the phone number you entered. For more information, see "Speed Dialing" on page 59.
- **Edit number:** allows you to edit the number.

Dialing a Number from the Phonebook

- **Edit Name:** allows you to edit the name.
- **Delete entry:** allows you to delete the name and number from Phonebook. You are asked to confirm that you wish to delete the name and number by pressing the **Yes** soft key.
- **Copy to phone:** allows you to copy the number to your phone.

7. To return to the Idle screen, press the key.

Dialing a Number from the Phonebook

Once you have stored phone numbers in the Phonebook, you can dial them easily and quickly by using the location numbers that were assigned to them in the Phonebook.

Note: If you cannot remember a location number, you must go into the **Search** menu in the **Phonebook** menu to search for the entry by name. For details, see "Finding a Phonebook Entry" on page 56.

Dialing a Number from the SIM Card

1. In Idle mode, enter the location number for the phone number you want to dial and press the **#** key.
The location number in the SIM card appears, with the desired number displayed.
2. You can press the **Up** or **Down** key to find other numbers on the list.
3. Press the **Dial** soft key, the key, or the key when you have selected the number you want.

Speed Dialing

Once you have stored phone numbers from your Phonebook list, you can set up to 8 speed dial entries and

then dial them easily whenever you want, simply by pressing and holding the associated numeric key.

Setting Up Speed Dial Entries

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **Speed Dial** by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓢ** key.
3. Select the key to which you wish to assign the speed-dialing number, from the **2** to **9** keys, and press the **Select** soft key or the **Ⓢ** key.

Note: Memory location 1 is reserved for your Voice mail server number.

4. Highlight **Edit number** and press the **Select** soft key or the **Ⓢ** key.
5. Enter a number or press the **Ph.Book** soft key to display entries in the Phonebook.
6. If you pressed the **Ph.Book** soft key, select an entry from the Phonebook list and press the **View** soft key or the **Ⓢ** key.
7. Press the **OK** soft key or the **Ⓢ** key.

Copying SIM Phonebook Entries to Phone

You can copy all SIM entries to the Phone using this option. When you copy entries to the phone, duplicate entries are created.

1. At the Idle screen, press the **Ph. Book** soft key.
2. Highlight **Copy all to phone** and press the **Select** soft key or the **Ⓢ** key.

Deleting all Phonebook Entries

3. When you receive the **Sure to copy all?** message, press the **Yes** soft key or the **Ⓜ** key.

Note: Options are available for phone entries that are not available when stored to the SIM card. For details, see "Storing a Number in the Phone's Memory" on page 56.

Deleting all Phonebook Entries

You can delete all of your entries from your phone's memory, your SIM card, or both.

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **Delete all** by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓜ** key.
3. To place a check mark by the memory location you want to empty, All, SIM, or Phone, press the **Select** soft key or the **Ⓜ** key.

You can remove the check mark by pressing the **Select** soft key or the **Ⓜ** key.

4. Press the **Delete** soft key to delete the entries in the selected memory location. A confirmation "**Sure to delete?**" displays. Press **Yes** to delete or **No** to cancel.

Section 6

Group Settings

1. At the Idle screen, press the **Ph.Book** soft key.
2. Scroll to **Group settings** by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓜ** key.
3. Scroll through the group list by pressing the **Up** or **Down** key.

4. When the group you want highlights, press the **Select** soft key or the **?** key. You may choose Family, Friends, Co-workers, VIPs, or Other.
5. Select an option and change the settings, as required. The following options are available:
 - **Ringtone**: allows you to set the ring tone to be used when you receive a voice call from a member of that group.
 - **Edit Name**: allows you to rename the selected group setting.
 - **View Image**: allows you to view the graphic displayed when you receive a voice call from a member of that group.
6. When you are finished, press the **C** key or the **OK** key.

Finding My Own Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

You can assign a name to each of your own phone numbers registered on your SIM card. You can also edit the names and numbers. Any changes made here do not in any way affect the actual subscriber numbers on your SIM card.

1. At the Idle screen, press the **Ph.Book** soft key.
2. Select the **Own number** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **?** key.
3. Select a location and press the **Select** key or the **?** key.
4. To edit the number, highlight **Edit number** and press the **Select** soft key or the **?** key. Enter the phone number you want and press the **OK** soft key or the **?** key.

Checking the Memory Status

5. To edit the name, highlight **Edit name** and press the **Select** soft key or the **Ⓢ** key. Enter the name and press the **OK** soft key or the **Ⓢ** key.
6. To delete the number, highlight **Delete** and press the **Select** soft key or the **Ⓢ** key. Select **Yes** to confirm deletion or **No** to cancel.

Checking the Memory Status

You can check how many names and numbers are stored in Phonebook, in both SIM card and the phone memory. You can also see the capacity of both memories.

1. At the Idle screen, press the **Ph.Book** soft key.
2. Select the **Memory status** option by pressing the **Up** or **Down** key. Press the **Select** soft key or the **Ⓢ** key.
3. A total of the numbers stored in the **Phone** and **SIM** are displayed.
4. When you are finished, press the **C** soft key or the **Ⓢ** key.

Service Dialing Numbers

 
 
 
You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers include emergency numbers, directory enquiries and voice mail numbers.

1. At the Idle screen, press the **Ph.Book** soft key.
2. Select the **SDN** option by pressing the **Up** or **Down** key and press the **Select** soft key or the **Ⓢ** key.



3. Scroll through the numbers by using the **Up** or **Down** key.
4. To dial the number displayed, press the **Select** soft key or the **Ⓟ** key.

Note: This function is available only if it is supported by your service provider.



Section 7: Messaging

Topics Covered

- Types of Messages
 - Voice Messages
 - Text Messages
 - Picture Messages
 - Browser Messages
 - Voice mail Messages
 - Broadcast Messages
 - Settings
 - Memory Status
 - Instant Messaging
-

This section allows you to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Voice Messages
- Text Messages
- Picture Messages
- Browser Messages
- Voice Mail Messages
- Broadcast Messages (SIM Dependent)

Voice messages

In this menu, you can record a voice message of up to 1 minute and then immediately send it in an MMS (Multimedia Message Service) message. MMS will be referred to as Picture Messaging.

When you access this menu, a timer appears on the screen.

1. Press the **Record** soft key to start recording.
2. Record a message by speaking into the microphone.
The display shows the elapsed time and the remaining time simultaneously.
3. When you are finished, press the **Stop** soft key or the **?** key. Or, when the recording time is expired, the display switches to the next screen.
4. To choose your destination target, highlight one of the following options and press the **Select** soft key or the **?** keys:

Voice messages

- **Recent log:** allows you to select a number or an address from the 5 last destinations you entered for sending the last messages.
- **Phonebook:** allows you to retrieve a number from your Phonebook.
- **Phone number:** allows you to enter the phone number you want.
- **E-mail address:** allows you to enter the e-mail address of the recipient.

Note: You can access the following options by pressing the **Options** soft key:

- **Replay:** plays back your voice message.
 - **Re-record:** discards the voice message and enables you to record another one.
 - **Send:** allows you to send the voice message.
 - **Default destination:** allows you to send the voice message directly without entering another destination. To select a default destination, press the **Select** soft key and select from the available options.
 - **Save:** saves the voice message and continues to the send options.
5. Enter a number or an e-mail address and press the **OK** soft key, or select a destination from the **Phonebook**.
 6. To select a destination from the Phonebook, highlight the desired number and press the **Select** soft key or the **Ⓢ** key. Press the **Send** soft key or the **Ⓢ** key to send the message.

After your message is sent, it is saved in the Outbox in the **Picture messages** menu.

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple pictures, melodies, and animated images in your messages. To use this feature, you must subscribe to your service provider's message service.

When the Message icon (✉) appears, you have received new text messages. When the memory is full, an error message displays and you cannot receive any new messages. Use the **Delete** option in each message box to delete obsolete messages.

Create

In this menu, you can write and send a text message.

Creating a Simple Text Message

1. Create your message.

You can create a message using standard Alphabet characters or special Uni-code characters, depending on the setting in the Character support menu.

Notes: For further details about entering characters, see "Using ABC Mode" on page 51.
You can enter up to 160 standard Alphabet characters in your message. When you enter text using Uni-code characters, the maximum number of characters that can be in a message is reduced to 70.

2. When you finish entering your message, press the **Options** soft key. The following options are available:

Text Messages

- **Send:** allows you to send the message. The message is deleted after sending.
- **Text formatting:** allows you to format the style of the text. For the Size attribute, Normal, Large, and Small size are available. Mode options are Normal, Underline, and Strikethrough. Bold and Italic options are On or Off. Alignment options are Left, Center, and Right.
- **Add content:** allows you to add a picture, melody, or animation to your message. Select the category of the item to be added. In each category, you can select from the various factory-set items or choose an item received from other sources, such as the Internet or other phones.

Note: When you add media items to a message, the number of characters you can enter decreases.

- **Templates:** allows you to apply one of the preset message templates to the text. Select one of the 4 items stored in the Templates menu.
- **Save message:** allows you to save a copy of the message to the Phone or SIM card.

3. Select **Send** and press the **Select** soft key or the **Ⓢ** key.
4. Enter a number and press the **OK** soft key.
5. Press the **Send** soft key or the **Ⓢ** key.

Note: When the phone fails to send the message, it asks you if you want to retry. Press the **Retry** soft key to confirm. Otherwise, press the **No** soft key to return to the message screen.

Inbox

This message box is used to store messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Phonebook.

1. Select a text message from the list and press the **Options** soft key or the **?** key.

Options available are:

- **View:** read the text message.
 - **Text reply:** create a new message to reply with.
 - **Call back:** dials the number that sent the text message.
 - **Delete:** deletes the text message.
2. Highlight the **View** option and press the **Select** soft key or the **?** key to read the message contents.
 3. To scroll through the contents, press the **Up** or **Down** key.
 4. To scroll to the previous or next message, press the **Left** or **Right** key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

- **Text reply:** allows you to send a reply to the sender by sending a text message.
- **Call back:** allows you to call the sender.
- **Delete:** allows you to delete the message.
- **Save address:** allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Forward:** allows you to send/resend the message. For further information about how to send a message, see "Create" on page 68.

Text Messages

- **Select content:** allows you to save media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message.
- **Move to Phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.
- **Move to SIM:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.

Outbox

This message box is used to store messages that you have sent or will send.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

1. Select a text message from the list and press the **Options** soft key.

Options available are:

- **View:** read the text message.
 - **Delete:** deletes the text message.
 - **Send:** send the text message.
2. Highlight the **View** option and press the **Select** soft key or the **Ⓢ** key to read the message contents.
 3. To scroll through the contents, press the **Up** or **Down** Navigation key.
 4. To scroll to the previous or next message, press the **Left** or **Right** Navigation key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

- **Delete:** allows you to delete the message.
- **Save address:** allows you to extract the destination number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Send:** allows you to send/resend the message. For further information about how to send a message see "Create" on page 68.
- **Forward:** allows you to send/resend the message. For further information about how to send a message, see "Create" on page 68.
- **Move to Phone:** allows you to move the message from the SIM card to the phone's memory. This option is only available for messages stored in the SIM card.
- **Move to SIM:** allows you to move the message from the phone's memory to the SIM card. This option is only available for messages stored in the phone's memory.

Delete All

This menu allows you to delete all of the text messages in each message box. You can also delete all of your messages at one time.

1. To select a text message box to clear, press the **Up** or **Down** key. To delete all of your messages, select **All messages**.
2. To place or remove a check mark, press **Select** soft key or the **Ⓢ** key.
3. Press the **Delete** soft key to delete the marked objects.
4. At the **Delete?** confirmation, press the **Yes** soft key.

Picture Messages

This menu allows you to use the Multimedia Message Service.

Picture Messaging is a messaging service that provides delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice, and audio clips. A Picture Messaging message is a multimedia presentation in a single file. It is not a text file with attachments.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images you downloaded from the Internet and voice messages you recorded. This function is available only if it is supported by your service provider. Only phones that offer multimedia messaging features can receive and display multimedia messages.

Create

This menu allows you to create a new multimedia message and send to one or multiple destinations.

Creating and Sending a Multimedia Message

1. Highlight **Subject** and press the **Add** soft key or the **i** key.
2. Enter the subject of your message and press the **OK** soft key or the **i** key.

Note: For more information about entering characters, see "Using ABC Mode" on page 51.

3. To add a picture, highlight the **Picture** option and press the **Add** soft key or the **Ⓢ** key.
4. Highlight a photo or image and press the **Select** soft key or the **Ⓢ** key.
5. After the picture appears, press the **Add** soft key or the **Ⓢ** key.
6. To add a sound, highlight the **Sound** option and press the **Add** soft key or the **Ⓢ** key.
7. Highlight one of the following options and press the **Select** soft key or the **Ⓢ** key.
 - **Record new:** allows you to record a new voice message.
 - **Voice memos:** takes you to the Voice memos folder in your Organizer to select a voice memo to add.
 - **Sounds:** allows you to select a sound from your Sounds folder.
8. Highlight a Sound or Voice memo and press the **Select** soft key or the **Ⓢ** key to add the sound to your message.
9. To add a message, highlight **Message** and press the **Add** soft key or the **Ⓢ** key.
10. Enter your message and press the **Opt.** soft key or the **Ⓢ** key.
11. Highlight the **Done** option and press the **Select** soft key or the **Ⓢ** key. You may select the **Templates** option to add pre-defined phrases.

12. Press the **Opt. soft key for the following options:**

- **Send:** sends the Picture Messaging message.
- **Preview:** allows you to see the message before you send.
- **Add page:** allows you to add another page for the Picture Messaging message.
- **Page timing:** page timing allows you to set how long each page of the Picture Messaging is displayed. The default time is 5 seconds, maximum 99 seconds.
- **Text effect:** allows you to change the color, size, and style of the Picture Messaging text.
- **Clear picture/sound/message/subject:** allows you to remove the selected picture, sound, message, or subject.
- **Delete page:** allows you to delete the page selected.
- **Save message:** allows you to save the Picture Messaging message.

To change the text or replace the image or sound with another one, select a category and press the **Opt.** soft key. Depending on the category selected, highlight **Clear picture/sound/message/subject** to remove the item.

13. When you have finished creating the message, press the **Opt. key and highlight the **Send** option. Press the **Select** soft key or the **Ⓢ** key.****14. Choose one of the following options and press the **Select** soft key or the **Ⓢ** key:**

- **Recent log:** allows you to select a number or an address from the 5 last destinations you entered for sending the last messages.
- **Phonebook:** allows you to enter the phone number you want.

- **Phone number:** allows you enter a phone number or choose one from the Ph.Book.
- **E-mail address:** allows you to enter the e-mail address of the recipient.

15. Press the **Send** soft key to send the message. Your phone sends the message.

Inbox

Viewing a Message When You Receive It

When a new multimedia message comes in, the display shows the Picture Messaging icon.

1. Press the **View** soft key or the **?** key to view your message.
If you want to view the message later in the Inbox, press the **Exit** soft key.
2. If your message is longer than the display screen, use the **Up** or **Down** key to scroll through the message. If your message has more than one page, use the **Left** or **Right** key to scroll through the pages.
3. Press the **Opt.** soft key or the **?** key to access the following options:
 - **Reply:** allows you to create a message and reply to the sender.
 - **Replay:** if there are multiple screens to this message, allows you to replay the message from the beginning.
 - **Delete:** deletes the message.
 - **Forward:** allows you to forward this message to another destination.

Picture Messages

- **Call back:** allows you to dial the number from which this message was sent.
- **Save content:** allows you to save the contents of this message (picture or sound) to send to another destination in a different message.
- **Save address:** allows you to store the address from which this message was sent. You can also reply to the message from this option.
- **Properties:** shows you information about the message, such as the time and date the message was received, sender's e-mail address, phone number or name, message size, priority, and class.

4. When you are finished, press the  key.

Viewing a Received Message in the Inbox

When you access the Inbox menu, a list of multimedia messages you received displays along with the message subjects. The icons on the left tell you the status of the messages.

 Picture Messaging notifications that have been opened.

 Picture Messaging notifications that have not been opened.

1. Select a message on the list and press the **Select** soft key or the  key.

The message displays and scrolls to the next page, if it has more than one, after a specified time.

2. To scroll through the message, press the **Up** or **Down** Navigation key. If the message has more than one page, you can scroll through the pages by using the **Left** and **Right** Navigation keys.

While viewing a message, you can choose the message options by pressing the **Opt.** soft key.

Outbox

When you access this menu, the list of multimedia messages that you have sent or saved displays. The icons on the left tell you the status of each message:

-  Messages sent
-  Messages currently being sent
-  Messages your phone couldn't send
-  Messages to be sent
-  Messages deferred

1. Select a message on the list and press the **Select** soft key or the **?** key.

The message displays and scrolls to the next page, if it has more than one, after a specified time.

2. To scroll through the message, press the **Up** or **Down** Navigation key.

If the message has more than one page, you can scroll through the pages by using the **Left** and **Right** Navigation keys.

While viewing a message, you can choose the following options by pressing the **Opt.** soft key:

- **Delete:** allows you to delete the message.
- **Replay:** allows you to replay the message from the beginning.
- **Send:** allows you to send/resend the message.

Browser Messages

- **Properties:** shows you information about the message, such as the time and date, to (recipient number), size, priority, and class.

Draft

After creating a multimedia message, you can store it in this message box to be sent at a later time. After creating your message, select the **Save message** option.

Delete All

This menu allows you to delete all of the multimedia messages in each message box separately. You can also delete all of your messages at one time.

1. To select Picture messages to clear, press the **Up** or **Down** key. To delete all of your messages, select **All Messages**.
2. To place or remove a check mark, press the **Select** soft key or the **Ⓢ** key.
3. Press the **Delete** soft key to delete the marked objects.
4. At the **Delete?** confirmation, press the **Yes** soft key.

Browser Messages

This menu allows you to receive web messages from the server, or to set the phone not to receive Web messages.

The following options are available:

- **Inbox:** allows you to read the messages received from the web server.
- **Receive:** allows you to set whether or not your phone receives web messages.
- **Delete all:** allows you to delete all of the web messages.

Voice Mail Messages

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

The following options are available:

- **Call voice mail:** before using the Voice Mail feature, you must enter the voice server number obtained from your service provider. You can then highlight this option and press the **Select** soft key or the **1** key to listen to your messages. You can connect to the voice server by pressing and holding the **1** key in Idle mode.
- **Voice server number:** allows you to change the voice mail server number, if necessary.

Note: Voice mail is a network feature. Please contact your service provider for further details.

Broadcast Messages (SIM Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Please contact your service provider for further details.

Settings

In this menu, you can set up default text message and picture message information. The last setting you accessed is automatically activated for sending subsequent messages.

Text Messages

- **Service center:** allows you to store or change the number of your message center, which is required when sending

messages. You must obtain this number from your service provider.

- **Validity period (SIM dependent):** allows you to set the length of time your text messages are stored at the message center while attempts are made to deliver them.
- **Message type (SIM dependent):** allows you to view the type of message sent.
- **Reply path:** allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- **Delivery report (SIM dependent):** allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- **Character support:** allows you to select a character encoding type, either GSM-alphabet, Uni-code, or Automatic. If you select Automatic, the phone automatically changes the encoding type from GSM-alphabet to Uni-code when you enter a Uni-code character.

When you select Uni-code, the maximum number of characters that can be in a message is reduced to approximately half. If your recipient's phone does not support Uni-code characters, he/she may not be able to read your message correctly.

Note: If your phone doesn't have the Character support menu, the phone provides the Automatic character encoding by default.

Picture Messages

The following options are used to set Send and Receive settings for Picture messages.

Send Settings

- **Priority:** you can select the priority level of your messages.
- **Validity period:** set the length of time your messages are stored in the message center while the network attempts to deliver them.
- **Delivery after:** you can set a delay time before the phone sends your messages.
- **Delivery report:** when this option is enabled, the network informs you whether or not your message has been delivered.
- **Read reply:** when this option is enabled, your phone sends a request for a reply along with your message to the recipient.

Receive Settings

- **Msg. reception:** you can set your phone to automatically receive incoming messages.
- **Ads reject:** you can set your phone to automatically reject or receive advertising messages.
- **Report allowed:** you can set the option to receive a delivery report.

Memory Status

You can check the amount of the memory being used and the memory remaining for multimedia messages.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

IM (Instant Messaging)

Instant Messenger (IM) is a way of sending short, simple messages that are delivered immediately to users online at that moment.

IM (Instant Messaging)

Before using this feature, you need to subscribe to a messenger service. For further details, contact your service provider.

Starting your IM

1. Select the messenger service to which you subscribed using the **Left** or **Right** key and press the **Select** soft key or the **Ⓢ** key.
2. Enter your screen name. The name will be displayed on other people's phones or PCs.
3. Press the **Down** key and enter your password to connect to the service.
4. Press the **Options** soft key.
5. Highlight the **Sign On** option and press the **Select** soft key or the **Ⓢ** key to connect to your messenger service.

Using the IM Options

On the sign-on screen of your messenger, press the **Options** soft key to access the following options:

- **Sign On:** allows you to login to your IM account.
- **Saved Conversations:** shows the records of your connections to the messenger service.