

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS





Draft
2005. 12. 23
(Version: Z220XAEL2)

SGH-Z220

User's Guide



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.



Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 77.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:



Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.



Indicates that you can get more information on the referenced page.



Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.



Indicates a key on the phone. For example, [↶]



 
Indicates a soft key, whose function is displayed on the phone screen. For example, <Msg.>



- **3G**

Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

Special features of your phone



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.



- **Media player**

Play media files on your phone. You can enjoy high quality videos and music.



- **Web browser**

Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Bluetooth**

Send photos, images, videos, and other personal data, and connect to other devices using free, wireless Bluetooth technology.



- **Contacts**

Store home, office, or cellular phone numbers for your contacts.



- **Get personal with photo caller ID**

See who's calling you with their very own photo displays.



- **Name card**

Create name cards with your number and profile. Whenever introducing yourself to others, use this convenient electronic name card.

- **Multimedia Message Service (MMS)**

Deliver MMS messages with a combination of text, images, and audio.

- **E-mail**

Deliver e-mails with image, video, and audio attachments.



- **Java**

Enjoy Java™ -based embedded games and download new games.



- **Organiser**

Keep track of your daily, weekly, and monthly schedule.



- **Alarm**

Use your phone as an alarm clock to wake you up in the morning or notify you of an impending event.



- **Voice recorder**

Record memos or sounds.

Contents

Unpack 6

Make sure you have each item

Your phone 6

Buttons, features, and locations

Get started 7

First steps to operating your phone

Install and charge the phone..... 7

Power on or off 8

Keys and display 9

Access menu functions 11

Customise your phone..... 12

Make/Answer calls 14

Step outside the phone 15

Begin with your camera, the media player, the web, and other special features

Use the camera 15

Play media files 16

Browse the web..... 17

Use Contacts 18

Send messages 19

View messages 21

Use Bluetooth..... 21

Switch applications..... 22

Enter text 23

ABC, T9, Number, and Symbol mode

Call functions 25

Advanced calling features

Menu functions 29

All menu options listed

Solve problems 76

Help and personal needs

Health and safety information 77

Index 93

Overview of menu functions

To access Menu mode, press **[OK]** in Idle mode.

1 Call log	▶ p. 29	4 Internet	▶ p. 39	7 Organiser	▶ p. 58
1 Missed calls	▶ p. 29	1 Go to homepage	▶ p. 39	1 Alarm	▶ p. 58
2 Dialed calls	▶ p. 29	2 Enter URL	▶ p. 40	2 Calendar	▶ p. 58
3 Received calls	▶ p. 29	3 Favourites	▶ p. 40	3 Week view	▶ p. 60
4 Current contacts	▶ p. 29	4 History	▶ p. 40	4 Today's events	▶ p. 60
5 Delete all	▶ p. 30	5 Browser settings	▶ p. 40	5 Schedule	▶ p. 60
6 Data calls	▶ p. 30	6 Network settings	▶ p. 41	6 Anniversary	▶ p. 60
7 Calls cost*	▶ p. 30			7 Task	▶ p. 61
8 Calls time	▶ p. 30			8 Memo	▶ p. 61
2 Contacts	▶ p. 31	5 Messages	▶ p. 41	9 Missed event alarm	▶ p. 61
1 Search contact	▶ p. 31	1 Create new	▶ p. 41	0 Memory status	▶ p. 61
2 New contact	▶ p. 31	2 Inbox	▶ p. 43		
3 Groups	▶ p. 32	3 Drafts	▶ p. 44	8 Camera	▶ p. 61
4 Speed dial	▶ p. 33	4 Outbox	▶ p. 45		
5 My name card	▶ p. 33	5 Sent box	▶ p. 45		
6 Copy all	▶ p. 34	6 Email inbox	▶ p. 45		
7 Own number	▶ p. 34	7 Templates	▶ p. 46		
8 Service number*	▶ p. 34	8 Broadcast	▶ p. 47		
9 Settings	▶ p. 34	9 Delete all	▶ p. 48		
0 Memory status	▶ p. 34	0 Settings	▶ p. 48		
		* Memory status	▶ p. 52		
3 Applications	▶ p. 34	6 File manager	▶ p. 52	9 Settings	▶ p. 65
1 SAT*	▶ p. 34	Images	▶ p. 53	1 Profiles	▶ p. 65
2 Media player	▶ p. 35	Videos	▶ p. 54	2 Time & date	▶ p. 66
3 Voice memo	▶ p. 36	Music	▶ p. 55	3 Phone	▶ p. 67
4 World clock	▶ p. 37	Sounds	▶ p. 56	4 Display	▶ p. 67
5 Calculator	▶ p. 38	Games & More	▶ p. 57	5 Call	▶ p. 68
6 Converter	▶ p. 38	Other files	▶ p. 57	6 Connectivity	▶ p. 70
				7 Application settings	▶ p. 74
				8 Security	▶ p. 74
				9 Memory status	▶ p. 75
				0 Reset settings	▶ p. 75

* Shows only if supported by your SIM card.

Unpack

Make sure you have each item



Phone



Travel Adapter



Battery



User's Guide


You can obtain various accessories from your local Samsung dealer.



The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations

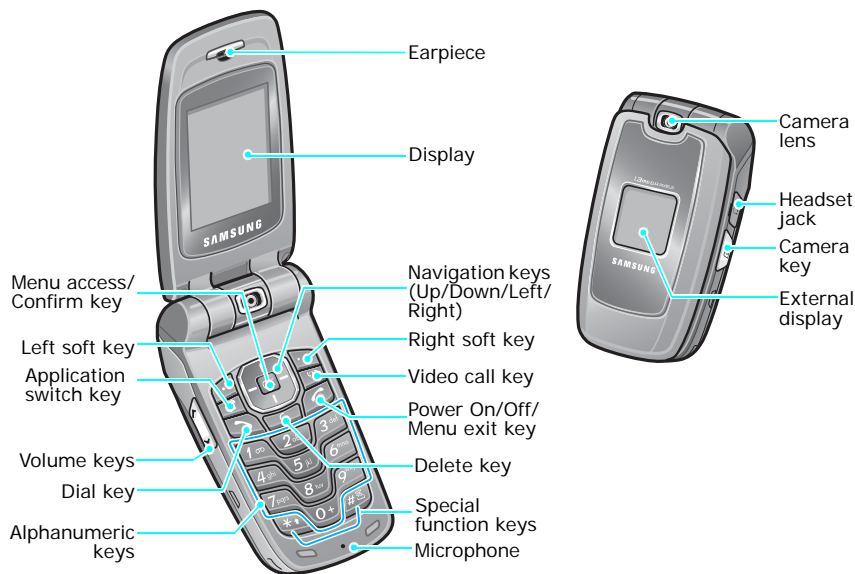

Get started


First steps to operating your phone

USIM/SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN and available optional services. For 3G services, you can purchase a USIM card.


Install and charge the phone

1 Remove the battery.

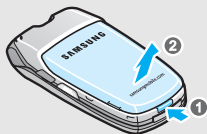

✓ If the phone is already on, first turn it off by holding [⏻].

2 Insert the SIM card.

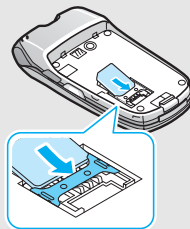


✓ Make sure that the gold-coloured contacts on the card face down into the phone.

3 Install the battery.




4 Plug the travel adapter into the phone.

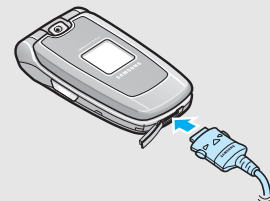

5 Plug the adapter into a standard AC wall outlet.


6 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

- 7 Remove the adapter from the phone.

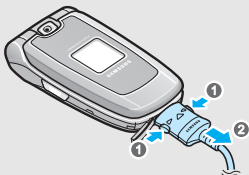

Low battery indicator


When the battery is low:

- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


Power on or off

Power on

1. Open the phone.
2. Press and hold [, ⑤] to turn on the phone.
3. If necessary, enter the PIN and press <Confirm>.








Do not turn on the phone when mobile phone use is prohibited.






Power off

1. Open the phone.
2. Press and hold [, ⑤].

Keys and display


Keys

	Perform the function indicated on the bottom line of the display.
	In Idle mode, access your favourite menus directly. ► p. 67 In Menu mode, scroll through menu options.
	In Idle mode, access Menu mode. In Menu mode, select the highlighted menu option or confirm input.
	Open the application switch window to access other applications without exiting the current application.
	Make a video call.
	Make or answer a call. In Idle mode, retrieve numbers recently dialed, missed, or received.
	Delete characters from the display, or an item in an application.





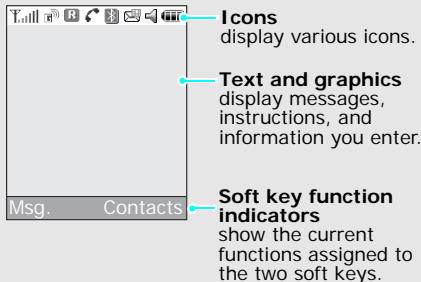

	End a call. Press and hold to switch the phone on or off. In Menu mode, cancel input and return the phone to Idle mode.
	Enter numbers, letters, and some special characters. In Idle mode, press and hold [1] to access your voicemail. Press and hold [0] to enter an international call prefix.
	Enter special characters. In Idle mode, press and hold [#] to activate or deactivate the Silent profile. Press and hold [*] to enter a pause between numbers.
	Adjust the phone volume. In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, press and hold to turn on the external display.
	In Idle mode, press and hold to turn on the camera. In Camera mode, take a photo or record a video.

Display

Layout








 
 
 
 
 
 
 


Icons

-  Received signal strength
-  Accessing services in a 2.5G network; when transferring data, this icon animates
-  Accessing services in a 3G network; when transferring data, this icon animates
-  Roaming network
-  Voice call in progress
-  Out of your service area; you cannot send or receive voice calls

Icons

(continued)

-  Video call in progress
-  Out of your service area; you cannot send or receive video calls
-  Bluetooth active
-  Connected to Bluetooth hands-free car kit or headset
-  Connected to PC via USB port
-  Browsing the Internet on PC using the phone as modem
-  Connected to secured web page
-  New message:
 -  : SMS
 -  : MMS
 -  : E-mail
 -  : Voicemail
 -  : WAP push
 -  : Configuration message

Icons

(continued)



Inbox full:

- : SMS
- : MMS
- : E-mail
- : Voicemail
- : Configuration message



Sound profile setting:

- : Normal
- : Meeting
- : Car
- : Silent
- : Outdoor




Battery power level

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

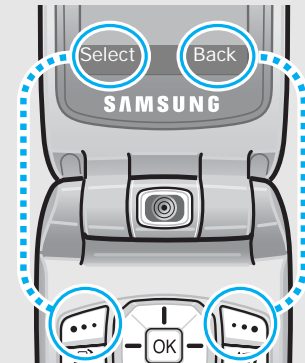


Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

- ✓ In each main menu, one of the most popular submenu is assigned to the left soft key. This allows you to quickly access the most popular menus.

Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press <**Select**> or [OK] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods:
 - Press <**Back**> to move up one level.
 - Press [] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press [OK] and select **Settings** → **Phone** → **Language** → **Screen text**.
2. Select a language.
3. Press <**Save**>.

Call ringer melody

You can change the call ringer by changing the properties of the currently active sound profile.

To change the profile properties:

1. In Idle mode, press [OK] and select **Settings** → **Profiles**.
2. Scroll to the sound profile you are using.
3. Press <**Options**> and select **Edit**.
4. Select **Voice call ringtone** and select a ringtone for voice calls.
5. Select **Video call ringtone** and select a ringtone for video calls.
6. Press <**Options**> and select **Save**.

To change the sound profile:

1. In Idle mode, press **[OK]** and select **Settings** → **Profiles**.
2. Select the profile you want.

Idle mode Wallpaper

You can set wallpaper for the idle screen on each display.

For the main display:

1. In Idle mode, press **[OK]** and select **Settings** → **Display** → **Wallpaper**.
2. Scroll to an image folder.
3. Select an image and press **<Set>**.

For the external display:

1. In Idle mode, press **[OK]** and select **Settings** → **Display** → **Cover LCD**.
2. Select an image type.
3. For **Clock**, scroll to a clock type and press **<Save>**.
For **Cover title**, enter a greeting and press **<Save>**.
For **Wallpaper**, press **<Change>** and select an image. Adjust the image area to be displayed and press **[OK]**.
4. Press **[OK]**.

Menu shortcuts

You can set the Navigation keys to function as shortcuts to access your favourite menus.

1. In Idle mode, press **[OK]** and select **Settings** → **Phone** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Silent profile

You can activate the Silent profile to avoid disturbing other people. Press and hold [#] in Idle mode.

Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.

1. In Idle mode, press [OK] and select **Settings** → **Security** → **Change phone password**.
2. Enter the default password, **00000000**, and press <Confirm>.
3. Enter a new 4- to 8-digit password and press <Confirm>.
4. Enter the new password again and press <Confirm>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <Confirm>.

Make/Answer calls

Make a call

To make a voice call:

1. Enter an area code and phone number.
2. Press [↵].
3. To end the call, press [⏏].

To make a video call:

1. Enter an area code and phone number.
2. Press [📞] and if their phone is compatible, the other person appears on the screen.

Answer a call

1. When the phone is ringing, press [↵].
2. For a video call, press <Show me> to allow the other person to see you.
3. To end the call, press [⏏].

Adjust the volume during a call

Press [▲/▼].

Step outside the phone

Begin with your camera, the media player, the web, and other special features

Use the camera

Take a photo

1. Open the phone.
2. In Idle mode, press and hold [📷] to turn on the camera.
3. Adjust the image by rotating the camera lens and aiming it at the subject.



4. Press [OK] to take a photo.
The photo is saved automatically.
5. Press [OK] to take another photo.

View a photo

1. In Idle mode, press [OK] and select **File manager** → **Images**.
2. Select the photo you want from the **Pictures** folder.

Record a video

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Press [1] to switch to Record mode.
3. Adjust the image by rotating the camera lens and aiming it at the subject.
4. Press [OK] to start recording.
5. Press [OK] to stop recording.
The video is saved automatically.
6. Press [OK] to record another video.

Play a video

1. In Idle mode, press **[OK]** and select **File manager** → **Videos**.
2. Select the video you want from the **Videos** folder.

Play media files

Copy media files to the phone

Use these methods:

- Download from the wireless web ► p. 39
- Download from a computer using the optional Samsung PC Studio ► Samsung PC Studio User's Guide
- Receive via Bluetooth ► p. 70

Create a play list

1. In Idle mode, press **[OK]** and select **Applications** → **Media player**.
2. Press <**Options**> and select **Open play list**.
3. Press <**Options**> and select **Add** → **Folder** or **Files**.
4. Press **[OK]** to select the files you want or scroll to the folder you want.
5. Press <**Add**> or <**Select**>.
6. Press <**Back**> to return to the media player screen.

Play media files

1. From the media player screen, press **[OK]**.
2. Select the file you want.
3. During playback, use the following keys:
 - **OK**: pauses or resumes playback.
 - **Left**: moves back to the previous file. Moves backward in a file when held down.
 - **Right**: skips to the next file. Skips forward in a file when held down.
 - **Up**: opens the play list.
 - **Down**: stops playback.
 - **▲/▼**: adjusts the volume.

Browse the web

Using a built-in web browser, you can easily access to the wireless web to get a variety of up-to-date services and information to download web content.

Launch the web browser

In Idle mode, press **[OK]** and select **Internet** → **Go to homepage**.

Navigate the web

- To scroll through browser items, press **[Up]** or **[Down]**.
- To select an item, press **[OK]**.
- To return to the previous page, press **<Back>**.
- To access options, press **<Options>**.

Use Contacts

Add an entry

To the phone's memory:

1. In Idle mode, enter a phone number.
2. Press <**Options**> and select **Save to Contacts** → **Phone** → **New** → a number type.
3. Specify contact information: First name, Last name, Work Email, Home Email, Group, Homepage, Birthday, and More information (Job title, Department, Company, Nickname, and Notes).
4. Press <**Options**> and select **Save** to save the entry.

To the USIM/SIM card:

1. In Idle mode, enter a phone number.
2. Press <**Options**> and select **Save to Contacts** → **SIM** → **New**.
3. Specify contact information, depending on your card type: Name, Phone number, Group, and Location.
4. Press [**OK**] to save the entry.

Find an entry

1. In Idle mode, press <**Contacts**>.
2. Enter the first few letters of the name you want.
3. Select an entry.
4. Scroll to a number and press [**↶**] to dial, or press [**OK**] to edit contact information.

Create and send your name card

1. In Idle mode, press **[OK]** and select **Contacts** → **My name card**.
2. Specify your contact information.
3. Press **<Options>** and select **Save** to save the name card.
4. To send the name card, access the **My name card** menu again.
5. Press **<Options>** and select **Send name card** → a sending method.

Send a multimedia message (MMS)

1. In Idle mode, press **<Msg.>** and select **Create new** → **Multimedia message**.
2. Enter the message subject.
3. Select **Text**.
4. Enter the message text and press **[OK]**.
5. Select **Picture or Video**, or **Audio**.
6. Add an image, a video clip, or a sound clip.
7. Press **<Options>** and select **Send**.
8. Enter destination numbers or addresses.
9. Press **[OK]** to send the message.

Send messages

Send a text message (SMS)

1. In Idle mode, press **<Msg.>** and select **Create new** → **Text message**.
2. Enter the message text.
3. Press **[OK]**.
4. Enter destination numbers.
5. Press **[OK]** to send the message.

Send files by MMS

1. In Idle mode, press <Msg.> and select **Create new** → **File messenger**.
2. Enter the message subject.
3. Move to the **Message** field.
4. Enter the message text.
5. Move to the **Attach files** line.
6. Press <Options> and select **Add files**, **Add name card**, or **Add v-calendar**.
7. Select images, videos, sounds, name cards, schedule items, or tasks.
8. Press <Options> and select **Attach**.
9. Press [OK].
10. Enter destination numbers or e-mail addresses.
11. Press [OK] to send the message.

Send an e-mail

1. In Idle mode, press <Msg.> and select **Create new** → **Email**.
2. Enter the e-mail subject.
3. Move to the **Message** field.
4. Enter the e-mail text.
5. Move to the **Attach files** line.
6. Press <Options> and select **Add files**, **Add name card**, or **Add v-calendar**.
7. Select images, videos, sounds, name cards, schedule items, or tasks.
8. Press <Options> and select **Attach**.
9. Press [OK].
10. Enter e-mail addresses.
11. Press [OK] to send the e-mail.

View messages

View a text message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Msg.**> and select **Inbox**.
2. Select an SMS message (✉).

View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Msg.**> and select **Inbox**.
2. Select an MMS message (✉).

View an e-mail

1. In Idle mode, press <**Msg.**> and select **Email inbox**.
2. Press <**Options**> and select **Download**.
3. Select an e-mail or a header.
4. If you selected a header, press <**Options**> and select **Retrieve** to view the body of the e-mail.

Use Bluetooth

Your phone is equipped with Bluetooth technology which enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

In Idle mode, press [OK] and select **Settings** → **Connectivity** → **Bluetooth** → **Activation** → **On**.

Search for and pair with a Bluetooth device

1. In Idle mode, press **[OK]** and select **Settings** → **Connectivity** → **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.
3. Enter a Bluetooth PIN code or the other device's Bluetooth PIN code, if it has, and press **<OK>**.
4. When the owner of the other device enters the same code, the pairing is complete.

Send data

1. Access an application, **Contacts**, **File manager**, or **Organiser**.
2. Select the item you want to send.
3. Press **<Options>** and select **Send (name card/schedule/task)** → **Via bluetooth**.
4. Select a device.
5. If necessary, enter the Bluetooth PIN and press **<OK>**.

Receive data

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If necessary, press **<Yes>** to confirm that you willing to receive.

Switch applications

You can switch to other applications from a menu, without closing the menu screen you were using.

Switch to an application

1. While using a menu, press **[↵]**.
2. Select an application.

Available applications

- **Call:** opens the dialling screen.
- **Messages:** accesses the **Messages** menu.
- **Internet:** launches the web browser.

Close all running applications

1. Press **[↵]**.
2. Scroll to **End all?**.
3. Press **<Yes>**.

Enter text

ABC, T9, Number, and Symbol mode

You can enter text for some features such as Messages, Contacts, or Organiser, using ABC mode, T9 mode, Number mode, and Symbol mode.

Changing the text input mode

The text input mode indicator displays when the cursor is in a text input field.

- Press and hold [*****] to switch between T9 (**T9EmB**) and ABC (**ABc**) modes.
- Press [*****] to change case (**T9EmB**/**T9EmB**/**T9Eab**) or to switch to Number mode (**123**).
- Press and hold [**#**] to switch to Symbol mode (**SYM**).

Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 mode

1. Press [**2**] to [**9**] to start entering a word. Press each key once for each letter.
For example, press [**4**], [**3**], [**5**], [**5**], and [**6**] to enter *Hello* in T9 mode.
T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, go to step 4. Otherwise, press [**0**] to display alternative word choices for the keys that you have pressed.
For example, *Of* and *Me* use [**6**] and [**3**].
4. Press [**#**] to insert a space and enter the next word.

Other T9 mode operations

- Press [**1**] to enter periods or apostrophes automatically.
- Press the Navigation keys to move the cursor.
- Press [**C**] to delete characters one by one. Press and hold [**C**] to clear the entire display.

Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.
2. Press [**0**] to display alternative words for your key presses. When there are no more alternative words, **Spell** displays on the bottom line.
3. Press <**Spell**>.
4. Enter the word you want using ABC mode and press <**Add**>.

Using ABC mode

Press the appropriate key until the character you want appears on the screen.

Key	Characters in order displayed	
	Upper case	Lower case
1	. , ? / ! ' @ _ - : 1	
2	A B C Ä Å Æ Γ Ç 2	a b c ä å æ Γ ç 2
3	D E F É Δ Φ 3	d e f è é Φ 3
4	G H I Θ Ψ 4	g h i ì ï Ψ 4
5	J K L Λ 5	j k l Λ 5
6	M N O Ö Ñ Ø 6	m n o ö ñ ø ò 6
7	P Q R S Π Σ Ξ 7	p q r s β Σ Ξ 7
8	T U V Ü 8	t u v ù ü 8
9	W X Y Z Ω 9	w x y z Ω 9
0	+ = < > € £ \$ % & ¥ ¤ 0	

(Creating an SMS message with GSM alphabet encoding)

Other ABC mode operations

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the entire display.

Using Number mode

Number mode enables you to enter numbers. Press the keys corresponding to the digits you want.

Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the symbols	[C].
insert the symbols	<OK>.

Call functions

Advanced calling features

Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [**↵**].

- ☑ • Press [**C**] to clear the last digit or press and hold [**C**] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold [**✳**] to enter a pause between numbers.

Making an international call

1. In Idle mode, press and hold [**0**]. The + character appears.
2. Enter the country code, area code, and phone number, then press [**↵**].

Redialling recent numbers

1. In Idle mode, press [**↵**] to display the list of recent numbers.
2. Scroll to the number you want and press [**↵**].

Making a call from Contacts

Once you have stored a number in Contacts, you can dial the number by selecting it from Contacts.

► p. 31

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ► p. 33

You can quickly dial a number from the USIM/SIM card using the location number assigned when stored.

1. In Idle mode, enter the location number for the phone number you want and press [**#**].
2. Find the number you want.
3. Press <**Call**> or [**↵**] to make a voice call, or <**V-Call**> to make a video call.

Ending a call

Press [**📞**] or close the phone.

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <**Accept**> or [**↵**] to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key to answer a call, except for [**📞**] and <**Reject**>. ► p. 67
- When **Active folder** is active, you can answer a call by opening the phone. ► p. 67
- Press <**Reject**> or [**📞**] to reject a call.

- Press and hold [▲/▼] to reject an incoming call or mute the ringer, depending on the **Side key** setting. ► p. 67

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <**View**>.
2. If necessary, scroll through the missed calls.
3. Press [↶] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the right side of the phone. The button on the headset works as follows.

To	Press
redial the last call	the button twice.
answer a call	the button.
end a call	and hold the button.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [▲/▼] to adjust the earpiece volume during a call.

Press [▲] to increase the volume level and [▼] to decrease the volume level.

Placing a call on hold/Retrieving

Press <**Hold**> or <**Unhold**> to place the call on hold or retrieve the call.

Making a second call

You can make another call if your network supports this function.

1. Press <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Swap**> to switch between the calls.
4. Press <**Options**> and select **Drop** → **Drop held call** to end the call on hold.
5. To end the current call, press [⏏].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports this function and you have activated the call waiting feature.

► p. 69

1. Press [**↶**] to answer the call. The first call is automatically put on hold.
2. Press <**Swap**> to switch between the calls.
3. Press <**Options**> and select **Drop** → **Drop held call** to end the call on hold.
4. To end the current call, press [**⏏**].

Using the speakerphone feature

Use the speaker feature to talk and listen with the phone a short distance away.

Press [**OK**] and then <**Yes**> to activate the speakerphone feature. Press [**OK**] again to switch back to the earpiece.

Using In-call options

Press <**Options**> to access the following options during a call:


- **Loudspeaker/Loudspeaker off:** turn the speakerphone feature or switch back to Normal mode.
- **Switch to headset/Switch to phone:** switch the call to a Bluetooth headset or back to the phone.
- **Mute/Unmute:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **Mute key tone/Unmute key tone:** turn the key tones off or on.
- **New call:** make a new call.
- **Contacts:** access the contact list.
- **Send text message:** create a new SMS message.
- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **Memo:** create a memo.
- **Transfer:** transfer the currently active call to a call on hold. The two callers can talk to each other, but you are disconnected from the call.
- **STK:** access special services, such as news, weather forecasts, entertainment, and location services, provided by your SIM card. This option is available when you use a SIM card supporting SAT menus.
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to 5 people on a multi-party call.
- **Split:** have a private conversation with one multi-party call participant. The other participants can converse with each other. After the private conversation, select **Join** to return both all private participants to the multi-party call.

- **Drop:** disconnect the call currently on hold or the active call.
- **End call:** end all calls.

Using the video call feature

In a 3G (UMTS) service area, your phone can make or receive a video call, allowing you to see other person on the screen during a conversation. The other person's phone must support the video call feature.

Making a video call

1. In Idle mode, enter the area code and phone number.
2. Press []. The other person appears on the screen when he/she allows.

Answering a video call

When you receive a video call, answer as you would when receiving a voice call. Press <**Show me**> to allow the caller to see you.

Using video call options

During a video call, press <**Options**> to access the following options:

- **Loudspeaker/Loudspeaker off:** turn the speakerphone feature or switch back to Normal mode.

- **Switch to headset/Switch to phone:** switch the call to a Bluetooth headset or hands-free car kit or back to the phone. To use this feature, you first need to connect your headset to the phone.
 - ▶ p. 71
- **Mute camera:** turn off the camera.
- **Mute voice:** turn off the microphone.
- **Mute camera & voice:** turn off the camera and the microphone.
- **Mute key tone:** turn off the key tones.
- **Zoom:** display or hide the zoom control bar.
- **Brightness/Hide brightness:** display or hide the brightness control bar.
- **Effects:** change the colour tone of the image.
- **Hide information/Show information:** hide or display information about the video call.
- **Send DTMF:** send Dual tone multi-frequency (DTMF) tones as a group after entering the entire number you need to send or retrieving a number from Contacts.
- **Video quality:** change the image quality of the camera.
- **End call:** end the video call.

Menu functions

All menu options listed

Call log *(Menu 1)*

Use this menu to view the calls you have dialled, received, or missed, and the length of the calls. You can also check the cost of your calls, if your USIM/SIM card supports this function.

To access this menu, press [OK] in Idle mode and select **Call log**.

Missed calls *(Menu 1.1)*

This menu displays the most recent calls you did not answer.

Accessing a call record

1. Scroll to the name or number you want. The call list also shows the call repetition.
2. Press [OK] to view the details of a call or [↶] to dial the number.

Using call record options

From the call list, press <Options> to access the following options:

- **Details:** access the call details.
- **Voice call:** make a voice call to the number.

- **Video call:** make a video call to the number, if the 3G service is available.
- **Use number:** paste the selected number to the normal dialling screen.
- **Save to Contacts:** save the selected number to Contacts.
- **Send message:** send a message to the selected number via SMS, MMS, or file messenger.
- **Delete:** delete the selected call record.
- **Delete all:** delete all records.

Dialled calls *(Menu 1.2)*

This menu displays the most recent calls you have dialled.

Received calls *(Menu 1.3)*

This menu displays the most recent calls you have received.

Current contacts *(Menu 1.4)*

This menu displays the most recent calls dialled, received, and missed.

Delete all (Menu 1.5)

Use this menu to delete all of the records in each call type.

1. Press **[OK]** to select the call types to be cleared.
2. Press **<Delete>**.
3. Press **<Yes>** to confirm the deletion.

Data calls (Menu 1.6)

Use this menu to view the total amount of sent or received data.

To reset a counter or all counters, press **<Options>** and select **Reset** or **Reset all**.

- ☒ If the phone is locked, it will require the password. The password is preset to **00000000**. You can change this password.
▶ p. 75

Calls cost (Menu 1.7)

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Total costs:** check the total cost of all your calls. If the total cost exceeds the maximum cost set in **Edit cost limit**, you must reset the counter before you can make another call.





- **Last call cost:** check the cost of your last call.
- **Max cost:** check the maximum cost set.

Press **<Options>** to access the following options:

- **Reset call cost:** reset the cost counters.
- **Edit cost limit:** set the maximum cost authorised for your calls.
- **Setup currency:** set the currency that is applied when the cost of your call is calculated.

Calls time (Menu 1.8)

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

-  **Total dialled:** check the total length of voice calls dialled.
-  **Total received:** check the total length of voice calls received.
-  **Total dialled:** check the total length of video calls dialled.
-  **Total received:** check the total length of video calls received.

To reset a counter or all counters, press **<Options>** and select **Reset** or **Reset all**.

- ☒ If the phone is locked, it will require the password. The password is preset to **00000000**. You can change this password.
▶ p. 75

Contacts *(Menu 2)*

You can store phone numbers on your USIM/SIM card and in your phone's memory. The USIM/SIM card and phone's memory are physically separate, but they are used as a single entity called Contacts.

To access this menu, press [OK] in Idle mode and select **Contacts**.

Search contact *(Menu 2.1)*

Use this menu to search for numbers in Contacts.

- ☒ You can quickly access this menu by pressing <Contacts> in Idle mode. ► p. 75

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name from the list.
3. Scroll to a number and press [↵] to dial, or press [OK] to edit contact information.

Using contact options

While viewing contact details, press <Options> to access the following options:

- **Edit:** edit contact information.
- **Send message:** send a message to the selected number via SMS, MMS, or file messenger.

- **Special options:** set the following options:
 - Picture:** assign a caller ID image to alert you to a call from the person.
 - Ringtone:** assign a ringtone to alert you to a call from the person.
 - Msg. alert tone:** select a ringtone to alert you to an incoming message from the person.
- **Add to speed dial:** set the selected number as a speed dial entry.
- **Video call:** make a video call to the number, if the 3G service is available.
- **Copy to SIM/Copy to phone:** copy the contact from the phone's memory to the USIM/SIM card, or vice versa.
- **Send name card:** send the contact via SMS, e-mail, file messenger, or Bluetooth.
- **Use number:** paste the selected number to the normal dialling screen.
- **Delete:** delete the contact.

New contact *(Menu 2.2)*

Use this menu to add a new contact to Contacts.

Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.

- **First name/Last name:** assign a name.
 - **Phone number:** add a mobile phone number.
 - **Work Email:** assign a business e-mail address.
 - **Home Email:** assign a personal e-mail address.
 - **Group:** assign a caller group.
 - **Homepage:** enter a homepage address.
 - **Birthday:** enter the person's birthday.
 - **More information:** enter the job title, department, company, nickname, and additional note of the person.
3. Press <**Options**> and select **Special options** to add additional information:
- **Picture:** assign a caller ID image to alert you to a call from the person.
 - **Ringtones:** assign a ringtone to alert you to a call from the person.
 - **Msg. alert tone:** select a ringtone to alert you to an incoming message from the person.
4. Press <**Options**> and select **Save** to save the contact.

Storing a number on the USIM/SIM card

1. Select **SIM**.
2. Enter information about the contact.

- **Name:** assign a name.
 - **Phone number:** enter a phone number.
 - **Email** (for USIM): assign an e-mail address.
 - **Group** (for USIM): assign a caller group.
 - **Location number:** enter a location number.
3. If you are using a USIM card, press <**Options**> to add additional information:
- **Add item:** add a number type to the contact.
 - **Delete item:** remove the selected category from the contact.
4. Press <**Save**> to save the contact.

Groups *(Menu 2.3)*

Use this menu to organise your contacts in caller groups.

Creating a new caller group

1. Press <**Options**> and select **Add group**.
2. Enter a name for the group.
3. Press <**Save**> to save the group.

Adding members to a caller group

1. Select a group.
2. Press [**OK**] to select the contacts to be added.
3. Press <**Save**>.

Managing caller groups

While viewing the group list, press <Options> to access the following options:

- **Add member:** add members to the selected group, if the group does not have any.
- **View members:** display the members of the selected group.
- **Add group:** add a new group.
- **Rename group:** change the group name.
- **Delete group:** delete the selected group. Group members, however, will not be deleted from Contacts.
- **Delete all groups:** delete all groups including default groups.

Speed dial *(Menu 2.4)*

Use this menu to assign a speed dial number (2 to 9) for 8 of your most frequently called numbers.

Assigning speed dial entries

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select a contact from the contact list.
3. Select a number.

Managing speed dial entries

From the Speed dial screen, press <Options> to access the following options:

- **Add:** assign a number to an unassigned key.
- **Details:** check the name and number assigned to a key.
- **Video call:** make a video call to the number, if the 3G service is available.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

My name card *(Menu 2.5)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a number in the phone's memory. ► p. 31

Using name card options

After saving your name card, press <Options> to access the following options:

- **Edit:** edit the name card.
- **Send name card:** send the name card via SMS, e-mail, file messenger, or Bluetooth.
- **Delete:** delete the name card.

Copy all *(Menu 2.6)*

Use this menu to copy all of the contacts stored on the USIM/SIM card to the phone's memory, or vice versa.

Own number *(Menu 2.7)*

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your USIM/SIM card.

Service number *(Menu 2.8)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your USIM/SIM card supports SDN.

1. Scroll to the number you want.
2. Press <Call> or [OK].

Settings *(Menu 2.9)*

Use this menu to change the default settings for Contacts.

- **Viewing settings:** select whether the contact list is sorted by last name or by first name.

- **Default storage settings:** select a default memory location to save contacts. If you select **Optionally**, the phone will ask you to select a memory location when saving a number.

Memory status *(Menu 2.0)*

Use this menu to view the number of contacts you have stored and total number of contacts you can store in Contacts.

Applications *(Menu 3)*

Use this menu to play media files, to record voice memos, to set time zone, or to use the phone as a calculator or converter.

To access this menu, press [OK] in Idle mode and select **Applications**.

SAT *(Menu 3.1)*

This menu is available if you use a USIM/SIM card that supports SIM Application Tool Kit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans.

For details, see your USIM/SIM card instructions or contact your service provider.

Media player (Menu 3.2)

You can enjoy music and video files from the phone's memory. First, you need to save files to your phone's memory.

To enjoy high quality music, you can use an optional Bluetooth stereo headset.

Downloading or receiving media files

You can play the following types of files on your phone.

- Music: MP3, AAC, MP4, 3GP
- Video: MP4, 3GP

Use the following methods to save media files to your phone's memory:

- Download from the wireless web ► p. 39
- Download from a computer using the optional Samsung PC Studio ► Samsung PC Studio User's Guide
- Receive via an active Bluetooth connection ► p. 70

Downloaded or received files are stored in the **Downloads** folder in **Videos** and **Music**.

Creating the play list

1. From the media player screen, press [OK].
2. Press <**Options**> and select **Add**.
3. Select **Folder** or **Files**.

4. Press [OK] to select the files you want or scroll to the folder you want.
5. Press <**Add**> or <**Select**>.
6. Press <**Back**> to return to the media player screen.

Playing media files

1. From the media player screen, press [OK].
2. Select a file. The selected file plays.

During playback, use the following keys:

Key	Function
OK	Pauses or resumes playback.
Left	Moves back to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
Up	Opens the play list.
Down	Stops playback.
▲/▼	Adjusts the volume.

Using media player options

While playing a file, press <**Options**> to access the following options:

- **Pause/Resume**: pause or resume playback.
- **Stop**: stop playback.

- **Send:** send the file via MMS, e-mail, file messenger, or Bluetooth.
- **Open play list:** display the play list.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Go to File Manager:** go to the **Videos** folder.
- **Hidden from Bluetooth:** hide the file so that other bluetooth devices cannot access it.
- **Visible to Bluetooth:** share the file with other Bluetooth devices.
- **Show controller/Hide controller:** display or hide the control bar of the Media player.
- **Details:** access the file properties.
- **Player settings:** change the default settings for playing media files.
Play options: select a repeat mode.
Volume: select a volume level.
Controller: display or hide the control bar of the Media player.
Audio player skin: select a skin image.
- **VOD settings:** select a profile to be used for accessing a video streaming server. You can also create or edit a profile. ► p. 72

- **Key management:** manage the licence keys you have acquired.

Using play list options

From the media player screen, press [Up] to access the play list and press <Options> to access the following options:

- **Play:** play the currently selected file.
- **Add:** add files or a folder to the play list.
- **Remove:** remove the selected file or all of the files from the current play list.
- **Move:** move the selected file to the position you want within the current play list or another play list.
- **Copy:** make a copy of the selected file in the current play list or another play list.
- **New list:** add a new play list.

Voice memo *(Menu 3.3)*

Use this menu to record voice memos.

Recording a voice memo

1. Press [OK] to start recording.
2. Speak into the microphone.
Press [OK] to pause or resume the recording.
3. Press <Stop> or [Down] to end recording. The voice memo is saved automatically.

Playing a voice memo

1. From the voice recorder screen, press **<Options>** and select **Go to sounds**.
2. Select a voice memo. The memo plays.

During playback, use the following keys:

Key	Function
OK	Pauses or resumes playback.
Left	Moves backward in a file.
Right	Skips forward in a file.
Down	Stops playback.
▲/▼	Adjusts the volume.

Using voice memo options

From the player screen, press **<Options>** to access the following options:

- **Play/Resume**: play the voice memo or resume playback.
- **Stop**: stop playback.
- **Record**: record a new voice memo.
- **Send**: send the file via MMS, e-mail, file messenger, or Bluetooth.
- **Go to sounds**: access the **Sounds** folder.
- **Rename**: change the file name.
- **Delete**: delete the selected file.

- **Hidden from Bluetooth**: hide the file so that other Bluetooth devices cannot access it.
- **Visible to Bluetooth**: share the file with other Bluetooth devices.
- **Details**: access the file properties.
- **Voice settings**: change the default settings for recording a voice memo.

Default name: change the default prefix of the file names.

Recording time: select a maximum recording time.

World clock *(Menu 3.4)*

Use this menu to set your local time zone and find out what time it is in another part of the world.

Setting the local time zone

1. From the world map, press [Left] or [Right] to scroll to the city you want on the upper line. As the time line moves, the time and date of the given zone display.
2. Press [**OK**] to save the city as your local time zone.

Viewing world time

1. From the world map, move to the lower line.
2. Press [Left] or [Right] to scroll to the city you want.
3. Press [**OK**] to save the time zone.

Applying Daylight Savings Time

1. From the world map, press **<Options>** and select **Summer time**.
2. Press **[OK]** to select the time zones you want.
3. Press **<Select>**.
4. Press **[OK]**.

Calculator *(Menu 3.5)*

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

Performing a calculation

1. Enter the first number.
Press **[#]** to insert a decimal point.
2. Press one of the Navigation keys to access the math function you want.
3. Enter the second number.
4. Press **[OK]** to view the result.
5. If necessary, repeat from step 2 to continue the calculation.

Using calculator options

Press **<Options>** to access the following options:

- **Equal:** view the result.
- **Recent calculation:** display the last result you calculated.

- **Save to memory:** save a value into the calculator memory.
- **Recall memory:** retrieve the saved value.
- **Clear memory:** clear the saved values.

Converter *(Menu 3.6)*

Use this menu for common conversions, such as currency and temperature.

Performing a conversion

1. Select a converter.
2. Press **[Left]** or **[Right]** to select the original unit and press **[Down]**.
3. Enter the value to be converted and press **[Down]**.
 - Press **[#]** to insert a decimal point.
 - Press **[*]** to change the temperature to above zero (+) or below zero (-).
4. Press **[Left]** or **[Right]** to select the unit to which you want to convert.
The equivalent value for the amount you entered displays.

Using converter options

Press **<Options>** to access the following options:

- **Clear:** clear the current values.
- **Reverse:** reverse the conversion.
- **Currency rates:** display the currency rate list.

Internet *(Menu 4)*

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web. From the wireless web, you can access up-to-date information and a wide variety of media content, such as games, wallpapers, ringtones, and music files.

To access this menu, press [OK] in Idle mode and select **Internet**.

Go to homepage *(Menu 4.1)*

Use this menu to connect your phone to the network and load the homepage of the wireless web service provider.

Navigating the web browser

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	[OK].
return to the previous page	< Back >.

Using page options

From any web page, press <**Options**> to access the following options:

- **Go to homepage:** return to the homepage.
- **Enter URL:** enter a URL address manually.

- **Reload:** reload the current page with updated information.
- **Add favorite:** bookmark the current page.
- **Favorites:** access the bookmark list.
- **History:** access the list of web pages you have accessed.
- **Send link:** send the URL via SMS, e-mail, or file messenger.
- **Save:** save the image or page.
- **Advanced:** change the various settings for the browser.

Search text: search for a specific word or phrase from the current web page.

Clear history: delete the URLs stored in the history.

Clear cookies: delete cookies. Cookies are pieces of personal information sent to a web server while navigating the web.

Clear cache: clear the cache. The cache is a temporary memory site that stores recently accessed web pages.


Details: access the page properties.

Browser settings: change the settings for browser display, security, and certificates.

Network settings: select a connection profile to be used for accessing the wireless web. You can also create or edit a profile. ► p. 72

About...: access version and copyright information about the browser.

Exiting the browser

Press [] to end the network connection and exit the browser.

Enter URL *(Menu 4.2)*

Use this menu to manually enter a URL address and access the associated web page.

Favourites *(Menu 4.3)*

Use this menu to save URL addresses in order to quickly access web pages.

Adding a bookmark folder

1. Press <**New**> and select **Folder**.

If the phone has any bookmark or folder, press <**Options**> and select **New** → **Folder**.

2. Enter a name for the folder and press <**OK**>.

Adding a bookmark

1. Press <**New**> and select **Favourite**.

If the phone has any bookmark or folder, press <**Options**> and select **New** → **Favourite**.

2. Enter a URL address and press [**OK**].
3. Enter a title for the bookmark and press <**OK**>.
4. Press <**Options**> and select **OK** to save the item.

Accessing a bookmarked page

Selecting a bookmark item launches the web browser and accesses the associated web page.

Using bookmark options

After saving an item, press <**Options**> to access the following options:

- **Select:** access the bookmarked web page.
- **Details:** access the bookmark properties.
- **Send link:** send the URL address of the bookmark via SMS, e-mail, or file messenger.
- **New:** add a new bookmark or folder.
- **Edit:** edit the selected bookmark.
- **Move:** move the bookmark to another folder.
- **Delete:** delete the selected bookmark or all bookmarks.

History *(Menu 4.4)*

You can access the list of pages you have accessed recently.

Select a URL from the list to access the corresponding web page.

Browser settings *(Menu 4.5)*

Use this menu to change the settings for browser display, security, and certificates.

Network settings (Menu 4.6)

Use this menu to select a profile to be used for accessing the wireless web. You can also create or edit a profile. ► p. 72

Messages (Menu 5)

Use the **Messages** menu to send and receive text messages, multimedia messages, and e-mails. You can also use Push message, Voicemail, and Cell broadcast message features.

To access this menu, press **[OK]** in Idle mode and select **Messages**, or press **<Msg.>** in Idle mode.

Create new (Menu 5.1)

Use this menu to create and send messages.

Text message (Menu 5.1.1)

Short Message Service (SMS) allows you to send or receive text messages.

1. Enter your message.

- ☒ The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

2. Press **<Options>** and select **Insert** to insert a template, Contacts entry, or bookmarked URL address into text.
3. Press **[OK]**.
4. Enter a destination number.
To send the message to more than one recipient, fill in additional destination fields.
5. Press **[OK]** to send the message.

Multimedia message (Menu 5.1.2)

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Enter the message subject.
2. Select **Text**.
3. Enter the message text and press **[OK]**.
4. Select **Picture or Video** or **Audio** and add an image, a video, a sound file.

- ☒ • The maximum size allowed for a message can differ, depending on your service provider.
- Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

5. Press **<Options>** to access the following options for editing the message:
 - **Preview:** view the message as it will be shown on the recipient's phone.
 - **Edit text:** edit the text of your message.
 - **Change file:** replace an added item.
 - **Delete text/Delete file:** delete an added item.
 - **Add page:** add a page. Move to each page by pressing [Left] or [Right].
 - **Move page:** move the current page to the next or previous page.
 - **Delete page:** delete an added page.
 - **Edit style:** change the page properties.
 - This page:** set the page duration and change font colour and style for the selected page.
 - All page:** change the background colour and page layout.
6. When you have finished, press **<Options>** and select **Send**.
7. Enter a phone number or an e-mail address.

To send the message to more than one recipient, fill in additional destination fields.
8. Press **[OK]** to send the message.

File messenger (Menu 5.1.3)

Use this menu to send multiple media files by attaching them to an MMS message.

1. Enter the message subject.
2. Move to the **Message** field.
3. Enter the message text.
4. Select the **Attach files** line.
5. Scroll to a media folder and press **[OK]** to select files.
6. Press **<Options>** and select **Attach**.
7. Press **<Options>** to access the following options:
 - **Attached file list:** access the list of attached data files.
 - **Add name card:** attach a Contacts entry as a name card.
 - **Add v-calendar:** attach calendar data as a data format attachment.
 - **Delete all attachments:** delete all attachments.
8. When you have finished, press **[OK]**.
9. Enter a phone number or an e-mail address.

To send the message to more than one recipient, fill in additional destination fields.
10. Press **[OK]** to send the message.

Email (Menu 5.1.4)

You can send and receive e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile. ► p. 51







1. Enter the subject of your e-mail.
2. Move to the **Message** field.
3. Enter the e-mail text.
4. Select the **Attach files** line.
5. Scroll to a media folder and press [OK] to select files.
6. Press <Options> and select **Attach**.
7. Press <Options> to access the following options:
 - **Attached file list:** access the list of attached data files.
 - **Add name card:** attach a Contacts entry as a name card.
 - **Add v-calendar:** attach calendar data as a data format attachment.
 - **Delete all attachments:** delete all attachments.
8. When you have finished, press [OK].
9. Enter an e-mail address.
To send the e-mail to more than one recipient, fill in additional destination fields.
10. Press [OK] to send the e-mail.

Inbox (Menu 5.2)

This folder stores all of the messages you have received, except for e-mails.

Viewing a message

The following icons may appear on the message list to show the message type:

-  SMS
-  MMS
-  MMS notification
-  Configuration
-  Push message
-  USIM/SIM

- ☒ • Depending on the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.
- A ! icon next to a message means that the message is of high priority. A grey-coloured message icon indicates low priority.

Using message options

While viewing a message, press <Options> to access the following options:

SMS messages

- **Call:** make a call to the selected number.
- **Go to URL:** connect to the URL in the message.
- **Add to Favourites:** add the URL to your bookmark list.
- **Create email:** send an e-mail to the highlighted e-mail address.

- **Reply:** send a reply to the sender via SMS or MMS.
- **Forward:** forward the message to other people.
- **Call back:** make a call the sender.
- **Save to Contacts:** save the selected number or e-mail address to Contacts.
- **Move to phone/Move to SIM:** move the message between the USIM/SIM card and the phone's memory.
- **Delete:** delete the message.

MMS messages

- **Play:** open the selected media file.
- **Call/Go to URL/Go to RTSP:** make a call to the selected phone number or access the selected web link.
- **Add to Favourites:** add the selected URL to your bookmark list.
- **Create email:** send an e-mail to the selected e-mail address.
- **Create MMS:** send an MMS message to the selected e-mail address.
- **Reply:** reply to the sender via SMS or MMS.
- **Reply to all:** reply to the sender and all recipients.
- **Forward:** forward the message to other people.
- **Call back:** make a call to the sender.

- **Save as template:** save the message as a template in the **Multimedia templates** folder.
- **Save files:** save media content from the message to your phone's memory.
- **Save to Contacts:** save the selected number or e-mail address to Contacts.
- **Delete:** delete the message.
- **Details:** access the message properties.

Configuration messages

- **Install:** apply the configuration specified in the message to your phone.
- **Delete:** delete the message.

Push messages

- **Go to URL:** connect to the URL specified in the message.
- **Delete:** delete the message.

Drafts *(Menu 5.3)*

This folder stores messages you have saved to send them at a later time while creating the message.

From the message list, press <**Options**> to access the following options:



- **View:** open the selected MMS message.
- **Edit:** change the selected message.
- **Send:** send the selected message.

- **Sort by:** change the sort order of the message list.
- **Delete:** delete the selected message.
- **Delete all:** delete all messages.

Outbox *(Menu 5.4)*

This folder stores messages the phone is attempting to send or has failed to send.

The following icons are available to show the message status:

-  Being sent
-  Failed to send

From the message list, press <Options> to access the following options:

- **View:** open the selected MMS message.
- **Send again:** resend the message.
- **Edit:** change the selected message.
- **Cancel sending:** cancel sending the message.
- **Sort by:** change the sort order of the message list.
- **Delete:** delete the message.
- **Delete all:** delete all messages.
- **Details:** access the message properties.

Sent box *(Menu 5.5)*

This folder stores messages that you have sent.

From the message list, press <Options> to access the following options:

- **View:** open the selected message.
- **Forward:** forward the message to other people.
- **Sort by:** change the sort order of the message list.
- **Delete:** delete the message.
- **Delete all:** delete all messages.
- **Details:** access the message properties.




Email inbox *(Menu 5.6)*

This folder stores e-mails that you have received.

Viewing received e-mails

1. Press <Options> and select **Download**. The phone checks the e-mail server and downloads new e-mails.

The following icons are available to show the e-mail status:

-  : Retrieved e-mail
-  : Retrieved e-mail with attachments
-  : E-mail not retrieved



- Depending on the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.
- A ! icon next to a message means that the message is of high priority. A grey-coloured message icon indicates low priority.

2. Select an e-mail or a header.
3. Press [**▲**] or [**▼**] to view other pages in the e-mail.
4. Select an attached file to view or play it.

Using e-mail options

While viewing the e-mail or header, press **<Options>** to access the following options:

- **Retrieve**: retrieve the body of the e-mail from the e-mail server.
- **Reply**: send a reply to the sender.
- **Reply to all**: send a reply to the sender and all recipients.
- **Forward**: forward the e-mail to other people.
- **Save files**: save the attached files from the e-mail to your phone's memory.
- **Save to Contacts**: save the selected number or e-mail address to Contacts.

- **Block**: add the sender's e-mail address or e-mail subject to the Block list to reject e-mails from that address or containing that subject.
- **Delete from phone**: delete the selected e-mail or all e-mails from the phone.
- **Delete permanently**: delete the selected e-mail or all e-mails from both the phone and the e-mail server.
- **Details**: access the e-mail properties.

Templates *(Menu 5.7)*

Use this menu to make and use templates of frequently used messages.

Text templates *(Menu 5.7.1)*

You can create SMS templates with the sentences you use frequently so that you can retrieve and insert them when composing an SMS message.

Creating a template

1. Press **<New>**, or press **<Options>** and select **New**, if one has already been stored.
2. Enter a message and press [**OK**].

Using template options

From the template list, press **<Options>** to access the following options:

- **Send**: send the template as an SMS, MMS, file messenger, or e-mail.

- **New:** add a new template.
- **Edit:** change the selected template.
- **Delete:** delete the template.
- **Delete all:** delete all templates.

Multimedia templates *(Menu 5.7.2)*

You can create MMS templates so that you can use them in composing an MMS message.

Creating a template

1. Press <**New**>, or press <**Options**> and select **New**, if one has already been stored.
2. Create a template as you would when creating an MMS message.
3. Press <**Options**> and select **Save as template** to save the template.

Using template options

From the template list, press <**Options**> to access the following options:

- **View:** open the template.
- **Send:** send the template as a message.
- **New:** add a new template.
- **Edit:** change the selected template.
- **Delete:** delete the template.
- **Delete all:** delete all templates.

Broadcast *(Menu 5.8)*

Your phone receives Cell Broadcast (CB) messages, which are text messages related to various topics, such as weather forecast, traffic, and news report, from networks. Use this menu to access received CB messages.

Viewing a CB message

All CB messages are stored in the **Temporary** folder and will be deleted after a period of time. If you don't want a message to be deleted, save it to the **Archive** folder. While viewing the message, press <**Options**> and select <**Save**>.

Using message options

From the message list, press <**Options**> to access the following options:

- **View:** open the selected message.
- **Delete:** delete the selected message.
- **Delete all:** delete all messages.

While viewing a message, press <**Options**> to access the following options:

- **Save:** save the message in the **Archive** folder.
- **Delete:** delete the message.

You can highlight text and, depending on the contents, you have the following additional options:

- **Call:** make a call to the selected number.
- **Go to URL:** connect to the selected URL.
- **Go to RTSP:** connect to a streaming server specified in the RTSP (Real Time Streaming Protocol).
- **Create email:** create an e-mail.

Delete all *(Menu 5.9)*

Use this menu to delete messages in each message folder all at once.

1. Press **[OK]** to select the message types to be cleared.
2. Press **<Delete>**.
3. Press **<Yes>** to confirm the deletion.

Settings *(Menu 5.0)*

Use this menu to set up various options for using the messaging service.

Text message *(Menu 5.0.1)*

You can configure SMS settings.

- **Settings x** (where **x** is the setting profile number): set the properties of each profile.
Centre address: store or change the number of your SMS server.

Expiration: set the length of time messages are stored in the SMS server.

Default type: set the default message type. The network can convert messages into the selected format.

Name: enter a profile name.

- **Sending settings:** set up the following options for sending SMS messages:

Reply path: allow recipient to reply to you through your SMS server.

Delivery report: set the network to inform you when your messages have been delivered.

Network selection: select either **CS preferred** (GSM) or **PS preferred** (GPRS), depending on your network.

Keep a copy: leave copies of your messages in the **Sent box** folder after sending.

Character support: select a character encoding type. If you select **Automatic**, the phone switches the encoding type from GSM alphabet to Unicode if you enter a Unicode character. Use of Unicode encoding will reduce the maximum number of characters in a message to about half. If this menu is not shown, your phone provides automatic character encoding by default.

Multimedia message (Menu 5.0.2)

You can configure MMS settings.

- **Sending options:** set up the following options for sending MMS messages:
 - Priority:** set the priority level of messages.
 - Expiration:** set the length of time messages are stored in the MMS server.
 - Delivery:** set a time delay before messages are sent.
 - Hide address:** set your address to be hidden from the recipient's phone.
 - Request delivery report:** set the network to inform you when your messages have been delivered.
 - Request read report:** send a read-reply request along with your messages.
 - Keep a copy:** leave copies of your messages in the **Sent box** folder after sending.
 - Add my name card:** allow your contact information to be attached to your messages via the file messenger.
 - Add signature:** edit and attach your signature to messages via the file messenger.
- **Receiving options:** set up the following options for receiving MMS messages:

Home network: determine if your phone retrieves new messages automatically when you are in your home service area.

Roaming network: determine if your phone retrieves new messages automatically when you are roaming in another network.

Reception within your home network or while roaming has the following options:

- **Auto download:** the phone automatically retrieves messages from the server.
 - **Manual:** the phone displays notifications first from the server. Use the **Retrieve** option to manually download new messages.
 - **Restricted:** the phone displays notifications first from the server. When you attempt to download messages, the phone informs you of additional charges.
 - **Reject:** the phone rejects all messages.
- Send delivery report:** set the network to inform the sender when a message has been delivered to you.
- Send read report:** determine whether or not the phone sends a read-reply when an incoming message has been read.
- Reject anonymous:** reject messages from anonymous senders.
- Reject advertisement:** reject advertisements.

- **MMS profiles:** select a connection profile to be used for MMS. You can also create or edit a profile. ► p. 72
- **Message size:** select the maximum file size of MMS attachment. This file size may vary, depending on your service provider.
- **Creation mode:** select an MMS creation mode.
Warning: the phone informs you when you create and send a message using unsupported file formats.
Free: you can create and send messages using unsupported file formats.
Restricted: you are not able to create and send messages using unsupported file formats.
- **Slide interval:** select the length of time the display shows each page in a message.

Email (Menu 5.0.3)

You can configure default e-mail settings.

- ☒ You cannot change e-mail profile and account settings while e-mails are being sent or retrieved.

- **Sending options:** set up the following options for sending e-mails:
From: set the sender name.
Sending account: select the default e-mail account.

Priority: change the priority level of e-mails.

Keep a copy: leave copies of your e-mails in the **Sent box** folder after sending.

Include body when replying: set whether or not the phone includes the original e-mail text in a reply.

Delivery report: set the network to inform you when your e-mails have been delivered.

Add my name card: allow your contact information to be attached to e-mails.

Add signature: attach a tag line to new e-mails or all e-mails including replies.

Input signature: enter your signature to e-mails.

- **Receiving options:** set up the following options for receiving e-mails:

Set download limit: determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

Auto polling: set the phone to automatically check the e-mail server to download e-mails at the specified intervals.

Polling frequency: set how often the phone checks the e-mail server for automatic polling.

Block address: specify e-mail addresses to reject e-mails from those addresses, and activate or deactivate mail blocking.

Block subject: reject e-mails which contain subjects you specify, and activate or deactivate mail blocking.

- **Email profiles:** select a connection profile to be used for e-mail services. You can also create or edit a profile. ► p. 72
- **Email accounts:** select an e-mail account and select an account to be used. Press <**Options**> and select **Edit** to access the following options for setting up an account:

Account name: enter a name for the currently selected account.

SMTP server: enter the IP address or host name of the outgoing e-mail server.

SMTP port: enter the SMTP port number.

Use SSL: activate the use of SSL (Secured Sockets Layer) protocol.

Retrieving server type: select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

POP3 server/IMAP4 server: enter the IP address or host name of the POP3 or IMAP4 server.

POP3 port/IMAP4 port: enter the POP3 or IMAP4 port number.

Use SSL: activate the use of SSL (Secured Sockets Layer) protocol.

IMAP4 retrieving option: (IMAP4 protocol only): set whether the phone retrieves only new messages or all messages.

Retrieving option: set which part of e-mails the phone retrieves from the server.

Keep in server: leave copies of e-mails on the e-mail server after retrieving.

My address: set your e-mail address.

User name: enter the POP3 or IMAP4 server user name.

Password: enter the POP3 or IMAP4 password.

Use SMTP authentication: enable SMTP authentication, which requires the user to login before sending e-mails.

Same as POP3/IMAP4: select if you want the SMTP server to have the same parameters as the POP3 or IMAP4 server.

User name: enter the SMTP user name.

Password: enter the SMTP password.

Voice mail (Menu 5.0.4)

Use this menu to set the number of your voicemail server.



You must store the voicemail server number before accessing the server. Your service provider can give you the number.

Push message (Menu 5.0.5)

Use this menu to determine whether or not your phone receives push messages.

Broadcast (Menu 5.0.6)

Use this menu to change the settings for receiving CB messages.

- **Receive:** select to receive CB messages, or not.
- **Channel:** specify the channels from which you receive CB messages.

When you select **Respective channels**, you can set up a list of active CB channels.

- **Language:** select the preferred languages in which CB messages display.

Memory status (Menu 5.*)

Use this menu to view the number of messages or the amount of memory currently in use for each message type in each folder.

File manager (Menu 6)





The **File manager** menu allows you to access images, videos, music files, and sound files stored in the phone's memory.

To access this menu, press [OK] in Idle mode and select **File manager**.

Tips for Digital Rights Management

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may require a licence key to access them. You can acquire the key from the website which owns the rights to the content; use the **Activate key** option.

Note the following icons on the list:

- : Forwardable item with a valid key.
- : Forwardable item without a valid key.
- : Unforwardable item with a valid key.
- : Unforwardable item without a valid key.

Your service provider supports only count-based or unlimited-access DRM files.

Images

Use this menu to access photos you have taken and images you have downloaded, received in messages, or imported from your computer.

Viewing an image

1. Scroll to an image folder.
2. Select an image.

Viewing a slide show

You can view your images as a slide show, a sequential presentation of each image in the current folder.

1. Select an image folder.
2. While viewing an image, press <**Options**> and select **Slide show**. The slide show begins.
3. Press <**Back**> to stop the slide show.

Using image options

While viewing an image, press <**Options**> to access the following options:

- **Send:** send the file via MMS, e-mail, file messenger, or Bluetooth.
- **Hidden from Bluetooth:** hide the file so that other Bluetooth devices cannot access it.
- **Visible to Bluetooth:** share the file with other Bluetooth devices.

- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Set as:** set the image as your wallpaper for the displays or as a caller ID image for a Contacts entry.
- **Move:** move the file to another folder.
- **Copy:** copy the file to another folder.
- **Real size:** view the image in its actual size or display size.
- **Slide show:** view all images as a slide show.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **New folder:** add a new folder.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Downloading images

1. Scroll to the **Downloads** folder.
2. Select **More pictures**. You are connected to the website preset by your service provider.
3. Search for the file you want and follow the onscreen instructions to download it.

Videos

Use this menu to access video clips you have recorded, downloaded, received in messages, or imported from your computer.



Video clips recorded on other devices, such as camcorders, may not play correctly.

Playing a video clip

1. Scroll to a video folder.
2. Select a video clip. ► p. 35

Using video options

From a video list, press <**Options**> to access the following options:

- **Play:** play the selected file.
- **Add to play list:** add the selected file to the play list.
- **Send:** send the selected file via MMS, e-mail, file messenger, or Bluetooth.
- **Hidden from Bluetooth:** hide the file so that other Bluetooth devices cannot access it.
- **Visible to Bluetooth:** share the file with other Bluetooth devices.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.

- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move:** move the file to another folder.
- **Copy:** copy the file to another folder.
- **Delete:** delete the file or all files.
- **Rename:** change the file name.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **New folder:** add a new folder.
- **Details:** access the file properties.
- **Memory status:** access memory information for each folder in **File manager**.
- **Key management:** manage the licence keys you have acquired.

Downloading video clips

1. Scroll to the **Downloads** folder.
2. Select **More videos**. You are connected to the website preset by your service provider.
3. Search for the file you want and follow the onscreen instructions to download it.

Music

Use this menu to access AAC or MP3 music files you have downloaded, received in messages, or imported from your computer.

Playing a music file

Select a music file. The music player opens and the selected music file plays. ► p. 35

Using music file options

From the music file list, press <**Options**> to access the following options:

- **Play:** play the selected file.
- **Add to play list:** add the selected file to the play list.
- **Send:** send the selected file via MMS, e-mail, file messenger, or Bluetooth.
- **Hidden from Bluetooth:** hide the file so that other Bluetooth devices cannot access it.
- **Visible to Bluetooth:** share the file with other Bluetooth devices.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.

- **Set as ringtone:** set the file as your ringtone for voice or video calls.
- **Set as caller ID:** set the file as a ringtone for a Contacts entry.
- **Move:** move the file to another folder.
- **Copy:** copy the file to another folder.
- **Delete:** delete the file or all files.
- **Rename:** change the file name.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **New folder:** add a new folder.
- **Details:** access the file properties.
- **Memory status:** access memory information for each folder in **File manager**.
- **Key management:** manage the licence keys you have acquired.

Downloading music file

1. Select **More music**. You are connected to the website preset by your service provider.
2. Search for the file you want and follow the onscreen instructions to download it.

Sounds

Use this menu to access voice memos you have recorded, and sound files you have downloaded, received in messages, or imported from your computer.

Playing a sound clip

1. Scroll to a sound folder.
2. Select a sound clip. The music player opens and the selected sound plays.

For a voice memo, see **Voice memo**. ► p. 37

Using sound options

From a sound list, press <**Options**> to access the following options:

- **Play**: play the selected file.
- **Send**: send the selected file via MMS, e-mail, file messenger, or Bluetooth.
- **Hidden from Bluetooth**: hide the file so that other Bluetooth devices cannot access it.
- **Visible to Bluetooth**: share the file with other Bluetooth devices.
- **Activate key**: get a new licence key when the key for the selected DRM file expires.
- **Reactivate key**: get another licence key even when the key for the selected DRM file has not expired.

- **Set as ringtone**: set the sound as your ringtone for voice or video calls.
- **Set as caller ID**: set the sound as a ringtone for a Contacts entry.
- **Move**: move the file to another folder.
- **Copy**: copy the file to another folder.
- **Delete**: delete the file or all files.
- **Rename**: change the file name.
- **Lock/Unlock**: lock the file to prevent it from being deleted, or unlock the file.
- **New folder**: add a new folder.
- **Details**: access the file properties.
- **Memory status**: access memory information for each folder in **File manager**.
- **Key management**: manage the licence keys you have acquired.

Downloading ringtones

1. Scroll to the **Ringtones** folder.
2. Select **More ringtones**. You are connected to the website preset by your service provider.
3. Search for the file you want and follow the onscreen instructions to download it.

Games & More

Use this menu to access the embedded Java games and downloaded Java applications.

Accessing a game

Select a game from the game list and follow the onscreen instructions. The procedure may differ from game to game.

Using Java application options

From the application list, press <**Options**> to access the following options:

- **Play:** launch the selected application.
- **Delete:** [delete the application or all applications.](#)
- **Delete all:** delete all applications, except for embedded games.
- **Rename/Rename file:** change the application name.
- **Lock/Unlock:** lock the application to prevent it from being deleted, moved, and renamed, or unlock the game.
- **Details:** access the application properties.
- **New folder:** add a new application folder.
- **Network settings:** select a connection profile to be used for applications requiring network access. You can also create or edit a profile.
 - ▶ p. 72

- **Memory status:** access memory information for each folder in **File manager**.

Downloading new games

1. Select **More games**. You are connected to the website preset by your service provider.
2. Search for the application you want and follow the onscreen instructions to download it.

Other files

Use this menu to store files that you have received but which are not supported by your phone. You cannot open these files on the phone. Unsupported file formats include *.doc, *.ppt, *.txt, and so on.

While viewing the file list, press <**Options**> to access the following options:

- **Move:** move the file to another folder.
- **Copy:** copy the file to another folder.
- **Delete:** delete the file or all files.
- **Rename:** change the name of the file or folder.
- **Lock/Unlock:** lock the file to keep it from being deleted, or unlock the file.
- **New folder:** add a new folder.
- **Details:** access the file properties.
- **Memory status:** access memory information for each folder in **File manager**.

Organiser *(Menu 7)*

The **Organiser** menu enables you to keep track of your schedule. You can also set alarms.

To access this menu, press **[OK]** in Idle mode and select **Organiser**.

Alarm *(Menu 7.1)*

Use this menu to set alarms to ring at specific times to remind you of important events or wake you up in the morning.

Setting an alarm

1. Select the type of alarm.
2. Set each alarm option:
 - **Alarm:** activate the alarm.
 - **Time:** enter the time for the alarm to ring.
 - **Repeat:** select a repeat option.
 - **Alert tone:** select an alarm tone.
3. Press **<Options>** and select **Save**.

Stopping an alarm

When the time for an alarm comes and the alarm sounds:

- For a non-wake-up alarm, press any key.
- For a wake-up alarm, press **<OK>** or **[OK]**.
Press any key, except **<OK>** or **[OK]**, to cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

Deactivating an alarm

1. Select the alarm you want to deactivate.
2. Select **Off** on the **Alarm** line and press **[OK]**.

Calendar *(Menu 7.2)*

Use this menu to manage your monthly schedule.

Consulting the calendar

When you enter the **Calendar** menu, the calendar appears with today's date indicated by a blue box.

Selecting a day

- Press **[Left]** or **[Right]** to move by day.
- Press **[Up]** or **[Down]** to move by week.
- Press **[▲/▼]** to move by month.

Using calendar options

From the calendar, press **<Options>** to access the following options:

- **View:** display the stored events for that date.
- **New:** add a new schedule, anniversary, task, or memo.
- **Week view:** display the week view screen.
- **Go to today:** display the current date.
- **Go to date:** enter a specific date.
- **Start date:** set whether the calendar starts with Sunday or Monday.
- **Delete:** delete the events for the specific period.
- **Delete all:** delete all events in the calendar.

Creating an item

You can store schedule items, anniversaries, tasks, and memos on the calendar. More than one event per day can be stored.

Entering a new schedule item

1. Select a date on the calendar.
2. Press <**Options**> and select **New** → **Schedule**.
3. Enter information or change the settings:
 - **Title**: enter the title of the item.
 - **Details**: enter the item details.
 - **Start** and **End**: enter the starting and ending times for the item.
 - **Start date** and **End date**: enter the starting and ending dates for the item.
 - **Location**: enter information about the item location.
 - **Alarm**: select to set an alarm for the item.
 - **before**: set how long before the item alarm is to alert you.
 - **Repeat**: select to set the item to recur.
 - **until**: set the ending date, if the item will recur.
 - **Expiry**: set when the item will be deleted from the calendar.
4. Press <**Options**> and select **Save** to save the item.

Entering a new anniversary

1. Select a date on the calendar.
2. Press <**Options**> and select **New** → **Anniversary**.
3. Enter information or change the settings:
 - **Occasion**: enter information about the anniversary.
 - **Date**: enter the date.
 - **Alarm**: select to set an alarm for the anniversary.
 - **before**: set how long before the anniversary alarm is to alert you.
 - **alarm time**: enter the time for the alarm to ring.
 - **Repeat every year**: set the phone to remind you of the anniversary every year.
4. Press <**Options**> and select **Save**.

Entering a task

1. Select a date on the calendar.
2. Press <**Options**> and select **New** → **Task**.
3. Enter information or change the settings:
 - **Title**: enter the title for the task.
 - **Task**: enter the task content.
 - **Start date**: enter the starting date.
 - **Due date**: enter the ending date.
 - **Priority**: select a priority level.
4. Press <**Options**> and select **Save**.

Entering a memo

1. Press <Options> and select **New** → **Memo**.
2. Enter the memo text and press [Down].
3. Enter the date for the memo.
4. Press <Options> and select **Save**.

Viewing an item

Once you have scheduled items, the square brackets appear on the corner of the date box.

1. Select a date on the calendar to display the items for the day.
2. Select an item to view its details.

Using options

From the item list, press <Options> to access the following options:

- **View:** display the items stored for the selected date.
- **New:** add a new item.
- **Completed/To do:** change the status of the selected task.
- **Month view:** display the month view screen.
- **Week view:** display the week view screen.
- **Change date/Change due date/Reschedule:** change the date of the item.
- **Delete:** delete the selected item.
- **Delete all:** delete all items for the selected day.





- **Send schedule/Send task:** send the item via SMS, e-mail, file messenger, or Bluetooth.
- **Send memo:** send the memo via SMS.

Week view *(Menu 7.3)*



You can view items for the selected week. A cell on the timetable indicates the presence of a schedule item. Select a cell for the date you want.

Today's events *(Menu 7.4)*

You can view items for the selected date. The following icons may display to indicate the type:



-  Schedule item
-  Anniversary
-  Task
-  Memo

Schedule *(Menu 7.5)*

This menu displays the scheduled items. If you have set the Repeat and Alarm options, the  and  display.

Select a schedule item to view its details.

Anniversary *(Menu 7.6)*

This menu displays anniversaries you have created. If you have set the Repeat and Alarm options, the  and  display.

Select an anniversary item to view its details.

Task (Menu 7.7)

Use this menu to display tasks you have created. The icons on the right indicate the importance; the lower the number on the icon, the higher the priority. A check mark appears in the status check box if the task has been completed.

Select a task to view its details.

Memo (Menu 7.8)

This menu displays memos you have created.

Select a memo to view its details.

Missed event alarm (Menu 7.9)

When you are unable to acknowledge an alarm for a schedule item or anniversary, the phone stores the alarm until you confirm it.


1. Select an item.
2. Press <**Confirm**> to confirm and delete the item.

Memory status (Menu 7.0)

Use this menu to access memory information for the items stored on the calendar.

Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos.

To access this menu, press **[OK]** in Idle mode and select **Camera**, or press and hold **[**] in Idle mode.





- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.

Taking a photo

You can take photos in various modes. The camera will produce JPEG photos.




When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. Access the **Camera** menu or press and hold **[**] in Idle mode.
2. Make any desired adjustments.
 - Press < > to access camera options. ► next section
 - Use the keypad to change the camera settings or switch to other modes. ► p. 63
3. Press **[OK]** to take a photo. The photo is saved in the **Pictures** folder.

4. To	Press
access photo options	<Options>. ► p. 63
delete the photo	<Delete>.
return to Capture mode	[OK].

Using camera options in Capture mode

In Capture mode, press <> to access the following options:

- **Take photo:** take a photo.
- **Record video:** switch to Record mode.
- **Go to Photos:** access the **Pictures** folder.
- **Shooting mode:** take a photo in the following modes:
 - Single shot:** take a photo in normal mode. You can select whether or not the camera automatically saves a photo.
 - Multi shot:** take several action stills. You can select the number of photos the camera will take.
 - Mosaic shot:** take several stills and save them in one frame. You can select the layout.
- **Effects:** change the colour tone of the image.
- **Frames:** apply a decorative frame.
- **Timer:** set a time delay before the camera takes a photo.

- **Zoom/Hide zoom:** display or hide the zoom control bar and zoom in or out by pressing [Up] or [Down].
- **Brightness/Hide brightness:** display or hide the brightness control bar and adjust the brightness by pressing [Left] or [Right].
- **Camera settings:** change the default settings for taking a photo.

Default name: change the default prefix for file names.

Viewfinder: select a preview screen.

Shutter sound: select the sound that you hear when you press the shutter release, [OK].

Capture quality: select an image quality.

Image size: select an image size.

Multi shot speed: select the shutter speed between each shot in Multi Shot mode.

Spot metering: adjust the exposure based on a specific area of the image. Select **On** to display the spot focus frame in the middle of the image, and change the exposure according to the brightness of the image fragment in the frame.

ISO: change the ISO setting, which controls the sensitivity of your camera. For low light situations, select a higher ISO number. The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may bring some distortion to an image.

White balance: adjust the colour balance of the image. You can make your photo appear warmer or cooler.

- **Camera shortcuts:** view the functions of the keys you can use in Capture mode.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode:

Key	Function
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
▲	Flips the image vertically.
▼	Shows the mirror image.
1	Switches to Record mode. ► p. 63
2	Changes the image size.
3	Changes the image quality.
4	Changes the shooting mode.
5	Changes the colour tone or applies a special effect.
7	Selects a decorative frame.
8	Sets the timer.
9	Goes to the Pictures folder.
*	Changes the preview screen.


Using photo options

After saving a photo, press <**Options**> to access the following options:

- **Viewfinder:** return to Capture mode.
- **View:** access one of the multi-shot photos.
- **Send:** send the file via MMS, e-mail, file messenger, or Bluetooth.
- **Delete:** delete the file.
- **Set as:** set the photo as your wallpaper for the displays or as a caller ID image for a Contacts entry.
- **Go to Photos:** access the **Pictures** folder.
► p. 53
- **Rename:** change the file name.

Recording a video

You can record a video of what is displayed on the camera screen and save it.

1. Access the **Camera** menu or press and hold [] in Idle mode.
2. Press [**1**] to switch to Record mode.
3. Make any desired adjustments.
 - Press <**Options**> to access camera options.
► next section
 - Use the keypad to change the camera settings or switch to other modes. ► p. 64

4. Press **[OK]** to start recording.
To pause, press **<Pause>**.
5. Press **[OK]** to stop recording. The video is automatically saved in the **Videos** folder.

To	Press
access video options	<Options> . ► p. 65
delete the video clip	<Delete> .
return to Record mode	[OK] .

Using camera options in Record mode

In Record mode, press **<Options>** to access the following options:

- **Record**: start recording.
- **Take photo**: switch to Capture mode.
- **Go to Videos**: access the **Videos** folder. ► p. 54
- **Effects**: change the colour tone of the image.
- **Zoom/Hide zoom**: display or hide the zoom control bar and zoom in or out by pressing [Up] or [Down].
- **Brightness/Hide brightness**: display or hide the brightness control bar and adjust the brightness by pressing [Left] or [Right].
- **Video settings**: change the following settings for recording a video:

Default name: change the default prefix of the file names.

Quality: select an image quality.

Recording time: select a video recording mode.
Select **Limit for MMS** to record a video suitable for messaging.

Select **Normal** to record a video within the limit of the currently available memory.

Size: select a frame size.

Audio record: record audio with a video clip.

- **Camcorder shortcuts**: view the functions of the keys you can use in Record mode.

Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:

Key	Function
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
▲	Flips the image vertically.
▼	Shows the mirror image.
1	Switches to Capture mode. ► p. 61
2	Changes the frame size.
3	Changes the image quality.

Key	Function
4	Changes the video recording mode.
5	Changes the colour tone or applies a special effect.
7	Mutes or unmutes audio.
9	Goes to the Videos folder.

Using video options

After saving a video clip, press <**Options**> to access the following options:

- **Play**: play back the video clip.
- **Viewfinder**: return to Record mode.
- **Send**: send the file via MMS, e-mail, file messenger, or Bluetooth.
- **Delete**: delete the file.
- **Go to Videos**: access the **Videos** folder. ► p. 54
- **Rename**: change the file name.

Settings *(Menu 9)*

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default status.

To access this menu, press [**OK**] in Idle mode and select **Settings**.

Profiles *(Menu 9.1)*

Your phone provides you with sound profiles that allow you to quickly and easily change the sound settings of the phone for different events or situations. Use this menu to adjust the properties of each profile and activate the profile you need.

Editing a profile

1. Scroll to the profile you want.
2. Press <**Options**> and select **Edit**.
3. Change the sound settings:
 - **Call alert type**: select an alert type for the call ringer.
 - **Voice call ringtone**: select a ringtone for the call ringer of voice calls.
 - **Video call ringtone**: select a ringtone for video calls.
 - **Tone volume**: adjust the volume for the call ringer.

- **Message alert type:** select an alert type for the message ringer.
- **Message alert tone:** select a ringtone for the message ringer.
- **Message alert repetition:** select if the phone repeatedly reminds you of a new message.
- **Phone sounds:** turn the various sounds on the phone on or off.

All on: enable all tones.

Pop-up box alerts: set the phone to beep when a pop-up window displays.

Minute minder: set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.

Call connect tone: set the phone to beep when an outgoing call is connected to the system.

Call end tone: set the phone to beep when a call is disconnected by the other person or due to a faded signal.

Power on/off: set the phone to beep when you turn on or off the phone.

Folder open/close: set the phone to sound when you open or close the phone.

Alerts on call: set the phone to beep when you receive a new message or when the time for an alarm comes during a call.

- **Key tones:** select a tone which sounds when you press a key.
- **Key tone volume:** adjust the volume of the key tones.
- **Call answer mode:** (for Car) [select how to answer an incoming call](#).

4. When you have finished, press **<Options>** and select **Save**.

Changing the active profile

From the profile list, select the profile you want.

Time & date (Menu 9.2)

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World clock** menu. ► p. 37

- **Time:** enter the current time.
- **Date:** enter the current date.
- **Time format:** select a time format. To select AM or PM for 12-hour format, press [Left] or [Right].
- **Date format:** select a date format.
- **Summer time:** select to apply daylight savings time.
- **Auto update:** select to receive time information from your network.

Phone *(Menu 9.3)*

Many different features of your phone's system can be customised to suit your preferences.

Language *(Menu 9.3.1)*

Use this menu to select one of several languages for the display text or T9 input mode, separately.

Shortcuts *(Menu 9.3.2)*

You can use the Navigation keys as shortcuts to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

Assigning a shortcut menu

1. Select a key to be used as a shortcut key.
2. Select a menu to be assigned to the key.

Using shortcut options


Press <Options> to access the following options:

- **Assign:** assign a shortcut menu.
- **Change:** change a shortcut menu assignment.
- **Remove:** deactivate the shortcut assignment to the selected key.
- **Remove all:** deactivate all shortcut assignments.



Active folder *(Menu 9.3.3)*

Use this menu to answer an incoming call by opening the phone.

Anykey answer *(Menu 9.3.4)*

Use this menu to answer an incoming call by pressing any key, except <Reject> and [].

Side key *(Menu 9.3.5)*

Use this menu to set whether the phone mutes the call ringer or rejects a call if you press and hold [/] when a call comes in.

Key management *(Menu 9.3.6)*

Use this menu to manage the licence keys you have acquired to activate media contents locked by DRM systems.

Press <Options> to access the following options:

- **View/Play/Preview:** open the corresponding media content.
- **Delete:** delete the selected licence key.
- **Go to My Media/Go to My Message:** access the file list or message containing media content.
- **Details:** access the properties of the selected licence key.

Display *(Menu 9.4)*

Use this menu to change settings for the display and backlight.

Greeting message *(Menu 9.4.1)*

Use this menu to enter the greeting that is displayed on the main display or external display.

Wallpaper (Menu 9.4.2)

You can change the background image that is displayed on the main display.

Cover LCD (Menu 9.4.3)

Use this menu to select an image or text to be displayed on the external display.

- **Clock:** select a clock type.
- **Cover title:** enter the text you want.
- **Wallpaper:** press <Change> and select an image.

LCD brightness (Menu 9.4.4)

Use this menu to adjust the brightness of the display for varying lighting conditions.

Backlight (Menu 9.4.5)

You can select the length of time the backlight or display stays on.

- **On:** select the length of time the backlight stays on.
- **Dim:** select the length of time the display stays on in Dim mode after the backlight turns off. After a specified time, the display turns off.

Dialing display (Menu 9.4.6)

Use this menu to select a font colour and size for the numbers entered and background colour of the display while dialling.

Call (Menu 9.5)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Caller ID (Menu 9.5.1)

Use this menu to prevent your phone number from being displayed on the phone of the person being called.



Some networks do not allow the user to change this setting.

- **By network:** use the default setting provided by the network.
- **Send:** send your number each time you make a call.
- **Hide:** ensure your number does not display on the other person's phone.

Diverting (Menu 9.5.2)

This network service reroutes incoming calls to a phone number that you specify.

1. Select the type of calls to be diverted.
2. Select a call diverting option:
 - **Always:** divert all calls.
 - **Busy:** divert calls when you are on another call or when you do not want to accept.

- **No reply:** divert calls when you do not answer the phone.
 - **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
3. Enter the number to which the calls will be diverted in the **Divert to** line.
 4. If you selected **No reply**, move to the **Waiting time** line and select the length of time the network delays before diverting a call.
 5. Press <**Options**> and select **Activate**.
To deactivate the call diverting, select **Deactivate**.


Barring (Menu 9.5.3)

This network service allows you to restrict your calls.

1. Select the type of calls to be barred.
2. Select a call barring option:
 - **All outgoing calls:** prohibit all outgoing calls.
 - **Outgoing int'l calls:** prohibit international calls.
 - **Int'l calls exc. home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming calls:** prohibit incoming calls.

- **Incoming calls when roaming:** prohibit incoming calls when you use your phone outside of your home service area.
- **Cancel all:** cancel all call barring settings, allowing calls to be sent and received normally.

3. Enter the call barring password supplied by your service provider.
4. Press <**Options**> and select **Activate**. To deactivate the call barring, select **Deactivate**.

 You can change the call barring password obtained from your service provider. From the call type list, press <**Options**> and select **Change password**.

Waiting (Menu 9.5.4)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which the call waiting option will apply.
2. Press <**Options**> and select **Activate**. To deactivate the call waiting, select **Deactivate**.

Auto redial (Menu 9.5.5)

Use this menu to set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.

Closed user group (Menu 9.5.6)

Use this menu to set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group, contact your service provider.

- **Use user group:** activate CUG index numbers.
- **Outside access:** enable calls to numbers other than those in the Closed user group. This feature depends on the nature of your CUG subscription.
- **Default group:** enable the default CUG, if you have set one with your service provider. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.
- **Group index:** add, delete, or activate CUG index numbers.

Video call (Menu 9.5.7)

Use this menu to change the default settings for using the video call feature.

- **Show me:** change the video camera settings for receipt of video calls.

Optionally: you can select whether or not the video camera is used each time you answer a video call.

Always: the camera is always used.

- **Retry by:** set how to retry when the phone fails to make a video call by MMS or voice call.

Connectivity (Menu 9.6)

Use this menu to set options for connection available on your phone.

Bluetooth (Menu 9.6.1)

Using the Bluetooth feature, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 metres. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.

- ☒ • If there are obstacles between the devices, the maximum operating distance may be reduced.
- It is recommended that you don't use the Bluetooth feature while using multimedia features, such as voice recorder, camera, and media player, or vice versa, for better performance.
- Some devices may not be compatible with your phone.

Setting up the Bluetooth feature






The **Bluetooth** menu provides the following options:

- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to locate to your phone, or not.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth service:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the Bluetooth setting options, select **My devices**.
2. Select **Search new device**.

After searching, a list of devices to which you can connect displays. The following icons indicate the kind of device:

-  Hands-free car kit or headset
-  Mobile phone
-  Computer
-  PDA
-  Unknown device

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
- Blue for paired devices
- Red for devices that are currently connected to your phone

3. Select a device.
4. Enter a Bluetooth PIN code and press **<OK>**. This code is used just once and you don't need to memorise it.

When the owner of the other device enters the same code, pairing is completed.

- ☒ Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has a code, you must enter it.

Using device options

From the device list, press **<Options>** to access the following options:

- **Browse device:** search for data from the selected device and import data directly to your phone.
- **Connect:** connect to a headset or hands-free car kit.
- **Disconnect:** end the connection with the connected device.

- **Authorize device/Unauthorize device:** determine whether or not the phone asks you to permit connection when other devices try to connect to your phone.
- **Delete:** remove the selected device or all devices from the list.
- **Rename:** rename the paired device.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want and press **<Options>**.
4. Select **Send (name card/schedule/task) → Via bluetooth**.
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If an unauthorised Bluetooth device sends data to your phone, press **<Yes>** to allow the device to access your phone.

Network (Menu 9.6.2)

Use this menu to customise the settings for connecting to a network.

- **Network selection:** select to either automatically or manually select the network used when roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.
- **Network mode:** select the network you use.
 - Automatic:** the phone scans for available networks.
 - GSM 900/1800:** the phone operates in the combined GSM 900/1800 network.
 - GSM 1900:** the phone operates in the GSM 1900 network. This option is only available in USA.
 - UMTS:** the phone operates in UMTS (3G network) networks. You can get a higher speed connection than on lower generation networks, and use advanced data and information services, such as video calls.

Connections (Menu 9.6.3)

Use this menu to create and customise the profiles containing the settings for connecting your phone to the network. You need these settings to use the web browser or send MMS messages or e-mails.

- ☒ Your phone is suited for connecting to by default. If you change the settings without first checking with your service provider, the web browser, MMS, and e-mail features may not work properly.

Creating a profile

1. Press **<Options>** and select **New**.
2. Specify profile parameters:
 - **Set name:** enter a profile name.
 - **Access name:** edit the access point name used for the address of the GPRS network gateway.
 - **Auth type:** choose the type of authentication used.
 - **User ID:** edit the user ID.
 - **Password:** enter the user password.
 - **Protocol:** select the protocol from between **HTTP** and **Other**.
 - **Home URL:** (HTTP only) enter the URL address of the page to be used as your homepage.
 - **Proxy address/Port:** (HTTP only) set the proxy server address and port.
 - **Linger time (sec.):** (HTTP only) set a time period after which the network is disconnected if there has been no new data traffic in that time.
 - **Advanced settings:** provide you with the following options:

Static IP: specify if you want to manually enter an IP address; see the **Local phone IP** option. If you want the IP address to be automatically assigned by the server, remove the check mark.

Local phone IP: enter the IP address obtained from the network operator, if you checked the Static IP option.

Static DNS: specify if you want to manually enter the Domain Name Server (DNS) address; see the **Server 1/Server 2** option.

If you want the address to be automatically assigned by the server, remove the check mark.

Server 1/Server 2: enter the Domain Name Server (DNS) addresses.

Traffic class: select the traffic class, if you selected the PS network.

3. Press **<Save>** to save the profile.

Using profile options

From the profile list, press **<Options>** to access the following options:

- **Edit:** edit the selected profile.
- **New:** add a new profile.
- **Rename:** change the profile name.
- **Delete:** delete the profile.
- **Restore:** restore the changed settings to the default status.

Application settings *(Menu 9.7)*

You can customise the settings for using applications available on the phone.

Internet *(Menu 9.7.1)*

Use this menu to select a connection profile to be used for accessing the wireless web. You can also create or edit a profile. ► p. 72

Messages *(Menu 9.7.2)*

Use this menu to change the default settings for using the message feature. ► p. 48

Contacts *(Menu 9.7.3)*

Use this menu to change the settings for using Contacts. ► p. 34

Camera *(Menu 9.7.4)*

Use this menu to change the default settings for taking photos. ► p. 62

Video recorder *(Menu 9.7.5)*

Use this menu to change the default settings for recording video clips. ► p. 64

Voice recorder *(Menu 9.7.6)*

Use this menu to change the default settings for the voice recorder. ► p. 37

Media player *(Menu 9.7.7)*

Use this menu to change the default settings for playing media files in the Media player. ► p. 36

VOD *(Menu 9.7.8)*

Use this menu to activate a profile to be used for accessing streaming servers to use VOD services. You can also create or edit a profile. ► p. 72

Security *(Menu 9.8)*

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and USIM/SIM card.



If you enter an incorrect PIN/PIN2 three times in succession, the USIM/SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

Phone lock *(Menu 9.8.1)*

Use this menu to protect the phone from unauthorised use. When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change phone password** menu.

SIM lock (Menu 9.8.2)

This menu allows your phone to work only with the current USIM/SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different USIM/SIM card.

PIN lock (Menu 9.8.3)

The 4- to 8-digit PIN (Personal Identification Number) protects your USIM/SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Fixed dialling mode (Menu 9.8.4)

If supported by your USIM/SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the USIM/SIM card.

Change phone password (Menu 9.8.5)

Use this menu to change your phone password.

Privacy lock (Menu 9.8.6)

Use this menu to lock access to messages, media files, call records, or Contacts entries. When a lock option is enabled, you must enter the phone password to access the locked items.

Change PIN code (Menu 9.8.7)

Use this menu to change your PIN. The PIN lock feature must be enabled to use this feature.

Change PIN2 code (Menu 9.8.8)

If supported by your USIM/SIM card, use this menu to change your current PIN2.

Memory status (Menu 9.9)

Use this menu to check the amount of memory being used for storing data, such as Text message, Multimedia message, Email, Push message, File manager, Contacts, and Organiser items. You can also view the amount of shared memory.

Reset settings (Menu 9.0)

Use this menu to reset the phone's settings you have changed and clear all data you have added.

1. Enter the phone password and press **<Confirm>**.

☒ The password is preset to **00000000**. You can change this password. ► p. 74

2. Press **<Yes>**.

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

“Please insert SIM card”

- Be sure that the SIM card is correctly installed.

“Phone lock”

- The automatic locking function has been enabled. You must enter the phone’s password before you can use the phone.

“PIN lock”

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN lock feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN lock** menu.


“Enter PUK”

- The PIN code was entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.


“No service,” “Network failure,” or “Not done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Be sure that you have pressed [].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([] pressed for more than one second.)
- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.

Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and “Low battery” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (📶). The number of bars indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Contacts entry

- Use the **Search contact** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery doesn't charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC. Body-worn operations are restricted to Samsung-

supplied, approved, or non- Samsung designated accessories that have no metal and must provide at least 1.5 cm separation between the device, including its antenna (whether extended or retracted) and the user's body. Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

GSM 1900

- Head: 0.381 W/Kg.
- Body-worn: 0.344 W/Kg.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. To find information that pertains to a particular model phone, this site uses the phone FCC ID number A3LSGHZ220 which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at

the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average

period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are

conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding

even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now

part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>

- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust


or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call.

Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

- ☒ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.

- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold

battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.

- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.
-

Index

A

- ABC mode, text input • 24
- Active folder • 67
- Alarm • 58
- Answering
 - call • 25, 28
 - second call • 26
- Anykey answer • 67
- Auto redial • 69

B

- Background image • 68
- Backlight time, set • 68
- Band selection • 72
- Barring, calls • 69
- Battery
 - charging • 7
 - low indicator • 8
- Bluetooth
 - receiving, data • 72
 - sending, data • 72
 - settings • 70
- Broadcast messages • 52
- Browser, web • 39

C

- Calculator • 38
- Calendar • 58
- Call cost • 30
- Call log
 - dialled • 29
 - missed • 29
 - received • 29
- Call time • 30

- Caller groups • 33

- Caller ID • 68

Calls

- answering • 25, 28
- barring • 69
- diverting • 68
- holding • 26
- making • 25
- redialling • 25
- rejecting • 25
- waiting • 69

Camera

- photos • 61
- videos • 63

- CB (Cell Broadcast) messages • 52

- Characters, enter • 23

- Configuration messages • 44

- Connection settings • 72

- Connection tone • 66

Contacts

- adding • 31
- deleting • 31
- finding • 31
- options • 31
- setting • 34
- speed dialling • 33

- Converter • 38

Creating messages

- e-mail • 43
- file messenger • 42
- MMS • 41
- SMS • 41

D

- Date, set • 66

Deleting

- call log • 30
- contacts • 31
- e-mails • 46
- events • 60
- MMS • 44, 48
- SMS • 44, 48

- Dialled calls • 29

Display

- backlight, set • 68
- brightness • 68
- icons • 10
- language • 67
- layout • 10
- settings • 67

- Diverting, calls • 68

- DRM (Digital Rights Management) • 52

- DTMF tones, send • 27

E

E-mails

- creating/sending • 43
- deleting • 46
- settings • 50
- viewing • 45

F

- FDN (Fixed Dialling Number) mode • 75
- File manager • 52
- File messenger • 42

G

- Games • 57
- Greeting message • 67

H

- Health and safety • 77
- Holding, call • 26

I

- Icons, description • 10
- Images, downloaded • 53
- Inbox, messages
 - e-mail • 45
 - MMS/SMS • 43
- International calls • 25
- Internet • 39

J

- Java applications • 57

K

- Keypad tones
 - selecting • 66
 - volume • 66

L

- Language, select • 67
- Last number, redial • 25
- Locking
 - media content • 75
 - phone • 74
 - SIM card • 75
- Low battery indicator • 8

M

- Memory status
 - contacts • 34
 - messages • 52
 - phone • 75

- Message tone • 66

Messages

- cell broadcast • 52
- configuration • 44
- e-mail • 43, 45
- greeting • 67
- MMS • 41, 42
- push • 44, 52
- SMS • 41, 43
- Minute minder • 66
- Missed alarm events • 61
- Missed calls • 29
- MMS messages
 - creating/sending • 41, 42
 - deleting • 44
 - settings • 49
 - viewing • 44
- Multimedia
 - files • 52
 - player • 35
- Multiparty-call • 27
- Music files, downloaded • 55

N

- Name card • 33
- Names
 - entering • 23
 - searching • 31
- Network band, select • 72
- Network selection • 72

O

- Organiser • 58
- Outbox, messages • 45

P

- Password
 - call barring • 69
 - phone • 75

Phone

- display • 10
- icons • 10
- locking • 74
- password • 75
- resetting • 75
- switching on/off • 8
- unpacking • 6
- Photos
 - taking • 61
 - viewing • 53
- PIN, change • 75
- PIN2, change • 75
- Power on/off tone • 66
- Privacy • 75
- Problems, solve • 76
- Profiles • 65
- Push messages • 44, 52

R

- Received calls • 29
- Received messages
 - e-mail • 45
 - MMS/SMS • 44
- Recording
 - videos • 63
 - voice memos • 36
- Redialling
 - automatically • 69
 - manually • 25
- Resetting phone • 75
- Roaming • 72

S

- Safety
 - information • 77
 - precaution • 1
- Security, calls • 74
- Sent messages • 45

Shortcut • 67
Silent mode • 14
SIM card

- inserting • 7
- locking • 75

SMS messages
creating/sending • 41
settings • 48
viewing • 43

Sound profiles • 65

Sounds, downloaded • 56

Speakerphone • 27

Speed dial • 33

Switching on/off
microphone • 27
phone • 8

T

T9 mode, text input • 23

Templates, message • 46

Text, enter • 23

Time, set • 66

V

Video calls
answering • 28
making • 28
options • 28
setting • 70

Videos
playing • 54
recording • 63

Voice memos
playing • 37
recording • 36

Voicemail server • 51

W

Waiting call • 69

Wallpaper • 68

Web browser
accessing • 39
bookmarks • 40

World time • 37