

- * Depending on the software installed or Vodafone, some of the descriptions in this manual may match from your phone.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this manual.



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-XXXXXA
English. 04/2005. Rev 1.0



SGH-ZV30
User's Guide



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Use road safety at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.



Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 74.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:



Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.



Indicates that you can get more information on the referenced page.



Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.



Indicates a key on the phone. For example, [↶]



Indicates a soft key, whose function is displayed on the phone screen. For example, <✉>



- **3G**

Your phone is capable of operating in a 3G environment, allowing much greater data transfer speed, video streaming, and video conferencing.

Special features of your phone



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.



- **Media player**

Play media files on your phone.



- **IrDA**

Send and receive Phonebook and Organiser data and media files via an infrared port.



- **Bluetooth**

Send photos, images, videos, and other personal data, and connect to other devices using free, wireless Bluetooth technology.



- **WAP browser**

Access the wireless web and access various services and current information.



- **Get personal with photo caller ID**

See who's calling you with their very own photo displays.



- **Name card**

Create name cards with your number and profile whenever introducing yourself to others use this convenient electronic name card.

- **Multimedia message service (MMS)**

Deliver MMS messages with a combination of text, images, and audio.

- **E-mail**

Deliver e-mails with images, video, and audio attachments.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Organiser**

Keep track of your daily, weekly, and monthly schedule.



- **Voice recorder**

Record memos or sounds.

Contents

Unpack 6

Make sure you have each item

Your phone 6

Buttons, features, and locations

Get started 7

First steps to operating your phone

Install and charge the phone	7
Power on or off	8
Keys and display	9
Display	10
Access menu functions.....	11
Customise your phone	12
Make/Answer calls.....	14

Step outside the phone 14

Begin with your camera, games, WAP, and other special features

Use camera	14
Play media files	15
Play games	16
Browse the web	17
Use Contacts	17

Send messages	18
View messages	19
Use Bluetooth wireless.....	20
Use a memory card	21

Enter text 23

ABC, T9, Number, and Symbol mode

Call functions 25

Advanced calling features

Menu functions 29

All menu options listed


Solve problems 73

Help and personal needs

Health and safety information 74

Index 81

Menu functions

To access Menu mode, press  in Idle mode.

1 Entertainment	▶ p. 29
------------------------	---------

2 Vodafone live!	▶ p. 30
-------------------------	---------

3 Media player	▶ p. 32
-----------------------	---------

Music	▶ p. 32
Video	▶ p. 32

4 Camera	▶ p. 34
-----------------	---------

5 Messaging	▶ p. 38
--------------------	---------

1 Create message	▶ p. 38
2 Inbox	▶ p. 39
3 Drafts	▶ p. 41
4 Outbox	▶ p. 41
5 Sentbox	▶ p. 41
6 Email inbox	▶ p. 42
7 Call voicemail	▶ p. 43
8 Templates	▶ p. 43
9 Broadcast	▶ p. 43
0 Delete all	▶ p. 44
* Settings	▶ p. 44
# Memory status	▶ p. 47

6 My files	▶ p. 47
-------------------	---------

Pictures	▶ p. 47
Videos	▶ p. 48
Sound and Ringtones	▶ p. 50
Music	▶ p. 51
Games	▶ p. 51
Applications	▶ p. 51
Themes	▶ p. 51
Other documents	▶ p. 52

7 Organiser & Tools	▶ p. 52
--------------------------------	---------

1 Vodafone	▶ p. 52
2 Applications	▶ p. 52
3 Alarms	▶ p. 52
4 Calendar	▶ p. 53
5 Voice memo	▶ p. 55
6 World clock	▶ p. 56
7 PIM sync	▶ p. 56
8 Calculator	▶ p. 57
9 Converter	▶ p. 58
10 Memory status	▶ p. 58

8 Contacts	▶ p. 58
-------------------	---------

1 Contacts	▶ p. 58
2 Groups	▶ p. 60

9 Settings	▶ p. 61
-------------------	---------

1 Phone settings	▶ p. 61
2 Display settings	▶ p. 63
3 Messaging settings	▶ p. 64
4 Call settings	▶ p. 64
5 Contact settings	▶ p. 66
6 Calendar settings	▶ p. 67
7 Connectivity	▶ p. 67
8 Security	▶ p. 71
9 Memory status	▶ p. 72
0 Reset settings	▶ p. 72

Unpack

Make sure you have each item



Phone



Travel Charger



Battery



PC Data Cable



PC Link CD



User's Manual

You can obtain various accessories from your local Samsung dealer.



The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations



Get started

First steps to operating your phone

SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN and available optional services. For 3G services, you can purchase a USIM card.


Install and charge the phone

- 1** Remove the battery.



- ☒ If the phone is already on, first turn it off by holding [⏻].

- 2** Insert the USIM/SIM card.

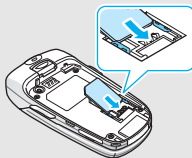


- ☒ Make sure that the gold-coloured contacts on the card face down into the phone.

- 3** Install the battery.



- 4** Plug the travel charger into the phone.

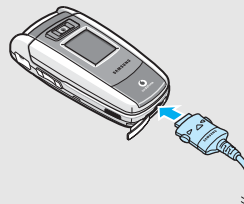


- 5** Plug the charger into a standard AC wall outlet. The LED on the charger indicates the charging progress.

- Red: the battery is being charged.
- Green: the battery is completely charged.
- Orange: the battery is not correctly installed or is operating at a too high or too low temperature.


- 6** When the phone is completely charged (green charger LED), unplug the charger from the power outlet.

- 7 Remove the charger from the phone.

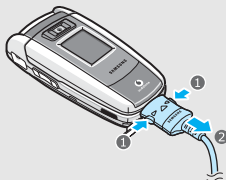

Low battery indicator


When the battery is low:

- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


Power on or off

Power on








1. Open the phone.
2. Press and hold [] to turn on the phone.
3. If necessary, enter the PIN and press <Confirm>.


 



Do not turn on the phone when mobile phone use is prohibited.

Power off

1. Open the phone.
2. Press and hold [].

Keys and display


Key(s)	Description
	Perform the function indicated on the bottom line of the display.
	In Idle mode, access menu options directly. ► p. 63 In Menu mode, scroll through the menu options.
	In Idle mode, accesses Menu mode. In Menu mode, select a highlighted menu option.
	Makes a video call.
	Opens the application switch window to open Call , Messages , and Vodafone live! without exiting the current application.
	Makes or answers a call. In Idle mode, retrieves the recent numbers dialled, missed, or received.
	Deletes characters from the display and selected item in an application.

Key(s)	Description
	Ends a call. Hold down to switch the phone on and off. In Menu mode, cancel input and return the phone to Idle mode.
	Enter numbers, letters, and some special characters. In Idle mode, hold [1] down to access your voicemail. Hold [0] down to enter an international call number.
	Enter special characters. Hold [#] down to activate or deactivate the Silent profile. Hold [*] down to enter a pause.
 (on the left)	Adjust the phone volume. In Idle mode, adjust the keypad tone volume. With the phone closed, hold down to activate the external display.
 (on the right)	Hold down to turn on the camera. In Camera mode, switches the camera lens.






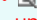


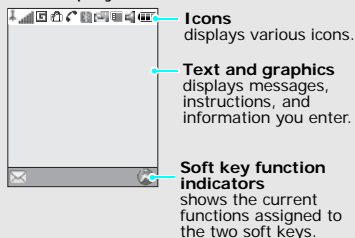
Display

Layout

The display has three areas.












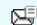




Icons

-  Received signal strength
-  Network connection status
 -  : 2.5G network
 -  : Calling in 2.5G network
 -  : 2.5G network is unavailable
 -  : 3G network
 -  : Calling in 3G network
 -  : 3G network is unavailable
-  Active roaming feature





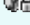



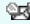




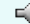





Icons

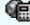(continued)

-  New message; depending on the message type, the following icons may appear.
 -  : SMS
 -  : MMS or MMS with attachments
 -  : E-mail
 -  : Voicemail
 -  : WAP push
 -  : Configuration message
-  Voice call in progress
-  Out of your service area; you cannot send or receive voice calls
-  Video call in progress
-  Out of your service area; you cannot send or receive video calls
-  Bluetooth feature is active ► p. 68 When sending data, this icon is blinking red and blue.
-  Connected with a Bluetooth headset or hands-free
-  IrDA port is active ► p. 69

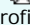Icons


(continued)

-  Memory card inserted
-  Connected with a computer
-  Synchronised with a phone
-  Browsing the Internet
-  Connected to a secured web page
-  Inbox full; depending on the message type, the following icons may appear.
 -  SMS
 -  MMS or MMS with attachments
 -  E-mail
 -  Voicemail
 -  WAP push
 -  Configuration message
-  Profile setting ► p. 62
 -  Normal
 -  Silent
 -  Car
 -  Meeting
 -  Outdoor
-  Battery power level

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

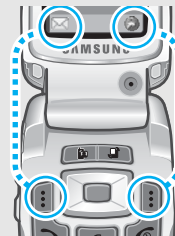


Press the left soft key to access the **Messages** menu.

Press the right soft key to access the **Vodafone live!** menu.

- ✓ In each main menu, one of the most popular sub menu is assigned to the left soft key. This allows you to quickly access the most popular menus.

Select an option

1. Press the appropriate soft key or ☐ to access Menu mode.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>**, **<OK>**, or ☐ to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods:
 - Press **<Back>** to move up one level.
 - Press [] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press ☐ and select **Settings** → **Phone settings** → **Phone language** → **Screen text**.
2. Select a language.
3. Press **<Save>**.

Call ringer melody


You can change the call ringer by changing the properties of the currently active sound profile.

To change the profile properties:

1. In Idle mode, press ☐ and select **Settings** → **Phone profiles**.
2. Scroll to the sound profile you are using.
3. Press **<Options>** and select **Edit**.
4. Select **Voice call ringtone** and select a ringer for voice calls.
5. Press **<Select>**.


6. Select **Video call ringtone** and select a ringer for video calls.
7. Press **<Select>**.
8. Press **<Options>** and select **Save**.

To change the sound profile:

1. In Idle mode, press  and select **Settings** → **Phone profiles**.
2. Scroll to the profile you want.
3. Press **<Options>** and select **<Change>**.

Idle mode Wallpaper

You can set a wallpaper for the idle screen.

1. In Idle mode, press  and select **Settings** → **Display settings** → **Wallpaper**.
2. Press [Left] or [Right] to scroll to an image box.
3. Select an image and press **<Set>**.


Silent mode

You can quickly activate the Silent profile to avoid disturbing other people.

Press and hold [#] in Idle mode.

Phone lock

You can protect the phone against unauthorised use with a phone password.

1. In Idle mode, press  and select **Settings** → **Security** → **Change phone password**.
2. Enter the default password, "00000000," and press **<Confirm>**.
3. Enter a new 4- to 8-digit password and press **<Confirm>**.
4. Enter the new password again and press **<Confirm>**.
5. Select **Phone lock**.
6. Select **Enabled**.
7. Enter the password and press **<Confirm>**.

Make/Answer calls

Make a call

To make a voice call:

1. Enter an area code and phone number.
2. Press [↵].
3. To end the call, press [⏏].

To make a video call:

1. Enter an area code and phone number.
2. Press [📹], and the other person appears on the screen.

Answer a call

1. When the phone is ringing, press [↵] or <Accept>.
2. For a video call, press <Show me> to allow the other person to see you.
3. To end the call, press [⏏].

Adjust the volume during a call

Press [▲/▼].

Step outside the phone

Begin with your camera, games, WAP, and other special features

Use camera

Take a photo

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Press [📷] to switch between the interior lens and exterior lens.
3. Aim the camera lens at the subject and adjust the image.
4. Press [📷] to take a photo. The photo is saved automatically.
5. Press <Back> to take another photo.

View a photo

1. In Idle mode, press [📷] and select **My files** → **Pictures**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [📷] to turn on the camera.
2. Press [1] to switch to Record mode.
3. Press [📷] to switch between the interior lens and exterior lens.
4. Press [📹] to start recording.
5. Press [📹] to stop recording. The video is automatically saved.
6. Press <Back> to record another video.

Play a video

1. In Idle mode, press [📺] and select **My files** → **Videos**.
2. Select the video you want.

Play media files**Copy media files to the phone**



Use these methods:

- Download from the wireless web ▶ p. 30
- Download from a computer using EasyStudio II
▶ EasyStudio User's Guide
- Copy files to an optional memory card and insert the card into the phone.
- Receive via IrDA or Bluetooth ▶ p. 69, p. 67

Create a play list


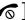
1. In Idle mode, press [📺] and select **Media player**.
2. Press <Options> and select **Open play list**.
3. Press <Options> and select **Add** → **Folder** or **Files**.
4. Check the files you want or scroll to the folder you want.
5. Press <Add> or <Select>.

Play media files

1. From the Media player screen, press .
2. Select the file you want.
3. During playback, use the following keys:
 - : Pauses or resumes playback.
 - Up: Opens the play list.
 - Left: Goes to the previous file. Moves backward in a file when held down.
 - Right: Skips to the next file. Skips forward in a file when held down.
 - ▲/▼: Adjusts the volume.
 - Down: Stops playback.

Play games

Select a game

1. In Idle mode, press  and select **My files** → **Games** → the game you want.
2. Press any key except [] to launch the game.

Play Powerinlinex

1. Press <Play>.
2. Select a character.
3. Press <OK> to start a game.

Play TheLastAge

1. Press <Play>.
2. Select **New Game**.
3. Press <OK> and then <Skip>.
4. Press <OK>.


Browse the web

Using a built-in WAP (Wireless Access Protocol) browser, you can get easy access to the wireless web to receive a variety of up-to-date information and services and to enjoy downloads of web contents.

Launch the browser

In Idle mode, press <  >.

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press .
- To return to the previous page, press <**Back**>.
- To use browser options, press <**Options**>.


Use Contacts

Add an entry



To the phone's memory:

1. In Idle mode, enter a phone number.
2. Press <**Options**> and select **Save contact to** → **Phone** → **New** → a number type.
3. Specify the contact information: First name, Last name, Email work, Email home, Group, Homepage, Birthday, and More information (Job title, Department, Company, Nickname, and Notes).
4. Press <**Options**> and select **Save** to save the entry.


To the USIM/SIM card:

1. In Idle mode, enter a phone number.
2. Press <**Options**> and select **Save contact to** → **SIM** → **New**.
3. Specify the contact information: Name, Phone number, Group, and Location.
4. Press  to save the entry.

Find an entry




1. In Idle mode, press  and select **Contacts**.
2. Select an entry.
3. Select a number and press [>] to dial, or <**Options**> to access options.

Create and send your name card




1. In Idle mode, press  and select **Contacts**.
2. Specify your contact information.
3. Press <**Options**> and select **Save** to save the name card.
4. To send the name card to other people, access the **My contact details** menu again.
5. Press <**Options**> and select **Send contact details** → the sending method you want.

Send messages




Send a text message (SMS)

1. In Idle mode, press <> and select **Create message** → **SMS**.
2. Enter the message text.
3. Press .
4. Enter destination numbers.
5. Press  to send the message.

Send a multimedia message (MMS)

1. In Idle mode, press <> and select **Create message** → **MMS**.
2. Enter the message subject.
3. Select **Text**.
4. Enter the message text and press .
5. Select **Picture** or **Audio**.
6. Add a media file.
7. Press <**Options**> and select **Send**.
8. Enter destination numbers or e-mail addresses.
9. Press  to send the message.

Send an e-mail



1. In Idle mode, press <  > and select **Create message** → **Email**.
2. Enter the e-mail text.
3. Move to the **Attach files** line.
4. Press < **Options** > and select **Add files**, **Add contact details**, or **Add v-calendar**.
5. Select images, sounds, name cards, schedule items, or tasks.
6. Press < **Options** > and select **Attach**.
7. Move the **Subject** line.
8. Enter the e-mail subject and press .
9. Enter e-mail address.
10. Press  to send the e-mail.

View messages**View a text message**

When a notification appears:

1. Press < **View** >.
2. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <  > and select **Inbox**.
2. Select a text message (.



View a multimedia message

When a notification appears:


1. Press < **View** >.
2. Press < **Options** > and select **Retrieve**.

3. Select a message from the Inbox.

From the Inbox:

1. In Idle mode, press <  > and select **Inbox**.
2. Select an MMS (.


View an e-mail

1. In Idle mode, press <  > and select **Email inbox**.
2. Press < **Options** > and select **Download**.
3. Select an e-mail or header.
4. If you selected a header, press < **Options** > and select **Retrieve**.


Use Bluetooth wireless

Your phone is equipped with Bluetooth technology which enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Turn on Bluetooth

- In Idle mode, press  and select **Settings** → **Connectivity** → **Bluetooth** → **Activation** → **On**.

Search for and pair with a Bluetooth device

1. In Idle mode, press  and select **Settings** → **Connectivity** → **Bluetooth** → **My devices** → **Search new device**.
 2. Select a device.
 3. Enter a Bluetooth PIN code or the other device's Bluetooth PIN code, if it has, and press < **OK** >.
- When the owner of the other device enters the same code, the pairing is complete.

Send data

1. Access an application, **Contacts**, **My items**, or **Organiser**.
2. Select the item you want to send.
3. Press < **Options** > and select **Send (name card)** → **Via bluetooth**.
4. Select a device.
5. If necessary, enter the Bluetooth PIN and press < **OK** >.

Receive data

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If necessary, press <Yes> to confirm the reception.

Use a memory card

You can use an optional memory card to enlarge your phone's memory capacity.


Important memory card information

- Frequent erasing and writing will shorten a memory card's lifespan.
- Do not remove a memory card from the phone or turn off the phone while data is being accessed or transferred. This could result in loss of data and/or damage to the card or phone.
- Do not subject memory cards to strong shocks.
- Do not touch memory card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
- Keep memory cards away from small children or pets.
- Do not expose memory cards in a place subject to electro static discharge and/or electrical noise.

- Use the memory card supplied with your phone or ones purchased from a Samsung dealer.

Insert a memory card


1. Slide a memory card into the memory card slot, with the label side face down.

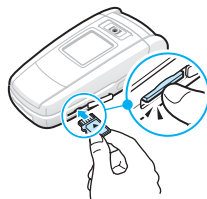

2. Press the card until it locks into place.

Remove the memory card

1. Press the memory card so that it is disengaged from the phone.

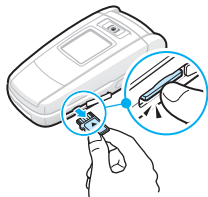


2. Slide the card out of the slot.

Use a card adapter

Using an optional card adaptor and a USB card reader/writer, you can read the card on a PC.

1. Insert an optional memory card into a card adaptor, and then the adaptor into a card reader/writer.

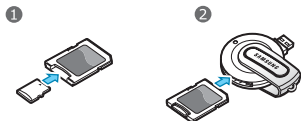

2. Plug the USB connector into the USB port on your PC.

Enter text

ABC, T9, Number, and Symbol mode

You can enter text for some features such as Messages, Phonebook, or Organiser, using ABC mode, T9 mode, Number mode, and Symbol mode.

Changing the text input mode

The text input mode indicator displays when the cursor is in a text input field.

- Press and hold [✖] to switch between T9 (T9 ABC) and ABC (ABC) modes.
- Press [✖] to change case (T9 ABC / T9 abc / T9 AB) or to switch to Number mode (123).
- Press and hold [#] to switch to Symbol mode (SYM).

Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.
For example, press [4], [3], [5], [5], and [6] to enter *Hello* in T9 mode.

T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed.
For example, *Of* and *Me* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

Tips for using T9 mode

- Press [1] to enter periods or apostrophes automatically.
- Press [Left] or [Right] to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the entire display.

Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.
2. Press [0] to display alternative words for your key presses. When there are no more alternative words, **Spell** displays on the bottom line.
3. Press <Spell>.
4. Enter the word you want using ABC mode and press <Add>.

Using ABC mode

Press the appropriate key until the character you want appears on the screen.

Key	Characters in order displayed	
	Upper case	Lower case
1	. , ? / ! ' @ _ - : 1	
2	A B C Ä Å Æ Γ 2	a b c ä å æ γ 2
3	D E F É Δ Φ 3	d e f é ê Φ 3
4	G H I Θ Ψ 4	g h i ð Ψ 4
5	J K L Λ Ç 5	j k l λ ç 5
6	M N O Ö Ñ Ø Ò 6	m n o ö ñ ø ò 6
7	P Q R S Π Σ Ξ 7	p q r s β Σ Ξ 7
8	T U V Û Ü 8	t u v û ü 8
9	W X Y Z Ω 9	w x y z Ω 9
0	+ = < > € £ \$ % & ¥ ¤ 0	

Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.
- Press [#] to insert a space.
- Press [Left] or [Right] to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the entire display.

Using Number mode

Number mode enables you to enter numbers. Press the keys corresponding to the digits you want.

Using Symbol mode

Symbol mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].
select a symbol	the corresponding number key.
clear the symbol(s)	[C].
insert the symbol(s)	<OK>.

Call functions

Advanced calling features

Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [↵].

- ☑ • Press [C] to clear the last digit or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold [*] to enter a pause between numbers.

Making an international call

1. In Idle mode, press and hold [0]. The + character appears.
2. Enter the country code, area code, and phone number, then press [↵].

Redialling recent numbers

1. In Idle mode, press [↵] to display the list of recent numbers.
2. Scroll to the number you want and press [↵].

Making a call from Contacts

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook. ► p. 58

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ► p. 60

Dialling a number from the USIM/SIM card

1. In Idle mode, enter the location number for the phone number you want and press [#].
2. Find the number you want.
3. Press <Call> or [↵] to make a voice call, or <V-call> to make a video call.

Ending a call

Press [⏏] or close the phone.

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.


Press [↵] or <Accept> to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key to answer a call, except for [⏏] and <Reject>. ► p. 63
- When **Active folder** is active, you can answer a call by opening the phone. ► p. 63
- Press <Reject> or [⏏] to reject a call.
- Press [▲/▼] to reject a call or mute the ringer, depending on the side key setting. ► p. 63

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press **<View>**.
2. If necessary, scroll through the missed calls.
3. Press [] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone.



The buttons on the headset work as listed below:



To	Press
redial the last call	the button twice.
answer a call	the button.
end a call	the button.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [/] to adjust the earpiece volume during a call.


Press [] to increase the volume level and [] to decrease the volume level.

Placing a call on hold/Retrieving

Press **<Hold>** or **<Unhold>** to place the call on hold or retrieve the call.



Making a second call

You can make another call if your network supports it.


1. Press **<Hold>** to put the call on hold.
2. Make the second call in the normal way.
3. Press **<Swap>** to switch between the calls.
4. Press **<Options>** and select **End held call** to end the call on hold.
5. To end the current call, press [].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ► p. 66

1. Press [] to answer the call. The first call is automatically put on hold.
2. Press **<Swap>** to switch between the calls.
3. Press **<Options>** and select **End held call** to end the call on hold.
4. To end the current call, press [].

Using the loudspeaker feature

Use the speaker feature to talk and listen with the phone a short distance away. Press **<Options>** and select **Loudspeaker** or press .

Using a Bluetooth headset

Use an optional Bluetooth headset to talk on the phone without holding the phone to your ear. To use this feature, you first need to register your headset and connect it to the phone. ► p. 67

Press **<Options>** and select **Switch to headset**.

To switch the call back to the phone, press **<Options>** and select **Switch to phone**.

Switching off the microphone (Mute mode)

You can temporarily switch off your phone's microphone so that the person on the phone cannot hear you.

Press **<Options>** and select **Mute**.

To turn the microphone back on, press **<Options>** and select **Unmute**.

Muting or sending key tones

You can turn the key tones off or on.

Press **<Options>** and select **Mute key tone** or **Unmute key tone**.

- ☒ To communicate with answering machines or computerised telephone systems, **Unmute key tone** must be selected.

Using Phonebook

You can access the **Contacts** menu to locate or store contacts in Phonebook. ► p. 58

Press **<Options>** and select **Contacts**.

Sending a text message

You can create and send a text message to other people as well as to your current call participants.

Press **<Options>** and select **Send SMS**. ► p. 38

Sending a sequence of DTMF tones

Dual tone multi-frequency (DTMF) tones are the tones used in phones for tone dialling.

You can send DTMF tones as a group after entering the entire number you need to send or retrieving a number from Phonebook. This feature is helpful for entering a password or an account number when you call an automated system, like a banking service.

1. When connected with a teleservice system, press **<Options>** and select **Send DTMF**.
2. Enter the number you need to send and press **<Send>**.

Adding a memo

You can add a memo during a call.

Press **<Options>** and select **Memo**. ► p. 54

Making a multi-party call

Use this feature to allow as many as six people to join a multi-party call, or conference call.

Vodafone must support multi-party calls for you to use this feature.

Setting up a multi-party call

1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.
3. Press **<Options>** and select **Join**. The first participant is added to the multi-party call.
4. If desired, call another person or answer an incoming call.
5. Press **<Options>** and select **Join**.
6. Repeat steps 4 and 5 as desired.

Having a private conversation with one participant

1. Press **<Options>** and select **Split**.
2. Select a name or number from the participant list.

You can talk privately with that person, while the other participants converse with each other.

3. To return to the multi-party call, press **<Options>** and select **Join**.

Dropping one participant

1. Press **<Options>** and select **Drop call**.
2. Select a name or number from the participant list.


The participant is dropped from the call, but the call continues with the other parties.

3. Press [>] to end the multiparty call.

Using the video call feature

In a 3G (UMTS) service area, your phone can make or receive a video call which allows you to see another person on the screen during a conversation. The other person's phone must support the video call feature.

Making a video call

1. In Idle mode, enter the area code and phone number.
2. Press [>].

Answering a video call

When you receive a video call, answer a video call as receiving a voice call. Press **<Show me>** to allow the caller to see you.

Using video call options

During a video call, press **<Options>** to access the following options:

- **Loudspeaker/Loudspeaker off:** turn the Loudspeaker on or off.


- **Switch to headset/Switch to phone:** switch the call to a Bluetooth headset or back to the phone.
- **Mute camera:** turn off the camera.
- **Mute voice:** mute the microphone.
- **Mute camera&voice:** turn off the camera and mute the microphone.
- **Mute key tone:** mute key tones.
- **Zoom:** display the zoom control bar.
- **Brightness:** display the brightness control bar.
- **Effects:** change the colour tone of the image.
- **Hide information/Show information:** hide or display information about the video call.
- **Send a sequence of DTMF:** send Dual tone multi-frequency (DTMF) tones as a group after entering the entire number you need to send or retrieving a number from Phonebook.
- **End call:** end the video call.

Menu functions


All menu options listed

Entertainment (Menu 1)

Use this menu to download Java games and play them.


To access this menu, press  in Idle mode and select **Entertainment**.

Playing Powerinlinex

1. From the **Games & More** menu, select **Powerinlinex**.
2. Press any key except [].
3. Select **PLAY** or press <Play>.
4. Select a character.
5. Press <OK> to start a game.

☒ During a game, press <Options> to access game options.

Playing TheLastAge

1. From the **Games & More** menu, select **TheLastAge**.
2. Press any key except [].
3. Select **START GAME** or press <PLAY>.
4. Select **New Game** or **Load Game**.

5. Press **<OK>** and then **<Skip>**.

6. Press **<OK>**.

☒ During a game, press **<Options>** to access game options.

Downloading new games

1. Select **More games**.
2. Search for a game and follow the onscreen instructions to download it.

Using Java game options

While viewing the game list, press **<Options>** to access the following options:

- **Download:** connect the preset website.
- **Start:** launch the selected game.
- **Permissions:** set whether or not the phone displays a security warning message when you use security functions and reset the permission setting.
- **Details:** access information about the selected game.
- **Delete folder:** delete the selected game folder.
- **Rename folder:** change the name of created game folder.
- **Create folder:** add a new game folder.

- **Network settings:** activate a connection profile to be used for accessing a Java server. You can also make or edit a profile. ► p. 70
- **Memory status:** display the amount of total and used memory Java games.

Vodafone live! *(Menu 2)*

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web. Using the WAP browser, you can access up-to-the-minute information and a wide variety of media contents, such as wallpapers, ring tones, and music files.

To access this menu, press ☐ in Idle mode and select **Vodafone live!**.

Go to homepage *(Menu 2.1)*

You can launch the WAP browser and access the homepage of the WAP service provided by Vodafone.

Navigating the WAP browser

In the WAP browser:

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	<input type="checkbox"/> .
return to the previous page	<Back> .

Using browser menu options

From any WAP page, press <**Options**> to access the following browser options:

- **Go to homepage:** send you back to the homepage.
- **Enter URL:** manually enter the URL address of the web page you want to access.
- **Reload:** reload the current page with updated information.
- **Add favorite:** add the current page to your bookmark list.
- **Favorites:** access the bookmark list.
- **History:** show URLs previously visited.
- **Send link:** send the URL via SMS, e-mail, or file messenger.
- **Save:** save the image of the current WAP page or the current page.
- **Advanced:** clear browser information and access the browser settings.

Search text: search for a specific word or phrase from the current WAP page.

Clear history: delete the URLs stored in the history.

Clear cookies: delete cookies.


Clear cache: delete information stored in the cache.

Details: access information about the current page.

Browser settings: change the settings for multimedia, browser display, security, and certificates.

Network settings: select a connection profile to be used for connecting to the Internet. You can also make or edit a profile. ► p. 70

Exiting the WAP browser

Press [>] to exit the browser.



Enter URL (Menu 2.2)

You can enter the URL of the WAP page you want in order to quickly access the page.

Favorites (Menu 2.3)

You can add and manage the URLs of the WAP pages you frequently access as bookmark item. You can also manage URLs you have bookmarked while navigating the Internet.

Adding a new bookmark

1. Press <**New**> and select **Favorite**.
2. Enter a URL and press .
3. Enter a name for the item and press <**OK**>.
4. Press  to save the item.

Using bookmark options

From the bookmark list, press **<Options>** to access the following options:

- **Open:** access the page of the selected bookmark.
- **Details:** access the details of the bookmark item.
- **Send link:** send the bookmark via SMS, e-mail, or file messenger.
- **New:** add a new bookmark.
- **Edit:** change the selected bookmark.
- **Delete:** delete the selected bookmark or all bookmarks.

History (Menu 2.4)

You can access the list of pages you have accessed recently.

Browser settings (Menu 2.5)


Use this menu to change the settings for multimedia, browser display, security, and certificates.

Network settings (Menu 2.6)

Use this menu to select a connection profile to be used for connecting to the Internet. You can also make or edit a profile. ► p. 70

Media player (Menu 3)

Use this menu to enjoy media files, such as video clips and music files. You can also play streaming contents.

To access this menu, press  in Idle mode and select **Media player**.


Downloading or receiving media files

Use this method to save media files to your phone:


- Download from the wireless web ► p. 30
- Download from a computer using EasyStudio II
► EasyStudio II User's Guide
- Receive via IrDA or Bluetooth ► p. 69, p. 67

Creating the play list


Add the media files to the play list so you can play them.

1. From the media player screen, press .
2. Press **<Options>** and select **Add**.
3. Select **Folder** or **Files**.
4. Check the files you want or scroll to the folder you want.
5. Press **<Add>** or **<Select>**.

Playing media files

1. From the media player screen, press .
2. Select the file you want.

During playback, you can use the following keys:

Keys	Function
	Pauses or resumes playback.
Left	Goes to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
Up	Opens the play list.
▲/▼	Adjusts the volume.
Down	Stops playback.

Using media player options

From the Media player screen, press <**Options**> to access the following options:

- **Pause/Resume:** pause or resume playback.
- **Stop:** stop playback.
- **Send:** send the file via MMS, Bluetooth, or infrared port.
- **Open play list:** go to the media file list.
- **My videos:** go to the **Videos** folder.
- **Hidden from bluetooth:** hide the selected file so that other bluetooth devices cannot access it.
- **Visible to bluetooth:** share the selected file with other Bluetooth devices.
- **Show controller/Hide controller:** display the control bar of Media player.

- **Details:** display details about the file.
- **Player settings:** change the default settings for playing media files.
Play options: select a repeat mode.
Volume: select a volume level.
Controller: display the control bar of Media player.
Audio player: select a skin image.
- **VOD settings:** select one of preset websites to download media files.


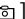
Using play list options

From the Media player screen, press [Up] to access the play list and press <**Options**> to access the following options:

- **Play:** play the currently selected file.
- **Add:** add files or a folder to the play list.
- **Remove:** remove the selected file or all files from the play list.
- **Move:** move the selected file to the position you want within the current playlist or another play list.
- **Copy:** make a copy of the selected file in the current play list or another play list.
- **Rename list:** change the name of the play list.
- **New list:** add a new play list.

Camera (Menu 4)

You can use the camera module embedded in your phone to take photos and record videos. Using the **Camera** menu, you can turn on the camera and manage your photos and video clips.


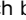

To access this menu, press  in Idle mode and select **Camera** or press and hold [] in Idle mode.

- ☒ • Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.


Taking a photo

The camera will produce JPEG photos.

- ☒ When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. To turn on the camera, access the **Camera** menu or press and hold [].
2. Press [] to switch between the interior lens below the display and the exterior lens on the external of the phone.
3. Adjust the image by aiming the lens at the subject, as shown.
 - Press **<Options>** to use the camera options. See the next section.
4. Press  to take a photo. The photo is saved in the **Pictures** folder.

☒ Hold the phone still for one or two seconds after pressing the camera shutter key to allow the image data to process.

To	Press
use photo options	<Options> . ► p. 36
delete the photo	[C] and then <Yes> .
send the photo to another person	
return to Capture mode	<Back> .

Using camera options in Capture mode

In Capture mode, press **<Options>** to access the following options:

- **Take photo:** take a photo.
- **Record video:** switch to Record mode.
- **Switch camera:** switch between the interior lens and the exterior lens.
- **My photos:** display the photos stored in the **Pictures** folder. ► p. 47
- **Shooting mode:** take a photo in the following modes:
 - Single shot:** take a photo in the normal mode.

Multi shot: take several action stills. You can select the number of shots.

Mosaic shot: take several stills and save them in one frame. Select the number of still images the camera will take.

- **Effects:** change the colour tone of the image.
- **Frames:** apply a decorative frame.
- **Timer:** set a time delay before the camera takes a photo.
- **Zoom:** display the zoom control bar.
- **Brightness:** display the brightness control bar.
- **Camera settings:** change the default settings for taking a photo.

Default name: change the default prefix of the file name.

Default storage: select a memory location to store photos.

Viewfinder: select a preview mode, either Full Screen mode or Normal mode with actual ratio.

Shutter sound: select a camera shutter sound.

Capture quality: select an image quality.

Image size: select an image size.

Multi shot speed: select the shutter speed between each shot in Multi Shot mode.

Spot metering: adjust the exposure based on a specific area of the image. Select **On** to display the spot focus frame in the middle of the image,

and change the exposure according to the brightness of the image fragment in the frame.

ISO: change the ISO setting, which controls the sensitivity of your camera. For low light situations, lower the ISO number to increase the quality.

The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may bring some distortion to an image.

White balance: adjust the colour balance of the photo. You can make your photo appear warmer or cooler.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Key	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/ Right	Adjusts the image brightness.
Up/ Down	Zooms in or out.
1	Switches to Record mode. ► p. 36
2	Changes the image size.

Key	Function
3	Changes the image quality or switch to the memory card where the photos are saved.
4	Changes the shooting mode and the number of photos for multi shots.
5	Changes the colour tone of the image.
7	Adds a decorative frame.
8	Sets the timer.
9	Goes to the Pictures folder. ► p. 47
*	Changes the preview mode.





Using photo options


After saving a photo, press **<Options>** to access the following options:

- **Viewfinder:** return to Capture mode.
- **Send:** send the photo via MMS, Bluetooth, or infrared port.
- **Delete:** delete the photo.
- **Set as:** set the photo as your wallpaper for main or external display, or as a caller ID image for a Phonebook entry.
- **My photos:** display the photos stored in the **Pictures** folder. ► p. 47
- **Rename:** change the name of the photo.

Recording a video

You can use your phone just like a camcorder to record what is currently displayed on the camera screen and save it as a video file. The camera will produce mp4 video clips.

1. To turn on the camera, access the **Camera** menu or press and hold **[]**.
2. Press **[1]** to switch to Record mode.
3. Press **[]** to switch between the interior lens below the display and the exterior lens on the external of the phone.
4. Adjust the image by aiming the lens at the subject.
 - Press **<Options>** to use the camera options. See the next section.
 - Use the keypad to change the camera settings or switch to other modes. ► p. 37
5. Press  to start recording. To pause, press **<Pause>**.
6. When you have finished, press . The video automatically saves in the **Videos** folder.

To	Press
play back the video clip	 .
use the video options	<Options> . ► p. 37
delete the video clip	[C] and then <Yes> .
return to Record mode	<Back> .

Using camera options in Record mode

In Record mode, press <**Options**> to access the following options:

- **Record:** start recording.
- **Take photo:** switch to Capture mode.
- **Switch camera:** switch between the interior lens or exterior lens.
- **My videos:** display the video clips stored in the **Videos** folder. ► p. 48
- **Effects:** changes the colour tone of the image.
- **Zoom:** display the zoom control bar.
- **Brightness:** display the brightness control bar.
- **Video settings:** change the following settings for recording a video:

Default name: change the default prefix of the video name.

Default storage: select a memory location to store video clips.

Quality: select an image quality.

Recording time: select a video recording mode.

Select **Normal** to record a video within the limit of the currently available memory. The length of your video is determined by how much memory has been used.

Select **Limit for MMS** to record a video suitable for an MMS message.

Size: select an image size.

Audio record: record audio with a video clip.

Using the keypad in Record mode

Key	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/Right	Adjusts the image brightness.
Up/Down	Zooms in or out.
1	Switches to Capture mode. ► p. 34
2	Changes the frame size.
3	Changes the image quality
4	Changes the video recording mode.
5	Changes the colour tone of the image.
7	Record audio with a video clip.
9	Goes to the Videos folder. ► p. 48



Using video options

After saving a video clip, press <**Options**> to access the following options:

- **Play:** play back the video clip.
- **Viewfinder:** return to Record mode.
- **Send:** send the video clip via MMS, e-mail, file messenger, Bluetooth, or infrared port.
- **Delete:** delete the video clip.
- **My videos:** display the video clips stored in the **Videos** folder. ► p. 48
- **Rename:** change the name of the video clip.

Messaging (Menu 5)

Use the **Messaging** menu to send and receive short text messages, multimedia messages, and e-mails. You can also use WAP push message, Voice mail features.


To access this menu, press  in Idle mode and select **Messaging** or press < > in Idle mode.


Create message (Menu 5.1)

Use this menu to create and send text messages, multimedia messages, or e-mails.

Messages (Menu 5.1.1)


Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Enter the message subject.
2. Select the **Text** line.
3. Enter the message text and press .
4. Select the **Picture** or **Audio** line.
5. Select an image or audio file and press <**Add**>.

 The maximum size allowed for an MMS message can differ depending on the country. If you cannot attach another file, add another page.



6. Press <**Options**> to access the following options:
 - **Preview**: display the message you created.
 - **Edit text**: edit the added text.
 - **Change picture/Change sound**: change the added picture or sound to another one.
 - **Remove text/Remove picture/Remove sound**: delete the added text.
 - **Save to Drafts**: save the message in the **Drafts** box.
 - **Add page**: add a page. Move to each page by pressing [Left] or [Right] on the message screen.
 - **Move page**: move the current page to the next or previous page.
 - **Delete page**: delete the added page.
 - **Edit style**: change the page profiles.
 - **This page**: set the page duration and change font colour and style for the selected page.
 - **All page**: change the background colour and page layout.
 - **Save as template**: save the message as a template in the **MMS templates** folder.
7. When you have finished, press <**Options**> and select **Send**.
8. Enter a phone number or e-mail address.

To send the message to more than one recipient, press [Down] and fill in additional destination fields.

9. Press  to send the message.

Email (Menu 5.1.3)

You can send and receive e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account. ► p. 46

1. Enter the e-mail text.
2. Select the **Attach files** line.
3. Scroll to a media file folder and press  to check files.
4. Press <**Options**> and select **Attach**.
5. Press <**Options**> to access the following options:
 - **Attached file list:** display the file list you attached.
 - **Add contact details:** add a contact as a Vcard format.
 - **Add v-calendar:** add a calendar memo.
 - **Save to Drafts:** save message in the **Drafts** box.
6. When you have finished, press <**Options**> and select **Send**.
7. Enter an e-mail address.
To send the e-mail to more than one recipient, press [Down] and fill in additional destination fields.
8. Press  to send the e-mail.

Inbox (Menu 5.2)

This folder stores all types of messages you have received, except for e-mails, MMS, SMS, voicemail, WAP push messages from the WAP server, and configuration messages.

Configuration messages, which are sent from Vodafone, contains network parameters to let you easily apply the network settings to your phone.

Viewing a message at the time of its receipt

When a message has been received, the phone alerts you by:








- Displaying a message icon and text notification
- Sounding or vibrating, depending on the message alert setting


To read a message immediately, press <**View**> and select a message from the Inbox. To read it later, press <**Exit**>.

For an MMS message, press <**Options**> and select **Retrieve**. The message is downloaded from the MMS server to the phone's memory.

Viewing a message in Inbox

On the message list, the following icons are available; depending on the message type.

- | | |
|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| •  SMS | •  MMS |
| •  MMS notification | •  Configuration |
| •  WAP push | •  Voice mail |
| •  Cell broadcast | |

- ☑ • Depending on the DRM (Digital Right Management), you may not be able to forward some messages. They are indicated by the  icon.
- An ! icon shows that a message was sent with high priority. A grey icon means that the message is of low priority.

While viewing the message list, press <Options> to access the following options:

- **View:** display the message.
- **Reply:** send a reply to the sender.
- **Reply all:** send a reply to the sender and all recipients.
- **Forward:** forward the message to other people.
- **Install:** apply the configuration value in the message to the phone.
- **Sort by:** change the sort order in the message list.
- **Retrieve:** retrieve the MMS message from the server.
- **Reject:** reject the message.
- **Delete:** delete the message or all messages.
- **Details:** access information about the message.

Using message options

While viewing a message, press <Options> to access the following options:

SMS messages

- **Reply:** reply to the sender.
- **Forward:** forward the message.
- **Save contact to:** extract phone numbers or e-mail addresses from the message and save them in Phonebook.
- **Move to SIM/phone:** move the message between the phone's memory and the USIM/SIM card.
- **Delete:** delete the message.

MMS notifications/messages

- **Retrieve:** retrieve the message from the server. This option is only available when you select a MMS notification.
- **Play:** play the message.
- **Reply:** send a reply to the sender.
- **Reply all:** send a reply to the sender and all recipients.
- **Forward:** forward the message to another person.
- **Save as template:** save the message as a template in the **MMS templates** folder.
- **Save media items:** save media items from the message into your phone's memory.
- **Save contact to:** extract phone numbers or e-mail addresses from the message and save them in Phonebook.
- **Delete:** delete the message.
- **Details:** access information about the message.

WAP push messages

- **Go to URL:** connect to the URL specified in the message.
- **Delete:** delete the message.

Configuration message

- **Install:** apply the configuration value in the message to the phone.
- **Delete:** delete the message.

Drafts *(Menu 5.3)*

This folder stores messages you have saved to send them at a later time or tried to send while creating the message.

On the message list, press <**Options**> to access the following options:

- **View:** open the selected message.
- **Edit:** edit the selected message.
- **Send/Send again:** send the message.
- **Sort by:** change the sort order of the message list.
- **Delete:** delete the selected message.
- **Delete all:** delete all messages.
- **Details:** access information about the message.

Outbox *(Menu 5.4)*

This folder stores messages that you have failed or tried to send.

While viewing the message list, press <**Options**> to access the following options:

- **View:** display the selected message.
- **Forward:** forward the message to other people.
- **Sort by:** change the sort order of the message list.
- **Delete:** delete the message.
- **Delete all:** delete all messages.
- **Details:** access information about the message.

Sentbox *(Menu 5.5)*

This folder stores messages that you have sent successfully or tried to send.

While viewing the message list, press <**Options**> to access the following options:

- **View:** display the selected message.
- **Forward:** forward the message to other people.
- **Sort by:** change the sort order of the message list.
- **Delete:** delete the message.
- **Delete all:** delete all messages.
- **Details:** access information about the message.






Email inbox (Menu 5.6)

This folder stores e-mails that you have received.

Viewing received e-mails

1. From the e-mail folder, press **<Options>**.
2. Select **Download** to get new e-mails from your server.

The phone checks for new e-mails and retrieve received e-mails. The icons tell you the status of each e-mail:

-  : Retrieved e-mail
-  : Retrieved e-mail with attachments.
-  : E-mail not retrieved
- ☒  : Depending on the DRM (Digital Right Management), you may not be able to forward some messages. They are indicated by the  icon.
- An **!** icon shows that an e-mail was sent with high priority. A grey icon means that the e-mail is of low priority.

3. Select an e-mail or header.
4. If the e-mail has more than one page, press [**▲/▼**] to scroll through pages one by one.
5. Select an attached file to view or play it.

Using e-mail options

While viewing the e-mail list or an e-mail, press **<Options>** to access the following options:

- **View**: open the selected item.

- **Retrieve**: retrieve the body of the selected e-mail header from the e-mail server.
- **Reply**: send a reply to the sender.
- **Reply to all**: send a reply to the sender and all recipients.
- **Forward**: forward the e-mail.
- **Download**: retrieve new e-mails or headers from the e-mail server.
- **Sort by**: change the sort order of the message list.
- **Save media items**: save the files attached to the e-mail in the phone's memory or on the memory card.
- **Save contact to**: extract phone numbers or e-mail addresses from the e-mail and save them in Phonebook.
- **Block**: add the sender's e-mail address to the Block number list.
- **Delete from phone selected**: delete the selected e-mail from the phone's memory.
- **Delete from phone all**: delete all e-mails from the phone's memory.
- **Delete permanently selected**: delete the selected e-mail from both the phone's memory and the e-mail server.
- **Delete permanently all**: delete all e-mails from both the phone's memory and the e-mail server.
- **Details**: access information about the e-mail.

Call voicemail *(Menu 5.7)*

Use this menu to access your voice mailbox, if your network supports this service.

You can quickly connect to voice mail server by pressing and holding [1] in Idle mode.

Templates *(Menu 5.8)*

Use this menu to create, edit, and send text templates and MMS templates.

MMS templates *(Menu 5.8.1)*

When you access this menu, you can view the list of templates you have saved.

From the MMS template list, press <Options> to access the following options:

- **View:** open the template message.
- **Send:** send the template as an MMS message.
- **Add new:** add a new template.
- **Edit:** change the selected template.
- **Delete:** delete the template.
- **Delete all:** delete all templates.

Text templates *(Menu 5.8.2)*

Use this menu to preset frequently used messages.

Press <Add new> to create a new text template.

From the text template list, press <Options> to access the following options:

- **Send:** send the template as an MMS, SMS, or e-mail message.

- **Add new:** add a new template.
- **Edit:** change the selected template.
- **Delete:** delete the template.
- **Delete all:** delete all templates.

Broadcast *(Menu 5.9)*

The Cell Broadcast service delivers short messages on various topics, such as weather, sports, or traffic.

Use this menu to change the settings for the service and to access broadcast messages.

- **Read:** open received messages.

The **Temporary** box saves network messages until the phone is switched off.


The **Archive** box saves network messages indefinitely. Press <Options> and select **Save** to save messages to the **Archive** box when a text notification appears.

- **Receive:** enable or disable the reception of broadcast messages.
- **Channel:** specify the channels from which you receive broadcast messages.
- **Language:** select the language in which broadcast messages display.

Please contact your service provider for details.

Delete all (Menu 5.0)

Use this menu to delete all messages in each message folder at once.

1. Press  to check the message box(es) you want.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Settings (Menu 5. *)

Use this menu to set up various options for using messaging service.

MMS (Menu 5. *. 1)

You can configure default MMS settings.

- **Sending options:** set up the following options for sending MMS messages:
 - Priority:** set the priority level of your messages.
 - Expiration:** set the length of time your messages are stored in the MMS centre while attempts are made to deliver them.
 - Delivery:** set a time delay before messages are sent.
 - Hide address:** set your address to be hidden from the recipient's phone.
 - Request delivery report:** set the network to inform you when your message has been delivered.
 - Request read report:** determine whether or not the phone sends a read-report request to a message's recipient.

Keep a copy: leave the copies of your messages in the **Sentbox** folder after sending.

- **Receiving options:** set up the following options for receiving MMS messages:

Home network: determine if your phone retrieves new messages automatically when you are in your home service area.

Roaming network: determine if your phone retrieves new messages automatically when you are roaming in another network.

Home reception and Roaming reception have the following options:

- **Auto download:** The phone automatically retrieves messages from the server.
- **Manual:** The phone displays notifications. Use the **Retrieve** option to manually download new messages.
- **Restricted:** The phone displays a new message icon without notifications when you receive a new message.
- **Reject:** The phone rejects all messages.
- Send delivery report:** send a delivery report from the network to a sender.
- Send read report:** determine whether or not the phone sends a read-report to a sender.
- Reject anonymous:** reject messages from anonymous senders.
- Reject advertisement:** reject advertisements.

- **MMS profiles:** select a connection profile to be used for MMS. You can also make or edit a new profile. ► p. 70
- **Message size:** select the maximum file size of MMS attachment. This file size may vary, depending on your country.
- **Creation mode:** select an MMS creation mode.
Warning: the phone informs you when you create and send a message using unsupported file formats.
Free: you can create and send a message using unsupported file formats.
Restricted: you are not able to create and send a message using unsupported file formats.
- **Slide interval:** select a length of time the display shows one page in a message.

SMS (Menu 5. ✱.2)

You can configure default SMS settings.

- **VODAFONE/Settings x:** set the following properties in a profile:
Centre address: store or change the number of your message centre.
Expiration: set the length of time your messages are stored in the SMS centre while attempts are made to deliver them.
Default type: set the default message type. The network can convert messages into the selected format.
Name: enter a profile name.

- **Sending options:** set up the following options for sending an SMS message:

Reply path: allow the recipient to reply to you through your SMS centre.

Delivery report: set the network to inform you when your SMS has been delivered.

Network selection: select a preferred data transmission method, either GSM (CS) or GPRS (PS) network.

Keep a copy: leave the copies of your messages in the **Sentbox** folder after sending.

Character support: select a character encoding type. If you select **Automatic**, the phone switches the encoding type from GSM-alphabet to Unicode if you enter a unicode character. Use of unicode encoding will reduce the maximum of number in a message to about half. If this menu is not shown, your phone provides the Automatic encoding by default.

Email (Menu 5. ✱.3)

You can configure default e-mail settings.

- **Sending options:** set up the following options for sending an e-mail:

From: set the sender name.

Sending account: select the default account.

Priority: change the priority level of your e-mails.

Keep a copy: leave the copies of your e-mails in the **Sentbox** folder after sending.

Include body when replying: set whether or not the phone includes the original e-mail text in a reply.

Delivery report: set the network to inform you when your e-mail has been delivered.

Add my contact details: allow your contact information to be attached to e-mails.

Add signature: attach your signature to e-mails.

Input signature: edit your signature.

- **Receiving options:** set up the following options for receiving an e-mail:

Set download limit: determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

Block address: specify e-mail addresses to reject e-mails from those addresses.

Block subject: specify subjects to reject e-mails which contain those subjects.

- **Email profiles:** select a network connection profile to be used for sending and receiving e-mails. You can also make or edit a profile.
 - ▶ p. 70



You cannot change e-mail profile settings while an e-mail is being sent or retrieved.

- **Email accounts:** select an account to be used and set up e-mail accounts. Press **<Options>** and select **Edit** to access the following options:

Account name: enter a name for the currently selected account.

SMTP server: enter the IP address or domain name of the outgoing e-mail server.

SMTP port: enter the SMTP port number.

Use SSL: activate the use of the SSL (Secured Sockets Layer) protocol.

Retrieving server type: select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

POP3 server/IMAP4 server: set the POP3 or IMAP4 server address.

POP3 port/IMAP4 port: set the POP3 or IMAP4 port number.

Use SSL: activate the use of the SSL (Secured Sockets Layer) protocol.

IMAP4 retrieving option: (only for IMAP protocol): set whether the phone retrieves only new messages or all messages.

Retrieving option: set which part of e-mails the phone retrieves from the server.

Keep in server: set to leave the copies of retrieved e-mails on the server.

My address: set your e-mail address.

User name: set the user name for SMTP/POP3/IMAP4 server connection.

Password: set the password for SMTP/POP3/IMAP4 server connection.

Voice mail (Menu 5. *.4)

You can change the name or number of the voicemail centre.

Push message (Menu 5. *.5)

You can configure default web message settings.

- **Whitelist update:** reload the White list.
- **Whitelist:** create a White list.
- **Blacklist:** create a Black list.
- **Service loading:** set the phone to receive web messages from the server.

Broadcast (Menu 5. *.6)

You can configure default broadcast message settings.


- **Receiving options:** enable or disable the reception of broadcast messages.
- **Channel list:** specify the channels from which you receive broadcast messages.
- **Language select:** select the language in which broadcast messages are displayed.


Memory status (Menu 5. #)

Use this menu to view the memory status for SMS, MMS, e-mail, and push message.

My files (Menu 6)

The **My files** menu allows you to access images, videos, ringtones, sounds, and other files stored in the phone's memory and the supplied memory card.

To access this menu, press  in Idle mode and select **My files**.

-  As a result of the DRM (Digital Rights Management) system, some of the media items you download from the Internet or receive by MMS may require a license key to access them or forward them to other people. You can acquire the key from the web site which owns the rights to the content; use the **Activate key** option in the item options.

Pictures


This menu displays photos you have taken and images downloaded or received in messages. You can also edit a photo using various editing options.

Viewing an image

1. Press [Left] or [Right] to scroll to an image folder.
2. Select an image.
3. Scroll through other images by pressing [Left] or [Right].

Editing an image

1. Select the image you want.
2. Press <Options> and select **Edit**.

3. Change the properties of the photo using the following editing options:
 - **Resize:** change the image size.
 - **Effect:** change the colour tone or apply a special effect to the photo.
 - **Adjust:** adjust the image brightness, contrast, or colour balance.
 - **Frames:** apply a decorative frame.
 - **Cliparts:** add an image clip to the photo.
 - **Insert text:** add text to the photo.
 - **Rotate:** rotate the photo clockwise or counterclockwise.
 - **Flip:** flip the photo vertically or horizontally.
 - **Crop:** select a variously sized and shaped section of the photo.
4. When you have finished, press .
5. Enter a photo name and press **Save**.

Using image options

While viewing the image list or an image, press **<Options>** to access the following options:

- **View:** open the selected image.
- **Send:** send the image via MMS, Bluetooth, or infrared port.
- **Hidden from bluetooth:** hide the image so that other Bluetooth devices cannot access it.
- **Visible to bluetooth:** share the image with other Bluetooth devices.

- **Set as:** set the image as your wallpaper for the main display or external display, or a caller ID image for a Phonebook entry.
- **Move:** move the image to another folder.
- **Copy:** copy the image to another folder.
- **Real size:** show the image in the real size.
- **Slide show:** set all images to display as a slide show.
- **Edit:** change the image properties.
- **Delete:** delete the image.
- **Rename:** change the name of the image.
- **Details:** access information about the image.
- **Lock:** lock the image to keep it from being deleted.
- **Create folder:** add a new folder.
- **Memory status:** access the memory information for each folder in **My items**.

Downloading images

1. Press [Left] or [Right] to scroll to **Downloads**.
2. Select **More pictures**. You are connected to a preset website.
3. Search for an image and follow the onscreen instructions to download it.


Videos

This menu displays video clips you have recorded, downloaded, or received in messages.

Playing a video clip

1. Press [Left] or [Right] to scroll to a video folder.
2. Select a video clip.

During playback, use the following keys:

Keys	Description
	Pauses or resumes playback.
Up	Opens the play list.
Left	Moves backward in a file when held down.
Right	Skips forward in a file when held down.
▲/▼	Adjusts the volume.
Down	Stops playback.

Using video options

While viewing the video clip list or a video clip, press <Options> to access the following options:

- **Play/Pause/Resume:** play the selected video clip, or pause or resume playback.
- **Stop:** stop playback.
- **Add to play list:** add the video clip to the play list.
- **Send:** send the video clip via MMS, Bluetooth, or infrared port.
- **Open play list:** open the play list.
- **Hidden from bluetooth:** hide the video clip so that other Bluetooth devices cannot access it.
- **Visible to bluetooth:** share the video clip with other Bluetooth devices.
- **Move:** move the video clip to another folder.
- **Copy:** copy the video clip to another folder.
- **Delete:** delete the selected video clip or all video clips.
- **Rename:** change the name of the video clip.
- **Lock:** lock the video clip to keep it from being deleted.
- **Details:** access information about the image.
- **Create folder:** add a new folder.
- **Memory status:** access the memory information for each folder in **My items**.
- **Show controller/Hide controller:** show or hide the control bar of Media player.
- **Player settings:** change the default settings for playing files.
- **Play options:** select a repeat mode.
- **Volume:** select a volume level.
- **Controller:** show or hide the control bar of Media player.
- **Audio player skin:** select a skin image.
- **VOD settings:** activate a connection profile to be used for accessing a streaming server. You can also make or edit a profile. ► p. 70

Downloading video clips


1. Press [Left] or [Right] to scroll to **Downloads**.
2. Select **More videos**.
3. Search for a video clip and follow the onscreen instructions to download it.

Sounds and Ringtones

This menu displays sound clips you have downloaded or received in messages.

Playing a sound file

1. Select a sound clip.
For MP3 files, refer to “Media player”. ► p. 32
2. During playback, use the following keys:

Keys	Description
	Sends the selected file via MMS, Bluetooth, or infrared port.
Left	Goes back to the previous file.
Right	Skips to the next file.
Up/Down	Adjusts the volume.

Using sound clip options

While viewing the sound list or playing a sound clip, press <**Options**> to access the following options:

- **Play**: play the sound clip.
- **Add to play list**: add the sound clip to the play list.

- **Send**: send the sound clip via MMS, Bluetooth, or infrared port.
- **Hidden from bluetooth**: hide the sound clip so that other Bluetooth devices cannot access it.
- **Visible to bluetooth**: share the sound clip with other Bluetooth devices.
- **Move**: move the sound clip to another folder.
- **Copy**: copy the sound clip to another folder.
- **Delete**: delete all sound clips.
- **Rename**: change the name of the sound clip.
- **Lock**: lock the sound clip to keep it from being deleted.
- **Set as ringtone**: set the sound clip as your ringer for voice calls or video calls.
- **Set as caller ID**: set the sound clip as a caller ID ringer for a Phonebook entry.
- **Details**: access information about the sound clip.
- **Create folder**: add a new folder.
- **Memory status**: access the memory information for each folder in **My items**.

Downloading sound clips

1. Select **More music**.
2. Search for a sound files and follow the onscreen instructions to download it.




Music

This menu displays music files you have downloaded, or received in messages.

Playing a music files

Select a voice memo. The voice memo plays.

On the player screen, you can use the following keys:

Keys	Description
	Pauses or resumes playback.
Left	Moves backward in the voice memo.
Right	Moves forward in the voice memo.
▲/▼	Adjusts the volume.
Up	Switches to Record mode () or back to Play mode ()
Down	Stops playback.

Using music file options

While viewing the voice memo list, or playing a voice memo, press <**Options**> to access the following options:

- **Play/Resume:** play the selected voice memo or resume playback.
- **Stop:** stop playback.
- **Record:** record a new voice memo.
- **Send:** send the voice memo via MMS, Bluetooth, or infrared port.

- **Hidden from bluetooth:** hide the voice memo so that other Bluetooth devices cannot access it.
- **Visible to bluetooth:** share the voice memo with other Bluetooth devices.
- **Move:** move the voice memo to another folder.
- **Copy:** copy the voice memo to another folder.
- **Delete:** delete the voice memo.
- **Rename:** change the name of the voice memo.
- **Lock:** lock the voice memo to keep it from being deleted.
- **Create folder:** add a new folder.
- **Memory status:** access the memory information for each folder in **My items**.
- **Details:** access information about the voice memo.

Games

Use this menu to download Java games and play them.

Applications

Use this menu to download applications.

Themes

This menu displays the wallpaper images you have downloaded, or received in messages.

Changing a wallpaper image

1. Scroll to an image.
2. Press <Options> and choose **Select**.

Using wallpaper image options

While viewing the image list, press <Options> to access the following options:

- **Select**: set the image as your wallpaper.
- **Send**: send the image via MMS, Bluetooth, or infrared port.
- **Delete**: delete all images.
- **Delete folder**: delete the selected image folder.
- **Rename folder**: change the name of the image folder.
- **Create folder**: add a new folder.
- **Memory status**: display the memory information for each folder in **My items**.

Downloading wallpaper images

1. Select **More themes**.
2. Search for a wallpaper image and follow the onscreen instructions to download it.

Other documents

Files that you have received but which are not supported by your phone are stored in this folder. You cannot open these files on the phone. Unsupported file formats include *.doc, *.ppt, *.txt, and so on.


Memory card

Use this menu to access the media files stored on the memory card. This option is only available when the memory card is inserted into the phone.

For details about using files, see the corresponding menu.

Organiser & Tools *(Menu 7)*

The Organiser feature enables you to create and manage your schedule, anniversaries, tasks, and memos.

To access this menu, press  in Idle mode and select **Organiser**.

Vodafone *(Menu 7.1)*

If you use a USIM/SIM card that provides additional services, the Vodafone menu displays.

For further details, see your USIM/SIM card instructions.

Applications *(Menu 7.2)*

Use this menu to store applications downloaded.

Alarm *(Menu 7.3)*

Use this menu to set alarms to ring at specific times. The alert type for a normal alarm corresponds to the call alert type settings in the currently selected profile. A wake-up alarm does not be affected by your profile setting.

Setting an alarm

1. Select the type of alarm.
2. Scroll to **On** on the **Alarm** line and press [Down].
3. Enter the time for the alarm to sound and press [Down].

☒ Your phone is preset to a 24-hour format. You can change the time format. ► p. 63

4. Set the repeat option.
5. Select the **Alert tone** line.
6. Select an alarm melody.
7. Press <Options> and select **Save**.

Stopping an alarm

When the alarm sounds, choose either of the following options to stop the alarm:

- Press <OK> to confirm the alarm.
- Press <Snooze> to stop the wake-up alarm for 5 minutes. You can do this a maximum of 5 times.

Deactivating an alarm

1. Select the alarm you want to deactivate.
2. Select **Off** on the **Alarm** line.

Press <Options> and select **Save**.

Calendar (Menu 7.4)

Use this menu to keep track of your monthly schedule.

Consulting the calendar

When you open the calendar, today's date is marked with a red box. Scroll to the date you want. You can move to the next or previous month by pressing [▲/▼]

Press <Options> to access the following options:

- **View:** display the stored events for that date.
- **Add new:** add a new event, anniversary, task, or memo. You can schedule up to 100 schedule items, 50 anniversaries, 20 tasks, and 20 memos on the calendar, and schedule more than one event per day.
- **Week view:** display the week view screen.
- **Go to today:** display the current date.
- **Go to day:** display a specific date.
- **Starting day:** set whether the calendar starts with Sunday or Monday.
- **Delete:** delete the events for the specified period.
- **Delete all:** delete all events in the calendar.

Entering a new schedule item

1. Select a date on the calendar.
2. Press <Options> and select **Add new** → **Schedule**.
3. Press [Down] and enter information or change the settings in the following entry fields:
 - **Title:** enter the title of the event.
 - **Details:** enter the event details.

- **Start** and **End**: enter the starting and ending times for the event.
 - **Start date** and **End date**: enter the starting and ending dates for the event.
 - **Location**: enter information about the event location.
 - **Alarm**: select to set an alarm for the event and set the time for the alarm.
 - **Repeat**: select to set the event to recur. You can select a repeat unit and set the date to end repeating.
 - **Expiry**: set when the event will be deleted from the calendar.
4. Press **<Options>** and select **Save**.


Entering a new anniversary

1. Select a date on the calendar.
2. Press **<Options>** and select **Add new → Anniversary**.
3. Press [Down] and enter information or change the settings in the following entry fields:
 - **Occasion**: enter information about the anniversary.
 - **Date**: enter the date.
 - **Alarm**: select to set an alarm for the anniversary. You can set the number of days before the event date and the time for the alarm to sound.
 - **Repeat every year**: select to set the phone to remind you of the anniversary every year.
4. Press **<Options>** and select **Save**.

Entering a task

1. Select a date on the calendar.
2. Press **<Options>** and select **Add new → Task**.
3. Press [Down] and enter information or change the settings in the following entry fields:
 - **Title**: enter the title for the task.
 - **Task**: enter the task content.
 - **Start date**: enter the starting date.
 - **Due date**: enter the ending date.
 - **Priority**: select a priority level.
4. Press **<Options>** and select **Save**.





Entering a memo

1. Press **<Options>** and select **Add new → Memo**.
2. Enter the memo text and press [Down].
3. Enter the date and press .
4. Press **<Options>** and select **Save**.

Viewing an event

Square brackets on a calendar date indicate the type of events scheduled for that day:

- Green: schedule
- Red: anniversary
- Blue: task
- Orange: memo

1. Select a date on the calendar to display the events for that day. The list of events displays. The following icons indicate the type of event:
 -  Scheduled events
 -  Anniversaries
 -  Tasks
 -  Memos

2. Select an event to view its details.

Using event options

From the event list, press <**Options**> to access the following options:

- **View**: access the selected event.
- **Add new**: add a new event.
- **Completed**: change the status of the selected task.
- **Month view**: switch to the month view screen.
- **Week view**: switch to the week view screen.
- **Change date/Change due date/Reschedule**: change the date of the event.
- **Delete**: delete the selected event.
- **Delete all**: delete all events for the selected day.
- **Send schedule/Send task**: send the event via Bluetooth or infrared port.

Missed event alarm

When you are unable to acknowledge an alarm for a scheduled event or anniversary, the phone displays a missed alarm notification.

- Press <**View**> to view the corresponding event.
- Press <**Exit**>.

Viewing a missed event alarm

1. From the **Organiser** menu, select **Missed event alarm**.
2. Select an event.
3. Press <**Confirm**> to confirm and delete the event.

Using missed alarm options



From the event list, press <**Options**> to access the following options:

- **View**: display the missed event.
- **Delete**: delete the missed event.
- **Delete all**: delete all missed events.

Voice memo (Menu 7.5)

Use this menu to record voice memos.




Recording a voice memo

1. Press  to start recording.
2. Speak into the microphone.
Press  to pause or resume the recording.
3. When you finish, press <**Stop**>. The voice memo is automatically saved.

Playing a voice memo

1. From the voice recorder screen, press <**Options**> and select **My sounds**.
2. Select a voice memo. The memo plays.

On the player screen, you can use the following keys:

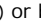keys	Function
	starts playback.
Up	Switches to Play mode () or back to Record mode ( .
Left	Moves backward.

keys	Function
Right	Skips forward.
▲/▼	Adjusts the volume.
Down	Stops playback.

Using voice memo options

From the player screen, press <**Options**> to access the following options:

- **Play**: play the voice memo.
- **Resume**: resume playback.
- **Stop**: stop playback.
- **Record**: record a new voice memo.
- **Send**: send the voice memo via MMS, e-mail, file sender, Bluetooth, or infrared port.
- **My sounds**: display the list of voice memos you have recorded.
- **Rename**: change the name of the voice memo.
- **Delete**: delete the voice memo.
- **Hidden from bluetooth**: hide the voice memo so that other Bluetooth devices cannot access it.
- **Visible to bluetooth**: share the selected file with other Bluetooth devices.
- **Details**: access information about the selected voice memo.
- **Record settings**: change the default settings for recording a voice memo.

Default name: change the default prefix of the voice memo.

Recording time: select a maximum recording time.

World clock *(Menu 7.6)*

Use this menu to set your local time zone and find out what time it is in another part of the world.

Setting your local time zone

1. From the world map, press [Left] or [Right] to select the city that corresponds to your home time zone. As the time line moves, the time and date of the given zone display.
2. Press ☐ to save the time zone.

Viewing and setting a foreign time zone

1. From the world map, press [Down].
2. Press [Left] or [Right] to select the foreign time zone you want to view.
3. Press ☐ to save the time zone.

Applying Daylight Savings Time

1. From the world map, press <**Options**> and select **Summer time**.
2. Press ☐ to check the time zone(s) you want.
3. Press <**Select**>.
4. Press <**Options**> and select **Save**.

PIM sync (Menu 7.7)

Use this menu to synchronise personal data with corresponding PC applications by using the WideSync program supplied with your phone.

Creating a synchronisation profile

1. Press <**Add**>.
2. Specify the following information for the profile:
 - **Profile name**: enter the profile name.
 - **Sync category**: select the applications you want to synchronise.
 - **Sync type**: select a synchronisation type.
 - **Sync protocol**: select a connection method.
3. Press <**Save**> to save the profile.
4. To create more profiles, press <**Options**> and select **New sync profile**.
5. Repeat step 4 as desired.

Starting synchronisation

1. Make sure that your PC has MS Outlook and the WideSync program installed, and the phone and the PC are connected by a USB cable or an active Bluetooth connection.
2. Open MS Outlook.
3. From the PIM sync screen, select a profile.
4. Press [**OK**].

Using synchronisation options


From the PIM sync screen, press <**Options**> to access the following options:

- **Start sync**: start a synchronisation for the selected profile.
- **View result**: show the result of the last synchronisation.
- **New sync profile**: add a new profile.
- **Edit sync profile**: change the properties of the profile.
- **Delete**: delete the selected profile or all profiles.

Calculator (Menu 7.8)

Use this menu to perform basic arithmetic functions such as addition, subtraction, multiplication, and division.

Performing a calculation

1. Enter the first number.
Press [=] to include a decimal point.
2. Enter the operation for your calculation by pressing the Navigation keys.
3. Enter the second number.
4. Press  to view the result.

Using calculator options

Press <**Options**> to access the following options:

- **Equal**: view the result.
- **Last result**: display the last result you calculated.
- **Save to memory**: save a value into the calculator memory.
- **Clear memory**: clear the saved values.

Converter (Menu 7.9)

Use this menu for common conversions, such as currency and temperature.

Performing a conversion

1. Select the converter type you want.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted.
 - Press [#] to insert a decimal point.
 - Press [*] to change the temperature to above zero (+) or below zero (-).
4. Press [Down].
5. Press [Left] or [Right] to select the unit you want to convert to.

The equivalent value for the amount you entered displays.

Using converter options

Press <Options> to access the following options:

- **Clear:** clear the current values.
- **Reverse:** reverse the conversion.
- **Currency rates:** display the currency rate list.

Memory status (Menu 7.0)

This menu displays the number of events of each type you have created, and the total number of events you can store.

Contacts (Menu 8)


You can store phone numbers on your USIM/SIM card and in your phone's memory. The USIM/SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook. In the **Contacts** menu, you can manage your Phonebook entries.

To access this menu, press <Menu> in Idle mode and select **Contacts**.

Contacts (Menu 8.1)

Use this menu to search for numbers in Phonebook.

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name you want from the list.
3. Press [↵] to dial the number, or  to edit the contact information.

Using contact options

While viewing the contact list, press <Options> to access the following options:

- **View:** access the contact information.
- **Edit:** edit the contact information.
- **Call:** make a voice call.
- **V-call:** make a video call.
- **Add new contact:** add a new contact.

- **Add to speed dial:** set the number as a speed dial number.
- **Delete:** delete the contact.
- **Search groups:** access the caller group list.
- **Delete all:** delete all contacts.

While viewing details of a contact, press **<Options>** to access the following options:


- **Edit:** edit the contact information.
- **Call:** make a voice call.
- **V-Call:** make a video call.
- **Send message:** send an SMS or MMS message.
- **Special options:** set the following options:
Picture: assign a caller ID image to alert you to a call from the number.
Ring tone: assign a ringer melody to alert you to a call from the number.
Msg. alert tone: select a melody or tone to alert you an incoming message from the number.
- **Add to speed dial:** set the selected number as a speed dial number.
- **Copy to SIM/Copy to phone:** copy the number to the phone's memory or USIM/SIM card or vice versa.
- **Send contact details:** send the contact via Bluetooth or infrared port.
- **Set as default:** set the number as your default number for the contact.
- **Duplicate:** duplicate the number.

- **Paste:** copy the number to the normal dialling screen.
- **Delete:** delete the contact.

Storing a number in the phone's memory

1. Select **Phone**.
2. Press [Down] and change the settings or enter information about the contact.
 - **First name/Last name:** assign a name.
 - **Phone number:** add a mobile phone number.
 - **Email work:** assign a business e-mail address.
 - **Email home:** assign a personal e-mail address.
 - **Group:** assign a caller group.
 - **Homepage:** enter a homepage address.
 - **Birthday:** enter the person's birthday.
 - **More information:** enter the job title, department, company, nickname, and additional note of the person.
3. Press **<Options>** and access the following options to add additional information.
 - **Special options:** assign a caller ID image, call ringer, or message ringer for the contact.
 - **Add item:** add a number category to the contact.
 - **Change type:** change the number type.
 - **Mark video call:** set the selected number as a video call number.
4. Press **<Options>** and select **Save**.


Storing a number on the USIM/SIM card

1. Select **SIM**.
2. Press [Down] and change the settings or enter information about the contact.
 - **Name**: assign name.
 - **Phone number**: enter a phone number.
 - **Group**: assign a caller group.
 - **Location**: assign a location number.
3. Press  to save the contact.

Groups *(Menu 8.2)*

Use this menu to organise your contacts in caller groups.

Adding members to a caller group

1. Select a group.
2. Press  to check the contacts you want.
3. Press <**Save**>.

Managing caller groups

From the group list, press <**Options**> to access the following options:

- **View members**: display the members of the selected group.
- **Add member**: add contacts to the selected group.
- **Add group**: add a new group.
- **Rename group**: change the group name.
- **Delete group**: delete the selected group.

- **Delete all groups**: delete all groups including default groups.

Speed dial *(Menu 8.5)*

Use this menu to assign speed dial numbers (2 to 9) to eight of your most frequently called numbers.

Assigning speed dial entries

1. Select a key location from **2** to **9**. Key **1** is reserved for your voice mail server.
2. Select the contact you want from the contact list.
3. Scroll to a number, if it has more than one number.
4. Press <**Select**>.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Assign**: assign a number to an unassigned key.
- **View**: display details about the speed dial entry.
- **Call**: make a voice call.
- **V-call**: make a video call.
- **Change**: assign a different number to an assigned key.
- **Remove**: clear the speed dial setting.

Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

Saving your name card

The procedure for creating your name card is the same as the one for saving a number in the phone's memory. ► p. 59

Using name card options

After saving your name card, press **<Options>** to access the following options:

- **Edit:** edit the name card.
- **Send contact details:** send the name card via Bluetooth or infrared port.
- **Delete:** delete the name card.

Copy all (Menu 8.7)

Use this menu to copy all of the contacts stored on the USIM/SIM card to the phone's memory, or vice versa.

Settings (Menu 8.8)

Use this menu to change the default settings for Phonebook entries.


- **Viewing settings:** select whether the contact list is sorted by last name or by first name.
- **Default storage settings:** select a default memory location to save contacts. If you select **Optionally**, the phone will ask you to select a memory location when saving a number.

Memory status (Menu 8.9)

Use this menu to view the number of contacts you have stored and total number of contacts you can store in Phonebook.

Settings (Menu 9)

Use this menu to customise your phone settings. You can also reset the settings to their default values.

To access this menu, press  in Idle mode and select **Settings**.



Phone settings (Menu 9.1)

Many different features of your phone's system can be customised to suit your preferences.

Phone profiles (Menu 9.1.1)

Use this menu to adjust and customise the phone tone for different events or situations.

Editing a profile

1. Scroll to the profile you want.
2. Press **<Options>** and select **Edit**.
3. Change the sound settings:
 - **Call alert type:** press  and select an alert type for the call ringer.
 - **Voice call ringtone:** press  and select a ring tone for the call ringer of voice calls.

- **Video call ringtone:** press ☐ and select a ring tone for the call ringer of video calls.
- **Tone volume:** adjust the volume for the call ringer.
- **Msg. alert type:** press ☐ and select an alert type for the message ringer.
- **Msg. alert tone:** press ☐ and select a ring tone for the message ringer.
- **Msg. alert repetition:** select if the phone repeats reminding you of a new message.
- **Phone sounds:** press ☐ and turn the various sounds on the phone on or off.

All on: enable all tones.

Popup box alerts: cause the phone to beep when a pop-up window displays.

Minute minder: cause the phone to beep every minute during an outgoing call to keep you informed of the length of your call.

Call connect tone: cause the phone to beep when a call is connected to the system.

Call end tone: cause the phone to beep when a call is disconnected by the other person or the faded signal.

Power on: cause the phone to beep when you turn on the phone.

Folder open/close: cause the phone to sound when you open or close the phone.

Alerts on call: cause the phone to beep when you receive a new message or when the time for an alarm comes during a call.

- **Key tones:** press ☐ and select a tone which sounds when you press a key.
- **Key tone volume:** adjust the volume of the key tones.
- **Call answer mode** (for Car): Press ☐ and select how to answer an incoming call when the phone is connected to a hands-free car kit.

4. When you have finished, press **<Options>** and select **Save**.

Changing an active profile

Select the profile you want.

Assign ringtone (Menu 9.1.2)

Use this menu to select a volume and alert type for incoming calls.

- **Call alert type:** specify how you are to be informed of incoming calls.
Melody: the phone rings using the selected ring tone.
Vibration: the phone vibrates but not rings.
Vibration then melody: the phone vibrates three times and then starts ringing.
- **Voice call ringtone:** select a ring tone for the voice call ringer.
- **V-call ringtone:** select a ring tone for the video call ringer.
- **Tone volume:** select a ringer volume.

Phone language (Menu 9.1.3)

Use this menu to select one of several languages for the display text or T9 input mode.

Shortcuts (Menu 9.1.4)

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode. Use this menu to change these shortcut assignments.

Assigning a shortcut to a key

1. Select the key to be used as a shortcut key.
2. Select the menu that will be assigned to the key.
3. Press <**Save**>.

Using the shortcut options

From the Shortcuts screen, press <**Options**> to access the following options:

- **Assign:** assign a shortcut menu to an empty location.
- **Change:** change a shortcut menu.
- **Remove:** deactivate the shortcut assignment to the selected key.
- **Remove all:** deactivate all shortcut assignments.

Time & date (Menu 9.1.5)

Use this menu to change the time and date displayed on your phone. Before setting the time and date, specify your time zone in the **World clock** menu. ► p. 61

- **Time:** enter the current time.
- **Date:** enter the current date.

- **Time format:** select a 12-hour or 24-hour time format.
- **Date format:** select a date format.
- **Summer time:** activate daylight savings time.
- **Auto update:** select to receive time information from your network.

Side key (Menu 9.1.6)

Use this menu to set how the phone reacts when you press [**▲/▼**] when a call comes in.

- **Reject:** the keys rejects the call.
- **Silence:** the keys mutes the call ringer.

Anykey answer (Menu 9.1.7)

Use this menu to answer an incoming call by pressing any key, except [**📞**] or <**Reject**>.

Active folder (Menu 9.1.8)

Use this menu to answer incoming calls by opening the phone.

Display settings (Menu 9.2)

Use this menu to change settings for the display.

Greeting message (Menu 9.2.1)


Use this menu to enter the greeting that is displayed on the main display or external display.

Wallpaper (Menu 9.2.2)

You can change the background image that is displayed on the main display in Idle mode.

External display (Menu 9.2.3)

Use this menu to change the settings for the external display.

1. Select a display item type.
 - **Clock:** you can select a clock type.
 - **Sub title:** you can set a banner message.
 - **Wallpaper:** you can change the wallpaper image.
2. Select the image you want or enter the banner message.
For **Wallpaper**, you can select a section of an image.
3. Press **<Save>** or .
4. Press **<Change>**.

LCD brightness (Menu 9.2.4)

Use this menu to adjust the brightness of the main display.

Backlight time (Menu 9.2.5)

You can select the length of time the backlight and the display stay on.

On: select the length of time the backlight is on in times of inactivity.

Dim: select the length of time the display is in Dimming mode after the backlight turns off. After a specified time, the display turns off.

Dialing display (Menu 9.2.6)

Use this menu to customise the settings for the screen when entering a phone number for dialling.

- **Font size:** select a font size.
- **Font colour:** select a font colour.
- **Background colour:** select a background colour.

Messaging settings (Menu 9.3)

Use this menu to change the default settings for using the message feature. ▶ p. 44

Call settings (Menu 9.4)

Use this menu to set options for call functions.

All calls (Menu 9.4.1)

Use this menu to change the default settings for using the call feature.

- **Show my number:** prevent your phone number from being displayed on the phone of the person being called.

☒ some networks do not allow the user to change this setting.

By network: use the default setting provided by the network.

Send: send your number each time you make a call.

Hide: ensure your number does not display on the other person's phone.

- **Closed user group:** set incoming and outgoing calls to be restricted to a selected user group. For details about how to create a closed user group, contact Vodafone.

Use user group: activate CUG index numbers.

Outside access: enable calls to numbers other than those in the Closed user group. This feature depends on the nature of your CUG subscription.

Default group: enable the default CUG, if you have set one with Vodafone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

Group index: add, delete, or activate CUG index numbers.

- **Auto redial:** make up to ten attempts to redial a phone number after an unsuccessful call.

Voice call (Menu 9.4.2)

Use this menu to change the default settings for using the voice call feature.

Setting a call diverting option

This network service reroutes incoming calls to a different phone number that you specify.

1. From the **Voice call** menu, select **Diverts**.
2. Select the type of calls to be diverted.
3. Select a call diverting option:
 - **Always:** divert all calls.
 - **Busy:** divert calls when you are on another call.

- **No reply:** divert calls when you do not answer the phone.
- **Unreachable:** divert calls when you are not in an area covered by Vodafone or when your phone is switched off.
- **Cancel all:** cancel all call diverting options.

4. Enter the number to which the calls will be diverted in the **Divert to** line.
5. If you selected **No reply**, move to the **Waiting time** line and select the length of time the network delays before diverting a call.
6. Press **<Options>** and select **Activate**. To deactivate the call diverting, select **Deactivate**.

Setting a call restriction option

This network service allows you to restrict your calls.

1. From the **Voice call** menu, select **Restrict calls**.
2. Select the type of calls to be barred.
3. Select a call restriction option:
 - **All outgoing calls:** prohibit all outgoing calls.
 - **Outgoing int'l calls:** prohibit international calls.
 - **Int'l calls exc. home:** only allow calls to numbers within the current country.
 - **All incoming calls:** prohibit incoming calls.

- **Incoming calls when roaming:** prohibit incoming calls when you use your phone outside of your home country.
 - **Cancel all:** cancel all call barring settings, allowing calls to be sent and received normally.
4. Enter the call barring password.
 5. Press <**Options**> and select **Activate**. To deactivate the call barring, select **Deactivate**.

☒ You can change the call barring password obtained from Vodafone. From the call type list, press <**Options**> and select **Change password**.

Setting a waiting call option

This network service informs you when someone is trying to reach you while you are on another call.

1. From the **Voice call** menu, select **Diverts**.
2. Select the type of calls to which the call waiting option will apply.
3. Press <**Options**> and select **Activate**. To deactivate the call waiting, select **Deactivate**.

Video call (Menu 9.4.3)

Use this menu to change the default settings for using the video call feature.

- **Show my image:** change the video camera settings for receipt of video calls.
Optionally: you can select whether or not the video camera is used each time you answer a video call.
Always: the camera is always used.

- **Select still image:** select an image to be displayed on the other person's phone.
- **Retry with:** set how to retry when the phone fails to make a video call, by MMS or voice call.
- **Diverts:** reroute incoming calls to a different phone number that you specify. ▶ p. 65
- **Restrict calls:** restrict your calls. ▶ p. 65

Data call (Menu 9.4.31)

- **Diverts:** reroute incoming calls to a different phone number that you specify. ▶ p. 65
- **Restrict calls:** restrict your calls. ▶ p. 65
- **Waiting:** set to inform you when someone is trying to reach you while you are on another call. ▶ p. 66

Contacts settings (Menu 9.5)

Use this menu to configure contact settings.

Speed dial (Menu 9.5.1)

Use this menu to assign speed dial numbers (2 to 9) to eight of your most frequently called numbers.

Assigning speed dial entries

1. Select a key location from **2** to **9**. Key **1** is reserved for your voice mail server.
2. Select the contact you want from the contact list.
3. Scroll to a number, if it has more than one number.
4. Press <**Select**>.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Assign:** assign a number to an unassigned key.
- **View:** display details about the speed dial entry.
- **Call:** make a voice call.
- **V-call:** make a video call.
- **Change:** assign a different number to an assigned key.
- **Remove:** clear the speed dial setting.

Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

Sort contacts by (Menu 9.5.2)

Use this menu to change the contact order by first name or by last name.

Save new contacts to (Menu 9.5.3)

Use this menu to set the default memory location when saving a new contact.

View contacts from (Menu 9.5.4)

Use this menu to set the default memory to be displayed when accessing Phonebook.

Own number (Menu 9.5.5)

Use this feature to check your phone numbers, or to assign a name to each of the numbers.

Changes made here do not affect the actual subscriber numbers on your USIM/SIM card.

Calendar settings (Menu 9.6)

Use this menu to configure calendar settings.

Starting day (Menu 9.6.1)

Use this menu to set which day of the week the calendar starts with.

Default view mode (Menu 9.6.2)

Use this menu to select the default view mode when entering the **Calendar** menu.

Connectivity (Menu 9.7)

Use this menu to set options for connection available on your phone.

Bluetooth (Menu 9.7.1)

Using Bluetooth wireless, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 metres. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.



- You cannot use the Bluetooth feature while using multimedia features such as voice recorder, camera, and Media player, or vice versa.
- Some devices may not be compatible with your phone.

Setting up the Bluetooth feature






The **Bluetooth** menu provides the following options:

- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices. ► See the next section.
- **My phone's visibility:** allow other Bluetooth devices to connect to your phone.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth service:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the Bluetooth setting options, select **My devices**.
2. Select **Search new device**.

After searching, a list of devices to which you can connect displays. The following icons indicate the kind of device:

-  Hands-free or headset
-  Mobile phone
-  Computer
-  PDA
-  Unknown device

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
- Blue for paired devices
- Red for devices that are currently connected to your phone

3. Select a device.
4. Enter a Bluetooth PIN code of up to 16 digits and press **<OK>**. This code is used just once and you don't need to memorise it.

When the owner of the other device enter the same code, pairing is finished.



Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has one, you must enter the code.

Using device options

From the device list, press **<Options>** to access the following options:

- **Connect:** connect to the currently selected device. You need to enter the Bluetooth PIN.
- **Disconnect:** end the connection with the device.
- **Browse device:** search for data from the selected device and import data directly to your phone.
- **Authorise/Unauthorise device:** determine if the phone asks you to permit connection when other devices try to connect to your phone.

- **Delete:** delete the device or all devices.
- **Rename:** rename the selected device.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want and press **<Options>**.
4. Select **Send** → **Via bluetooth**.
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If an unauthorised Bluetooth device sends data to your phone, the phone displays a confirmation message.


To receive data, press **<Yes>**.

Infrared (Menu 9.7.2)

Use this feature to send and receive data through the infrared port. To use an infrared connection, you must do the following:

- Configure and activate an IrDA-compliant infrared port on the other device.

- Activate the infrared feature on your phone; select **Infrared** → **On**.
- Align the IrDA port on the phone with the IrDA port on the other device.

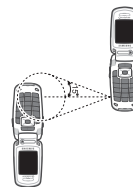

If there is no communication between your phone and the other IrDA-compliant device within 60 seconds of activating the feature, it is automatically deactivated.

Synchronize (Menu 9.7.3)

Use this menu to synchronise personal data with corresponding PC applications by using the WideSync program supplied with your phone.

- **Sync mode:** set the phone to start synchronisation automatically or manually.
- **Sync frequency:** select how often the phone will synchronise.
- **Sync direction:** select which device is synchronised.
- **Allow server alerted sync:** allow the server to synchronise with your phone when asked or deny the synchronisation request.

Network selection (Menu 9.7.4)

Use this menu to select to either automatically or manually select the network used when roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Network mode (Menu 9.7.5)

Use this menu to select the network you use.

- **Automatic:** the phone scans for available networks.
- **GSM 900/1800:** the phone operates in the combined GSM 900/1800 network.
- **GSM 1900:** the phone operates in the GSM 1900 network. This option is only available in USA.
- **UMTS:** the phone operates in UMTS (3G network) networks. You can get a higher speed quality than on lower generation networks, and use advanced data and information services, such as video calls.

Connections (Menu 9.7.6)

You can set up information about your network connection. In most cases, you don't need to change the settings. In case of problems, please contact Vodafone.

Creating or editing a connection profile

Press <Options> and select **New**, or select the connection profile you want to edit. The following options are available:

- **Set name:** edit the name of the network setting.
- **Access name:** edit the access point name used for the address of the GPRS network gateway.
- **Auth type:** choose the type of authentication used.

- **User ID:** edit the server login ID.
- **Password:** edit the server password.
- **Protocol:** select the protocol from among **WAP**, **HTTP**, and **Other**.
- **Home URL:** enter your homepage address.
- **Proxy address/Port:** (for the HTTP protocol) set the proxy server address and port.
- **Gateway address:** (for the WAP protocol) set the gateway address.
- **Secure connection:** (for the WAP protocol) turn the secure mode on or off.
- **Linger time (sec.):** set a time period after which the network is disconnected if there has been no new data traffic in that time.
- **Advanced settings:** provide you with the following options:

Static IP: specify if you want to manually enter an IP address; see the Local phone IP option. If you want the IP address to be automatically assigned by the server, remove the check mark.

Local phone IP: enter the IP address obtained from the network operator, if you checked the Static IP option.

Static DNS: specify if you want to manually enter the DNS (Domain Name Server) address; see the Server 1/2 option. If you want the address to be automatically assigned by the server, remove the check mark.

Server 1/Server 2: enter the Domain Name Server addresses.

Traffic class: select the traffic class, if you selected the PS network.

Managing connection profiles

On the list of connection profiles, scroll to a profile and press **<Options>** to access the following options:

- **Edit:** edit the selected connection profile.
- **New:** add a new connection profile.
- **Rename:** change the name of the selected connection profile.
- **Delete:** delete the selected connection profile.
- **Restore:** restore the changed settings to the default status.

☒ You cannot edit or delete the default connection profiles.

Browser profiles (Menu 9.7.7)

Use this menu to select a connection profile to be used for accessing the Internet. You can also make or edit a profile. ► p. 70

Streaming settings (Menu 9.7.8)

Use this menu to activate a connection profile to be used for accessing streaming servers to use VOD (Video on Demand) services. You can also make or edit a profile. ► p. 70

Security (Menu 9.8)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and USIM/SIM card.

- ☒ If you enter an incorrect PIN/PIN2 three times in succession, the USIM/SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

Phone lock (Menu 9.8.1)

The Phone Lock feature locks the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change phone password** menu.

SIM lock (Menu 9.8.2)

The SIM Lock feature allows your phone to work only with the current USIM/SIM by assigning a USIM/SIM lock code. You must enter the USIM/SIM lock code to use a different USIM/SIM card.

PIN lock (Menu 9.8.3)


The 4- to 8-digit PIN (Personal Identification Number) protects your USIM/SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change phone password (Menu 9.8.4)

Use this menu to change your phone password. The password is preset to **00000000**.

Privacy lock (Menu 9.8.5)

Use this menu to lock your messages media contents, contacts and call logs.

1. Press  to check the item(s) to lock.
2. Press **<Save>** to lock the marked items.
3. Enter the phone password and press **<Confirm>**.

To access a locked item, you need to enter the phone password.

Change PIN code (Menu 9.8.6)

Use this menu to change your PIN. The PIN Check feature must be enabled to use this feature.

Change PIN2 code (Menu 9.8.7)

If supported by your USIM/SIM card, the Change PIN2 feature changes your current PIN2.

Memory status (Menu 9.0)

Use this menu to check the amount of memory being used for storing data, such as SMS, MMS, Email, Push messages, My items, Game & More, Contacts, and Organiser items. You can also view the amount of shared memory or the memory card.

Reset settings (Menu 9.*)

Use this menu to reset the phone to its default settings.

1. Enter the phone password and press **<Confirm>**.



The password is preset to **00000000**. You can change this password ► p. 72

2. Press **<Yes>**. The phone automatically turns itself off and then back on.

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM card"

- Be sure that the USIM/SIM card is correctly installed.

"Phone lock"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the USIM/SIM card.
- The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN lock** menu.

"Enter PUK"

- The PIN code was entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by Vodafone.

"No service," "Network failure," or "Not done" displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with Vodafone. Contact Vodafone for further details.

You have entered a number but it was not dialled

- Be sure that you have pressed [**↵**].
- Be sure that you have accessed the right cellular network.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([**🔴**] pressed for more than one second.)
- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.

Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and “Low battery” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (📶). The number of bars indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Phonebook entry

- Use the Contacts Search feature to ensure the number has been stored correctly.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg*.

SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various

* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

FCC certification information for this model phone is attached separation paper.

For Body Operation

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.5 cm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components

in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

For more Information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)
<http://www.fcc.gov/rfsafety>

Cellular Telecommunications Industry Association (CTIA):
<http://www.wow-com.com>

U.S.Food and Drug Administration (FDA)
<http://www.fda.gov/cdrh/consumer>

World Health Organization (WHO)
<http://www.who.int/peh-emf/en>

Precautions When Using Batteries

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion

batteries are particularly affected by temperatures below 0 °yC (32 °yF).

- Do not short-circuit the battery. Accidental shortcircuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and . terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips.

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.
10. Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special nonemergency wireless number.

Operating Environment

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimize potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives. Other Medical Devices If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its

representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially Explosive Atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane),

areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.


Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows.

1. If the phone is not on, switch it on.

2. Key in the emergency number for your present location (for example, 112 or any other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not end the call until given permission to do so.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove, or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Acknowledging Special Precautions and the FCC and Industry Canada Notice

Cautions

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received.

Including interference that may cause undesired operation.

Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Appendix A: CERTIFICATION INFORMATION (SAR)

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S.

Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on safety standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate(SAR). The SAR limit set by the FCC is 1.6 W/kg. SAR Tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations(e.g., at the ear and worn on the body) as required by the FCC for each model.

The highest SAR values for this model phone as reported to the FCC are Head: 0.937 W/Kg, Body-worn: 0.452 W/Kg.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID A3LSGHZV30.

Appendix B: Guide to Safe and Responsible Wireless Phone Use

Cellular Telecommunications & Internet Association

"Safety is the most important call you will ever make."

A Guide to Safe and Responsible Wireless Phone Use

TENS OF MILLIONS OF PEOPLE IN THE U.S. TODAY TAKE ADVANTAGE OF THE UNIQUE COMBINATION OF CONVENIENCE, SAFETY AND VALUE DELIVERED BY THE WIRELESS TELEPHONE. QUITE SIMPLY, THE WIRELESS PHONE GIVES PEOPLE THE POWERFUL ABILITY TO COMMUNICATE BY VOICE-ALMOST ANYWHERE, ANYTIME-WITH THE BOSS, WITH A CLIENT, WITH THE KIDS, WITH EMERGENCY PERSONNEL OR EVEN WITH THE POLICE. EACH YEAR, AMERICANS MAKE BILLIONS OF CALLS FROM THEIR WIRELESS PHONES, AND THE NUMBERS ARE RAPIDLY GROWING.

But an important responsibility accompanies those benefits, one that every wireless phone user must uphold. When driving a car, driving is your first responsibility. A wireless phone can be an invaluable tool, but good judgment must be exercised at all times while driving a motor vehicle whether on the phone or not.

The basic lessons are ones we all learned as teenagers. Driving requires alertness, caution and courtesy. It requires a heavy dose of basic common

sense-keep your head up, keep your eyes on the road, check your mirrors frequently and watch out for other drivers. It requires obeying all traffic signs and signals and staying within the speed limit. It means using seat belts and requiring other passengers to do the same.

But with wireless phone use, driving safely means a little more. This brochure is a call to wireless phone users everywhere to make safety their first priority when behind the wheel of a car. Wireless telecommunications is keeping us in touch, simplifying our lives, protecting us in emergencies and providing opportunities to help others in need. When it comes to the use of wireless phones, safety is your most important call.

Wireless Phone "Safety Tips"

Below are safety tips to follow while driving and using a wireless phone which should be easy to remember:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.

2. When available, use a hands free device. A number of hands free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can grab it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to do" list while driving a car, you are not watching where you are going. It's common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip-dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix-they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.

8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations-with your phone at your side, help is only three numbers away. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you still can use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic

accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Careless, distracted individuals and people driving irresponsibly represent a hazard to everyone on the road. Since 1984, the Cellular Telecommunications Industry Association and the wireless industry have conducted educational outreach to inform wireless phone users of their responsibilities as safe drivers and good citizens. As we approach a new century, more and more of us will take advantage of the benefits of wireless telephones. And, as we take to the roads, we all have a responsibility to drive safely.

"The wireless industry reminds you to use your phone safely when driving."

Cellular Telecommunications & Internet Association
For more information, please call 1-888-901-SAFE.
For updates: <http://www.wow-com.com/consumer/issues/driving/articles.cfm?ID=85>

Appendix C: Consumer Update on Wireless Phones

U.S. Food and Drug Administration

1. What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called cell, mobile, or PCS phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

2. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low

level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

3. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration
- The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety

guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

4. What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

5. What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body

or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

6. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

7. Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

8. Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields”

may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

9. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This

standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

10. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones,

so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

11. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time

tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

12. Which other federal agencies have responsibilities related to potential RF health effects?

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations.

FCC RF Safety Program:

<http://www.fcc.gov/oet/rfsafety/>

Environmental Protection Agency (EPA):

<http://www.epa.gov/radiation/>

Occupational Safety and Health Administration's (OSHA):

<http://www.osha-slc.gov/SLTC/radiofrequencyradiation/index.html>

National Institute for Occupational Safety and Health (NIOSH):

<http://www.cdc.gov/niosh/emfpg.html>

World health Organization (WHO):

<http://www.who.int/peh-emf/>

International Commission on Non-Ionizing Radiation Protection:

<http://www.icnirp.de>

National Radiation Protection Board (UK):

<http://www.nrpb.org.uk>*

* Updated 4/3/2002: US Food and Drug Administration
<http://www.fda.gov/cellphones>

Index

A

- ABC mode, text input • 24
- Answering
 - call • 25, 28
 - second call • 26
- Anykey answer • 63
- Auto redial • 65

B

- Backlight time, set • 64
- Battery
 - charging • 7
 - low indicator • 8
 - precautions • 75

Bluetooth

- receiving, data • 69
- sending, data • 69
- settings • 68

Browser, WAP • 30

C

- Calculator • 57
- Caller group, managing • 60
- Calls
 - answering • 25, 28
 - holding • 26
 - redialling • 25
 - rejecting • 25

Camera

- photos • 34
- videos • 36

Characters, enter • 23

- Conference call • 28
- Configuration • 41
- Connection tone • 62
- Contacts

- copying • 61
- editing • 58, 59
- options • 58
- setting • 61
- speed-dialling • 60, 66

- Conversion • 58
- Creating messages
 - e-mail • 39
 - MMS • 38
- Creating organiser
 - anniversaries • 54
 - events • 53
 - memos • 54
 - tasks • 54

D

- Deleting
 - contacts • 59
 - e-mails • 42
 - events • 55
 - missed alarms • 55
 - MMS messages • 40
 - SMS messages • 40
 - video clips • 37
- Delivery reports, message • 45
- Display
 - language • 63
 - settings • 63
- DTMF tones, send • 27

E

- E-mails
 - creating/sending • 39
 - deleting • 42
 - settings • 45
 - viewing • 42
- Emergency calls • 78

F

- Forwarding
 - e-mails • 42
 - MMS messages • 40

G

- Games • 29
- Greeting message • 63

H

- Health and safety • 74
- Holding, call • 26

I

- Icons, description • 10
- Images, downloaded • 47
- Inbox, messages
 - configuration • 41
 - e-mail • 42
 - MMS • 39
 - SMS • 39
 - web • 41
- Infrared, connect • 69
- International calls • 25
- Internet • 30

K

- key tone volume • 62
- Keypad tones
 - sending • 27
 - setting • 62

L

- Language, select • 63
- Last number, redial • 25
- Locking
 - media contents • 72
 - phone • 72
 - SIM card • 71

Loudspeaker • 26
Low battery indicator • 8

M

Memory status
 contacts • 61
 messages • 47
 phone • 72
 scheduled events • 58
Message tone • 62
Messages
 configuration • 41
 greeting • 63
 MMS • 38
 web • 41
Minute minder • 62
Missed alarm events • 55
MMS messages
 creating/sending • 38
 deleting • 40
 settings • 44
 viewing • 40
Multi-party calls • 28
Muting
 key tones • 27
 microphone • 27

N

Names
 entering • 23
 searching • 58
Network selection • 69

O

Organiser • 52

P

Password

barring • 66
phone • 72
Phone
 care and maintenance • 79
 display • 10
 icons • 10
 locking • 72
 password • 72
 resetting • 72
 switching on/off • 8
 unpacking • 6

Photos

deleting • 36
editing • 47
taking • 34
viewing • 47

PIM sync

creating a profile • 57
starting • 57

PIN, change • 72

PIN2, change • 72
Power on/off tone • 62
Privacy • 72
Problems, solve • 73
Profiles • 61

R

Received messages
 configuration • 41
 e-mail • 42
 MMS • 39
 SMS • 39
 web • 41

Recording

videos • 36
voice memos • 55

Redialling

automatically • 65
 manually • 25
Resetting phone • 72
Ringtones, downloaded • 50
Road safety • 76
Roaming • 69

S

Safety
 information • 74
SIM card
 inserting • 7
 locking • 71
SMS messages
 creating/sending • 39
 deleting • 40
 settings • 45
 viewing • 39
Sound settings • 61
Sounds, downloaded • 51
Speed-dial • 60, 66
Switching on/off
 microphone • 27
 phone • 8

T

Templates
 MMS • 43
 text • 43
Text input mode, change • 23
Text, enter • 23
Tone
 connect • 62
 keypad • 62
 message • 62
 minute minder • 62
 power on • 62

V

Video calls

making • 28

setting • 66

Video clips

deleting • 49

playing • 49

recording • 36

Voice mail server • 47

Voice memos

playing • 55

recording • 55

W

Wallpaper • 63

WAP browser • 30

World time • 57

Declaration of Conformity (R&TTE)

For the following product:

GSM/900/GSM1800/~~WCDMA~~

Portable Cellular Telephone

(Product Name)

SGH-ZV30

(Model Number)

Manufactured at:

Samsung Electronics Co., Ltd. 94-1 Imsu-Dong, Gumi City, Kyung Buk, Korea 730-350

(factory name, address*)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety

EMC

SAR

Network

We hereby declare the [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[I*] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body (ies):

BABT, Claremont House, 34 Molesey Road,

Walton-on-Thames, KT12 4RQ, UK

Identification mark: 168

The technical documentation kept at:

Samsung Electronics Euro QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab,
Blackbushe Business Park, Saxony Way,
Valeley, Hampshire, GU46 6GG, UK

(place and date of issue)

(name and signature of authorised person)

*This is not the address of the Samsung Service Centre. For the address or the phone number of the Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.