

- * Depending on the software installed or your service provider, some of the description in this manual may differ from your phone.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this manual.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-0xxxxA
English. 12/2005. Draft02



SGH-ZX20

User's Manual



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Use road safety at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.



Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service







Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 75.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started".

In this guide, the following instruction icons appear:

-  Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
-  Indicates that you can get more information on the referenced page.
-  Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
-  Indicates a key on the phone. For example, .
-  Indicates a soft key, whose function is displayed on the phone screen. For example, **<Menu>**



Important safety precautions

Contents

Unpack **6**

Make sure you have each item

Your phone **6**

Buttons, features, and locations

Get started **7**

First steps to operating your phone

Install and charge the phone 7

Power on or off 8

Keys and display 9

Access menu functions..... 11

Customise your phone 12

Make/Answer calls..... 14

Enter text **15**

ABC, T9, Number, and Symbolic mode

Call functions **18**

Advanced calling features

Menu functions **23**

All menu options listed

Solve problems **73**

Help and personal needs

Health and safety information **75**

Overview of menu functions

To access Menu mode, press
<**Menu**> in Idle mode.

1 IM	▶ p.23	3 Recent Calls	▶ p.42	5 Cingular Mail	▶ p.43	8 Address Book	▶ p.60
2 Messaging	▶ p.23	1 Missed Calls	▶ p.42	1 Shop Tones	▶ p.43	1 Contact List	▶ p.60
1 IM	▶ p.23	2 Calls Made	▶ p.42	2 Shop Games	▶ p.43	2 Add New Contact	▶ p.61
2 Create New Message	▶ p.26	3 Calls Received	▶ p.42	3 Shop Graphics	▶ p.43	3 Groups	▶ p.62
3 Inbox	▶ p.29	4 Voice Mail	▶ p.42	4 Shop Multimedia	▶ p.43	4 Speed Dial	▶ p.63
4 Sent	▶ p.31	5 Speed Dial List	▶ p.42	5 Shop Applications	▶ p.43	5 My Name Card	▶ p.63
5 Outbox	▶ p.33	6 Delete All	▶ p.42	6 MEdia Net Home	▶ p.43	6 Copy All	▶ p.64
6 Drafts	▶ p.34	7 Call Time	▶ p.42	6 Cingular Videos	▶ p.43	7 Own Number	▶ p.64
7 Email Inbox	▶ p.35	8 Data Volume	▶ p.42	7 My Stuff	▶ p.43	8 Settings	▶ p.64
8 Chat	▶ p.38	9 Data Call Time	▶ p.43	1 My MEdia	▶ p.44	9 Memory Status	▶ p.64
9 Templates	▶ p.38	10 Address Book	▶ p.43	2 Games	▶ p.44	9 Settings	▶ p.65
10 Broadcast	▶ p.38	4 MEdia Net	▶ p.43	3 Applications	▶ p.44	1 Time & Date	▶ p.65
11 Delete All	▶ p.39	1 MEdia Net Home	▶ p.43			2 Profiles	▶ p.65
12 Settings	▶ p.39	2 Favorites	▶ p.43			3 Phone Settings	▶ p.65
13 Memory Status	▶ p.41	3 Enter URL	▶ p.43			4 Display Settings	▶ p.66
		4 Browser Profiles	▶ p.43			5 Call	▶ p.67
		5 Clear Cache	▶ p.43			6 Connectivity	▶ p.69
						7 Software Update	▶ p.71
						8 Application Settings	▶ p.71
						9 Security	▶ p.71
						10 Memory status	▶ p.72
						11 Reset settings	▶ p.73

Unpack

Make sure you have each item



Phone



Travel Adapter



Battery



User's Manual

You can obtain the following accessories from your local Samsung dealer:

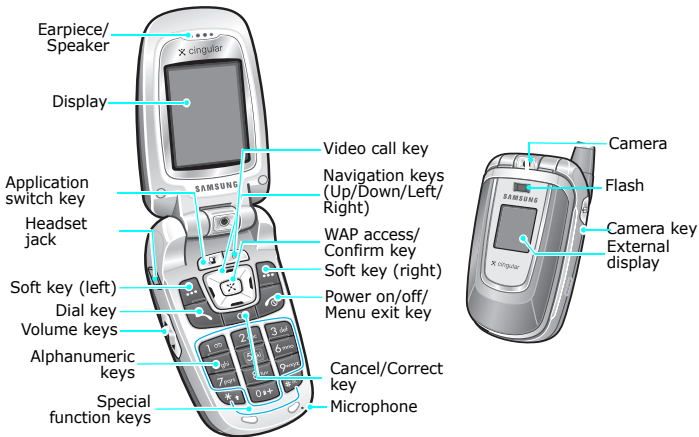
- Car Adapter
- Headset
- Data Link KIT
- Stylish Handfree Car Kit



The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations



Get started

First steps to operating your phone

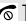
SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

Install and charge the phone

- 1 Remove the battery.



- ☒ If the phone is already on, first turn it off by holding [].

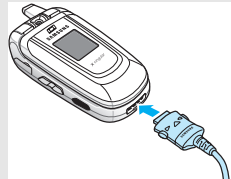
- 2 Insert the SIM card.

- ☒ Make sure that the gold-coloured contacts on the card face down into the phone.

- 3 Install the battery.



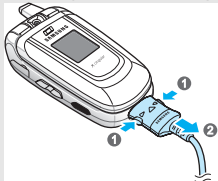
- 4 Plug the travel adapter into the phone.



- 5 Plug the adapter into a standard AC wall outlet.


- 6 When the phone is completely charged (the battery icon stops blinking), unplug the adapter from the power outlet.

7 Remove the adapter from the phone.



Low battery indicator

When the battery is low:


- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


Power on or off

Switch on






Do not turn on the phone when mobile phone use is prohibited.






1. Open the phone.
2. Press and hold [] to turn on the phone.
3. If necessary, enter the PIN and press <OK>.

Switch off

1. Open the phone.
2. Press and hold [].

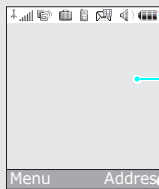
Keys and display

Key(s)	Description
	Perform the function indicated on the bottom line of the display.
	In Idle mode, access your favourite menus, directly. ► p. 65 In Menu mode, scroll through the menu options.
	In Idle mode, launch the Wireless Application Protocol (WAP) browser. In Menu mode, select the highlighted menu option.
	Delete characters from the display. In Menu mode, return to the previous menu level.
	Send or answer a call. In Idle mode, retrieve the recent numbers dialled, missed, or received.

	End a call. Hold down to switch the phone on and off. In Menu mode, cancel input and return the phone to Idle mode.
	Enter numbers, letters, and some special characters. In Idle mode, hold [1] down to access your voice mail server. Hold [0] down to enter the international call prefix.
	Enter special characters. Hold [#] down to activate or deactivate Quiet mode.
 (on the left)	Adjust the phone volume. In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, hold down to turn on the backlight.
 (on the right)	In Idle mode, hold down to turn on the camera. In Camera mode, take a photo or record a video.

Display

Layout










Icons
display various icons.

Text and graphics
display messages,
instructions, and
information you enter.

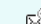


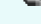
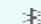
 
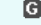
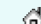
 
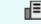
Soft key function indicators
show the current functions
assigned to the two soft
keys.

Icons*

-  Received signal strength
-  Call in progress
-  Out of your service area; you cannot send or receive calls
-  Alarm set
-  New text message
-  New multimedia message
-  New voicemail message

Icons

(continued)

-  New e-mail received or being sent
-  One of the message Inboxes is full
-  Call diverting feature is active
-  Bluetooth feature is active
-  GPRS network
-  Home Zone, if you have registered for the appropriate service
-  Office Zone, if you have registered for the appropriate service
-  Call ringer set to vibrate
-  Quiet mode is active
-  Battery power level

* The icons shown on the display may vary, depending on your country or service provider.

Access menu functions

Use the soft keys



The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.



Press the left soft key to access **Menu** mode.

Press the right soft key to access **Options**.

Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>** or [] to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods.
 - Press **<Back>** or **<C>** to move up one level.
 - Press [] to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press <Menu> and select **Settings** → **Phone settings** → **Language**.
2. Select a language.

Call ringer melody


1. In Idle mode, press <Menu> and select **Settings** → **Sound settings** → **Incoming call** → **Ring tone**.
2. Press [Left] or [Right] to select a ringer category.
3. Press [Up] or [Down] to scroll through ringer melodies.
4. Select a ringer melody you want.
5. Press <Save>.

Idle mode wallpaper

You can set your wallpaper for the main or external display.

1. In Idle mode, press <Menu> and select **Settings** → **Display settings** → **Wallpaper** → **Main display** or **Cover display**.
2. Select an image category and then an image.

For **Cover display**, you can select **Cover title** to enter text to be displayed on the external display.

3. Press [].

Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press <**Menu**> and select **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

Quiet mode

You can switch to Quiet mode to avoid disturbing other people with your phone sound.

Press and hold [#] in Idle mode.

Menu shortcuts

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode.

To assign a menu to a key:

1. In Idle mode, press <**Menu**> and select **Settings** → **Phone settings** → **Short cut**.
2. Select a key.
3. Press <**Options**> and select **Change**.
4. Scroll to a menu to be assigned to the key.
5. Press <**Save**>.



Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on powerup.



1. In Idle mode, press **<Menu>** and select **Settings** → **Security** → **Change password**.
2. Enter the default password, "00000000" and press **<OK>**.
3. Enter a new 4- to 8- digit password and press **<OK>**.
4. Enter the new password again and press **<OK>**.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press **<OK>**.

Make/Answer calls


Make a call

1. In Idle mode, enter an area code and phone number.
2. Press [].
3. To end the call, press [].

Answer a call

1. When the phone is ringing, press [].
2. To end the call, press [].

Adjust the volume during a call

Press [ / ].





Enter text

ABC, T9, Number, and Symbolic mode

You can enter text for some features such as messaging, Phonebook, or Calendar, using ABC mode, T9 mode, Number mode, and Symbolic mode.

Changing the text input mode

The text input mode indicator appears when the cursor is in a text field.

- Press the right soft key to change the text input mode. ( **Eng** : T9 mode,  **Eng** : ABC mode,  **Eng** : Number mode, and  **Eng** : Symbolic mode)
- Press and hold [#] to switch to Symbolic mode.

Using ABC mode

Press the appropriate key until the character you want appears on the screen.

Key	Characters in order displayed	
	Upper case	Lower case
1	. , - ? ! ' @ : 1	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	0	

Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.

- Press [#] to change case. Lower case (No indicator), Initial capital (⬆), and Capital lock (⬆) are available.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.
- Depending on your country, you may be able to access an input mode for your specific language by holding the [#] key.

Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.
For example, press [4], [3], [5], [5], and [6] to enter HELLO in T9 mode.

T9 predicts the word that you are typing, and it may change with each key that you press.

2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed. For example, OF and ME use [6] and [3].
4. Press [#] to insert a space and enter the next word.

Tips for using T9 mode

- Press [1] to enter periods or apostrophes automatically.
- Press [#] to change case. Lower case (No indicator), Initial capital (⬆), and Capital lock (⬆) are available.
- Press [#] to insert a space.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.
2. Press [**0**] to display alternative words for your key presses. When there are no more alternative words, **Spell** appears on the bottom line.
3. Press <**Spell**>.
4. Enter the word you want using ABC mode and press <**OK**>.

Using Number mode

Number mode enables you to enter numbers.

Press the keys corresponding to the digits you want.

Using Symbolic mode

Symbolic mode enables you to insert symbols.

To	Press
display more symbols	[Up] or [Down].


To	Press
select a symbol	the corresponding number key.
clear the entered symbol(s)	[C].
insert the symbol(s)	< OK >.

Call functions

Advanced calling features

Making a call

1. In Idle mode, enter the area code and phone number.
2. Press [↵].

 Press [C] to clear the last digit or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.

Making an international call

1. In Idle mode, press and hold [0]. The + character appears.
2. Enter the country code, area code, and phone number, then press [↵].

Redialling recent numbers

1. In Idle mode, press [↵] to display the list of recent numbers.
2. Scroll to the number you want and press [↵].

Making a call from Phonebook

Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook.

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys.

Dialling a number from the SIM card

1. In Idle mode, enter the location number for the phone number you want and press [#].
2. Press [Left] or [Right] to scroll through other numbers.
3. Press <Dial> or [↵] to dial the number you want.

Ending a call

Close the phone or press [#].

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.

Press <**Accept**> or [↶] to answer the call.

Tips for answering a call

- When **Anykey answer** in the **Extra settings** menu is active, you can press any key, except for <**Reject**>, [#], or [▲/▼]. ► p. 66
- When **Active folder** in the **Extra settings** menu is active, you can simply open the phone. ► p. 66
- Press <**Reject**> or [#] to reject a call.
- Depending on the setting in the **Side key** menu, press and hold [▲/▼] to mute a call ringer or reject a call.

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <**View**>.
2. If necessary, scroll through the missed calls.

3. Press [↶] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone.

The buttons on the headset work as listed below:

To	Press
redial the last call	and hold the button twice.
answer a call	the button.
end a call	the button.

Options during a call

You can access a number of functions during a call.



Adjusting the volume during a call

Use [▲/▼] to adjust the earpiece volume during a call.

Press [▲] to increase the volume level and [▼] to decrease the volume level.

Using the external speaker

Use the optional external speaker to talk and listen with the phone a short distance away. First, you must plug the speaker into the phone.

1. During a call, press [ⓧ] to listen and talk to the other person hands-free. The  icon appears.
2. Press [ⓧ] again to return to normal phone mode. The  icon appears.

Placing a call on hold/Retrieving

Press <Hold> or <Retrieve> to place a call on hold or retrieve the call.

Making a second call

You can make another call if your network supports it.

1. Press <Hold> to put the call on hold.
2. Make the second call in the normal way.
3. Press <Swap> to switch between the calls.

4. Press <Options> and select **End held call** to end the call on hold.
5. To end the current call, press [ⓞ].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature.

1. Press [↶] to answer the call. The first call is automatically put on hold.
2. Press <Swap> to switch between the calls.
3. Press <Options> and select **End held call** to end the call on hold.
4. To end the current call, press [ⓞ].

Transferring a call

You can transfer the currently active call to a caller on hold, if your network supports it. With this option, the two callers can talk to each other, but you are disconnected from the call.

Press <Options> and select **Transfer**.

Using a Bluetooth headset

Use an optional Bluetooth headset to talk on the phone without holding the phone to your ear. To use this feature, you first need to register your headset and connect it to the phone.

Press <**Options**> and select **Switch to headset** or **Switch to phone**.

Using the voice clarity feature

This feature increases the microphone's sensitivity so that the person with whom you are speaking can hear you clearly even though you may be whispering.

Press <**Options**> and select **Voice clarity on** or **Voice clarity off**.

Switching off the microphone (Mute mode)

You can temporarily switch off your phone's microphone so that the person on the phone cannot hear you.

Press <**Options**> and select **Mute** or **Unmute**.

Muting or sending key tones

You can turn the key tones off or on.

Press <**Options**> and select **Mute keys** or **Send keys**.



To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

Sending a sequence of DTMF tones

Dual tone multi-frequency (DTMF) tones are the tones used in phones for tone dialling.

You can send DTMF tones as a group after entering the entire number you need to send or retrieving a number from Phonebook. This feature is helpful for entering a password or an account number when you call an automated system, like a banking service.

1. When connected with a teleservice system, press <**Options**> and select **Send DTMF**.
2. Enter the number you need to send and press <**OK**>.

Using Phonebook

You can access the **Phonebook** menu to locate or store entries.

Press **<Options>** and select **Phonebook**.

Using SIM services

The **SIM service** menu is available if you use a SIM card in your phone. A SIM card provides services such as news, weather, sports, entertainment, and location services.

For details, see your SIM card instructions or contact your service provider.

Making a multi-party call

Use this feature to allow as many as six people to join a multi-party call, or conference call.

Your service provider must support multi-party calls for you to use this feature.

Setting up a multi-party call


1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.

3. Press **<Options>** and select **Join**. The first participant is added to the multi-party call.
4. If desired, call another person or answer an incoming call.
5. Press **<Options>** and select **Join**.
6. Repeat steps 4 and 5 as desired.

Having a private conversation with one participant

1. Press **<Options>** and select **Private**.
2. Select a name or number from the participant list.
You can talk privately with that person, while the other participants converse with each other.
3. To return to the multi-party call, press **<Options>** and select **Join**.

Dropping one participant

1. Press **<Options>** and select **Remove**.
2. Select a name or number from the participant list.
The participant is dropped from the call, but the call continues with the other parties.
3. Close the phone or press [] to end the multi-party call.

Menu functions

All menu options listed

IM (Menu 1)

Messaging (Menu 2)

Use the **Messaging** menu to send and receive text messages, multimedia messages, and e-mails. You can also use WAP push message and cell broadcast message features.


To access this menu, press <**Menu**> in Idle mode and select **Messaging**.

IM (menu 2.1)

The Wireless Application Protocol (WAP) browser on your phone allows you to access the wireless web. Using the WAP browser, you can access up-to-date information and a wide variety of media content, such as wallpapers, ring tones, and music files.

To access this menu, press <**Menu**> in Idle mode and select **Browser**.



Home

Use this menu to connect your phone to the network and load the home page of the wireless web service provider. You can also press [] in Idle mode.

Navigating with the WAP browser

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	<✓>.
return to the previous page	< Back > or [C].
return to the home page	and hold [C].

Selecting and using the browser menu options

Press [] or select  on the top of the screen.

- **Back**: go back to the previous page.
- **Home**: go back to the home page.
- **Exit**: exit the WAP browser.
- **Reload**: reload the current page.

- **Show URL:** display the URL address of the current web page. You can also set the current page as the home page for the WAP browser.
- **About:** view the WAP browser certificate and version information.

Using WAP page options

From any WAP page, press [ⓧ] to access the following options:

- **Go to URL:** enter a URL address manually.
- **Bookmarks:** switch to the **Bookmarks** menu.
 - ▶ Menu 6.2
- **Messages:** check the **Inbox**, **Outbox**, and **Draft** box in the **My messages** menu. You can also create and send a new SMS message.
- **File manager:** switch to the **File manger** menu.

Exiting the WAP browser

Press [Ⓜ] to exit the browser.

Bookmarks

Use this menu to save URL addresses in order to quickly access websites.

Adding a bookmark

1. Select an empty location.
2. Enter a name for the bookmark.
3. Enter a URL address and press [ⓧ].

Accessing a bookmarked page

Scroll to a bookmark item and press [ⓧ].

Using bookmark options

Scroll to a bookmark and press <**Options**> to access the following options:

- **Go:** access the bookmarked website.
- **Edit:** edit the address and name of the bookmark.
- **Delete:** delete the selected bookmark.

Go to URL

Use this menu to manually enter the URL address of a website and access the website.

Clear cache

Use this menu to clear the cache, a temporary memory that stores recently accessed web pages.

Profile settings

Use this menu to set up servers for the WAP browser. Contact your service provider for details about your setting options.

For each server, the following options are available:

- **Profile name:** assign a name to the server profile.
- **Home URL:** set the address of your home page.
- **Bearer:** select a bearer for each type of network address accessed.
- **Proxy:** select whether or not the phone uses a proxy server to launch the WAP browser. Your service provider can tell you if your network requires a proxy server, and they can give you the appropriate settings.
- **GPRS settings:** customise the following GPRS network settings:
*When the proxy is set to **Enable**:*
Proxy IP: enter the proxy IP address.
Proxy port: enter the proxy port number.
APN: enter the access point name of the GPRS network gateway.

Login ID: enter the user ID.

Password: enter the password.

*When the proxy is set to **Disable**:*

DNS 1: enter the primary address.

DNS 2: enter the secondary address.

APN: enter the access point name of the GPRS network gateway.

Login ID: enter the user ID.

Password: enter the password.

- **GSM settings:** customise the following GSM network settings:

*When the proxy is set to **Enable**:*

Proxy IP: enter the proxy IP address.

Proxy port: enter the proxy port number.

Dial number: enter the PPP server phone number.

Login ID: enter the user ID.

Password: enter the password.

Data call type: select a data call type.

*When the proxy is set to **Disable**:*

DNS 1: enter the primary address.

DNS 2: enter the secondary address.

Dial number: enter the PPP server phone number.

Login ID: enter the user ID.

Password: enter the password.

Data call type: select a data call type.

Current profile

Use this menu to select a connection profile for accessing the WAP browser.

Create New Message (Menu 2.2)


Use this menu to create and send SMS, MMS, or e-mail messages.

Text Message (Menu 2.2.1)

Short Message Service (SMS) allows you to send or receive text messages that may include pictures, animated images, and melodies.



- ✓ The maximum number of characters allowed in a text message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

1. Enter your message.
2. Press <**Options**> to access one of the following options:
 - **Save and send:** both save a copy of the message and send the message.
 - **Send only:** send the message.
 - **Insert:** add a template, Phonebook entry, or bookmark.
 - **Add picture/Add animation/Add melody:** attach a picture, animated image, or melody.
 - **Save to:** save the message in the **Draft** or **My folder** box.
 - **Language select:** change the language used in the text input mode.
 - **Text style:** change the text attributes.
3. When you have finished, press <**Options**> and select **Save and send** or **Send only**.
4. Enter a destination number.

To send the message to more than one recipient, press [Down] and fill in additional destination fields.
5. Press [] to send the message.

Multimedia message (Menu 2.2.2)


Multimedia Message Service (MMS) allows you to send or receive multimedia messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

1. Select the **Subject** line.
2. Enter the message subject and press [.
3. Select the **Picture & Video** line.
4. Select **Picture** or **Video** and select a category.
5. Select a photo and press <Add>, or a video clip and press the left soft key.
6. Select the **Sound** line.
7. Select a category and a sound file, and press <Add>Select the **Message** line.
8. Enter the message text and press [.
9. While composing the message, press <Options> to access the following options:

☒ Depending on the field status or selected field, available options vary.



- **Add:** add a message subject or text.
- **Edit:** edit the message subject or text.

- **Add image/Add video/Add sound:** add a photo, video, or sound. Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.
- **Preview:** display the message you have created.
- **Send:** send the message.
- **Save to:** save the message in the **Draft** or **My folder** box. You can also save the message as an MMS template.
- **Add page:** add pages. Move to each page by pressing [Left] or [Right] on the message screen.
- **Delete page:** delete an added page.
- **Edit page:** change the duration of page display or move the page forward.
- **Attach:** attach a name card or calendar data.
- **Remove subject/Remove message:** clear the subject or text.
- **Remove picture/Remove video/Remove sound:** remove an added photo, video, or sound.

10. When you have finished, press <**Options**> and select **Send**.
11. Enter a phone number or e-mail address.
To send the message to more than one recipient, press [Down] and fill in additional destination fields.
12. Press [] to send the message.

Email (Menu 2.2.3)


You can send e-mails that include text and media files, such as images, videos, and audio. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile. ► p. 36, p. 37

1. Select the **Subject** line.
2. Enter the subject of your e-mail and press [].
3. Select the **Message** line.
4. Enter the e-mail text and press [].
5. Select the **File attach** line.
6. Press <**Options**> and add media files to your e-mail by using the following options:
 - **Add image/Add videos/Add sounds/Add music**: add photos, videos, or sounds.

Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

- **Other files**: add files in unsupported format.
 - **Attach**: add name cards or calendar data.
7. While composing the e-mail, press <**Options**> to access the following options:
 - **Edit**: edit the subject or text.
 - **View**: open the attached file.
 - **Send**: send the e-mail.
 - **Save to**: save the e-mail in the **Draft** or **My folder** box.
 - **Remove subject/Remove message**: clear the subject or text.
 - **Remove**: delete the selected attachment or all attachments.
 - **Remove all attachments**: delete all attachments.
 8. When you have finished, press <**Options**> and select **Send**.
 9. Enter an e-mail address.

To send the e-mail to more than one recipient, press [Down] and fill in additional destination fields.

10. Press [] to send the e-mail.

Inbox (Menu 2.3)

Use this menu to store all of the messages you have received, sent, failed to send, or saved to send it later.

Inbox (Menu 2.3.1)

This folder stores all of the messages you have received, except for e-mails and CB messages.

Viewing a message at the time of its receipt

When a message has been received, the phone alerts you by:







- Displaying a message icon with text notification
- Sounding a tone or vibrating, depending on the message alert setting.

To read a message immediately, press <**View**> and select a message from the Inbox.


For an MMS message, press <**Options**> and select **Retrieve**. The message is downloaded from the MMS server to the phone's memory.

Viewing a message in the Inbox

The following icons may appear on the message list; depending on the message type or status, icons may vary:

-  SMS
-  MMS
-  MMS notification
-  Configuration messages, which are sent from your service provider
-  WAP push messages
-  Delivery report for your sent messages



- Depending on the DRM (Digital Rights Management), you may not be able to forward some messages. They are indicated by the  icon.
- An ! icon next to a message icon indicates high priority. A grey-coloured message icon indicates low priority.

While viewing the message list, press <**Options**> to access the following options:

- **View:** open the message.
- **Retrieve:** retrieve the MMS message from the server.
- **Delete:** delete the selected message or all messages.
- **Move to my folder:** move the message to the **My folder** box.
- **Move to phone/SIM:** move the SMS message to the phone's memory or the SIM card.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** view the message properties.

Using message options

While viewing a message, press <**Options**> to access the following options:

SMS messages

- **Reply via:** send a reply message via SMS or MMS.

- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/SIM:** move the SMS message to the phone's memory or the SIM card.
- **Add to block list:** add the sender's number to the **Block number** list.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut media:** save media content from the message into your phone's memory.
- **Protection:** protect the message from being deleted.
- **Print via bluetooth:** print the selected message by connecting the phone to a printer via Bluetooth.

MMS messages

- **Reply via SMS:** send a reply message via SMS.
- **Reply via MMS to:** send a reply message via MMS.
- **Forward:** forward the message to another person.

- **Delete:** delete the selected message or all messages.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Cut media:** save media content from the message into your phone's memory.
- **Properties:** view the message properties.

Configuration messages

- **Install:** apply the configuration specified in the message to your phone.
- **Delete:** delete the message.
- **Properties:** view the message properties.

WAP push messages

- **Go to URL:** connect to the URL from which the message is sent.
- **Cut address:** extract URL, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** protect the message from being deleted.

Delivery report messages

- **Cut address:** extract URL, e-mail addresses, or phone numbers from the message.
- **Delete:** delete the message.
- **Protection:** protect the message from being deleted.

Sent *(Menu 2.4)*

Sentbox *(Menu 2.3.4)*

This folder stores messages that you have sent.

While viewing a message or from the message list, press <**Options**> to access the following options:

- **View:** display the message.
- **Forward:** forward the message to other people.
- **Delete:** delete the selected message or all messages.
- **Move to my folder:** move the message to the **My folders** box.
- **Move to phone/SIM:** move the SMS message to the phone's memory or the SIM card.
- **Sort by:** change the sort order of the messages.

- **Print via bluetooth:** print the selected message by connecting the phone to a printer via Bluetooth.
- **Protection:** protect the message from being deleted.
- **Properties:** view the message properties.





Email Inbox (Menu 2.3.5)

This folder stores e-mails that you have received.








1. Select an e-mail account.
2. Press <Yes> when **Check New Mail** is displayed to get new mails from the server.

The phone checks for new e-mails and retrieves received e-mails.

The following icons may appear on the message list; depending on the e-mail states, icons may vary:

-  has been read
-  has not been read
-  is being retrieved from the server
-  has not been retrieved

☒ An ! icon next to a message icon indicates high priority. A grey-coloured message icon indicates low priority.

3. Scroll to an e-mail or header and press [].
4. If the e-mail has more than one page, press [ / ] to scroll through pages one by one.
Press and hold [ / ] to move to the first or last page.
5. Select an attached file to view or play it.
6. Press [] or [] to move to the previous or next e-mail.

While viewing the e-mail content or e-mail list, press <**Options**> to access the following options:

☒ Options may vary depending on the status of the e-mail.

- **View:** display the e-mail.
- **Retrieve:** retrieve one or all e-mails from the e-mail server.
- **Reply to:** send a reply message to the sender or to all of the other recipients.

- **Forward:** forward the e-mail.
- **Mark as read:** mark the e-mail as read.
- **Delete selection:** delete the selected e-mail.
- **Delete all:** delete all e-mails.
- **Move to my folder:** move the retrieved e-mail to the **My folder** box.
- **Sort by:** sort the e-mails by size, subject, data, or senders' e-mail addresses.
- **Protection:** protect the e-mail from being deleted.
- **Properties:** view the e-mail properties.

While viewing a header or e-mail, press <**Options**> to access the following options:



- **Retrieve:** retrieve one or all e-mails.
- **Open file:** open the attached file.
- **Save file:** save the attached file in the phone's memory.
- **Reply to:** send a reply message to the sender or to the sender and all of the other recipients.
- **Forward:** forward the e-mail.

- **Delete:** delete the e-mail.
- **Add to block list:** add the sender's e-mail address or the e-mail subject to the **Block list**.
- **Cut address:** extract e-mail addresses, URLs, and phone numbers from the e-mail.
- **Cut attachment:** save the selected attachment or all attachments from the e-mail into your phone's memory.
- **Print via bluetooth:** print the selected e-mail by connecting the phone to a printer via Bluetooth.
- **Protection:** protect the e-mail from being deleted.
- **Properties:** view the e-mail properties.

Out Box *(Menu 2.5)*

This folder stores messages that the phone is attempting to send or has failed to send.

In this folder, the following icons are available:

-  Messages that the phone is sending
-  Messages that the phone has failed to send

While viewing a message or the message list, press **<Options>** to access the following options:

- **Cancel sending:** cancel sending the message, if the message is being sent.
- **View:** display the message.
- **Send again:** send the message.
- **Delete:** delete the selected message or all messages.
- **Move to my folder:** move the message to the **My folder** box.
- **Move to phone/SIM:** move the SMS message to the phone's memory or the SIM card.
- **Sort by:** change the sort order of the messages.
- **Print via bluetooth:** print the selected message by connecting the phone to a printer via Bluetooth.
- **Protection:** protect the message from being deleted.
- **Properties:** view the message properties.

Draft (Menu 2.6)

This folder stores messages you have saved to send at a later time.

Press **<Options>** to access the following options:

- **Edit:** edit the message.
- **Delete:** delete the selected message or all messages.
- **Move to my folder:** move the message to the **My folder** box.
- **Move to phone/SIM:** move the SMS message to the phone's memory or the SIM card.
- **Sort by:** change the sort order of the messages.
- **Protection:** protect the message from being deleted.
- **Properties:** view the message properties.

My folder

Use this menu to store and manage your messages.

Press **<Options>** to access the following options:

- **View:** display the message.
- **Send:** send the message.

- **Edit:** edit the message.
- **Delete:** delete the selected message or all messages.
- **Sort by:** change the sort order of messages.
- **Protection:** protect the message from being deleted.
- **Properties:** view the message properties.

Email Inbox (Menu 2.7)

You can configure the default network settings that are required to send or receive e-mails.

- ☒ You cannot change e-mail profile settings while an e-mail is being sent or retrieved.

Send settings: set up the following options for sending e-mails.

- **Send copy to self:** send a copy of your e-mail to your own e-mail address.
- **Delivery confirm:** set the network to inform you when your e-mail has been delivered.
- **Read confirm:** send a request for a reply along with your e-mail.

- **Priority:** select the priority level of your outgoing e-mail.
- **Include signature:** select to attach your name, phone number, or a simple memo to your e-mail using the **Edit name**, **Edit telephone number**, and **Edit note** options.
- **Edit name:** enter your name.
- **Edit telephone number:** enter your phone number.
- **Edit note:** enter a simple memo.

Receive settings: set up the following options for receiving e-mails.

- **Check interval:** determine how often the phone checks the server for incoming e-mails.
If you set this option to **Not used**, you can use the **Check new mail** feature to check your e-mail manually.
- **Read reply:** determine whether or not the phone sends a read-reply request.
When this option is set to **Announce**, the phone reminds you to send a read-reply request with your e-mail address.

- **Retrieve option:** determine whether the phone retrieves headers only or the entire e-mail.
- **Delete option:** determine whether e-mails are deleted immediately or the next time you connect to the server.
- **Reject if over:** determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.
- **Leave a copy of messages on the server:** leave copies of e-mails after retrieving.

Block list: specify e-mail addresses from which messages will not be accepted. You can also specify message subjects that you will not accept.

Email account: set up your e-mail account(s) and select the one to be used:

- ☒ You cannot change e-mail account settings while an e-mail is being sent or retrieved. Your e-mail service provider can give you the information needed for the below settings.

- **Current account:** select an account.

- **Account settings:** configure up to five e-mail accounts using different e-mail servers.

The following options are available for each account:

In use: select this option to use the account and to display the account in the **Inbox**.

Account name: enter a name for the currently selected account.

User name: enter a name to be displayed as the sender's name in your outgoing e-mails.

Email address: enter your e-mail address.

Reply address: enter the e-mail address to which you want recipients to send reply messages.

User ID: enter your e-mail ID.

Password: enter your e-mail password.

SMTP server: enter the IP address or domain name of the outgoing e-mail server.

SMTP port: enter the SMTP port number.

Protocol type: select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

When the protocol type is **POP3**:

POP3 server: enter the IP address or domain name of the server that receives your e-mail.

POP3 port: enter the POP3 port number.

APOP login: connect to the server by using the APOP login scheme when this option is selected.

When the protocol type is **IMAP4**:

IMAP4 server: enter the IP address or domain name of the server that receives your e-mail.

IMAP4 port: enter the IMAP4 port number.

Include attachments: select this option to receive attachments with e-mails.

Max. Emails retrieved: set the number of headers you will retrieve from the server.

Email profile: configure the network settings required to send or receive e-mails.

☒ You cannot change e-mail profile settings while an e-mail is being sent or retrieved.

- **Current profile**: select a profile.

- **Profile settings**: configure up to five e-mail profiles. For each profile, the following options are required to connect to the GPRS network:

Profile name: enter a name for the e-mail profile.

APN: enter the access point name used for the GPRS network address.

Login ID: enter the user ID.

Password: enter the password.

DNS1: enter the primary address.

DNS2: enter the secondary address.

Push Message

You can change the settings for receiving WAP push messages from the wireless web server. The following options are available:

- **Receive**: set how your phone receives WAP push messages.
- **Service centre**: specify the address of the server from which you want to receive WAP push messages, the **Receive** option is set to **SMS-C specific**.

Predictive Text Mode


Chat *(menu 2.8)*

Templates *(Menu 2.9)*

Use this menu to create, edit, or send text or multimedia templates.


Text template *(Menu 2.4.1)*

Use this menu to preset frequently used text messages.

1. Select an empty location.
2. Enter a message and press [].
3. Press <**Options**> to access the following options:
 - **Edit**: edit the template.
 - **Send message**: send a new message using the template.
 - **Delete**: delete the template.

MMS template *(Menu 2.4.2)*

Your phone has 11 preset MMS messages. You can create a new MMS template and send the template.

Scroll to an MMS template and press [] to display the template.

While viewing a message, press <**Options**> to access the following options:

- **Replay**: replay the template.
- **Send**: send the template.
- **Edit**: edit the template.
- **Delete**: delete the template.

While viewing the template list, press <**Options**> to access the following options:

- **View**: display the template.
- **Send**: send the template.
- **Edit**: edit the template.
- **New**: add a new template.
- **Delete**: delete the template.

Broadcast *(Menu 2.10)*

The Cell Broadcast service delivers short messages on various topics, such as weather, sports, or traffic.

Use this menu to change the settings for the service and to access broadcast messages.

- **Read:** open received messages.

The **Temporary** box saves network messages until the phone is switched off.

The **Archive** box saves network messages indefinitely. Press <**Options**> and select **Save** to save messages to the **Archive** box when a text notification appears.

- **Receive:** enable or disable the reception of broadcast messages.
- **Channel:** specify the channels from which you receive broadcast messages.
- **Language:** select the language in which broadcast messages display.

Please contact your service provider for details.

Delete All (Menu 2.11)

Use this menu to delete messages in each message folder one by one, or all at once. You can also delete all messages in all folders at one time.

Settings (Menu 2.12)

Use this menu to set up various options for using the messaging service.

Text message

You can configure the default SMS settings for sending messages.

Send settings: set up the following options:

- **Reply path:** allow the recipient to reply to you through your message centre.
- **Delivery report:** set the network to inform you when your message has been delivered.
- **Message type:** set the default message type. The network can convert the messages into the selected format.

Current Profile

Profile Settings

Multimedia message

You can configure the default MMS settings for sending or receiving messages.

Send settings: set up the following options for sending multimedia messages:

- **Priority:** set the priority level of your outgoing messages.
- **Validity period:** set the length of time your messages are stored in the MMS centre.
- **Delivery after:** set a time delay before messages are sent.
- **Address hiding:** set your address to be hidden from the recipient's phone.
- **Delivery report:** set the network to inform you when your message has been delivered.
- **Read reply:** determine whether or not the phone sends a read-reply request.

Receive settings: set up the following options for receiving multimedia messages:

- **Home reception:** determine if your phone retrieves new messages automatically when you are in your home service area.
- **Roaming reception:** determine if your phone retrieves new messages automatically when you are roaming in another network.

Home reception and **Roaming reception** have the following options:

Automatic: the phone automatically retrieves messages from the server.

Reject: the phone rejects all messages.

Manual: the phone displays notifications. Use the **Retrieve** option to manually download new messages.

- **Anonymous reject:** reject messages from anonymous senders.
- **Adverts reject:** reject advertisements.
- **Report allowed:** send a delivery report from the network to the sender.

Block number: specify phone numbers from which messages will not be accepted.

MMS profiles: configure required network settings for MMS. The last profile accessed is automatically activated for sending or receiving subsequent messages.



Check with your service provider before you change any MMS settings on your phone.

- **Current profile:** select a profile.
- **Profile settings:** customise the following options for each profile:

Profile name: assign a name to the MMS profile.

Server URL: enter the address of your MMS server.

Proxy: connect to the GPRS network using the proxy server.

GPRS settings: customise the settings required for connecting to the GPRS network.

- **IP address:** (when the proxy is set to **Enable**) enter the IP address.
- **Port:** (when the proxy is set to **Enable**) enter the port number.
- **DNS1:** (when the proxy is set to **Disable**) enter the primary address.
- **DNS2:** (when the proxy is set to **Disable**) enter the secondary address.
- **APN:** enter the access point name used for the address of the GPRS network.
- **Login ID:** enter the user ID.

- **Password:** enter the password.

Version: select an available OMA version and maximum size limit for sending or receiving messages.



Depending on your service provider, it may not be possible to support the maximum limit 295KB. In this case, try again after changing the setting to 100KB.

Memory Status *(Menu 2.13)*

Use this menu to view the maximum memory and available memory for each message type. You can also view the memory currently in use in each folder.

Recent Calls *(Menu 3)*

Use this menu to view the calls you have dialled, received, or missed, and the length of your calls.

To access this menu, press <**Menu**> in Idle mode and select **Recent Calls**.

Missed Calls *(Menu 3.1)*

This menu displays the most recent calls that you did not answer.

Calls Made *(Menu 3.2)*

This menu displays the most recent calls you have received.

Calls Received *(Menu 3.3)*

This menu displays the most recent calls you have dialled.

Voice Mail *(Menu 3.4)*

Speed Dial List *(Menu 3.5)*

Delete All *(Menu 3.6)*

Call Time *(Menu 3.7)*

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total sent:** check the total length of all the calls you have dialled.
- **Total received:** check the total length of all the calls you have received.
- **Reset timers:** reset the call timers. You need to enter the phone password.

☒ The password is preset to **00000000**. You can change this password. ► p. 72

Data Volume *(Menu 3.8)*

- Recent Volume
- Total Volume
- Reset Volume

Data Call Time (Menu 3.9)

- Recent Time
- Total Time
- Reset Timers

Address Book (Menu 3.0)**MEdia Net** (Menu 4)

MEdia Net stores file downloads for the following:

MEdia Net Home (Menu 4.1)

Favorites (Menu 4.2)

Enter URL (Menu 4.3)

Browser Profiles (Menu 4.4)

Clear Cache (Menu 4.5)

Cingular Mall (Menu 5)

Shop Tones (Menu 5.1)

Shop Games (Menu 5.2)

Shop Graphics (Menu 5.3)

Shop Multimedia (Menu 5.4)

Shop Applications (Menu 5.5)

MEdia Net Home (Menu 5.6)

Cingular Video (Menu 6)


Cingular Video allows you to view video clips of news, sports and entertainment.

My Stuff (Menu 7)

The **File manager** menu allows you to access images, videos, music files, and sound files stored in the phone's memory.

To access this menu, press <**Menu**> in Idle mode and select **File manager**.




According to the DRM (Digital Rights Management) system, web content may not be able to be forwarded. The content is indicated by the  icon.

My MEdia (Menu 7.1)

This menu displays photos you have taken and images downloaded or received in messages.

Viewing an image

1. Select an image folder.
2. Scroll to an image and press [].

Using image options

While viewing an image or the image list, press **<Options>** to access options. ► p. 47


Games (Menu 7.2)

Use this menu to play Java games, to play music files, to record a voice memo, to set time zones and alarms, or to use your phone as a calculator, timer, convertor, or stopwatch. You can also use the phone as an FM radio.

To access this menu, press **<Menu>** in Idle mode and select Games & **Applications**.

Application (Menu 7.3)

You can use the camera module embedded in your phone to take photos and record videos.

To access this menu, press **<Menu>** in Idle mode and select **Camera**, or press and hold [].

- ☒ • Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.


Taking a photo


You can take photos in various modes using the phone. The camera produces JPEG photos.

- ☒ When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Taking a photo with the phone open

1. Access the **Camera** menu to turn on the camera.
The image to be captured appears on the display.

2. Adjust the image by aiming the camera lens at the subject.
 - Press the left soft key to access camera options.
 - Use the keypad to change camera settings or switch to other modes. ► p. 46
3. Press [] to take a photo. The photo is saved in the **Photos** folder.

To	Press
use photo options	< Options >. ► p. 47
delete the photo	< Delete > and then < Yes >.
return to Capture mode	[].

Using camera options in Capture mode

In Capture mode, press the left soft key to access the following options:

- **Record video:** switch to Record mode. ► p. 48
- **Shooting mode:** take a photo in the following modes:

Single shot: take a photo in normal mode.

Multi shot: take a series of action stills. Select the number of photos the camera will take and the rate at which the photos are taken.

Mosaic shot: take several stills and save them in one frame. Select the number of still images the camera will take.

- **Effects:** change the colour tone or apply a special effect to the photo.
- **Frames:** apply a decorative frame to the photo.
- **Flash:** determine the flash use.
- **Timer:** set a time delay before the camera takes a photo.
- **Go to photos:** go to the **Photos** folder.
- **Settings:** change the default settings for taking a photo.

Size: select an image size.


Quality: select an image quality setting.

View finder: select a preview screen.

ISO: change the ISO setting, which controls the sensitivity of your camera. For low light situations, lower the ISO number to increase the quality.

The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may bring some distortion to an image.

Spot focus: adjust the exposure based on a specific area of the image. Select **On** to display the spot focus frame in the middle of the image, and change the exposure according to the brightness of the image fragment in the frame.

Shutter sound: select the sound that you hear when you press the shutter release, [].

Zoom sound: turn on or off the sound that you hear when zooming in.

Brightness sound: turn on or off the sound that you hear when adjusting the image brightness.

Default name: change the default prefix of the photo name.

- **Camera short cuts:** view the functions of the keys you can use.

Using the keypad in Capture mode

You can use the keypad to customise your camera settings in Capture mode.

Keys	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/Right	Adjusts the brightness of the image.
Up/Down	Zooms in or out.
1	Switches to Record mode. ► p. 48
2	Changes the image size.
3	Changes the image quality.
4	Changes the camera mode.
5	Changes the colour tone or applies a special effect to the photo.
6	Reduces the distortion on the image to maximise detail and sharpness.

Keys	Function
7	Selects a decorative frame.
8	Sets the timer.
9	Goes to the Photos folder
0	Determines the flash use.
	Changes the preview screen.


Using photo options

After taking a photo, press <**Options**> to access the following options:

- **Take another:** return to Capture mode to take another photo.
- **Send via:** send the photo via MMS, e-mail, or Bluetooth.
- **Set as:** set the photo as your wallpaper for the displays or as a caller ID image for a Phonebook entry.
- **Delete:** delete the photo.
- **Rename:** change the name of the photo.

- **Go to photos:** go to the **Photos** folder.
- **Share for Bluetooth:** set whether or not to prevent the photo from being accessed from other Bluetooth devices.
- **Print via:** print the selected photo by connecting the phone to a printer via USB or Bluetooth.
- **Protection:** protect the photo from being deleted.
- **Properties:** view the photo properties.

Viewing a photo



1. In Capture mode, press the left soft key and select **Go to photos**.
2. Scroll to a photo and press [].

While viewing a photo or the photo list, press <**Options**> to access the following options:


- **List:** return to the photo list.
- **View:** view the photo on the full screen.
- **Send via:** send the photo via MMS, e-mail, or Bluetooth.
- **Set as:** set the photo as your wallpaper for the displays or as a caller ID image for a Phonebook entry.

- **Edit:** decorate the photo by adding emoticons or applying a frame or special effect.
- **Delete:** delete the photo.
- **Rename:** change the name of the photo.
- **Move to favourite images:** move the photo to the **Favourite images** folder.
- **Slide show:** display all photos in turn as a slide show. Select the length of time for which each photo is displayed.
- **Share for Bluetooth:** set whether or not to prevent the photo from being accessed from other Bluetooth devices.
- **Print via:** print the selected photo by connecting the phone to a printer via USB or Bluetooth.
- **Protection:** protect the photo from being deleted.
- **Properties:** view the photo properties.

Taking a photo with the phone closed

1. Press and hold [].
2. If necessary, press [▶||] to display .
3. Adjust the image by aiming the camera lens at the subject.

To	Press
flip the image vertically	[▲].
show the mirror image	[▼].
adjust the brightness of the image	[◀◀].
zoom in	[▶▶].



5. Press [] to take a photo. The photo is automatically saved in the **Photos** folder.


Recording a video

You can record a video of what is displayed on the camera screen and save it.

Recording a video with the phone open

1. In Capture mode, press [1] to switch to Record mode.
2. Adjust the image by aiming the camera lens at the subject.
 - Press the left soft key to access camera options.

- Use the keypad to change camera settings or switch to other modes. ► p. 50
3. Press [] to start recording.
 4. Press [] or the right soft key to stop recording. The video is automatically saved in the **Videos** folder.

5. To	Press
play back the video clip	[].
use video options	the left soft key. ► p. 50
delete the video clip	[C] and then < Yes >.
return to Record mode	the right soft key.

Using camera options in Record mode

In Record mode, press the left soft key to access the following options:

- **Take a photo:** switch to Capture mode. ► p. 44
- **Effects:** change the colour tone or apply a special effect to a video.
- **Flash:** determine the flash use.

- **Timer:** set a time delay before the camera starts recording.
- **Go to videos:** go to the **Videos** folder.
- **Settings:** change the following settings for recording a video:

Recording mode: select a video recording mode.

Select **Limit for MMS** to record a video suitable for an MMS message. The video clip is saved in 3GP format.

Select **Normal** to record a video within the limit of the currently available memory.

Size: select a frame size.

Quality: select an image quality setting.

Audio rec.: record audio with a video clip.

Zoom sound: turn on or off the sound that you hear when zooming in.

Brightness sound: turn on or off the sound that you hear when adjusting the video image brightness.

Default name: change the default prefix of the video clip name.

- **Camcorder short cuts:** view the functions of the keys you can use.

Using the keypad in Record mode

You can use the keypad to customise your camera settings in Record mode:

Keys	Function
▲	Flips the image vertically.
▼	Shows the mirror image.
Left/ Right	Adjusts the brightness of the image.
Up/ Down	Zooms in or out.
1	Switches to Capture mode. ► p. 44
2	Changes the frame size.
3	Changes the image quality.
4	Changes the video recording mode.

Keys	Function
5	Changes the colour tone or applies a special effect to the video image.
6	Reduces the distortion on the image to maximise detail and sharpness.
7	Mutes or unmutes the audio.
8	Sets the timer.
9	Goes to the Videos folder.
0	Determines the flash use.


Using video options

After recording a video clip, press the left soft key to access the following options:


- **Record another:** return to Record mode.
- **Send via:** send the video clip via MMS, e-mail, or Bluetooth.
- **Delete:** delete the video clip.
- **Rename:** change the name of the video clip.
- **Go to videos:** go to the **Videos** folder.

- **Protection:** protect the video clip from being deleted.
- **Properties:** view the video clip properties.

Playing a video clip

1. In Record mode, press the left soft key and select **Go to videos**.
2. Scroll to a video clip and press [].

During playback, use the following buttons on the display:




Keys	Function
	Pauses or resumes playback.
Down	Stops playback.
Left	Skips backward through a file.
Right	Skips forward through a file.
▲ / ▼	Adjusts the volume.


After playing back the video clip, press the left soft key to access the following options:

- **Play:** play the video clip.



- **Send via:** send the video clip via MMS, e-mail, or Bluetooth.
- **Delete:** delete the video clip.
- **Rename:** change the name of the video clip.
- **Move to favourite videos:** move the video clip to the **Favourite videos** folder.
- **Share for Bluetooth:** set whether or not to prevent the video clip from being accessed from other Bluetooth devices.
- **Protection:** protect the video clip from being deleted.
- **Properties:** view the video clip properties.

Recording a video with the phone closed

1. Press and hold [].
2. If necessary, press [] to display .
3. Adjust the image by aiming the camera lens at the subject.

To	Press
flip the image vertically	[].

4. To	Press
show the mirror image	[▼].
adjust the brightness of the image	[◀◀].
zoom in	[▶▶].

5. Press [] to start recording.
6. Press [] to stop recording. The video clip is automatically saved in the **Videos** folder.

Alarm


Use this menu to set alarms to sound at specific times.

Setting an alarm

1. Select the type of alarm.
2. Press [Left] or [Right] to select **On** and press [Down].
3. Enter the time for the alarm to sound and press [Down].
4. Press [Left] or [Right] to select **AM** or **PM** in 12-hour time format and press [Down].
5. Select a repeat option.

6. Select the **Alarm tone** line and select an alarm melody.
7. Press <**Save**> and then <**Yes**> to set the alarm.

Stopping an alarm

- When an alarm sounds, press <**OK**> or any key.
- When a wake-up call alarm sounds, press <**OK**> or [] to stop the alarm.
Otherwise, press <**Snooze**> or any key to stop the alarm and cause it to sound again after 5 minutes. You can do this a maximum of five times.

Setting the alarm to ring even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone is switched on and sounds the alarm.

Calendar





The calendar feature enables you to keep track of your schedule and to-do list, and to view missed alarm events.

To access this menu, press **<Menu>** in Idle mode and select **Calendar**.

Consulting the calendar

When you enter the **Calendar** menu, the calendar in Month view appears with today's date highlighted.

The number of events for the specific day appears at the bottom of the calendar. The following icons indicate the type of event:

-  Scheduled event
-  Anniversary
-  To-do item
-  Miscellaneous

Press **<Options>** to access the following options:

- **View mode:** change the view mode of the calendar.
- **Create:** add a new event.
- **Go to:** go to the current date or enter a specific date.
- **Sort by:** sort items by the type of event.
- **Delete:** delete the event(s).
- **Missed alarm events:** view events whose alarms you have missed.

- **Memory status:** view the memory status for items stored in the phone's memory.

Creating an event

You can schedule events on the calendar.

Entering a new scheduled event

1. Scroll to a date on the calendar.
2. Press **<Options>** and select **Create** → **Schedule**.
3. Enter information or change the settings in the following entry fields:
 - **Subject:** enter the event subject.
 - **Details:** enter event details.
 - **Start date** and **Start time:** enter the starting date and time for the event.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time:** enter the ending date and time for the event.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Location:** enter information about the event location.

- **Alarm:** select to set an alarm for the event.
- **Before:** set how long before the event the alarm is to alert you.
- **Alarm tone:** select an alarm tone.
- **Repeat:** select to set the event to recur and a repeat unit.
- **Until:** if the event will recur, set the ending date.

4. Press <**Save**> to save the event.

Entering a new anniversary

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Anniversary**.
3. Enter information or change the settings in the following entry fields:
 - **Occasion:** enter information about the anniversary.
 - **Date:** enter the date.
 - **Alarm:** select to set an alarm for the anniversary.

- **Before:** set how long before the event the alarm is to alert you.
- **Alarm time:** enter the time for the alarm to sound.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Alarm tone:** select an alarm tone.
- **Repeat every year:** select to set the phone to remind you of the anniversary every year.

4. Press <**Save**> to save the event.

Entering a new Miscellaneous

1. Select a date on the calendar.
2. Press <**Options**> and select **Create** → **Miscellaneous**.
3. Enter information or change the settings in the following entry fields:
 - **Subject:** enter the title of the event.
 - **Details:** enter event details.
 - **Start date** and **Start time:** enter the starting date and time for the event.

- **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time:** enter the ending date and time for the event.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Alarm:** set an alarm for the event.
 - **Before:** set the time for the alarm.
 - **Alarm tone:** select an alarm tone.
4. Press **<Save>** to save the event.

Entering a to-do item

1. Select a date on the calendar.
2. Press **<Options>** and select **Create → To do**.
3. Enter information or change the settings in the following entry fields:
 - **To do:** enter information about the task.
 - **Start date:** enter the starting date.
 - **Due date:** enter the ending date.
 - **Priority:** select a priority level of the task.
4. Press **<Save>** to save the event.

Viewing an event

Square brackets on a calendar date indicate the following type of events scheduled for that day:

- Blue: Scheduled event
- Orange: Anniversary
- Red: To-do item
- Green: Miscellaneous

1. Select a date on the calendar to display the events for the day.
2. Select an event to view its details.

While viewing an event or the event list, press **<Options>** to access the following options:

- **View:** display the event details.
- **Edit:** edit the event.
- **Create:** add a new event.
- **Send via:** send the event via SMS, MMS, e-mail, or Bluetooth.
- **View mode:** change the view mode of the calendar.
- **Done/Undone:** mark the to-do item as done, or not.
- **Sort by:** sort items by the type of event.
- **Delete:** delete the event(s).

- **Print via bluetooth:** print the selected event by connecting the phone to a printer via Bluetooth.
- **Missed alarm events:** view events whose alarms you have missed.
- **Memory status:** view the memory status for items stored in the phone's memory.





Viewing an event in different mode

By default, the calendar appears in Month view mode. Press <**Options**> and select **View mode** to change the mode.

Day view

You can view events for the selected date. Select an event to view its details.

The following icons will be displayed according to the event's type and status:

-  Alarm set
-  Recurring event
-  Completed to-do item
-  To-do priority; its colour indicates the priority level (Red: high, Blue: normal, and Grey: low)

Week view

You can view miscellaneous and scheduled events for the selected week.

A cell on the timetable indicates the presence of event information. Select the cell that contains the event you want.

Viewing a missed alarm event

When you are unable to acknowledge an alarm, the phone displays a missed alarm notification.

- Press <**View**> to view the corresponding event.
- Press <**Exit**>.

Accessing missed alarm events

1. Press <**Options**> and select **Missed alarm events**.
2. Select an event.

Using missed alarm options

From the event list, press <**Options**> to access the following options:

- **View:** display the event details.
- **Delete:** delete the event.

- **Delete all:** delete all events.

Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

1. Enter the first number.

Press the left soft key to insert a decimal point or brackets.

☒ Press [\blacktriangle] or [\blacktriangledown] to move the cursor.

2. Select the operation for your calculation by pressing one of the Navigation keys according to the illustration on the display.
3. Enter the second number.
4. Press [\otimes] to view the result.

Record Audio

Use this menu to record voice memos. A voice memo can be up to one hour long.

Recording a voice memo

1. Press [\otimes] to start recording.

2. Speak into the microphone.


Press [\otimes] to pause or resume the recording.

3. When you finish, press **<Stop>**. The voice memo is saved automatically.
4. Press [Up] to record another voice memo, or press **<Options>** to access the following options:
 - **Play:** play back your voice memo.
 - **Send via:** send the voice memo via MMS, e-mail, or Bluetooth.
 - **Set as:** set the voice memo as your ring tone, alarm melody, or a caller alert melody for a Phonebook entry.
 - **Delete:** delete the voice memo.
 - **Rename:** change the name of the voice memo.
 - **Move to favourite sounds:** move the voice memo to the **Favourite sounds** folder.
 - **Share for Bluetooth:** set whether or not to prevent this voice memo from being accessed by other Bluetooth devices.
 - **Protection:** protect the voice memo from being deleted.
 - **Properties:** view the voice memo properties.

Playing a voice memo

1. From the Voice record screen, press <**Options**> and select **Go to voice list**.
2. Select a voice memo. The memo plays.

During playback, use the following keys:

Keys	Function
	Pauses or resumes playback.
Left	Moves backward.
Right	Moves forward.
Up	Returns to Record mode.
Down	Stops playback.
▲ / ▼	Adjusts the volume.

Using voice memo options

From the Voice record screen, press <**Options**> to access the following options:

- **Record**: record a new voice memo.

- **Settings**: configure the following settings for a voice memo:

Recording time: select the recording time.

Volume: select the voice memo volume to be used during playback.

Default name: specify a default saving prefix for the voice memo.

- **Go to voice list**: go to the list of voice memos you have recorded.

Unit Conversion

Use this menu for common conversions, such as currency and temperature.

Performing a conversion

1. Select the convertor type you want.
2. Press [Left] or [Right] to select the original unit and press [Down].
3. Enter the value to be converted.
 - Press [\times] to insert a decimal point.
 - Press [#] to change the temperature to above zero (+) or below zero (-).

4. Press [Down].
5. Press [Left] or [Right] to select the unit you want to convert to.

The equivalent value for the amount you entered displays.

Using convertor options


Press <**Options**> to access the following options:

- **Clear:** clear the current values.
- **Reverse:** reverse the conversion.
- **Currency rates:** access and edit the currency rate list.


Timer

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

Starting the timer



1. Press <**Set**>.
2. Enter the length of time you want to count down and press <**OK**>.
3. Press [>] to start counting down.

Stopping the timer

- Press <**Back**> or any key when the timer rings.
- Press [>] on the Timer screen to stop the timer before it rings.

Stopwatch

Use this menu to measure elapsed time. The precision of the stopwatch is one one-hundredth of a second. The maximum measurement time is 10 hours.


1. Press [>] to start the stopwatch.
2. Press [>] to check an interval. You can repeat this step for a total of 4 intervals.
3. To reset the stopwatch, press <**Reset**>.

World Time


Use this menu to set your local time zone and find out what time it is in another part of the world.

Setting your local time zone


1. From the world map, press [Left] or [Right] to select the city that corresponds to your home time zone. As the time line moves, the time and date of the given zone display.

2. Press [] to save the time zone.

Viewing and setting a foreign time zone

1. From the world map, press [Down].
2. Press [Left] or [Right] to select the foreign time zone you want.
3. Press [] to save the time zone.

Applying Daylight Savings Time (DST)

1. From the world map, press <Options> and select **Set daylight saving time**.
2. Press [] to check the time zone(s) you want.
3. Press <Save>.

PIM Sync

Address Book (Menu 8)

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.

To access this menu, press <Menu> in Idle mode and select **Phonebook**.


Contact list (Menu 8.1)

Use this menu to search for numbers in Phonebook.



Press <Contacts> in Idle mode to quickly access this menu.

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Select the name you want from the list.
3. Press [] to dial the number, or <Options> to access Phonebook options.

Using Phonebook options

While viewing the contact details, press <**Options**> to access the following options:

- **Edit:** edit the contact information.
- **Send message:** send an SMS, MMS, or e-mail message.
- **Copy:** copy the selected number to the phone's memory, the SIM card, or the FDN list.
- **Send via:** send the contact via SMS, MMS, e-mail, or Bluetooth.
- **Delete:** delete the selected contact.
- **Print via bluetooth:** print the contact information by connecting the phone to a printer via Bluetooth.

While viewing the contact list, press <**Options**> to access the following options:

- **View:** display details about the contact.
- **Send message:** send an SMS, MMS, or e-mail message.

- **Add new contact:** add a new contact to Phonebook.
- **Delete:** delete the selected contact or all contacts.
- **Language select:** select a language to be used in the text input mode.

Add new contact *(Menu 8.2)*

Use this menu to add a new contact to Phonebook.

Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact.
 - **Last name/First name:** assign a name.
 - **Mobile/Home/Office/Fax/Other:** add a number in any category.
 - **Email:** assign an e-mail address.
 - **Graphic ID:** assign an image as a caller ID image to alert you to a call from the person.


- **Alert:** assign a ringer melody to alert you to a call from the person.

☒ The settings specified in **Graphic ID** and **Alert** are given priority over group settings.

- **Group:** assign the person to a caller group.
- **Notes:** add a memo about the person.

3. Press [] to save the contact.

Storing a number on the SIM card

1. Select **SIM**.
2. Enter a name and a phone number.
3. If necessary, change the location number.
4. Press [] to save the contact.

Groups *(Menu 8.3)*

Use this menu to organise your contacts in caller groups.

Creating a new caller group

1. Press <**Options**> and select **Add**.
2. Enter a name for the group.

3. Select the **Graphic ID** line to assign an image.
4. Select the **Alert** line to assign a ringer melody.
5. Press <**Save**> to save the group.

Adding members to a caller group

1. Select a group.
2. Press <**Add**>. The list of contacts stored in your phone's memory is displayed.
3. Select a contact you want to add to the selected group.
4. To add more members, press <**Options**> and select **Add** → a contact. Repeat this as desired.

Managing caller groups

While viewing the group list, press <**Options**> to access the following options:

- **View:** display the members of the selected group.
- **Add:** add a new group.
- **Edit:** edit the properties of the selected group.
- **Send message:** send an SMS, MMS, or e-mail message to the member(s) you want.

- **Delete:** delete the selected group. Group members, however, are not deleted from Phonebook.

Speed dial *(Menu 8.4)*

Use this menu to assign a speed dial number (2 to 9) for eight of your most frequently called numbers.

Assigning speed dial numbers

1. Select a key location from **2** to **9**. [**1**] is reserved for your voice mail server.
2. Select a contact you want.
3. If the contact has more than one number, select the number you want.

Managing speed dial entries

From the Speed dial screen, press <**Options**> to access the following options:

- **Add:** assign a number to an unassigned key. You can select a contact from Phonebook or the FDN list.
- **View:** display the number assigned to the key.

- **Change:** assign a different number to the assigned key.
- **Remove:** clear the speed dial setting.

Dialling speed dial entries

Press and hold the appropriate key in Idle mode.

My name card *(Menu 8.5)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a phone number in the phone's memory. ► p. 61

Using name card options

After saving your name card, press <**Options**> to access the following options:

- **Edit:** edit the name card.
- **Send via:** send the name card via SMS, MMS, e-mail, or Bluetooth.

- **Exchange namecard:** exchange name cards with another person via Bluetooth.
- **Remove:** delete the name card.
- **Print via bluetooth:** print the name card by connecting the phone to a printer via Bluetooth.

Copy All (Menu 8.6)


Own number (Menu 8.7)

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers in your SIM card.

Settings (Menu 8.8)

Use this menu to manage Phonebook.

- **Default saving:** select a default memory location to save contacts.
If you select **Ask on saving**, the phone will ask you to select a memory location when saving a number.

- **Copy all to phone:** copy all of the contacts stored in the SIM card to the phone's memory.
- **Sort by contacts:** sort your contacts by the first name or last name.
- **Delete all:** delete all of the contacts from your phone's memory, your SIM card, or the FDN list.
 1. Press [] to check the location(s) to be cleared.
If you select **FDN**, you need to enter the PIN2 and password.
 2. Press <**Delete**> and then <**Yes**>.
 3. Enter the phone password and press <**OK**>.



The password is preset to **00000000**. You can change this password. ► p. 72

- **Memory status:** display the number of contacts you have stored in Phonebook.

Memory Status (Menu 8.9)

You can check the total amount of memory for media items and the amount of memory currently in use in each media box.

Settings *(Menu 9)*

Use this menu to customise your phone settings. You can also reset the settings to their default values.

To access this menu, press <**Menu**> in Idle mode and select **Settings**.

Time & Date *(Menu 9.1)*

Use this menu to set the current time and date on your phone. Before setting the time and date, specify your time zone in the **World time** menu. ► p. 59

- **Set time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select the time format.
- **Set date:** enter the current date.
- **Date format:** select the date format.

Profiles *(Menu 9.2)*

Phone Settings *(Menu 9.3)*

Many different features of your phone's system can be customised to suit your preferences.

Language *(Menu 9.3.1)*

Use this menu to select one of several languages for the display text.

Greeting message *(Menu 9.3.2)*

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

Short cut *(Menu 9.3.3)*

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode. Use this menu to assign a shortcut menu to a key.

Assigning a menu to a key

1. Select a key to be used as a shortcut key.
2. Press <**Options**> and select **Change**.
3. Scroll to a menu to be assigned to the key.
4. Press <**Save**>.





Using shortcut options

Press <**Options**> to access the following options:

- **Change**: assign or change a shortcut menu.
- **Remove**: deactivate the shortcut assignment.
- **Remove all**: deactivate all shortcut assignments.

Extra settings (Menu 9.3.4)

You can turn the automatic redialling or answering feature on or off, and lock the exposed keys.

- **Auto redial**: set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer**: answer an incoming call by pressing any key, except [, <**Reject**>, and [ / ].
When this option is not selected, you must press [] or <**Accept**> to answer a call.
- **Voice clarity**: increase the microphone's sensitivity to allow the other person on the phone to hear your voice clearly, even though you may be whispering.

- **Active folder**: answer an incoming call by opening the phone.
- **Cover keylock**: lock the exposed keys to keep accidental presses from affecting performance while listening to the radio or playing music files.

Display Settings (Menu 9.4)

Use this menu to change settings for the display and light.

Wallpaper (Menu 9.4.1)

You can set up the idle screen on both displays.

- **Main display**: select an image to be displayed on the main display.
- **Cover display**: select an image or enter text to be displayed on the external display.

Text display (Menu 9.4.2)

You can customise the text appearance for the idle screen.

- **Text position**: select a text position on the display. If you don't want to display text in Idle mode, select **Off**.

- **Text style:** select a text style.
- **Text colour:** select a text colour.

Skin (Menu 9.3.3)

You can select a skin colour for Menu mode.

LCD brightness (Menu 9.4.4)

You can adjust the brightness of the display for varying lighting conditions.

Backlight (Menu 9.4.5)

You can select the length of time the backlight stays on and the display is on in Dim mode, in which the backlight is off.

- **Main LCD on:** select the length of time the backlight is on.
- **Main LCD dim:** select the length of time the display is in Dim mode after the backlight turns off. After a specified time, the display turns off.
- **Show cover indicators:** set whether or not the cover display icons are shown on the external display.

Call (Menu 9.5)

Use this menu to customise various sound settings.

Incoming call

Use this menu to select a volume and alert type for incoming calls.

- **Ring tone:** select a ring tone for the call ringer.
- **Volume:** select a ringer volume.
- **Alert type:** specify how you are to be informed of incoming calls.

Melody: the phone rings using the selected ring tone.

Vibration: the phone vibrates but not rings.

Vibration then melody: the phone vibrates three times and then starts ringing.

Keypad tone

Use this menu to select the tone that the phone sounds when you press a key.



You can adjust the keypad tone volume using [▲/▼] in Idle mode.

Message tone

Use this menu to set up the ringer for incoming messages and e-mails.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed of any incoming messages.
- **Repetition:** specify how often the phone informs you of a new message.

Power on/off

Use this menu to select the melody that the phone sounds when it is switched on or off.

Folder tone

Use this menu to select the tone that the phone sounds when you open or close the phone.

Quiet mode

Use this menu to set how the phone acts to alert you to a specific event in Quiet mode, instead of making sounds.

- **Vibration:** set the phone to vibrate.

- **Mute:** mute all sound settings.

Extra tones

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when it is connected to the system.
- **Alerts on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tones:** set the phone to beep when a pop-up window appears to indicate that your phone has completed an operation or that an error occurs.

Connectivity (Menu 9.6)

Use this menu to activate the Bluetooth feature.

- ☒ • You cannot use the Bluetooth feature while using multimedia features such as voice recorder, camera, and MP3 player, or vice versa.
- Some devices may not be compatible with your phone.

Using the Bluetooth feature, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 meters. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.

Setting up the Bluetooth feature

The **Bluetooth** menu provides the following options:

- **Activation:** activate or deactivate the Bluetooth feature.







- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to search for your phone.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth services:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the Bluetooth setting options, select **My devices**.
2. Select **Search new device**.

If you have searched for devices before, the phone displays **More devices** along with the devices you have searched for previously. To search for new devices, select **More devices**.

After searching, a list of devices to which you can connect displays. The following icons indicate the kind of device:

-  Hands-free or headset
-  Mobile phone
-  Computer
-  PDA
-  Printer
-  Unknown device

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
- Blue for paired devices
- Red for devices that are currently connected to your phone

3. Select a device.
4. Enter a Bluetooth PIN code and press **<OK>**. This code is used just once and you don't need to memorise it.

When the owner of the other device enters the same code, pairing is complete.

- ✓ Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has a code, you must enter it.

Using device options

From the device list, press **<Options>** to access the following options:

- ✓ Options may vary depending on the paired device.
- **Connect:** connect to the currently selected device.
- **Disconnect:** end the connection with the device.
- **Browse files:** search for data from the device and import data directly to your phone.
- **Service list:** display available Bluetooth services for the selected device.
- **Rename:** rename the paired device.
- **Authorize device/Unauthorize device:** determine whether or not the phone asks you to permit connection when the device tries to connect to your phone.
- **Delete:** remove the selected device or all displayed devices from the device list.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want and press **<Options>**.
4. Select **Send via → Bluetooth**.
The phone searches for devices within range and displays a list of available devices.
5. Select a device.
6. If necessary, enter the Bluetooth PIN needed for pairing and press **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active.

If an unauthorised Bluetooth device sends data to your phone, the phone displays a confirmation message. To receive data, press **<Yes>**.

Software Update (Menu 9.7)

Application Settings (Menu 9.8)

Security (Menu 9.9)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- ☒ If you enter an incorrect PIN /PIN 2 three times in succession, the SIM card is blocked. To unblock it you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

PIN check (Menu 9.9.1)

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN (Menu 9.9.2)

Use this menu to change your PIN. The PIN check feature must be enabled to use this feature.

Phone lock (Menu 9.9.3)

This feature locks the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.


The password is preset to **00000000**. To change the password, use the **Change password** menu.

Change password (Menu 9.9.4)

Use this menu to change your phone password. The password is preset to **00000000**.

Privacy (Menu 9.9.5)

Use this menu to lock your media contents, including MMS messages, e-mails, images, videos, music files, and sounds.

1. Press [

To access a locked item, you need to enter the phone password. The password is preset to **00000000**.

SIM lock (Menu 9.9.6)

The SIM lock feature allows your phone to work only with the current SIM by assigning a SIM lock code. You

must enter the SIM lock code to use a different SIM card.

FDN mode (Menu 9.9.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers specified in the FDN list. ► p. 61

To activate this feature, you must enter your PIN2.

Change PIN2 (Menu 9.9.8)


If supported by your SIM card, the change PIN2 feature changes your current PIN2.


Memory status (Menu 9.10)

Use this menu to check the amount of memory being used for storing data in **Messages**, **File manager**, **Calendar**, **Phonebook**, and **Java world**. You can also check **Shared memory** for MMS, Email, and File manager.

Reset Settings *(Menu 9.11)*

Use this menu to reset the phone settings, display settings, and sound settings individually. You can also reset all of the settings in your phone at the same time.

1. Press [] to check the setting category(ies) to be reset.
2. Press <**Reset**> to reset the marked items.
3. Press <**Yes**> to confirm the reset.
4. Enter the phone password and press <**OK**>.I

 The password is preset to **00000000**. To change the password, use the **Change password** menu. ► p. 72

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM card"

- Be sure that the SIM card is correctly installed.

"Phone lock"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


"Enter PUK"

- The PIN code has been entered incorrectly three times in succession, and the phone is now blocked. Enter the PUK supplied by your service provider.


"No service," "Network failure," or "Not done" displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialed

- Be sure that you have pressed [].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([] pressed for more than one second.)
- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.



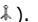
Your correspondent cannot hear you speaking

- Be sure that you have switched on the microphone.
- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and "Battery low" flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (). The number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialed when you re-call a Phonebook entry

- Use the Contact list feature to ensure the number has been stored correctly.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone has reported to the FCC are head xxxxW/Kg,
Body-worn: xxxxW/Kg.

For Body-worn operations, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum 1.8 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3LSGHZX20. Sometimes it may be necessary to remove then battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless

phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC’s compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- "Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- "National Institute for Occupational Safety and Health
- "Environmental Protection Agency
- "Federal Communications Commission
- "Occupational Safety and Health Administration
- "National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF

exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory

animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts

to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a

headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For

example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they

are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated

claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a

person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>

- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

1. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
2. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
3. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
4. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
5. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
6. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
7. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
8. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.

- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution

areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be

possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

- ☑ This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be

possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the phone's receiver.

- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.