

QUICK START GUIDE

SM-C200



 
Printed in Korea
GH68-45834A Rev.1.0
English (EU), 02/2016

SAMSUNG

About the Samsung Gear 360

Use the Samsung Gear 360 to record 360-degree panoramic videos and take 360-degree panoramic photos. Use your mobile device with the Samsung Gear 360 to control it remotely, view videos or images, and more.

Device layout

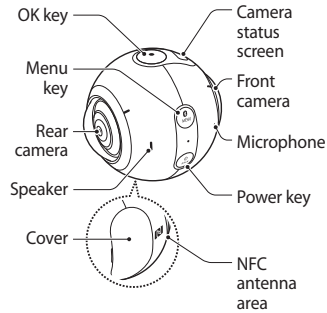


- To turn on or off the Samsung Gear 360: Press and hold the Power key.

Installing a memory card

A memory card must be inserted to record videos or take photos. Open the cover and insert a memory card.

 - Be careful not to damage your fingernails when you remove the cover.

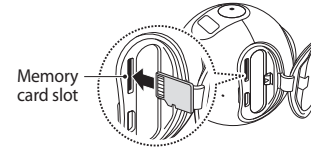


- Memory cards are sold separately.
- The Samsung Gear 360 accepts memory cards with maximum capacities of 128 GB.

Charging the battery

Fully charge the battery before using the Samsung Gear 360 for the first time.

 
- Open the cover.
- Insert the battery with the battery's gold-coloured contacts properly aligned with the Samsung Gear 360's contacts.

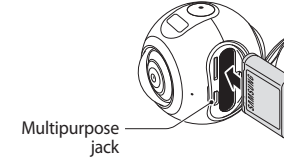

- Plug the small end of the charger into the multipurpose jack of the Samsung Gear 360, and plug the large end of the charger into an electric socket.
- Chargers are sold separately.
- The charger should remain close to the electric socket and easily accessible while charging.
- After fully charging, disconnect the Samsung Gear 360 from the charger. First unplug the charger from the Samsung Gear 360, and then unplug it from the electric socket.
- Close the cover.

Mounting the Samsung Gear 360 onto the tripod

 Insert the tripod into the Samsung Gear 360's tripod socket and twist it until it is fixed to the Samsung Gear 360.

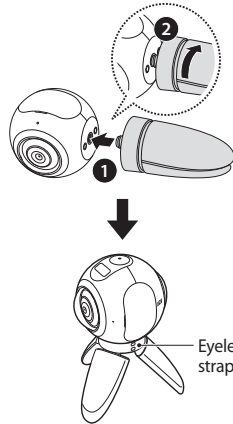

- Some content may differ from your device depending on the region, manufacturer, or software version, and is subject to change without prior notice.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

Connecting the Samsung Gear 360 and a mobile device

To connect your Samsung Gear 360 and mobile device, install the Samsung Gear 360 app on the mobile device.

Launch **Galaxy Apps** or **Play Store** to download it. Or, visit apps.samsung.com/gear360 to download it.

- If the mobile device supports the NFC feature, touch the NFC antenna area of the Samsung Gear 360 to your mobile device's NFC antenna area. Before using the NFC feature, activate it on your mobile device. On your mobile device, follow the on-screen instructions to complete the setup.

Samsung Gear 360

- Turn on the Samsung Gear 360.

Mobile device

- Tap **Samsung Gear 360** on the Apps screen.

- Tap **CONNECT TO GEAR 360**. The mobile device will activate the Bluetooth feature and search the devices to pair with.
- Follow the on-screen instructions to complete the connection.
- Connection methods may vary depending on your mobile device and software version.
- Depending on your mobile device, it may not be compatible with the Samsung Gear 360 or may not support some features. Visit www.samsung.com to see a list of compatible mobile devices.

Recording videos and taking photos

You can record videos and take photos remotely using your mobile device's viewfinder.

Also, you can use the Samsung Gear 360 to record videos and take photos without connecting to any other devices.

 Captured videos or images will be saved to your memory card.

Using the mobile device

- 1 Tap **Samsung Gear 360** on the Apps screen of the mobile device.

12

- 2 Tap .
The viewfinder will appear.
- 3 Tap  or  to record a video or take a photo.
To change shooting modes, tap **MODE**.

Using the Samsung Gear 360

- 1 Press the Menu key to select which mode you want to use and press the OK key.
- 2 Press the OK key to record a video or take a photo.
To stop recording a video, press the OK key.

13

Viewing videos or images

You can view videos or images on your mobile device.

- 1 Tap **Samsung Gear 360** on the Apps screen of the mobile device.
- 2 Select a video or an image.
- 3 Tap  or .
Drag your finger around on the video or image to view it from other angles.

 You can view captured videos or images in the **Mobile device** tab or the **Gear 360** tab.

14

Editing videos or images

You can edit videos or images using the Gear 360 ActionDirector program on your computer.

For more information, refer to the Gear 360 ActionDirector's help information.

-  You can download the Gear 360 ActionDirector program from www.samsung.com.
- The sticker provided with the Samsung Gear 360 contains the product key for installing the Gear 360 ActionDirector program.
- If you lose the product key, the Gear 360 ActionDirector program cannot be used. The product key can be replaced for a fee.

15

Sharing videos or images

You can share your videos or images with others.

Tap **Samsung Gear 360** on the Apps screen of the mobile device.

Select the videos or images you want to share, tap **Share**, and then select a sharing method.

 You can also share images taken from the Google street view app.

16

Accessing more information

For more information, open the Apps screen of the mobile device, tap **Samsung Gear 360** → **MORE** → **Settings** → **User manual**.

Visit www.samsung.com to view device information, the user manual, and more.

-  The method for accessing the user manual from the Samsung Gear 360 app may vary depending on your mobile device.
- The user manual may not be available depending on the web browser.

17

Safety information

Read all safety information before using the device to ensure safe and proper use. To view the full safety information, refer to the Samsung website.

 To view more information about device and battery disposal, open the Apps screen of the mobile device, tap **Samsung Gear 360** → **MORE** → **Settings** → **User manual**.

Follow the warning information provided below to prevent incidents such as fire or explosion

- If you are not using the device for an extended period, remove the battery.
- Do not expose the device to physical impact or damage.
- Use manufacturer-approved batteries, accessories, and supplies.
- Prevent the multipurpose jack and battery terminals from contacting conductive elements, such as metal or liquids.

18

- Do not touch the charger or the device with wet hands while the device is charging.
- If any part of the device is cracked or broken, stop using the device immediately and take it to a Samsung Service Centre.

Follow the warnings below to prevent injury to people or damage to the device

- Do not allow children or animals to chew or suck the device.
- Do not insert the device or supplied accessories into the eyes, ears, or mouth.
- The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers.

19

- Keep your device dry.
- Do not use your device outdoor during a thunderstorm.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.

20

Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

This product is RoHS compliant.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

For information on Samsung's environmental commitments and product-specific regulatory obligations, e.g. REACH, WEEE, Batteries, visit samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html

21

SAMSUNG

Declaration of Conformity

C E 0678

Product details

For the following
Product :
Model(s) : SM-C200

Declaration & Applicable standards

We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of:

SAFETY
SAR
EMC

RADIO

and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment by application of EN 50581:2012.

Representative in the EU

Samsung Electronics Euro QA Lab.
Blackbushe Business Park
Saxony Way, Yateley, Hampshire
GU46 6GG, UK*

2015.XX.XX
(Place and date of issue)

Stephen Colclough / EU Representative
(Name and signature of authorised person)

* This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.



FCC Warning Statement

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Part 15.105 (B)

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

IC Warning Statement

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.