



# User manual

## SM-N915R4

This device is capable of operating in 802.11a/n/ac mode. For 802.11a/n/ac devices operating in the frequency range of 5.15 – 5.25 GHz, they are restricted for indoor operations to reduce any potential harmful interference for Mobile Satellite Services (MSS) in the US. WiFi Access Points that are capable of allowing your device to operate in 802.11a/n/ac mode (5.15 – 5.25 GHz band) are optimized for indoor use only. If your WiFi network is capable of operating in this mode, please restrict your WiFi use indoors to not violate federal regulations to protect Mobile Satellite Services.

# Table of Contents

---

## **DEVICE FUNCTIONS..... 4**

## **SETTING UP YOUR DEVICE..... 6**

Turning Your Device On and Off..... 10

Locking and Unlocking Screen..... 10

Initial Device Configuration..... 10

Samsung Smart Switch ..... 10

## **S PEN ..... 11**

Using the S Pen..... 12

Using Handwriting ..... 13

## **EDGE SCREEN FEATURES ..... 14**

## **CALLING FEATURES ..... 15**

Making a Call ..... 15

Answering a Call ..... 16

Rejecting a Call..... 16

Ending a Call ..... 16

<b>VOICEMAIL.....</b>	<b>17</b>
Set Up Voicemail.....	17
Access Voicemail.....	17
<b>CONTACTS .....</b>	<b>18</b>
Creating a New Contact.....	18
Adding a Number to an Existing Contact .....	18
Deleting an Existing Contact.....	19
<b>MESSAGING.....</b>	<b>20</b>
Create and Send a Message.....	20
<b>CUSTOMIZE YOUR DEVICE.....</b>	<b>21</b>
Volume.....	21
Widgets.....	21
Wallpaper .....	22
Notification Panel.....	23
<b>CONNECTIONS .....</b>	<b>24</b>
Connecting to Bluetooth.....	24
Connecting to Wi-Fi .....	24

## **APPS & MORE..... 25**

Installing Apps .....	25
Setting Up Your Email Accounts .....	25
Internet .....	26
Multi Window .....	27
Camera.....	28
Lock Screen .....	29

# Device Functions

---



\*Recent Apps and Back illuminate when navigating through the device.



# Setting Up Your Device

---

## Step 1. Remove the Back Cover

- Locate the cover release latch and carefully remove the cover off the device.



## Step 2. Install the SIM Card

- Slide the SIM card into the SIM card slot until it is secured into place.





 
### Step 3. Install an optional microSD card

- Slide the memory card into the card slot until it is secured into place.



### Step 4. Insert the Battery

- Insert the battery, making sure to align the gold contacts. Press down gently to secure the battery.

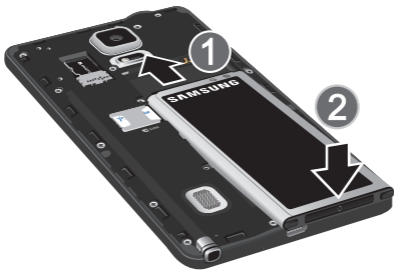

## Step 5. Replace the Back Cover

- Position the back cover over the battery compartment and press down until you hear a click.

## Step 6. Charging the Device

- Before turning on your device, charge it fully. Be sure to use the charger that came with the device.



## Turning Your Device On and Off

- To turn ON, press and hold the **Power/Lock** key.
- To turn OFF, press and hold **Power/Lock** key and follow the prompts.

## Locking and Unlocking Screen

- To Lock, press the **Power/Lock** key.
- To Unlock, press the **Power/Lock** key then swipe your finger across the screen.

## Initial Device Configuration

1. Select a language and tap **Start** or tap **Accessibility** to access options for interacting with your device.
2. Follow the on-screen instructions to complete the set up process.

**NOTE:** If you do not set up or log into your Google account during this process, you can later access Gmail from within the Applications page.

## Samsung Smart Switch

Easily move over your photos, videos, music, apps and more with Samsung Smart Switch™. Get started today at [samsungsmartswitch.com](http://samsungsmartswitch.com)

# S Pen

---

The S Pen™ enables fast, accurate, and precise input providing the most natural writing experience. By using the S Pen button, you can minimize having to switch between touch and pen input.



## To remove the S Pen:

 
- Pull the end of the S Pen from the device.



## Using the S Pen


Effectively express yourself. Write/Draw directly into an email, or the calendar, annotate Word, Excel, PowerPoint, and PDF documents, capture your ideas in S Note, write a note on the back of the picture.

**Air command:** Once removed from its slot, S Pen shows an on-screen Air command button toolbar that allows you to quickly activate frequently used applications or actions.

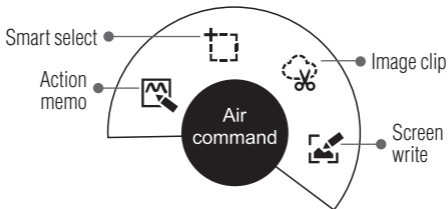

- **Action memo:** Quickly link short notes to applications like Phone, Contacts, Messages and so on.
- **Smart select:** Instantly outline and crop anything on the screen and freely edit or share with others via several applications.
- **Image clip:** Draw a shape on the screen to copy it, and then share it or save it in Scrapbook.
- **Screen write:** Capture a screen image and write or draw on it.


## Using Handwriting

 1. Remove the S Pen from its slot.
2. Launch an application that contains an input area (ex: Messages, Calculator, Dialer Keypad, etc.)
3. Hover the S Pen over a input area until  **Handwriting Input** appears, then quickly tap the icon to reveal a new handwriting area. Use this area to enter your input (text or numbers) and then have the device recognize that information.

# Edge Screen Features


---

The Edge screen delivers always-on access to email, Internet, apps, notifications, news and more—without interrupting the main screen.

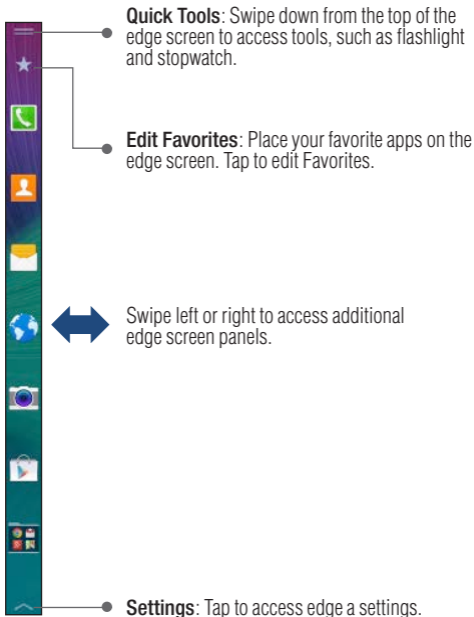

# Calling Features

## Making a Call


- From the Home screen, tap  **Phone**.




\*From the contact list, make a call by sliding your finger across the contact name from left to right.




## Answering a Call

- At the incoming call screen, touch and slide  **Answer** in any direction to answer the call.

## Rejecting a Call

- At the incoming call screen, touch and slide  **Reject** in any direction to route the call to your voicemail system.



## Ending a Call

- While on a call, tap  **End Call**.



# Voicemail

---

## Set Up Voicemail

1. From the Home screen, tap  **Phone** and then touch and hold  until the device dials your voicemail.
2. Follow the prompts in the new user tutorial to set up your mail box.

## Access Voicemail


1. From the Home screen, tap  **Phone** and then touch and hold . After connection, you will hear your voice greeting.
2. When connected, follow the voice prompts from your voicemail center.

**NOTE:** Your voice mailbox is not password protected until you create a password by following the setup tutorial.





# Contacts

---



## Creating a New Contact

1. From the Home screen, tap  **Phone**.
2. Enter a phone number using the on-screen dialpad.
3. Tap **Add to contacts** → **Create contact** or select the Contact entry from the on-screen list.
4. Choose a save location for the new contact. You can save to the **Device**, **Microsoft Exchange ActiveSync**, **Google**, or **Samsung account**.
5. Enter the desired information into the appropriate fields.
6. Tap **Save** to store the new entry.

## Adding a Number to an Existing Contact

1. From the Home screen, tap  **Contacts**.
2. Tap a contact name from the list and tap  **Edit**.
3. Tap **+** within the phone number area and enter a new phone number.
  - If you make a mistake while dialing, tap  to clear the last digit. Touch and hold  to clear the entire sequence.
4. Tap **Save** to complete and store the new entry.






## Deleting an Existing Contact

1. From the Home screen, tap  **Contacts**.
2. Touch and hold a contact name from the list and select  → **Delete**.

# Messaging

---

## Create and Send a Message

1. From the Home screen, tap  **Messages** →  **Tap to compose message**.
2. Enter either the recipient's phone number or email address.  
**NOTE:** If adding a recipient from Logs, Contacts, or Groups, tap the contact to place a check mark alongside the entry and tap **Done**.
3. Tap the **Enter message** field and use the on-screen keypad to enter a message.
4. Add more recipients by tapping the recipient field.
5. Tap  **Attach** to insert various file types to your message.
6. Tap  **Add emoticons** to choose an available emoticon.
7. Select the file and complete the on-screen instructions to insert it to the current message.
8. Review your message and tap  **Send**.

# Customize Your Device

---

## Volume

Press the **Volume** key (on the left side of your device) up or down to increase or decrease volume while on a call, listening to music or video playback.

## Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

1. From a Home screen, pinch the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen and release it.

## Remove a Widget

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to the Remove icon and release it.

**NOTE:** Removing a widget does not delete the widget, it just removes the widget from the Home screen.

## Wallpaper

 
Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture, or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers**, and then choose **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Tap a wallpaper to see a sample, and then tap **Set wallpaper**.

## Notification Panel

Customize which quick setting buttons appear at the top of the notification panel.

- From a Home screen, tap  **Apps** →  **Settings** →  **Notification panel**.

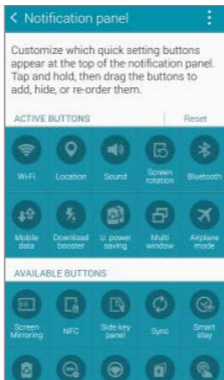












# Connections

---

## Connecting to Bluetooth

1. From the Home screen, tap  **Apps** →  **Settings** →  **Bluetooth**.
2. Slide the **Bluetooth** slider to the right to turn it on (  ).
3. If necessary, tap **Scan**. Review the list of discovered in-range Bluetooth® devices.
4. Tap a device from the list to initiate pairing.
5. Enter the passkey/PIN code, if needed, and tap **OK**.
6. The external device will then have to also accept the connection and enter your device's PIN code. Once successfully paired to an external device,  appears within the Status area.

## Connecting to Wi-Fi



1. From the Home screen, tap  **Apps** →  **Settings** →  **Wi-Fi**.
2. Slide the **Wi-Fi** slider to the right to turn it on (  ).
3. Tap **Scan** to display a list of Wi-Fi networks in-range.
4. Tap a network to connect and enter the password if prompted. When connected you will see  in the status bar.

# Apps & More

---



## Installing Apps

Google Play™ is music, books, magazines, movies, TV shows, and apps, available anywhere you go.

1. From the Home screen, tap  **Apps** →  (the **Google Play store app**).
2. If prompted, follow the on-screen prompts to add an existing Google™ account.

## Setting Up Your Email Accounts

Check email on the go with popular Internet-based email accounts, including Gmail™, Yahoo!® Mail, Hotmail®, etc.

1. From the Home screen, tap  **Apps** →  **Email**.
2. Enter your email address and password into the appropriate fields and tap **Next**.
3. At the Account options screen, select the frequency which the device should check for new email on the server and tap **Next**.
4. At the Set up email screen, name the account and enter a screen name to identify yourself on this account.
5. Tap **Done** to store the new account.

## Internet

Take the Internet on the go. You can reach the latest news, get the weather and follow your stocks.

- From the Home screen,  **Apps** →  **Internet**.

### To enter a URL:

- From the homepage tap the URL field at the top of the screen, enter the URL and tap .

### To add a new window:

1. From your browser window, tap  **Window** → **+ New tab**. A new browser window displays.


**NOTE:** The number of currently open windows is displayed at the bottom of the Windows screen.

2. Scroll across the screen to view the currently active windows and tap an entry to launch the selected Internet window.

# Multi Window

Run multiple applications on the current screen at the same time.

**NOTE:** Only applications found within the Multi window panel can be active atop another current application on the screen.

 
1. Activate the Multi Window feature:
  - Using two fingers, touch and drag the Status bar downwards to display additional functions.
  - Tap the **Multi window** entry to activate the feature.
2. To display the Multi window tab, press and hold the  **Back** key.



## Camera

This device gives you the magic of professional digital photography. Going pro has never been this easy or this fun.

- From the Home screen, tap  **Camera**.

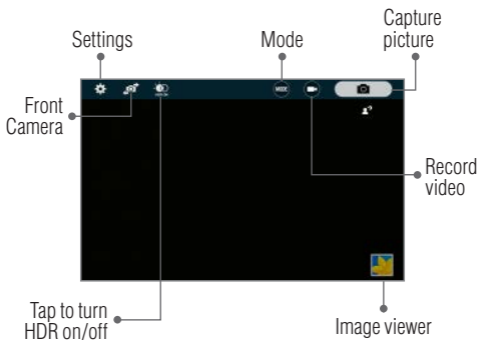

## Lock Screen

Configure the device's security parameters.

- From the Home screen, tap  **Apps** →  **Settings** →  **Lock screen** → **Screen lock**.

The Screen lock setting allows to choose from a variety of locking features.

