

Confidential

DRAFT

# User manual

[SM-R720]

# QUICK START GUIDE

SAMSUNG

Printed in Korea  
GH68-xxxx Rev.1.0  
English (CA), 08/2015


## Device layout

To turn on the Gear, press and hold the Power key for a few seconds.



## Charging the battery

Before using the device for the first time, you must charge the battery.

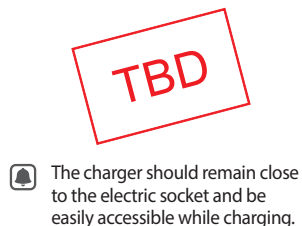

## Connecting the Gear to a mobile device

For the best results, connect your Gear to a mobile device with the Samsung Gear app installed on it.

- 1 Turn on the Gear.
- 2 Launch **Samsung Gear**.
- 3 Tap **CONNECT GEAR**.
- 4 When the **Bluetooth pairing request** window appears, tap **OK**.
- 5 Read the on-screen instructions and approve the connection.
- 6 Follow the on-screen instructions to complete the connection.

- Connection methods may vary depending on your device and software version.
- Supported mobile devices may vary depending on your region, service provider, and device manufacturer. Visit [www.samsung.com](http://www.samsung.com) for more information.

## Waking up the Gear and activating sleep mode

While you are wearing the Gear, it recognises when you raise your wrist and displays the Clock screen.

To activate sleep mode, cover the screen with your palm.



## Using the control wheel

### Scrolling through the screens

Rotate the control wheel to view other screens or select menu items.



## Adjusting the input value

Rotate the control wheel to adjust the volume or brightness. You can also use the control wheel to enter a specific value while using S Health or setting an alarm.



## Accessing more information

To view the full user manual, open the Apps screen of the mobile device, tap **Samsung Gear** → **Settings** → **About Gear**.

Visit [www.samsung.com](http://www.samsung.com) to view device information, the user manual, and more.

- The user manual may not be available depending on the web browser or service provider.

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

Copyright © 2015 Samsung Electronics

### IC Notice

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Correct disposal

To view more information about device and battery disposal, open the Apps screen of the mobile device, **Samsung Gear** → **Settings** → **About Gear** → **Legal information**.



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

This product is RoHS compliant.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

## Safety information

Read all safety information before using the device to ensure safe and proper use.



### Warning

#### Follow the warning information provided below to prevent incidents such as fire or explosion

- Do not expose the device to physical impact or damage.
  - Do not carry your device in your back pockets or on your waist.
- Use manufacturer-approved batteries, chargers, accessories, and supplies.
- Do not touch the device with wet hands. Also, do not use the device in humid environments, such as rest rooms, or during water-based activities, such as swimming.
- If any part of the device is cracked or broken, or if the device becomes very hot, stop using the device immediately and take it to a Samsung Service Centre.

#### Follow the warnings below to prevent injury to people or damage to the device

- Do not allow children or animals to chew or suck the device.
- Do not poke eyes, ears, or other body parts with the device or insert the device into the mouth.
- The device can be used in locations with an ambient temperature of 0°C to 35°C. You can store the device at an ambient temperature of -20°C to 50°C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not store your device near or in heaters, microwaves, cooking equipment, or high pressure containers.
- Keep your device dry.
- Do not use your device outdoor during a thunderstorm.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.

THIS DEVICE AND ANY SOFTWARE, SERVICE, FUNCTION PROVIDED THEREIN IS SOLELY INTENDED FOR FITNESS AND WELLNESS PURPOSES ONLY AND IS NOT INTENDED FOR USE IN THE DIAGNOSIS OF DISEASE OR OTHER CONDITIONS, OR IN THE CURE, MITIGATION, TREATMENT OR PREVENTION OF DISEASE.

To view the full safety information, open the Apps screen of the mobile device and tap **Samsung Gear** → **Settings** → **About Gear** → **Legal information**.

## Maintaining water and dust resistance

The device may be damaged if water or dust enters the device. Follow these tips carefully to prevent damage to the device and to maintain the water- and dust-resistant performance of the device.

- Do not immerse the device in water deeper than 1 m and keep it submerged for more than 30 minutes.

- Do not expose the device to **water moving with force**, such as water running from a tap, ocean waves, or waterfalls.
- If the device or your hands are wet, dry them thoroughly before handling the device.
- If the device is exposed to freshwater, dry it thoroughly with a clean, soft cloth. If the device is exposed to any liquid other than freshwater, rinse the device with freshwater immediately and dry it thoroughly with a clean, soft cloth. Failure to rinse the device in freshwater and dry it as instructed may cause the device to suffer from operability or cosmetic issues.
- If the device is dropped or receives an impact, the water- and dust-resistant features of the device may be damaged.
- The touchscreen and other features may not work properly if the device is used in water or in other liquids.

Your device has been tested in a controlled environment and certified to be water- and dust-resistant in specific situations (meets requirements of classification IP67 as described by the international standard IEC 60529 - Degrees of Protection provided by Enclosures [IP Code]; test conditions: 15 - 35°C, 86 - 106 kPa, 1 metre, 30 minutes). Despite this classification, your device is not impervious to water damage in any situation.

## Specific Absorption Rate (SAR) certification information

The SAR is a value that corresponds to the relative amount of RF energy absorbed by a user of a wireless handset.

The SAR value of a device is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the device emits. All device models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a device can be substantially less than the level reported to Industry Canada. This is because of a variety of factors including its proximity to a base station antenna, device design and other factors. What is important to remember is that each device meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All devices must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model devices do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values for the SM-R720 are:

Head : 0.075 W/kg

Body : 0.613 W/kg

This device has been tested and meets RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 0.0 cm from the body.

## Removing the battery

- To remove the battery, you **must** visit an authorised service centre with the provided instructions.
- For your safety, you **must not attempt to remove** the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.
- Samsung does not accept liability for any damage or loss (whether in contract or tort, including negligence) which may arise from failure to precisely follow these warnings and instructions, other than death or personal injury caused by Samsung's negligence.

- Remove the strap from the Gear.
- Remove the screen from the Gear's body using a flat edged tool.
- Disconnect the battery connectors.
- Remove the circuit board by lifting it out of the Gear's body.
- Remove the battery by pulling the battery connector at the right side of the Gear upwards.