

## Galaxy Watch

Quick Start Guide  
SM-R805F

Printed in Korea  
GH68-49527A Rev.1.0  
English (EU), 07/2018



## Package contents

 
- Galaxy Watch
- Wireless charging dock
- Band
- Charger
- Quick start guide

- The items supplied with the Galaxy Watch and any available accessories may vary depending on the region or service provider.
- The supplied items are designed only for this Galaxy Watch and may not be compatible with other devices.

2

## Device layout

To turn on the Galaxy Watch, press and hold the Home key (Power key) for a few seconds.

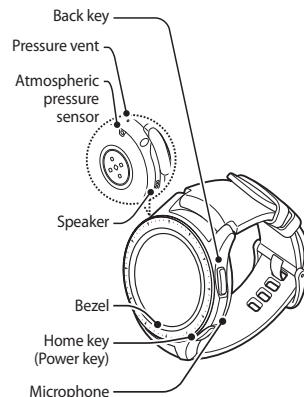


3

- Do not insert sharp objects into the atmospheric pressure sensor, the pressure vent, or the microphone. Inner components of the Galaxy Watch may be damaged along with the water-resistance feature.

## Charging the battery

 Before using the Galaxy Watch for the first time, you must charge the battery.

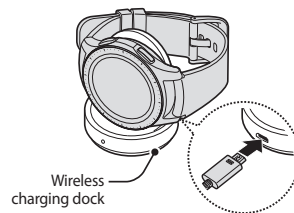

4

- Use only Samsung-approved chargers.

- The charger should remain close to the electric socket and be easily accessible while charging.

## Connecting the Galaxy Watch to a mobile device

To connect your Galaxy Watch to a mobile device, install the Galaxy Wearable app on the mobile device. Depending on your mobile device, you can download the Galaxy Wearable app from the following places:

- Samsung Android devices: **Galaxy Apps, Play Store**
- Other Android devices: **Play Store**

5

## Galaxy Watch

- 1 Turn on the Galaxy Watch.  
A screen will appear about downloading and installing the Galaxy Wearable app.
- 2 Tap and select a language to use.

- If you want to use your Galaxy Watch without connecting it to a mobile device, tap , scroll down the screen, and then tap **here**.
- Visit [www.samsung.com](http://www.samsung.com) to view legal notices provided when setting Without phone connection mode for the first time.

6

## Mobile device

- 3 Launch **Galaxy Wearable**.  
If necessary, update the Galaxy Wearable app to the latest version.
- 4 Tap **START THE JOURNEY**.
- 5 Select your device on the screen.  
If you cannot find your device, tap **MINE'S NOT HERE**.

7

If your device is frozen and unresponsive, press and hold the Home key (Power key) for more than 7 seconds to restart it.

## Declaration of Conformity

Samsung Electronics declares that this device complies with the essential requirements and relevant provisions of Directive 2014/53/EU.

Go to [www.samsung.com/mobile\\_doc](http://www.samsung.com/mobile_doc) to view the Declaration of Conformity.

Samsung Electronics (UK) Ltd, Euro QA Lab.  
Blackbushe Business Park, Saxony Way, Yateley,  
Hampshire. GU46 6GG, United Kingdom

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

8

- 6 Tap **TURN ON** when the Bluetooth activation request window appears.
- 7 Follow the on-screen instructions to complete the connection.  
When completing the connection, an on-screen tutorial will appear on both the Galaxy Watch's screen and the mobile device.

- Connection methods and screen may vary depending on your mobile device and software version.
- Supported mobile devices and features may vary depending on your region, service provider, and device manufacturer.

## Turning the screen on and off

To turn on the screen, rotate the bezel. Or, press the Home key or the Back key.  
If the screen does not turn on after you rotate the bezel, tap (**Settings**) on the Apps screen and tap **Advanced** → **Bezel wake-up** → **Bezel wake-up** switch to activate the feature.

To turn off the screen, cover it with your palm.

 


9

## Using the bezel

Rotate the bezel to scroll through the screens or to highlight items.

When a call comes in, rotate the bezel to receive or reject the incoming call.

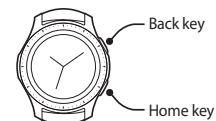

10

## Switching the screen

To return to the previous screen, press the Back key.

 
To open the Apps screen, press the Home key on the Watch screen.

To return to the Watch screen, press the Home key.

11


## Replacing the band

Slide the band's spring bar inwards and pull the band away from the Galaxy Watch's body .

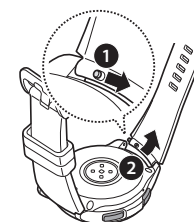

12

 Insert one end of the spring bar into the Galaxy Watch's lug , slide the spring bar inwards , and connect the band.

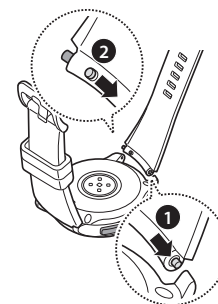

13

## Using the call function

On your Galaxy Watch, directly make or receive calls. You can have phone conversations via the internal microphone, speaker, or connected Bluetooth headset.

## Answering a call

When a call comes in, drag  outside the large circle. Alternatively, rotate the bezel clockwise.

## Making a call

- 1 Tap  (**Phone**) on the Apps screen.
- 2 Tap , select a contact, and then tap . Alternatively, tap , enter a number using the keypad, and then tap .

14

## Follow the warnings below to prevent injury to people or damage to the device

- Do not allow children or animals to chew or suck the device.
- The device can be used in locations with an ambient temperature of 0 °C to 35 °C. You can store the device at an ambient temperature of -20 °C to 50 °C. Using or storing the device outside of the recommended temperature ranges may damage the device or reduce the battery's lifespan.
- Do not use your device in a hot environment or near fire.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.
- Do not wear the device too tightly. Make sure to keep the device clean and dry. Though this device has met international safety standards, some people may experience skin irritation if they are allergic to certain substances.



To prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.

21

## Accessing more information

To view the full user manual, launch **Galaxy Wearable** on you mobile device and tap  → **User manual**.

Visit [www.samsung.com](http://www.samsung.com) to view device information, the user manual, and more.



- The method for accessing the user manual from the Galaxy Wearable app may vary depending on your mobile device.
- The user manual may not be available depending on the web browser or service provider.

15

To view the full safety information including device and battery disposal instructions, launch **Galaxy Wearable** on you mobile device and tap  → **User manual**.

## Maintaining water and dust resistance

 
Your device supports water- and dust-resistance. Follow these tips carefully to maintain the water- and dust-resistance of your device. Failure to do so may result in damage to your device.

- Do not expose the device to **water moving with force**.
- Do not use your device when you dive into the water, snorkel or try any water sports in fast-flowing water.
- If the device or your hands are wet, dry them thoroughly before handling the device.

22

## Notice for measuring the heart rate

When measuring your heart rate, wear the Galaxy Watch snugly on your arm above your wrist as shown in the figure below. Do not fasten the Galaxy Watch too tightly.

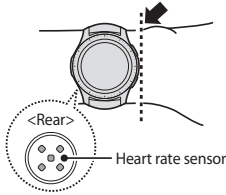

16



- The accuracy of the heart rate sensor can be affected depending on the user's movements, personal physiology, and the measurement conditions and surroundings. Take heart rate measurements when you are seated and relaxed.
- Do not look directly at the heart rate sensor's lights. Doing so may impair your vision.
- If your device becomes hot to the touch, please remove it until it cools. Exposing skin to a hot surface of the device for a long time may cause skin burn.

17

## Removing the battery

- **To remove the battery, contact an authorised service centre. To obtain battery removal instructions, please visit [www.samsung.com/global/ecodesign\\_energy](http://www.samsung.com/global/ecodesign_energy).**
- For your safety, you **must not attempt to remove** the battery. If the battery is not properly removed, it may lead to damage to the battery and device, cause personal injury, and/or result in the device being unsafe.
- Samsung does not accept liability for any damage or loss (whether in contract or tort, including negligence) which may arise from failure to precisely follow these warnings and instructions, other than death or personal injury caused by Samsung's negligence.

24

## Correct disposal



This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste. This product is RoHS compliant.



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste.

For information on Samsung's environmental commitments and product-specific regulatory obligations, e.g. REACH, WEEE, Batteries, visit [samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data\\_comer.html](http://samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_comer.html)

18

## Safety information

Read all safety information before using the device to ensure safe and proper use.



### Warning

#### Follow the warning information provided below to prevent incidents such as fire or explosion

- Do not expose the device to physical impact or damage.
- Use manufacturer-approved chargers, accessories, and supplies.
- Prevent the multipurpose jack and battery terminals from contacting conductive elements, such as metal or liquids.
- If any part of the device is cracked or broken, stop using the device immediately and take it to a Samsung Service Centre.
- Do not turn on or use the device when the battery compartment is exposed.

19

- If the device is exposed to freshwater, dry it thoroughly with a clean, soft cloth. If the device is exposed to any liquid other than freshwater such as perfume, soapy water, oil, pool water, sea water, sun block, or lotion, rinse the device with freshwater and dry it thoroughly with a clean, soft cloth before using your device. Failure to do so may cause the device to suffer from operability or cosmetic issues.
- **If the device is dropped or receives an impact**, the water- and dust-resistant features of the device may be damaged.
- Some features such as the touchscreen may not work properly **if the device is used in water**.

**Your device has been tested in a controlled environment and certified to be water- and dust-resistant in specific situations and conditions. (Meets the requirements of the water-resistance in a 50 m deep water as described by the international standard ISO 22810:2010 and your device can be used in shallow water. Meets the requirements of the dust-resistance as described by classification IEC 60529 IP6X.)**

23