

SAMSUNG

SM-T239M

Quick Start Guide

Accessing more information

 
On your device, open the web browser and select the bookmark for the user manual from the bookmarks list.

Visit www.samsung.com to view device information, the user manual, and more.

- The user manual may not be available depending on the web browser or service provider.
- You may incur additional charges for accessing the Internet.
- The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.


Device layout

To turn on the device, press and hold the Power button for a few seconds.

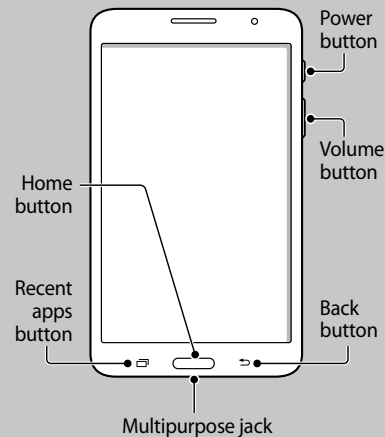


Installing the SIM or USIM card

 - ✍ Only microSIM cards work with the device.

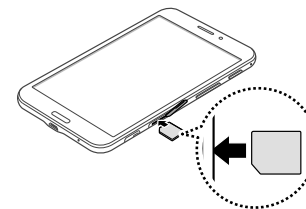

Charging the battery

 Before using the device for the first time, you must charge the battery.

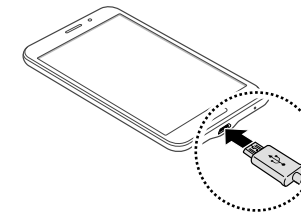

- ✍ The charger should remain close to the electric socket and easily accessible while charging.

Some content may differ from your device depending on the region, service provider, or software version, and is subject to change without prior notice.

To transfer data of the previous device to a new device: Visit www.samsung.com/smarts witch for more information.

Printed in Korea
GH68-43668A Rev.1.0
English (LTN). 02/2015



Safety information

Read all safety information before using the device to ensure safe and proper use.



Warning

Follow the warning information provided below to prevent incidents such as fire or explosion

- Do not expose the device to physical impact or damage.
 - Do not carry your device in your back pockets or on your waist.
- Use manufacturer-approved batteries, chargers, accessories, and supplies.
- Prevent the multipurpose jack and battery terminals from contacting conductive elements, such as metal or liquids.
- Do not touch the device with wet hands. Also, do not use the device in humid environments, such as rest rooms, or during water-based activities, such as swimming.
- If any part of the device is cracked or broken, or if the device becomes very hot, stop using the device immediately and take it to a Samsung Service Centre.
- Do not turn on or use the device when the battery compartment is exposed.

Follow the warnings below to prevent injury to people or damage to the device

- Do not allow children or animals to chew or suck the device.
- Do not poke eyes, ears, or other body parts with the device or insert the device into the mouth.
- If the device has a camera flash or light, do not use it close to the eyes of people or animals.
- Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5°C to 35°C.
- Do not store your device near or in heaters, microwaves, cooking equipment, or high pressure containers.
- Keep your device dry.
- Do not use your device outdoor during a thunderstorm.
- Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle.



To prevent possible hearing damage when using a headset, do not listen to sound at high volume for long periods.

To view the full safety information, tap → **Settings** → **General** → **About device** → **Legal information** → **Safety information**.

Specific Absorption Rate (SAR) certification information

To view more information about the device's SAR certification, tap → **Settings** → **General** → **About device** → **Legal information** → **Safety information**.

Your device conforms to U.S. Federal Communications Commission (FCC) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 1.6 W/kg. SAR information on this and other model devices can be accessed online on the FCC's website through transition.fcc.gov/oet/rfsafety/sar.html.

In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The FCC has granted an Equipment Authorisation for this model device based on the compliance of all reported SAR levels with the FCC RF exposure guidelines. This device has a FCC ID number: A3LSMT239M [Model Number: SM-T239M] and the specific SAR levels for this device can be found at the following FCC website: www.fcc.gov/oet/ea/.

The SAR information for this device can also be found on Samsung's website: www.samsung.com/sar.

You can download and install the firmware update to upgrade your device's software with the firmware over-the-air (FOTA) service. To check for the firmware update, tap → **Settings** → **General** → **About device** → **Software updates**.

Copyright © 2015 Samsung Electronics

FCC Notice and Cautions

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the device if such interference cannot be eliminated. Vehicles using petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio device, not expressly approved by Samsung, will void the user's authority to operate the equipment.

The use of any unauthorized accessories may be dangerous and void the device warranty if said accessories cause damage or a defect to the device. Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.



DRAFT, 2015-02-25

User manual

SM-T239M

This device uses non-harmonised frequency and is intended for use in all European countries.
The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors

using this manual

This user manual has been specially designed to guide you through the functions and features of your tablet. To get started quickly, refer to “introducing your tablet,” “오류! 참조 원본을 찾을 수 없습니다.” and “오류! 참조 원본을 찾을 수 없습니다..”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING *Warning*—situations that could cause injury to yourself or others




CAUTION *Caution*—situations that could cause damage to your tablet or other equipment



Note—notes, usage tips, or additional information

▶ *Refer to*—pages with related information; for example: ▶ p. 12 (represents “see page 12”)

⌂ *Followed by*—the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages ⌂ Create new message (represents Messages, followed by Create new message)

[] *Square brackets*—tablet keys; for example: [] (represents the Power/Menu exit key)

< > *Angled brackets*—softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide
- Java™ is a trademark of Sun Microsystems, Inc.

- Windows Media Player® is a registered trademark of Microsoft Corporation.

contents

safety and usage information

- Safety warnings
- Safety precautions
- Important usage information

introducing your tablet

- Unpack ..
- Tablet layout
- Keys
- Display
- Icons

assembling and preparing your tablet

- Install the SIM card and battery
- Charge the battery

using basic functions

- Turn your tablet on and off
- Access menus
- Customise your tablet
- Use basic call functions
- Send and view messages
- Add and find contacts

troubleshooting

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your tablet.



WARNING

Safety warnings

Keep your tablet away from small children and pets

Keep your tablet and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the eartables into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install tablets and equipment with caution

Ensure that any tablets or related equipment installed in your vehicle are securely mounted. Avoid placing your tablet and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your tablet. Incompatible batteries and chargers can cause serious injuries or damage to your tablet.
- Never dispose of batteries or tablets in a fire. Follow all local regulations when disposing used batteries or tablets.
- Never place batteries or tablets on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between tablets and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your tablet is interfering with a pacemaker or other medical device, turn off the tablet immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the tablet in potentially explosive environments

Do not use your tablet at refuelling points (service stations) or near fuels or chemicals. Turn off your tablet whenever directed by warning signs or instructions. Your tablet could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the tablet, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your tablet, hold the tablet with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your tablet while driving and obey all regulations that restrict the use of tablets while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a tablet in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your tablet or cause injury.

Turn off the tablet near medical equipment

Your tablet can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the tablet or disable the wireless functions when in an aircraft

Your tablet can cause interference with aircraft equipment. Follow all airline regulations and turn off your tablet or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.

Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.

Never use a damaged charger or battery.

Handle your tablet carefully and sensibly

Do not allow your tablet to get wet—liquids can cause serious damage. Do not handle your tablet with wet hands. Water damage to your tablet can void your manufacturer's warranty.

- Avoid using or storing your tablet in dusty, dirty areas to prevent damage to moving parts.
- Your tablet is a complex electronic device— protect it from impacts and rough handling to avoid serious damage.
- Do not paint your tablet, as paint can clog moving parts and prevent proper operation.
- Avoid using the tablet's camera flash or light close to the eyes of children or animals.
- Your tablet and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your tablet to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your tablet emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the

manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your tablet in the normal position

Avoid contact with your tablet's internal antenna.

Allow only qualified personnel to service your tablet

Allowing unqualified personnel to service your tablet may result in damage to your tablet and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the tablet is transferring or accessing information, as this could result in loss of data and/or damage to the card or tablet.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your tablet may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) Certification Information

Your tablet conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of tablets that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.869 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the tablet has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your tablet reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your tablets

compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung tablet website.



Correct disposal of this product

 
(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

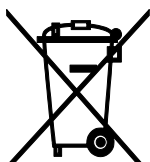

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

introducing your tablet

In this section, learn about your tablet's layout, keys, display, and icons

Unpack

Check your product box for the following items:

- Tablet
- Battery
- Travel adapter (charger)
- User manual



The items supplied with your tablet may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.

Tablet layout

The front of your tablet includes the following keys and features:

The rear of your tablet includes the following keys and features:

Keys

Key	Function
Softkeys	Perform actions indicated at the bottom of the display; In Idle mode, press and hold the left softkey to access the simplified menus
4-way navigation	In Idle mode, access user-defined menus (left/right/up/down); In Menu mode, scroll through menu options
Confirm	In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
Dial	Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
Power/ Menu exit	Turn the tablet on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
Alpha-numeric	Enter numbers, letters and special characters; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix
Special function	Enter special characters or perform special functions; In Idle mode, press and hold [#] for the silent profile; Press and hold [*] to enter a pause between numbers
Volume	Adjust the tablet's volume

Display

Your tablet's display consists of three areas:

Icon line

Displays various icons

Text and graphic area

Displays messages, instructions, and information you enter

Softkey line

Displays the current actions assigned to each softkey

Icons

Learn about the icons that appear on your display.

Definition
Signal strength
Call in progress
New text message


assembling and preparing your tablet

Get started by assembling and setting up your tablet for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM card and battery,

1. Remove the battery cover. If the tablet is on, press and hold [] to turn it off.
2. Insert the SIM card. Place the SIM card in the tablet with the gold-coloured contacts facing down.
3. Insert the battery.
4. Replace the battery cover.

Charge the battery

Before using the tablet for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the tablet.
2. Plug the small end of the travel adapter into the multifunction jack. Improperly

connecting the travel adapter can cause serious damage to the tablet. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the [||||] icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the tablet.
6. Close the cover to the multifunction jack.

The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.

About the low battery indicator

When your battery is low, the tablet will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the tablet will automatically power off. Recharge your battery to continue using your tablet.


The charger should remain close to the electric socket and easily accessible while charging

using basic functions

Learn how to perform basic operations and use the main features of your tablet.

Turn your tablet on and off

To turn your tablet on,

1. Slide open the tablet.
2. Press and hold [].
3. Enter your PIN and press <OK> (if necessary).
4. When the setup wizard opens, customise your tablet as desired by following the screen.

To turn your tablet off, repeat steps 1 and 2 above.

Switch to the offline profile


By switching to the offline profile, you can use your tablet's non-network services in areas where wireless devices are prohibited, such as aeroplane and hospitals.

To switch to the offline profile, in Menu mode, select Settings > Tablet profiles > Offline.

Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your tablet's menus,

1. In Idle mode, press <Menu> to access Menu mode.
2. Use the navigation key to scroll to a menu or option.
3. Press [OK], <Select>, or <Save> to confirm the highlighted option.
4. Press <Back> to move up one level; Press [] to return to Idle mode.

Customise your tablet

Get more from your tablet by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

Switch to or from the silent profile

In Idle mode, press and hold [#] to silence or un silence your tablet.

Change your ringtone

1. In Menu mode, select Settings → Tablet profiles .
2. Scroll to the profile you are using.
3. Press <Options> → Edit → Voice call ringtone.
4. Select a ringtone category → a ringtone.
5. Press <Options> → Select (if necessary).
6. Press <Save>.

To switch to another profile, select it from the list.

Create a tablet profile

1. In Menu mode, select Settings → Tablet profiles .
2. Press <Options> → Create.
3. Enter a name for the profile and press <Options> → Save.
4. Customise the sound settings as desired.
5. When you are finished, press <Save>.
- 6.

Select a wallpaper (Idle mode)

1. In Menu mode, select Settings ⌵ Display and light ⌵ Home screen.
2. Scroll left or right to Images.
3. Select Wallpaper.
4. Select an image category ⌵ an image.
5. Press <Select> or <Select> ⌵ <Set>.
6. Press <Save>.

Select a theme for the display

To select a theme,

1. In Menu mode, select Settings ⌵ Display and light ⌵ My theme.
2. Scroll to a theme and press <Select>.

To create and apply a theme,

1. In Menu mode, select Settings ⌵ Display and light ⌵ My theme.
2. Scroll to Create and press <Select>.
3. Customise the theme as desired by following the screen.
4. When you have finished, enter a name for the theme and press <Save>.
5. Press <Yes> to apply the theme.

Set menu shortcuts

1. In Menu mode, select Settings ⌵ Tablet settings ⌵ Shortcuts.
2. Select a key to use as a shortcut.
3. Select a menu to assign to the shortcut key.

Use the simplified menus

To set up simplified menu items,

1. In Idle mode, press [OK].
2. Press <Options> ⌵ Customise menu.
3. Select your favourite menus.
4. Press <Options> ⌵ Open to select submenus (if necessary).
5. Press <Save>.
6. To access an item from the simplified menus,
7. In Idle mode, press [OK].
8. Scroll to the menu item you want and press [OK].

Lock your tablet



1. In Menu mode, select Settings ⌵ Security ⌵ Tablet lock ⌵ On.

2. Enter a new 4- to 8-digit password and press <OK>.
3. Enter the new password again and press <OK>.



Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. In Idle mode, enter an area code and a tablet number.
2. Press [] to dial the number
3. To end the call, press [].


Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the speakertablet feature

1. During a call, press [OK]  <Yes> to activate the speaker.
2. To switch back to the earpiece, press [OK] again.

In noisy environment, you may have difficulty hearing the calls while using the speakertablet feature. For better performance, use the normal tablet mode.

Use the headset

By plugging the supplied headset into the multifunction jack, you can make and answer calls:

- To redial the last call, press and hold the headset button.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

Send a text or multimedia message

1. In Menu mode, select Messages → Create new message → Message.
2. Enter a destination number or an email address and scroll down.
3. Enter your message text. ► p. 오류! 책갈피가 정의되어 있지 않습니다.
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press <Options> → Add multimedia and add an item.
5. Press [OK] → Send to send the message.

Send an email

1. In Menu mode, select Messages → Create new message → Email.
2. Enter an email address and scroll down.
3. Enter a subject and scroll down.
4. Enter your email text.
5. Press <Options> → Attach multimedia and attach a file (if necessary).
6. Press [OK] → Send to send the message.

Enter text

When entering text, you can change the text input mode:

- Press and hold [*] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [*] to change case or switch to Number mode.
- Press and hold [#] to switch to Symbol mode.

Enter text in one of the following modes:

Mode	Function
ABC	Press the appropriate alphanumeric key until the character you want appears on the display.
T9	<ol style="list-style-type: none"> 1. Press the appropriate alphanumeric keys to enter an entire word. 2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, select an alternate word from the list that appears.
Number	Press the appropriate alphanumeric key to enter a number.
Symbol	Press the appropriate alphanumeric key to select a symbol.

View text or multimedia messages

1. In Menu mode, select Messages → My messages → Inbox.
2. Select a text or multimedia message.

View an email

1. In Menu mode, select Messages → My messages → Email inbox.
2. Select Check new email.
3. Select an email or a header.
4. If you selected a header, press <Options> → Retrieve to view the body of the email.

Add and find contacts

Learn the basics of using the tabletbook feature.

Add a new contact

1. In Idle mode, enter a tablet number and press <Options>.
2. Select Save → a memory location (tablet or SIM) → New.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press <Options> → Save to add the contact to memory.

Find a contact

1. In Menu mode, select Tabletbook.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.

Once you have found a contact, you can:

- call the contact by pressing []
- edit the contact information by pressing [OK]

Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 a/b/g/n standards.

You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

troubleshooting

If you are having trouble with your tablet, try these troubleshooting procedures before contacting a service professional.


While using your tablet, the following messages may appear:

Message	Try this to solve the problem:
Please insert SIM card	Ensure that the SIM card is installed correctly.
Tablet lock	When the tablet lock feature is enabled, you must enter the password you set for the tablet.
Enter PIN	When using the tablet for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM card. You can disable this feature by using the PIN lock menu.
Enter PUK	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your tablet displays “Network unavailable” or “Network error.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialled.

- Ensure that you have pressed the Dial key: [.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the tablet number.

Another caller cannot reach you.

- Ensure that your tablet is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the tablet number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microtablet.
- Ensure that the microtablet is close to your mouth.
- If using a headset, ensure that it is properly connected.

The tablet beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the tablet.

The audio quality of the call is poor.

- Ensure that you are not blocking the tablet’s internal antenna.

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the tablet turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your tablet is hot to the touch.

When you use several applications at once, your tablet requires more power and may heat up.

This is normal and should not affect your tablet's lifespan or performance.

**SAMSUNG
ELECTRONICS**



Declaration of Conformity (R&TTE)

We, Samsung Electronics

declare under our sole responsibility that the product

GSM WCDMA LTE BT/Wi-Fi Portable Device : SM-T239M

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY
EMC

RADIO

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

CE 0168 

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

Yong-Sang Park / S. Manager

(place and date of issue)
person)

(name and signature of authorised

* It is not the address of Samsung Service Centre. For the address or the tablet number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your tablet.

Some of the contents in this manual may differ from your tablet depending on the software of the tablet or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-XXXXXA
English (EU). 03/2012. Draft.01