

This document is watermarked because certain important information in the document has not yet been verified.
This document has been sent to you as a draft and for informational purposes only.
The document should only be used for internal purposes and may not be distributed outside of the company.
Distributing the document outside of the company could result in legal exposure to the company if the preliminary,
unverified information in the draft turns out to be inaccurate.

T a b E

ANDROID TABLET

User Manual

Please read this manual before operating your device
and keep it for future reference.

DRAFT
FOR INTERNAL USE ONLY

Legal Notices

Warning: This product contains chemicals known to the State of California to cause cancer and reproductive toxicity. For more information, please call 1-800-SAMSUNG (726-7864).

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating there to (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or

ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product, including but not limited to ‘PowerTOP’ and ‘e2fsprogs’, incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: opensource.samsung.com.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED

DRAFT
FOR INTERNAL USE ONLY

WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

IF YOUR CARRIER PROHIBITS THIS, IF YOU ATTEMPT TO DOWNLOAD SOFTWARE ONTO THE DEVICE WITHOUT AUTHORIZATION, YOU WILL BE NOTIFIED ON THE SCREEN THAT THE DEVICE WILL NO LONGER OPERATE AND BE INSTRUCTED TO POWER DOWN THE DEVICE. YOU MUST THEN CONTACT YOUR CARRIER TO RESTORE THE DEVICE TO THE CARRIER AUTHORIZED SETTINGS.

DRAFT
FOR INTERNAL USE ONLY

Samsung KNOX™

Samsung Knox™ is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: samsung.com/us/knox. [030115]

Samsung Electronics America (SEA), Inc.

Address:

85 Challenger Road
Ridgefield Park,
New Jersey 07660

Phone:

1-800-SAMSUNG (726-7864)

Internet Address:

samsung.com

©2015 Samsung Electronics America, Inc. Samsung and Galaxy Tab are registered trademarks of Samsung Electronics Co., Ltd. Screen images are simulated. Appearance of device may vary.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: samsung.com/us/support.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

The Bluetooth® word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Maps, Google Music, Google Hangouts, Picasa, Play Newsstand, YouTube, and other marks are trademarks of Google Inc.

DRAFT
FOR INTERNAL USE ONLY

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc.

Legal Information

Important legal information can be accessed in writing on the mobile device or at samsung.com.

Read this information before using your mobile device.

Samsung Limited Warranty - This product is covered under the applicable Samsung Limited Warranty. Full written terms and detailed information about the warranty and obtaining service are available on the device at: **Settings > About device > Legal Information > Samsung legal** or at samsung.com.

The online version of the Health/Safety and Warranty guide for your device can be found at:

English

samsung.com/us/Legal/Tablet-HSGuide

Spanish

samsung.com/us/Legal/Tablet-HSGuide-SP

Location of Legal Information on the device:

Health and Safety Information

Settings > About device > Legal information > Samsung legal > Health and Safety.

Warranty

Settings > About device > Legal information > Samsung legal > Warranty.

EULA

Settings > About device > Legal information > Samsung legal > End User License Agreement.

DRAFT
FOR INTERNAL USE ONLY

Table of Contents

Getting Started.....	1	Camera and Video.....	43
Front View.....	2	Chrome	47
Back View.....	4	Clock	48
Assemble Your Device	6	Contacts.....	50
Set Up Your Device	9	Email.....	56
Set Up Accounts on Your Device	11	Gallery.....	58
		Memo.....	61
Know Your Device	12	Message+	62
Home Screen.....	13	Music Player	65
Touchscreen Navigation	19	My Files.....	67
Status Bar.....	21	Video Player	70
Notification Panel.....	23		
Multi Window.....	25	Settings.....	72
Enter Text.....	28	About Settings.....	73
		Airplane Mode	74
Applications.....	30	Wi-Fi Settings.....	75
Apps Screen	31	Bluetooth	79
Google Applications	34	Data Usage.....	82
Verizon Applications.....	38	More Settings	83
Other Applications.....	39	Sound and Notification Settings.....	89
Calculator	40	Display and Wallpaper Settings.....	93
Calendar	41	Motions and Gestures.....	96

DRAFT
FOR INTERNAL USE ONLY

Storage	97
Battery.....	100
Application Settings	101
Users	105
Location	106
Lock Screen and Security	108
Privacy Settings	113
Accounts.....	114
Language and Input	116
Backup and Reset	119
Date and Time	121
Accessibility	122
Help	125
About Your Device	126
System Updates.....	127

DRAFT
FOR INTERNAL USE ONLY

Getting Started

This manual documents default settings. If you select other settings, steps may be different.

DRAFT
FOR INTERNAL USE ONLY

Front View



 
DRAFT
FOR INTERNAL USE ONLY

Here are some key features found on the front of your device.

- **Back:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Front camera:** Take pictures and record videos of yourself.
- **Home key or Finger scanner:** Press to return to the Home screen. Activate the Fingerprint security feature.
- **Memory card slot:** Install an optional memory card (not included) for storage of files.
- **Microphone:** Records audio and detects voice commands.
- **Power key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane Mode.
- **Proximity sensors:** Detects the presence of objects near the device.
- **Recent:** Tap to display recent apps or touch and hold for Home screen options.
- **SIM card slot:** Hold the device's SIM Card.
- **Volume key:** Press to adjust the volume of your device's sounds.

DRAFT
FOR INTERNAL USE ONLY

Back View

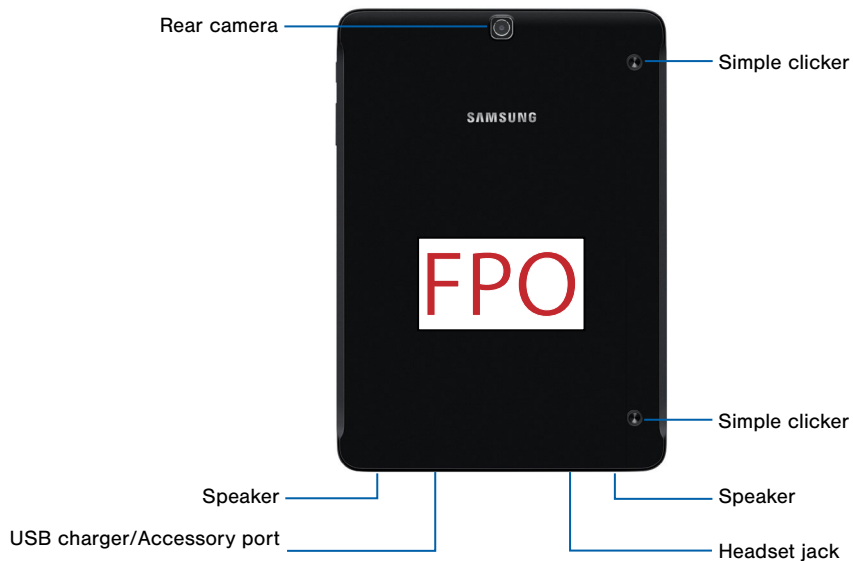

DRAFT
FOR INTERNAL USE ONLY

Here are some key features found on the back of your device.

- **Headset jack:** Connect an optional headset (not included).
- **Rear camera:** Take pictures and record videos.
- **Simple clicker:** These retractable circles securely attach optional covers (not included) to your device.
- **Speaker:** Plays music and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

DRAFT
FOR INTERNAL USE ONLY

Assemble Your Device

This section helps you to assemble your device.

Install the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card.

Warning: Please be careful when handling the SIM card to avoid damaging it. Keep all SIM cards out of reach of small children.



1. With the tablet's screen facing up, locate and open the SIM card slot cover.
2. Carefully slide the SIM card into the SIM card slot (as shown) until it clicks into place.
3. Close the SIM card slot cover.

Caution: If the card is not inserted correctly, the device will not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

DRAFT
FOR INTERNAL USE ONLY

Install a Memory Card

You can use an optional microSD or microSDHC memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [“Memory Card \(SD Card\)” on page 97](#).

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

The battery comes partially charged. A fully discharged battery requires up to four hours of charge time. You can use the device while charging.

Caution: Use only Samsung-approved charging devices. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

1. Insert the USB cable into the port.



2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. When charging is complete, unplug the charging head from the outlet and remove the USB cable from the device.

Caution: Failure to unplug the wall charger before you remove the battery, can cause damage to the device.


DRAFT
FOR INTERNAL USE ONLY

When to Charge the Battery

When the battery is weak and only a few minutes of battery power remaining, the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, glance at the battery charge indicator located in the Status Bar of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Having a percentage value onscreen can provide a better idea of the remaining charge on the battery. For more information, see [“Battery” on page 100](#).

DRAFT
FOR INTERNAL USE ONLY

Set Up Your Device

Turn Your Device On or Off

Turn the Device On

- ▶ Press and hold the **Power** key until the device vibrates and starts up.

Turn the Device Off

1. Press and hold the **Power** key until the device vibrates and the Tablet Options menu displays.
2. At the prompt, tap **POWER OFF**.

Setup Wizard

The first time you turn your device on, Setup Wizard will guide you through the basics of setting up your device.

Follow the prompts to choose a default language, set up accounts, choose location services, and learn more about your device.

Secure Your Device

Use your device's screen lock features to secure your device. To set a personal screen lock, use the Screen lock option.

Lock the Device

By default, the device locks automatically when the screen times out.

- ▶ To lock the device, press the **Power** key.

Unlock the Device

The default Screen lock on your device is Swipe.

- ▶ To unlock your device, press the **Power** key or **Home** key, then touch and drag your finger across the screen.

DRAFT
FOR INTERNAL USE ONLY

Set Up a Secure Screen Lock

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see [“Set a Screen Lock” on page 108.](#)



DRAFT
FOR INTERNAL USE ONLY

Set Up Accounts on Your Device

Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play store. When you turn on your device for the first time, set up a connection with your existing Google Account, or create a new Google Account.



To create a Google Account, or set up your Google Account on your device, use Accounts settings. For more information, see [“Accounts” on page 114](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Google**.
2. Follow the prompts to set up your new or existing Google Account.

Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

To create a Samsung account, or set up your Samsung account on your device, use Accounts settings. For more information, see [“Accounts” on page 114](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Samsung account**.
2. Follow the prompts to set up your new or existing Samsung account.

DRAFT
FOR INTERNAL USE ONLY

Know Your Device

This section outlines some key features of your device and describes the screen and icons as they appear when the device is in use.

Learn how to navigate the device and how to use special features of this device.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

DRAFT
FOR INTERNAL USE ONLY

Home Screen



DRAFT
FOR INTERNAL USE ONLY

Here are some features of the Home screen.

- **App folder:** For your convenience, apps can be grouped together in folders and placed on a Home screen.
- **App shortcuts:** Shortcuts to your favorite applications on the Home screen.
- **Apps screen:** Allows quick access to all of the Applications available.
- **Home screen indicator:** Indicates which Home screen is presently displayed.
- **Notification icons:** Displays new emails, notifications, available software updates, and so on.
- **Status Bar:** Display device status icons (right) and notification icons (left).
- **Status icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widget:** Self-contained onscreen application that runs on a Home screen (not a shortcut).

DRAFT
FOR INTERNAL USE ONLY

The Home screen is the starting point for using your device.

Customize your home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens




Your device comes with multiple home screens by default, and you can add more screens. You can also rearrange the home screens in a different order.

1. From a Home screen, pinch the screen.

– or –

Touch and hold an empty space on the screen.

2. Use these options to manage screens:


- **Add a screen:** Scroll to the end of the screens, and then tap  **Add**.
- **Remove a screen:** Touch and hold on a screen, and then drag it to the  **Delete**.
- **Set a screen as the main home screen:** Tap  **Main Home Screen** at the top of a screen. This screen displays when you press the Home key.
- **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.

DRAFT
FOR INTERNAL USE ONLY


App Shortcuts

You can use app shortcuts to launch an app from any home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, and then drag it to a Home screen and release it.

Remove a Shortcut

1. Touch and hold a shortcut to release it.
2. Drag the icon to the  **Delete** icon and then release it.

Caution: Removing a shortcut does not delete the app, it just removes the shortcut from the home screen.

Change the Wallpaper

Change the look of the home and lock screens with wallpaper. You can display a favorite picture, or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
– or –
Touch and hold an empty space on the screen.
2. Tap **Wallpapers**, and then choose **HOME SCREEN**, **LOCK SCREEN**, or **HOME AND LOCK SCREENS**.
3. Tap a wallpaper to see a sample, and then tap **SET AS WALLPAPER**.

DRAFT
FOR INTERNAL USE ONLY

Widgets

Widgets are self-contained apps that display on a home screen. Unlike a shortcut, a widget operates right on the home screen. There are all kinds of widgets, including links to a specific contact, browser bookmarks, Gmail and email accounts, and many others.

Add a Widget to the Home Screen

1. Touch and hold an empty space on the screen, and then tap **Widgets**.
2. Touch and hold a widget, and then drag it to a home screen and release.

Remove a Widget



1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to the  **Delete** icon and release it.

Note: Removing a widget does not delete the widget, it just removes the widget from the home screen.

Folders

Place folders on the Home screen to organize items.

Add Folders



1. From a Home screen, touch and hold on an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
 - Enter a folder name.
 - Tap  **Add** to place additional apps in the folder.
 - Tap **SAVE** when finished.

A folder will be created with the shortcut(s) inside.

DRAFT

FOR INTERNAL USE ONLY

Use Folders

- Tap the folder to open it and access the shortcuts inside.
- To add shortcuts to the folder, touch and hold the shortcut, and then drag it onto the folder and release.
- To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Delete** and release.
- Tap  **More options** to change the folder's color scheme.

DRAFT
FOR INTERNAL USE ONLY

Touchscreen Navigation

Tap

Lightly tap items to select or launch them.

- Tap the onscreen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture.

- Touch and hold a widget on the home screen to move it.
- Touch and hold on a field to display a pop-up menu of options.

Swipe or Slide

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Unlock the screen.
- Scroll through the home screen or a menu.

Drag

To drag, touch and hold on an item, and then move it to a new location.

- Add a shortcut to the home screen.
- Move a widget on the home screen.

DRAFT
FOR INTERNAL USE ONLY

Pinch and Spread



Pinch the screen using your thumb and forefinger, or spread by moving your fingers apart.

- Zoom in or out while viewing a picture or a Web page.
- Zoom in or out while taking a picture.

Motions

Control your device by making specific gestures with your hand above the device's screen.

Enable Motions

► From a Home screen, tap  **Apps** >  **Settings** > **Motions**. Tap the following features to enable or disable them.

- **Mute/pause:** When on, you can mute audio and pause video playback by turning the device screen-side down, or by covering the screen with your hand. You can also use Smart pause, to have the device pause video playback when you look away from the screen.

- **Palm swipe to capture:** Create a copy of the current screen by swiping the side of your hand across the screen, from left to right or right to left. The screen shot is saved to the clipboard, and to the Screenshots folder.

DRAFT
FOR INTERNAL USE ONLY

Status Bar

The Status Bar at the top of the home screen provides device information (such as network status and battery charge) on the right side and notification alerts on the left.

Status Icons



Battery is fully charged.



Battery is charging.



Battery is Low.

Status Icons



GPS is enabled.



Vibrate mode is enabled.



Mute mode is enabled.



Wi-Fi is active.



A Wi-Fi network is available.



Wi-Fi Direct is active.

DRAFT
FOR INTERNAL USE ONLY

Notification Icons



 
New Gmail has arrived.



New email has arrived.

DRAFT
FOR INTERNAL USE ONLY

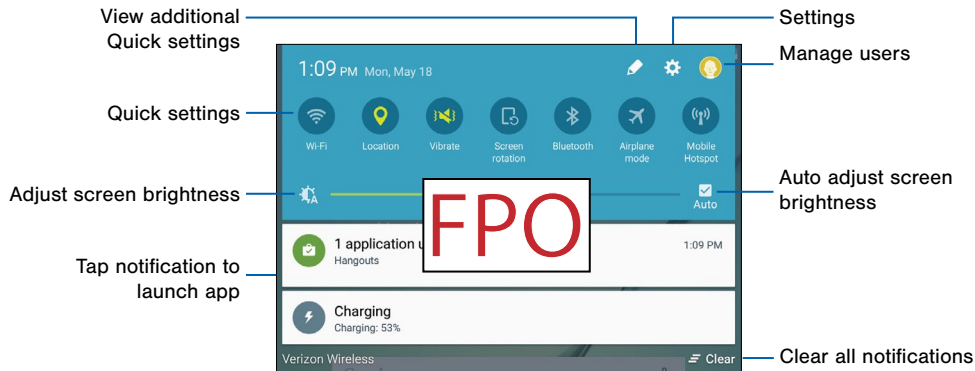

Notification Panel



DRAFT
FOR INTERNAL USE ONLY


Notification icons on the Status Bar display calendar events, device status, and more. For details, open the Notification Panel.

View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
 - Tap an item to open it.
 - To clear a single notification, drag the notification left or right. Tap  **Clear** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or tap  **Back**.

Quick Settings

In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi and Bluetooth, allowing you to quickly turn them on or off.

► To view additional Quick settings, tap  **Edit**.

DRAFT
FOR INTERNAL USE ONLY

Multi Window



Window controls


FOR INTERNAL USE ONLY

Multi task by using multiple applications at the same time.



Use Multi Window

Apps that support Multi window display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.

Note: Multi window is not available for all apps.

1. From any screen, touch and hold  **Recent**.
2. If you are currently using an app that supports Multi window, tap an app to add in split screen, or tap two new apps to open in split view.


You can also launch recently used apps directly into Multi window view:

1. Tap the  **Recent** key.
2. Recently used apps that support Multi window have a  **Multi window** icon in the title bar. Tap the Multi window icon in the title bar to launch the application in Multi window view.
3. Other recently used apps that support Multi window appear below the launched app. Tap the app icon to add it to the Multi window view.

Note: Only applications that support Multi window have the Multi window icon.

DRAFT
FOR INTERNAL USE ONLY

Window Controls

Select an application window and tap  **Control** in the middle of the window to display the window controls.

Control Buttons



Switch windows: Switch locations between Multi window applications.



Drag and drop content: Move items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.



Minimize window: Minimize the selected app window. This turns the app into a circular, movable icon that can be opened by tapping on it.



Maximize window: Open the selected window in full screen view.



 
Close app: Close the selected application.

DRAFT
FOR INTERNAL USE ONLY

Enter Text

Use the Samsung Keyboard

Type your text input using a QWERTY keyboard.

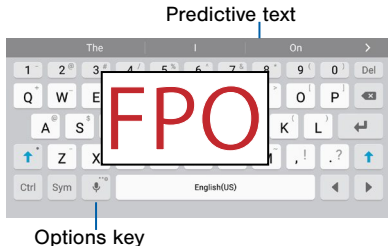

Special Keys



Tap to insert numbers and symbols.



Tap with key for quick access to cut (x), copy (c), paste (v), undo (z), redo (y), and select all (a).

Touch and hold the **Options** key to:



Use Google Voice Typing.



Use your handwriting to enter text.



Access the clipboard.



Insert emojis.



Change the layout of the keyboard.



Access keyboard settings.

DRAFT
FOR INTERNAL USE ONLY

Predictive Text

Predictive text suggests words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.


Configure the Samsung Keyboard

Customize the Samsung Keyboard. For more information, see [“Samsung Keyboard Settings” on page 116](#).

Use Google Voice Typing

Instead of typing, speak your text input.



1. On the Samsung Keyboard, tap  **Google Voice Typing**.
2. Speak your text.

Configure Google Voice Typing

To customize Google Voice Typing, see [“Google Voice Typing Settings” on page 117](#).

DRAFT
FOR INTERNAL USE ONLY


Applications

The Apps screen displays all applications installed on your device, both preloaded apps and apps you download and install yourself.

Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.


DRAFT
FOR INTERNAL USE ONLY

Access Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.




Download and Install New Apps

Find new apps to download and install on your device:

-  **Play Store**: For more information, see [“Play Store” on page 37](#).

Uninstall or Disable Apps


You can uninstall or disable apps you download and install. Preloaded apps cannot be uninstalled.

1. From a Home screen, tap  **Apps**.
2. Tap **EDIT**. Apps that can be uninstalled show  **Remove** on their icon.
3. Tap  **Remove**, and then follow the prompts to uninstall the app.

Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.



Change the Order Apps Are Listed

1. From a Home screen, tap  **Apps**.
2. Tap **EDIT**.
3. Touch and hold an app icon or folder and drag it to the location you want.
4. Tap **DONE** when finished.

To arrange apps in alphabetical order:

- From a Home screen, tap  **Apps** > **A-Z**.



Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Tap **EDIT**.
3. Touch and hold an app icon and drag it on top of another app until a highlighted box appears.
4. Release the app icon to create the folder.
 - Tap **Enter folder name** to name the folder.
 - Tap the  **Palette** icon to change the color (if desired).
5. Tap anywhere outside of the folder to close it.
 - To add more apps, touch and hold an app icon and drag it to the folder.
6. Tap **DONE** when you are finished.

DRAFT
FOR INTERNAL USE ONLY

Remove Folders

Remove folders on an Apps screen without deleting the apps inside.

1. From a Home screen, tap  **Apps**.
2. Tap **EDIT**.
3. Tap  **Remove** > **Remove folder**.

Apps that were inside the folder will be listed at the end of the Apps screen.

DRAFT
FOR INTERNAL USE ONLY

Google Applications

Enjoy these applications from Google.

Note: Certain applications require a Google Account. Visit [google.com](https://www.google.com) to learn more.



Gmail

Send and receive email with Gmail, Google's web-based email.

Visit [gmail.com](https://www.gmail.com) to learn more.



Chrome

Use Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your tablet.

Visit [google.com/chrome/mobile](https://www.google.com/chrome/mobile) to learn more.



Drive

Open, view, rename, and share your Google Docs and files.

Visit drive.google.com to learn more.

DRAFT
FOR INTERNAL USE ONLY



Google


Search not only the Internet, but also applications and their contents on the device as well.

Google Now

Google Now works in the background to collect information you regularly look up and organize it into convenient cards that appear when you need them.

Visit google.com/landing/now to learn more.

► Press and hold **Home**.

Note: When Google Now is enabled, you can also access it by tapping  **Google**.



Google Settings

Quickly and easily change Google app settings to suit your preferences.

Note: You must be signed in to the application in which you want to configure. (For example, sign in to Google+ in order to configure Google+ settings).



Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls.

Visit google.com/hangouts to learn more.

DRAFT
FOR INTERNAL USE ONLY



Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Visit google.com/maps to learn more.

Note: You must enable location services to use Maps. For more information, see [“Location” on page 106](#).



Photos

This application automatically backs up your photos and videos to your Google+ account.

Visit photos.google.com to learn more.



Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you're not connected to the Internet. You can also view videos saved on your device.

Visit play.google.com/about/movies to learn more.



Play Music

With Google Play Music, you can play music you've downloaded, and music you copied from your computer.

Visit play.google.com/about/music to learn more.

DRAFT
FOR INTERNAL USE ONLY



Play Store

All your favorite apps, movies and TV shows, music, books, magazines, and games are available in Google Play store.

Visit play.google.com/store to learn more.



Voice Search

Use voice commands to search the web with Google.



YouTube

View and upload YouTube videos, right from your device.

Visit youtube.com to learn more.

DRAFT
FOR INTERNAL USE ONLY

Verizon Applications

Enjoy these applications from Verizon Wireless.

Note: Certain applications require a data plan or paid subscription. Visit verizonwireless.com to learn more, or contact your service provider for additional information.



Cloud

Use Verizon Cloud to back up and access your data. You can also use Verizon Cloud to transfer content between other devices.



Message+

Use Verizon Messages to send text messages at a whole new level. Draw on pictures, share locations in real time, send audio messages, and much more.



Mobile Hotspot

Use your device as a Mobile Hotspot. For more information, see [“Mobile Hotspot” on page 83](#).



My Verizon Mobile

View details and manage your Verizon Wireless account.

Note: No airtime or minute charges apply when accessing My Verizon Mobile.



VZ Navigator

Use VZ Navigator to find, share and navigate to millions of locations, avoid traffic and drive, or walk with ease.

DRAFT
FOR INTERNAL USE ONLY

Other Applications

There are also other apps, including several Samsung apps, preloaded on your device.



Hancom Office Viewer

Open and manages Hancom Office Hanword (*.hwp) and Hanshow (*.show) documents.



Help

View information on your device's basic features and settings.



Milk

Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free.



Milk Video

Exclusive to Galaxy owners, Milk Video helps you discover and share the most talked about videos.



Setup Wizard

Configure basic settings for your device.



SideSync 3.0

SideSync enables screens, windows, and data to be shared easily between a Galaxy Tab and Galaxy smartphone.




You can see exactly the same screen displayed on your smartphone or tablet on the other device. You can then drag and drop files, type text messages on your keyboard, and much more.

DRAFT
FOR INTERNAL USE ONLY


Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the  **Equals** key.

Additional Functions




- Tap  **Clear**.
- To clear the calculator history, tap **CLEAR HISTORY**.
- To copy all or part of the calculation to the clipboard, touch and hold an entry in the display field.

DRAFT
FOR INTERNAL USE ONLY



Calendar

Manage your events and tasks.



Create an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** and enter the details for the event.
3. When finished tap **SAVE**.

Delete an Event or Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event, and tap **DELETE**.

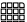


Share an Event

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event.
3. Tap **SHARE**, and tap a sharing format.
4. Select a sharing method, and follow the prompts.



DRAFT
FOR INTERNAL USE ONLY

Create a Task

Tasks are items you add to the calendar to be accomplished on a certain day. A task appears as a checklist item and is removed once you mark the task as complete.



1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap the drop down menu in the top left corner (by default, the Month and Year are shown) and tap **Tasks**.
3. Tap the **Enter new task** field to enter a new task.
4. You can choose to set the task for **TODAY**, **TOMORROW**, or tap the  **Expand** icon to view and set the following options:
 - **Due date:** Tap the **ON/OFF** switch to select a date on the calendar for the task.
 - **Reminder:** Tap to set a reminder alert.
 - **Notes:** Tap to save a note with your task.
 - **Priority:** Tap to assign a priority to the task.
5. Tap **SAVE** to save the task.

Delete a Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap a day on the calendar to view the tasks for the day, or select **Tasks** from the drop down menu.
3. Tap the checkbox by the task to mark it as complete and remove it from the calendar.
4. To delete the task permanently, tap the task to open it, and then tap **DELETE**.

Calendar Settings

These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **MORE** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT
FOR INTERNAL USE ONLY

Camera and Video






DRAFT
FOR INTERNAL USE ONLY

You can use the camera or video camera to take and share pictures and videos.



Take Photos

Take photos with your device's front or back camera, or combine shots with Dual mode.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your photo, use the onscreen options, or these gestures:
 - Tap the screen with two fingers and pinch or spread them on the screen to zoom in and out.
 - Tap the screen to focus on the area you touched.
3. Tap  **Capture**, or press the **Volume** key up or down to take the photo.

Shooting Modes

Several photo effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap **MODE** and select a shooting mode:

Rear camera only

- **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the photo.
- **Pro**: Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama**: Take a photo composed of many photos strung together.
- **HDR (Rich tone)**: Take photos without losing details in bright and dark areas.
- **Shot & more**: Take a quick burst of photos and apply effects to them.

DRAFT
FOR INTERNAL USE ONLY

- **Dual camera:** Take photos and record videos using the front and rear cameras at the same time. A variety of picture-in-picture styles are available.




Front camera only

- **Selfie:** Take selfie shots and apply various effects, such as an airbrushed effect.
- **Interval shot:** Select the best pictures from a series of continuous shots taken at set intervals.

Both cameras

- **Virtual shot:** Create multi-directional views of objects.
- **Download:** Download additional shooting modes from the Samsung Apps store.

Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Settings** to configure settings for Camera. Not all of the following options are available in both still camera and video camera modes. The available options also vary depending on the camera used.

Rear camera only

- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.

Front camera only

- **Gesture control:** Detect palm and automatically take a picture two seconds later.
- **Save as horizontally flipped:** Save the self-portrait or self-recording as a reversed (or 'mirrored') image.

Both cameras

- **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **View mode:** View your photos and video is standard ratio or use the full screen.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.


DRAFT
FOR INTERNAL USE ONLY

- **Location tags:** Attach a GPS location tag to the picture.
- **Review pictures:** Set to show pictures after taking them.
- **Storage location:** Select the memory location for storage.
- **Volume keys function:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Shutter sound:** Enable or disable a shutter sound when pictures are taken.
- **Reset settings:** Reset the camera settings.
- **Help:** View information on using the camera.

DRAFT
FOR INTERNAL USE ONLY

Chrome



The Google Chrome app allows you to use the Google Chrome web browser on your device.

1. From a Home screen, tap  **Chrome**.
2. Read the Google Chrome Terms of Service and tap **ACCEPT & CONTINUE**.
3. If you have an existing Chrome account, tap **ADD AN ACCOUNT** to bring your open tabs, bookmarks, and omnibox data from your computer to your phone. Otherwise tap **NO THANKS**.
4. Use Google Chrome to surf the Internet.

DRAFT
FOR INTERNAL USE ONLY



Clock

The Clock app features an Alarm and a World Clock.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
 - **ALARM:** This feature allows you to set an alarm to ring at a specific time.
 - **WORLD CLOCK:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
 - **STOPWATCH:** You can use this option to measure intervals of time.
 - **TIMER:** You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.




1. From a Home screen, tap  **Apps** >  **Clock** > **Alarm** tab.
2. Tap following items to configure an alarm:
 - **Time:** Set a time for the alarm.
 - **Repeat weekly:** Choose when to repeat the alarm, if so desired.
 - **DATE:** Choose the day for this alarm.
 - **OPTIONS:** Tap to view and set the following options:
 - **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
 - **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.

DRAFT
FOR INTERNAL USE ONLY

- **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
- **Snooze:** Allow snoozing, and set interval and repeat values for the alarm while snoozing.
- **Increasing volume:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Available when you have chosen an alarm type that includes sound.
- **Alarm name:** Enter a name for the alarm.

3. Tap **SAVE** to save the alarm.

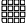Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Find the alarm in the alarm list (under the **Alarm** tab), and then tap  **Delete** in the upper right corner of the alarm entry.

DRAFT
FOR INTERNAL USE ONLY

Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.

For more information on connecting with and managing your accounts through your device, see [“Accounts” on page 114](#).



Manage Contacts

Access your list of contacts by using the Contacts app. To access your Contacts list:

- From a Home screen, tap  **Apps** >  **Contacts**.

Find a Contact

You can search for a contact, or scroll the list to find one by name.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.







– or –


Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also press and slide across the alphabetical list to select a letter with better precision.

DRAFT
FOR INTERNAL USE ONLY

Add a Contact

Use the following procedure to add a new contact.




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Create contact**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device, your SIM card, or sync it with an account.
 - Tap  **Contact photo** to assign a picture to the new contact.
 - Enter a name, phone number, email address, and assign the contact to a group. Tap **ADD ANOTHER FIELD** to add more contact information.
 - Tap  **Add** to enter additional entries.
 - Tap  **Remove** to remove an entry.

- Tap  **Expand** for additional fields.
- Tap the label to the right of any entry to choose another label for the field (for example, **Mobile**, **Home** or **Work**).

3. Tap **SAVE**.

Edit a Contact



When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **SAVE**.

DRAFT
FOR INTERNAL USE ONLY




Share a Name Card

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap **MORE** > **Share name card**.
3. Choose a sharing method and follow the prompts.

Link Contacts

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Linked contacts**.
3. Tap **LINK ANOTHER CONTACT**, and then select contacts to link to the original contact.
4. Tap **LINK**.

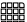Unlink Contacts

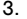1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Linked contacts**.
3. Tap  **Separate** beside contacts to unlink them from the main contact.

Create a Shortcut to a Contact

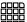

You can create a shortcut to a contact on a Home screen to access their information directly from a Home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold a contact to select it.
3. Tap **MORE** > **Add shortcut to Home screen**. The new shortcut displays in an empty area of the home screen.

DRAFT
FOR INTERNAL USE ONLY

Delete Contacts

You can delete a single contact or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to select it, and then tap **MORE** > **Delete**.





– or –

To delete multiple contacts, touch and hold a contact, tap the checkbox next to each contact to be deleted, and then tap **DELETE**.





Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

Mark Contacts as Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star turns gold ).

Remove Contacts from Favorites



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the gold color is removed .

DRAFT
FOR INTERNAL USE ONLY

Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.



Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **GROUPS**, and then tap **ADD** (next to the Groups heading on the left).
3. Tap fields to enter information about the group:
 - Tap **Create group in [location]** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts. Tap entries to select or unselect them. This option only appears if you there are multiple storage options available.
 - Tap **Group name** to enter a name for the new group.



- Tap **Add member** and select contacts to add to the new group, and then tap **DONE**.

4. Tap **SAVE**.

Rename a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **GROUPS**, and then tap a group.
3. Tap **MORE** > **Edit group** and enter a new name.
4. Tap **SAVE**.



Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **GROUPS**, and then tap a group.
3. Tap **MORE** > **Edit group**.
4. Tap **Add member**, and then tap the contacts you want to add, and then tap **DONE**.
5. Tap **SAVE**.

DRAFT
FOR INTERNAL USE ONLY



Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **GROUPS**, and then tap a group.
3. Tap **MORE** > **Send email**.
4. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **DONE**. Only group members that have email addresses in their records are shown.
5. Choose an email account to use and follow the prompts.

Delete a Group



Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **GROUPS**.
3. Tap **DELETE** > **All groups**.

4. Tap the groups to select them or tap the **All** checkbox at the top of the screen to select all groups.
5. Tap **DELETE**.
6. Tap **Group only** to only delete the group or tap **Groups and members** to delete the groups and the contacts in those groups.

Contact Settings

These settings allow you to modify settings associated with using the Contacts app.



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Next to the Contacts heading on the left side, tap **MORE** > **Settings**.
3. Tap an option and follow the onscreen instructions.

DRAFT
FOR INTERNAL USE ONLY

Email



Use the Email app to view and manage all your email accounts in one application.

To access Email:

► From a Home screen, tap  **Apps** >  **Email**.

Configure Email Accounts

You can configure Email for most accounts in just a few steps.



1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the onscreen instructions to set up your email account.
3. When finished, tap **DONE WITH ACCOUNTS** to open the inbox.
4. For additional accounts, tap **MORE** > **Settings** > **Add account**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

Note: To configure email account settings at any time, tap **MORE** > **Settings**. Tap the account to display Account settings.

Manage Your Email Accounts



You can view email you receive for all email accounts on the **Combined view** screen, or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap the ▼ drop down menu on the left side of the screen to select:
 - **Combined view:** View all email accounts in a combined inbox.
 - **[Account Name]:** View email for only this account.

DRAFT
FOR INTERNAL USE ONLY

Remove Email Accounts



To remove an Email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap **MORE** > **Settings**.
3. Tap the account you want to delete, and then tap **REMOVE**.

Email Settings

Use the Email Settings to configure your Email preferences.

Note: Available settings depend on the email provider.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap **MORE** > **Settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap an account to configure specific settings.
Available options depend on the account.



DRAFT
FOR INTERNAL USE ONLY

Gallery

View, edit, and manage pictures and videos.

View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, the Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap the ▼ drop down menu in the upper left corner, and then tap **Time** or **Album** to choose how videos and images are displayed. Other view options may be available.
 - In Album view, you can create albums to organize your images. On the drop down menu, tap **Album**, and then tap **MORE** > **Create album**.

3. Depending on the view mode selected, either tap an image or video to view it, or first tap an album or folder and then tap an image or video.
4. When viewing an image or video, you can scroll left or right to view the next or previous image or video.



Zoom In and Out

Use one of the following methods to zoom in or out on an image:



- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.

DRAFT
FOR INTERNAL USE ONLY


Play Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. Tap a video to view it.



Trim Segments of a Video

1. Select a video, and then tap the screen once to see the video options.
2. Tap  **Editor**, and then tap  **Trim**.
3. Use the sliders at the bottom of the screen to trim the video. Move the start bracket to the desired starting point, move the end bracket to the desired ending point.
4. Tap **EXPORT** to save the video. Modify the File name or Resolution, and then tap **EXPORT** to confirm the changes.

Edit Images

1. While viewing an image, tap the screen once to see the image options.
2. Tap  **Edit** to view and use the editing tools.



Delete Images

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder or category to open it.
3. Tap **MORE** > **Edit**.
4. Tap images to select them.
5. Tap **DELETE**.

DRAFT
FOR INTERNAL USE ONLY

Share Images

Use one of the following methods:








1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap **MORE** > **Select**, select images, and then tap **SHARE** to send them to others or share them via social network services.

DRAFT
FOR INTERNAL USE ONLY



Memo

Use the Memo app to write and save notes on your device.

Compose a Memo

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Create memo**, and type a memo.
 - To change the category, tap  **Category**.
 - To insert an image into the memo, tap  **Image**.
 - To use your voice to insert text into the memo, tap  **Voice**.
 - To add tasks, tap  **Tasks**.
3. When finished creating your memo, tap **SAVE**.

Manage Memos



1. From a Home screen, tap  **Apps** >  **Memo**.
2. Browse memos by scrolling up or down.
3. To search for a memo, tap **SEARCH**.
4. View the list of memo entries.
 - To edit a memo, tap the memo and then tap the content of the memo.
 - To delete memos, tap **MORE** > **Edit**, select memos, and tap **DELETE**.
 - To send a memo to others, tap **MORE** > **Share**, select a memo, and then select a method to share the memo.
 - To manage categories, tap **MORE** > **Manage categories**.

DRAFT
FOR INTERNAL USE ONLY

This section describes how to create and send a message using the Verizon Messages app.

Create and Send Messages




Use the Verizon Messages app to send and receive messages with your friends and family.

1. From the Home screen, tap  **Apps** >  **Message+**.

2. Tap  **New message**.

3. Tap the **To:** field and then enter a contact name, a mobile phone number, or an email address using the onscreen keyboard. As you enter letters, possible matches from your accounts and contacts display on the screen. Touch a match to add it to the message.


4. Tap **Type a message** and enter your message.

- Tap  **Attach** to attach an item, such as a postcard, picture, video, audio recording, Glympse location, location, contact card, or song.
- Tap  **Emoji** to insert emojis into your message.
- Tap  **Voice** to record and insert an audio recording into your message.

5. Review your message and tap  **Send**.

DRAFT
FOR INTERNAL USE ONLY



Read Messages

When you receive a message, your phone notifies you by displaying the  **New message** icon in the Status Bar.

To access a new message:




- Drag your finger down from the Status Bar to display the Notification Panel, and then tap the message notification to open the message.

– or –

From the Home screen, tap  **Apps** >  **Message+**, and then tap the message to open it.

Reply to Messages



Messages you exchange with another person are displayed as conversations in the Messages app, so you can see all the messages in one place.

1. From the Home screen, tap  **Apps** >  **Message+**.
2. Tap a conversation to display it.
3. Tap the **Type a message** field and then type your reply message.
4. When the message is complete, tap  **Send**.



DRAFT
FOR INTERNAL USE ONLY

Protect a Message from Deletion

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.



1. From the Home screen, tap  **Apps** >  **Message+**.
2. Tap a conversation to display it.
3. Touch and hold the message that you want to lock, and then tap **Lock message** on the pop-up menu. A lock icon displays on the message.

Delete Messages

1. From the Home screen, tap  **Apps** >  **Message+**.
2. Tap a conversation to display it.
3. Touch and hold the message you want to delete, and then tap **Delete messages** on the pop-up menu. Follow the prompts to confirm the deletion.

Delete Conversations

 
You can delete all the messages you've exchanged with another person.

1. From the Home screen, tap  **Apps** >  **Message+**.
2. Touch and hold a conversation you want to delete and tap **Delete Conversation** > **Delete**.

Note: Locked messages will not be deleted unless you select **Delete locked messages** before confirming the deletion.

DRAFT
FOR INTERNAL USE ONLY

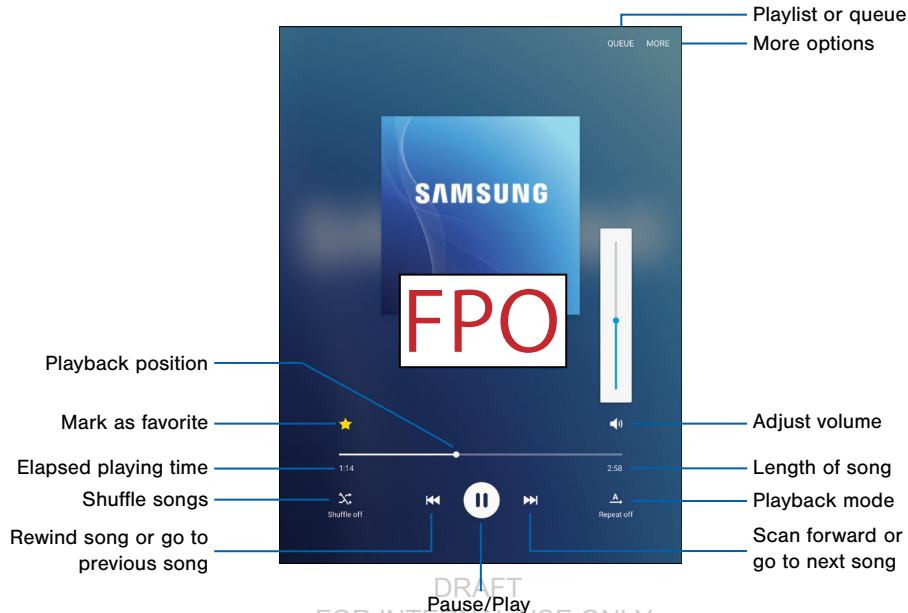

Music Player



DRAFT
FOR INTERNAL USE ONLY

Listen to your favorite songs with Music Player. Navigate through your music library, play songs, and create customized playlists.

Listen to Music

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.



DRAFT
FOR INTERNAL USE ONLY

My Files

Access files stored on your device, including images, videos, songs, and sound clips.

View Files

To view files in My Files:

► From a Home screen, tap  **Apps** >  **My Files**.

Files stored in the device are organized into the following groups:

- **Recent files:** View recently accessed files.
- **Category:** Files are grouped into the following categories:
 - **Images:** View image files.
 - **Videos:** View video files.
 - **Audio:** View audio files.

— **Documents:** View document files.

— **Download history:** View all apps and files that have been downloaded to the device.

- **Local storage:** View folders and files in their storage locations.

— **Device storage:** View folders and files located on the device.

- **Cloud storage:** Contains shortcuts to FTP servers or other cloud storage locations that you have added.

— **Google Drive:** View files saved to your Google Drive account.

DRAFT
FOR INTERNAL USE ONLY

My Files Options

On the main My Files screen, the following options are available:

- **SEARCH:** Search for a file or folder.
- **MORE:** Tap for the following options:
 - **Edit:** Edit files shown in Recent files.
 - **Cloud:** Open files in the Verizon Cloud.
 - **Clear recent file history:** Clear the Recent files category.
 - **Show/Conceal hidden files:** Show or conceal hidden files.
- **STORAGE USAGE:** Tap to view memory information for your device.

Note: Options vary by category and folder.

Category Options

After tapping on a category, the following options are available:

- **HOME:** Return to the main My Files screen.
- **SEARCH:** Search for a file in the selected category.
- **MORE:** Tap for the following options:
 - **Edit:** Select files or folders.
 - **Share:** Share files or folders.
 - **Cloud:** View files saved in the Verizon Cloud.
 - **View as:** Change the appearance of the files or folders.
 - **Sort by:** Change the sort order of the files.
 - **Show/Conceal hidden files:** Show or conceal hidden files.

Note: Options vary by category and folder.

DRAFT
FOR INTERNAL USE ONLY

Options for Selected Files and Folders

► Tap **MORE > Edit**, select a file or folder, and then use one of these functions:

 
- **DELETE:** Delete files or folders.
- **MORE:** Select one of the following options:
 - **Move:** Move files or folders to another folder.
 - **Copy:** Copy files or folders to another folder
 - **Rename:** Rename a file or folder. This option only appears when just one file or folder is selected.
 - **Add shortcut on Home screen:** Add a shortcut to the folder/file on the main Home screen.

- **Compress:** Create a zip folder containing the selected files. This option only appears in Local Storage categories. A selected zip folder has the additional options of **Extract** and **Extract to current folder**.
- **Details:** View details of the selected file(s) or folder(s).

Note: Options vary by category and folder.



DRAFT
FOR INTERNAL USE ONLY

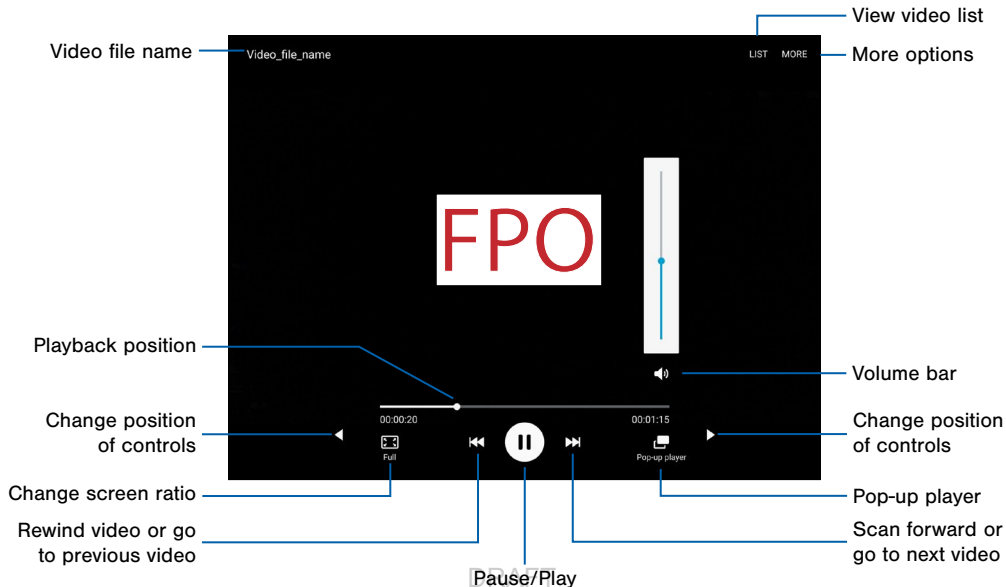Video Player






FOR INTERNAL USE ONLY

Play videos stored on your device.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device.
After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

Use Pop-up Player

Multi task with Pop-up player by transforming your video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  **Pop-up player** to continue playing the video in a floating window.
 - Drag the window to any location on the screen.
 - Use two fingers to pinch or spread to resize the floating window.




DRAFT
FOR INTERNAL USE ONLY

Settings



Configure your device's connections and settings, add accounts, and customize the home screen, apps, and features.

DRAFT
FOR INTERNAL USE ONLY


About Settings

- Some options are enabled or disabled by tapping the **ON/OFF** button to turn the option  ON or  OFF.
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  checkbox. When enabled, a check mark displays.

Access Settings

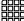► From a Home screen, tap  **Apps** >  **Settings**.

– or –



From a Home screen, drag down from the Status Bar to display the Notification Panel, and then tap  **Settings**.

DRAFT
FOR INTERNAL USE ONLY

Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features such as Wi-Fi.

While in airplane mode, you can use other features, such as playing music, watching videos, or other applications.

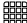1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Airplane mode**, and then tap **ON/OFF** to enable or disable the option.

Note: You can also control Airplane mode from the Device options menu. Press and hold the **Power** key, and then tap **Airplane mode**.



DRAFT
FOR INTERNAL USE ONLY

Wi-Fi Settings



Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Communication requires access to a Wireless Access Point (WAP).

Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** beside Wi-Fi to turn Wi-Fi on or off.

Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap the network you want to connect to.
 - When you select an open network, you are automatically connected to the network.
 - Enter a wireless password, if necessary.



DRAFT
FOR INTERNAL USE ONLY

Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi** > **MORE** > **Add network**.
3. Enter information about the Wi-Fi network:
 - Tap **Enter SSID** to enter the name of the Wi-Fi network.
 - Tap the **Security** field and select a security option. This must match the current security setting on your target WAP. If secured, you will also need to enter your WAP's password.
 - Tap **Show advanced options**, if you need to add advanced options such as Proxy and IP settings.
4. Tap **CONNECT** to store the new information and connect to your target WAP.

Wi-Fi Options

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **ON/OFF** to turn Wi-Fi on.
3. Tap **MORE** for options:
 - **Add network:** Manually enter the credentials for a Wi-Fi network.
 - **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
 - **WPS PIN entry:** View the PIN used by your tablet to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
 - **Smart network switch:** Automatically switch between mobile data and Wi-Fi to maintain a stable Internet connection.
 - **Advanced:**
 - **Show Wi-Fi pop-up:** When opening apps, see a pop-up when Wi-Fi is available.

DRAFT
FOR INTERNAL USE ONLY

- **Wi-Fi notifications:** Receive a notification when new Wireless Access Points (WAPs) are available.
- **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
- **Always allow scanning:** Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
- **Install certificates:** Install authentication certificates.
- **MAC address:** View your device's MAC address, which is required when connecting to some secured networks (not configurable).
- **IP address:** View your device's IP address (not configurable).
- **Manage networks:** Manage your saved Wi-Fi network connections.
- **Help:** Learn about setting up and using Wi-Fi networks, and other settings.

Wi-Fi Status Indicators



Status Bar icons show your current Wi-Fi connection status:

- When Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP),  displays.
- If a Wi-Fi access point is available, but your device is not connected to it,  displays. It may also display if there is a communication issue with the target Wireless Access Point (WAP).


DRAFT
FOR INTERNAL USE ONLY

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.

Wi-Fi Direct Status Indicator

When your device is connected to another device using Wi-Fi Direct,  displays in the Status Bar.



DRAFT
FOR INTERNAL USE ONLY

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.



Note: The Bluetooth communication range is approximately 30 feet.

Turn Bluetooth On or Off

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.

Scan for Bluetooth Devices



When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **SCAN**. Nearby devices display on the screen.

DRAFT
FOR INTERNAL USE ONLY




Review Files Received with Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** > **MORE** > **Received files**.



Change Your Device's Name

Device names are used to identify devices during pairing, and when using Wi-Fi Direct or other Wi-Fi based features. This is the name others will use when pairing with your device via Bluetooth.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** >  **More options** > **Rename device**.
3. Use the keyboard to edit your device name.

View Help

You can access Help for the Bluetooth feature.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** > **MORE** > **Help**.

DRAFT
FOR INTERNAL USE ONLY

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.




Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **SCAN**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your device then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

Delete a Paired Device (Unpair)

When you unpair from a Bluetooth device, the two devices will no longer recognize each other. To connect again, you'd need to pair the devices.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Settings** next to the paired device, and then tap **Unpair** to delete the paired device.

DRAFT
FOR INTERNAL USE ONLY

Data Usage

Monitor your mobile data usage.

Note: Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Data usage** for options:

- **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
- **Limit mobile data usage:** When enabled, your mobile data connection will be disabled when the specified limit is reached. Drag the red limit line to set the data usage limit.
- **Alert me about data usage:** Receive an alert when mobile data usage reaches the warning limit you set. Drag the orange warning line to set the data usage warning limit.
- **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.

3. Tap **MORE** for other options:

- **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
- **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.
- **Restrict networks:** Select Wi-Fi networks that are Mobile Hotspots and restrict background apps from using these networks.
- **Show units:** Automatically switch between megabytes and gigabytes (MB/GB), or show only megabytes or gigabytes.
- **Help:** Read help topics for Data Usage.

DRAFT
FOR INTERNAL USE ONLY

More Settings

The More settings allow you to configure a variety of communication settings for your device.

Mobile Hotspot



Use Mobile Hotspot to share your device's Internet connection with other devices using your device as a Mobile Hotspot.

Note: Mobile Hotspot may require a subscription to Mobile Hotspot/Mobile Broadband Connect service. For more information, contact Verizon Wireless.

Warning: Using your device as a mobile hotspot consumes battery power and uses data service. While Mobile Hotspot is active, your device's applications will use the Mobile Hotspot data service. Roaming while using your device as a mobile hotspot will incur extra data charges.

Turn Mobile Wi-Fi Hotspot On or Off

Activate your device's Mobile Hotspot application to allow other devices to use your device's Internet connection.



1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on or off.

Warning: By default, your device's Mobile Hotspot has no security applied, and any device can connect. To set a password for your Mobile Hotspot, see [“Change the Mobile Hotspot Password” on page 85](#).

DRAFT
FOR INTERNAL USE ONLY



Connect a Device to Your Mobile Hotspot

Use the other device's Wi-Fi control to connect to your device's Mobile Hotspot.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on.
3. Activate Wi-Fi on the target device.
4. Scan for Wi-Fi hotspots, and select the target device from the list.
5. On the target device, enter your device's Mobile Hotspot password.



Allowed Device List

Control whether devices can connect to your Mobile Hotspot with the Allowed device list. After you add devices to the list, they can scan for your device and connect using your device's Mobile Hotspot name and password.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on.
3. Tap **MORE** > **Allowed devices**, and then tap **ADD** to enter the other device's Device name and MAC address.
4. Tap **OK** to add the device.



DRAFT
FOR INTERNAL USE ONLY

Change the Mobile Hotspot Password

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on.
3. Tap **MORE** > **Configure Mobile Hotspot**.
4. Tap the **Security** field, select **WPA2 PSK**, and enter a new password.



Turn Off Mobile Wi-Fi Hotspot Automatically

Set your device to automatically turn off Mobile Wi-Fi hotspot if there are no connected device.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Mobile Hotspot**.
2. Tap **ON/OFF** to turn Mobile Hotspot on.
3. Tap **MORE** > **Timeout settings** and select an amount of time.

Tethering

Use Tethering to share your device's Internet connection with a computer that connects to your device with a USB cable or by Bluetooth.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Tethering**.
2. Choose a tethering method:
 - **Bluetooth tethering:** Use Bluetooth to pair your device with the computer. (Consult the computer's documentation for more information about configuring your computer to pair with Bluetooth.) Tap **Bluetooth tethering** to turn tethering on.
 - **USB tethering:** Connect the computer to the device with a USB cable, and then tap **USB tethering** to turn tethering on.



Note: Using tethering requires a separate subscription. For more information, contact Verizon Wireless.

DRAFT
FOR INTERNAL USE ONLY

Mobile Networks

You can control your device's access to networks and mobile data services.



Caution: Depending on your service plan, changes you make to mobile networks settings may incur extra charges. Consult Verizon Wireless for information.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Mobile networks** for options:
 - **Data roaming access:** Enable or disable connection to data services when your device is roaming on another network.
 - **Roaming:** (Not configurable) Current roaming status.
 - **Signal strength:** (Not configurable) Current signal strength.
 - **Network mode:** Choose a preferred network mode.
 - **Access Point Names:** Configure wireless network access.

- **Network operators:** Select a network from all available networks, to automatically select a network from your preferred networks.

Printing

Print images and documents to Samsung printers and other compatible printers (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Printing**.
2. Tap a print service and follow the prompts.

Note: Tap **Download plug-in** to install additional print service drivers.



DRAFT
FOR INTERNAL USE ONLY

Virtual Private Networks (VPN)



Set up and manage Virtual Private Networks (VPNs).

You must set a screen lock pattern, PIN, password, or fingerprint before setting up a VPN. For more information, see [“Set a Screen Lock” on page 108](#).



Add a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap **Basic VPN** or **Advanced IPsec VPN** and follow the prompts to set up your VPN.

Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap either **Basic VPN** or **Advanced IPsec VPN**.
3. Tap the VPN you want to connect to, enter your log in information, and tap **Connect**.



Edit or Delete a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **VPN**.
2. Tap either **Basic VPN** or **Advanced IPsec VPN**.
3. Touch and hold the VPN that you want to edit or delete.
4. Tap either **Edit network** or **Delete network**.

DRAFT
FOR INTERNAL USE ONLY

Ethernet Connection



Manage your Ethernet connection.

1. From a Home screen, tap  **Apps** >  **Settings** > **More**.
2. Tap **Ethernet** and follow the prompts to connect to an Ethernet network.

Nearby Devices

Share your media files with nearby devices via Wi-Fi.



Warning: If file sharing is enabled, other devices can access your data. Use this option with care.

1. From a Home screen, tap  **Apps** >  **Settings** > **More** > **Nearby devices**.
2. Tap **ON/OFF** to enable Nearby devices.
3. Set the following options:
 - **Content to share:** Select the content to share. Choices are: Videos, Photos, and Music.
 - **Allowed devices:** Indicate the devices accessible to your device.

- **Blocked devices:** Indicate the devices not accessible to your device.
- **Download to:** Set whether to download data to Device or SD card.
- **Receive files from other devices:** If a nearby device attempts to upload data, this setting indicates the response.

View Your Verizon Account

View your Verizon account and data plan information.

- From a Home screen, tap  **Apps** >  **Settings** > **More** > **View Verizon Account**.

DRAFT
FOR INTERNAL USE ONLY



Sound and Notification Settings

Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.

Sound Mode

You can switch between sound modes, while preserving the individual sound settings you've made.

Tip: Sound modes are also available from the Device options menu. Press and hold the **Power** key, and then choose Mute, Vibrate, or Sound from the Device options menu.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Sound mode**, and then choose a mode:
 - **Sound:** Your device uses the sounds, vibrations, and volume levels you've chosen in Sound settings for notifications and alerts.

- **Vibrate:** Your device vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
- **Mute:** Your device plays no sounds or vibrations. Onscreen reminders will still occur.

Adjust the Volume

Set the system volume level, and set default volume for notifications and other media.



Tip: You can also set System volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Volume**, and then drag the sliders to set the default volume for:
 - Notifications
 - Media
 - System

DRAFT
FOR INTERNAL USE ONLY



Sounds

Configure notification and system sounds.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Sounds** for the following options:
 - **Default notification sound:** Choose a sound for notifications, such as for new messages and event reminders.
 - **Calendar:** Configure event notifications.
 - **Email:** Configure email account notifications.
 - **Touch sounds:** Play tones when you touch or tap the screen to make selections.
 - **Screen lock sounds:** Play a sound when you unlock the screen.
 - **Keyboard sound:** Play a sound when the Samsung keyboard is tapped.

Vibrations

Set the level for vibration to accompany notifications and feedback for your screen touches, also known as haptic feedback.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Vibrations** for the following options:
 - **Vibration intensity:** and then drag the sliders to set the vibration intensity for:
 - Notifications
 - Vibration feedback
 - **Vibration feedback:** Tap the **ON/OFF** switch to enable vibrations when the softkeys are tapped and for certain software actions.
 - **Keyboard vibration:** Tap the **ON/OFF** switch to enable vibrations when the Samsung keyboard is tapped.

DRAFT
FOR INTERNAL USE ONLY



Sound Quality and Effects

Choose from advanced sound options to customize your audio experience.

Adapt Sound

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Sound quality and effects**.
3. Tap **Adapt Sound** and follow the prompts to customize your sound settings.



Other Advanced Options

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Sound quality and effects**.
3. Tap **ON/OFF** to enable each option:
 - **SoundAlive+**: Recreate the effects of rich surround sound.
 - **Tube Amp**: Simulate the soft timbre of a tube amplifier.

Do Not Disturb

This setting allows you to block all notifications and alerts. The options below determine what notifications can make sounds, and during what time periods you want to enter this mode.



To activate Do Not Disturb mode:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Do not disturb**.
3. Tap **ON/OFF** to turn the feature on.
4. Tap **Allow exceptions** to allow alarms, calls, messages, or events and reminders.
5. Tap **Set schedule** and then tap **Days**, **Start time**, and **End time** to set up a do not disturb schedule.

DRAFT
FOR INTERNAL USE ONLY



Notifications on Lock Screen

You can select what notifications, if any, appear on the Lock screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **Notifications on lock screen** and select an option: **Show content** or **Do not show notifications**.

App Notifications

Configure notifications for each app on your tablet.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound and notification** > **App notifications**.
3. Scroll through the alphabetical list of apps and tap the app.

DRAFT
FOR INTERNAL USE ONLY

Display and Wallpaper Settings

Adjust the Screen Brightness



Adjust the screen brightness to suit your surroundings, or to your personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Brightness** for options:
 - Tap **Auto** to allow the device to adjust brightness automatically.
 - To set a custom brightness level, clear the Automatic brightness check mark and then tap and drag the slider for **Brightness**.

Note: You can also control Brightness from the Notification panel. Drag down the Status bar at the top of the screen to find the Brightness options.

Change Wallpaper



Change the look of the home and lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Wallpaper**.
3. Tap **HOME SCREEN, LOCK SCREEN**, or **HOME AND LOCK SCREENS**.
4. Tap a image to preview it, or tap **From Gallery** to choose your own image.
5. Once you have chosen an image, tap **SET AS WALLPAPER**.

DRAFT
FOR INTERNAL USE ONLY



Change the Font Style and Size

You can set the font style and size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Font** to choose a Font style and Font size.
 - Drag the slider to adjust the font size.
 - Tap a font style to select a font, or tap **Download fonts** to find new fonts from GALAXY Apps.
3. Tap **DONE** to set the font size and style.



Screen Rotation

Set the screen to rotate when the device is rotated (landscape or portrait).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Screen rotation**.
3. Tap either **Rotate screen content** or **Stay in current orientation**.



Set the Screen Timeout Delay

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Screen timeout**, and then choose a time period.

Smart Stay



Using the front camera to detect your face, the screen will not time out as long as you are facing the screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Smart stay** to enable.

DRAFT
FOR INTERNAL USE ONLY


Select a Screen Mode

Choose a screen mode to match your type of viewing. Set your device automatically adapt the display depending on the type of image being displayed and other criteria such as battery level.





1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display and wallpaper** > **Screen mode**, and then choose a screen mode.
 - To have your device automatically optimize the display to match the type of image being displayed and other criteria, such as battery level, tap **Adaptive display**.

Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included), or while charging. You can choose to display colors, or display photos stored on your device.

1. From a Home screen, tap  **Apps** >  **Settings**.



2. Tap **Display and wallpaper** > **Daydream**. Tap **ON/OFF** to turn Daydream on. Configure options:

- **Colors**: Tap the selector to display a changing screen of colors. Tap  **Settings** for options.
- **Google Photos**: Display pictures from your Google Photos account. Tap  **Settings** for options.
- **Photo Frame**: Display pictures in a photo frame. Tap  **Settings** for options.
- **Photo Table**: Display pictures in a photo table. Tap  **Settings** for options.

DRAFT
FOR INTERNAL USE ONLY

Motions and Gestures

Control certain device actions by touching the screen with the palm of your hand.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Motions**.
3. Tap **ON/OFF** to enable each of the following:
 - **Mute:** Mute sounds and video by placing your hand on the screen while the screen is on.
 - **Palm swipe to capture:** Capture an image of the screen when you sweep your hand left or right across the screen.



DRAFT
FOR INTERNAL USE ONLY

Storage


View the device memory and usage, or mount, unmount, or format an optional memory card (not included).

Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
 - The Device memory displays as Total space and Available space.
 - The amounts of memory used by Applications, Pictures and videos, Audio, Downloads, Cached data, and Miscellaneous files are also displayed.

To increase available memory:

1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **SELECT ALL**), and then tap  **Delete**.

Memory Card (SD Card)

Once a memory card (not included) has been installed in your device, the card memory displays as Total space and Available space.

DRAFT
FOR INTERNAL USE ONLY

Install a Memory Card



You can use a microSD or microSDHC card (not included) to add additional memory space to your device.



1. Open the microSD card slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Close the microSD card slot cover.

Mount a Memory Card



When you install a memory card (not included), it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Mount SD card**.

DRAFT
FOR INTERNAL USE ONLY



Remove a Memory Card

Warning: To prevent damage to information stored on the memory card (not included), unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Unmount SD card**.
3. Open the memory card slot cover and turn to expose the slot.
4. Gently press inward on the memory card so that it pops out from the slot, and carefully pull the card out.
5. Close the memory card slot cover.

Format a Memory Card



Warning: When formatting an memory card (not included), you will want to backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Format SD card** and follow the prompts.

DRAFT
FOR INTERNAL USE ONLY

Battery

View how battery power is used for device activities. Conserve battery power by automatically adjusting the screen brightness, limiting the performance of the CPU, and other power reduction activities.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Battery** for options:

- **Power saving mode:** Tap **ON/OFF** to turn the feature on, and customize options.
- **Ultra power saving mode:** Tap **ON/OFF** to turn the feature on. Ultra power saving mode saves even more battery power by using a grayscale theme to your home screen and limiting the number of usable apps.
- **Display battery percentage:** Display the battery charge percentage next to the battery icon on the Status bar.

- **Battery Chart:** The battery level displays as a percentage. The amount of time the battery has been used also displays. Tap the **chart** to view History details.
- Tap **REFRESH** to update the listing.

Note: Other applications may be running that affect battery use.

DRAFT
FOR INTERNAL USE ONLY

Application Settings

Use the Application manager to manage the system requirements of your applications. You can also configure your Default application settings.



Application Manager

You can download and install new applications on your device. Use the Application manager to configure your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Memory Usage

See how memory is being used by Downloaded or Running applications.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. Tap **DOWNLOADED**, **SD CARD**, **RUNNING**, or **ALL** tabs to display memory usage for that category of applications.

The graph at the bottom of the DOWNLOADED tab shows used and free device memory. The graph at the bottom of the RUNNING tab shows used and free RAM.

DRAFT
FOR INTERNAL USE ONLY

Downloaded

Displays apps you have downloaded onto your device.



1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
 - To switch the order of the DOWNLOADED list, tap **MORE** > **Sort by size** or **Sort by date**.
 - To reset your application preferences, tap **MORE** > **Reset app preferences**.
 - To uninstall more than one app, tap **MORE** > **Uninstall multiple**.
3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions. The following actions are available
 - **FORCE STOP**: Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.

- **UNINSTALL**: Delete the application from the device.
- **MOVE TO SD CARD**: Move this app to your microSD card.
- **CLEAR DATA**: Clear application data from memory.
- **CLEAR CACHE**: Clear an application's temporary memory storage.
- **CLEAR DEFAULTS**: Clear an application's customization.

DRAFT
FOR INTERNAL USE ONLY



SD Card

Displays apps you have downloaded onto your memory card (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. Tap **SD CARD** to view a list of all the downloaded applications on your device.
 - To switch the order of the SD CARD list, tap **MORE** > **Sort by size** or **Sort by date**.
 - To reset your application preferences, tap **MORE** > **Reset app preferences**. (When you Reset app preferences, you will not lose any app data.)
 - To uninstall more than one app, tap **MORE** > **Uninstall multiple**.
4. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

Running Services

View and control services running on your device.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. Tap **RUNNING**.
4. Tap **SHOW CACHED PROCESSES** to display all the cached processes that are running. Tap **SHOW SERVICES IN USE** to switch back.
5. Tap one of the applications to view application information. (Options vary by application.)
 - **STOP**: Stops the application from running on the device. This is usually done prior to uninstalling the application.
 - **REPORT**: Report failure and other application information.

Warning: Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.

DRAFT
FOR INTERNAL USE ONLY



Default Applications

Set and manage your default applications.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Default applications**.
3. Tap **CLEAR** to remove a default.

Applications Settings Shortcuts

Shortcuts to the settings for various apps are available in one convenient location.

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications**.

2. Tap one of the following to display the settings for the selected app:

- Calendar
- Camera
- Contacts
- Email
- Music
- Weather

DRAFT
FOR INTERNAL USE ONLY



Users

Share this tablet with multiple people by creating User accounts. Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust tablet settings like Wi-Fi which affect everyone.




Note: Restricted profiles allow only limited access to apps and content.

Set Up User Profiles

Set up user profiles and then select one when unlocking the device to use personalized settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. Tap **Add user or profile** and follow the instructions to set up a new user profile.

Delete a User or Profile

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. Tap  **Delete** next to a user profile to delete it.

Note: Only the device owner can delete other user accounts.

Change User Profiles



Switch between users by sliding down the Notification Panel and tapping the **Users** icon. Then you can tap another user, add a user, or configure user settings.

DRAFT
FOR INTERNAL USE ONLY

Location



Some apps, such as Google maps, may require one or more location services be turned on for full functionality.

Location Method

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to enable Location services.
3. Tap **Locating method** to select how your location is determined:
 - **High accuracy**: Use GPS, Wi-Fi, and mobile networks.
 - **Power saving**: Use Wi-Fi and mobile networks (no GPS).
 - **GPS only**: Use GPS only.

Recent Location Requests

Apps that have requested your location are listed under Recent location requests.



1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to enable Location services.
3. Tap an entry to view the app's settings.

DRAFT
FOR INTERNAL USE ONLY

Location Services

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

Note: A Google Account is required in order to use this feature.



1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to enable Location services.
3. Tap **Google Location Reporting** for options:
 - **Location Reporting:** Allow Google apps to use your device's most recent location data.
 - **Location History:** Allow Google to store a history of your location data. Tap **DELETE LOCATION HISTORY** to permanently delete your location history.

DRAFT
FOR INTERNAL USE ONLY

Lock Screen and Security

Choose settings for locking and unlocking your screen, as well as other security settings.

Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Screen lock** to select a screen lock and level of security:
 - **Swipe:** Swipe the screen to unlock it. This option provides no security.
 - **Pattern:** A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
 - **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.
 - **Password:** Create a password for unlocking the screen. This option provides high security.

3. If choosing a secured lock screen option, select your notification settings:

- **Show content**
- **Hide content**
- **Do not show notifications**

Screen Lock Options

- **Show information:** Show the dual clock, or information such as the weather information, on the lock screen.
- **Unlock effect:** Set the visual effect used when unlocking the screen. (This option is available for Swipe only.)
- **Secure lock settings:** Set your secure lock functions such as Auto lock, Lock instantly with Power key, and Smart lock. (These options are available for Pattern, PIN, Password, and Fingerprint locks.)

Note: Options vary based on the screen lock type.



DRAFT
FOR INTERNAL USE ONLY

Find My Mobile

Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely.

- To access your device remotely, visit findmymobile.samsung.com.

Note: You must sign up for a Samsung account and enable Google location service to use Find My Mobile.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Find My Mobile**.
3. Enter your Samsung account password, or if you are not logged in to your Samsung account, tap **Add account** and follow the prompts.
4. The following options are available:
 - **Remote controls:** Tap to activate or deactivate Remote controls, which allows you to access your device remotely.
 - **Google location service:** Tap to activate or deactivate Google location service. This service must be on in order to find your phone.

- **SIM change alert:** Prevent unauthorized changes to your SIM card by being alerted whenever an app or service attempts to change data on your SIM card.
- **Reactivation lock:** Use your Samsung account to stop anyone from reactivating you device without your permission.

DRAFT
FOR INTERNAL USE ONLY

Unknown Sources



Enable installation of non-Google Play applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Lock screen and security**.
2. Tap **Unknown sources** to enable this option.

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

Encrypt Your Data

Require a numeric PIN or password to decrypt your device each time you power it on or encrypt the data on a memory card (not included) each time it is connected.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following options:
 - **Encrypt device:** Require a password to decrypt your device each time you turn it on.

- **Encrypt external SD card:** Tap to enable the encryption of SD card data, requiring a password to be entered each time the microSD card is connected.

Note: Make sure your battery is charged more than 80 percent. Encryption takes an hour or more.

Set Up SIM Card Lock

To prevent another person from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card, you can protect the information by using a PIN code. When enabled, your device asks for a PIN number each time you use the phone. Using this option you can also change your SIM PIN number.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Set up SIM card lock**.
3. Touch **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate **Lock SIM card** before you can change your SIM PIN code.

DRAFT
FOR INTERNAL USE ONLY



View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Make passwords visible** to turn the feature on.

Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for options:
 - **Security policy updates:** Automatically or manually check for security policy updates.
 - **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.

Device Administration



Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Device administrators** to add or remove device administrators.

DRAFT
FOR INTERNAL USE ONLY



Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for options:
 - **Storage type:** Select a storage location for credential contents.
 - **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
 - **Install from phone storage:** Install a new certificate from storage.
 - **Clear credentials:** Erase the credential contents from the device and reset the password.

Advanced Security

Protect your device with these advanced security options.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for options:
 - **Trust agents:** View or disable trusted agents. (This option is available only with secure locks, like PIN and password.)
 - **Pin windows:** Pin a specific app on your phone screen.
 - **Usage data access:** View which applications can access your device's usage history.
 - **Notification access:** View which applications can access your notifications.

Note: To view Trust agents and Smart Lock, set up a secured screen lock (like pin, password, or pattern). For more information, see [“Lock Screen and Security” on page 108](#).



DRAFT
FOR INTERNAL USE ONLY

Privacy Settings

Hide personal content from being accessed by anyone else using your device. Private mode is only available for certain applications.

Note: A secure screen lock (Pattern, PIN, Fingerprint, or Password) is required to use Private Mode.

Set Up Private Mode

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Private mode**.
3. If prompted, set up a secure screen lock.
4. Tap the **ON/OFF** switch to enable Private mode.



DRAFT
FOR INTERNAL USE ONLY

Accounts



Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.

Add an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap **Add account**.
3. Tap an account type.
4. Follow the prompts to enter your credentials and set up the account.



Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap an account type.
3. Tap an account to view the sync settings for that account.
 - Check individual data items to sync.
 - If you wish to sync manually, tap **MORE** > **Sync now**.

Note: Settings and options differ by account type.

DRAFT
FOR INTERNAL USE ONLY

Delete an Account



1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap an account type.
3. Tap the account.
4. Tap **MORE** > **Remove account**.
5. At the prompt, tap **REMOVE ACCOUNT**.

DRAFT
FOR INTERNAL USE ONLY



Language and Input

Configure your device's language and input device settings.

Set Your Default Language



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.

Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Default keyboard** and select a keyboard.

Note: Additional keyboards can be downloaded from the Google Play store.



Samsung Keyboard Settings

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Samsung keyboard** for the following menus:
 - **Input languages:** Select the keyboard language.
 - **Smart typing:** Configure smart features available on the Samsung keyboard, such as predictive text, auto correction, and swipe entry.
 - **Key-tap feedback:** Configure feedback features for the Samsung keyboard.
 - **Other settings:** Change other settings such as the keyboard size, or reset settings for the Samsung keyboard.

DRAFT
FOR INTERNAL USE ONLY


Google Voice Typing Settings




Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Tap the checkbox next to Google voice typing to enable it.
4. Tap **Google voice typing** for options:
 - **Choose input languages:** Select languages for Google voice typing.
 - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
 - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.

Voice Input

Use Google voice recognition to perform Google searches.




To perform a voice search, tap  in the Google search bar or widget. Or say “**OK Google**” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Voice input** for options.
 - Tap **Enhanced Google services** for full voice interaction.
 - Tap **Basic Google recognition** for simple voice recognition.
3. Tap  **Settings** beside the service to customize.

DRAFT
FOR INTERNAL USE ONLY



Text-To-Speech Options

Configure your text-to-speech options.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Text-to-speech options**:
 - Tap  **Settings** next to the **Samsung text-to-speech engine** for options.
 - **Speech rate**: Set the speed at which the text is spoken.
 - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
 - **Default language status**: Display the default language in use.

Mouse/Trackpad Settings

Configure settings for using an optional mouse or trackpad (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Pointer speed**.
3. Touch and drag the slider to set the speed of the pointer.



DRAFT
FOR INTERNAL USE ONLY

Backup and Reset

Back up your data to Google servers. You can also reset your device to its factory defaults.

Backup and Restore



Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** for options:
 - **Backup account:** Select a Google Account to be used as your backup account.
 - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
 - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Factory Data Reset

Return your device to its factory defaults.

Warning: This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Factory data reset**.
3. Tap **RESET DEVICE** and follow the prompts to perform the reset.

DRAFT
FOR INTERNAL USE ONLY

Reset Your System Settings

Reset your system settings back to their defaults.

Warning: This action returns your device to its factory default settings. This will not affect your downloaded apps, personal data, your security settings, language settings, account settings, or your default application settings.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Reset settings**.
3. Tap **RESET SETTINGS** and follow the prompts to perform the reset.

DRAFT
FOR INTERNAL USE ONLY

Date and Time

By default, your device receives date and time information from the wireless network.

When you are outside network coverage, you may want to set date and time information manually using the Date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Date and time**.

- **Automatic date and time:** Tap the checkbox to use the time on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the date and time.
- **Automatic time zone:** Tap the checkbox to use the time zone detected on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the time zone.



- **Set date:** Tap to manually set the date. This option is locked if **Automatic date and time** is enabled.
- **Set time:** Tap to manually set the time. This option is locked if **Automatic date and time** is enabled.
- **Select time zone:** Tap to manually set the time zone. This option is locked if **Automatic time zone** is enabled.
- **Use 24-hour format:** Tap to use 24-hour format (as opposed to 12-hour with AM and PM).
- **Select date format:** Tap to choose your preferred date format.

DRAFT
FOR INTERNAL USE ONLY

Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

Note: You can download additional accessibility applications from the Google Play store.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accessibility** for options:

Vision

- **Voice Assistant:** Speak feedback aloud to help blind and low-vision users.
 - Voice Assistant can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

- You can turn on Voice Assistant from any screen by pressing the Home key quickly three times (triple-press).
- **Voice Assistant help:** Tap for help on using Voice Assistant.
- **Dark screen:** Keep the screen turned off at all times for privacy.
- **Rapid key input:** Release your finger to enter selection instead of double tapping.
- **Speak passwords:** Read the characters aloud as you enter your passwords.
- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Magnifier window:** Magnify content shown on the screen.
- **Grayscale:** Change all colors to gray.

DRAFT
FOR INTERNAL USE ONLY

- **Negative colors:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap **Color adjustment** for options.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [“Accessibility” on page 122](#).

Hearing

- **Turn off all sounds:** Turn off all sounds including receiver voice.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available Tap **Samsung subtitles (CC)** for options.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap **Google subtitles (CC)** for options.

- **Left and right sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.
- **Auto haptic:** The device will vibrate in time to the sound when listening to music, watching videos, or playing games.

Dexterity and Interaction

- **Universal switch:** Control your phone with your customized switches.
- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Touch and hold delay:** Select a time interval for this action.
- **Interaction control:** Enable motions and screen timeout. You can also block areas of the screen from tap interaction.

DRAFT
FOR INTERNAL USE ONLY

More Settings

- **Direction lock:** Unlock the screen by swiping in a series of four to eight directions.
- **Direct access:** Open your accessibility settings by pressing the Home Key three times in quick succession.
- **Notification reminder:** Beep at set intervals to remind you of any unread notifications.
- **Single tap mode:** Tap to stop/snooze alarms and calendar events.
- **Manage accessibility:** Export your accessibility settings and share them with another device.



Services

Additional accessibility apps may be downloaded from the Google Play store. Certain accessibility services you install may be configured here.

DRAFT
FOR INTERNAL USE ONLY

Help



View tips and guidelines for using your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Help** for information about new features, applications, settings, and so on.

DRAFT
FOR INTERNAL USE ONLY

About Your Device



View information about your device, including status, legal information, hardware and software versions, and a tutorial.

1. From a Home screen, tap  **Apps** >  **Settings**.
 2. Tap **About device**, and then tap items for more details:
 - **Icon glossary:** View information about the status icons and notification icons used on the Status bar.
 - **Status:** View the status of the battery, network, and other information.
 - **Legal information:** Display open source licenses, Google legal information, and Samsung legal information.
 - **Device name:** View and change your device's name.
- Additional device information includes the Model number, Android version, Kernel version, Build number, SE for Android status, Hardware version, Security software version, and more.

DRAFT
FOR INTERNAL USE ONLY

System Updates

Use System updates to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **System updates**.
3. Tap **Check for new system update** to check for available software updates to download and install.

DRAFT
FOR INTERNAL USE ONLY