

W 7 0 0

T A B L E T

User Manual

Please read this manual before operating your device
and keep it for future reference.

Legal Notices

Warning: This product contains chemicals known to the State of California to cause cancer and reproductive toxicity. For more information, please call 1-800-SAMSUNG (726-7864).

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating thereto (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: opensource.samsung.com.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

DRAFT
FOR INTERNAL USE ONLY

Samsung Knox™

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: samsung.com/us/knox. [030115]

Samsung Electronics America (SEA), Inc

Address:

85 Challenger Road
Ridgefield Park,
New Jersey 07660

Phone:

1-800-SAMSUNG (726-7864)

Internet Address:

samsung.com

©2015 Samsung Electronics America, Inc. Samsung and Galaxy Tab are registered trademarks of Samsung Electronics Co., Ltd.

Screen images are simulated. Appearances of the device may vary.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: samsung.com/us/support.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth® word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Microsoft is a registered trademark of the Microsoft Corporation.

Legal Information

Important legal information can be accessed in writing on the mobile device or at samsung.com.

Read this information before using your mobile device.

Samsung Limited Warranty - This product is covered under the applicable Samsung Limited Warranty. Full written terms and detailed information about the warranty and obtaining service are available on the device at: **Settings > About device > Legal Information > Samsung legal** or at samsung.com.

The online version of the Health/Safety and Warranty guide for your device can be found at:

English

samsung.com/us/Legal/Tablet-HSGuide

Spanish

samsung.com/us/Legal/Tablet-HSGuide-SP

Location of Legal Information on the device:

- Health and Safety Information
Settings > About device > Legal information > Samsung legal > Health and Safety
- Warranty
Settings > About device > Legal information > Samsung legal > Warranty
- EULA
Settings > About device > Legal information > Samsung legal > End User License Agreement

DRAFT
FOR INTERNAL USE ONLY

Table of Contents

Getting Started	1	Video Player	48
Front View	2	Settings	50
Back View	3	How to Use Settings	51
Assemble Your Device	4	Wi-Fi Settings.....	52
Set Up Your Device	6	Bluetooth	54
Set Up Accounts on Your Device	7	Airplane Mode	56
Know Your Device	8	Data Usage.....	57
Home Screen.....	9	More Connection Settings.....	58
Status Bar	12	Sounds and Notifications.....	59
Navigation, Motions, and Gestures	13	Display Settings	62
Notification Panel	14	Motions and Gestures.....	64
Multi Window	16	Applications Settings.....	65
Enter Text	18	Users.....	68
Applications	20	Wallpaper Settings.....	69
Apps List	21	Lock Screen and Security	70
Microsoft Applications	23	Privacy	74
Other Applications	24	Accessibility.....	76
Calculator.....	25	Accounts.....	78
Calendar	26	Backup and Reset.....	79
Camera.....	28	Language and Input Settings.....	80
Clock.....	31	Battery.....	82
Contacts.....	33	Storage	83
Email	36	Accessories.....	85
Galaxy Apps	37	Date and Time Settings	86
Gallery.....	38	About Your Device	87
Internet.....	40		
Memo	42		
Music Player.....	43		
My Files	45		
Smart Manager	47		

DRAFT
FOR INTERNAL USE ONLY

Getting Started

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

DRAFT
FOR INTERNAL USE ONLY

Front View



- **Back:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Front camera:** Take pictures and record videos of yourself.
- **Home key and Finger scanner:** Press to return to the Home screen. Activate the Fingerprint security feature.
- **Light sensor:** Use the ambient light level to adjust the screen brightness and contrast.
- **Memory card slot:** Install an optional memory card (not included) for storage of files.
- **Microphone:** Records audio and detects voice commands.
- **Power key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane Mode.
- **Recent:** Tap to display recent apps or touch and hold for Home screen options.
- **Volume key:** Press to adjust the volume of your device's sounds.

DRAFT
FOR INTERNAL USE ONLY

Back View



- **Headset jack:** Connect an optional headset (not included).
- **Rear camera:** Take pictures and record videos.
- **Simple clicker:** These retractable circles securely attach optional covers (not included) to your device.
- **Speaker:** Plays music and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

DRAFT
FOR INTERNAL USE ONLY

Assemble Your Device

This section helps you to assemble your device.

Install an Optional Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [Install a Memory Card](#).

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery.

The battery comes partially charged. A fully discharged battery requires up to four hours of charge time. You can use the device while charging.

Caution: Use only Samsung-approved charging devices and batteries. Samsung accessories are designed to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

1. Insert the USB cable into the port.



2. Connect the USB cable to the charging head, then plug the charging head into a standard AC power outlet.
3. When charging is complete, unplug the charging head from the power outlet and remove the USB cable from the device.

Caution: Failure to unplug the wall charger before you remove the battery can cause damage to the device.


DRAFT
FOR INTERNAL USE ONLY

When to Charge the Battery

When the battery is weak and only a few minutes of operation remain, the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, view the battery charge indicator located in the upper-right corner of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see [Battery](#).

DRAFT
FOR INTERNAL USE ONLY

Set Up Your Device

Turn Your Device On or Off

Turn the Device On

- ▶ Press and hold the **Power** key until the device starts up.

Turn the Device Off

1. Press and hold the **Power** key until the device options menu displays.
2. Tap **Power off**.
3. On the window that appears, tap **POWER OFF**.

Secure Your Device

Use your device's screen lock features to secure your device.

Lock the Device

By default, the device locks automatically when the screen times out.

To lock the device:

- ▶ Press the **Power** key.

Unlock the Device

The default screen lock on your device is Swipe.

To unlock your device:

- ▶ Press the **Power** key or **Home** key, and then touch and drag your finger across the screen.

Set Up a Secure Screen Lock

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see [Set a Screen Lock](#).

DRAFT
FOR INTERNAL USE ONLY

Set Up Accounts on Your Device



Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play store.

When you turn on your device for the first time, set up your existing Google Account or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Google**.

Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Samsung account**.

DRAFT
FOR INTERNAL USE ONLY

Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

DRAFT
FOR INTERNAL USE ONLY

Home Screen

The Home screen is the starting point for using your device.






- **App folder:** For your convenience, applications can be grouped into folders on the Home screens.
- **App shortcuts:** Shortcuts to your favorite applications.
- **Apps list:** Allows quick access to all of your applications.
- **Home screen indicator:** Indicates which Home screen is presently displayed.
- **Notification icons:** Displays new messages and emails, notifications, available software updates, and so on.
- **Status bar:** Displays device status icons (right) and notification icons (left).
- **Status icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widget:** Self-contained application (not a shortcut) that runs on a Home screen.

DRAFT
FOR INTERNAL USE ONLY

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens

Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.
– or –
Touch and hold an empty space on the screen.
2. Use these options to manage screens:
 - **Add a screen:** Swipe to the end of the screens, and then tap  **Add**.
 - **Remove a screen:** Touch and hold a screen, and then drag it to  **Remove**.
 - **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home key.
 - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.
 - **Flipboard Briefing:** Scroll to the left of the screens to find the Flipboard Briefing screen. To activate this feature, tap the checkbox at the top center of the screen.

Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
– or –
Touch and hold an empty space on the screen.
2. Tap **Wallpapers**, and then choose **HOME SCREEN**, **LOCK SCREEN**, or **HOME AND LOCK SCREENS**.
3. Tap a wallpaper to see a sample, and then tap **SET AS WALLPAPER**.

For more information, see [Wallpaper Settings](#).


Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Add a Widget to a Home Screen

1. From a Home screen, pinch the screen.
– or –
Touch and hold an empty space on the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen, and release it.

Remove a Widget

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to  **Remove** and release it.


Note: Removing a widget does not delete the widget, it just removes the widget from the Home screen.

DRAFT
FOR INTERNAL USE ONLY


App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and release it.

Remove a Shortcut

1. Touch and hold a shortcut to release it.
2. Drag the icon to  **Remove** and release it.

Note: Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.



Folders

Place folders on a Home screen to organize items.

Add a Folder to a Home Screen

1. Touch and hold an app icon and drag it on top of another app until a highlighted box appears.
2. Release the app icon to create the folder.






Use Folders









- Tap the folder to view the apps inside.
 - Tap **Enter folder name** to enter a name for the folder.
 - Tap  **Palette** to change the color.
 - Tap anywhere outside of the folder to close it.
- To add more apps, touch and hold an app icon and drag it to the folder.
- To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Remove** and release it.

DRAFT
FOR INTERNAL USE ONLY

Status Bar

The Status bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

Status Icons	
	Battery is fully charged.
	Battery is low.
	Battery is charging.
	Mute mode is enabled.
	Wi-Fi is active.

Notification Icons	
	New email has arrived.
	New Gmail has arrived.
	Download of a file or app is in progress.
	File is being uploaded or sent.
	Location service (GPS) is active.
	App updates are available from the Google Play store.
	App installation or updates are complete.
	Keyboard is in use.

DRAFT
FOR INTERNAL USE ONLY

Navigation, Motions, and Gestures

Touchscreen Navigation

Tap

Lightly tap items to select or launch them.

- Tap the onscreen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

Touch and Hold

Activate onscreen items by a touch and hold gesture.

- Touch and hold a widget on a Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe or Slide

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Unlock the screen.
- Scroll through the Home screens or menu options.

Drag

To drag, touch and hold on an item, and then move it to a new location.

- Add a shortcut to a Home screen.
- Move a widget on a Home screen.

Pinch and Spread



Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Zoom in or out while viewing a picture or a Web page.
- Zoom in or out while taking a picture.

Motions

Control your device by making specific motions with your hand on the device's screen.

Enable Motions

1. From a Home screen, tap  **Apps** >  **Settings** > **Motions and gestures**.
2. Tap **ON/OFF** to enable each feature.

For details, see [Motions and Gestures](#).

DRAFT
FOR INTERNAL USE ONLY



Notification Panel

Notification icons on the Status bar display calendar events, device status, and more. For details, open the Notification panel.



- **Clear notifications:** Tap to clear all notifications.
- **Edit Quick settings:** Tap to change which Quick settings buttons are visible.
- **Manage users:** Tap to manage user accounts.
- **Notification card:** Tap to see details about a notification. Swipe a notification card to the right to dismiss it.
- **Quick settings:** Tap to quickly enable or disable a feature. Swipe to the left to see more settings.
- **Screen brightness:** Drag the slider to adjust screen brightness. Tap **Auto** to have the tablet set the screen brightness using its light sensor.
- **Settings:** Tap to open the Settings screen.

View the Notification Panel

1. Swipe down on the Status bar to display the Notification panel.
2. Scroll down the list to see notification details.
 - Tap an item to open it.
 - To clear a single notification, drag the notification left or right. Tap  **Clear** to clear all notifications.
3. To close the Notification panel, swipe upward from the bottom of the screen or tap  **Back**.

DRAFT
FOR INTERNAL USE ONLY

Quick Settings

In addition to notifications, the Notification panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:


- ▶ Swipe left or right across the visible icons.

To customize Quick settings:

- ▶ On the Notification panel, tap **EDIT**.

S Finder

Search for a wide variety of content with a keyword.

1. Swipe down on the Status bar to display the Notification panel.
2. Tap **S Finder**.
3. Enter a keyword in the **Search device** field, or tap  **Google voice typing** and say a keyword.
 - Tap a location or category to filter your search.

Use Search Location

You can search for content in specific locations.

- ▶ Tap **MORE > Select search locations** and select categories.

Quick Connect

Automatically search for nearby devices and quickly connect to them.

- If the device you want to connect does not support the Quick connect feature, activate its Wi-Fi Direct feature before launching Quick Connect on your device.
- Connection methods may vary depending on the type of connected devices or the content being shared.

Connect to a Device

1. Swipe down on the Status bar to display the Notification panel.
2. Tap **Quick Connect**.
 - If you are using this feature for the first time, select a visibility option and tap **TURN ON QUICK CONNECT**.

When the Notification panel opens, Wi-Fi is activated automatically and the tablet searches for nearby devices.

3. Tap a device and follow the instructions.
 - To change your device's visibility setting, tap **SETTINGS > Device visibility**, and then select an option.
 - If the desired device does not appear in the list, tap **REFRESH**.

Share Content

Share content with a connected device.

1. Swipe down on the Status bar to display the Notification panel.
2. Tap a device from the list of detected devices.
3. Tap **Share content** and select a media category.
4. Follow the instructions to send content to the connected device.

DRAFT
FOR INTERNAL USE ONLY

Multi Window


Multitask by using multiple applications at the same time.





Activate Multi Window

Apps that support Multi window display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.

Note: Multi window is not available for all apps.

1. From any screen, touch and hold  **Recent**.
2. If you are currently using an app that supports Multi window, tap an app to add in split screen, or tap two new apps to open in split view.


You can also launch recently used apps directly into Multi window view:

1. Tap  **Recent**.
2. Recently used apps that support Multi window have a  **Multi window** icon in the title bar. Tap the Multi window icon in the title bar to launch the application in Multi window view.
3. Other recently used apps that support Multi window appear below the launched app. Tap the app icon to add it to the Multi window view.

Note: Only applications that support Multi window have the Multi window icon.

DRAFT
FOR INTERNAL USE ONLY

Window Controls

Select an application window and tap  **Control** in the middle of the window to display the window controls.

Control Buttons



Switch windows: Switch the positions of two Multi Window applications.



Drag and drop content: Move items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.



Minimize window: Minimize the selected app window. This turns the app into a circular, movable icon that can be opened by tapping on it.



Maximize window: Open the selected window in full screen view.



Close app: Close the selected application.

DRAFT
FOR INTERNAL USE ONLY

Enter Text

Use the Samsung Keyboard

Type your text input using a QWERTY keyboard.
Predicted text suggests words based on your typing.



Special Keys



Tap to insert numbers and symbols.



Tap to insert letters.

Touch and hold the **Options** key to:



Use Google Voice Typing.



Use your handwriting to enter text.



Access the clipboard.



Insert emojis.



Change the layout of the keyboard.





Access keyboard settings.

Predictive Text

Predictive text suggest words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.

Configure the Samsung Keyboard

To customize the Samsung Keyboard:

1. From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
2. Tap **Samsung keyboard** for options.

Note: The available Options keys depend on the application in use. Not all options are available for all apps.


DRAFT
FOR INTERNAL USE ONLY

Use Google Voice Typing

Instead of typing, speak your text input.





To enable Google voice typing:

1. On the Samsung Keyboard, tap  **Google Voice Typing**. You may need to touch and hold the **Options** key (left of the **Space** key) to find it.
2. Speak your text.

Configure Google Voice Typing

To customize Google voice typing:

1. From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
2. Tap **Google voice typing** for options.

DRAFT
FOR INTERNAL USE ONLY

Applications

The Apps list displays all applications installed on your device, both preloaded apps and apps you download and install yourself.

Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.


DRAFT
FOR INTERNAL USE ONLY

Apps List

The Apps list shows all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.



Shortcuts to apps can be placed on any of the Home screens. For more information, see [Add a Shortcut to a Home Screen](#).

Access Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.




Download and Install New Apps

Find new apps to download and install on your device.

-  **Play Store:** Download new apps from the Google Play store. Visit play.google.com/store/apps to learn more.
-  **Galaxy Apps:** View and download Samsung apps that are optimized for use with Galaxy devices. Visit samsung.com/levant/apps/mobile/galaxyapps to learn more.



Uninstall or Disable Apps

You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
 - Apps that are disabled are turned off and hidden from view.
1. From a Home screen, tap  **Apps**.
 2. Tap **EDIT**. Apps that can be uninstalled show  **Remove** on their icon.
 3. Tap  **Remove** and follow the prompts to either uninstall or disable the app.
 4. When you are finished, tap **DONE**.

View Disabled Apps

You can place disabled apps back on the Apps list, where they become active once again.


1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Swipe to the DISABLED screen. (This screen only appears if you have disabled apps.)
3. Tap the app you want to enable, and tap **ENABLE**.

DRAFT
FOR INTERNAL USE ONLY



Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.

Change the Order Apps Are Listed

1. From a Home screen, tap  **Apps**.
2. Tap **EDIT**.
3. Touch and hold an app icon to drag it to the location you want.
4. Tap **DONE** when finished.

Use Folders to Organize Apps

1. From a Home screen, tap  **Apps > EDIT**.
2. Touch and hold an app icon and drag it on top of another app until a highlighted box appears.
3. Release the app icon to create the folder.
 - Tap **Enter folder name** to name the folder.
 - Tap  **Palette** to change the folder color.
4. Tap anywhere outside of the folder to close it.
 - To add more apps, touch and hold an app icon and drag it to the folder.
5. Tap **DONE** when you are finished.

DRAFT
FOR INTERNAL USE ONLY

Microsoft Applications

These Microsoft applications are also preloaded on your device.



Excel

The Excel app provides a core experience for viewing, creating and editing documents on tablets with a screen size of 10.1 inches or smaller. You can unlock the full Excel experience with an Office 365 subscription.



OneDrive

OneDrive gives you free online storage for all your personal files so you can get to them from your Android device, computer, and any other devices you use.



OneNote

You can stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive.



PowerPoint

The PowerPoint app provides a core experience for viewing, creating and editing documents on tablets with a screen size of 10.1 inches or smaller. You can unlock the full PowerPoint experience with an Office 365 subscription.



Skype

Use free Skype to hold video and voice calls, as well as send instant messages to anyone around the world. Just open the app and start using it.



Word

The Microsoft Word app provides a core experience for viewing, creating and editing docs on tablets with a screen size of 10.1 inches or smaller. You can unlock the full Word experience with an Office 365 subscription.

DRAFT

FOR INTERNAL USE ONLY

Other Applications

There are also other apps, including several Samsung apps, preloaded on your device.



Milk

Exclusive to Galaxy owners, Milk Music is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free.



Samsung+

Gain all the benefits of owning a Samsung Galaxy device and to get any guidance and support you need along the way.



Screen Saver

When your tablet screen automatically times out, instead of a blank screen, enable the Galaxy Tab S2 Screen Saver, an action-packed video tour of all the fantastic features that you will find on your Galaxy Tab S2.



SideSync 3.0




SideSync is a PC-Mobile solution that enables the screens, windows, and data to be shared easily between a PC and Samsung Android Device.

DRAFT
FOR INTERNAL USE ONLY

Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the  **Equals** key.

Additional Functions

To clear the results:

- ▶ Tap  **Clear**.

To clear the calculator history:

- ▶ Tap **CLEAR HISTORY**.

To copy all or part of the calculation to the clipboard:




- ▶ Touch and hold an entry in the display field.

DRAFT
FOR INTERNAL USE ONLY



Calendar

Manage your calendar events and tasks.



Create an Event

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** to add an event.
3. Enter details for the event, and then tap **SAVE**.

Delete an Event




1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to view it, and then tap **DELETE**, and then confirm by tapping **DELETE**.

Share an Event



1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to view it.
3. Tap **SHARE** and tap a sharing format.
4. In the Share as window, tap a sharing method and follow the prompts.

Create a Task

Tasks are items you add to the calendar to be accomplished on a certain day. A task appears as a checklist item and is removed once you mark the task as complete.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **TASKS**.
3. Tap the **Enter new task** field and type a name for the task.
4. You can choose to set the task for **TODAY**, **TOMORROW**, or tap the  **Expand** icon to view and set the following options:
 - **Due date:** Tap the **ON/OFF** switch to select a date on the calendar for the task.
 - **Reminder:** Tap to set a reminder alert.
 - **Notes:** Tap to save a note with your task.
 - **Priority:** Tap to assign a priority to the task.
5. Tap **SAVE** to save the task.



Delete a Task

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **TASKS**.
3. Tap the checkbox by the task to mark it as complete and remove it from the calendar.
4. To delete the task permanently, tap the task to open it, and then tap **DELETE**.

DRAFT
FOR INTERNAL USE ONLY

Calendar Settings

These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **MORE** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT
FOR INTERNAL USE ONLY

Camera

Take pictures and videos with the Camera app.






- **Camera settings:** Tap to change camera settings.
- **Effect:** Tap to add an effect before taking a photo or video.
- **Gallery:** Tap to open the Gallery to view photos and videos.
- **Record video:** Tap to record a video.
- **Shooting mode:** Tap to change the shooting mode.
- **Switch cameras:** Tap to switch between the rear and front cameras.
- **Take a picture:** Tap to take a picture.
- **Timer:** Tap to set the camera timer.

DRAFT
FOR INTERNAL USE ONLY

Note: Prior to using the camera, remove the plastic protective covering from the camera lens.

Take Pictures



Take pictures with your device's front or back camera, or combine shots with Dual mode.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the onscreen options or these gestures:
 - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
 - Tap the screen to focus on the area you touched.
3. If desired, before taking the photo, you can touch onscreen icons to access various camera options and settings. You can also touch the screen to move the focus field to the area you touch.
4. Tap  to take the picture.

Note: You can also press the **Volume** key up or down to take a picture. This is the default action of the Volume key. You can also set the Volume key to act as the video record key or as a zoom key.

Shooting Mode

Several visual effects are available. Modes differ by which camera is active (front or rear facing).

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap **MODE** to view the following options. Each section indicates which camera (front or rear) the modes are available for.

Both cameras

- **Virtual shot:** Create multi-directional views of objects.
- **Download:** Download additional shooting modes from the Galaxy Apps store.

Rear camera




- **Auto:** Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
- **Pro:** Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama:** Create a linear image by taking pictures in either a horizontal or vertical direction.
- **HDR (rich tone):** Save the picture in HDR (rich tone) only.
- **Shot & more:** Use various functions with your burst shots after you take them, such as best photo, best face, drama, eraser, and panning shot.
- **Dual camera:** Take pictures and record videos in a variety of styles using the front and rear cameras at the same time.

Front camera

- **Selfie:** Take selfie shots and apply various effects, such as an airbrushed effect.
- **Interval shot:** Select the best pictures from a series of continuous shots taken at set intervals.

DRAFT
FOR INTERNAL USE ONLY

Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Quick settings are listed across one side of the camera view finder. Available options vary depending on the camera or recording mode used. Default settings include:
 - **Beauty**: Take a picture with lightened faces for gentler images (front camera only).
 - **Timer**: Take time-delayed pictures or videos.
 - **EFFECT**: Add special graphical effects.
3. Tap  **Settings** to configure settings for Camera. Available options vary depending on the camera/recording mode used.

Both cameras

- **Picture size**: Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size**: Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **View mode**: Choose between standard and full screen view mode.
- **Grid lines**: Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags**: Attach a GPS location tag to the picture.
- **Review pictures**: Set to show pictures after taking them.
- **Storage location**: Choose to store your photos to your device, or optional memory card.
- **Volume keys function**: Use the Volume key as the camera key, the record key, or as a zoom key.
- **Reset settings**: Reset the camera settings.

Rear camera

- **Video stabilization**: Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.



Front camera

- **Gesture control**: Detect palm and automatically take a picture two seconds later.
- **Save pictures as previewed**: Save the self-portrait or self-recording as seen on the preview screen.

DRAFT
FOR INTERNAL USE ONLY

Clock

The Clock app offers features for keeping track of time and setting alarms.



1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
 - **ALARM:** Set an alarm to ring at a specific time.
 - **WORLD CLOCK:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
 - **STOPWATCH:** Measure intervals of time.
 - **TIMER:** Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

Alarm

Set alarms by using the **ALARM** tab.

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap the following items to configure an alarm:
 - **Date:** Choose the day for this alarm.
 - **Time:** Set a time for the alarm.
 - **Repeat weekly:** Choose when to repeat the alarm, if so desired.
 - **KEYPAD:** Tap to use a keypad to enter the alarm time.




- **OPTIONS:** Tap to view and set the following options:
 - **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.
 - **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.
 - **Snooze:** Allow snoozing, and set interval and repeat values for the alarm while snoozing.
 - **Increasing volume:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Available when you have chosen an alarm type that includes sound.
 - **Alarm name:** Enter a name for the alarm.
3. Tap **SAVE** to save the alarm.

Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Find the alarm in the alarm list (under the **Alarm** tab), and then tap  **Delete** in the upper right corner of the alarm entry.

World Clock



The world clock lets you keep track of the current time in multiple cities around the globe.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **WORLD CLOCK**.
3. Select a city and tap  **Add City**.
 - Repeat to add multiple cities.

DRAFT
FOR INTERNAL USE ONLY



Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **STOPWATCH**.
3. Tap **START** to begin timing.
4. Tap **STOP** to stop timing.
 - Additional options include LAP to keep track of laps, RESUME to continue timing, and RESET to reset the stopwatch to zero.

Timer

The timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **TIMER**.
3. To set the length of the timer, either tap the digits or tap **KEYPAD** to use a numeric keypad.
4. Tap **START** to begin the timer.
5. Tap either **PAUSE** or **CANCEL** to stop the timer.

DRAFT
FOR INTERNAL USE ONLY



Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.

For more information on connecting with and managing your accounts through your device, see [Accounts](#).



Manage Contacts

Access your list of contacts by using the Contacts app. To access your Contacts list:

- ▶ From a Home screen, tap  **Apps** >  **Contacts**.

Find a Contact








You can search for a contact, or scroll the list to find one by name.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.
 - or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also press and slide across the alphabetical list to select a letter with better precision.



Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device, or sync it with an account.
 - Tap  **Contact photo** to assign a picture to the new contact.
 - Enter a name, phone number, email address, and assign the contact to a group. Tap **ADD ANOTHER FIELD** to add additional contact information.
 - Tap  **Add** to enter additional entries.
 - Tap  **Remove** to remove an entry.
 - Tap  **Expand** for additional fields.
 - Tap the label to the right of an entry to choose a label for the field (for example, **Home** or **Work**).
3. Tap **SAVE**.

Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap **EDIT**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **SAVE**.

DRAFT
FOR INTERNAL USE ONLY