

This document is watermarked because certain important information in the document has not yet been verified.

This document has been sent to you as a draft and for informational purposes only.

The document should only be used for internal purposes and may not be distributed outside of the company.

Distributing the document outside of the company could result in legal exposure to the company if the preliminary, unverified information in the draft turns out to be inaccurate.

SAMSUNG

Galaxy Book S

User manual



Table of contents

Features	1
Cortana	1
Fingerprint scanner	1
Active history	1
Get started	2
Front view	3
Back view	4
Assemble your device	5
Install a SIM card and memory card	6
Charge the battery	7
Battery Saver	7
Start using your device	8
Restart the device	8
Add an email account	8
Transfer data between devices	9
Update the device	9
Start screen	10
Taskbar	10

Task View	11
Start menu	12
App tiles	13
Tablet mode	13
Action center	14
Multi desktop	16
Split screen view	17
Enter text	18
Apps	19
Install Apps	20
Uninstall Apps	20
Open Apps	20
Close Apps	20
App Settings	21
Excel	21
OneDrive	21
OneNote	21
Outlook	21
PowerPoint	22

Skype	22
Word	22
Settings	23
Access Settings	24
Connections	24
Devices	24
Network and Internet	25
Display	25
Lock Screen and Security	26
Fingerprint	26
Password	26
PIN	26
Dynamic Lock	26
Sign-in privacy options	27
Privacy	27
Update and Security	28
Device Maintenance	29
System	29
Time and Language	30

Book Settings	30
Accounts	31
Accessibility	31
Ease of Access	32
Other settings	33
Phone	33
Gaming	33
Learn more	34
Tips	34
Videos	34
Legal information	35
End User License Agreement for Software (EULA)	35
Samsung Knox	36
Restricting children's access to your mobile device	36

Features



Cortana

Cortana is your digital agent. She'll help you get things done. The more you use Cortana, the more personalized your experience will be. See [Cortana](#) on page 10



Fingerprint scanner

Use your fingerprint as an alternative to entering passwords in certain apps. See ["Fingerprint Scanner"](#) on page 1.



Active history

Continue what you were doing when you switch to different devices. See support.microsoft.com/en-us/help/4468227/windows-10-activity-history-and-your-privacy-microsoft-privacy.

Get started

Front view

 
Back view

Assemble your device


Start using your device



Front view

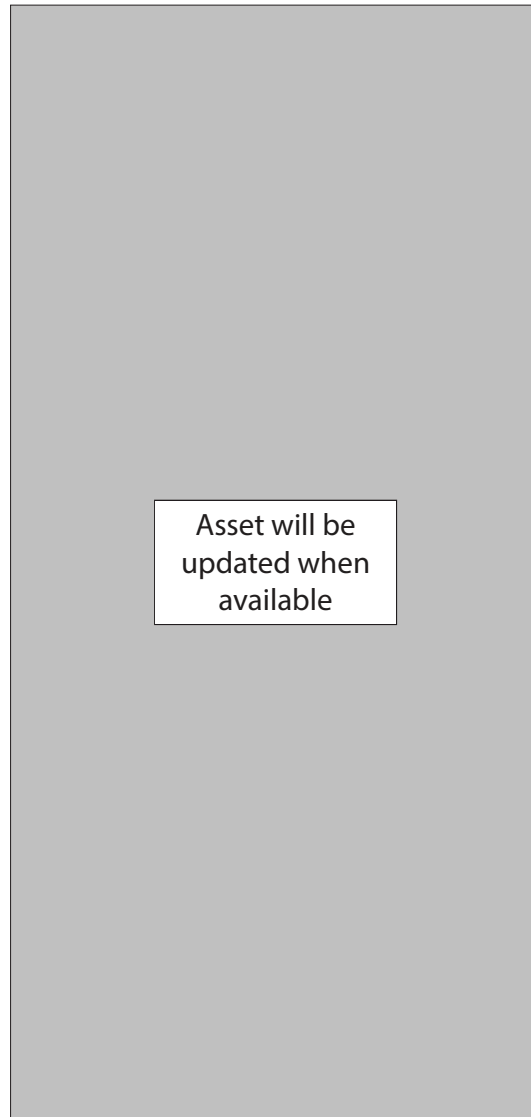



Back view

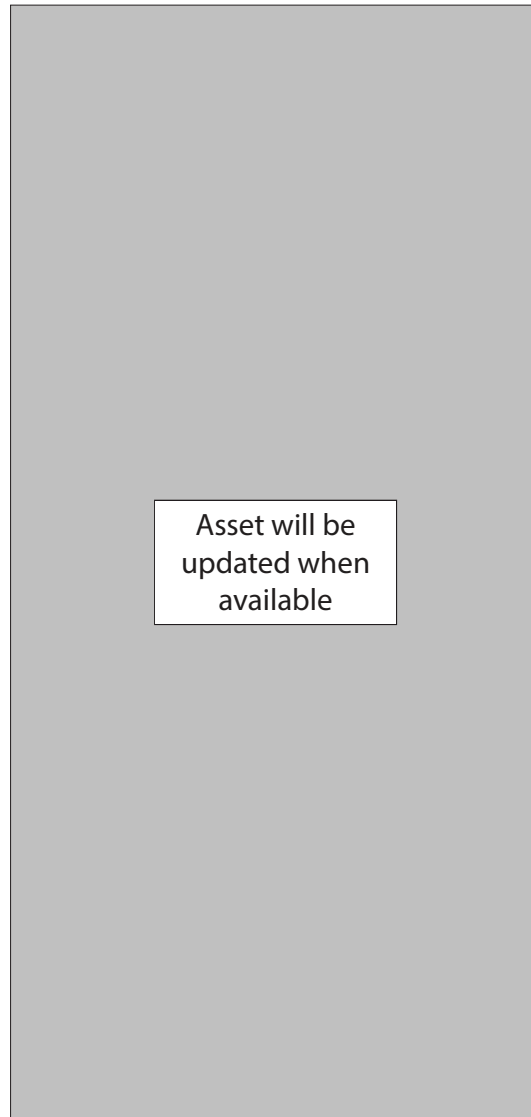 


Assemble your device

 Your device uses a nano-SIM card. A SIM card may be preinstalled, or you may be able to use your previous SIM card. Contact your carrier for more details.

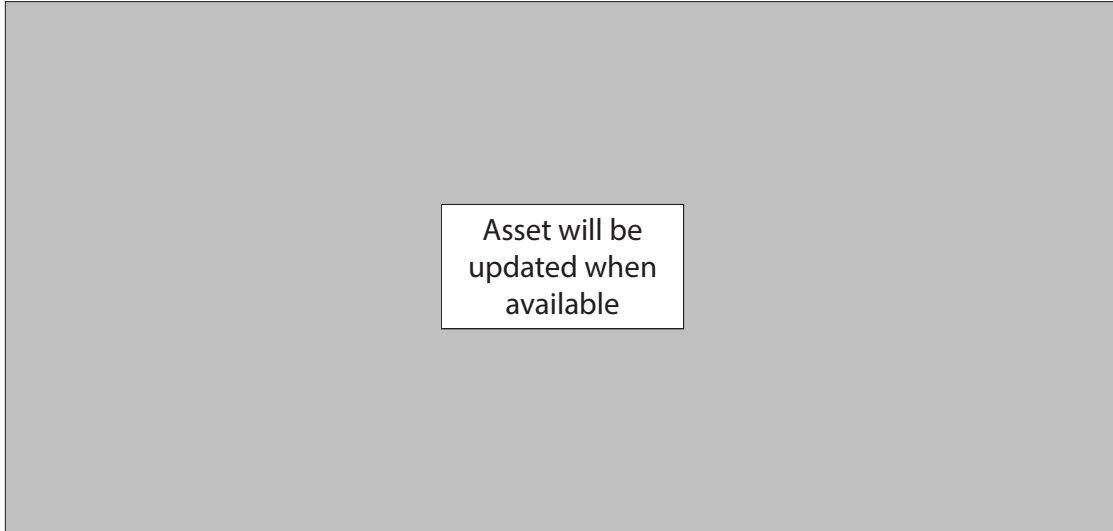

 **NOTE** Use only charging devices and batteries (if applicable) that are approved by Samsung. Samsung charging devices and batteries are designed for your device to maximize battery life. Using other charging devices and batteries may void your warranty and may cause damage.

 Install a SIM card and memory card

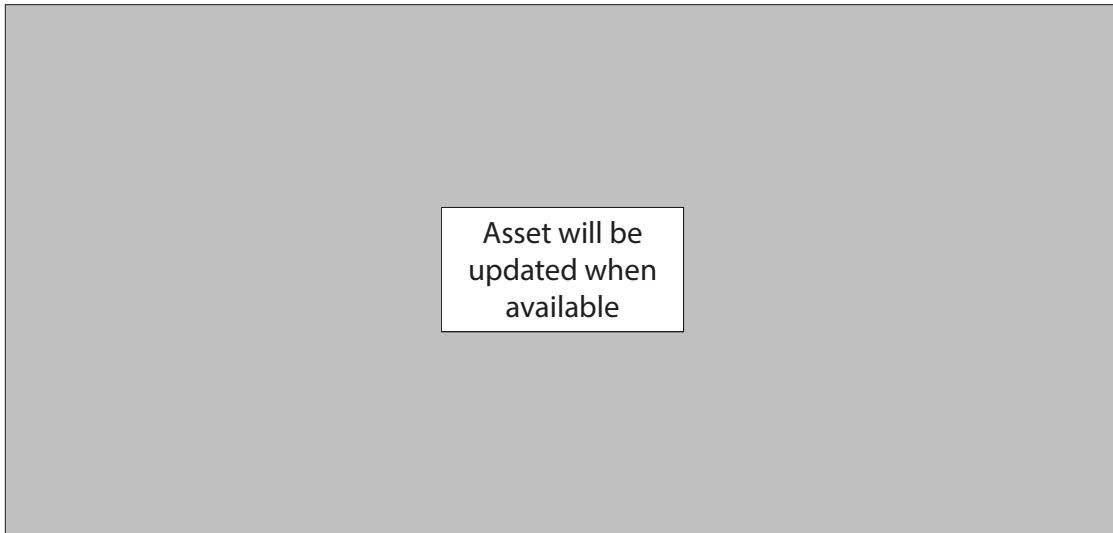


1. Slide the SIM card/Memory card tray out the slot.
2. Place the SIM card in the tray with the gold contacts facing down.
3. Place the memory card in the tray with the gold contacts facing down.
4. Slide the SIM card/Memory card tray back into the slot.

Charge the battery



Your device is powered by a rechargeable battery. A charger (charging head and USB cable) is included with the device for charging the battery from a power outlet.


1. Insert the USB cable into the USB charger port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. Unplug the charging head from the outlet and remove the USB cable from the device when charging is complete.

 **TIP** While charging, the device and the charger may become hot and stop charging. This usually does not affect the device's lifespan or performance and is in the device's normal range of operation. Disconnect the charger from the device and wait for the device to cool down. For more information, visit samsung.com/us/support/answer/ANS00076952.

Battery Saver

Save the battery power by limiting the device's functions.

1. On the taskbar, tap  **Start** >  **Settings** > **System** > **Battery**.
2. Tap the checkmark next to **Turn battery saver on automatically if my battery falls below** to activate it.
3. Drag the slider to the desired remaining battery percentage.

For a quick check of your battery level, view the battery charge indicator located in the bottom right corner of your device's display. A solid color () indicates a full charge.

Start using your device

The instructions below explain how to turn your device on or off.

To turn the device on:

- Press and hold the **Power** key until the device turns on.

To turn the device off:

- Tap  **Start** >  **Power** > **Shut down**.

- or -

In Tablet mode, tap  **Power** > **Shut down**.

- or -

Press and hold the **Power** key until the locked screen appears, and then drag the locked screen downwards.

Restart the device

To restart the device:

- Tap  **Start** >  **Power** > **Restart**.

- or -



In Tablet mode, tap  **Power** > **Restart**.

If your device is frozen and unresponsive:

1. Press and hold the **Power** key for more than 10 seconds until the device turns off.
2. Press and hold the **Power** key again to restart it.

Add an email account

Add an email account to your device.

1. On the taskbar, tap  **Start** >  **Settings**.
2. Tap **Accounts** > **Email & app accounts**.
3. Tap **Add an account** and follow the prompts.

Transfer data between devices

Move audio, video, image, or other types of files between your tablet and a mobile device.

Caution: Do not disconnect the USB cable from the device when you are transferring files. Doing so may cause data loss or device damage.

Note: The devices may not connect properly if they are connected via a USB hub. Directly connect devices via your device's USB charger/Accessory port.

1. Connect a mobile device to your tablet using the USB cable.
2. Transfer files between your tablet and the connected device.

Update the device

 
Keep your device up to date by downloading and installing updates, such as service packs and patches, for the operating system and other Microsoft® apps.

The device is set to download and install updates automatically.

To check for available updates manually:

1. On the taskbar, tap  **Start** >  **Settings**.
2. Tap **Update & security** > **Windows update** > **Check for updates**.

Start screen

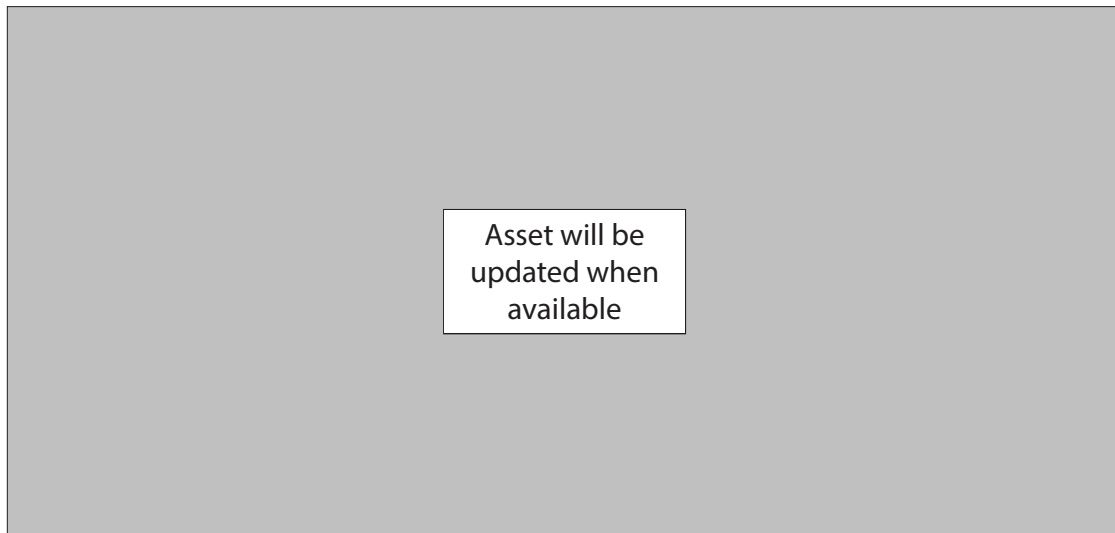

Taskbar


The bottom area of the screen is the taskbar. You can access the Start menu, launch Cortana, view notification icons, and more on the taskbar.




Cortana

Search for a wide variety of content on the device or web with a keyword.

- Tap **Type here to search** on the taskbar and enter a keyword in the search field.



- or -

Tap  **Microphone** to use your voice.

- To narrow your search to apps, tap  **Find results in apps.**
- To narrow your search to documents, tap  **Find results in documents.**
- To narrow your search to the Internet, tap  **Find results in web.**


Cortana Settings


Search for a wide variety of content on the device or web with a keyword.

- On the taskbar, tap  **Start** >  **Settings** > **Cortana**, and tap an option:
 - **Talk to Cortana:** Set up shortcuts and test your microphone.
 - **Permissions and history:** Customize your Cortana permissions and history.
 - **Cortana across my devices:** Sync your phone notifications to your device.
 - **More details:** View more information about Cortana.

Task View

Task view allows you to work on various tasks simultaneously from multiple desktops.

1. On the taskbar, tap  **Task view**.
2. Select a thumbnail to activate the desktop.

 **NOTE Note:** You can also access Task view by swiping from the left edge of the screen.

To add a desktop:

- On the desktop thumbnails list, tap **New desktop**.

To delete a desktop:



- On the desktop thumbnails list, tap  **Delete** on a desktop.

To move a window to a different desktop:


- On a desktop, touch and hold a window, and then tap **Move to**, and select a desktop to move the window.

Manage shortcuts

To pin a shortcut:

1. On the taskbar, tap  **Start**.
2. Touch and hold an app tile, and then tap  **More options**.
3. Tap **More** > **Pin to taskbar**.

To delete a shortcut:

1. Touch and hold an app tile, and then tap  **More options**.
2. Tap **More** > **Unpin from taskbar**.


Manage taskbar notifications

Customize what system icons display in the notification area.

1. On the taskbar tap  **Start** >  **Settings** > **Personalization**.
2. Tap **Taskbar**, and under notification area select system icons to display.

Start menu

Access frequently used apps, shortcuts to other locations on your device, and more.





- On the taskbar, tap  **Start**.





App tiles

You can pin your favorite apps on the app tile area of the Start menu for quick access.

Add an App tile

1. On the taskbar, tap  **Start**.
2. Touch and hold an app in the list, and then tap  **Pin to start**.
 - To move a tile, touch and hold a tile, and then drag it to a new location.
 - To adjust the size of a tile, touch and hold a tile, and then tap  **More options** > **Resize**.
 - For more options like reviewing an app or uninstalling it, touch and hold a tile, and then tap  **More options** > **More**.


Remove an App tile

1. On the taskbar, tap  **Start**.
2. Touch and hold an app in the list, and then tap  **More options** > **Unpin from start**.

Tablet mode

You can switch between PC mode and tablet mode. In Tablet mode, the full Start menu screen will be the Start screen. Switching to tablet mode makes the device more touch-friendly.

To switch to tablet mode, on the taskbar:

 
- Tap  **Action center** > **Tablet mode**.
- or -

Swipe from the right edge of the screen towards the center of the screen, and then tap **Tablet mode**.

To return to PC mode:


- Tap **Tablet mode** again.

Action center

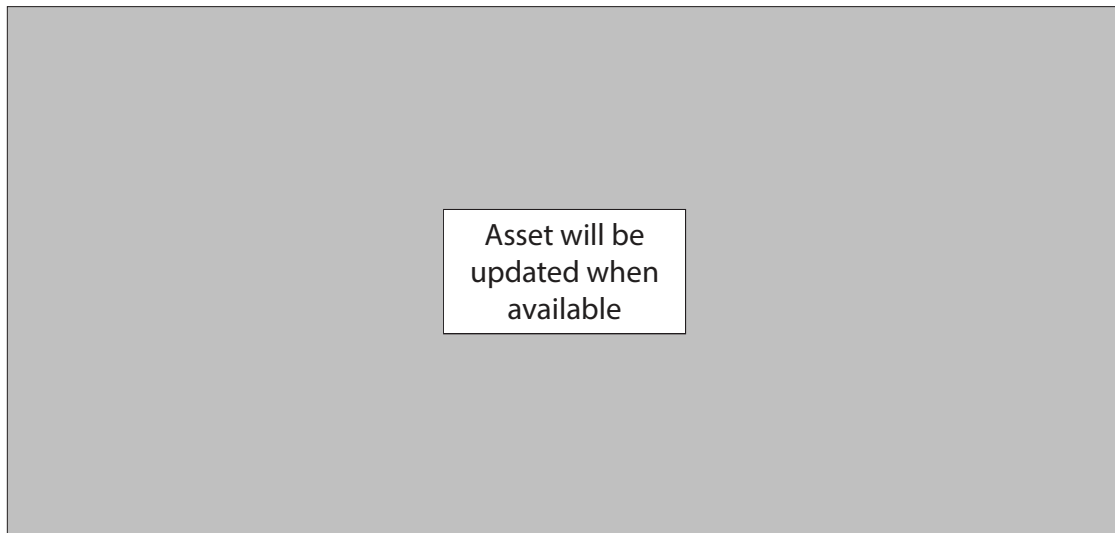

Use the Action center

You can view new notifications from Windows and apps, and use quick action buttons.

- To open the Action center panel, on the taskbar, tap  **Action center**.

- or -


Swipe from the right edge of the screen.

Quick action buttons

Quick action buttons allow you to easily adjust frequently used settings, such as activating Wi-Fi.




1. On the taskbar, tap  **Action center**.
2. Tap **Expand** to view all quick action buttons.

To change the top four buttons:

 
- On the taskbar, tap  **Start** >  **Settings** > **System** > **Notifications & actions**, and then change quick actions.

Notifications

View notifications notification from Windows and apps.

1. On the taskbar, tap  **Action center**.
2. Tap  **Expand** to view the full notification.
 - To take action, tap the notification.
 - To delete the notification, tap  **Close**.
 - To clear all notifications, tap **Clear all**.


Multi desktop

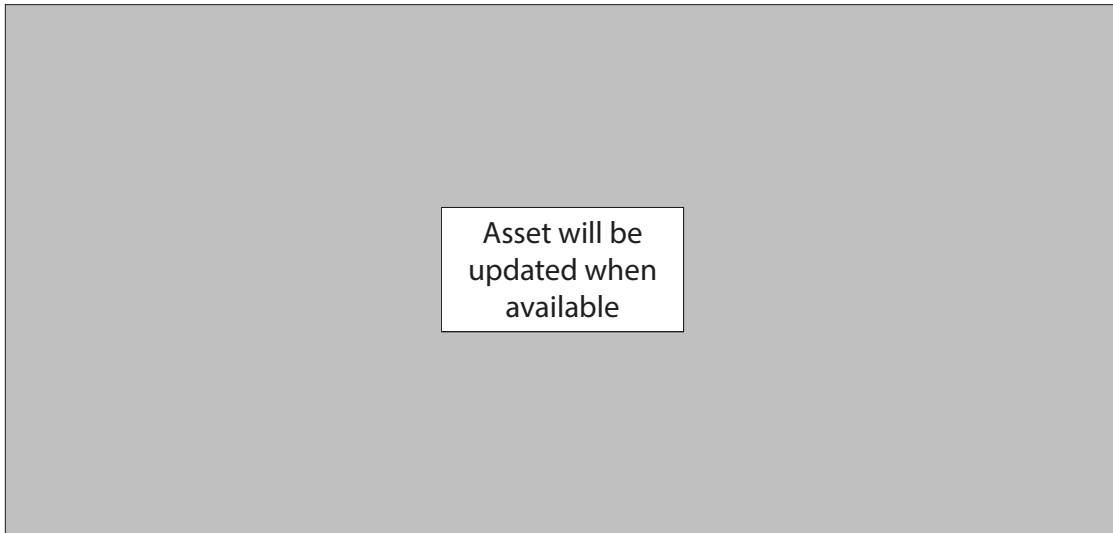



Multi desktop

Work on various tasks at the same time using multiple desktops. Different desktops can be used for different purposes.


To creating new desktops:

1. On the taskbar, tap  **Multi desktop**, or swipe from the left edge of the screen.
2. Tap **New desktop**. A new desktop will be added. You can select a desktop from the list displayed at the bottom of the screen.

 
To delete a desktop:

1. On the taskbar, tap  **Multi desktop**.
2. On the multi desktop list, tap  **Close** on the desktop to delete.

To move windows to another desktop:

1. On the taskbar, tap  **Multi desktop** to view the current desktop's open windows.
2. Tap and hold a window to move, and then tap **Move to**.
3. Select a desktop to move the window.

Split screen view

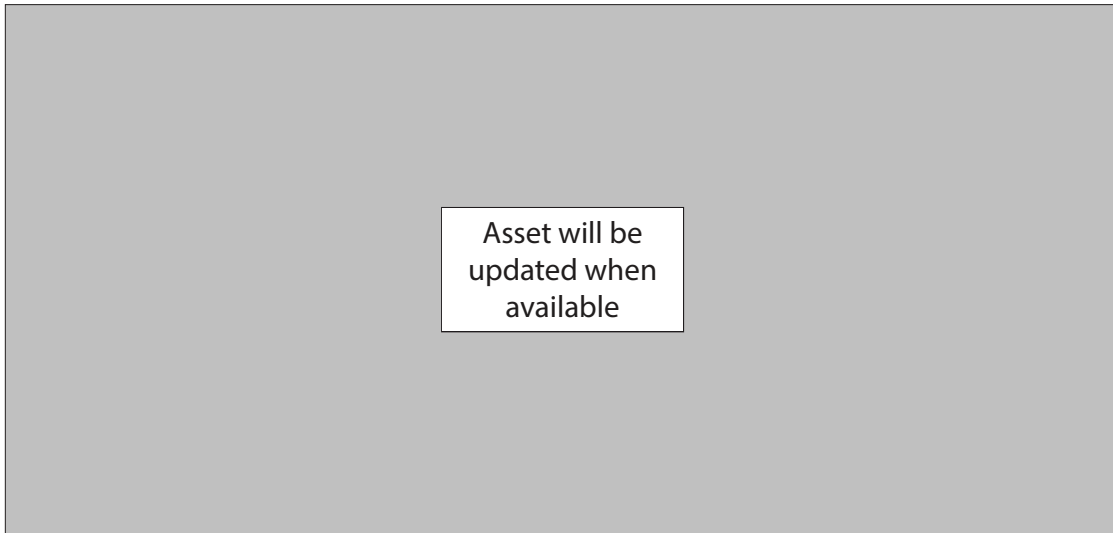

Use Split Screen View

In tablet mode, you can open two windows at the same time in the split screen view by selecting windows from the task view screen.



NOTE Some apps may not support this feature.

1. On the taskbar, tap  **Multi desktop** to view currently open apps.

- or -

Swipe from the left edge of the screen.

2. Touch and hold an app and select **Snap left** or **Snap right**.
3. Select another app to launch.

To adjust the window size:

- Drag the handle between the app windows left or right to adjust the size of the windows.


Enter text

You can enter text using an onscreen keyboard or the keyboard cover.





Onscreen Keyboard

In tablet mode, the onscreen keyboard appears automatically when you enter text to send emails, create notes, and more.

- To use the onscreen keyboard in PC mode, on the taskbar, tap  **Touch keyboard**.

Change the Input Language

Change the language of the keyboard.

- Tap  **Keyboard settings** >  **Regions & language** > **Add a language**, and then select a language to add.
 - When you add languages, you can select other input languages by tapping the bottom right key on the keyboard.

Keyboard display options

In tablet mode, you can change the way the keyboard displays on the screen.

- Tap  **Keyboard**, and tap an icon to change the way the keyboard is displayed.

Apps

Install Apps

Uninstall Apps

Open Apps

Close Apps

App Settings

Excel

OneDrive

OneNote

Outlook


PowerPoint

Skype





Install Apps

Browse apps by category or tap the search field to search for a keyword.

1. On the taskbar, tap  **Store**.
2. Select an app to view information about it.
 - To download free apps, tap **Free**.
 - To purchase and download apps where charges apply, tap the price and follow the prompts.


Uninstall Apps


Note: Some apps cannot be uninstalled.

1. On the taskbar, tap  **Start** >  **Settings** > **Apps** > **Apps & features**.
2. Tap an app, and then tap **Uninstall**.
3. Tap **Uninstall** to confirm.

Open Apps


To open an app:

- On the taskbar, tap  **Start**, and then select an app icon to open it.
- or -

To open an app from the task view screen, on the taskbar, tap  **Task view**, and then select a window.



Close Apps

To close an app:

- Tap  **Close** at the top of the app window to close it.

App Settings

Configure app settings.

- On the taskbar, tap  **Start** >  **Settings** > **Apps**, and tap an option:
 - **Apps & features:** Configure app features.
 - **Default apps:** Select default apps.
 - **Offline maps:** Download maps and configure them for offline use.
 - **Apps for websites:** Associate apps with websites.
 - **Video playback:** Change the video settings for apps that use the video playback platform.
 - **Startup:** Configure apps to open upon starting the device.



Excel

View, create, and edit spreadsheet on your device. You can unlock the full Excel[®] experience with an Office 365[™] subscription.



OneDrive

Store and share photos, videos, documents, and more in your free online OneDrive[®] account—accessible from your personal computer, tablet, or phone.



OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote notebooks using OneDrive[®].



Outlook

Manage your email and calendar.



PowerPoint

View, create, and edit presentations on your device. You can unlock the full PowerPoint® experience with an Office 365 subscription.



Skype

Hold video and voice calls, and send instant messages to anyone around the world.



Word

View, create, and edit documents on your device. You can unlock the full Word experience with an Office 365 subscription.

Settings

Access Settings

Connections

Display

Lock Screen and Security

Device Maintenance

Accounts



Accessibility

Other settings



Access Settings

Customize settings for functions and apps. You can make your device more personalized by configuring various setting options.



- On the taskbar, tap  **Start** >  **Settings**.
 - To search for settings by entering keywords, tap the **Find a setting** field at the top of the screen.

Connections

Manage connections between your device and a variety of networks and other devices.



Devices

Change settings related to your connected devices.

- On the taskbar, tap  **Start** >  **Settings** > **Devices**, and tap an option:
 - **Bluetooth & other devices**: Activate or deactivate the Bluetooth feature. You can search for other Bluetooth devices and pair with them.
 - **Printers & scanners**: Change setting to connect printers and scanners.
 - **Mouse**: Change the mouse settings.
 - **Touchpad**: Change the touchpad settings.
 - This option only appears when the keyboard is attached.
 - **Typing**: Change the onscreen keyboard settings.
 - **Pen & Windows Ink**: Configure settings for using a connected pen and the Windows Ink workspace.
 - **AutoPlay**: Activate or deactivate the AutoPlay feature and change related settings.
 - **USB**: Set the device to notify you if there are issues when connecting to USB devices.



Network and Internet

Change the network and Internet settings.

- On the taskbar, tap  **Start** >  **Settings** > **Network & Internet**, and tap an option:
 - **Status:** View your network status.
 - **Wi-Fi:** Activate the Wi-Fi feature to connect to a Wi-Fi network and change the related settings.
 - Turn off Wi-Fi to save the battery when not in use.
 - **Cellular:** Configure mobile service settings.
 - **Dial-up:** Configure the dial-up settings.
 - **VPN:** Set up and connect to virtual private networks (VPNs).
 - **Airplane mode:** Activate or deactivate Airplane mode. This disables all wireless functions on your device. You can use only non-network services.
 - **Mobile hotspot:** Configure your device to be used as a mobile hotspot to share your mobile data connection with other devices.
 - **Data usage:** Keep track of your data usage amount.
 - **Proxy:** Configure the proxy settings.



Display

Change the display settings, such as a wallpaper, color, and theme.

- On the taskbar, tap  **Start** >  **Settings** > **Personalization**, and tap an option:
 - **Background:** Change the wallpaper and related settings.
 - **Colors:** Change the colors of the taskbar, items on the Start menu, and more.
 - **Lock screen:** Change the locked screen wallpaper and select items to show on the locked screen.
 - **Themes:** Select a theme to apply and change related settings.
 - **Fonts:** Change the system font.
 - **Start:** Change the settings related to the Start menu.
 - **Taskbar:** Configure settings for the taskbar.

Lock Screen and Security

You can change the way that you lock the screen to prevent others from accessing your personal information.

- On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**, and then select a screen lock method.
 - You must add a password before you can use the other lock methods.



Fingerprint

Register your fingerprint to use in place of passwords.

1. On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**.
2. Tap **Set up**, and follow the prompts to register your fingerprint.

Password

Create your Microsoft account password.

1. On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**.
2. Tap **Add**, and enter a password, enter the password again to verify it, and then enter a password hint.

PIN

Create a PIN to use in place of passwords.

1. On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**.
2. Tap **Add**, enter a PIN, and enter the PIN again to verify it.



Dynamic Lock

Windows can lock when devices paired to your PC go out of range.

1. On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**.
2. Tap **Allow Windows** to automatically lock your device when you're away.



Sign-in privacy options

Customize your privacy options when signing in to an account or your device.

1. On the taskbar, tap  **Start** >  **Settings** > **Accounts** > **Sign-in options**.
2. Under Privacy tap **On/Off** for each option:
 - Show account details (e.g. email address) on sign-in screen.
 - Use my sign-in info to automatically finish setting up my device and reopen my apps after an update or restart.

Privacy



Change the privacy settings.

- On the taskbar, tap  **Start** >  **Settings** > **Privacy**, and tap an option:
 - **General**: Change the general privacy settings.
 - **Speech, inking, & typing**: Set the device to collect personal information, such as contacts and recent calendar events. You can also manage your cloud settings.
 - **Diagnostics & feedback**: Set the frequency of Windows feedback and select an option to send the device's diagnostic and usage data to Microsoft.
 - **Activity history**: Access what you are working on from apps, docs, or other activities on either your PC or your phone.
 - **Location**: Change settings for location information permissions.
 - **Camera**: Activate or deactivate the camera feature. Select apps to allow them to use the camera feature.
 - **Microphone**: Activate or deactivate the microphones. Select apps to allow them to use the microphones.
 - **Notifications**: Choose apps that can access your notifications.
 - **Account info**: Set apps to access and use your account information.
 - **Contacts**: Select apps to allow them to access your contacts.
 - **Calendar**: Activate or deactivate the calendar app. Select apps to allow them to access the calendar app.
 - **Call history**: Select apps to allow them to access your call logs.

- **Email:** Activate or deactivate the email app. Select apps to allow them to access the email app and send emails.
- **Tasks:** Allow access to tasks on your device.
- **Messaging:** Activate or deactivate the messaging app. Select apps to allow them to access the messaging app and send messages.
- **Radios:** Change the settings to allow apps to use radios, such as Bluetooth.
- **Other devices:** Change the settings for external devices, such as wireless devices or hardware.
- **Background apps:** Select apps to run in the background.
- **App diagnostics:** Let apps access diagnostic information.
- **Automatic file downloads:** Let Windows automatically download online-only files from your online storage provider.
- **Documents:** Allow access to document libraries on your device.
- **Pictures:** Allow access to picture libraries on your device.
- **Videos:** Allow access to video libraries on your device.
- **File system:** Allow access to the file system on your device.

Update and Security

Change the Windows update, data backup, and device security settings.

- On the taskbar, tap  **Start** >  **Settings** > **Update & security**, and tap an option:
 - **Windows update:** Check for available updates and update Windows to the latest version.
 - **Windows security:** Activate the Windows Defender Security feature to scan for malware. You can also set the device to send security problems to Microsoft automatically.
 - **Backup:** Backup your files using the File History feature.
 - **Troubleshoot:** Run a troubleshooter to find and fix common problems.
 - **Recovery:** Reset the device or restart it using the advanced start-up feature.
 - **Activation:** View the Windows activation information. You can change your Windows product key.



- **Find my device:** Activate or deactivate the Find My Device feature to help locate the device when lost or stolen. Access the Microsoft webpage to track your device's last known location and control the device.
- **Windows Insider Program:** Get previews of future updates and improvements to Windows and provide feedback.
- **Device encryption:** Protect your files and folders from unauthorized access.

Device Maintenance

Device maintenance provides an overview of the status of your device's battery, storage, RAM, and device security. You can also automatically optimize your device's system resources.

System

Change the system settings.




- On the taskbar, tap  **Start** >  **Settings** > **System**, and tap an option:
 - **Display:** Change the display settings, such as the font size and the brightness of the display.
 - **Sound:** Configure the sound settings.
 - **Notifications & actions:** Select Quick action buttons to display on the action center panel and change the notification settings.
 - **Focus assist:** Choose which notifications to prioritize and configure rules to limit which notifications you receive.
 - **Power & sleep:** Set the device's backlight timer. You can also set the Wi-Fi settings for when the device is in sleep mode.
 - **Battery:** View battery power information and change the power saving options.
 - **Storage:** View memory information for your device and select where new apps and data are saved by default.
 - The actual available capacity of the internal memory is less than the specified capacity because the operating system and default apps occupy

part of the memory. The available capacity may change when you update the device.

- **Tablet mode:** Switch to tablet mode and change the related settings.
- **Multitasking:** Change settings for multitasking.
- **Projecting to this PC:** Project connected devices to this device.
- **Shared experiences:** Authorize actions across devices to share content.
- **Remote desktop:** Connect to and control your device from a remote device.
- **About:** Access device information and change the device name or other settings.


Time and Language

Change settings to control how the device displays the time and date, and select your country or region.

-  **NOTE Note:** If the battery remains fully discharged or is removed from the device, the time and date resets.
- On the taskbar, tap  **Start** >  **Settings** > **Time & language**, and tap an option:
 - **Date & time:** Change the time and date settings.
 - **Region & language:** Set your country or region, and add your display languages.
 - **Speech:** Change the settings for the text-to-speech feature.

Book Settings



Configure settings for the following features provided by Samsung.

- On the taskbar, tap  **Start** > **Galaxy Book**, and tap an option:
 - **Pen:** Customize which apps open when you press the S Pen button.
 - **Battery Life Extender:** Prolong your battery life by setting a maximum battery charge level.
 - **Power button:** Configure Power button actions.
 - **AMOLED:** Change the screen mode to match your type of viewing. Adaptive display will automatically optimize the display.

- **Legal information:** View legal information.
- **Help:** View the user manual on your device.
- **About device:** View information about your device.

Accounts

Set up and manage accounts, including email and social networking accounts.

- On the taskbar, tap  **Start** >  **Settings** > **Accounts**, and tap an option:
 - **Your info:** View and edit your account information.
 - **Email & app accounts:** Add your Microsoft account and manage your app accounts.
 - **Sign-in options:** Change the device sign-in options. You can select a screen lock method to prevent others from accessing your personal information. See **Lock Screen and Security** on page 26.
 - **Access work or school:** Add a work or school account to access to your organization's resources, such as apps and network.
 - **Family & other people:** Add additional accounts for your family members or other users to use the device with their own personalized settings.
 - **Sync your settings:** Change settings to sync your settings with other devices using your Microsoft account.



Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

For more information about Accessibility for Samsung products, please contact us at accessibility@sea.samsung.com.

Ease of Access

Change settings to improve the device's accessibility.


- On the taskbar, tap  **Start** >  **Settings** > **Ease of Access**, and tap an option:
 - **Display:** Make your display easier to see.
 - **Cursor & pointer size:** Make pointer, cursor, and touch feedback easier to see.
 - **Magnifier:** Activate a magnifier and change the related settings. When you activate this feature you can zoom in on the screen to view a larger version of the content.
 - **Color filters:** Make photos and colors easier to see by applying a color filter to the screen.
 - **High contrast:** Apply high contrast themes to the display to improve screen visibility.
 - **Narrator:** Activate the screen reader and change the related settings. When you activate this feature, the device reads aloud all the elements on the screen, such as text and buttons.
 - **Audio:** Make your device easier to hear, or use it without sound.
 - **Closed captions:** Change the caption settings.
 - **Speech:** Make your device easier to use if you have limited reach or strength.
 - **Keyboard:** Change the on-screen keyboard settings.
 - **Mouse:** Change the pointer and mouse settings.
 - **Eye control (beta):** Use eye tracking technology to control the mouse, type using an on-screen keyboard, and communicate with people using text-to-speech.

Other settings

Configure features on your device that make it easier to use.



Phone

You can mirror your phone to your device.

- On the taskbar, tap  **Start** >  **Settings** > **Phone** > **Add a phone**, and tap an option to configure.

Gaming

Configure gaming features on your device.

- On the taskbar, tap  **Start** >  **Settings** > **Gaming**, and tap an option:
 - **Game bar**: Control how game bar opens and recognizes your name.
 - **Game DVR**: Control how you capture your game through screenshots and game clips.
 - **Broadcasting**: Control how your game appears when you broadcast.

Learn more



Tips

samsung.com/us/support/tips



Videos

samsung.com/us/support/videos

Legal information

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

Arbitration Agreement - This Product is subject to a binding arbitration agreement between you and SAMSUNG ELECTRONICS AMERICA, INC. ("Samsung"). You can opt out of the agreement within 30 calendar days of the first consumer purchase by emailing optout@sea.samsung.com or calling 1-800-SAMSUNG (726-7864) and providing the applicable information.

The full Arbitration Agreement, Standard One-year Limited Warranty, End User License Agreement (EULA), and Health & Safety Information for your device are available online:

This information can also be found on the device in the "About device" or "About phone" or "About tablet" section, for example:

- Settings > About phone or About device or About tablet > Legal information > Samsung legal
- Or, search "Legal"

If your device required Federal Communications Commission (FCC) approval, you can view the FCC certification by opening Settings > About phone or About device or About tablet > Status.

End User License Agreement for Software (EULA)

The online version of the End User License Agreement (EULA) for your device can be found online at www.samsung.com/us/Legal/WindowsTabletEULA.

Samsung Knox

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: samsung.com/us/knox.

Restricting children's access to your mobile device

Samsung Electronics America, Inc.

Address:

85 Challenger Road
Ridgefield Park
New Jersey 07660

Phone: 1-800-SAMSUNG (726-7864)

Internet: samsung.com

©2019 Samsung Electronics America, Inc. Samsung, Samsung Galaxy, and Smart Switch are all trademarks of Samsung Electronics Co., Ltd.

Other marks are the property of their respective owners.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories.



Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Screen images are simulated. Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Please check with your service provider to verify qualifying services/features.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless device is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model device are performed in positions and locations (e.g. near the body) as required by the FCC.

For typical operation, this model device has been tested and meets the FCC RF exposure guidelines.

SAR information on this and other model can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search, A3LSMW767U.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular device, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular device. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar

FCC Notice and Cautions

FCC Notice



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the device if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio device, not expressly approved by Samsung, will void the user's authority to operate the equipment.

The use of any unauthorized accessories may be dangerous and void the device warranty if said accessories cause damage or a defect to the device.

Although your device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.
