

Samsung B5712C
user manual

DRAFT



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others




CAUTION

Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information

- ▶ **Refer to**—pages with related information; for example: ▶ p.12 (represents “see page 12”)
- **Followed by**—the order of options or menus you must select to perform a step; for example: Tap **Menu** → **Messages** → **Create new message** (represents **Menu**, followed by **Messages**, followed by **Create new message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B0XXXXX.
- Java™ is a trademark of Sun Microsystems, Inc.

contents

safety and usage information	2
Safety warnings	2
Safety precautions	4
Important usage information	7
introducing your mobile phone	10
Unpack	10
Phone layout	11
Keys	12
Display	12
Icons	13
Stylus and touch screen	14
assembling and preparing your mobile phone	15
Install the SIM card and battery	15
Charge the battery	17
Insert a memory card (optional)	18
using basic functions	19
Turn your phone on and off	19

Access menus	20	Record and play voice memos	46
Use widgets	20	Edit images	47
Customise your phone	22	Print images	50
Use basic call functions	24	Use Java-powered games and applications	50
Send and view messages	25	Create and view world clocks	51
Add and find contacts	28	Set and use alarms	52
Use basic camera functions	29	Use the calculator	53
Listen to music	31	Convert currencies or measurements	53
Browse the web	32	Set a countdown timer	53
using advanced functions	34	Use the stopwatch	53
Use advanced call functions	34	Create a text memo	54
Use advanced Phonebook functions	36	Create and view sketches	54
Use advanced messaging functions	38	Manage your calendar	55
Use advanced camera functions	39		
Use advanced music functions	42	troubleshooting	a
using tools and applications	44		
Use the Bluetooth wireless feature	44		
Activate and send an SOS message	46		

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power

levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are: The highest SAR values for this model phone as reported to the FCC are Head: 0.998 W/Kg, Body- worn: 0.361 W/Kg.

Body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung accessory designated for

this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines.

SAR information on this and other model phones can

be viewed on-line at www.fcc.gov/oet/fccid. This site

uses the phone FCC ID number, A3LSWDB5712C. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

UL Certified Travel Adapter

The Travel Adaptor for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines. FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE. IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS. DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS. FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that

were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

“Support needed research into possible biological effects of RF of the type emitted by wireless phones;

“Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and

“Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- “National Institute for Occupational Safety and Health
- “Environmental Protection Agency
- “Federal Communications Commission
- “Occupational Safety and Health Administration
- “National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones,

so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF

exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project

has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- "If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For

example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand,

if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that

these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now

part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA

will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations:

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/emfpg.html>
- World health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- National Radiation Protection Board (UK):
<http://www.nrpb.org.uk>
- Updated 4/3/2002: US food and Drug Administration
<http://www.fda.gov/cellphones>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address

book takes attention away from your primary responsibility, driving safely.

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency

number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- should not carry the phone in a breast pocket.
- should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care

facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include

below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not

be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.

3. Press .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as

possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National

Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers.

The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.

- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/ Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network

and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more

than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen)

causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.

- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the

manufacturer's warranty, even if the warranty for your phone has not expired.

- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

 
Unpack

Check your product box for the following items:

 
- Mobile phone
 - Battery
 - Travel adapter (charger)
 - User manual
- 
- The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
 - Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by manufacturer's warranty.

Phone layout

The front of your phone includes the following keys and features:

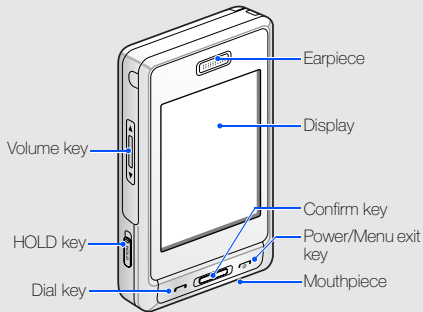



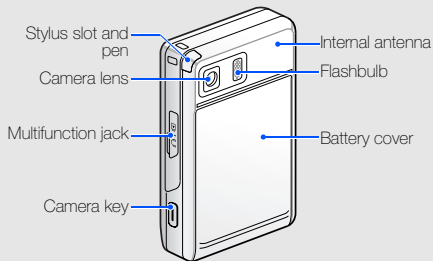



The rear of your phone includes the following keys and features:




You can lock the keys and touch screen to prevent any unwanted phone operations. To lock, press up **[HOLD]**. To unlock, press down **[HOLD]**.

Keys

Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Confirm	In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Volume	Adjust the phone's volume
 HOLD	Lock or unlock the keys and touch screen
 Camera	In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

 
 




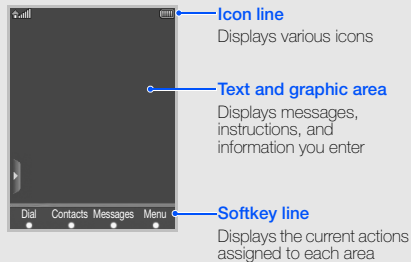


 
Display








 





Your phone's display consists of the following areas:




Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength (for the network on the primary SIM card)
	Signal strength (for the network on the secondary SIM card)
	Call in progress
	SOS message feature activated
	Alarm activated
	GPRS network connected
	EDGE network connected
	In Home Zone service area
	In Office Zone service area
	Bluetooth activated

 Icon	Definition
	Bluetooth hands-free car kit or headset connected
	Music playback in progress
	Music playback paused
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message
	Memory card inserted
	FM radio on
	Silent mode activated (muted)
	Silent mode activated (set to vibrate)
	Ringer mode: melody
	Ringer mode: increasing melody

Icon	Definition
	Ringer mode: vibration
	Battery power level

Stylus and touch screen

 
Learn basic actions to use the stylus and touch screen.

- Tap: Touch the screen once with the stylus to select the highlighted menu or option.
- Tap-and-hold: Tap and hold the stylus on an item to perform.
- Drag: Tap and hold the stylus on the screen and drag the stylus to move the scroll bar.



To avoid scratching your phone's screen, do not use pens, pencils, or other sharp objects to tap or write on the touch screen.

A special slot for storing the stylus is included on the back of your phone.

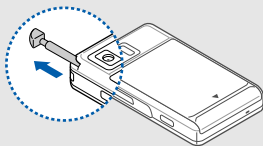

assembling and preparing your mobile phone

 
Get started by assembling and setting up
your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.


To install the SIM cards and battery,

1. Remove the battery cover.

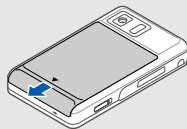


If the phone is on, press and hold [⏻] to turn it off.

 2. Insert the SIM cards.

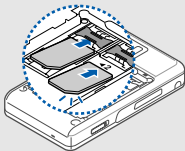


Place the SIM cards in the phone with the gold-coloured contacts facing down.

 3. Insert the battery.

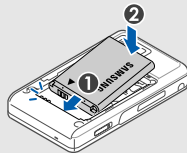

 
4. Replace the battery cover.

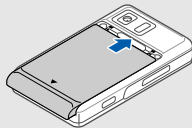



Charge the battery


Before using the phone for the first time, you must charge the battery.

 1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

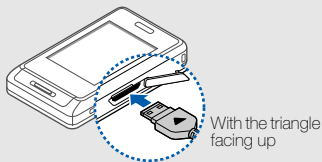

  Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

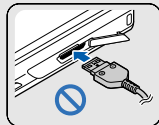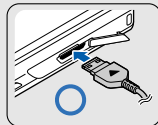

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.

5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.



About the low battery indicator

 
When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)


To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to X GB (depending on memory card manufacturer and type).

1. Remove the battery cover.

2. Unlock the memory card cover.

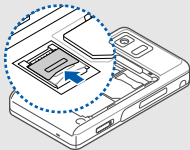

 3. Lift the memory card cover and insert a memory card with the label side facing up.

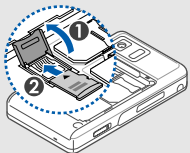

4. Close and lock the memory card cover.



using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

Your phone supports Dual SIM mode which allows you to use two different SIM cards at the same time. You will be prompted to select which SIM card to use when making calls, sending messages, or accessing the web.

To turn your phone on,

1. Press and hold .
2. Enter your PIN and tap **Confirm** (if necessary).
3. Calibrate your screen and press .



The first time you turn on the phone, you will be prompted to calibrate the screen.

4. Assign names and signal icons to the new SIM cards and tap **Next**.

5. Activate the SIM cards and set a primary SIM card.

6. Tap **Save**.

To turn your phone off, repeat step 1 above.

Switch to Offline mode

By switching to Offline mode, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.













 
 






To switch to Offline mode, tap **Menu** → **Settings** → **Phone settings** → **Offline** → a SIM card → **On**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your phone's menus,

1. In Idle mode, tap **Menu** → a menu.
2. Scroll to a menu or option.
3. Tap **Select**, **Save**, or **OK** to confirm the highlighted option.
4. Tap **Back** to move up one level; Press [, , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , , ,

Widget	Function
 World clock	View the time in another country or city
 Analogue clock	View the current time
 Digital clock	View the current time
 Photo album	Browse your photos and set a photo as the wallpaper
 Today's date	View today's date
 FM radio	Listen to the FM radio
 Music player	Open the music player to play music files
 Event alerts	View upcoming calendar events, new text messages, or missed calls
 Games	Access your games

Widget	Function
 Normal or Silent mode	Switch to or from Silent mode

Add the widgets to the idle screen

1. Open the toolbar.
2. Drag a widget from the toolbar to the idle screen. You can position the widget anywhere on the screen.

Change the widgets

1. In Idle mode, tap **Menu** → **Settings** → **Display settings** → **Widget**.
2. Select the widgets you want to include to the toolbar.
3. Tap **Save**.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press [▲/▼] and adjust the key tone volume.

Adjust the vibration intensity on the touch screen


You can adjust the intensity of the vibration when you touch the phone screen.

In Idle mode, press [▲/▼] and tap **Vibration**, and press [▲/▼] to adjust the intensity of the vibration.




You can adjust more settings about vibration by tapping **Menu** → **Settings** → **Phone settings** → **Vibration feedback**.

Switch to Silent mode

1. In Idle mode, open the toolbar and drag  to the idle screen.
2. Tap **Silent** to silence your phone.

Calibrate the screen

You can calibrate the screen so that your phone recognises the input better.

1. In Idle mode, tap **Menu** → **Settings** → **Phone settings** → **Touch settings** → **Calibration**.
2. Tap the target on the screen with your stylus.
3. When you are finished, press [].

Change your ringtone

1. In Idle mode, tap **Menu** → **Settings** → **Sound settings** → **Incoming call** → a SIM card → **Ring tone** → a ringtone.
2. Tap **Save**.

Select a wallpaper (Idle mode)

1. In Idle mode, tap **Menu** → **Settings** → **Display settings** → **Wallpaper** → **Wallpaper**.
2. Select an image category → an image.
3. Tap **Save**.

Lock your phone

1. In Idle mode, tap **Menu** → **Settings** → **Security settings** → **Phone** → **Phone lock**.
2. Select **Enable**.

3. Enter a new 4- to 8-digit password and tap **OK**.

4. Enter the new password again and tap **OK**.

Customise the SIM cards

You can change a primary SIM card or assign a name or icon to distinguish the two SIM cards.

To customise a SIM card,

1. In Idle mode, tap **Menu** → **Settings** → **Phone settings** → **Dual mode setting**.
2. Select a SIM card → **Primary** to set the primary SIM card.
3. Tap **Options** → **Set SIM**.
4. Change a name and signal icon for the SIM card and tap **Save**.
5. Tap **Options** → **Save**.

Use basic call functions

Learn to make or answer calls and use basic call functions.



During a call, your phone automatically locks the touch screen and keys to prevent accidental inputs.

Make a call

1. In Idle mode, tap **Dial**.
2. Enter an area code and a phone number.
3. Press [] to dial the number with the primary SIM card. Or, select a SIM card you want.
4. To end the call, press [].

Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press [/].

Use the speakerphone feature

1. During a call, tap **Loud SPK** → **Yes** to activate the speaker.
2. To switch back to the earpiece, tap **Normal**.

Use the headset

By plugging the supplied headset into the phone, you can make and answer calls:

- To redial the last call, press the headset button, and then press again and hold.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send and view text (SMS), multimedia (MMS), and email messages.

Send a text message

1. In Idle mode, tap **Menu** → **Messages** → **Create new message** → **Text message**.
2. Enter your message text. ► Enter text
3. Tap **Options** → **Send only** or **Save and send**.
4. Tap the destination input field.
5. Enter a destination number and tap **Save**.
6. Tap **Send** to send the message.
7. Select a SIM card (if necessary).

Send a multimedia message

1. In Idle mode, tap **Menu** → **Messages** → **Create new message** → **Multimedia message**.
2. Tap **Subject**.
3. Enter a subject and tap **Options** → **Save**.
4. Tap **Image or video** or **Music or sound**.
5. Add an image, a video, music, or sound.
6. Tap **Text**.
7. Enter your message text and tap **Options** → **Save**.
8. Tap **Send**.
9. Tap the destination input field.
10. Enter a destination number or an email address and tap **Save**.
11. Tap **Send** to send the message.
12. Select a SIM card (if necessary).



Send an email

1. In Idle mode, tap **Menu** → **Messages** → **Create new message** → **Email**.
2. Tap **Subject**.
3. Enter a subject and tap **Options** → **Save**.
4. Tap **Message**.
5. Enter your email text and tap **Options** → **Save**.
6. Tap **File attach** and attach a file (if necessary).
7. Tap **Send**.
8. Tap the destination input field.
9. Enter an email address and tap **Save**.
10. Tap **Send** to send the email.
11. Select a SIM card (if necessary).

Enter text

With your phone's touch screen and stylus, you can enter or write text.

To change the text input method,


- Tap  to switch to the virtual keypad.
- Tap  to switch to the handwriting method.


To change the text input mode, tap **Pinyin** and select a mode.

To enter text using the handwriting method,

1. Switch to the text input mode you want.
2. Write characters, numbers, or symbols.
3. Select a character.

To enter text using the virtual keypad,

Mode	Function
Pinyin	<ol style="list-style-type: none">1. Tap the appropriate virtual key to enter pinyins.2. Select a pinyin.3. Select one of four tones or a neutral tone. If you want to display all Chinese characters corresponding to the pinyin, tap .4. Select a character.5. To enter a phrasal, touch DIV and repeat steps 1-4.
Stroke	<ol style="list-style-type: none">1. Tap strokes. Tap ? when you are unsure which stroke to enter. This will insert a placeholder.2. Select a character.

Mode	Function
Phrasal EN	<ol style="list-style-type: none">1. Tap the appropriate virtual key to enter an entire word.2. When the word displays correctly, tap  to insert a space. If the correct word does not display, scroll left or right to an alternate word on a pop-up window.
English	Tap the appropriate virtual key until the character you want appears on the display.
Number	Tap the appropriate virtual key to enter a number.
Symbol	Tap the appropriate virtual key to select a symbol.

View text or multimedia messages

1. In Idle mode, tap **Menu** → **Messages** → **Inbox**.
2. Select a SIM card (if necessary).
3. Select a text or multimedia message.

View an email

1. In Idle mode, tap **Menu** → **Messages** → **Email inbox**.
2. Tap **Check new mail**.
3. Select an email or a header.

Add and find contacts

Learn the basics of using the Phonebook feature.

Add a new contact

1. In Idle mode, tap **Dial** and enter a phone number.
2. Tap **Options** → **Save** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Tap **Options** → **Save** or tap **Save** to add the contact to memory.

Find a contact

1. In Idle mode, tap **Contacts**.
2. Enter the first few letters of the name you want to find and tap **Options** → **View**.
3. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [↵]
- edit the contact information by tapping **Options** → **Edit**


Use basic camera functions

Learn the basics to capture and view photos and videos.







When you turn on the camera, the display may appear blank due to temporary electrostatic discharge. Try restarting the phone to solve the problem.

Capture photos

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Aim the lens at the subject and make any adjustments.
4. Press the Camera key to take a photo. The photo is saved automatically.
5. Press the Camera key or tap  to take another photo (step 3).

Switch scene modes





Capture photos with automatic scene modes. The camera will determine the correct exposure, focusing, or lighting according to lighting conditions, subjects, or scenes.

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Aim the lens at the subject and make any adjustments.
4. Tap  →  to switch to Scene mode.
5. Tap  →  → a mode.

View photos

In Idle mode, tap **Menu** → **My files** → **Images** → **My photos** → a photo file.

Capture videos

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Tap  →  to switch to Recording mode.
4. Aim the lens at the subject and make any adjustments.
5. Press the Camera key to start recording.
6. Press the Camera key or tap  to stop recording.
The video is saved automatically.
7. Tap  to record another video (step 4).

View videos

In Idle mode, tap **Menu** → **My files** → **Videos** → **My video clips** → a video file.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, tap **Menu** → **FM radio**.
3. Tap ► to start the FM radio.
4. Tap **Yes** to start automatic tuning.
The radio scans and saves available stations automatically.



The first time you access **FM radio**, you will be prompted to start automatic tuning.

5. Scroll left or right to a radio station.
6. To turn off the FM radio, tap ■.

Listen to music files




Start by transferring files to your phone or memory card:

- Download from the wireless web. ► p. 55
- Download from a PC with the optional Samsung PC Studio. ► Samsung PC Studio user manual
- Receive via Bluetooth. ► p. 68
- Copy to your memory card. ► p. 65

After transferring music files to your phone or memory card,

1. In Idle mode, tap **Menu** → **Music**.
2. Tap **Options** → **Add music from** → a memory location.
3. Select the files you want to include → **Add**.
4. Tap ► to begin playback.

5. Control playback using the following icons:

Icon	Function
	Pause or resume playback
	Skip backward; Scan backward in a file (tap and hold)
	Skip forward; Scan forward in a file (tap and hold)
	Adjust the volume

6. Tap **Options** → **Stop** to stop playback.

Browse the web

Learn to access and bookmark your favourite web pages.

Browse web pages

1. In Idle mode, press the Confirm key → **Home** to launch your service provider's homepage.
2. Select a SIM card.
3. Navigate web pages using the following actions:
 - Scroll up or down on a web page.
 - Scroll left or right to move backward or forward on a web page.
 - Tap **Options** to access a list of browser options.

Bookmark your favourite web pages

1. In Idle mode, tap **Menu** → **Browser** → **Bookmarks**.
2. Select an empty location.
3. Tap the title input field.
4. Enter a page title and tap **Save**.
5. Tap the URL input field.
6. Enter a web address (URL) and tap **Save**.
7. Tap **Save**.



using advanced functions


Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions



Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Tap a missed call on the pop-up window.
2. Press [] to dial.

Call a recently dialled number

1. In Idle mode, press [] to display a list of recent numbers.
2. Scroll to the number you want and press [] to dial.

Hold a call or retrieve a held call

Tap **Hold** to place a call on hold or tap **Retrieve** to retrieve a held call.

Dial a second call

If your network supports this function, you can dial another number during a call:

1. Tap **Hold** to place the first call on hold.
2. Tap **Options** → **Dialer**, enter the second number to dial, and press [⏏].
3. Tap **Swap** to switch between the two calls.
4. To end the call on hold, tap **Options** → **End held call**.
5. To end the current call, press [⏏].

Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [⏏] to answer the second call.
The first call is automatically placed on hold.
2. Tap **Swap** to switch between the calls.

Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.
The first party is automatically placed on hold.
3. When connected to the second party, tap **Options** → **Join**.
4. Repeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [⏏].

Call an international number

1. In Idle mode, tap **Dial** and tap and hold **0** to insert the **+** character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [**↵**] to dial.

Call a contact from Phonebook

You can call numbers directly from Phonebook using stored contacts. ► p. 52

1. In Idle mode, tap **Contacts**.
2. Scroll to the number you want to dial and press [**↵**] to dial.

Use advanced Phonebook functions

Learn to create namecards, set speed dial numbers, and create groups of contacts.

Create a namecard

1. In Idle mode, tap **Menu** → **Phonebook** → **My namecard**.
2. Enter your personal details.
3. Tap **Options** → **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Set speed dial numbers

1. In Idle mode, tap **Menu** → **Phonebook** → **Speed dial**.
2. Select a SIM card (if necessary).
3. Select a number you want to set (2-9).
4. Tap **Options** → **Add** → **Contact**.
5. Select a contact → a phone number (if necessary) to assign to the number.
The contact is saved to the speed dial number.



You can now call this contact from the dialling screen by entering the assigned speed dial number and pressing [**↵**].

Create a group of contacts

By creating groups of contacts, you can assign ringtones and caller ID photos to each group or send messages and emails to an entire group. Start by creating a group:

1. In Idle mode, tap **Menu** → **Phonebook** → **Group** → **Options** → **Add**.
2. Tap the name input field.
3. Enter a group name and tap **Save**.
4. To set the caller ID image, tap the graphic ID field → an image category → an image.
5. To set a group ringtone, tap the ringtone field → a ringtone category → a ringtone.
6. Tap **Save**.

Use advanced messaging functions

Learn to create templates and use templates to create new messages.

Create a text template

1. In Idle mode, tap **Menu** → **Messages** → **Templates** → **Text template**.
2. Select an empty location.
3. Enter your text and tap **Options** → **Save** to save the template.

Create a multimedia template

1. In Idle mode, tap **Menu** → **Messages** → **Templates** → **Multimedia message templates**.
2. Tap **Options** → **Add new**.

3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 48
4. Tap **Options** → **Save in** → **Templates**.

Insert text templates in new messages

1. To start a new message, tap **Menu** → **Messages** → **Create new message** → a message type.
2. In the text field, tap **Options** → **Insert** → **Text template** → a template.

Create a message from a multimedia template

1. In Idle mode, tap **Menu** → **Messages** → **Templates** → **Multimedia message templates**.
2. Scroll to the template you want and tap **Options** → **Edit**.





Your template opens as a new multimedia message.

Use advanced camera functions





Learn how to capture photos in various modes.

Capture a series of photos

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.





3. Tap  →  →  → the number of photos to capture.
4. Aim the lens at the subject and make any adjustments.
5. Press the Camera key to capture the multi-shot.
6. Tap  to return to the viewfinder.

Capture divided photos

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Tap  →  →  → an image layout.
4. Aim the lens at the subject and make any adjustments.
5. Press the Camera key to capture the divided shots.
6. Tap  to return to the viewfinder.








Capture panoramic photos




Capture and stitch together a series of photos to imitate a wide angle view.

1. Rotate the phone anti-clockwise to landscape view.
2. In Idle mode, press and hold the Camera key to turn on the camera.
3. Tap  →  → .
4. Aim the lens at the subject and make any adjustments.
5. Press the Camera key to take the first photo.
6. Align the previous image with the subject to continue the panorama and press the Camera key to take the next photo.
7. Repeat step 6 to complete the panorama.
8. When you are finished, tap  to return to the viewfinder.





Use camera options








While using the camera, tap  to access the following options:

Icon	Option	Function
	Shooting mode	Switch the shooting modes
	Size	Change the image size
	Macro	Set the camera to capture detailed images at close range
	Flash	Turn the flash on or off
	Timer	Select the time delay
	Face detection	Set the camera to automatically recognise and focus on the faces of people
	White balance	Adjust the colour balance of the image

Icon	Option	Function
	Effects	Apply a special effect
	Viewfinder	Select a viewfinder mode
	More settings	Access camera settings ► p. 65

While using the camcorder, tap  to access the following options:

Icon	Option	Function
	Size	Change the image size
	Flash	Turn the flash on or off
	Timer	Select the time delay
	Effects	Apply a special effect

Icon	Option	Function
	White balance	Adjust the colour balance of the image
	Record audio	Turn the audio on or off
	Recording mode	Select a recording mode
	Viewfinder mode	Select a viewfinder mode
	Quality	Adjust the quality of your video clips
	Default storage	Select a memory location to store new video clips
	Default name	Edit a default name for newly captured video clips

Customise camera settings

From the viewfinder, tap  →  to access the following:

Setting	Function
Quality	Adjust the quality of your digital images
ISO	Adjust the film speed setting
Wide dynamic range	Adjust the camera's sensitivity to a wide range of available light
Exposure metering	Select a type of exposure metre
Auto focus	Switch the auto focus on or off
Single shot mode	Adjust how the camera save captured images
Anti-Shake	Reduce blur caused by vibration or movement

Setting	Function
Shutter sound	Select a sound to accompany the shutter action
Default storage	Select a memory location to store new images
Default name	Edit a default name for newly captured images

Use advanced music functions

Learn to prepare music files and store radio stations.

Copy music files to a memory card

To use this feature, you must first install Samsung PC Studio.

1. Insert a memory card.
2. In Idle mode, tap **Menu** → **Settings** → **Phone settings** → **PC connections** → **Mass storage**.

3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC. When connected, a pop-up window will appear on the PC.
4. Select **Open folder to view files** in the pop-up window on the PC.
5. Copy files from the PC to the memory card.

Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

1. In Idle mode, tap **Menu** → **Music**.
2. Tap **Options** → **Settings**.
3. Adjust the settings to customise your music player.
4. Tap **Save**.

Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, tap **Menu** → **FM radio**.
3. Tap ► to start the FM radio.
4. Tap **Options** → **Self-tuning**.
5. Tap **Yes** to confirm (if necessary).
The radio scans and saves available stations automatically.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Idle mode, tap **Menu** → **Applications** → **Bluetooth** → **Activation** → **On**.
2. To allow other devices to locate your phone, tap **My phone's visibility** → **On**.

Find and pair with other Bluetooth-enabled devices

1. In Idle mode, tap **Menu** → **Applications** → **Bluetooth** → **My devices** → **Search new device**.
2. Tap the device name on the list.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and tap **OK**.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.

Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Tap **Options** → **Send via** → **Bluetooth** (when sending contact data, specify which data to send).

Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and tap **OK** (if necessary).
2. Tap **Yes** to confirm that you are willing to receive data from the device (if necessary).

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.

1. In Idle mode, tap **Menu** → **Messages** → **SOS messages** → **Sending options**.
2. Scroll left or right to turn **On**.
3. Tap **Recipients** to open the recipient list.
4. Tap **Options** → **Phonebook** to open your contact list.
5. Select a SIM card (if necessary).
6. Select a contact.
7. Select a number (if necessary).
8. Tap **Options** → **Save** to save the recipients.
9. Tap **Repeat** and set the number of times to repeat the SOS message.
10. Tap **Save** → **Yes**.

To send an SOS message, press [▲/▼] four times with the keys locked.



Once you send an SOS message, all phone functions will be suspended until you press [⏏].

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

1. In Idle mode, tap **Menu** → **Applications** → **Voice recorder**.
2. Tap ● to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, tap ■ or **Save**. Your memo is saved automatically.

Play a voice memo

1. From the voice recorder screen, tap **Options** → **Go to My voice clips**.
2. Select a file.
3. Control the playback using the following icons:

Icon	Function
II/▶	Pause or resume playback
⏮	Scan backward in a file (tap and hold)
⏭	Scan forward in a file (tap and hold)
	Adjust the volume up or down

Edit images

Learn to edit images and apply fun effects.

Apply effects to images

1. In Idle mode, tap **Menu** → **Applications** → **Image editor**.
2. Tap **Options** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Tap **Options** → **Effects** → an effect option.
5. Select a variation of the effect to apply and tap **Done**.
To apply a blur effect to a specific area of an image, move or resize the rectangle and tap **Options** → **Done**.

6. When you are finished with applying effects, tap **Save as**.
7. Enter a new file name for the image and tap **Save**.

Adjust an image

1. In Idle mode, tap **Menu** → **Applications** → **Image editor**.
2. Tap **Options** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Tap **Options** → **Adjust** → an adjustment option (brightness, contrast, or colour).
5. Adjust the image as desired and tap **Done**.
6. When you are finished with adjustment, tap **Save as**.
7. Enter a new file name for the image and tap **Save**.

Transform an image

1. In Idle mode, tap **Menu** → **Applications** → **Image editor**.
2. Tap **Options** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Tap **Options** → **Transform** → **Resize**, **Rotate**, or **Flip**.
5. Rotate or flip the image as desired and tap **Done**.
To resize the image, select a size and skip to step 7.
6. When you are finished with transforming options, tap **Save as**.
7. Enter a new file name for the image and tap **Save**.

Crop an image

1. In Idle mode, tap **Menu** → **Applications** → **Image editor**.
2. Tap **Options** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Tap **Options** → **Crop**.
5. Move the rectangle over the area you want to crop and tap **Done**.
To resize the rectangle, tap **Resize**.
6. When you are finished cropping, tap **Save as**.
7. Enter a new file name for the image and tap **Save**.

Insert a visual feature

1. In Idle mode, tap **Menu** → **Applications** → **Image editor**.
2. Tap **Options** → **New image** → **Open** or **Take photo**.
3. Select an image or take a new photo.
4. Tap **Options** → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
5. Select a visual feature or enter text.
6. Move the added image.
To resize or rotate the added image, tap **Options** → **Resize** or **Rotate**.
7. Tap **Options** → **Done**.
8. When you are finished adding visual features, tap **Save as**.
9. Enter a new file name for the image and tap **Save**.

Print images

Learn to print your image with an optional PC data cable or using the Bluetooth wireless feature.

To print an image using an optional PC data cable,

1. Connect your phone to a compatible printer.
2. Open an image. ► p. 53
3. Tap **Options** → **Print via** → **USB**.
4. Set print options and print the image.

To print an image using the Bluetooth wireless feature,

1. Open an image.
2. Tap **Options** → **Print via** → **Bluetooth**.
3. Select a Bluetooth-enabled printer and pair with the printer. ► p. 68
4. Set print options and print the image.

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.



Depending on the software of the phone, the download of java files may not be supported.

Play games

1. In Idle mode, tap **Menu** → **Applications** → **Java world**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

Launch applications

1. In Idle mode, tap **Menu** → **Applications** → **Java world** → an application.
2. Tap **Options** to access a list of various options and settings for your application.

Create and view world clocks

Learn to view the time in another city and set world clocks to appear on your display.

Create a world clock

1. In Idle mode, tap **Menu** → **Applications** → **World clock**.
2. Tap **Options** → **Add**.
3. Scroll left or right to a time zone.

4. To set daylight saving time, tap **Set daylight saving time**.
5. Tap **OK** to create your world clock.
The world clock is set as the second clock.
6. To add more world clocks, repeat steps 2-5.

Add a world clock to your display

View clocks with two different time zones on your display.

After you have created world clocks,

1. In Idle mode, tap **Menu** → **Applications** → **World clock**.
2. Scroll to the world clock you want to add and tap **Options** → **Mark as second clock**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Idle mode, tap **Menu** → **Alarm**.
2. Tap an empty alarm location.
3. Scroll left or right to **On**.
4. Set alarm details.
5. Tap **Save**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

Stop an alarm

When the alarm sounds,

- Tap **Confirm** to stop an alarm without snooze.
- Tap **Yes** to stop an alarm with snooze or tap **Snooze** to silence the alarm for the snooze period.

Deactivate an alarm

1. In Idle mode, tap **Menu** → **Alarm**.
2. Select the alarm you want to deactivate.
3. Scroll left or right to **Off**.
4. Tap **Save**.

Use the calculator

1. In Idle mode, tap **Menu** → **Applications** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.


Convert currencies or measurements

1. In Idle mode, tap **Menu** → **Applications** → **Converter** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

1. In Idle mode, tap **Menu** → **Applications** → **Timer**.
2. Tap **Set**.
3. Select the unit you want and enter the length of time to count down and tap **OK**.
4. Tap **Start** or **Pause** to begin or pause the countdown.
5. When the timer expires, tap **OK** to stop the alert.

Use the stopwatch

1. In Idle mode, tap **Menu** → **Applications** → **Stopwatch**.
2. Tap  to begin and record lap times.
3. When you are finished, tap **Stop**.
4. Tap **Reset** to clear recorded times.

Create a text memo



1. In Idle mode, tap **Menu** → **Applications** → **Memo**.
2. Tap **Create**.
3. Enter your memo text and tap **Options** → **Save**.






Create and view sketches

Learn to create and view sketches with your stylus.

Create a sketch


1. In Idle mode, tap **Menu** → **Applications** → **Sketch memo**.
2. Make a sketch using the following tools:

Tool	Function
	Open a new sketch
	Select a pen or brush; Erase the sketch

Tool	Function
	Cancel the last action
	Select thickness for the brush lines
	Select a line colour
	Make a sketch from a photo
	View the saved sketches

3. When you are finished, tap **Save** → **Yes**.

View a sketch

1. In Idle mode, tap **Menu** → **Applications** → **Sketch memo**.
2. Tap  → a sketch.

Manage your calendar

 
Learn to change the calendar view and create events.

Change the calendar view

1. In Idle mode, tap **Menu** → **Calendar**.
2. Tap **Options** → **View by** → **Day** or **Week**.

Create an event

1. In Idle mode, tap **Menu** → **Calendar**.
2. Tap **Options** → **Create** → an event type.
3. Enter the details of the event as required.
4. Tap **Save**.

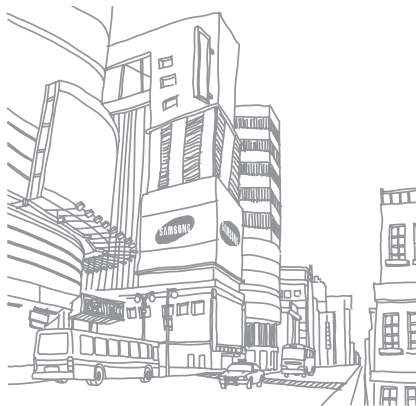

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

While using your phone, the following messages may appear:

Message	Try this to solve the problem:
Please insert SIM card	Ensure that a SIM card is installed correctly.
Phone lock	When the phone lock feature is enabled, you must enter the password you set for the phone.
Enter PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with a SIM card. You can disable this feature by using the PIN lock menu.

a

Message	Try this to solve the problem:
Enter PUK	One of your SIM cards is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your phone displays “Network unavailable” or “Network failure.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [↵].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use several applications at the same time, your phone requires more power and may heat up.

This is normal and should not affect your phone's lifespan or performance.

