Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS



World Wide Web http://www.samsungmobile.com Printed in Korea Code No.:GH68-20596A English (EU). 09/2008. Rev. 1.0

Samsung M8800 user manual

Draft 05 2008. 09. 17 SW Version: M8800XXHI5



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to "introducing your mobile phone," "assembling and preparing your mobile phone," and "using basic functions."

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others



Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information

Refer to — pages with related information; for example: ▶ p.12 (represents "see page 12")

- → Followed by—the order of options or menus you must select to perform a step; for example: Tap Menu → Messages → Create message (represents Menu, followed by Messages, followed by Create message)
- [] Square brackets—phone keys; for example: [•••] (represents the Power/ Menu exit key)

Copyright information

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth[®] is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth OD ID: B014450.
- Java[™] is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.
- DivX® is a registered trademark of DivX, Inc., and is used under licence.



ABOUT DIVX VIDEO

 DivX^{\otimes} is a digital video format created by $\mathsf{DivX},$ Inc. This is an official DivX Certified device that plays DivX video. Plays DivX^{\otimes} video up to 320x240. May play DivX^{\otimes} video up to 720x480.

ABOUT DIVX VIDEO-ON-DEMAND

This DixX® Certified device must be registered with DivX in order to play DivX Video-on-Demand (VOD) content. First generate the DivX VOD registration code for your device and submit it during the registration process. [Important: DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices. If you try to play DivX VOD content not authorised for your device, the message "Authorization Error" will be displayed and your content will not play.] Learn more at www.divx.com/vod.

contents

Safety warnings	2
Safety precautions Important usage information	
introducing your mobile phone Unpack	11 12 13
assembling and preparing your mobile phone Install the SIM or USIM card and battery Charge the battery	18
using basic functions Turn your phone on and off Access menus Switch applications Use widgets Customise your phone	21 21 22

Use basic call functions	∠ა
Send and view messages	25
Add and find contacts	
Use basic camera functions	28
Listen to music	
Browse the web	
using advanced functions	33
Use advanced call functions	33
Use advanced Phonebook functions	35
Use advanced messaging functions	36
Use advanced music functions	37
using tools and applications	40
using tools and applications Use the Bluetooth wireless feature	
Use the Bluetooth wireless feature	40
Use the Bluetooth wireless feature Activate and send an SOS message	40 42
Use the Bluetooth wireless feature Activate and send an SOS message Activate the mobile tracker	40 42 42
Use the Bluetooth wireless feature Activate and send an SOS message Activate the mobile tracker View the phone display on a TV	40 42 42 43
Use the Bluetooth wireless feature Activate and send an SOS message Activate the mobile tracker View the phone display on a TV Record and play voice memos	40 42 42 43
Use the Bluetooth wireless feature	40 42 42 43 43
Use the Bluetooth wireless feature Activate and send an SOS message Activate the mobile tracker View the phone display on a TV Record and play voice memos Edit images	40 42 43 43 44
Use the Bluetooth wireless feature	40 42 43 43 44 46 47
Use the Bluetooth wireless feature	40 42 43 43 44 46 47
Use the Bluetooth wireless feature	40 42 43 43 44 46 47

L	Jse Java-powered games and applications	٠.
5	50	
C	Create and view world clocks	51
S	Set and use alarms	52
L	Jse the calculator	52
C	Convert currencies or measurements	52
S	Set a countdown timer	53
L	Jse the stopwatch	53
C	Create a new task	53
C	Create a text memo	53
C	Create sketches	53
Ν	Manage your calendar	55
trou	ubleshooting	а
nde	ex	d

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

Unpack

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual



The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.

You can obtain additional accessories from your local Samsung dealer.

Phone layout

The front of your phone includes the following keys and features:



The rear of your phone includes the following keys and features:





You can lock the touch screen and keys to prevent any unwanted phone operations. To lock, press [Hold].

Keys

Key		Function
•	Dial	Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
0	Back	In Menu mode, return to the previous level
•	Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, return to the main menu screen or return to Idle mode
₽ P	Application switch	Press and hold to open the application switch window to access other applications without exiting the current application

_		
Key		Function
HOLD	Hold	Look or unlock the touch screen and keys
H = 3	Volume	Adjust the phone's volume
WODE	Mode	In Idle mode, open your photos (press and hold)
D	Camera	In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video; From the dialling screen, make a video call (press and hold)

Display

Your phone's display consists of the following areas:



Icons


Learn about the icons that appear on your display.

Icon	Definition
Ta	Signal strength
G	GPRS network connected
F	Transferring data via GPRS network
	EDGE network connected
	Transferring data via EDGE network
E	UMTS network connected
	Transferring data via UMTS network
35 ⁺	HSDPA network connected
35*	Transferring data via HSDPA network

Icon	Definition
P	Voice call in progress
æ	Video call in progress
	Memory card inserted
•	Alam activated
®	Browsing the web
	Connected to secured web page
R	Roaming (outside of normal service area)
	Call diverting activated
*	Bluetooth activated
	Bluetooth hands-free car kit or headset connected
	Synchronised with PC

Icon	Definition
	New text message (SMS)
	New multimedia message (MMS)
	New email message
₩	New voice mail message
	New push message
□	New configuration message
	New video message
	Text message full
	Multimedia message full
	Email message full
	Voice mail message full
	Push message full

Icon	Definition
	Configuration message full
\triangleleft	Normal profile activated
N.	Silent profile activated
	Driving profile activated
١	Meeting profile activated
23	Outdoor profile activated
8	Offline profile activated
(IIII)	Battery power level
10:00	Current time

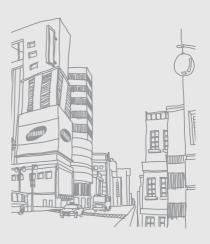

assembling and preparing your mobile phone

Get started by assembling and setting up your mobile phone for its first use.


Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.

To use UMTS services, you can purchase a Universal Subscriber Identity Module (USIM) card.

To install the SIM or USIM card and battery,

1. Remove the battery cover.

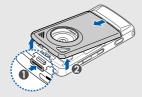



If the phone is on, press and hold [• to turn it off.

2. Insert the SIM or USIM card.





Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.

Without inserting a SIM or USIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.



4. Replace the battery cover.



Charge the battery

Before using the phone for the first time, you must charge the battery.

 Open the cover to the multifunction jack and plug the small end of the travel adapter into the multifunction jack.





Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

Plug the large end of the travel adapter into a power outlet.

- When the battery is fully charged (the (iiii) icon is no longer moving), unplug the travel adapter from the power outlet.
- 4. Unplug the travel adapter from the phone.
- 5. Close the cover to the multifunction iack.



About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to 8 GB (depending on memory card manufacturer and type).

- Open the cover to the memory card slot on the side of the phone.
- 2. Insert a memory card with the label side facing up.



3. Push the memory card in the memory card slot until it locks in place.

To remove the memory card, push it gently until it disengages from the phone, and then pull the memory card out of the memory card slot.

using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on,

- Press and hold [**].
- Enter your PIN and tap Confirm (if necessary).
- 3. Calibrate your screen by following the screen.



The first time you turn on the phone, you will be prompted to calibrate the screen.

To turn your phone off, repeat step 1 above.

Switch to the Offline profile

By switching to the Offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the Offline profile, tap Menu \rightarrow Settings \rightarrow Phone profiles \rightarrow Offline.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your phone's menus,

- 1. In Idle mode, tap $Menu \rightarrow a$ menu.
- 2. Scroll to a menu or option.
- Tap Save, Select, or OK to confirm the highlighted option.
- 4. Press the Back key to move up one level; Press [) twice to return to Idle mode.

Switch applications

Learn to switch to other applications from a menu, without closing the menu screen you are using.

- While using a menu, press and hold [].
 The following applications are available:
 - Call: open the dialing screen
 - Music player: launch the music player
 - Messages: access the Messages menu
 - . Browser: launch the web browser
 - Main menu: access the main menu screen
- 2. Select an application.

Use widgets

Learn to use widgets on the toolbar.

Open the toolbar

In Idle mode, tap the arrow at the top left of the screen to open the toolbar. You can rearrange widgets on the toolbar or move them to the idle screen.



Depending on your region or service provider, available widgets may vary.

Add the widgets to the idle screen

- 1. Open the toolbar.
- Drag a widget from the toolbar to the idle screen. You can position the widget anywhere on the screen.

Change the widgets

- In Idle mode, tap Menu → Settings → Display and light → Widget.
- 2. Select the widgets you want to include to the toolbar and tap **Save**.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

Switch to or from the Silent profile

In Idle mode, tap **Keypad** and tap and hold # to silence or unsilence your phone.

Change your ringtone

- In Idle mode, tap Menu → Settings → Phone profiles.
- 2. Tap >> next to a profile you want.
- 3. Tap Voice call ringtone or Video call ringtone.
- 4. Select a ringtone from the list and tap Save.
- Tap Save.

Select a wallpaper (Idle mode)

- In Idle mode, tap Menu → Settings → Display and light → Wallpaper.
- 2. Scroll left or right to an image.
- Tap Set.

Lock your phone

- In Idle mode, tap Menu → Settings → Security.
- 2. Tap On under Phone lock.
- Enter a new 4- to 8-digit password and tap Confirm.
- 4. Enter the new password again and tap **Confirm**.

Use basic call functions

Learn to make or answer calls and use basic call functions.



During a call, your phone automatically locks the touch screen to prevent accidental inputs. To unlock, press [Hold].

Make a call

- 1. In Idle mode, tap **Keypad** and enter an area code and a phone number.
- 2. Press [or tap Voice call to dial the number.
 - For a video call, tap **More** → **Video call** or press and hold the Camera key.
- 3. To end the call, press [].

Answer a call

- When a call comes in, press [-].
 For a video call, press [-] and tap Show me.
- 2. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key.

Use the speakerphone feature

- During a call, tap Speaker → Yes to activate the speaker.
- 2. To switch back to the earpiece, tap **Speaker**.



In Speakerphone mode, a noisy environment will make it difficult to hear the person whom you are speaking with. In a noisy environment, it is better to use the normal phone mode for better audio performance.

Use the headset

By plugging the supplied headset into the phone, you can make and answer calls:

- To redial the last call, press the headset button, and then press again and hold.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send and view text (SMS), multimedia (MMS), and email messages.

Send a text or multimedia message

- In Idle mode, tap Messages → Create message → Message.
 Tap Tap to add recipient → Enter
- manually.
- 3. Enter a destination number and tap **Done**.
- 4. Tap Tap to add text.
- 5. Enter your message text and tap Done.▶ Enter text
 - For sending as a text message, skip to step 8. For attaching multimedia, continue with step 6.
- Tap Add media → an item type.
- Tap the item you want to add and tap Add.
- 8. Tap Send to send the message.

Send an email

- In Idle mode, tap Messages → Create message → Email.
- Tap Tap to add recipient → Enter manually.
- 3. Enter an email address and tap Done.
- 4. Tap Tap to add subject.
- 5. Enter a subject and tap **Done**.
- Tap Tap to add text.
- 7. Enter your email text and tap Done.
- Tap Add files → an item type and attach a file (if necessary).
- 9. Tap **Send** to send the message.

Enter text

With your phone's touch screen, you can enter text and create messages or notes.

Change the text input method

When you open the text input field, the virtual keypad appears. Tap the down arrow next to **Keypad** and select one of the following input methods for entering text:

- Keypad
- Handwr. full sc.
- HandWriting Box1
- HandWriting Box2



You can use a wide keyboard when you rotate the phone anti-clockwise to landscape view when entering text.

Enter text using the keypad

- 1. Change the text input method to **Keypad**.
- 2. Tap the appropriate virtual key to enter text.
 - To change case or use numbers or symbols, tap Abc.
 - To enter text in T9 mode, tap T9.

You can use the following text input modes:

Mode	Function
ABC	Tap the appropriate virtual key until the character you want appears on the display.
Т9	 Tap the appropriate virtual key to enter an entire word. When the word displays correctly, tap
Number	Tap the appropriate virtual key to enter a number.
Symbol	Tap the appropriate virtual key to select a symbol.

Enter text using the handwriting full screen

- Change the text input method to Handwr. full sc
- 2. Write each character anywhere on the screen.

To change case or use numbers or symbols, tap **Abc**.

Enter text using the handwriting box1

- Change the text input method to HandWriting Box1.
- 2. Write each character in the writing area at the bottom of the screen.

Write numbers and symbols in the ?1 column at the bottom right of the writing area.

Enter text using the handwriting box2

- Change the text input method to HandWriting Box2.
- 2. Write each character in the writing area at the bottom of the screen.

To change case or use numbers or symbols, tap **Abc**.

View text or multimedia messages

- 1. In Idle mode, tap Messages → Inbox.
- 2. Select a text or multimedia message.

View an email

- In Idle mode, tap Messages → Email inbox.
- 2. Select an account.
- Tap Download.
- 4. Select an email or a header.
- 5. If you selected a header, tap **Retrieve** to view the body of the email.

Add and find contacts

Learn the basics of using the Phonebook feature.

Add a new contact

- In Idle mode, tap Keypad and enter a phone number.
- 2. Tap More → Add to Phonebook → New.
- 3. Tap Phone or SIM.
- 4 Enter contact information
- 5. Tap **Save** to add the contact to memory.

Find a contact

- 1. In Idle mode, tap Phonebook.
- 2. Drag to select the first letter of the name you want to find.
- 3. Select the contact's name from the search list.



Once you have found a contact, you can:

• call the contact by tapping

or pressing

 edit the contact information by tapping Edit

Use basic camera functions

Learn the basics to capture and view photos and videos.



When you turn on the camera, the display may appear blank due to temporary electrostatic discharge. Try restarting the phone to solve the problem.

Capture photos

- Rotate the phone anti-clockwise to landscape view.
- 2. In Idle mode, press and hold the Camera key to turn on the camera.

- 3. Aim the lens at the subject and make any adjustments.
- 4. Press the Camera key to take a photo. The photo is saved automatically.

View photos

In Idle mode, tap Menu → My files → Images → My photos → a photo file.

To categorise and view photos in a wide view,

- 1. In Idle mode, tap Menu → Photo browser.
- 2. Rotate the phone anti-clockwise to landscape view.
- 3. Tap and select a category to display the photos.
- 4. Scroll left or right to view photos.

Capture videos

- Rotate the phone anti-clockwise to landscape view.
- 2. In Idle mode, press and hold the Camera key to turn on the camera.
- 3. Tap on to switch to Recording mode.
- 4. Aim the lens at the subject and make any adjustments.
- 5. Press the Camera key to start recording.
- 6. Press the Camera key to stop recording. The video is saved automatically.

View videos

In Idle mode, tap Menu \rightarrow My files \rightarrow Videos \rightarrow My video clips \rightarrow a video file.

Tag faces in your photos

Learn to tag faces in your photos and make calls or send messages from photos. Before making calls or sending messages, you must create face tags.

To tag faces in your photos,

- Select a photo by pressing and holding [Mode] or capture a new photo. ▶ p. 28
- 2. Tap to add a tag to a person's face.
- 3. Tap , move or resize the rectangle on a face, and tap (if necessary).
- 4. Tap Add → Add name.
- 5. Enter a name of the face tag and tap Done.
- Tap Options → Edit → Link to Phonebook
 → Create contact to save a new contact
 with the face tag to Phonebook.

To make calls or send messages from photos,

- 1. Select a photo with a face tag by pressing and holding [Mode].
- 2. Tap . The face tag appears with the name.
- Tap Options → Call or Message.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

- Plug the supplied headset into the phone's multifunction jack.
- In Idle mode, tap Menu → Applications → FM radio.

 Tap Yes to start automatic tuning.
 The radio scans and saves available stations automatically.



The first time you access the FM radio, you will be prompted to start automatic tuning.

- Tap
 or
 or to select a radio station.
 If you want to get information about the song you hear, tap More → Music recognition.
 p. 39
- 5. To turn off the FM radio, tap .

Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ▶ p. 32
- Download from a PC with the optional Samsung PC Studio. ▶ p. 37
- Receive via Bluetooth. ▶ p. 41

- Copy to your memory card. ▶ p. 37
- Synchronise with Windows Media Player 11.
 p. 38

After transferring music files to your phone or memory card,

- In Idle mode, tap Menu → Music → Music player.
- Select a music category → a music file.
- 3. Control playback using the following icons:

Control playbaor doing the following loone.	
Icon Function	
Pause playback	
Play playback	
Skip backward; Scan backward in a file (tap and hold)	
Skip forward; Scan forward in a file (tap and hold)	
Adjust the volume up or down	

Browse the web

Learn to access and bookmark your favourite web pages.

Browse web pages

- In Idle mode, tap Menu → Applications → Browser → Home to launch your service provider's homepage.
- 2. Navigate web pages using the following icons:

Icon	Function
•	Move backward or forward on a web page
Q	Refresh the current web page
a	Return to the homepage
(€)	Zoom on a web page
†	Add a bookmark
*	Open a list of saved bookmarks
異	Change the view mode

Bookmark your favourite web pages

- In Idle mode, tap Menu → Applications → Browser → Bookmarks.
- Tap Add.
- 3. Enter a page title and a web address (URL).
- 4. Tap Save.

using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call.

- Tap the missed call you want to dial from the event alert widget.
- 2. Press [] to dial.

Call a recently dialled number

- In Idle mode, press [] to display a list of recent numbers.
- 2. Scroll to the number you want and tap or press [] to dial.

Hold a call or retrieve a held call

Tap **Hold** to place a call on hold or tap **Retrieve** to retrieve a held call.

Dial a second call

If your network supports this function, you can dial another number during a call:

- 1. Tap Hold to place the first call on hold.
- 2. Tap **Keypad**, enter the second number to dial, and press [-].
- 3. Tap Swap to switch between the two calls.
- 4. To end the call on hold, tap **On hold** and tap ...
- 5. To end the current call, press [].

Answer a second call

If your network supports this function, you can answer a second incoming call:

- Press [] to answer the second call.
 The first call is automatically placed on hold.
- 2. Tap Swap to switch between the calls.

Make a multiparty call (conference call)

- Call the first party you want to add to the multiparty call.
- 2. While connected to the first party, call the second party.
 - The first party is automatically placed on hold.
- 3. When connected to the second party, tap **Join**.
- 4. Repeat steps 2 and 3 to add more parties (if necessary).
- 5. To end the multiparty call, press [...].

Call an international number

- In Idle mode, tap Keypad and tap and hold
 to insert the + character.
- Enter the complete number you want to dial (country code, area code, and phone number), and then press [] to dial.

Call a contact from Phonebook

You can call numbers directly from Phonebook using stored contacts. ▶ p. 28

- In Idle mode, tap Phonebook.
- 2. Scroll to the number you want to dial and tap (or press [) to dial.

Use advanced Phonebook functions

Learn to create namecards, set speed dial numbers and create groups of contacts.

Create a namecard

- In Idle mode, tap Phonebook → More → My namecard.
- 2. Enter your personal details.

Tap Save.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Set speed dial numbers

- 1. In Idle mode, tap Phonebook.
- 2. Tap the down arrow next to the **Contacts** box and select **Favourites**.
- 3. Tap Add.
- Select a contact → a phone number (if necessary).

The contact is saved to the speed dial number



The first five speed dial numbers will be assigned to the favourite contacts (a) on the widget toolbar.

Create a group of contacts

By creating groups of contacts, you can assign group names, ringtones, caller ID photos, and vibration type to each group or send messages and emails to an entire group. Start by creating a group:

- 1. In Idle mode, tap Phonebook.
- 2. Tap the down arrow next to the **Contacts** box and select **Groups**.
- 3. Tap Create group.
- 4. Set a group name, the caller ID photo, a group ringtone, and vibration type.
- 5. Tap Save.

Use advanced messaging functions

Learn to create templates and use templates to create new messages.

Create a text template

- In Idle mode, tap Messages → Templates
 → Text templates.
- Tap Create to open a new template window.
- 3. Tap the screen.
- 4. Enter your text and tap **Done**.
- Tap More → Save as template.

Create a multimedia template

- In Idle mode, tap Messages → Templates
 → Multimedia templates.
- 2. Tap **Create** to open a new template window.
- Create a multimedia message, with a subject and desired attachments, to use as your template. ▶ p. 25
- Tap More → Save as template.

Insert text templates in new messages

- To start a new message, tap Messages → Create message → a message type.
- Tap More → Insert → Text template → a template.

Create a message from a multimedia template

- In Idle mode, tap Messages → Templates
 → Multimedia templates.
- 2. Select the template you want.
- 3. Tap Edit.

Your template opens as a new multimedia message.

Use advanced music functions

Learn to prepare music files, create playlists, and store radio stations

Copy music files via Samsung PC Studio

- In Idle mode, tap Menu → Settings → Phone settings → PC connections → Samsung PC studio → Save.
- Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
- Run Samsung PC Studio and copy files from the PC to the phone.
 Refer to the Samsung PC Studio help for more information

Copy music files to a memory card

- 1. Insert a memory card.
- In Idle mode, tap Menu → Settings → Phone settings → PC connections → Mass storage → Save.
- 3. Press [T] to return to Idle mode.

- Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
 - When connected, a pop-up window will appear on the PC.
- 5. Select **Open folder to view files** in the pop-up window on the PC.
- 6. Copy files from the PC to the memory card.

Synchronise your phone with Windows Media Player

- 1. Insert a memory card.
- In Idle mode, tap Menu → Settings → Phone settings → PC connections → Media player → Save.
- 3. Press [To return to Idle mode.
- Using an optional PC data cable, connect the multifunction jack on your phone to a PC with Windows Media Player installed. When connected, a pop-up window will appear on the PC.

- Select Sync digital media files to this device in the pop-up window on the PC.
- Edit or enter your phone's name in the popup window (if necessary), and then click Finish.
- 7. Select and drag the music files you want to the sync list.
- 8. Click Start Sync.

Create a playlist

- In Idle mode, tap Menu → Music → Music player → Playlists.
- 2. Tap Create.
- 3. Tap the text input field.
- 4. Enter a title for your new playlist and tap **Done**.
- To assign an image to the playlist, tap Tap to edit and select an image or capture a new photo.
- 6. Tap Save.

- 7. Select the new playlist.
- 8. Tap Add → Tracks.
- 9. Select the files you want to include and tap Add.

Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

- In Idle mode, tap Menu → Music → Music player.
- 2. Tap Settings.
- Adjust the settings to customise your music player.
- 4. Tap Save.

Store radio stations automatically

- In Idle mode, tap Menu → Applications → FM radio
- 2. Tap More → Self-tuning.

 Tap Yes to confirm (if necessary).
 The radio scans and saves available stations automatically.

Find information of music

Learn to access an online music service and get information about the songs you hear while on the move.

- In Idle mode, tap Menu → Music → Music recognition.
- 2. Select **Music recognition** to connect to the server.



Some service providers may not support this service and the database may not have information for all songs.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

- In Idle mode, tap Menu → Applications → Bluetooth
- Tap the circle in the centre to turn on the Bluetooth wireless feature.
- To allow other devices to locate your phone, tap Settings → My phone's visibility → On → Save

If you select **Custom**, set duration that your phone is visible.

Find and pair with other Bluetoothenabled devices

- In Idle mode, tap Menu → Applications → Bluetooth → Search.
- 2. Select and drag a device icon into the centre.
- Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and tap **Done**.
 When the owner of the other device enters the same code or accepts the connection, pairing is complete.

Send data using the Bluetooth wireless feature

- Select the file or item from one of your phone's applications that you want to send.
- 2. Tap Send via → Bluetooth.

Receive data using the Bluetooth wireless feature

- Enter the PIN for the Bluetooth wireless feature and tap OK (if necessary).
- 2. Tap **Yes** to confirm that you are willing to receive data from the device (if necessary).

Use Remote SIM mode

In Remote SIM mode, you can make or answer calls only with a connected Bluetooth hands-free car kit via the SIM or USIM card on your phone.

To activate Remote SIM mode,

- In Idle mode, tap Menu → Applications → Bluetooth → Settings.
- 2. Tap Remote SIM mode → On.
- 3. Tap Save.

To use Remote SIM mode, start the Bluetooth connection from a Bluetooth hands-free car kit.



The Bluetooth hands-free car kit must be authorised. To authorise, tap the device and select **Authorise device**.

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.



This feature may not be available depending on your region or service provider.

- In Idle mode, tap Menu → Messages → SOS messages → Sending options.
- 2. Tap **On** to turn on the SOS messaging feature.
- Tap Recipients to open the recipient list.
- 4. Tap Contacts to open your contact list.
- 5. Select the contacts you want and tap Add.

- 6. Select a phone number (if necessary).
- Tap OK to save the recipients.
- Tap Repeat and set the number of times to repeat the SOS message.
- 9. Tap Save → Yes.

To send an SOS message, the keys must be locked. Press the Volume key four times.



Once you send an SOS message, all phone functions will be suspended until you press [Hold].

Activate the mobile tracker

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Idle mode, tap Menu → Settings → Security → Mobile tracker.
- 2. Enter your password and tap Confirm.

- 3. Tap On to turn on the mobile tracker.
- 4. Tap Recipients to open the recipient list.
- 5. Tap the recipient field.
- 6. Enter a phone number and tap Done.
- 7. Tap **OK** to save the recipients.
- 8. Tap Sender.
- 9. Enter the sender's name and tap Done.
- 10. Tap Save → Accept.

View the phone display on a TV

Learn to view files by connecting your phone to a TV.

- With the TV on, connect your phone to the TV with a TV out cable.
- 2. Switch the TV to the appropriate external input mode.

If you cannot view the phone via the TV, try changing the TV-out settings: In Idle mode, tap Menu → Settings → Phone settings → TV-out → a video encoding system.



Your files may not display correctly, due to differences in video systems or quality of the TV display. The Bluetooth stereo headset and zoom functions will not work in TV-out mode.

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

- In Idle mode, tap Menu → Applications → Voice recorder.
- 2. Tap

 to start recording.
- 3. Speak your memo into the microphone.
- 4. When you are finished speaking, tap . Your memo is saved automatically.

Play a voice memo

- In Idle mode, tap Menu → My files → Sounds → Voice clips.
- 2. Select a file.

3. Control the playback using the following icons:

Icon	Function
· ·	Pause playback
D	Play playback
•	Scan backward in a file
•	Scan forward in a file
•	Adjust the volume up or down

Edit images

Learn to edit images and apply fun effects.

Apply effects to images

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼
- 3. Tap Edit → Export → an effect option.

- 4. Select a variation of the effect to apply and tap **Done**.
 - To apply a blur effect to a specific area of an image, move or resize the rectangle and tap **Blur** → **Done**.
- When you are finished with applying effects, tap Files → Save as.
- 6. Select a memory location (if necessary).
- 7. Enter a new file name for the image and tap **Done**.

Adjust an image

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼 .
- Tap Edit → Adjust → an adjustment option (brightness, contrast, or colour).
 To adjust the image automatically, select Auto level.
- 4. Adjust the image as desired and tap Done.

- When you are finished with adjustment, tap Files → Save as.
- 6. Select a memory location (if necessary).
- 7. Enter a new file name for the image and tap **Done**.

Transform an image

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼 .
- Tap Edit → Transform → Resize, Rotate, or Flip.
- 4. Rotate or flip the image as desired and tap **Done**.
 - To resize the image, select a size and tap $Save \rightarrow Done$.
- When you are finished with transforming options, tap Files → Save as.
- 6. Select a memory location (if necessary).
- Enter a new file name for the image and tap Done.

Crop an image

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼
- Tap Edit → Crop.
- Move the rectangle over the area you want to crop and tap Crop → Done.
- When you are finished cropping, tap Files
 → Save as.
- 6. Select a memory location (if necessary).
- 7. Enter a new file name for the image and tap **Done**.

Insert a visual feature

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼
- Tap Edit → Insert → a visual feature (frame, image, clip art, emoticon, or text).
- 4. Select a visual feature or enter text.

- 5. Tap Done.
- When you are finished adding visual features, tap Files → Save as.
- 7. Select a memory location (if necessary).
- 8. Enter a new file name for the image and tap **Done**.

Add a memo

- In Idle mode, tap Menu → My files → Images → My photos → a photo file.
- 2. Tap 🐼
- 3. Tap Edit → Memo on screen.
- 4. Select a colour and enter a memo on the screen.
- 5. Tap Done.
- When you are finished, tap Files → Save as
- 7. Select a memory location (if necessary).
- 8. Enter a new file name for the image and tap **Done**.

Print images

Learn to print your image with an optional PC data cable or the Bluetooth wireless feature.

To print an image using an optional PC data cable.

- Connect the multifunction jack on your phone to a compatible printer.
- Open an image or capture a new photo.
 ▶ p. 29
- Tap More → Print via → USB.
- 4. Set print options and print the image.
 To print an image using the Bluetooth wireless feature.
- Open an image or capture a new photo.
 ▶ p. 29
- 2. Tap More → Print via → Bluetooth.
- Select a Bluetooth-enabled printer and pair with the printer. ▶ p. 41
- 4. Set print options and print the image.

Edit videos

Learn to edit video files and apply visual effects.

Trim any segment

- In Idle mode, tap Menu → Applications → Video editor.
- 2. Tap Files → Import image or Import video.
- Select an image or video category → an image or video → Add.
 For an image, select the duration that the
- image displays.
 4. Tap More → Files to add more images or videos.
- Tap Edit → Trim.
- Tap to play the video and tap Start mark at the point where you want the new video to begin.
- 7. Tap **End mark** at the point where you want the new video to end.

- 8. Tap Trim.
- When you are finished, tap More → Export → Video → Yes.

To save the project for future use, tap More → Files → Save project. The project will be saved in Other files.

10. Enter a new file name and tap Done.

Split videos

- In Idle mode, tap Menu → Applications → Video editor
- 2. Tap Files → Import image or Import video.
- Select an image or video category → an image or video → Add.
 For an image, select the duration that the image displays.
- Tap More → Files to add more images or videos.
- Tap Edit → Split.

- Tap to play the video and tap Split point → Split to divide the file into two clips.
- 7. Insert an image or video as desired between the clips.
- When you are finished, tap More → Export → Video → Yes.
 - To save the project for future use, tap More
 → Files → Save project. The project will be saved in Other files
- 9. Enter a new file name and tap **Done**.

Insert text



Inserting text to a video may not be available depending on your service provider.

- In Idle mode, tap Menu → Applications → Video editor.
- 2. Tap Files → Import image or Import video.

- Select an image or video category → an image or video → Add.
 For an image, select the duration that the
- Tap More → Files to add more images or videos.
- 5. Tap Edit → Insert → Text.

image displays.

- Tap to play the video and tap Start mark at the point where you want the text to be displayed.
- Tap End mark at the point where you want the text to be disappeared.
- 8. Tap Insert.
- 9. Enter text and tap Done.
- 10. Move or resize the text and tap Done.
- When you are finished, tap More → Export
 → Video → Yes.
 - To save the project for future use, tap **More**→ **Files** → **Save project**. The project will be saved in **Other files**.
- 12. Enter a new file name and tap Done.

Add sound track

- In Idle mode, tap Menu → Applications → Video editor.
- 2. Tap Files → Import image or Import video.
- Select an image or video category → an image or video → Add.
 For an image, select the duration that the image displays.
- Tap More → Files to add more images or videos.
- Tap Additional audio track → Import sound
- Tap Sounds → a sound category → a sound → Add.
- When you are finished, tap More → Export
 → Video → Yes.

 To save the project for future use, tap More.
 - To save the project for future use, tap More
 → Files → Save project. The project will be saved in Other files.
- 8. Enter a new file name and tap Done.

Synchronise data

Learn to synchronise Phonebook, Calendar, Task, and Memo with the web server you have specified.

Create a synchronisation profile

- In Idle mode, tap Menu → Applications → Synchronise.
- 2. Tap Add and specify profile parameters.
- 3. When you are finished, tap Save.

Start synchronisation

- In Idle mode, tap Menu → Applications → Synchronise.
- 2. Select a synchronisation profile.
- 3. Tap **Continue** to start synchronisation with the web server you have specified.

Use RSS reader

Learn to use RSS reader to get the latest news and information from your favourite websites.

Create feeds

- In Idle mode, tap Menu → Applications → RSS reader.
- 2. Tap Add.
- 3. Tap the URL input field.
- 4. Enter the address of an RSS feed and tap **Done**.
- 5. Tap **OK**.

Read RSS feeds

- In Idle mode, tap Menu → Applications → RSS reader.
- Tap Update to get the latest contents.
- 3. Select a feed category \rightarrow an updated feed.

Customise RSS reader settings

- In Idle mode, tap Menu → Applications → RSS reader.
- Tap More → Settings → Network settings.
- 3. Tap >> next to a profile you want.
- Change the settings to customise your BSS reader.
- 5. Tap Save.

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.



Depending on the software of the phone, the download of java files may not be supported.

Play games

- In Idle mode, tap Menu → Applications → Games and more.
- 2. Select a game from the list and follow the onscreen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

Launch applications

- In Idle mode, tap Menu → Applications → Games and more → an application.
- 2. Tap **More** to access a list of various options and settings for your application.

Create and view world clocks

Learn to view the time in another city and set world clocks to appear on your display.

Create a world clock

- In Idle mode, tap Menu → Organiser → World clock.
- 2. Tap Add.
- 3. Scroll left or right to a time zone.
- 4. Tap **OK** to create your world clock.

Add a world clock to your display

In Dual Clock Display mode, you can view clocks with two different time zones on your display.

After you have created a world clock,

- In Idle mode, tap Menu → Organiser → World clock.
- 2. Tap Set as 2nd clock.
- 3. Select the world clock you want to add.
- 4. Tap **Set**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

- In Idle mode, tap Menu → Alarms.
- Tap Create alarm.
- 3. Set alarm details.
- 4. Tap Save.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off

Stop an alarm

When the alarm sounds.

- Drag the slider to Stop to stop an alarm without snooze.
- Drag the slider to Stop to stop an alarm with snooze or drag the slider to Snooze to silence the alarm for the snooze period.

Deactivate an alarm

- In Idle mode, tap Menu → Alarms.
- 2. Tap **Off** next to the alarm you want to deactivate.

Use the calculator

- In Idle mode, tap Menu → Organiser → Calculator.
- Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert currencies or measurements

- In Idle mode, tap Menu → Organiser → Convertor → a conversion type.
- 2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

- In Idle mode, tap Menu → Applications → Timer
- 2. Enter hours or minutes to count down.
- Tap Start to begin the countdown.
- 4. Tap Stop to pause the countdown.
- When the timer expires, drag the slider to Stop to stop the alerts.

Use the stopwatch

- In Idle mode, tap Menu → Applications → Stopwatch.
- 2. Tap Start to begin the stopwatch.
- 3. Tap Lap to record lap times.
- 4. When you are finished, tap Stop.
- 5. Tap Reset to clear recorded times.

Create a new task

- In Idle mode, tap Menu → Organiser → Task.
- 2. Tap Create task.
- 3 Enter the details of the task
- 4. Tap Save.

Create a text memo

- In Idle mode, tap Menu → Organiser → Memo.
- 2. Tap Create memo.
- 3. Enter your memo text and tap Done.

Create sketches

Learn to create sketches with various sketch tools

 In Idle mode, tap Menu → Applications → Save as Flash. 2. From the sketch toolbar, tap to change the tool type. You have the following tools:

		•
Tool		Function
	Pen	Select the line type; Select the line thickness; Select the line colour
Ф	Shape	Add a circle or rectangle; Change the line thickness; Change the line colour; Select the colour to fill the figure
Т	Text	Enter text to insert; Change the font size; Change the attribute; Change the text colour
4	Stamp	Insert a stamp or an image

- 3. Using the tools, make a sketch.
- 4. To add motion to the sketch, use one of the following methods:
 - Tap More → Motion → Preset → a stamp → a motion type → OK.
 - Tap More → Motion → Motion line → a stamp. Draw a line to track and tap OK.
- 5. When you are finished, tap File → Save as Flash or Save as Image.
- 6. Enter a file name and tap Done.

Manage your calendar


Learn to change the calendar view and create events.

Change the calendar view

- In Idle mode, tap Menu → Organiser → Calendar.
- Tap More → View by day or View by week.

Create an event

- In Idle mode, tap Menu → Organiser → Calendar.
- 2. Tap Create schedule.
- 3. Enter the details of the event as required.
- 4. Tap Save.

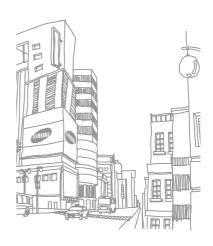

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

While using your phone, the following messages may appear:

3	- A
Message	Try this to solve the problem:
Insert SIM card to access network services	Ensure that the SIM or USIM card is installed correctly.
Password	When the phone lock feature is enabled, you must enter the password you set for the phone

Message	Try this to solve the problem:
PIN code	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the PIN lock menu.
PUK code	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

Your phone displays "Service unavailable" or "Network error."

- When you are in areas with weak signals or poor reception, you may lose reception.
 Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialled.

- Ensure that you have pressed the Dial key:
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception.
 Move to another area and try again.

You select a contact to call, but the call is not dialled.

- Ensure that the correct number is stored in the contact list.
- · Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use several applications at once, your phone requires more power and may heat up.

This is normal and should not affect your phone's lifespan or performance.

Health and safety information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the

Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the

FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

The highest SAR values for this model phone as reported to the FCC are:

GSM850 Head: 0.247 W/Kg, Body: 0.557 W/Kg GSM1900 Head: 0.46 W/Kg, Body: 0.463 W/Kg

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines whenused with a Samsung accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Non-compliance with the above restrictions may result in violation of FCC RF exposure guidelines. SAR information on this and other model phones can be viewed on-line at www.fcc.gov/oet/fccid. This site uses the phone FCC ID number, A3LSWDM8800 Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website

and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cqb/sar.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

update?
The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety

agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings

have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

 "Support needed research into possible biological effects of RF of the type emitted by wireless phones;

- "Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- "Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.
- effects of wireless phone use on human health.

 FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this
- "National Institute for Occupational Safety and Health
 "Environmental Protection Agency

working group:

- "Federal Communications Commission
- "Occupational Safety and Health Administration
 "National Telecommunications and Information
- Administration

 The National Institutes of Health participates in some

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have

yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been

tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which

people use wireless phones, so we don't know with

certainty what the results of such studies mean for

human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures. However, none of the studies can answer questions

about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects. such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the

angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

"If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the

RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using

wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they

are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work? Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal trade Commission (FTC)

charged two companies that sold devices that claimed

making false and unsubstantiated claims. According to

to protect wireless phone users from radiation with

FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a

compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should

harmful interference be found to occur. FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the

· FCC RF Safety Program: http://www.fcc.gov/oet/rfsafety/

Environmental Protection Agency (EPA):

http://www.epa.gov/radiation/

(OSHA):

following organizations:

Occupational Safety and Health Administration's

http://www.osha.gov/SLTC/ radiofrequencyradiation/index.html

National institute for Occupational Safety and Health (NIOSH):

http://www.cdc.gov/niosh/emfpg.html

World health Organization (WHO):

http://www.who.int/peh-emf/ International Commission on Non-Ionizing Radiation Protection:

http://www.icnirp.de National Radiation Protection Board (UK):

http://www.nrpb.org.uk Updated 4/3/2002: US food and Drug

Administration http://www.fda.gov/cellphones

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an

- incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your

mirrors, then continue.

Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.

- Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
- it is a free call on your wireless phone!

 9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.

 10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.wow-com.com

Provided by the Cellular Telecommunications & Internet Association

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker.

These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on.
- · should not carry the phone in a breast pocket.

 should use the ear opposite the pacemaker to minimize potential interference.

If you have any reason to suspect that interference is taking place, switch your phone off immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution

areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

If the phone is not on, switch it on.

Key in the emergency number for your present location (for example. 911 or other official emergency number). Emergency numbers vary by location

3. Press [] .

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone
Your phone is not a toy. Children should not be allowed
to play with it because they could hurt themselves and
others, damage the phone or make calls that increase

your phone bill.

FCC Notice and Cautions

•This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause

harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

operation. This equipment has been tested and found

interference in a residential installation. This

equipment generates, uses and can radiate

radio frequency energy and,

to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television. reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. -Increase the separation between the equipment

if not installed and used in accordance with the instructions, may cause harmful interference to

radio communications. However, there is no

and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV

technician for help.

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Battery march Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Changes or modifications made in the radio phone, not expressly approved by Samsung, will void the user's authority to operate the equipment.

Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
 Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the
- phone, its parts or accessories.
 For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.

is improperly installed and the air bag inflates,

serious injury could result.

 Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fullyextended and over your shoulder.
- Try not to hold, bend or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- · Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

buy a new battery.

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to
 - If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers.

When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery.

temperatures below 0 °C (32 °F).

- Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Liion batteries are particularly affected by
 - Do not short-circuit the battery. Accidental shortcircuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the

- terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years. Keep the phone and all its parts and accessories out

- of the reach of small children Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic
- circuits

- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain
- plastics. Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone,
 - which may damage the phone's electronic circuit boards. Do not drop, knock or shake the phone. Rough
 - handling can break internal circuit boards.
 - Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-

water solution

- · Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation. Do not put the phone in or on heating devices, such
- as a microwave oven, a stove or a radiator. The phone may explode when overheated. When the phone or battery gets wet, the label
- indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes. Use only the supplied or an approved replacement antenna. Unauthorized antennas or modified

accessories may damage the phone and violate

regulations governing radio devices. If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.