


* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Phone layout

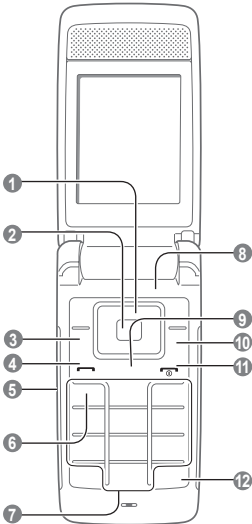

1

4-way navigation key
In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

2

Web access/Confirm key
In Idle mode, access the web browser;
In Menu mode, select the highlighted menu option or confirm an input

3

My Menu key
In Idle mode, access My Menu mode

4

Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

5

Volume key
Adjust the phone's volume;
Send an SOS message
▶ Activate and send an SOS message

6

Voice mail service key
In Idle mode, access voice mails (press and hold)

7

Alphanumeric keys

8

Softkeys
Perform actions indicated at the bottom of the display

9

Delete key
Delete characters

10

Organiser key
In Idle mide, access organiser applications

11

Power/Menu exit key
Turn the phone on and off (press and hold); End a call;
In Menu mode, cancel input and return to Idle mode

12

Silent profile key
In Idle mode, activate or deactivate Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New email message
	Call diverting active		New voice mail message
	SOS message feature activated		Music playback in progress
	Alarm activated		FM radio on
	Browsing the web		Memory card inserted
	Connecting to secured web page		Normal profile activated
	In Home Zone service area		Silent profile activated
	In Office Zone service area		Battery power level

Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.



2. Insert the battery and replace the battery cover.

 


Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter.



Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	Square brackets: phone keys; for example: [↶] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

1. To turn your phone on, press and hold [↶].
2. To turn your phone off, press and hold [↶].

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [↶] to dial the number.
3. To end the call, press [↶].

Answer a call

1. When a call comes in, press [↶].
2. To end the call, press [↶].

Adjust the volume

To adjust the volume of the ringtone

1. In Idle mode, press <Menu> → Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Options> → Edit.
4. Select Call alert volume.
5. Scroll left or right to adjust the volume level.
6. Press <Save> twice.

To adjust the volume of voice during a call

While a call is in progress, press [▲/▼] to adjust the earpiece volume.

Change your ringtone

1. In Idle mode, press <Menu> → Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Option> → Edit.
4. Select Voice call ringtone.
5. Select a ringtone category → a ringtone.
6. Press <Save>.

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Idle mode, press <Menu> → Settings → Security → Mobile tracker
2. Enter your password and press <OK>.
3. Scroll left or right to On.
4. Scroll down and press [OK] to open the recipient list.
5. Press [OK] to open your contact list.
6. Scroll to a contact and press [OK].
7. Select a number (if necessary).
8. When you are finished selecting contacts, press <Select> → Select to return to the recipient list.
9. Press <Options> → Save to save the recipients.
10. Scroll down and enter the sender's name.
11. Press [OK] → <Accept>.

Call a recently dialed number

1. In Idle mode, press [↶].
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press [OK] to view details of the call or [↶] to dial the number.

Enter text

To change the text input mode

- Press and hold [*] to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [✱] to change case or switch to Number mode.
- Press and hold [#] to switch to Symbol mode.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Idle mode, press <Menu> → Messages → SOS messages → Sending options.
2. Scroll left or right to On.
3. Scroll down and press [OK] to open the recipient list.
4. Press [OK] to open your contact list.
5. Scroll to a contact and press [OK].
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Select> → Select to return to the recipient list.
8. Press <Options> → Save to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <Save> → <Yes>.

To send an SOS message

1. With the phone closed, press [▲/▼] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [↶].

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the appropriate alphanumeric key to select a symbol.

- To move the cursor, press the navigation key.
- To delete characters one by one, press [C]. To delete all of the characters, press and hold [C].
- To insert a space between characters, press [#].
- To enter punctuation marks, press [1].

Use the camera

Capture photos

1. In Idle mode, press the navigation key down.
2. Aim the lens at the subject and make any adjustments.
3. Press [OK] to take a photo.
4. Press <Back> to take another photo (step 2).

View photos

In Idle mode, press <Menu> → My files → Images → My photos → a photo file.

Listen to music

1. In Idle mode, press <Menu> → Music.
2. Select a music category → a music file.
3. Control playback using the following keys:

Keys	Function
OK	Pause or resume playback
▲/▼	Adjust the volume up or down
Navigation	• Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) • Right: Skip forward; Scan for ward in a file (press and hold) • Up: Open the playlist • Down: Stop playback