

## SyncMaster 1501MP / 1701MP



## Index

- Main Page
- Safety Instructions
  - Notational
  - Power
  - Installation
  - Cleaning
  - Other
- Introduction
  - Unpacking
  - Front
  - Rear
  - Remote Control
- Setup
  - Connecting Your Monitor
    - Connecting to a Computer
    - Connecting to Other Devices
  - Installing the Monitor Driver
    - Automatic
    - Manual
  - Installing a VESA Base
    - Using the FOLD button
    - Installing a VESA Base
- Adjusting Your LCD Monitor
  - User Controls
    - User control buttons
    - Direct-Access Features
  - On-Screen Display
    - OSD Functions
    - Screen Adjustment Animation Clips
- Troubleshooting
  - Check before Calling for Service
  - Problems and Solutions
  - Q & A
- Specifications
  - General Specifications
  - PowerSaver
  - Preset Timing Modes
- Information
  - Service Center
  - Terms
  - Regulatory
  - Natural Color
  - For Better Display
  - Authority

## Safety Instructions : Notational

Please read the following safety instructions as they are designed to prevent damage to property and harm to the user.



### Warning / Caution



Failure to follow directions noted by this symbol could result in bodily harm or damage to equipment.

### Notational Conventions



Prohibited



Do not disassemble



Do not touch



Important to read and understand at all times



Disconnect the plug from the outlet



Grounding to prevent an electric shock

## Safety Instructions : Power



When not used for extended periods of time, set your PC to DPMS. If using a screen saver, set it to the active screen mode.



● **Do not use a damaged or loose plug.**

- This may cause an electric shock or fire.



● **Do not pull the plug out by the wire nor touch the plug with wet hands.**

- This may cause an electric shock or fire.



● **Use only a properly grounded plug and receptacle.**

- An improper ground may cause electric shock or equipment damage.




● **Do not excessively bend the plug and wire nor place heavy objects upon them, which could cause damage.**

- This may cause an electric shock or fire.



● **Disconnect the plug from the outlet during storms or lightening or if it is not used for a long period of time.**

- Failure to do so may cause an electric shock or fire.

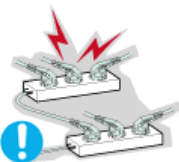

● **Do not connect too many extension cords or plugs to an outlet.**

- This may cause a fire.

## Safety Instructions : Installation



**Do not cover the vents on the monitor cabinet.**

- Bad ventilation may cause a breakdown or fire.



**Put your monitor in a location with low humidity and a minimum of dust.**

- An electric shock or fire could result inside the monitor.



**Do not drop the monitor when moving it.**

- This may cause damage to the product or human body.



**Place the monitor on a flat and stable surface.**

- The monitor can cause injury by falling.



**Set down the monitor carefully.**

- It could be damaged or broken.



**Do not place the monitor face down.**

- The TFT-LCD surface may be damaged.

## Safety Instructions : Cleaning



When cleaning the monitor case or the surface of the TFT-LCD, wipe with a slightly moistened, soft fabric.



- Do not spray detergent directly on the monitor.



- Use the recommended detergent with a smooth cloth.



- If the connector between the plug and the pin is dusty or dirty, clean it properly with a dry cloth.

- A dirty connector can cause an electric shock or fire.



- Do not set a glass of water, chemicals or any small metal objects on the monitor.

- This may cause damage, electric shock or a fire.
- If a foreign substance gets into the monitor, disconnect the plug and then contact a [service center](#).

## Safety Instructions : Ohter



**Do not remove cover(or back). No user serviceable parts inside.**

- This may cause an electric shock or a fire.
- Refer servicing to qualified service personnel.



**If your monitor does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and [contact an authorized dealer or service](#).**

- This may cause an electric shock or fire.



**Do not place any heavy objects on the monitor.**

- This may cause an electric shock or a fire.



**For each hour of looking at the monitor, you should let your eyes rest for 5 minutes.**

- This will reduce eye fatigue.




**Do not use or store inflammable substances near the monitor.**

- This may cause an explosion or fire.



**Do not try to move the monitor by pulling on the wire or the signal cable.**

- This may cause a breakdown, electric shock or a fire due to damage to the cable.

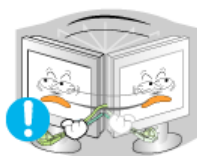

**Do not move the monitor right or left by pulling only the wire or the signal cable.**

- This may cause a breakdown, electric shock or a fire due to damage to the cable.



**Never insert anything metallic into the monitor openings.**

- This may cause an electric shock, fire or injury.

## Safety Instructions : Ohter



**Keep all power adaptors apart.**

- Possible fire hazard.



**Keep power adaptor away from any other heat source.**

- Possible fire hazard.



**Remove and discard vinyl bag from power adaptor before use.**

- Possible fire hazard.



**Always keep power adaptor in well-ventilated area.**



**If you view a fixed screen for an extended period of time, residual image or blurriness may appear.**

- Change the mode to energy save or set a screensaver to moving picture when you need to be away from the monitor for an extended period of time.



## Introduction : Unpacking



Please make sure the following items are included with your monitor. If any items are missing, [contact your dealer](#).




User's Guide and Natural  
Color/Driver Installation CD



Power Cord



Signal Cable(15 pin D-Sub)

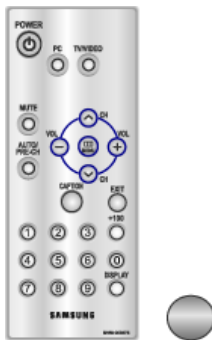

Remote Control /  
Batteries (CR2025)




Monitor



DC Adapter



Audio Cable

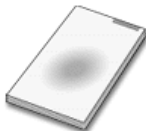

Quick Setup Guide



Warranty Card  
(Not available in all locations)

## Introduction : Front



For detailed information concerning the monitor functions, refer to [User Controls](#) under Adjusting Your Monitor. The monitor's front configuration may vary slightly depending on the monitor model.



1. Input Signal Indicators

2. TV / VIDEO button

3. PC button

4. EXIT button / AUTO button

5. MENU button

6. Power button / Power indicator

7. Up-Down button / Channel button

8. Left-Right button / Volume button


## Introduction : Rear



For detailed information concerning cable connections, refer to [Connecting Cables](#) under Setup. The monitor's rear configuration may vary slightly depending on the monitor model.




Remove the cover to connect the cables. (Pull the joining part to remove the cover.)

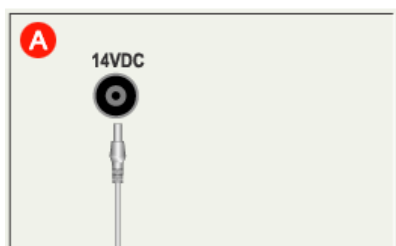

### A Power Connection Terminal (14V DC)


This product may be used with 90 ~ 264. (Voltage is automatically adjusted by the power adaptor.)

Connect the power source plug when all [cables are connected](#).

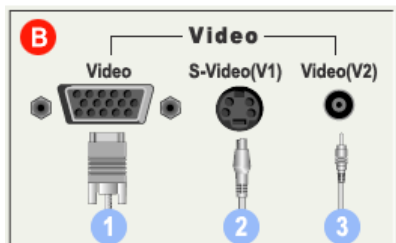


### B Video Connection Terminal

- 1 PC connection terminal (15 pin D-SUB)
- 2 S-Video(V1) connection terminal (S-VHS)
- 3 Video(V2) connection terminal (RCA)

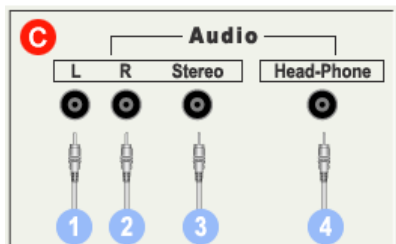

### C Audio Connection Terminal

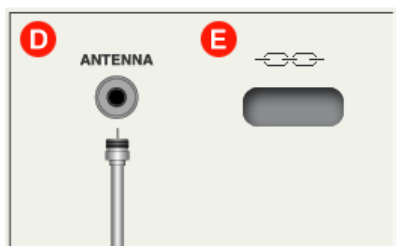

- 1 Left audio(L) connection terminal (Input)
- 2 Right audio(R) connection terminal (Input)
- 3 PC sound(Stereo) connection terminal (Input)
- 4 Headphone connection terminal (Output)




### D Antenna Connection Terminal (When TV is connected)

### E Anti-Theft Security Lock


## Introduction : Remote Control

-  For detailed information of the Remote Control Unit functions, refer to Adjusting Your Monitor > User Controls > User Control Buttons > [Remote Control buttons](#).  
The remote control's configuration may vary slightly depending on the monitor model.
-  The Remote control may function within a range of 0.23 to 33 feet (7cm to 10m) and 30 degrees to the left and right of the monitor's Remote Control Reception sensor.

### 1. Button Names

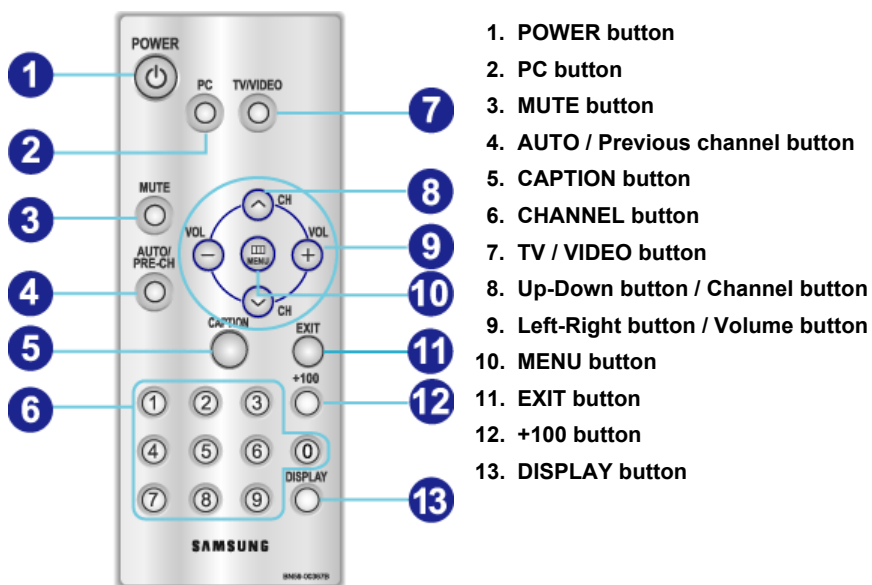


### 2. Replacing Batteries

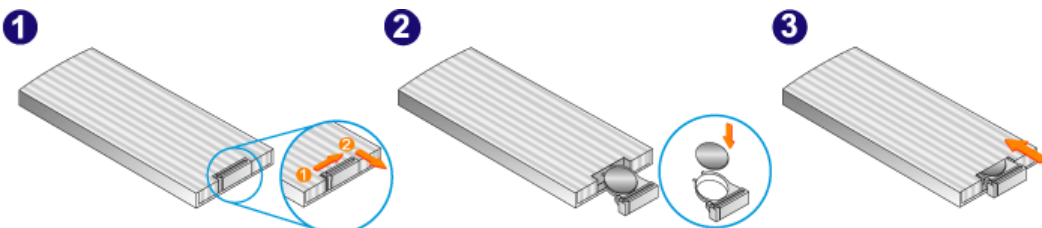


1. To open, slide the tray handle to the right (1) and then pull it forward (2).
2. Place the battery on the tray with the right side up.
3. Push the tray back in in the arrow direction.


## Setup - Connecting Your Monitor : Connecting to a Computer

 Turn on your computer and monitor. If your monitor displays an image, installation is complete.


### 1. Connecting to a Computer

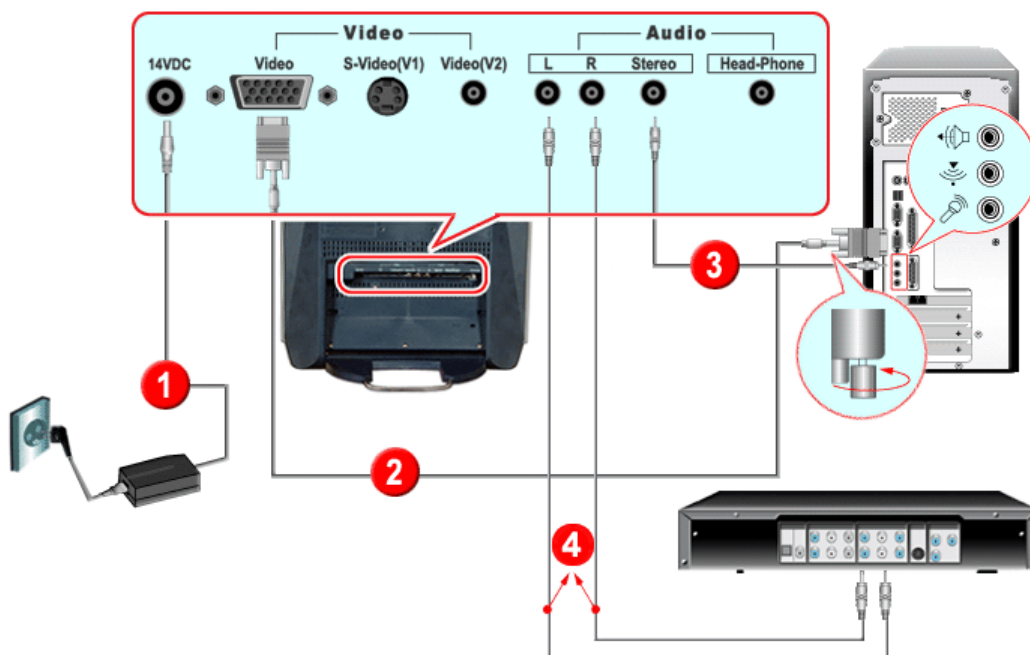


1. Connect the power cord to the DC adapter and connect the adapter jack to the DC14V power port on the back of your monitor.
2. Connect the signal cable to the video port on your computer.
3. Connect the audio cable for your monitor to the audio port on the back of your computer.
4. Connect the Audio (L) and Audio (R) terminals of a DVD, VCR or Camcorders to the monitor's L and R audio input terminals using audio cables.
5. Turn on both your computer and the monitor.
6. You may enjoy clear and quality sound from the computer sound card using the monitor speakers. (You don't need to install any separate speakers for your computer.)


 Contact a local Samsung Electronics [service center](#) to buy optional items.

## Setup - Connecting Your Monitor : Connecting to other devices

 AV input devices like DVDs, VCRs or Camcorders as well as your computer may be connected to the monitor. For detailed information on connecting AV input devices, refer to [User Controls](#) under Adjusting Your Monitor.

### 1. Connecting AV Devices

 The monitor has AV connection terminals to connect AV input devices like DVDs, VCRs or Camcorders. You may enjoy AV signals as long as the monitor is turned on.

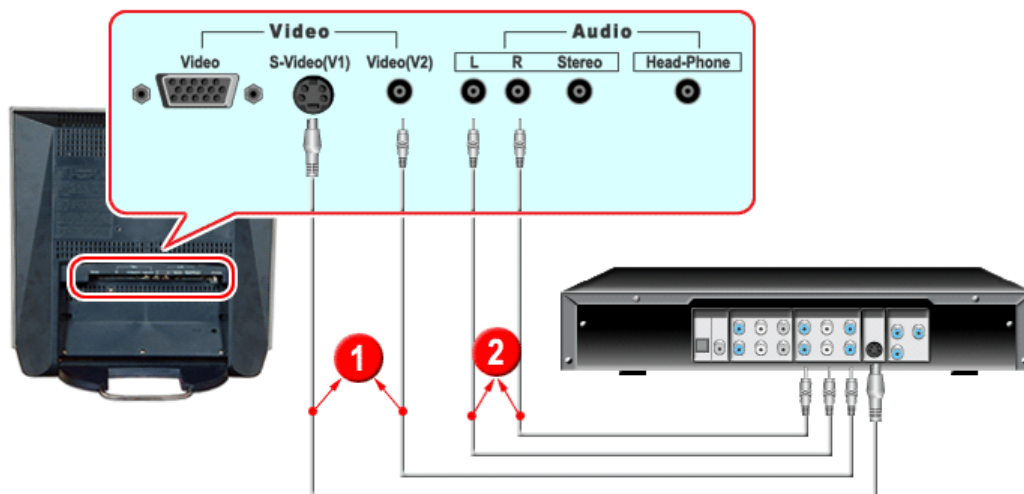

1. AV input devices like DVDs, VCRs or Camcorders are connected to the S-Video (V1) or Video (V2) terminal of the monitor using the S-VHS or RCA cable.

 S-VHS or RCA cable is optional.


2. Connect the Audio (L) and Audio (R) terminals of a DVD, VCR or Camcorders to the monitor's L and R audio input terminals using audio cables.
3. Select Video or S-Video that is connected to a DVD, VCR or Camcorders using the Source button on the monitor's front.
4. Then, start the DVD, VCR or Camcorders with a DVD disc or tape inserted.

## Setup - Connecting Your Monitor : Connecting to other devices

## 2. Connecting TV




 You may view television programs on the monitor if it is connected to an antenna or CATV cable without installing any separate TV reception hardware or software on your computer.

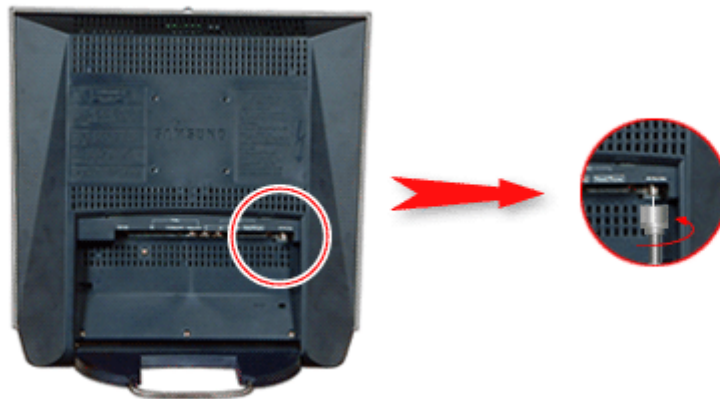


1. Connect the CATV or antenna coaxial cable to the Antenna terminal on the rear of the monitor. You need to use a coaxial antenna cable.
2. Turn on the monitor.
3. Select TV using Source button among the external signal adjustment buttons.
4. Select a desired TV channel.




 As this product is designed for NTSC signals only, you cannot view TV programs in countries where PAL or SECAM signals are used.

### 3. Connecting to a Macintosh

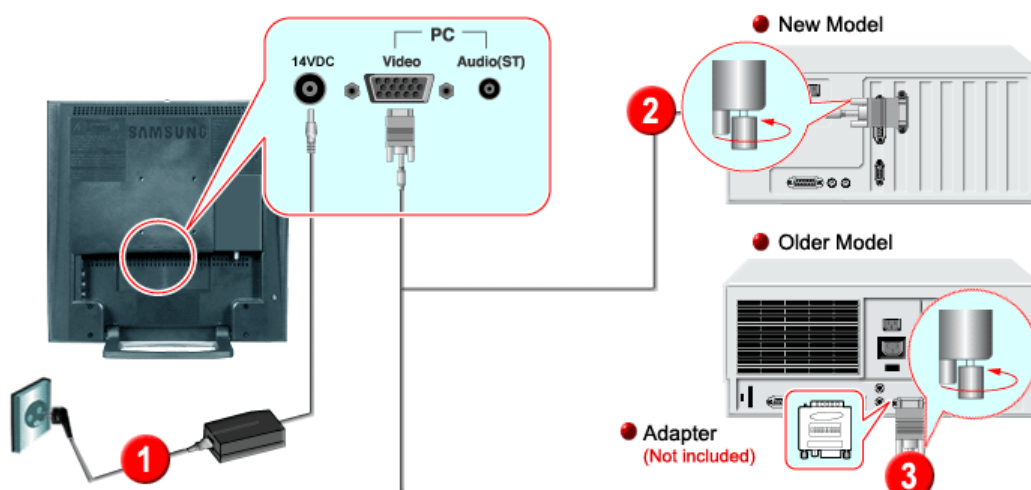


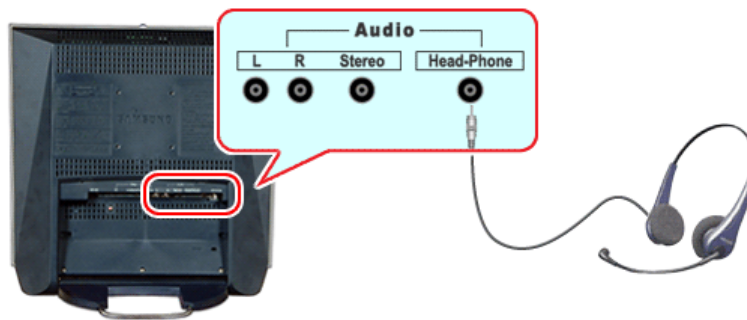
## Setup - Connecting Your Monitor : Connecting to other devices

1. Connect the power cord to the DC adapter and then connect the adapter jack to the DC14V power port on the monitor. (Voltage is automatically adjusted by the power adaptor.)
2. Connect the signal cable to the D-SUB port on the Macintosh computer.
3. For older model Macintoshes, you need to adjust the resolution control DIP switch on the Macintosh adapter (optional) referring to the switch configuration table shown on its rear.
4. Turn on the monitor and Macintosh.

 Contact a local Samsung Electronics [service center](#) to buy optional items.

### 4. Connecting Headphones

 You may connect your headphones to the monitor.



1. Connect your headphones to the Headphone-out port.



## Setup - Installing the Monitor Driver : Automatic



When prompted by the operating system for the monitor driver, insert the CD-ROM included with this monitor. Driver installation is slightly different from one operating system to another. Follow the directions as appropriate for the operating system you have.

Prepare a blank disk and download the driver program file at the Internet web site shown here.


- Internet web site : <http://www.samsung-monitor.com/> (Worldwide)  
<http://www.samsungusa.com/monitor/> (USA)  
<http://www.sec.co.kr/monitor/> (Korea)  
<http://www.samsungmonitor.com.cn/> (China)

### 1. Windows ME




Refer to "Installing the Monitor Driver and User Manual" CD-ROM supplied with the monitor. When inserted into the computer CD drive, the CD-ROM boots up automatically. If it fails to boot up automatically, click **monsetup.exe** twice in the CD-ROM drive folder of Windows Explorer.

1. Insert CD into the CD-ROM driver.
2. Click "Windows ME Driver"
3. Choose your monitor model in the model list, then click the "OK" button.

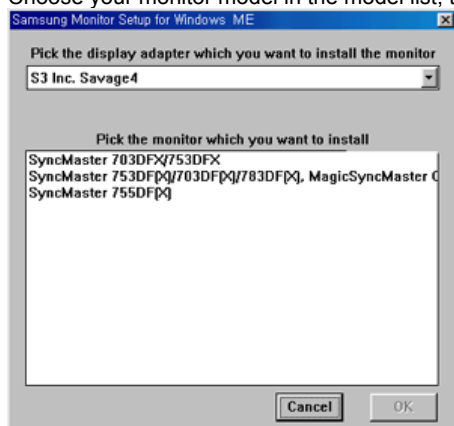

4. Click the "Install" button in the "Warning" window.

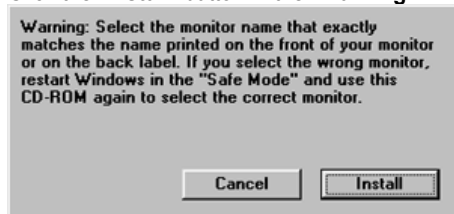

5. Monitor driver installation is completed.

## Setup - Installing the Monitor Driver : Automatic

### 2. Windows XP/2000




Refer to "Installing the Monitor Driver and User Manual" CD-ROM supplied with the monitor. When inserted into the computer CD drive, the CD-ROM boots up automatically. If it fails to boot up automatically, click **monsetup.exe** twice in the CD-ROM drive folder of Windows Explorer.


1. Insert CD into the CD-ROM driver.
2. Click "**Windows XP/2000 Driver**".
3. Choose your monitor model in the model list, then click the "**OK**" button.



4. Click the "**Install**" button in the "**Warning**" window.

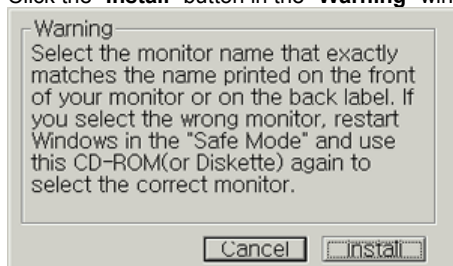


5. If you can see following Message window, then click the "**Continue Anyway**" button. Then click "**OK**" button.

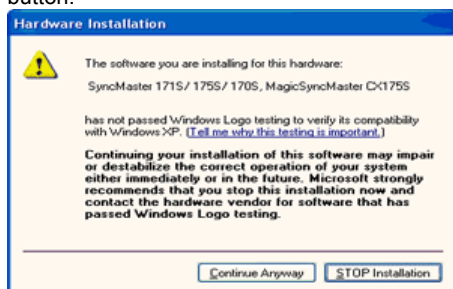

This monitor driver is under certifying MS logo, and this installation don't damage your system. The certified driver will be posted on Samsung Monitor Homepage  
<http://www.samsung-monitor.com/>


6. Monitor driver installation is completed.

## Setup - Installing the Monitor Driver : Manual

 When prompted by the operating system for the monitor driver, insert the CD-ROM included with this monitor. Driver installation is slightly different from one operating system to another. Follow the directions as appropriate for the operating system you have.


Prepare a blank disk and download the driver program file at the Internet web site shown here.

- Internet web site : <http://www.samsung-monitor.com/> (Worldwide)  
<http://www.samsungusa.com/monitor/> (USA)  
<http://www.sec.co.kr/monitor/> (Korea)  
<http://www.samsungmonitor.com.cn/> (China)


 To install the monitor driver manually, follow the procedures explained below after checking your operating system.

### 1. Microsoft® Windows® XP Operating System

1. Insert CD into the CD-ROM driver.
2. Click "Start" —> "Control Panel" then click the "Appearance and Themes" icon.

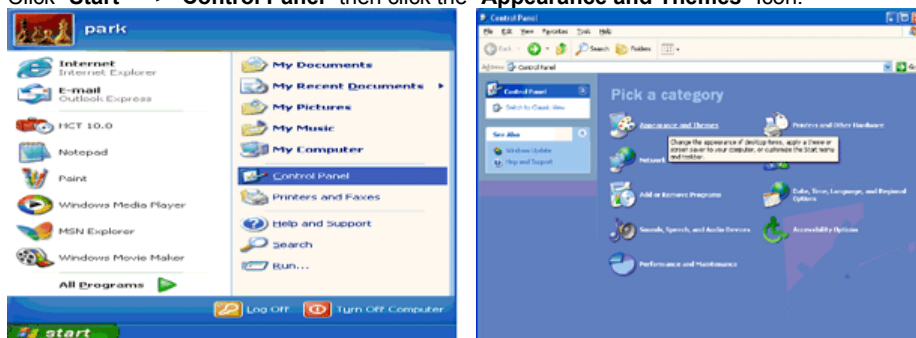


3. Click "Display" icon and choose the "Settings" tab then click "Advanced..".

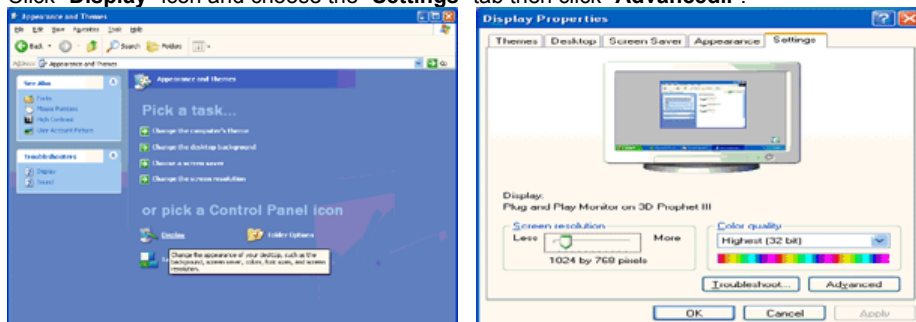


4. Click the "Properties" button on the "Monitor" tab and select "Driver" tab.


## Setup - Installing the Monitor Driver : Manual

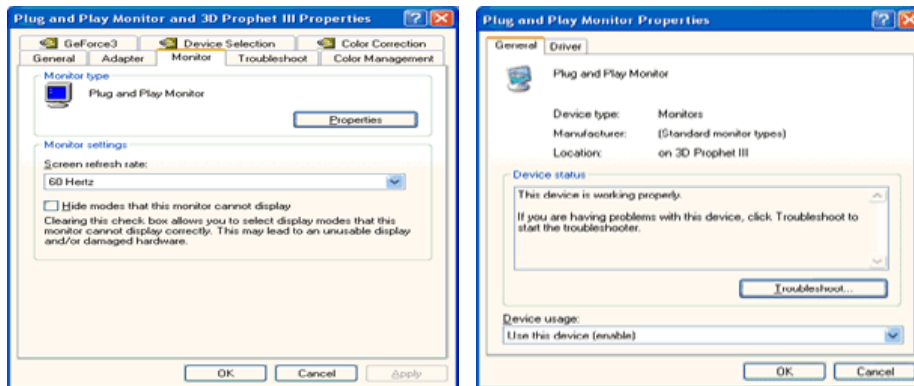


- Click **"Update Driver.."** and select **"Install from a list or.."** then click **"Next"** button.

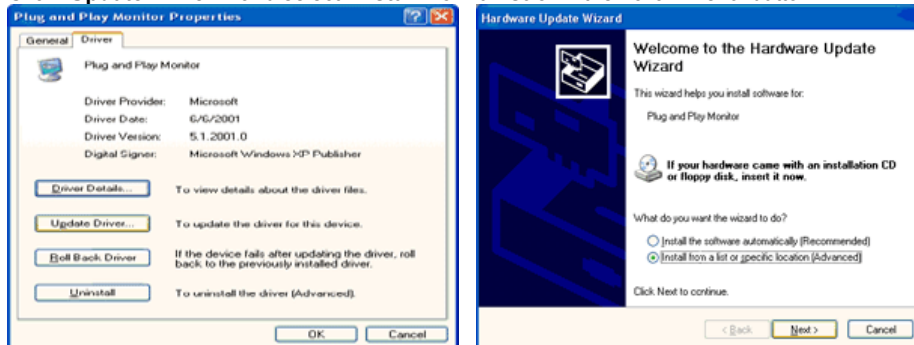

- Select **"Don't search, I will.."** then click **"Next"** and then click **"Have disk"**.

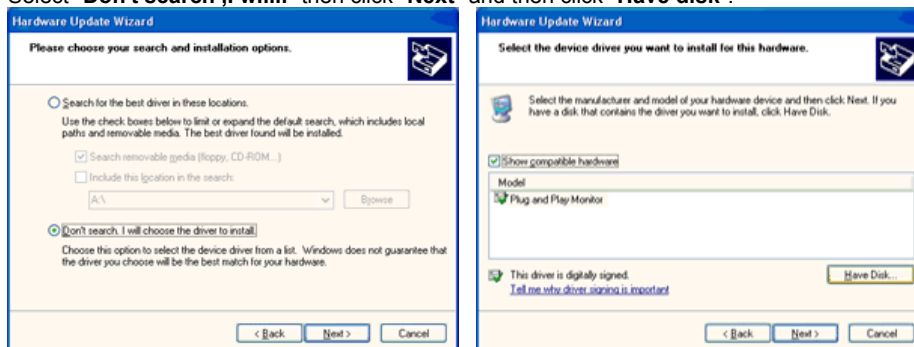


- Click the **"Browse"** button then choose A:(D:\Driver) and choose your monitor model in the model list and click the **"Next"** button.

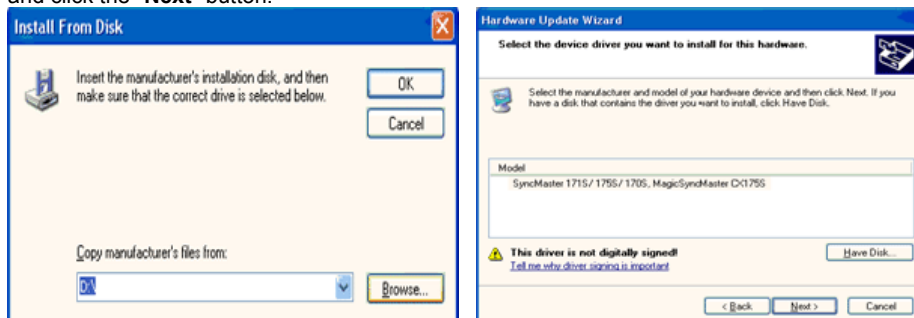



- If you can see following **"Message"** window, then click the **"Continue Anyway"** button. Then click **"OK"** button.

## Setup - Installing the Monitor Driver : Manual



 This monitor driver is under certifying MS logo, and this installation don't damage your system. The certified driver will be posted on Samsung Monitor Homepage  
<http://www.samsung-monitor.com/>

9. Click the **"Close"** button then click **"OK"** button continually.

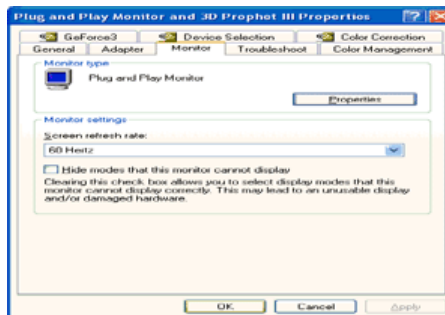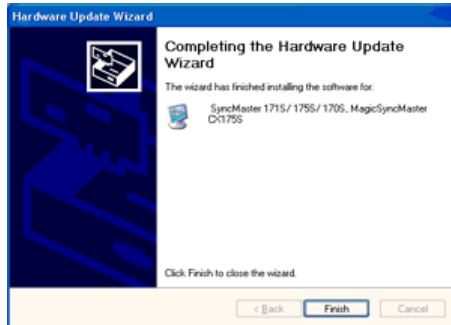

10. Monitor driver installation is completed.

## Setup - Installing the Monitor Driver : Manual

### 2. Microsoft® Windows® 2000 Operating System

\* When you can see "Digital Signature Not Found" on your monitor, follow these steps.

1. Choose **"OK"** button on the **"Insert disk"** window.
2. Click the **"Browse"** button on the **"File Needed"** window.
3. Choose A:(D:\Driver) then click the **"Open"** button and then click **"OK"** button.

\* How to install

1. Click **"Start"** , **"Setting"** , **"Control Panel"**.
2. Double click the **"Display"** Icon.
3. Choose the **"Settings"** tab and then click **"Advanced.."**.
4. Choose **"Monitor"**.  
Case 1: If the "Properties" button is inactive, it means your monitor is properly configured.  
Please stop installation.  
Case 2: If the "Properties" button is active, click the "Properties" button then follow next steps continually.
5. Click **"Driver"** and then click on **"Update Driver.."** then click on the **"Next"** button.
6. Choose **"Display a list of the known drivers for this device so that I can choose a specific driver"** then click **"Next"** and then click **"Have disk"**.
7. Click the **"Browse"** button then choose A:(D:\Driver).
8. Click the **"Open"** button, then click **"OK"** button.
9. Choose your monitor model and click the **"Next"** button then click **"Next"** button.
10. Click the **"Finish"** button then the **"Close"** button.

If you can see the **"Digital Signature Not Found"** window then click the **"Yes"** button. And click the **"Finish"** button then the **"Close"** button.

### 3. Microsoft® Windows® Millennium Operating System

1. Click **"Start"** , **"Setting"** , **"Control Panel"**.
2. Double click **"Display"** icon.
3. Select the **"Settings"** tab and click **"Advanced Properties"** button.
4. Select the **"Monitor"** tab.
5. Click the **"Change"** button in the **"Monitor Type"** area.
6. Choose **"Specify the location of the driver"**.
7. Choose **"Display a list of all the driver in a specific location.."** then click **"Next"** button.
8. Click the **"Have Disk"** button
9. Specify A:(D:\Driver) then click **"OK"** button.
10. Select **"Show all devices"** and choose the monitor that corresponds to the one you connected to your computer and click **"NEXT"**. Click **"NEXT"** again and **"FINISH"** to complete installation.
11. Continue choosing **"CLOSE"** button and **"OK"** button until you close the Display Properties dialogue box.  
(You may get a screen with a warning or other message, just click the appropriate option for your monitor.)

## Setup - Installing the Monitor Driver : Manual

---

### 4. Microsoft® Windows® NT 4.0 Operating System

1. Click **Start**, **Settings**, **Control Panel**, and then double-click **Display** icon.
2. In Display Registration Information window, click Settings Tab and then click **All Display Modes**.
3. Select a mode that you wish to use (Resolution, Number of colors and Vertical frequency) and then click **OK**.
4. Click **Apply** button if you see the screen working normally after clicking Test. If the screen is not normal, change to a different mode (lower mode of resolution, colors or frequency).



If there is no Mode at **All Display Modes**, select the level of resolution and vertical frequency by referring to the [Preset Display Modes](#) in the user guide.

---


### 5. Linux Operating System




To execute X-Window, you need to make the X86Config file, which is a type of system setting file.

1. Press Enter at the first and the second screen after executing the X86Config file.
  2. The third screen is for **setting your mouse**.
  3. Set a mouse for your computer.
  4. The next screen is for **selecting a keyboard**.
  5. Set a Keyboard for your computer.
  6. The next screen is for **setting your monitor**.
  7. First of all, set a **horizontal frequency** for your monitor. (You can enter the frequency directly.)
  8. Set a **vertical frequency** for your monitor. (You can enter the frequency directly.)
  9. Enter the **model name of your monitor**. This information will not affect the actual execution of X-Window.
  10. You have **finished** setting up your monitor.  
**Execute** X-Window after setting other requested hardware.
-


## Setup - Installing a VESA base : Using the FOLD button

 The monitor may be reclined from 0 to 90 degrees. When fully folded (reclined), the base becomes a handy holder for moving the monitor around.

### 1. Reclining Monitor

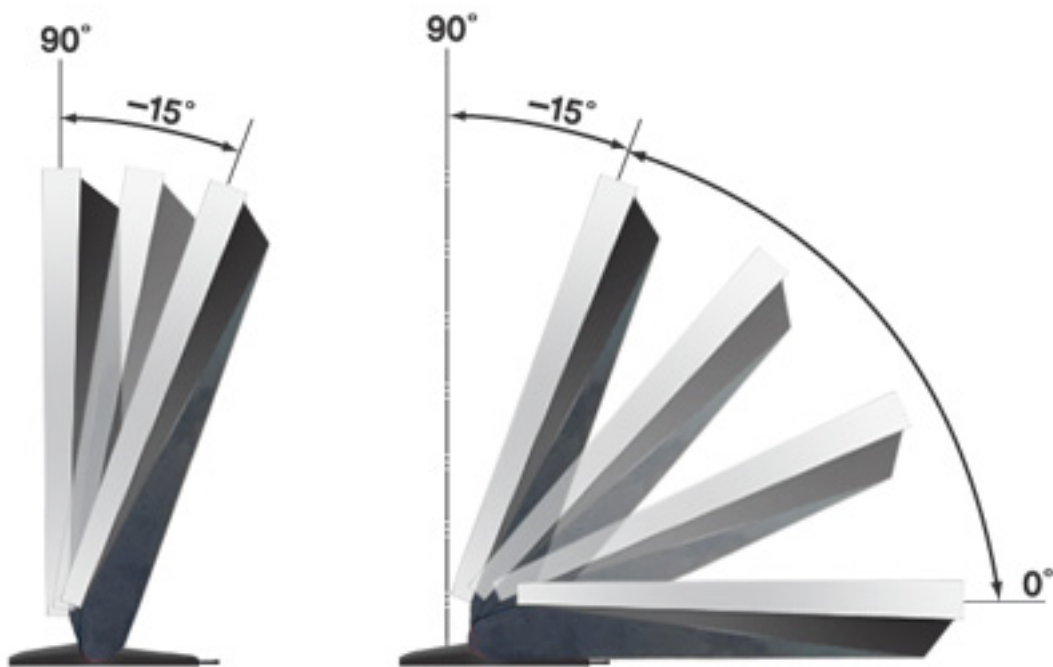


1. The monitor may be reclined by approximately 15 degrees without pressing the FOLD button.
2. You need to press the FOLD button to raising the monitor over 15 degrees.

 Pull the Rear Supporter for safety when reclining the monitor backward from 90 degrees.




## Setup - Installing a VESA base : Using the FOLD button

### 2. Folding Base

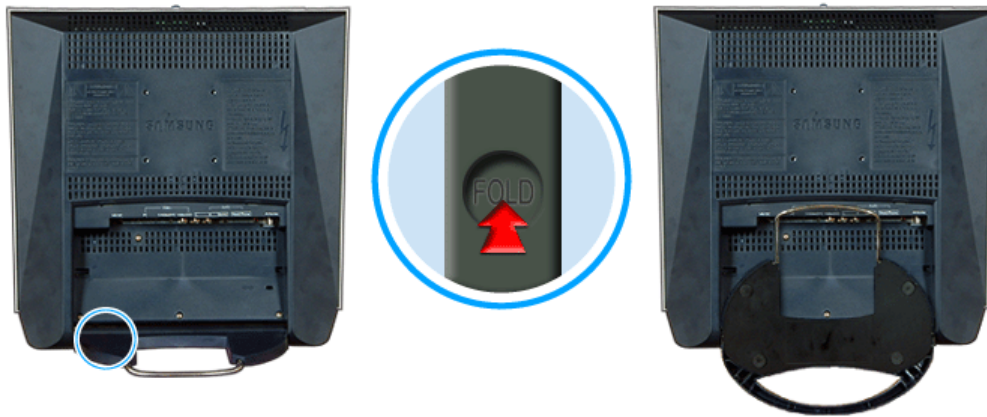


1. Disconnect the monitor cables.
2. Fully recline the monitor backward pressing the **FOLD** button.
3. Reconnect the monitor cables.

 You may [install a VESA base](#) when the monitor base is fully folded.

## Setup - Installing a VESA base : Installing VESA base



The monitor supports VESA mounting standard for use with various VESA mounting devices. This monitor accepts a 75mm x 75mm VESA-compliant mounting interface pad. You need to [fold the monitor base](#) before installing a VESA base.

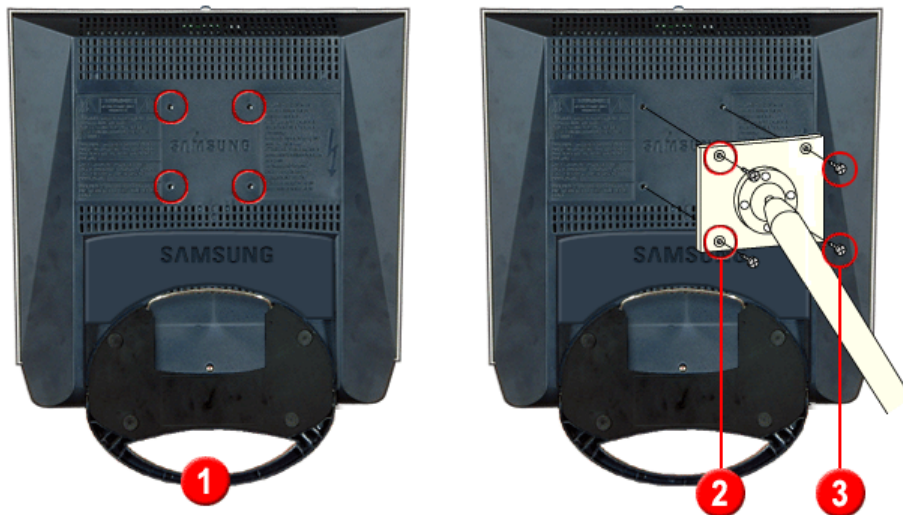

Align **the four bolt holes (1)** on the monitor base with **the holes (2)** on the VESA base and then fasten the base with **the four bolts (3)** supplied.




Only the supplied bolts should be used.




Samsung Electronics will not be responsible for damages caused by using a base other than those specified.

## Adjusting Your Monitor - User Controls : User control buttons

 The control button configuration may vary slightly depending on the monitor model.

[Monitor Buttons](#) | [Remote Control Buttons](#)

### Monitor Buttons

 For more information about screen adjustment, refer to [On-Screen Display](#).



#### 1. Input Signal Indicators

If the TV / VIDEO or PC button is pressed, the corresponding indicator turns on to indicate the input signal currently displayed on the screen.

#### 2. TV / VIDEO button

Turns on the indicator to indicate the currently displayed input signal.

To switch Screen modes: Video → S-Video → TV  
(Press [here](#) to view Screen Mode Switching Animation Clips)

#### 3. PC button

Switches from Video mode to PC mode.

#### 4. EXIT button / AUTO button

When screen adjustment menu is on : Exit button exits from the menu screen or closes screen adjustment menu.

When screen adjustment menu is off : Auto button adjusts the screen automatically. For more information, refer to Direct-Access Features > [Automatic Save](#).

#### 5. MENU button

Use this button to open the OSD and activate a highlighted menu item.

#### 6. Power button / Power indicator

Use this button to turn the monitor on and off. Power Indicator shows PowerSaver mode by green blinking. Refer to Specifications > [PowerSaver](#).

#### 7. ▼ - CH + ▲ button


Moves from one menu item to another vertically or adjusts selected menu values. In TV mode, selects TV channels. For more information, refer to Direct-Access Features > [Channel](#).


#### 8. ◀ - VOL + ▶ button

Moves from one menu item to another horizontally or adjusts selected menu values. Also adjusts the audio volume. For more information, refer to Direct-Access Features > [Volume](#).

## Adjusting Your Monitor - User Controls : User control buttons

### Remote Control Buttons

 For more information on the screen adjustment functions, refer to [On-Screen Display](#).

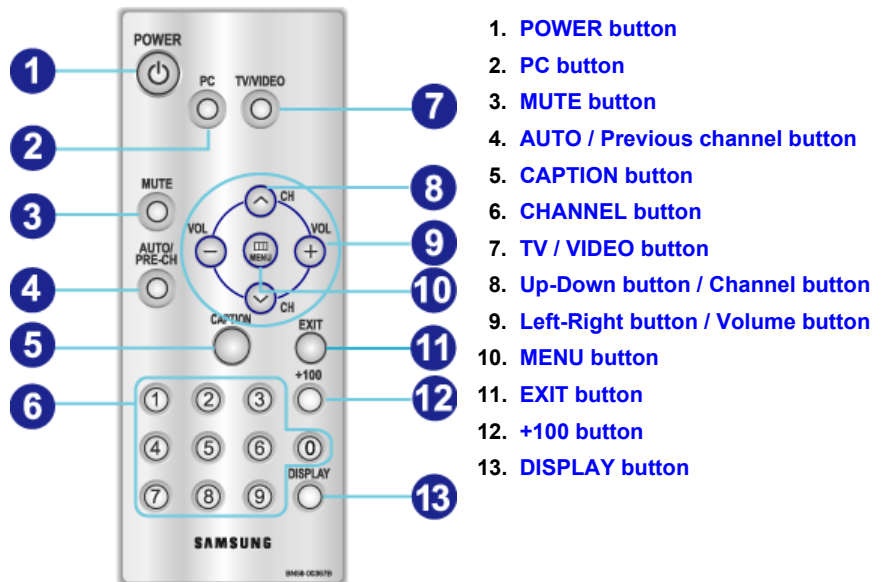

#### 1. Power button ▲Up

Use this button to turn the monitor on and off.

#### 2. PC button ▲Up

Switches from Video screen mode to PC screen mode.

#### 3. Mute button ▲Up

Pauses (mutes) the audio output temporarily.

The audio resumes if Mute or - VOL + button is pressed in the Mute mode.

#### 4. AUTO / Previous channel button ▲Up

**PC Mode** : AUTO button - Adjusts the screen display automatically. For more information, refer to Direct-Access Features > [Automatic Save](#).

**TV Mode** : PRE-CH button - Tunes to the previous channel.

#### 5. Caption button ▲Up

Turns on Closed Captioning service (in English). In some countries, Caption service is not available. You may turn on Closed Captioning service while viewing certain television programs in countries like the United States or a video tape with a "CC" marking.


#### 6. CHANNEL button ▲Up

Selects TV channels in the TV mode.

#### 7. TV / VIDEO button ▲Up

Switches from PC screen mode to Video or TV screen mode.

## Adjusting Your Monitor - User Controls : User control buttons

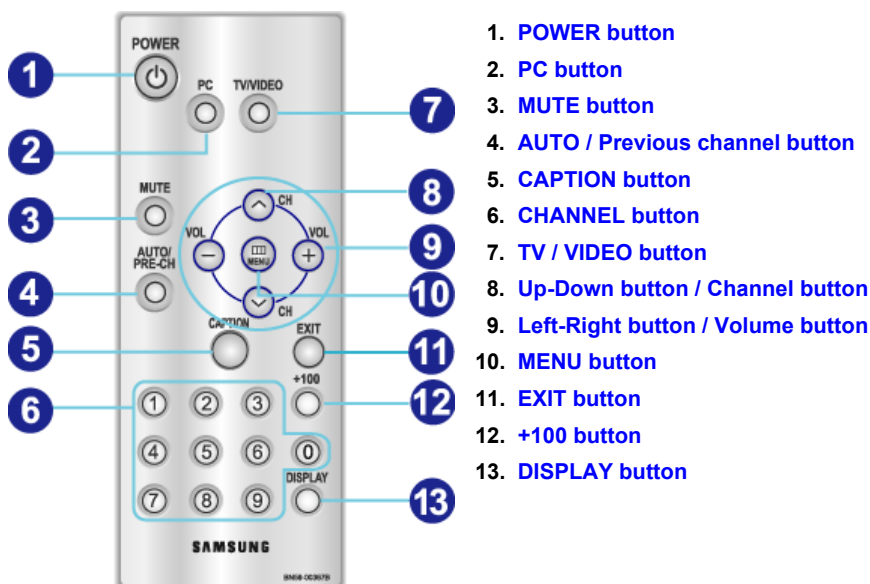

### 8. Up-Down button / Channel button ▲Up

Moves from one menu item to another vertically or adjusts the selected menu value. In TV mode, selects TV channels. For more information, refer to Direct-Access Features > [Channel](#).

### 9. Left-Right button / Volume button ▲Up

Moves from one menu item to another horizontally or adjusts selected menu values. Also adjusts the audio volume. For more information, refer to Direct-Access Features > [Volume](#).

### 10. MENU button ▲Up

Use this button to open the OSD and activate a highlighted menu item.

### 11. Exit button ▲Up

Exits from or closes the menu screen.


### 12. +100 button ▲Up

Press to select channels over 100.  
For example, to select channel 121, press "+100", then press "2" and "1".


### 13. Display button ▲Up

Shows a Video Source on the upper left corner of the screen.

## Adjusting Your Monitor - User Controls : Direct-Access Features


 Direct-Access Features let you display Monitor Adjustment Menu by simply pressing Auto button once. Or they are used to adjust monitor functions. You need to activate functions other than Auto Adjustment only when Auto-Access Features are off.

### 1. Automatic Save

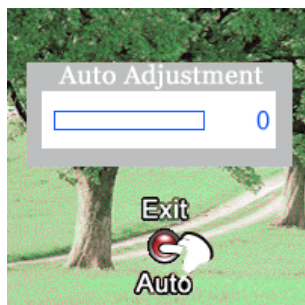


The monitor display becomes more stabilized if adjusted by Auto Adjustment functions when the monitor is installed for the first time. Try Auto Adjustment before attempting Manual Adjustment. Ensure the clock frequency of the monitor matches that of the computer video card before carrying out Auto Adjustment.

When the **Auto** button is pressed, the monitor screen turns black and the Auto Adjustment screen appears as shown in the animated screen on the left.

 To make the automatic adjustment function sharper, execute the 'AUTO' function while the [AutoPattern.exe](#) is on.

### 2. OSD Lock/Unlock

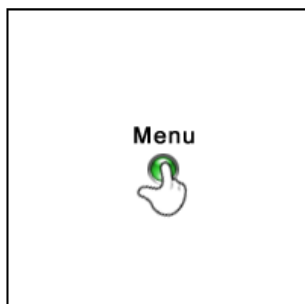

This function allows you to secure the current settings so that they cannot be inadvertently changed.

With the OSD screen off, push and hold the Menu button for at least 5 seconds to lock or unlock the controls.

The following functions are available even while the OSD menu is locked.

- |                           |   |
|---------------------------|---|
| <b>1. Control buttons</b> | TV / Video button, Volume button, Channel button, Menu button, Exit button, Auto button |
| <b>2. PC Screen</b>       | Brightness, Contrast  |
| <b>3. TV Screen</b>       | Channel, Volume   |

With the OSD screen off, push and hold the Menu button for five or more seconds to unlock the OSD settings.

**This function is activated by pressing the Menu button on the front panel of the monitor.**  
(It is not available by pressing the Menu button on the remote controller.)

## Adjusting Your Monitor - User Controls : Direct-Access Features


### 3. Volume



When OSD is not on the screen, push the ◀ or ▶ button to adjust volume.

1. Push the ◀ button to decrease the volume.
2. Push the ▶ button to increase the volume.

### 4. Channel

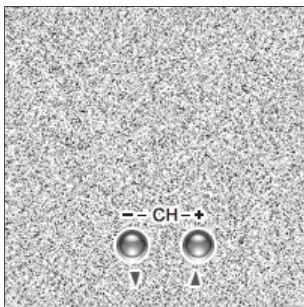

When OSD is not on the screen, push the ▲ or ▼ button to select channel number.

1. Push the ▼ button to decrease the channel number.
2. Push the ▲ button to increase the channel number.




This function is available in TV mode only.








# Adjusting Your Monitor - On-Screen Display : OSD Functions

 Characters and icons become highlighted in blue during adjustment for each menu.

## 1. PC Screen

 For detailed information on Screen Adjustment in the PC mode, refer to [PC Screen Adjustment Animation Clips](#).




|   |   |
|---|---|
|    | <b>Contrast</b><br>Adjust Contrast.   |
|    | <b>Brightness</b><br>Adjust Brightness.   |
|    | <b>Color Control</b><br>The tone of color can be changed from redish white to bluish white. The individual color components are also user customizable. <ol style="list-style-type: none"> <li>1) <b>Mode 1</b> : Plain white.</li> <li>2) <b>Mode 2</b> : Reddish white.</li> <li>3) <b>Mode 3</b> : Bluish white.</li> <li>4) <b>User Mode</b> : User customizable.</li> <li>5) <b>Reset</b> : Color parameters are replaced with the factory default values.</li> </ol>  |
|  | <b>Image Lock</b><br>Image Lock is used to fine tune and get the best image by removing noises that creates unstable images with jitters and shimmers. If satisfactory results are not obtained using the Fine adjustment, use the Coarse adjustment and then use Fine again. <ul style="list-style-type: none"> <li>• <b>Coarse</b> : Removes noise such as vertical stripes. Coarse adjustment may move the screen image area. You may relocate it to the center using the Horizontal Control menu.</li> <li>• <b>Fine</b> : Removes noise such as horizontal stripes. If the noise persists even after Fine tuning, repeat it after adjusting the frequency (clock speed).</li> <li>• <b>Reset</b> : Image lock and position parameters are replaced with the factory default values.</li> </ul> |
|  | <b>Position</b><br>This adjusts the screen location horizontally and vertically.  |
|  | <b>Image Effect</b><br>Image being displayed can be made softer or sharper.   |
|  | <b>Information</b><br>Display current display mode.   |







## Adjusting Your Monitor - On-Screen Display : OSD Functions


### 2. S-Video Screen

 For detailed information on Screen Adjustment in the S-Video mode, refer to [S-Video Screen Adjustment Animation Clips](#). Screen Adjustment in the Video mode does not affect the PC screen at all.







|   |   |
|---|---|
|    | <b>Picture</b><br>Controls S-Video screen properties such as Contrast, Brightness, Sharpness, Color and Tint. <ol style="list-style-type: none"> <li><b>1) Contrast</b> : Adjust the contrast of S-Video without affecting PC RGB's contrast.</li> <li><b>2) Brightness</b> : Adjust the brightness of S-Video without affecting PC RGB's brightness.</li> <li><b>3) Sharpness</b> : Adjust the sharpness of S-Video image.</li> <li><b>4) Color</b> : Change the richness of color.</li> <li><b>5) Tint</b> : Change the tone of color.</li> <li><b>6) Reset</b> : Picture parameters are replaced with the factory default values.</li> </ol> |
|    | <b>Sleep Timer</b><br>Automatically shuts off the screen at a pre-programmed time.<br>(30 min, 60 min, 90 min, 120 min, 150 min, 180 min)   |
|  | <b>Closed Caption</b><br>Enable or disable closed caption feature and set the appearance of closed caption text.  |
|  | <b>V - Chip</b> ( <a href="#">more information</a> )<br>Protects children from viewing inappropriate programs by blocking certain broadcast or video programs.  |

### 3. Video Screen

 For detailed information on Screen Adjustment in the Video mode, refer to [Video Screen Adjustment Animation Clips](#). Screen Adjustment in the Video mode does not affect the PC screen at all.



|   |   |
|---|---|
|  | <b>Picture</b><br>Controls Video screen properties such as Contrast, Brightness, Sharpness, Color and Tint. <ol style="list-style-type: none"> <li><b>1) Contrast</b> : Adjust the contrast of video without affecting PC RGB's contrast.</li> <li><b>2) Brightness</b> : Adjust the brightness of video without affecting PC RGB's brightness.</li> <li><b>3) Sharpness</b> : Adjust the sharpness of video image.</li> <li><b>4) Color</b> : Change the richness of color.</li> <li><b>5) Tint</b> : Change the tone of color.</li> <li><b>6) Reset</b> : Picture parameters are replaced with the factory default values.</li> </ol> |
|  | <b>Sleep Timer</b><br>Automatically shuts off the screen at a pre-programmed time.<br>(30 min, 60 min, 90 min, 120 min, 150 min, 180 min)   |
|  | <b>Closed Caption</b><br>Enable or disable closed caption feature and set the appearance of closed caption text.  |
|  | <b>V - Chip</b> ( <a href="#">more information</a> )<br>Protects children from viewing inappropriate programs by blocking certain broadcast or video programs.  |

## Adjusting Your Monitor - On-Screen Display : OSD Functions

### 4. TV Screen



For detailed information on Screen Adjustment in TV mode, refer to [TV Screen Adjustment Animation Clips](#). Screen Adjustment in TV mode does not affect the PC screen at all.



 
|  |  |
|--|--|
|  | <p><b>Channel</b><br/>The channel system can be set in several different ways.</p> <p><b>1) ANT / CATV</b><br/>Select a channel system that is being used in your region.</p> <ul style="list-style-type: none"> <li>• ANT</li> <li>• STD</li> <li>• HRC</li> <li>• IRC</li> <li>• AFN</li> </ul> <p>STD, HRC, IRC and AFN identify various types of cable TV systems.<br/>Contact your local cable company to identify the type of cable system that exists in your particular area.</p> <p><b>2) Auto program</b><br/>The TV automatically cycles through all of the available channels and stores them in memory. This takes about one to two minutes.<br/>In rare cases, "Auto program" may miss a couple of channels due to weak signals or for other reasons such as a channel does not exist when "Auto program" is executed.</p> <p><b>3) Fine Tune</b><br/>Due to weak signals or an incorrect antenna configuration, some of the channels may not be tuned correctly.</p> <p><b>4) Add/Delete</b><br/>Adds or erases channels from the memory.</p> |
|  | <p><b>Picture</b><br/>Controls TV screen properties such as Contrast, Brightness, Sharpness, Color and Tint.</p> <p><b>1) Contrast</b> : Adjust the contrast of TV without affecting PC RGB's contrast.<br/> <b>2) Brightness</b> : Adjust the brightness of TV without affecting PC RGB's brightness.<br/> <b>3) Sharpness</b> : Adjust the sharpness of TV image.<br/> <b>4) Color</b> : Change the richness of color.<br/> <b>5) Tint</b> : Change the tone of color.<br/> <b>6) Reset</b> : Picture parameters are replaced with the factory default values.</p>   |
|  | <p><b>Sleep Timer</b><br/>Automatically shuts off the screen at a pre-programmed time<br/>(30 min, 60 min, 90 min, 120 min, 150 min, 180 min)</p>  |
|  | <p><b>Closed Caption</b><br/>Enable or disable closed caption feature and set the appearance of closed caption text.</p>   |
|  | <p><b>V - Chip</b> (<a href="#">more information</a>)<br/>Protects children from viewing inappropriate programs by blocking certain broadcast or video programs.</p>   |






## Adjusting Your Monitor - On-Screen Display : OSD Functions

### 5. OSD Control

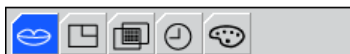

For detailed information on screen adjustment functions, refer to [OSD Screen Adjustment Animation Clips](#).



|   |  |
|---|--|
|    | <b>Language</b><br>You can choose one of 4 languages. (English, French, Spanish, Portuguese)                                     |
|   | <b>Note:</b> The language chosen affects only the language of the OSD. It has no effect on any software running on the computer. |
|    | <b>Position</b><br>Move the OSD Window to the vertical and horizontal direction.   |
|    | <b>Halftone</b><br>Change the opaqueness of the background of the OSD.   |
|   | <b>Duration</b><br>The number of seconds that the OSD will remain visible before disappearing.                                   |
|  | <b>Color</b><br>Changes the color of the OSD menu screen background.   |

## Troubleshooting - Check before calling for service



Check the following items yourself before calling for service. Contact the [service center](#) for problems that you cannot solve by yourself.

[Self-Test Feature Check](#) | [Video mode not supported](#) | [Display Adapter Driver](#) | [Maintenance and Cleaning](#) | [Symptoms & Recommended Actions](#)

### 1. Self-Test Feature Check

Your monitor provides a self test feature that allows you to check whether your monitor is functioning properly.

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer.
3. Turn on the monitor.

The figure shown below ("Check Signal Cable") appears on a black background when the monitor is in its normal working condition though it does not sense any video signal: While in the Self-Test mode, the LED power indicator remains green and the figure moves around on the screen.



Failure of any of the boxes to appear indicates a problem with your monitor. This box also appears during normal operation if the video cable becomes disconnected or damaged.

4. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after using the previous procedure, check your video controller and computer system; **your monitor is functioning properly.**

### 2. Video mode not supported



This indicates the display resolution or refresh rate is not properly set on your computer video card. Reboot the computer in Safe Mode and select "Default" in the "Refresh Rate Unknown" box while setting Adapter for Display Properties.



**Contact the computer dealer or manufacturer for information on Safe Mode Booting.**



Refer to Specifications > [Preset Timing Modes](#) for the resolutions or frequencies that are supported by the monitor.

The screen sometimes remains black even though it does not show the message "Video mode not supported." This indicates the monitor is set for a frequency out of range or the PowerSaver mode is on.

## Troubleshooting - Check before calling for service

### 3. Display Adapter Driver



Display adapter refers to the computer video card driver. If the adapter is not properly set, you cannot adjust resolution, frequency or color and you cannot install the monitor driver.

#### 1. Checking Adapter Driver

Click Start --> Settings --> Control Panel --> Display --> Settings --> Advanced --> Adapter.  
If "Default" or a wrong product model is indicated, it means that the adapter driver is not properly installed. Install the adapter driver again according to the information provided by the computer or video card manufacturers.

#### 2. Installing Adapter Driver



The instructions given below are for general circumstances. For specific issues, contact the relevant computer or video card manufacturers.

- 1) Click Start --> Settings --> Control Panel --> Display --> Settings --> Advanced --> Adapter --> Update Driver --> Next --> Display a list of the known drivers for this device so that I can choose a specific driver --> Next --> Have Disk (Insert Video Card Driver diskette) --> OK --> Next --> Next --> Finish.
- 2) In case you have Adapter Driver Setup file on your computer:  
Run Setup.exe or Install.exe, which is found in the Adapter Driver Setup file.

### 4. Maintenance and Cleaning

#### 1. Maintaining the Monitor Case

Clean with a soft cloth after disconnecting the power cord.



- Do not use benzene, thinner or other flammable substances, or a wet cloth.
- We recommend a Samsung cleansing agent is used to prevent damage to the screen.

#### 2. Maintaining the Flat Panel Display Screen

Clean with a soft cloth (cotton flannel) smoothly.



- Never use acetone, benzene or thinner.  
(They may cause flaws or deformation of the screen surface.)
- The user will be required to pay costs and related expenses for repair of damages caused by him/her.

### 5. Symptoms and Recommended Actions



A monitor recreates visual signals received from the PC. Therefore, if there is trouble with the PC or the video card, this can cause the monitor to become blank, have poor coloring, noise, Video mode not supported, etc. In this case, first check the source of the problem, and then contact a [service center or your dealer](#).

1. Check if the power cord and the cable are properly connected to the computer.
2. Check if the computer beeps more than 3 times when booting.  
(If it does, request an after-service for the main board of the computer.)
3. If you installed a new video card or if you assembled the PC, check if the installed the adapter (video) driver and the monitor driver.
4. Check if the scanning ratio of the video screen is set at 75Hz.  
(Do not exceed 60Hz when using the maximum resolution.)
5. If you have problems in installing the adapter (video) driver, boot the computer in Safe Mode, remove the Display Adapter at the "**Control Panel, System, Device Administrator**" and then reboot the computer to reinstall the adapter (video) driver.

# Troubleshooting - Problems and Solutions



The following table lists possible problems and their solutions. Before calling for service, check the information in this section to see if you can remedy any problems yourself. If you do need assistance, please call the phone number on the warranty card, [the phone number on the Information section or contact your dealer.](#)

## 1. Problems related to Installation



Problems related to the monitor installation and their solutions are listed.

| Problems   | Solutions   |
|--|---|
| <b>It appears the PC does not function normally.</b> | <ul style="list-style-type: none"> <li>Check if the Display Adapter Driver (VGA Driver) is properly installed. (Refer to <a href="#">Installing Driver</a>)</li> </ul>  |
| <b>The monitor screen flickers.</b>                  | <ul style="list-style-type: none"> <li>Check if the signal cable between the computer and the monitor is securely connected and tightened. (Refer to <a href="#">Connecting to a Computer</a>)</li> </ul>   |
| <b>TV screen is blurred or shows noise signals.</b>  | <ul style="list-style-type: none"> <li>Check if the TV antenna connector is securely connected to the external antenna. (Refer to <a href="#">Connecting to TV</a>)</li> </ul>  |
| <b>TV signal is not received</b>                     | <ul style="list-style-type: none"> <li>Check "Channel system" and make sure you choose the correct channel system. (Refer to the <a href="#">Channel System</a>)</li> <li>Select "Channel auto program" to configure the channel system automatically. (Refer to the <a href="#">Channel System</a>)</li> </ul> |
| <b>Strange characters appear on the screen.</b>      | <ul style="list-style-type: none"> <li>Switch "Caption On" to "Caption Off" if strange characters appear on the TV screen. (Refer to <a href="#">Closed Caption</a>)</li> </ul>   |

## 2. Problems related to Screen



Problems related to the monitor screen and their solutions are listed.

| Problems  | Solutions  |
|---|--|
| <b>Screen is blank and power indicator is off</b> | <ul style="list-style-type: none"> <li>Ensure that the power cord is firmly connected and the LCD monitor is on. (Refer to the <a href="#">Connecting Your Monitor</a>)</li> </ul>   |
| <b>"Check Signal Cable" message</b>               | <ul style="list-style-type: none"> <li>Ensure that the signal cable is firmly connected to the PC or video sources. (Refer to the <a href="#">Connecting Your Monitor</a>)</li> <li>Ensure that the PC or video sources are turned on.</li> </ul>  |
| <b>"Video mode not supported" message</b>         | <ul style="list-style-type: none"> <li>Check the maximum resolution and the frequency of the video adaptor.</li> <li>Compare these values with the data in the <a href="#">Preset Timing Modes Chart</a>.</li> </ul>   |
| <b>Picture rolls vertically.</b>                  | <ul style="list-style-type: none"> <li>Check if the signal cable is securely connected. Connect it again securely. (Refer to <a href="#">Connecting to a Computer</a>)</li> </ul>  |
| <b>Image is not clear. Picture is blurred.</b>    | <ul style="list-style-type: none"> <li>Run Frequency <a href="#">Coarse</a> and <a href="#">Fine</a> tuning.</li> <li>Turn on again after removing all accessories (video extension cable, etc.)</li> <li>Set resolution and frequency to the recommended ranges. 15 inch model (1024 x 768 @ 60Hz), 17 inch model (1280 x 1024 @ 60Hz)</li> </ul> |
|   |  |

## Troubleshooting - Problems and Solutions

| Problems   | Solutions  |
|--|--|
| Picture image is unstable and vibrates.  | <ul style="list-style-type: none"> <li>Check if the resolution and frequency set for the computer video card falls in the range supported by the monitor. If not, reset them referring to the current <a href="#">Information</a> under the monitor menu and <a href="#">Preset Timing Modes</a>.</li> </ul> |
| Ghost images are shown in the picture.   |  |
| The image is too light or too dark   | <ul style="list-style-type: none"> <li>Adjust the Brightness and Contrast. (Refer to the <a href="#">Brightness</a>, <a href="#">Contrast</a>)</li> </ul>  |
| Screen color is inconsistent.  | <ul style="list-style-type: none"> <li>Adjust color using <a href="#">User Mode</a> under OSD Color Adjustment menu.</li> </ul>  |
| Color image is distorted with dark shadows.  |  |
| White color is poor.   |  |
| Power Indicator blinks green.  | <ul style="list-style-type: none"> <li>The monitor is currently saving the changes made in settings to the OSD memory.</li> </ul>  |
| Screen is blank and power indicator light is steady green or blinks every 0.5 or 1 seconds | <ul style="list-style-type: none"> <li>The monitor is using its power management system.</li> <li>Move the computer's mouse or press a key on the keyboard</li> </ul>  |
| The monitor front control buttons do not respond.  | <ul style="list-style-type: none"> <li>Check if <a href="#">OSD Lock/Unlock</a> is on by pressing Menu button.</li> <li>If the problem persists, contact the service center.</li> </ul>  |

### 3. Problems related to Audio



Problems related to audio signals and their solutions are listed below.

| Problems                | Solutions  |
|-------------------------|--|
| No sound                | <ul style="list-style-type: none"> <li>Ensure that the audio cable is firmly connected to both the audio-in port on your monitor and the audio-out port on your sound card. (Refer to the <a href="#">Connecting Your Monitor</a>)</li> <li>Check the volume level. (Refer to the <a href="#">Volume</a>)</li> </ul> |
| Sound level is too low. | <ul style="list-style-type: none"> <li>Check the volume level. (Refer to the <a href="#">Volume</a>)</li> <li>If the volume is still too low after turning the control to its maximum, check the volume control on the computer sound card or software program.</li> </ul>   |

### 4. Problems related to Remote Control



Problems related to the remote control and their solutions are listed.

| Problems                                   | Items to check  |
|--|---|
| The remote control buttons do not respond. | <ul style="list-style-type: none"> <li>Check the battery polarities (+/-).</li> <li>Check if the batteries have been exhausted.</li> <li>Check if the power is on.</li> <li>Check if the power cord is securely connected.</li> <li>Check if a special fluorescent or neon lamp is on in the vicinity.</li> </ul> |

## Troubleshooting - Q & A




Frequently asked questions are summarized here for your reference.

| Question                                  | Answer   |
|---|--|
| How can I change the frequency?           | <p>Frequency can be changed by reconfiguring the video card.</p> <p>Note that video card support can vary, depending on the version of the driver used. (Refer to the computer or the video card manual for details.)</p>  |
| How can I adjust the resolution?          | <p>Windows XP:<br/>Reset resolution by clicking Control Panel → Appearance &amp; Theme → Display → Settings.</p> <p>Windows ME/2000:<br/>Set the resolution at the Control Panel → Display → Settings.</p> <p>* Contact the video card manufacturer for details.</p>   |
| How can I set the Power Saving function?  | <p>Windows XP:<br/>Reset Power Saving parameters by clicking Control Panel → Appearance &amp; Theme → Display → Screen Saver or in the computer BIOS SETUP. (Refer to Windows/Computer Manual)</p> <p>Windows ME/2000:<br/>Set the function at BIOS-SETUP of the computer or the screen saver. (Refer to Windows/Computer Manual).</p> |
| How can I clean the outer case/LCD Panel? | <p>Disconnect the power cord and then clean the monitor with a soft cloth, using either a cleaning solution or plain water.</p> <p>Do not leave any remains of the detergent nor scratch the case. Do not allow any water to go inside the monitor.</p>  |



## Specifications : General Specifications

## SyncMaster 1501MP

 Design and specifications are subject to change without prior notice.

| General   |                           |
|---|---------------------------|
| Model Name  | SyncMaster 1501MP         |
| LCD Panel   |                           |
| Size  | 15,0 inch (Diagonal)      |
| Display area  | 304,128 (H) x 228,096 (V) |
| Pixel Pitch   | 0,297 (H) x 0,297 (V)     |
| Type  | a-si TFT active matrix    |
| Viewing Angle   | 140 (H) / 120 (V)         |
| Synchronization   |                           |
| Horizontal  | 30 ~ 61 kHz               |
| Vertical  | 56 ~ 75 Hz                |
| Display Color   |                           |
| 16,194,277 Colors   |                           |
| Resolution  |                           |
| Optimum resolution  | 1024 x 768@60Hz           |
| Maximum resolution  | 1024 x 768@75Hz           |
| Input Signal, Terminated  |                           |
| RGB Analog, Composite H/V, 0.7Vp-p Positive at 75 ohm,<br>Separate H / V sync, TTL level positive or negative |                           |
| TV / Video  |                           |
| Color system  | NTSC                      |
| Sound system  | M/N                       |
| Video format  | CVBS, S-VHS               |
| Maximum Pixel Clock   |                           |
| 140 MHz   |                           |
| Power Supply  |                           |
| 90 to 264 VAC 60/50 ± 3Hz   |                           |
| Signal Cable  |                           |
| 15pin-to-15pin D-sub cable, detachable  |                           |
| Power Consumption   |                           |
| Less than 38.0W   |                           |
| Power Saving  |                           |
| Less than 2W  |                           |
| Dimensions (WxDxH) / Weight   |                           |
| 382 x 188 x 380 mm / 4.5kg (when stand is not foleded )   |                           |
| 382 x 61 x 450 mm / 4.5 kg ( when stand is foled )  |                           |
| VESA Mounting Interface   |                           |
| 75mm x 75mm (for use with Specialty(Arm) Mounting hardware.)  |                           |

## Specifications : General Specifications

## SyncMaster 1501MP

### Environmental considerations

|           |  |
|-----------|--|
| Operating | Temperature : 50°F ~ 104°F (10°C ~ 40°C)<br>Humidity : 10% ~ 80%, non-condensing |
| Storage   | Temperature : -4°F ~ 113°F (-20°C ~ 45°C)<br>Humidity : 5% ~ 95%, non-condensing |

### Plug and Play Capability

This monitor can be installed on any Plug & Play compatible system. Interaction of the monitor and computer systems will provide the best operating conditions and monitor settings. In most cases, monitor installation will proceed automatically, unless the user wishes to select alternate settings.

### Dot Acceptable

TFT LCD panel manufactured by using advanced semiconductor technology with precision of 99.999% above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen. This is not from bad quality and you can use it without uneasiness.

|                                |  |
|--------------------------------|--|
| The number of TFT LCD pixels : | <ul style="list-style-type: none"> <li>• 15 inch: 2,359,296</li> <li>• 17 inch: 3,932,160</li> <li>• 18 inch: 3,932,160</li> <li>• 21 inch: 5,760,000</li> <li>• 24 inch: 6,912,000</li> </ul> |
|--------------------------------|--|

## SyncMaster 1701MP



Design and specifications are subject to change without prior notice.

| General   |                          |
|---|--------------------------|
| Model Name  | SyncMaster 1701MP        |
| LCD Panel   |                          |
| Size  | 17,0 inch (Diagonal)     |
| Display area  | 337.92 (H) x 270.336 (V) |
| Pixel Pitch   | 0,264 (H) x 0,264 (V)    |
| Type  | a-si TFT active matrix   |
| Viewing Angle   | 170 (H) / 170 (V)        |
| Synchronization   |                          |
| Horizontal  | 31 ~ 81 kHz              |
| Vertical  | 56 ~ 75 Hz               |
| Display Color   |                          |
| 16,194,277 Colors   |                          |
| Resolution  |                          |
| Optimum resolution  | 1280 x 1024@60Hz         |
| Maximum resolution  | 1280 x 1024@76Hz         |
| Input Signal, Terminated  |                          |
| RGB Analog, Composite H/V, 0.7Vp-p Positive at 75 ohm,<br>Separate H / V sync, TTL level positive or negative |                          |
| TV / Video  |                          |
| Color system  | NTSC                     |
| Sound system  | M/N                      |
| Video format  | CVBS, S-VHS              |
| Maximum Pixel Clock   |                          |
| 140 MHz   |                          |
| Power Supply  |                          |
| 90 to 264 VAC 60/50 ± 3Hz   |                          |
| Signal Cable  |                          |
| 15pin-to-15pin D-sub cable, detachable  |                          |
| Power Consumption   |                          |
| Less than 45.0W   |                          |
| Power Saving  |                          |
| Less than 2W  |                          |
| Dimensions (WxDxH) / Weight   |                          |
| 448 x 153 x 438 mm (when stand is not foled )   |                          |
| 448 x 70 x 566 mm ( when stand is not foled )   |                          |
| 448 x 63 x 438 mm / 6.2 kg ( Without stand )  |                          |
| VESA Mounting Interface   |                          |
| 100mm x 100mm (for use with Specialty(Arm) Mounting hardware.)  |                          |

## Specifications : General Specifications

## SyncMaster 1701MP

### Environmental considerations

|           |  |
|-----------|--|
| Operating | Temperature : 50°F ~ 104°F (10°C ~ 40°C)<br>Humidity : 10% ~ 80%, non-condensing |
| Storage   | Temperature : -4°F ~ 113°F (-20°C ~ 45°C)<br>Humidity : 5% ~ 95%, non-condensing |

### Plug and Play Capability

This monitor can be installed on any Plug & Play compatible system. Interaction of the monitor and computer systems will provide the best operating conditions and monitor settings. In most cases, monitor installation will proceed automatically, unless the user wishes to select alternate settings.

### Dot Acceptable

TFT LCD panel manufactured by using advanced semiconductor technology with precision of 99.999% above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen. This is not from bad quality and you can use it without uneasiness.

|                                |  |
|--------------------------------|--|
| The number of TFT LCD pixels : | <ul style="list-style-type: none"> <li>• 15 inch: 2,359,296</li> <li>• 17 inch: 3,932,160</li> <li>• 18 inch: 3,932,160</li> <li>• 21 inch: 5,760,000</li> <li>• 24 inch: 6,912,000</li> </ul> |
|--------------------------------|--|

## Specifications : PowerSaver



This monitor has a built-in power management system called PowerSaver. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain amount of time. The monitor automatically returns to normal operation when you move the computer's mouse or press a key on the keyboard. For energy conservation, turn your monitor OFF when it is not needed, or when leaving it unattended for long periods. The PowerSaver system operates with a VESA DPMS compliant video card installed in your computer. Use a software utility installed on your computer to set up this feature.

### SyncMaster 1501MP

| State             | Normal Operation | Power saving mode<br>EPA/ENERGY 2000 | Power Switch off |
|-------------------|------------------|--------------------------------------|------------------|
| Power Indicator   | Green            | Green, Blinking                      | Black            |
| Power Consumption | Less than 38.0W  | Less than 2W                         | 1W               |

### SyncMaster 1701MP

| State             | Normal Operation | Power saving mode<br>EPA/ENERGY 2000             | Power Switch off                                 |
|-------------------|------------------|--|--|
| Power Indicator   | Green            | Green, Blinking                                  | Black  |
| Power Consumption | Less than 45.0W  | Less than 1W (120 Vac)<br>Less than 2W (230 Vac) | Less than 1W (120 Vac)<br>Less than 2W (230 Vac) |



This monitor is EPA ENERGY STAR® compliant and ENERGY2000 compliant when used with a computer equipped with VESA DPMS functionality. As an ENERGY STAR® Partner, SAMSUNG has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

## Specifications : Preset Timing Modes



If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

**Table 1. Preset Timing Modes**

| Display Mode     | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync Polarity (H/V) |
|------------------|----------------------------|-------------------------|-------------------|---------------------|
| MAC, 640 x 480   | 35.000                     | 66.667                  | 30.240            | -/-                 |
| MAC, 832 x 624   | 49.726                     | 74.551                  | 57.284            | -/-                 |
| IBM, 640 x 350   | 31.469                     | 70.086                  | 25.175            | +/-                 |
| IBM, 640 x 480   | 31.469                     | 59.940                  | 25.175            | -/-                 |
| IBM, 720 x 400   | 31.469                     | 70.087                  | 28.322            | -/+                 |
| VESA, 640 x 480  | 37.500                     | 75.000                  | 31.500            | -/-                 |
| VESA, 640 x 480  | 37.861                     | 72.809                  | 31.500            | -/-                 |
| VESA, 800 x 600  | 35.156                     | 56.250                  | 36.000            | +, -/+ , -          |
| VESA, 800 x 600  | 37.879                     | 60.317                  | 40.000            | +/+                 |
| VESA, 800 x 600  | 46.875                     | 75.000                  | 43.500            | +/+                 |
| VESA, 800 x 600  | 48.077                     | 72.188                  | 50.000            | +/+                 |
| VESA, 1024 x 768 | 48.363                     | 60.004                  | 65.000            | -/-                 |
| VESA, 1024 x 768 | 56.476                     | 70.069                  | 75.000            | -/-                 |
| VESA, 1024 x 768 | 60.023                     | 75.029                  | 78.750            | +/+                 |

**Table 2. NTSC Broadcasting Systems**

| Color System | Sound System | Channel System | Countries  |
|--------------|--------------|----------------|--|
| NTSC         | M            | US             | USA, Canada, Chile, Venezuela, Cuba, Colombia, Jamaica, Mexico, Panama, Peru, Philippines, Puerto-Rico, Taiwan |



### Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle and the inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

### Vertical Frequency

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called Vertical Frequency or Refresh Rate. Unit: Hz

## Specifications : Preset Timing Modes



If the signal transferred from the computer is the same as the following Preset Timing Modes, the screen will be adjusted automatically. However, if the signal differs, the screen may go blank while the power LED is on. Refer to the video card manual and adjust the screen as follows.

**Table 1. Preset Timing Modes**

| Display Mode      | Horizontal Frequency (kHz) | Vertical Frequency (Hz) | Pixel Clock (MHz) | Sync Polarity (H/V) |
|-------------------|----------------------------|-------------------------|-------------------|---------------------|
| MAC, 640 x 480    | 35.000                     | 66.667                  | 30.240            | -/-                 |
| MAC, 832 x 624    | 49.726                     | 74.551                  | 57.284            | -/-                 |
| IBM, 640 x 350    | 31.469                     | 70.086                  | 25.175            | +/-                 |
| IBM, 640 x 480    | 31.469                     | 59.940                  | 25.175            | -/-                 |
| IBM, 720 x 400    | 31.469                     | 70.087                  | 28.322            | -/+                 |
| VESA, 640 x 480   | 37.500                     | 75.000                  | 31.500            | -/-                 |
| VESA, 640 x 480   | 37.861                     | 72.809                  | 31.500            | -/-                 |
| VESA, 800 x 600   | 35.156                     | 56.250                  | 36.000            | +, -/+, -           |
| VESA, 800 x 600   | 37.879                     | 60.317                  | 40.000            | +/+                 |
| VESA, 800 x 600   | 46.875                     | 75.000                  | 43.500            | +/+                 |
| VESA, 800 x 600   | 48.077                     | 72.188                  | 50.000            | +/+                 |
| VESA, 1024 x 768  | 48.363                     | 60.004                  | 65.000            | -/-                 |
| VESA, 1024 x 768  | 56.476                     | 70.069                  | 75.000            | -/-                 |
| VESA, 1024 x 768  | 60.023                     | 75.029                  | 78.750            | +/+                 |
| VESA, 1280 x 1024 | 63.981                     | 60.020                  | 108.00            | +/+                 |
| VESA, 1280 x 1024 | 79.976                     | 75.025                  | 135.00            | +/+                 |

**Table 2. NTSC Broadcasting Systems**

| Color System | Sound System | Channel System | Countries  |
|--------------|--------------|----------------|--|
| NTSC         | M            | US             | USA, Canada, Chile, Venezuela, Cuba, Colombia, Jamaica, Mexico, Panama, Peru, Philippines, Puerto-Rico, Taiwan |



### Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle and the inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

### Vertical Frequency

Like a fluorescent lamp, the screen has to repeat the same image many times per second to display an image to the user. The frequency of this repetition is called Vertical Frequency or Refresh Rate. Unit: Hz

## Information : Service Center

- **U.S.A. :**  
Samsung Computer Products Customer Service  
400 Valley Road, Suite 201, Mt. Arlington, NJ 07856  
Tel. : (973)601-6000, 1-800-SAMSUNG (1-800-726-7864)  
Fax. : (973)601-6001  
<http://www.samsungusa.com/monitor/>
- **BRAZIL :**  
Samsung Eletronica da Amazonia Ltda.  
R. Prof. Manoelito de Ornellas, 303, Terro B  
Chacara Sto. Antonio, CEP : 04719-040  
Sao Paulo, SP  
SAC : 0800 124 421  
<http://www.samsung.com.br/>
- **CANADA :**  
Samsung Electronics Canada Inc.  
7037 Financial Drive  
Mississauga, Ontario L5N 6R3  
Tel. : 1-800-SAMSUNG (1-800-726-7864)  
Fax. : (905) 542-1199  
<http://www.samsung.ca/>
- **COLOMBIA :**  
Samsung Electronics Colombia  
Cra 9 No 99A-02 Of. 106  
Bogota, Colombia  
Tel.: 9-800-112-112  
Fax: (571) 618 - 2068  
<http://www.samsung-latin.com/>  
e-mail : [soporte@samsung-latin.com](mailto:soporte@samsung-latin.com)
- **PANAMA :**  
Samsung Electronics Latinoamerica( Z.L.) S.A.  
Calle 50 Edificio Plaza Credicorp, Planta Baja  
Panama  
Tel. : (507) 210-1122, 210-1133  
Tel : 800-3278(FAST)  
<http://www.samsung-latin.com/>
- **PERU**  
Servicio Integral Samsung  
Av.Argentina 1790 Lima1. Peru  
Tel: 51-1-336-8686  
Fax: 51-1-336-8551  
<http://www.samsungperu.com/>
- **GERMANY :**  
TELEPLAN Rhein-Main GmbH  
Feldstr. 16  
64331 Weiterstadt  
T. 06151/957-1306  
F. 06151/957-1732  
\* EURO 0,12/MIN.  
<http://www.samsung.de/>
- **AUSTRALIA :**  
Samsung Electronics Australia Pty Ltd.  
Customer Response Centre  
7 Parkview Drive, Homebush Bay NSW 2127  
Tel : 1300 362 603  
<http://www.samsung.com.au/>
- **ITALY :**  
Samsung Electronics Italia S.p.a.  
Via C. Donat Cattin, 5  
20063 Cernusco s/Naviglio (MI)  
Servizio Clienti: 199.153.153  
<http://www.samsung-italia.com/>
- **ESPAÑA :**  
Samsung Electronics Comercial Iberica, S.A.  
Ciencias, 55-65 (Poligono Pedrosa) 08908  
Hospitalet de Llobregat (Barcelona)  
Tel. : (93) 261 67 00  
Fax. : (93) 261 67 50  
<http://samsung.es/>
- **United Kingdom :**  
Samsung Electronics (UK) Ltd.  
Samsung House, 225 Hook Rise South  
Surreybiton, Surrey KT6 7LD  
Tel. : (0208) 391 0168  
Fax. : (0208) 397 9949  
< European Service Center & National Service >  
Stafford Park 12 Telford, Shropshire, TF3 3BJ  
Tel. : (0870) 242 0303  
Fax. : (01952) 292 033  
<http://samsungservice.co.uk/>
- **THAILAND :**  
HAI SAMSUNG SERVICE CENTER  
MPA COMPLEX BUILDING,1st-2nd Floor  
175 SOI SUEKSA VIDHAYA SATHON SOI 12  
SILOM ROAD ,SILOM,BANGRAK  
BANGKOK 10500  
TEL : 0-2635-2567  
FAX : 0-2635-2556
- **SOUTH AFRICA :**  
Samsung Electronics,5 Libertas Road, Somerset Office Park,  
Bryanston Ext 16. Po Box 70006, Bryanston,2021, South Africa  
Tel : 0027-11-549-1621  
Fax : 0027-11-549-1629  
<http://www.samsung.co.za/>
- **UKRAINE :**  
SAMSUNG ELECTRONICS REPRESENTATIVE OFFICE IN UKRAINE  
4 Glybochitska str.  
Kiev, Ukraine  
Tel. 8-044-4906878  
Fax 8-044-4906887  
Toll-free 8-800-502-0000  
<http://www.samsung.com.ua/>
- **SWEDEN/DENMARK/NORWAY/FINLAND :**  
Samsung Electronics AB  
Box 713  
S-194 27 UPPLANDS VÄSBY  
SVERIGE  
Besöksadress : Johanneslundsvägen 4  
Samsung support Sverige: 020-46 46 46  
Samsung support Danmark : 8088-4646  
Samsung support Norge: 8001-1800  
Samsung support Finland: 0800-118001  
Tel +46 8 590 966 00  
Fax +46 8 590 966 50  
<http://www.samsung.se/>
- **HUNGARY :**  
Samsung Electronics Magyar Rt.  
1039, Budapest, Lehel u. 15-17.  
Tel: 36 1 453 1100  
Fax: 36 1 453 1101  
<http://www.samsung.hu/>



## Information : Service Center

- **PORTUGAL :**  
SAMSUNG ELECTRONICA PORTUGUESA S.A.  
Rua Mário Dioniso, Nº2 - 1º Drt. 2795-140 LINDA-A-VELHA  
Tel. 214 148 114/100 Fax. 214 148 133/128  
Free Line 800 220 120  
<http://www.samsung.pt/>
  - **NETHERLANDS/BELGIUM/LUXEMBOURG :**  
Samsung Electronics Benelux B. V.  
Fleminglaan 12 2289 CP Rijiswijk, NEDERLANDS  
Service and informatielijn ;  
Belgium :0800-95214, <http://www.samsung.be/>  
Netherlands : 0800-2295214, <http://www.samsung.nl/>
  - **CHILE :**  
SONDA S.A.  
Teatinos 550, Santiago Centro, Santiago, Chile  
Fono: 56-2-5605000 Fax: 56-2-5605353  
56-2-800200211  
<http://www.sonda.com/>  
<http://www.samsung.cl/>
  - **MEXICO :**  
Samsung Electronics Mexico S.A. de C.V.  
Saturno 44 Col. Nueva Industrial Vallejo  
Del. Gustavo A. Madero C.P. 07700  
Mexico D.F.  
Tel. 01 57 47 51 00  
Fax. 01 57 47 52 02  
RFC: SEM950215S98  
<http://www.samsung.com.mx/>
- IMPORTADO POR: SAMSUNG ELECTRONICS MEXICO S.A. DE C.V.  
SATURNO 44 COL. NVA. INDUSTRIAL VALLEJO  
DEL. GUSTAVO A. MADERO C.P. 07700  
MEXICO D.F. TEL. 5747-5100  
RFC: SEM950215S98
- EXPORTADO POR: SAMSUNG ELECTRONICS CO.,LTD.  
JOONG-ANG DAILY NEWS BLDG.  
7 SOON-WHA-DONG CHUNG-KU,  
C.P.O BOX 2775, 1144 SEOUL, KOREA

## Information : Terms

### ● Sync Signal

Sync (Synchronized) Signals refer to the standard signals that are required to display desired colors on the monitor. They are divided into Vertical and Horizontal Sync Signals. These signals display normal color images by the set resolution and frequency.

#### Types of Sync Signals

|               |  |
|---------------|--|
| Separate      | This is a scheme of transmitting individual vertical sync signals to the monitor.  |
| Composite     | This is a scheme of combining vertical sync signals into one composite signal and transmitting it to the monitor. The monitor displays the color signals by separating the composite signal into original color signals. |
| Sync On Green | This scheme does not use sync signals. Instead, it combines horizontal and vertical sync signals into a Green signal and transmits to the monitor. It is mainly used for workstations.                                   |

### ● Dot Pitch

The image on a monitor is composed of red, green and blue dots. The closer the dots, the higher the resolution. The distance between two dots of the same color is called the 'Dot Pitch'. Unit: mm

### ● Vertical Frequency

The screen must be redrawn several times per second in order to create and display an image for the user. The frequency of this repetition per second is called Vertical Frequency or Refresh Rate. Unit: Hz

Example: If the same light repeats itself 60 times per second, this is regarded as 60 Hz. In this case, flickering of the screen can be detected. To avoid this problem, there is a Flicker-free Mode using a vertical frequency over 70 Hz.

### ● Horizontal Frequency

The time to scan one line connecting the right edge to the left edge of the screen horizontally is called Horizontal Cycle. The inverse number of the Horizontal Cycle is called Horizontal Frequency. Unit: kHz

### ● Interlace and Non-Interlace Methods

Showing the horizontal lines of the screen from the top to the bottom in order is called the Non-Interlace method while showing odd lines and then even lines in turn is called the Interlace method. The Non-Interlace method is used for the majority of monitors to ensure a clear image. The Interlace method is the same as that used in TVs.

### ● Plug & Play

This is a function that provides the best quality screen for the user by allowing the computer and the monitor to exchange information automatically. This monitor follows the international standard VESA DDC for the Plug & Play function.

### ● Resolution

The number of horizontal and vertical dots used to compose the screen image is called 'resolution'. This number shows the accuracy of the display. High resolution is good for performing multiple tasks as more image information can be shown on the screen.

Example: If the resolution is 1024 X 768, this means the screen is composed of 1024 horizontal dots (horizontal resolution) and 768 vertical lines (vertical resolution).

### ● A2

This system uses two carriers to transmit voice data. Countries such as South Korea and Germany use this system.

### ● BTSC

Broadcast Television System Committee

The stereo broadcasting system that is used in most of the countries that have adopted the NTSC system, including the United States, Canada, Chile, Venezuela and Taiwan. It also refers to the organization that has been organized to promote its development and management.

### ● EIAJ

Electronic Industries Association of Japan

## Information : Regulatory

[FCC Information](#) | [IC Compliance Notice](#) | [MPR II Compliance](#) |  
[European Notice \(Europe only\)](#) | [PCT Notice](#) | [VCCI](#) |  
[TCO'95-Ecological requirements for personal computers \(TCO applied model only\)](#)  
[TCO'99-Ecological requirements for personal computers \(TCO applied model only\)](#)  
[TCO'03-Ecological requirements for personal computers \(TCO applied model only\)](#)

### ● FCC Information

#### **User Instructions**

The Federal Communications Commission Radio Frequency Interference Statement includes the following warning:

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **User Information**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If necessary, consult your dealer or an experienced radio/television technician for additional suggestions. You may find the booklet called How to Identify and Resolve Radio/TV Interference Problems helpful. This booklet was prepared by the Federal Communications Commission. It is available from the U.S. Government Printing Office, Washington, DC 20402, Stock Number 004-000-00345-4.

The party responsible for product compliance:  
SAMSUNG ELECTRONICS CO., LTD  
America QA Lab of Samsung  
3351 Michelson Drive,  
Suite #290, Irvine, CA92612 USA  
Tel) 949-975-7310  
Fax) 949-922-8301

#### **Warning**

User must use shielded signal interface cables to maintain FCC compliance for the product.

Provided with this monitor is a detachable power supply cord with IEC320 style terminations. It may be suitable for connection to any UL Listed personal computer with similar configuration. Before making the connection, make sure the voltage rating of the computer convenience outlet is the same as the monitor and that the ampere rating of the computer convenience outlet is equal to or exceeds the monitor voltage rating.

For 120 Volt applications, use only UL Listed detachable power cord with NEMA configuration 5-15P type (parallel blades) plug cap. For 240 Volt applications use only UL Listed Detachable power supply cord with NEMA configuration 6-15P type (tandem blades) plug cap.

### ● IC Compliance Notice

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations of ICES-003.

Cet appareil Numérique de classe B respecte toutes les exigences du Règlement NMB-03 sur les équipements produisant des interférences au Canada.

## Information : Regulatory

### ● MPR II Compliance

This monitor complies with SWEDAC(MPR II) recommendations for reduced electric and magnetic fields.

---

### ● European Notice (Europe only)

Products with the CE marking comply with the EMC Directive(89/336/EEC), (92/31/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms:

- EN55022:1998+A1:2000 - Radio Frequency Interference
- EN55024:1998 - Electromagnetic Immunity
- EN55013:1990+A12:1994+A13:1996+A14:1999 - Radio Frequency Interference
- EN55020:1994+A11:1996+A12/A13/A14:1999 - Electromagnetic Immunity
- EN61000-3-2:1995+A1/A2:1998 - Power Line Harmonics
- EN61000-3-3:1995 - Voltage Fluctuations
- EN60065:1997 or EN60095:1998 - Product Safety

---

### ● PCT Notice



---

### ● VCCI

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

## Information : Regulatory

### ● TCO'95-Ecological requirements for personal computers (TCO applied model only)



#### **AB general requirements**

##### **AB2 Written Eco-document accompanying the products**

Congratulations! You have just purchased a TCO'95 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and to the further development of environmentally-adapted electronic products.

#### **Why do we have environmentally-labelled monitors?**

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem as far as monitors and other electronic equipment are concerned is that environmentally harmful substances are used both in the products and during their manufacture. Since it has not been possible so far for the majority of electronic equipment to be recycled in a satisfactory way, most of these potentially damaging substances sooner or later enter Nature.

There are also other characteristics of a monitor, such as energy consumption levels, that are important from both the working and natural environment viewpoints. Since all types of conventional electricity generation have a negative effect on the environment (acidic and climate-influencing emissions, radioactive waste, etc.) it is vital to conserve energy. Electronic equipment in offices consumes an enormous amount of energy, since it is often routinely left running continuously.

#### **What does labelling involve?**

This product meets the requirements for the TCO'95 scheme, which provides for international environmental labelling of monitors. The labelling scheme was developed as a joint effort by the TCO (The Swedish Confederation of Professional Employees), Naturskyddsforeningen (The Swedish Society for Nature Conservation) and NUTEK (The National Board for Industrial and Technical Development in Sweden).

The requirements cover a wide range of issues: environment, ergonomics, usability, emission of electrical and magnetic fields, energy consumption and electrical and fire safety.

The environmental demands concern among other things restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs (freons), and chlorinated solvents. The product must be prepared for recycling and the manufacturer is obliged to have an environmental plan, which must be adhered to in each country where the company conducts its operations policy. The energy requirements include a demand that the monitor after a certain period of inactivity shall reduce its power consumption to a lower level, in one or more stages. The length of time to reactivate the monitor shall be reasonable for the user.

Labelled products must meet strict environmental demands, for example in respect of the reduction of electric and magnetic fields, along with physical and visual ergonomics and good usability.

TCO Development Unit 1996-11-29

On the page this folder you will find a brief summary of the environmental requirements met by this product.

The complete environmental criteria document may be ordered from:

TCO Development Unit

S-11494 Stockholm

Sweden

Fax: +46 8 782 92 07

E-mail (Internet): [development@tco.se](mailto:development@tco.se)

Current information regarding TCO'95-approved and labelled products may also be obtained via the Internet, using the address:

<http://www.tco-info.com/>

TCO'95 is a co-operative project between (3 logos)

## Information : Regulatory

### Environmental Requirements

Brominated flame retardants are present in printed circuit boards, cables, wires, casings and housings. In turn, they delay the spread of fire. Up to thirty percent of the plastic in a computer casing can consist of flame retardant substances. These are related to another group of environmental toxins, PCBs, which are suspected to give rise to similar harm, including reproductive damage in fish eating birds and mammals, due to the bioaccumulative processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

- TCO'95 demand requires that plastic components weighing more than 25 grams must not contain organically bound chlorine and bromine.

### Lead

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning.

- TCO'95 requirement Permits the inclusion of lead since no replacement has yet been developed.

### Cadmium

Cadmium is present in rechargeable batteries and in the colour generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses.

- TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of cadmium. The colour-generating layers of display screens must not contain any cadmium.

### Mercury

Mercury is sometimes found in batteries, relays and switches. Mercury damages the nervous system and is toxic in high doses.

- TCO'95 requirement states that batteries may not contain more than 25 ppm (parts per million) of mercury. It also demands that no mercury is present in any of the electrical or electronics components concerned with the display unit.

### CFCs (freons)

CFCs (freons) are sometimes used for washing printed circuit boards and in the manufacturing of expanded foam for packaging. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on Earth of ultraviolet light with consequent increased risks of skin cancer (malignant melanoma).

- The relevant TCO'95 requirement: Neither CFCs nor HCFCs may be used during the manufacturing of the product or its packaging.

## Information : Regulatory

### ● TCO'99-Ecological requirements for personal computers (TCO applied model only)



#### **Congratulations!**

You have just purchased a TCO'99 approved and labelled product! Your choice has provided you with a product developed for professional use. Your purchase has also contributed to reducing the burden on the environment and also to the further development of environmentally adapted electronics products.

This product meets the requirements for the TCO'99 scheme which provides for an international environmental and quality labelling of personal computers. The labelling scheme was developed as a joint effort by the TCO(The Swedish Confederation of Professional Employees), Svenska Naturskyddsforeningen(The Swedish Society for Nature Conservation), Statens Energimyndighet(The Swedish National Energy Administration) and SEMKO AB.

The requirements cover a wide range of issues: environment, ergonomics, usability, reduction of electric and magnetic fields, energy consumption and electrical safety.

#### **Why do we have environmentally labelled computers?**

In many countries, environmental labelling has become an established method for encouraging the adaptation of goods and services to the environment. The main problem, as far as computers and other electronics equipment are concerned, is that environmentally harmful substances are used both in the products and during their manufacture. Since it is not so far possible to satisfactorily recycle the majority of electronics equipment, most of these potentially damaging substances sooner or later enter nature.

There are also other characteristics of a computer, such as energy consumption levels, that are important from the viewpoints of both the work (internal) and natural (external) environments. Since all methods of electricity generation have a negative effect on the environment (e.g. acidic and climate-influencing emissions, radioactive waste), it is vital to save energy. Electronics equipment in offices is often left running continuously and thereby consumes a lot of energy.

#### **What does labelling involve?**

The environmental demands have been developed by Svenska Naturskyddsforeningen (The Swedish Society for Nature Conservation). These demands impose restrictions on the presence and use of heavy metals, brominated and chlorinated flame retardants, CFCs(freons)and chlorinated solvents, among other things. The product must be prepared for recycling and the manufacturer is obliged to have an environmental policy which must be adhered to in each country where the company implements its operational policy.

The energy requirements include a demand that the computer and/or display, after a certain period of inactivity, shall reduce its power consumption to a lower level in one or more stages. The length of time to reactivate the computer shall be reasonable for the user.

Below you will find a brief summary of the environmental requirements met by this product. The complete environmental criteria document may be ordered from:

#### **TCO Development**

SE-114 94 Stockholm, Sweden

Fax: +46 8 782 92 07

Email (Internet): [development@tco.se](mailto:development@tco.se)

Current information regarding TCO'99 approved and labelled products may also be obtained via the Internet, using the address: <http://www.tco-info.com/>

## Information : Regulatory

### **Environmental requirements**

#### **Flame retardants**

Flame retardants are present in printed circuit boards, cables, wires, casings and housings. Their purpose is to prevent, or at least to delay the spread of fire. Up to 30% of the plastic in a computer casing can consist of flame retardant substances. Most flame retardants contain bromine or chloride, and those flame retardants are chemically related to another group of environmental toxins, PCBs. Both the flame retardants containing bromine or chloride and the PCBs are suspected of giving rise to severe health effects, including reproductive damage in fish-eating birds and mammals, due to the bio-accumulative\* processes. Flame retardants have been found in human blood and researchers fear that disturbances in foetus development may occur.

The relevant TCO'99 demand requires that plastic components weighing more than 25 grams must not contain flame retardants with organically bound bromine or chlorine. Flame retardants are allowed in the printed circuit boards since no substitutes are available.

#### **Cadmium\*\***

Cadmium is present in rechargeable batteries and in the colour-generating layers of certain computer displays. Cadmium damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries, the colour-generating layers of display screens and the electrical or electronics components must not contain any cadmium.

#### **Mercury\*\***

Mercury is sometimes found in batteries, relays and switches. It damages the nervous system and is toxic in high doses. The relevant TCO'99 requirement states that batteries may not contain any mercury. It also demands that mercury is not present in any of the electrical or electronics components associated with the labelled unit. There is however one exception. Mercury is, for the time being, permitted in the back light system of flat panel monitors as today there is no commercially available alternative. TCO aims on removing this exception when a Mercury free alternative is available.

#### **CFCs (freons)**

The relevant TCO'99 requirement states that neither CFCs nor HCFCs may be used during the manufacture and assembly of the product. CFCs (freons) are sometimes used for washing printed circuit boards. CFCs break down ozone and thereby damage the ozone layer in the stratosphere, causing increased reception on earth of ultraviolet light with e.g. increased risks of skin cancer (malignant melanoma) as a consequence.

#### **Lead\*\***

Lead can be found in picture tubes, display screens, solders and capacitors. Lead damages the nervous system and in higher doses, causes lead poisoning. The relevant TCO'99 requirement permits the inclusion of lead since no replacement has yet been developed.

---

\* Bio-accumulative is defined as substances which accumulate within living organisms.

\*\* Lead, Cadmium and Mercury are heavy metals which are Bio-accumulative.



## Information : Regulatory

### ● TCO'03-Ecological requirements for personal computers (TCO applied model only)



#### **Congratulations!**

The display you have just purchased carries the TCO'03 Displays label. This means that your display is designed, manufactured and tested according to some of the strictest quality and environmental requirements in the world. This makes for a high performance product, designed with the user in focus that also minimizes the impact on our natural environment.

Some of the features of the TCO'03 Display requirements:

#### **Ergonomics**

Good visual ergonomics and image quality in order to improve the working environment for the user and to reduce sight and strain problems. Important parameters are luminance, contrast, resolution, reflectance, colour rendition and image stability.

#### **Energy**

- Energy-saving mode after a certain time ?beneficial both for the user and the environment
- Electrical safety

#### **Emissions**

- Electromagnetic fields
- Noise emissions

#### **Ecology**

- The product must be prepared for recycling and the manufacturer must have a certified environmental management system such as EMAS or ISO 14 000
- Restrictions on
  - o chlorinated and brominated flame retardants and polymers
  - o heavy metals such as cadmium, mercury and lead.

The requirements included in this label have been developed by TCO Development in cooperation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user-friendly direction. Our labelling system started with displays in 1992 and is now requested by users and IT-manufacturers all over the world.

For more information, Please visit  
[www.tcodevelopment.com](http://www.tcodevelopment.com)

## Information : Natural Color

### ● Natural Color Software Program



One of the recent problems in using a computer is that the color of the images printed out by a printer or other images scanned by a scanner or a digital camera are not the same as those shown on the monitor.

The Natural Color S/W is the very solution for this problem. It is a color administration system developed by Samsung Electronics in association with Korea Electronics & Telecommunications Research Institute (ETRI). This system is available only for Samsung monitors and makes the color of the images on the monitor the same as the printed or scanned images.

For more information, refer to Help (F1) in the software program.

#### **How to install the Natural Color software**

Insert the CD included with the Samsung monitor into the CD-ROM Drive. Then, the initial screen of the program installation will be executed. Click Natural Color on the initial screen to install the Natural Color software. To install the program manually, insert the CD included with the Samsung monitor into the CD-ROM Drive, click the [Start] button of Windows and then select [Execute].

Enter D:\color\eng\setup.exe and then press the <Enter> key.

(If the drive where the CD is inserted is not D:\, enter the applicable drive.)

#### **How to delete the Natural Color software program**

Select [Setting]/[Control Panel] on the [Start] menu and then double-click [Add/Delete a program].

Select Natural Color from the list and then click the [Add/Delete] button.

## Information : For Better Display

### ● For Better Display

1. Adjust computer resolution and screen injection rate (refresh rate) in control panel of computer as described below to enjoy the best quality of picture. You can have an uneven quality of picture in the screen if the best quality of picture is not provided in TFT-LCD.

#### **SyncMaster 1501MP**

- Resolution: 1024 x 768
- Vertical frequency (refresh rate): 60 Hz

#### **SyncMaster 1701MP**

- Resolution: 1280 x 1024
- Vertical frequency (refresh rate): 60 Hz

2. TFT LCD panel manufactured by using advanced semiconductor technology with precision of 99.999% above is used for this product. But the pixels of RED, GREEN, BLUE and WHITE color seem to be bright sometimes or some of black pixels could be seen. This is not from bad quality and you can use it without uneasiness.

#### **SyncMaster 1501MP**

- For example, the number of TFT LCD pixels that is contained in this product are 2,359,296.

#### **SyncMaster 1701MP**

- For example, the number of TFT LCD pixels that is contained in this product are 3,932,160.

3. When you clean the monitor and the panel outside, please apply the recommended small amount of cleaner by using soft and dry cloth and polish it. Let LCD area not to be forced but to be scrubbed out softly. If excessive force is applied, you can have a stain on it.
4. If you are not satisfied with the quality of picture, you can get better quality of picture by executing "auto adjustment function" in display screen that is appeared as window termination button is pressed. If there's still noise after automatic adjustment, use FINE/COARSE adjustment function.
5. If you view a fixed screen for an extended period of time, residual image or blurriness may appear. Change the mode to energy save or set a screensaver to moving picture when you need to be away from the monitor for an extended period of time.

## Information : Authority

**Information in this document is subject to change without notice.  
© 2003 Samsung Electronics Co., Ltd. All rights reserved.**

Reproduction in any manner whatsoever without the written permission of Samsung Electronics Co., Ltd. is strictly forbidden.

Samsung Electronics Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

*Samsung* is the registered trademark of Samsung Electronics Co., Ltd.; *Microsoft*, *Windows* and *Windows NT* are registered trademarks of Microsoft Corporation; *VESA*, *DPMS* and *DDC* are registered trademarks of Video Electronics Standard Association; the *ENERGY STAR* name and logo are registered trademarks of the U.S. Environmental Protection Agency (EPA). As an ENERGY STAR Partner, Samsung Electronics Co., Ltd. has determined that this product meets the ENERGY STAR guidelines for energy efficiency. All other product names mentioned herein may be the trademarks or registered trademarks of their respective owners.