

삼성전자주식회사

94-1



전국 어디서나

- A/S 1588-7285 (처리바로)
- 1588-3366

제품 모델명, 고장상태, 연락처를 정확히 알려 주시면 고객 여러분의 궁금증을 언제나 친절하게 상담 빠른 서비스를 제공합니다.

서비스 사업자 관련 문의

(부가서비스 이용안내, 통화요금 등)

휴대폰으로 114 (무료)



고객상담실

02-541-3000, 080-022-3000
051-861-3000, 080-051-3000



PC통신

PC ()
GO SEC(, , ,)



인터넷 홈페이지

http : //www.sec.co.kr
http : //www.anycall.com



AS ? 가 가

GH68-02394A
2001/09.Rev.1.0



WORLDWIDE OLYMPIC PARTNER



삼성애니콜CDMA 2000

SCH-X250

SK

가



AnycallLAND
www.anycall.com

사용설명서의 모든 내용은 애니콜 랜드의 'Manual Bank'에서도 보실 수 있습니다.

-
-
-
-

가



각부의 명칭과 기능

 
버튼
기능

	/	
	/	(14)
	/	
	/	
	/	
	n.TOP / n.TOP	(89)
	/ (26) /	(15)
	/	(98)
	/	(24)
		(113)
		(121)


()




()

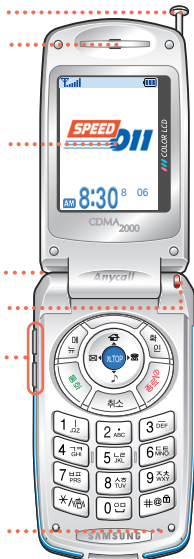

주 화면

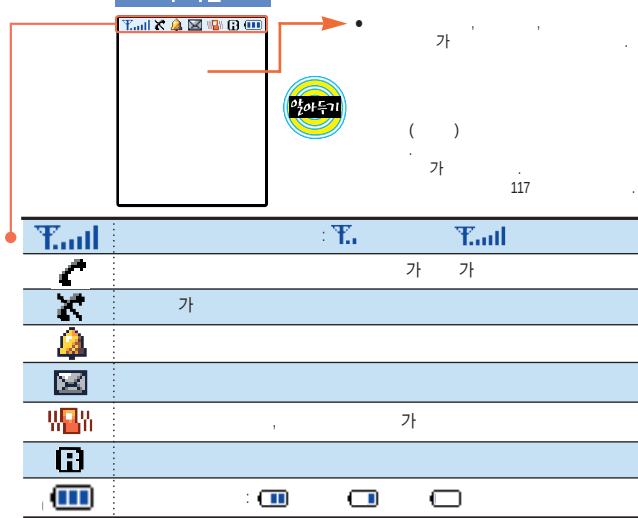 

보 조 화면

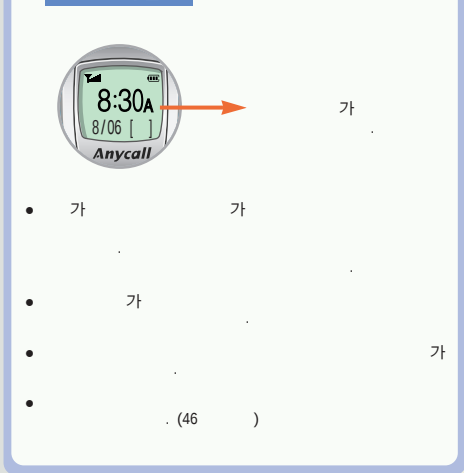 



차례보기



기 본 편

기본기능

가		7
/		8
		9
!		10
가		10
가		10
!		10
/		11
		12
		13
		14
/		15
		16
		16
		16
		16
DTMF		16

벨/전동/크기

/		18
/		18
		19
		19
가		20
,		21
()		23
		23
		23
		24
가		25
		25
		25
DTMF		25

뮤직박스

(/)		26
		26
/		27

응 용 편

문자입력방법

!		29
		29
		30
		30
		31
		33
		34

내용대폰

		36
		36
		37
		39
		39
		40
		41
		41
		42
		43
가		44
		45
		46
		46
		46
		47

게임

		47
		47
		48

전화번호부

		49
		49
		50
		50
		51
		52
		53
		53
		54
		55
		56
		57
		58
		58
		59
		60

		61
		62
		62
		63
		64
		65
가		65
		66
		67
		67
		68
		68
가		68
		69
		69
		69
		70
4		71
		71

전자다이얼리

		72
		72
		73
		74
		75
		75
/ 가/		77
		78
		79
		79
/ /		80
		81
		82
D-DAY		83
D-DAY		83
D-DAY		83
가/ /		84
		85
		86
		87

인터넷/대시지

/	88
)	88
n.TOP	89
) n.TOP	89
) n.TOP	90
E-mail	91
()	92
GVM	92
)	92
)	93
)	93
)	94
?	96
	97
)	97
)	97
/)	98
)	99
)	100


휴대폰관리

()	101
)	101
)	103
-	103
)	104
)	105
가	115
)	115
)	115
)	115
)	115
()	107
)	108
-	109
)	109
)	110
)	110
)	120
)	120
()	121
	122

부 록


cdma2000	?	124
		125
700		126
) 700		126
		126
PC	2000	127
		129
	?	131
		133
	!?	134
		135
)		135
)		137
		138
		139
		140
		142
	(for Foreigner)	144

 MEMO

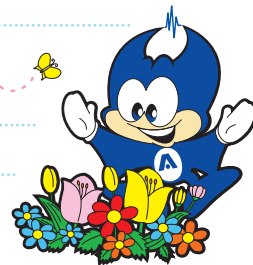




구성품 확인

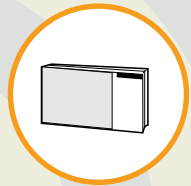 

휴대용 곁이 / 목걸이형 이어마이크폰 연결 방법

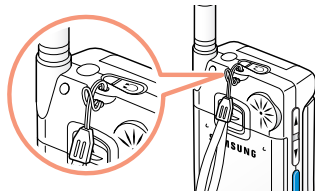 


122




배터리를 끼우려면 / 빼려면

2가 가

 배터리를 끼우려면

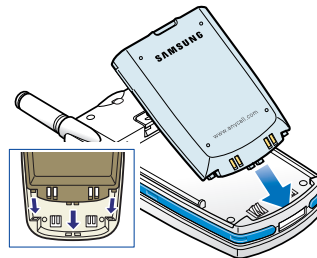

1

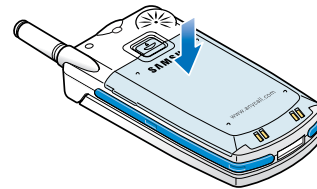 


2

가


Anycall

 배터리를 빼려면

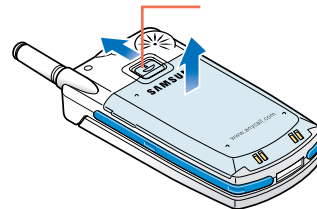



배터리를 충전하려면

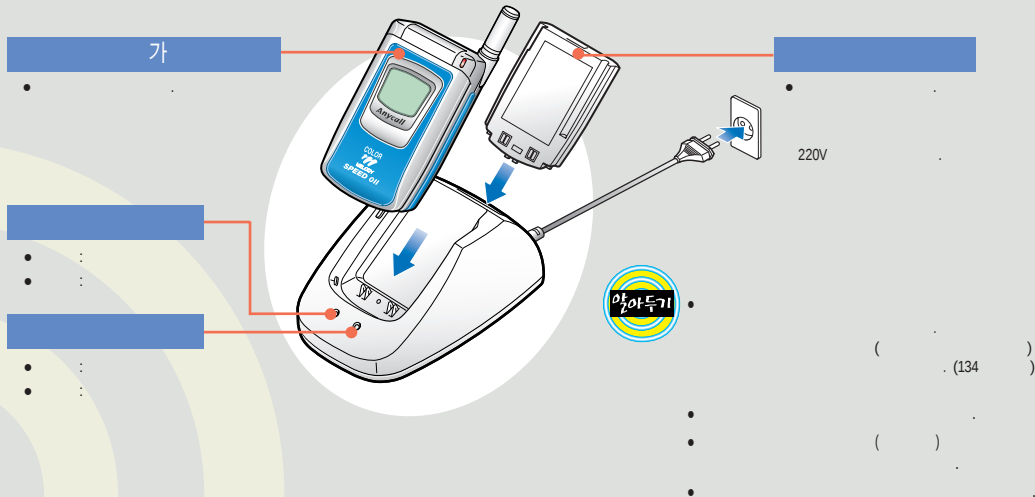 

기본편

- 기본기능
- 벨/진동/크게
- 유직박스

침수 확인용 라벨!
가

()

덮개가 열린 대기 상태에서...

가 , D-DAY
5 가

화면에 비밀번호를 입력하라는 문구가 나타나요!

 
(121) 가 (115)





휴대폰을 켜려면 / 끄려면

휴대폰을 켜려면

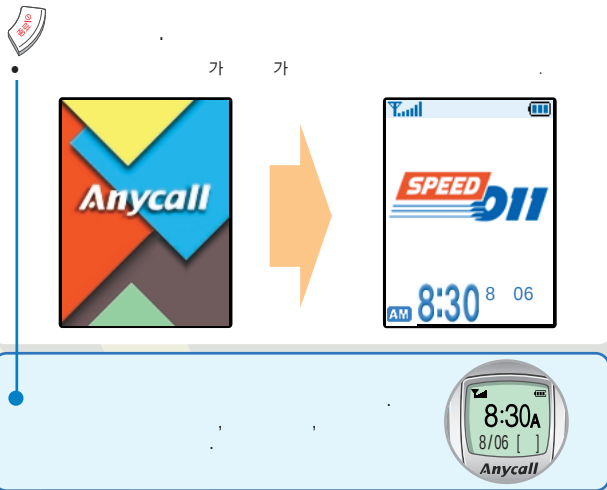

휴대폰을 끄려면



 
사용 설명서에 표시되는 화면의 그림과 색상 등은 실물과 다를 수 있습니다.




전화를 걸려면

(114)

1

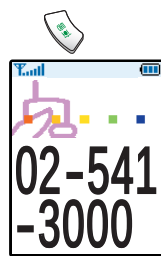


2

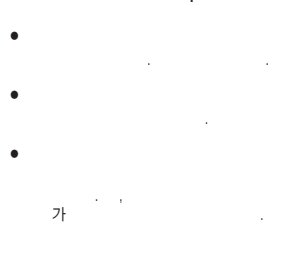 

, 119 (000 ~ 999) 3

 통화가 끝나면

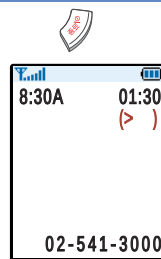

(52)

(55)



전화를 받으려면

1



2



가 (115)



발신번호 표시 서비스 기능



걸려온 전화를 받지 않으려면



 
()

(119)




최근에 통화한 모든 번호를 찾아서 통화하려면

1

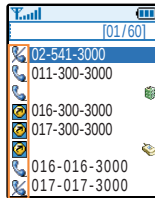

2

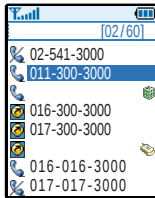 





가 (19)

(52)



소곤소곤 기능을 설정 / 해제하려면

1

2

해제하려면

가



통화중 편리기능

기능	설정 또는 해제방법 (차례대로 누르세요)
	통화중예 → 화인 → 14
가	통화중예 대뉴 → 3 DEF → 가
가	통화중예 대뉴 → 4 DEF → 가
	통화중예 → 대뉴 → 5 DEF → 화인
DTMF	통화중예 → 대뉴 → 화인

 
MEMO



휴대폰의 메뉴 실행 / 선택 방법 알기

가 가 . 가
()

기본메뉴/시작메뉴 실행 방법

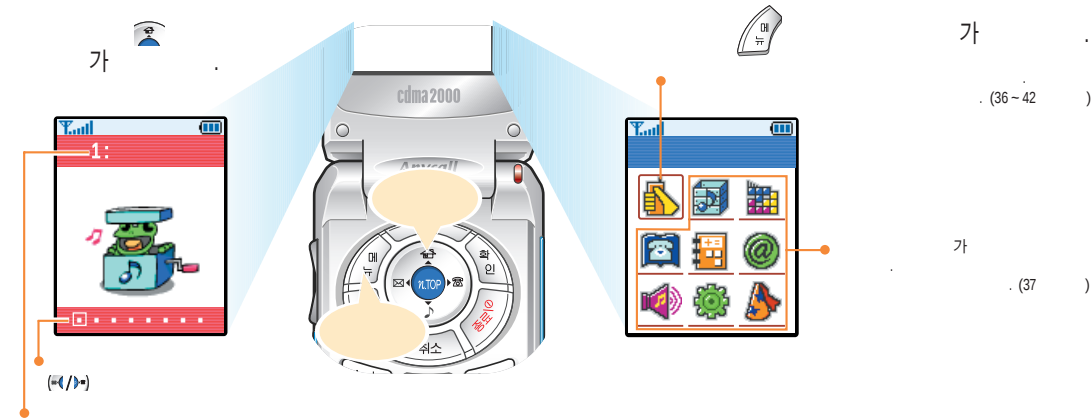




벨이나 진동, 무음(램프)을 선택하려면

가 ()

 (24)

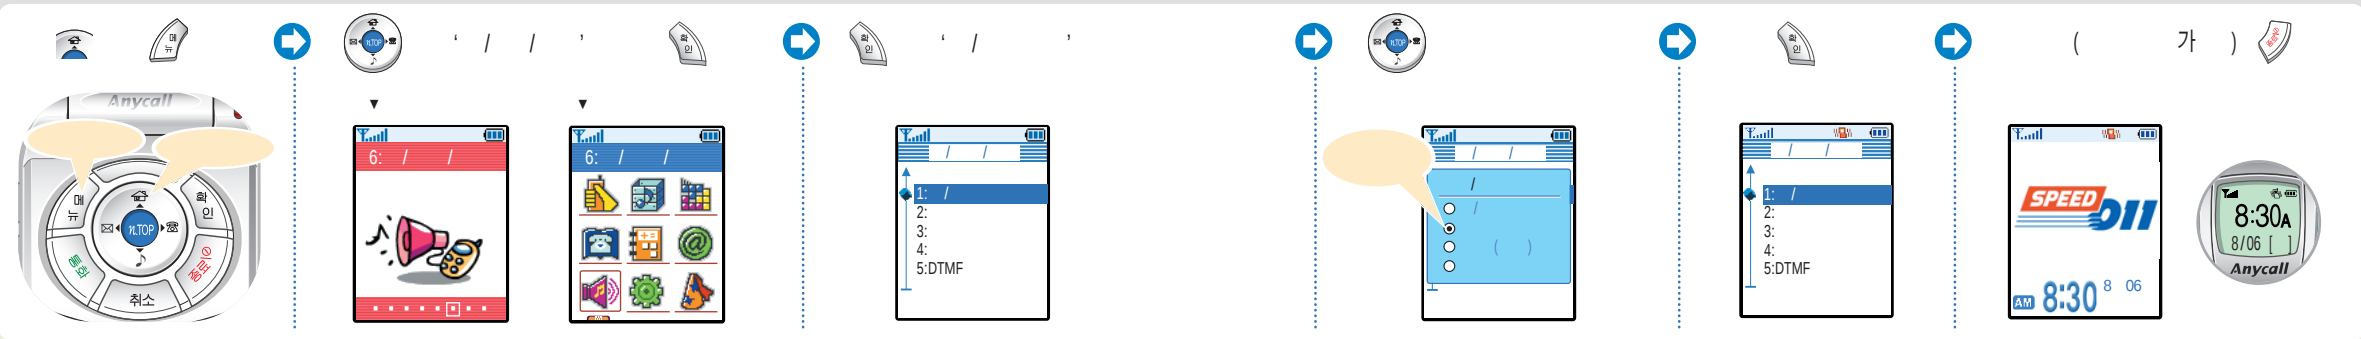

655

- 1: / 가
- 2: : / 3: () : 가
- 4: : 3
- 5: : 가 10
- 6: () : 가
- 7: () : 가





소리 크기를 조절하려면



벨소리 크기 조절

Icons: / / → A/V → [Volume Icon]

Icons: [Speaker], 6, 2

[Volume Bar]

→ [Volume Icon]

버튼을 누를 때 나는 소리조절

A/V

[Volume Bar]

AM 8:30

통화중 들리는 소리조절

통화중

A/V

[Volume Bar]

02-541-3000



매너기능

설정 하려면

[Phone Icon] → [SPEED DIAL] → [Clock Icon] → [D-DAY]

해제 하려면

[Phone Icon] → [Phone Icon]





여러가지 신호음의 설정 및 해제

Navigation icons: / /, 3 DEF, 4 DEF, 5 DEF (DTMF), and icons for call settings.

3 DEF ()

4 DEF ()

5 DEF (DTMF) ()

DTMF (:)

가 가 (24)

가 가 (24)

가



뮤직박스 메뉴 (벨 / 멜로디 선택 메뉴)

메뉴실행 방법과 메뉴소개

1) [Icon]

2) [Icons]

cdma2000

Anycall

1: [Icon]

2: [Icon]

3: [Icon]

4: [Icon]

5: [Icon]

n.TOP 125

700 126

PC 2000 127

 


벨 / 멜로디 종류를 선택하려면

25

25

(24)

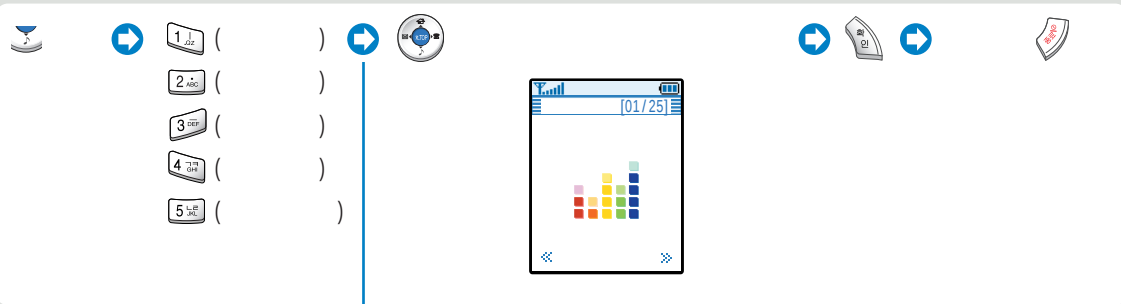

• / : 25 25
 • : n.TOP 5
 • : 700 3
 • : PC 2000 3

 


- 문자입력방법
- 내휴대폰
- 게임
- 전화번호부
- 전자다이어리
- 인터넷/메시지
- 휴대폰관리


알면 쉬운! 문자 입력 방법

• (1, •, -)


문자 입력 순서는

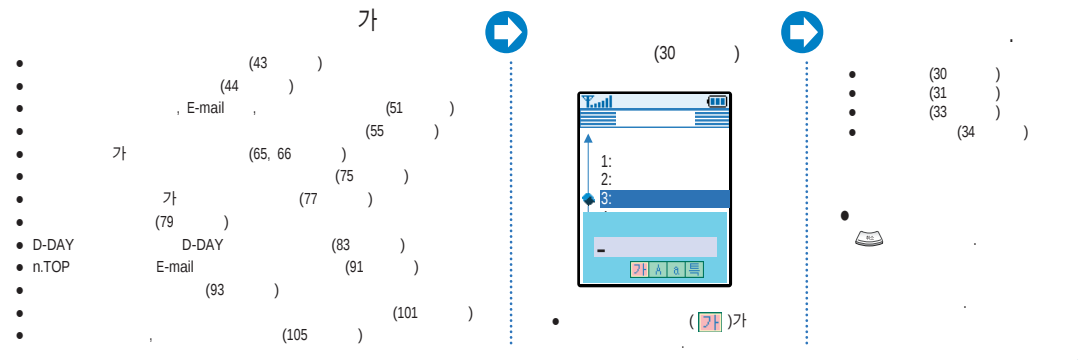



문자 모드 선택 방법

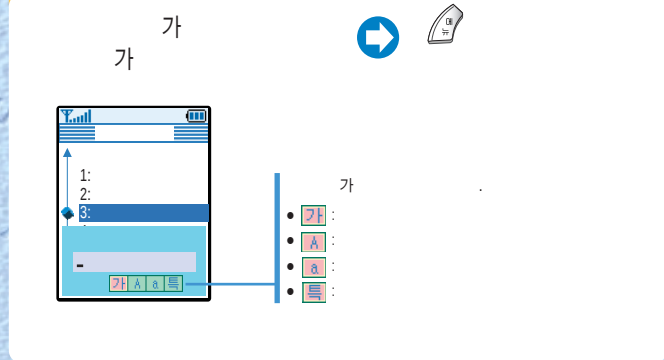 


숫자 입력 방법

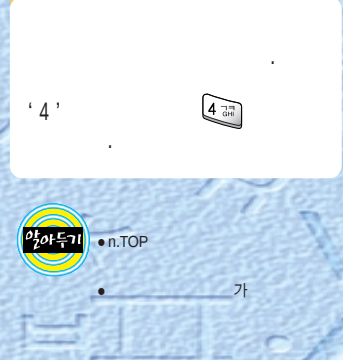 


한글 입력 방법

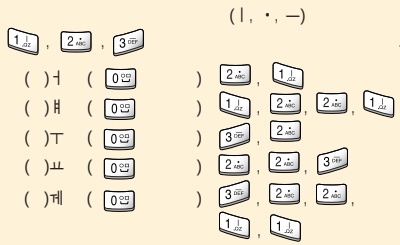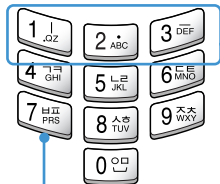  

 (30)
가 가

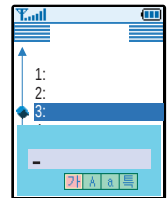


한번 따라해보세요!

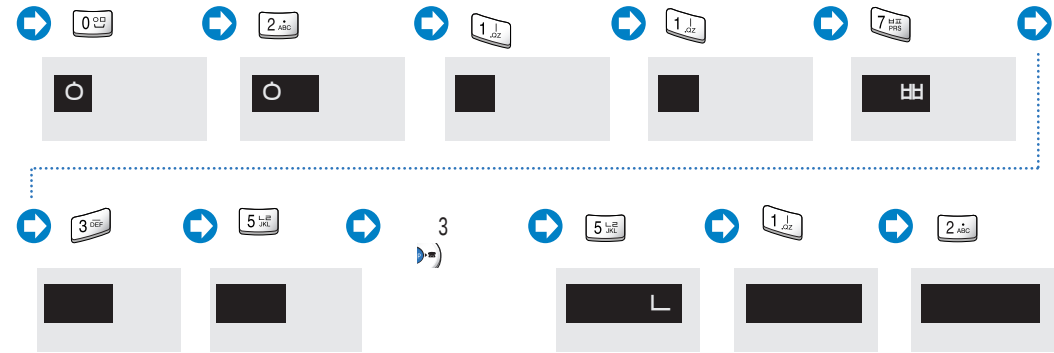 

한글 쉬운!
문자 입력 방법

 영문 입력 방법

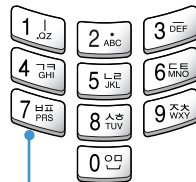

가



• E-mail

	*/&	₩/₩
	/	@
	₩	#

▶ 한번 따라해보세요! 'HIT'

(30)

가

4 GHI

3

8 TUV

HIT

특수문자 입력 방법

가

가

(30)

▶ 한번 따라해보세요! '♥'

(30)

♥ 가

♥

1: 2: 3:

♥

문자 입력 방법

 
 
MEMO



내 휴대폰 메뉴



메뉴실행 방법과 메뉴소개

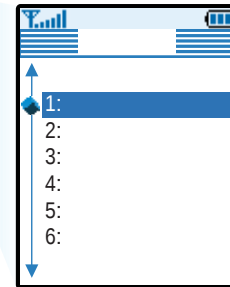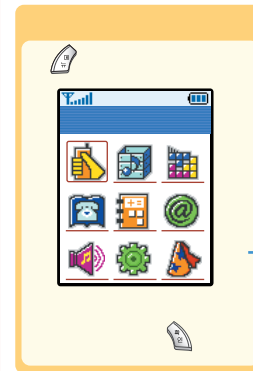

7:
8:
9:

37

39-42

43

44

45

46

46

 
46

47



시작메뉴에 나만의 메뉴 등록하기

12



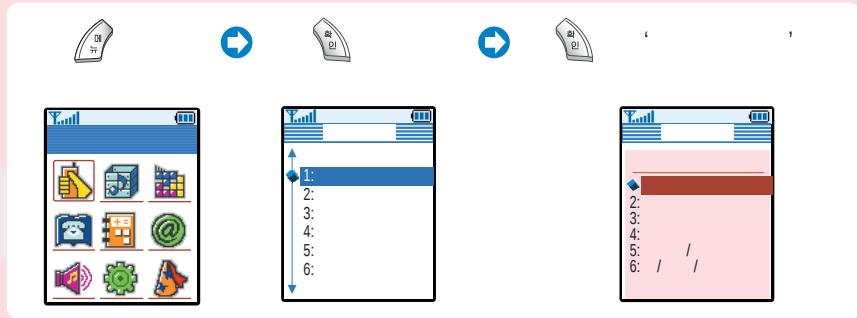


- 메뉴화면 설정을 이용해 시작메뉴를 나만의 메뉴로 만들 수 있습니다.(39~42쪽 참조)
- 등록한 시작메뉴를 삭제하거나 구입시의 상태로 초기화시킬 수 있습니다.(46쪽 참조)
- 주 메뉴 화면을 '큰 메뉴 아이콘'으로 설정한 경우(39쪽 참조), 9~# 번지에 등록된 메뉴가 나타나지 않습니다.
(, 1~8)
- : 미등록 메뉴 아이콘 표시

메뉴 단위로 등록하려면



   기능 단위로 등록하려면

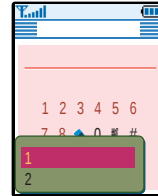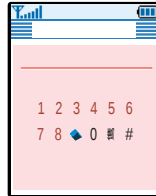

가

2000

15

 
PC

(127)



시작메뉴를 편집하려면


주 메뉴 화면을 바꾸려면

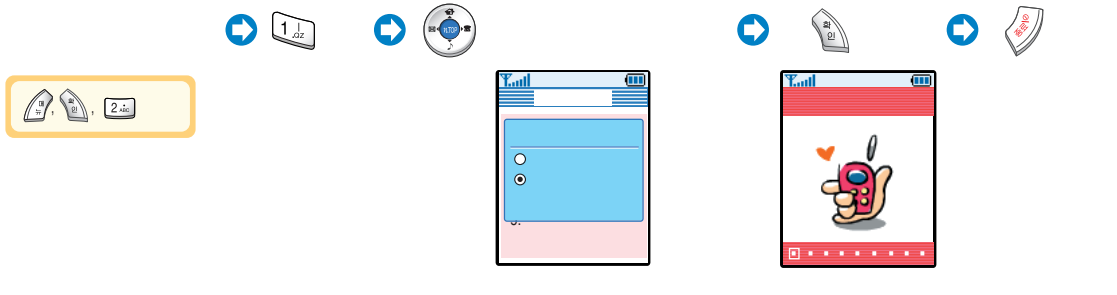

주 메뉴 화면을 '큰 메뉴 아이콘'으로 설정한 경우 내 휴대폰의 메뉴 항목이 변경됩니다.


- (39) (41) (43) (44)
- (45) (46) (47)

 메뉴 아이콘을 바꾸려면

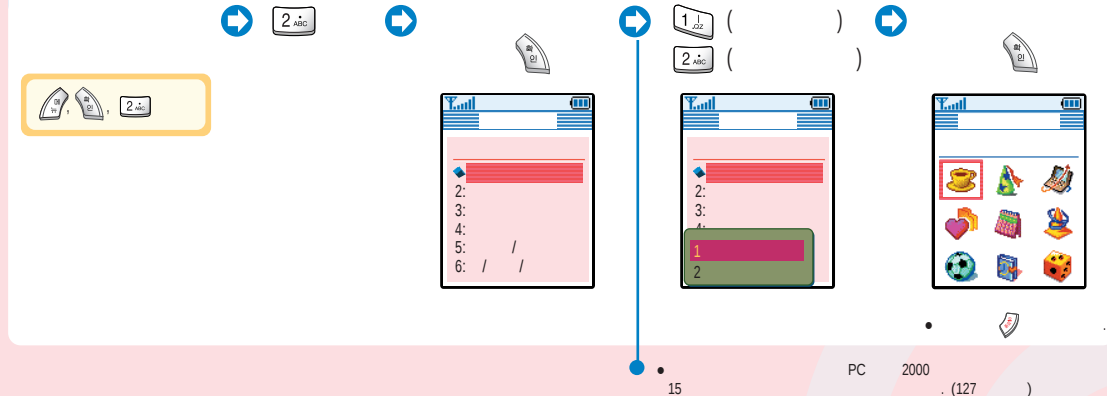

•

 
메뉴순서를 바꾸려면

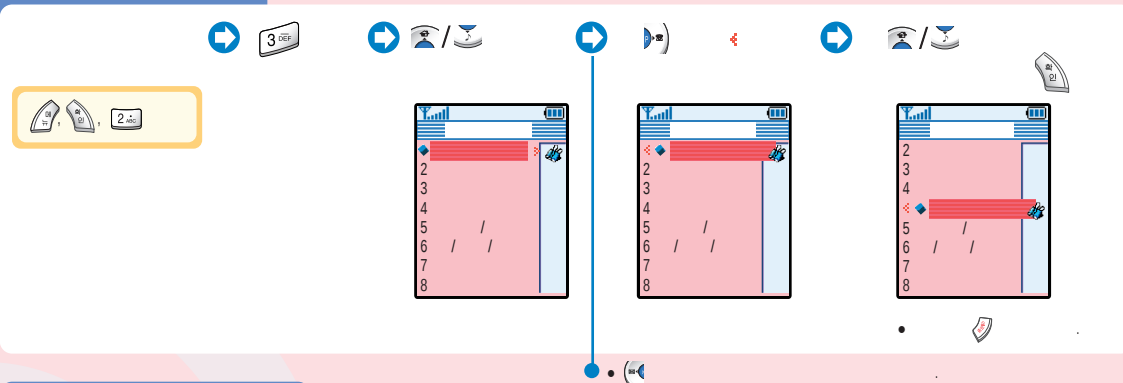

팝업 창 모양을 바꾸려면



 아이콘 보관함을 확인하려면

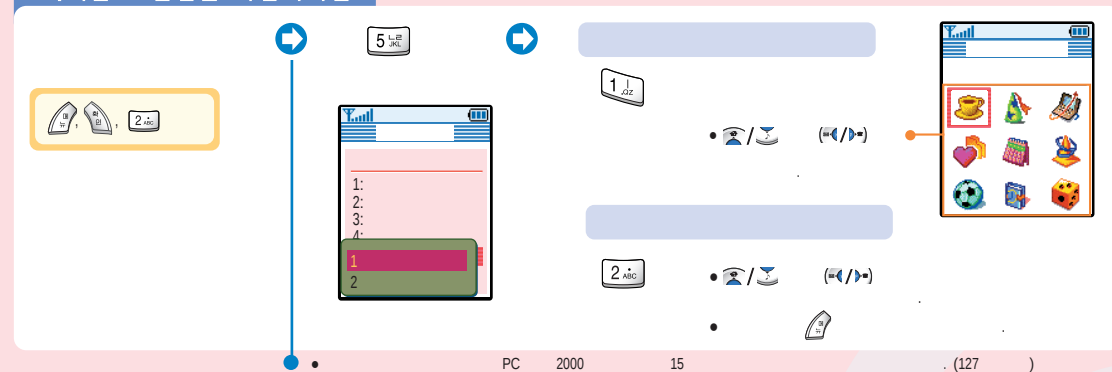


알아두기 연결 메뉴로 시작 메뉴 화면을 설정 하려면





휴대폰에 자기 이름을 입력하려면

 8 , 16

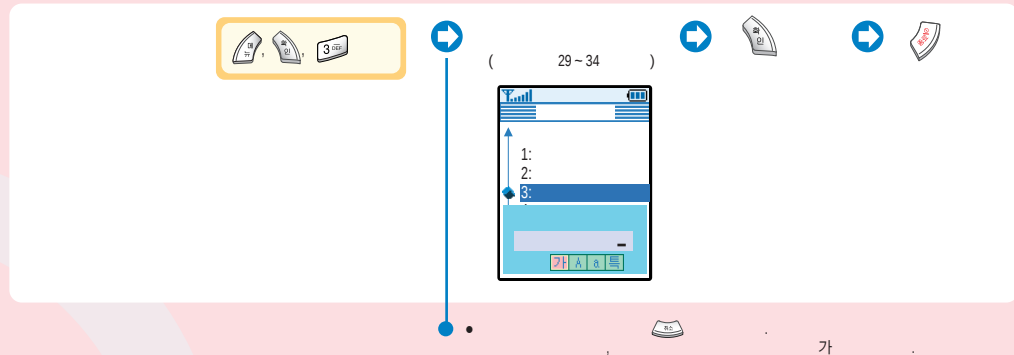


자기이름이 입력되어 있어도 평상시 화면(45쪽 참조)의 이미지 크기에 따라 자기이름이 표시되지 않을 수 있습니다.



화면에 특정문자가 슬라이드 되게 하려면

 가

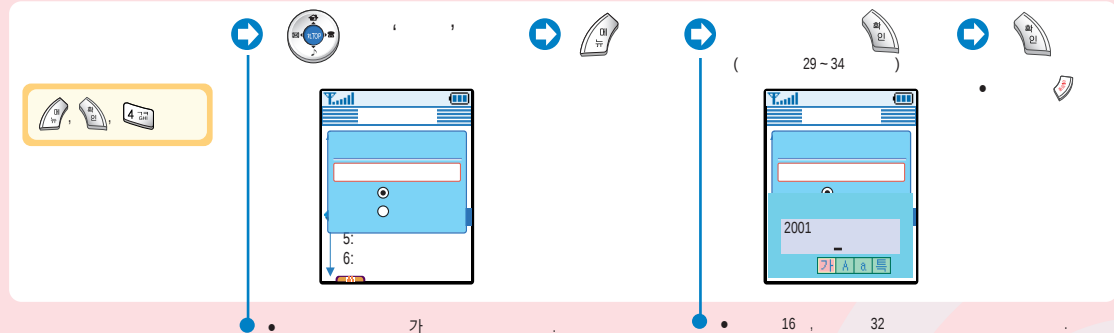



휴대폰 배경화면을 선택하려면

n.TOP(89)
n.TOP

PC 2000(127)

나만의 이미지로 바꾸려면

1. ()

2. ABC ()

3. DEF (n.TOP)

4. GHI ()

5. JKL ()

SPEED 011

안아두기

가 가

이미지 보관함에 다운받은 이미지를 삭제하려면

5. JKL

6. MNO

안아두기

가 가



시작메뉴 삭제하기

안아두기

안아두기

안아두기

안아두기



시작메뉴 초기화하기

안아두기

안아두기

안아두기



외장시계 바꾸기

안아두기

안아두기

안아두기

 
 


다이얼 숫자 크기를 조절하려면



게임 메뉴

메뉴실행 방법과 메뉴소개

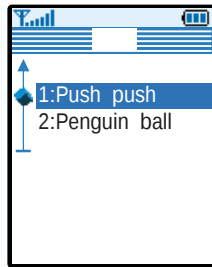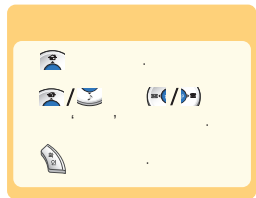


Push push, Penguin ball



게임 기능을 사용하려면

 Push push, Penguin ball

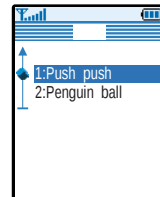

가

가

(1)

가



 
 
전화번호부 메뉴

메뉴실행 방법과 메뉴소개

1)



2)

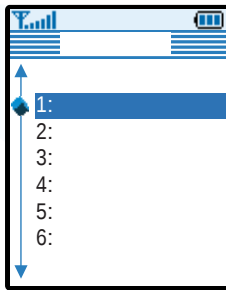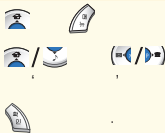

7:
8:
#:

53-58

59-60

50

62

66

67

70

 
71



전화번호 등록하기

5, 1,000, 2,400
, 4, E-mail
(000 ~ 999) (61)

전화번호부에 등록시키는 방법

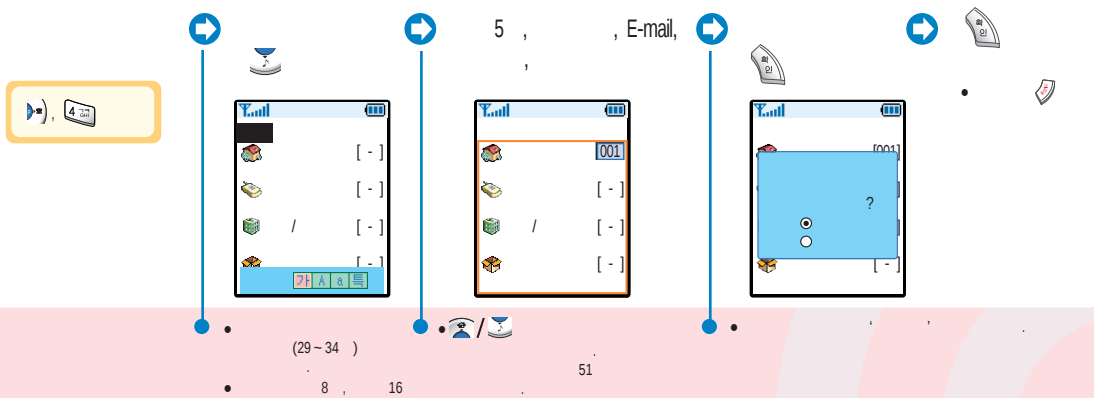

각 항목 입력방법

(000 ~ 999)

(= / > =) 가

61

가

가

32 , 64

가

66

가

16 , 32

화면에 입력한 전화번호를 저장하는 방법

가 !

02-541-3000

가 !

02-541-3000

가 !

02-541-3000

 
PC 링크 2000을 이용하세요!

(PC 2000 127 .)




저장된 전화번호를 찾아 사용하려면


전체 목록에서 찾아 사용하려면

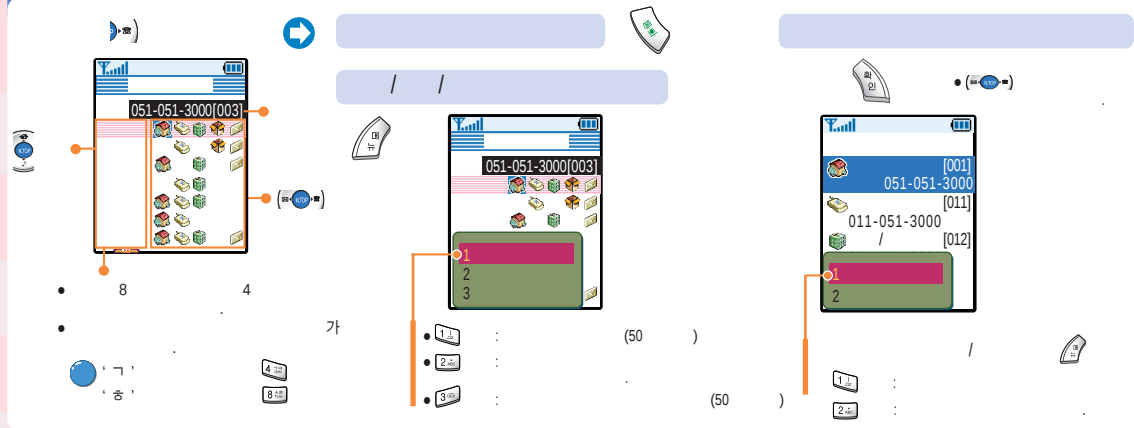


단축번호로 찾아 사용하려면

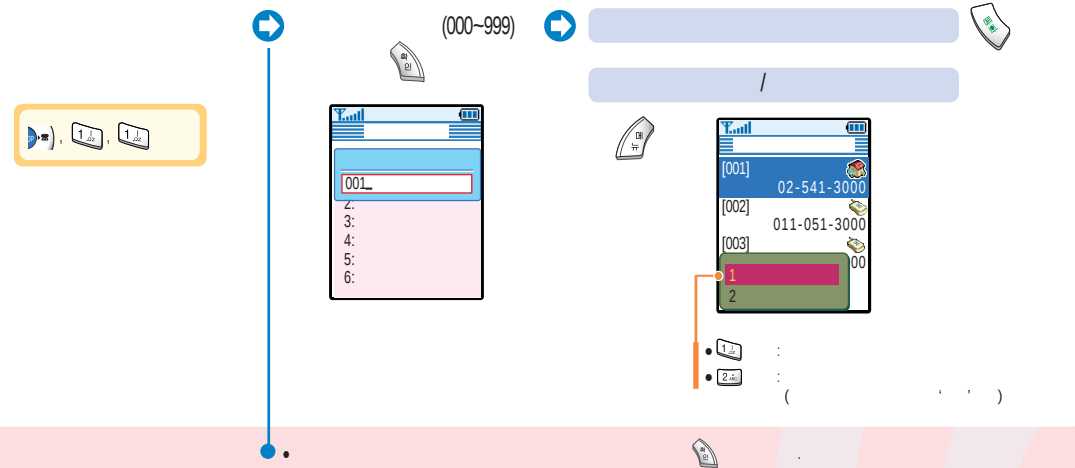 

이름으로 찾아 사용하려면

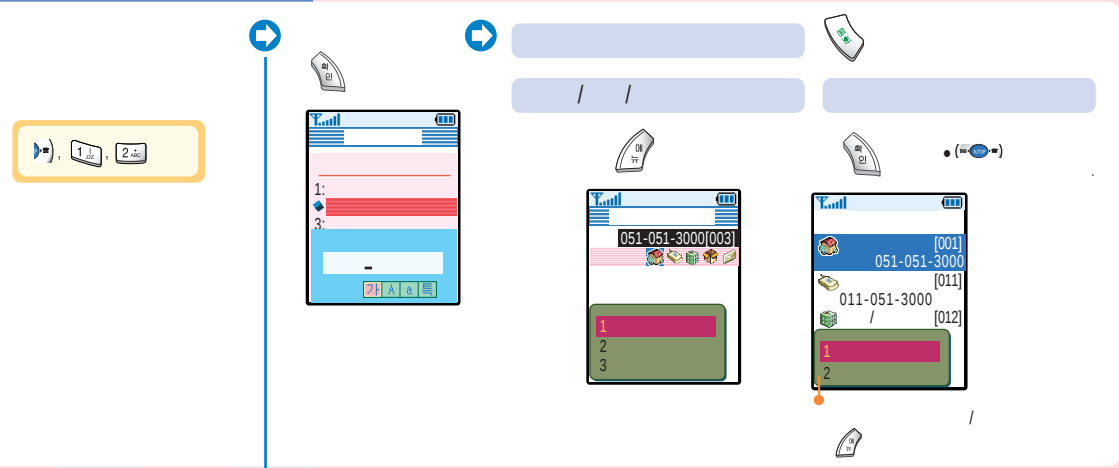 


번호로 찾아 사용하려면

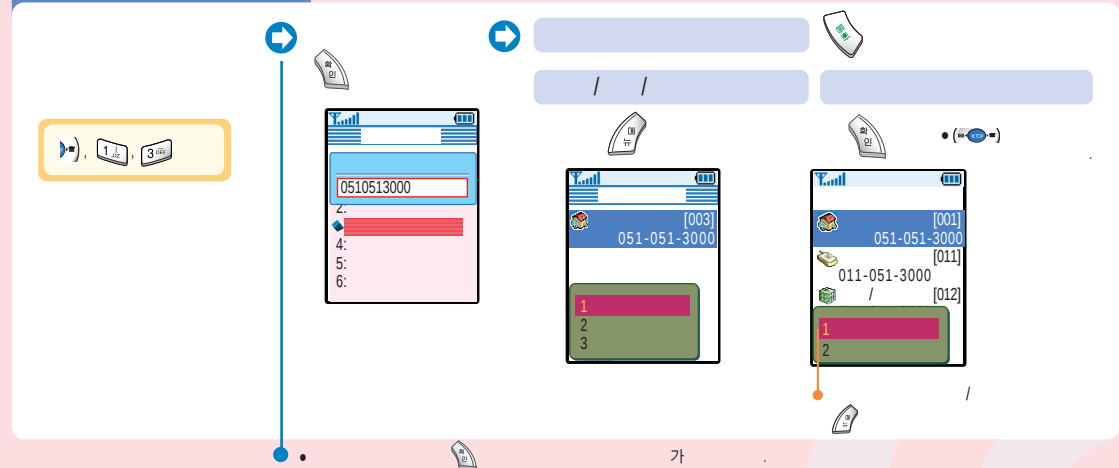 


₩123 : 123
₩300 : 300
₩3000 : 3000

 
그룹으로 찾아 사용하려면

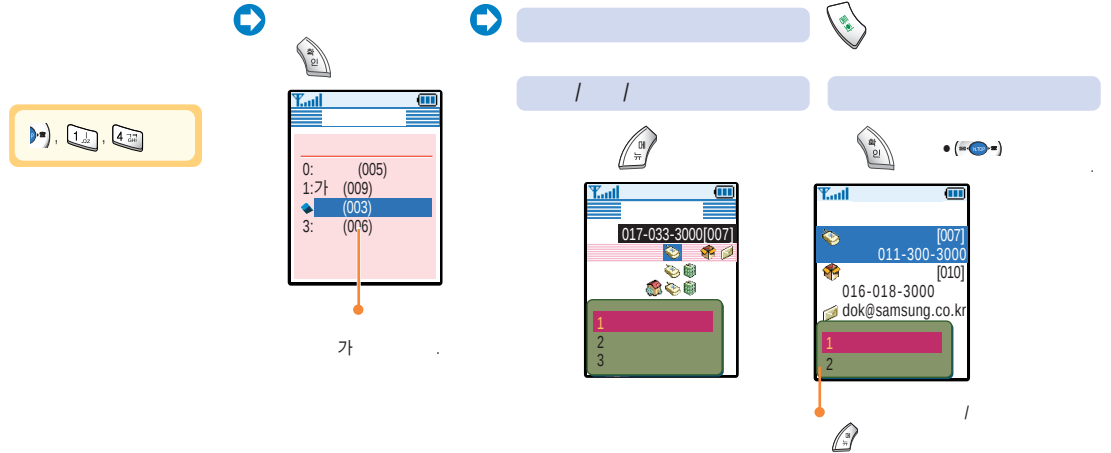

등록한 시간으로 찾아 사용하려면

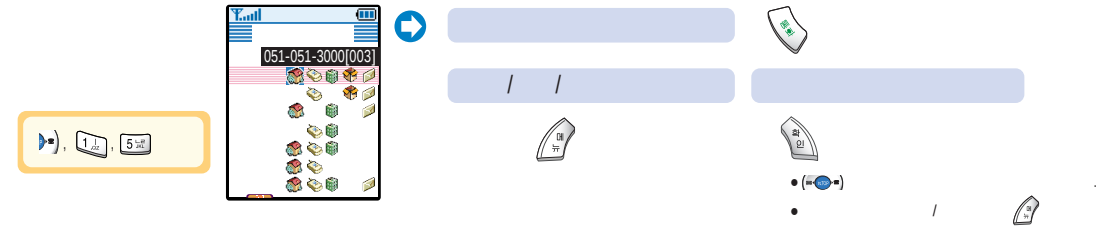 






마지막으로 검색한 내용을 찾아 사용하려면

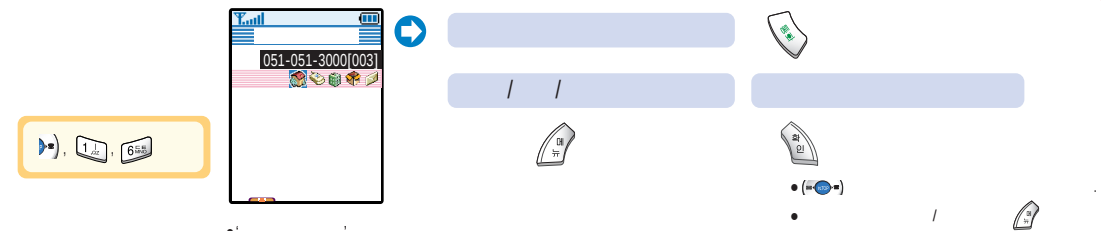 







최근에 발신한 번호를 사용하려면

     30

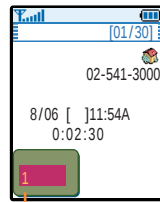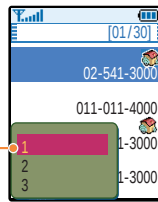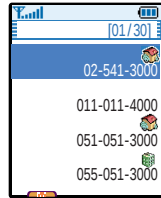

최근에 수신된 번호를 사용하려면

    30

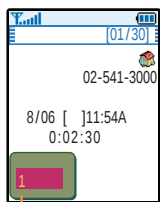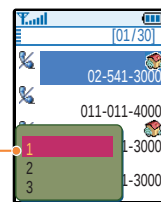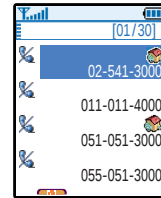





단축번호로 전화걸기

(000 ~ 999)

 단축번호 001~009에 입력된 번호

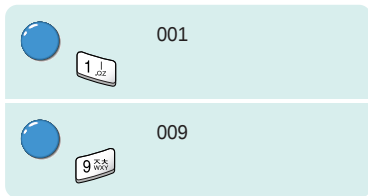

단축번호 000, 010~999에 입력된 번호

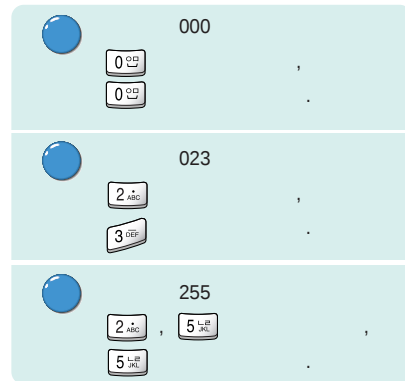 

스페셜 착신관리

가

 
가

.

200

.)

스페셜 착신관리에 등록하는 방법

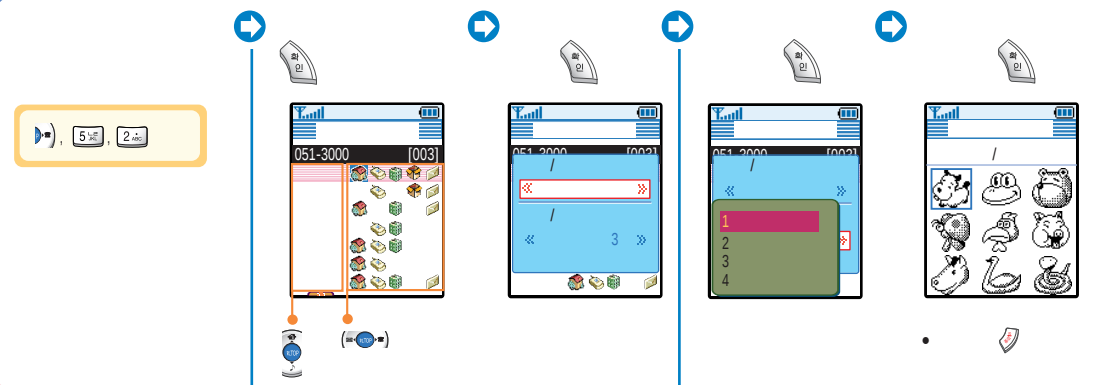

가

가

 
PC

2000


(127

62

스페셜 착신관리 설정을 변경 또는 삭제하려면

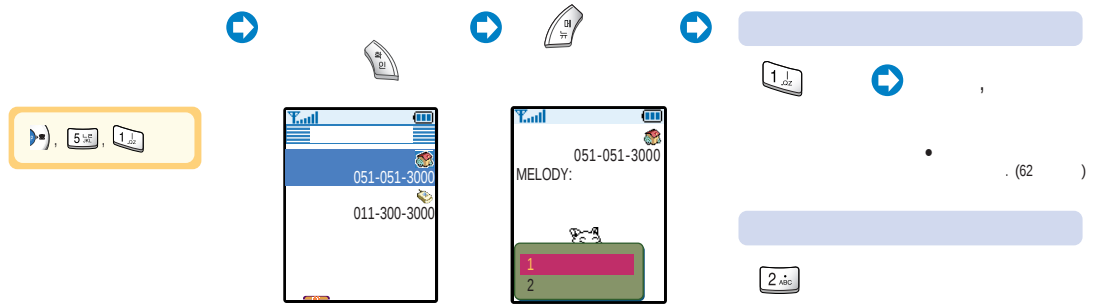

스페셜 착신관리 아이콘 목록을 확인 하려면

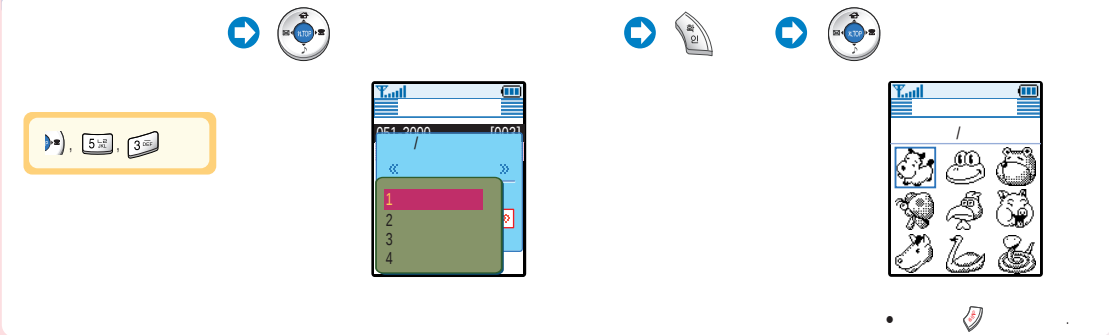 


PC 2000
(115)

(127)




그룹 이름을 편집하려면

 새 그룹명을 추가로 등록하려면

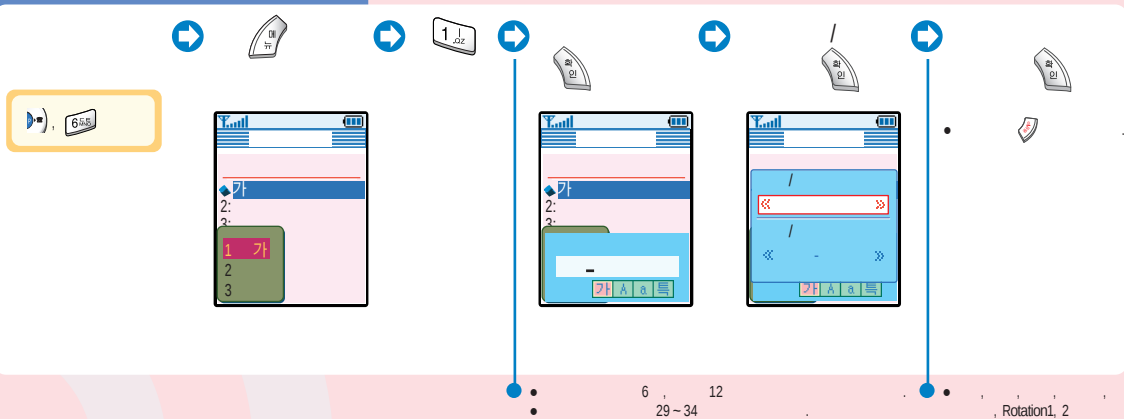

그룹지정을 수정 또는 삭제하려면

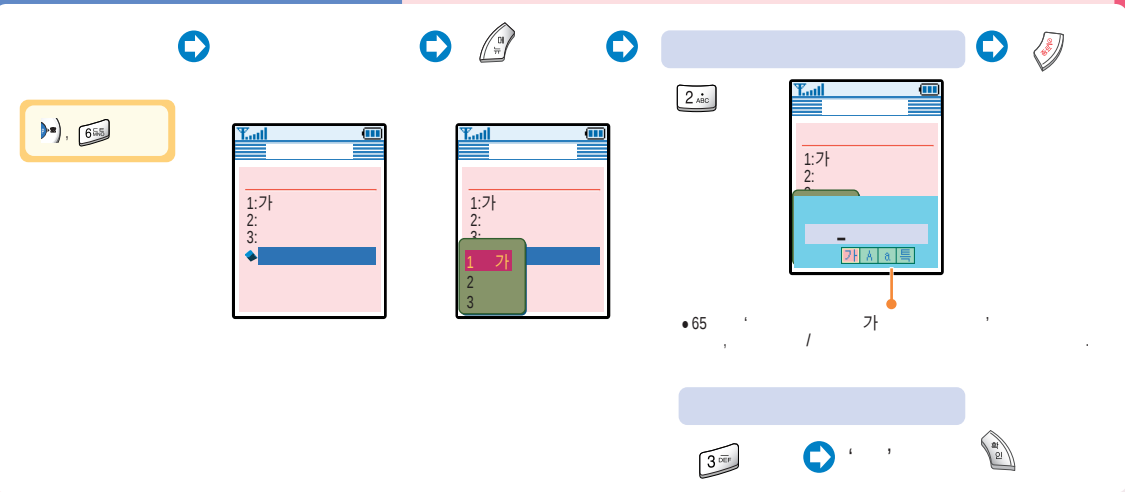 



넘버 플러스 서비스 기능

 


1. 가
2. . (
3. / , (SMS) .


휴대폰에 넘버 플러스를 등록하려면



넘버 플러스용 벨소리나 멜로디를 선택하려면

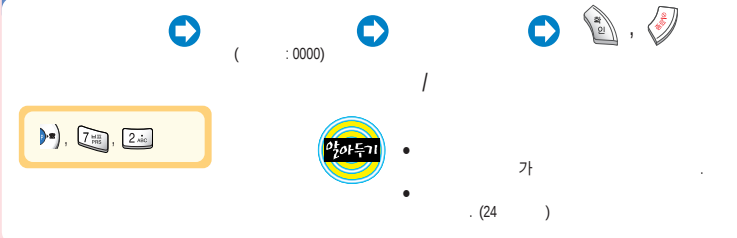

휴대폰에 입력한 넘버 플러스를 삭제하려면

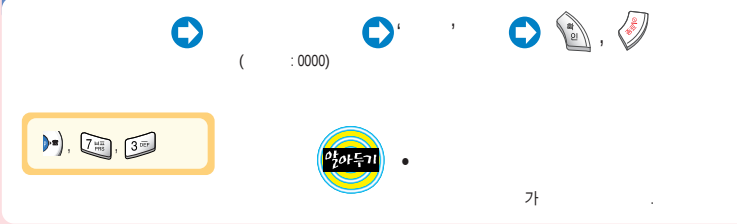 

넘버 플러스로 전화가 걸려오면





전자식 다이얼 기능

(ARS) 가

단축번호를 이용한 전자식 다이얼

통화중에 , 1 , 1 → 가 (000~999) , → , → , 1

포즈를 이용한 전자식 다이얼 (포즈란? 일종의 잠시 멈춤시간)

→ → 가 가 → 가



(ARS)

 
 
DTMF

(25)



전화번호부에 저장된 모든 번호를 지우려면


→ (: 0000) → ' , → →

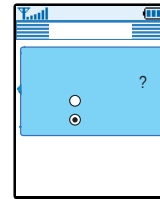



끝번호 4자리만 입력하여 전화 걸기

 4

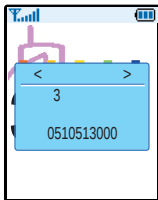

가

 
 


내 휴대폰 번호를 확인하려면



전자다이어리 메뉴

메뉴실행 방법과 메뉴소개

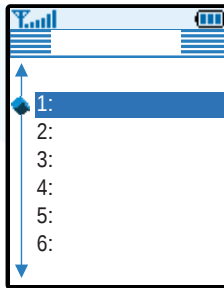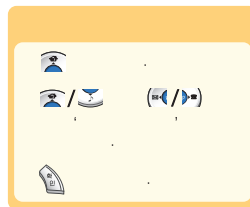


7:D-DAY
8:
9:

- 73
- 74
- 75
- 79
- 81
- 82
- D-DAY 83
- 85
- 86-87



모닝콜을 사용하려면

 3

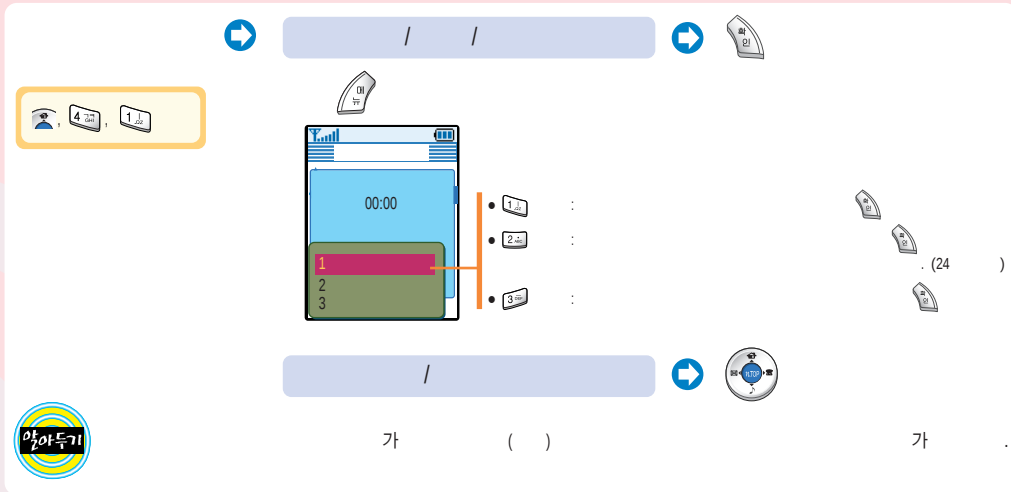


알람 시계를 사용하려면

2



 3

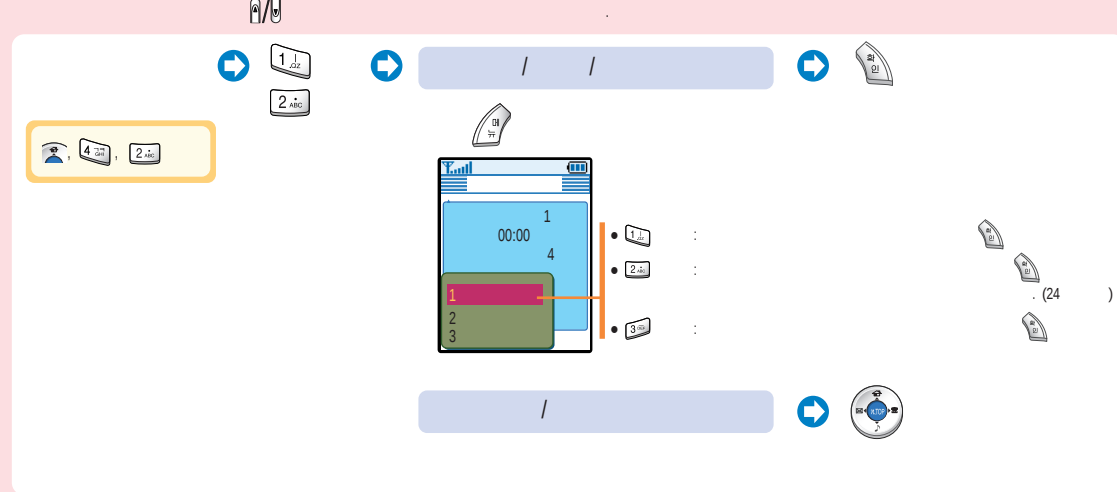




스케줄 관리 기능을 사용하려면

30

3



 새 스케줄을 등록하려면

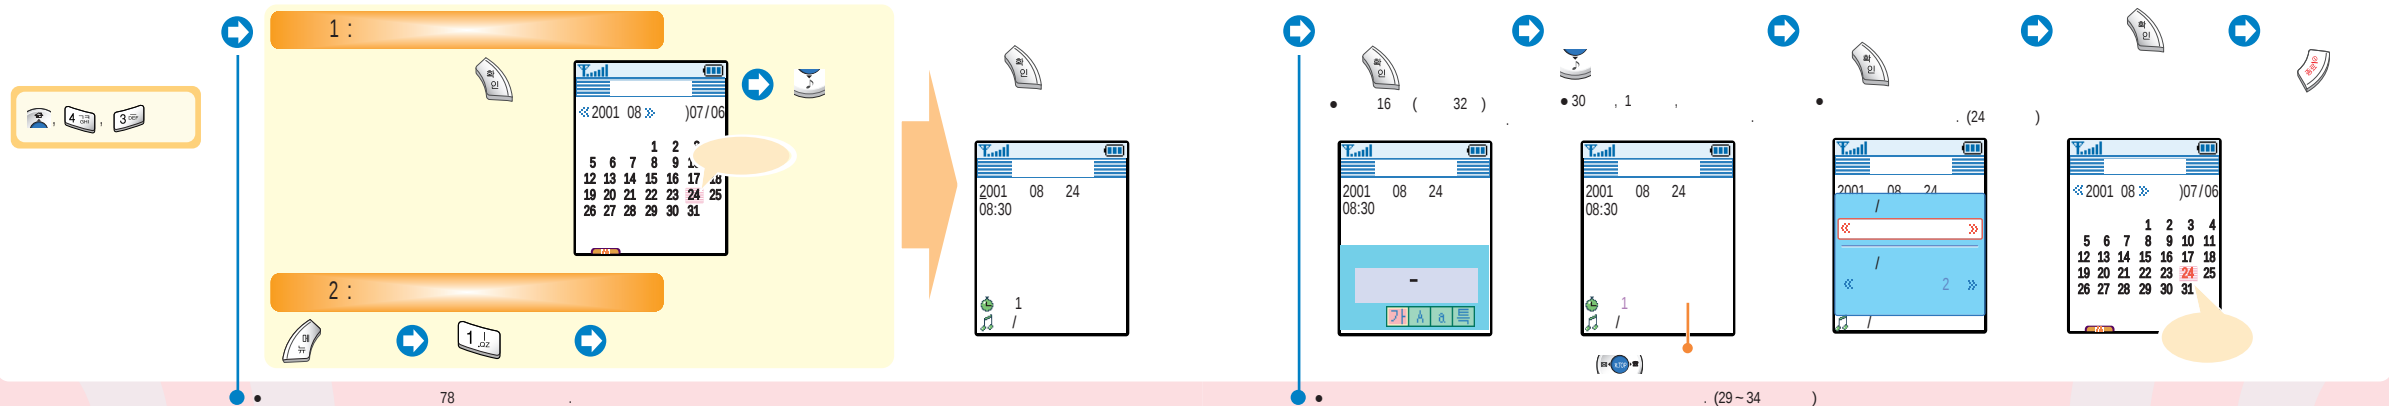




메모장 사용하기

5

 
새 메모를 처음 입력하려면

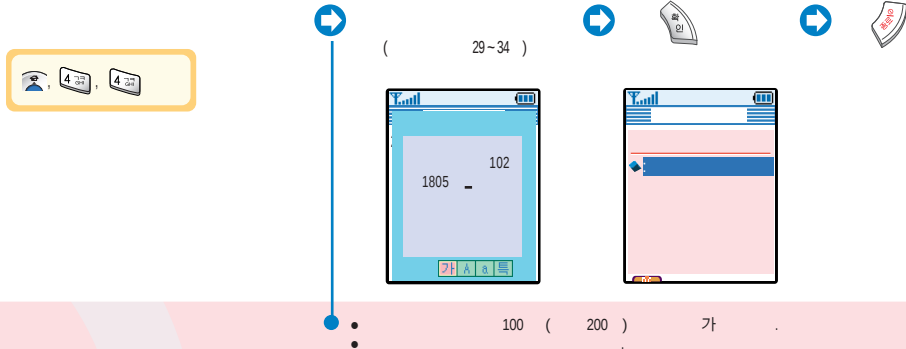

가

80

 입력한 메모 확인과 새 메모/삭제/수정하려면

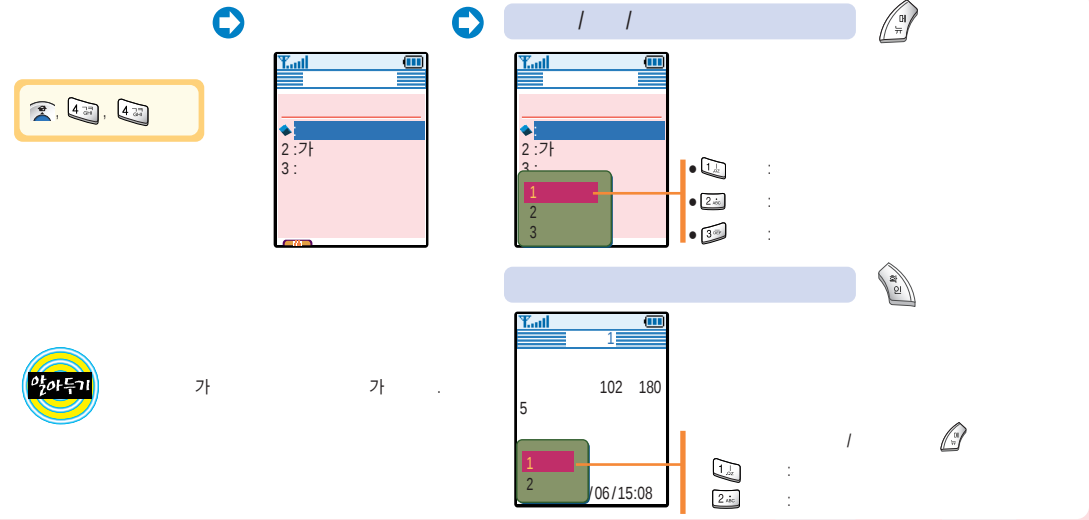


가

가




 전자계산기를 사용하려면

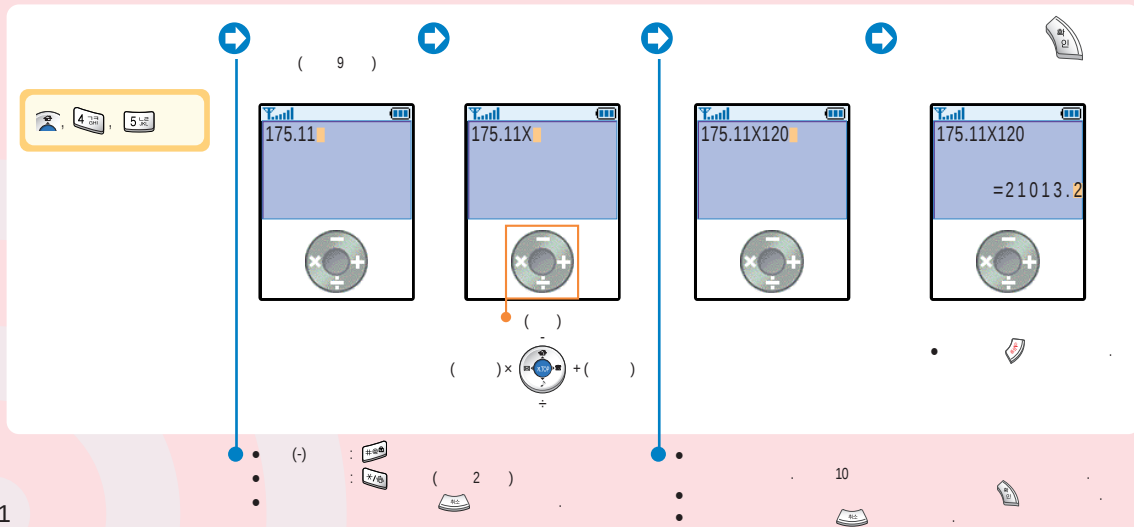

세계의 현지 시각을 확인하려면

 가

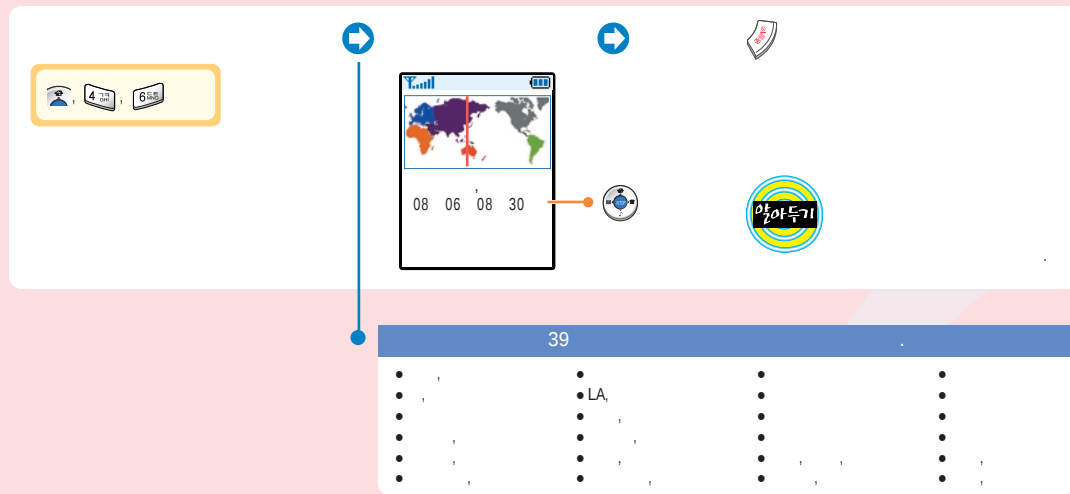



D-DAY 플러스를 사용하려면

D-DAY

(10)

 
새 D-DAY를 등록하려면

D-DAY



D-DAY

- (29~34)
- 8 , 16

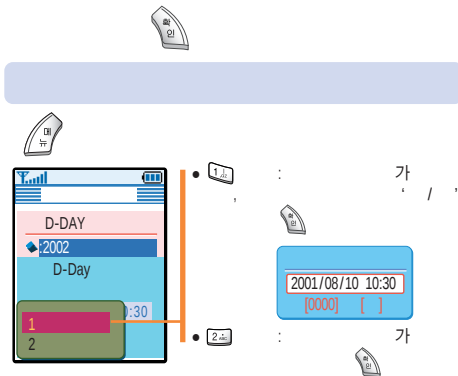


등록한 D-DAY 내용 확인과 추가/수정/삭제를 실행하려면


D-DAY



 
D-DAY

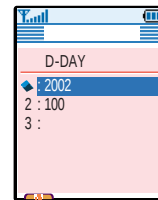

가/ /

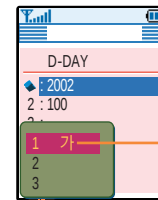 

- 1 : 가 ()
- 2 : D-DAY
- 3 : D-DAY

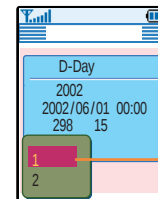 


D-DAY

D-DAY




단위를 환산해 보려면

 가 가

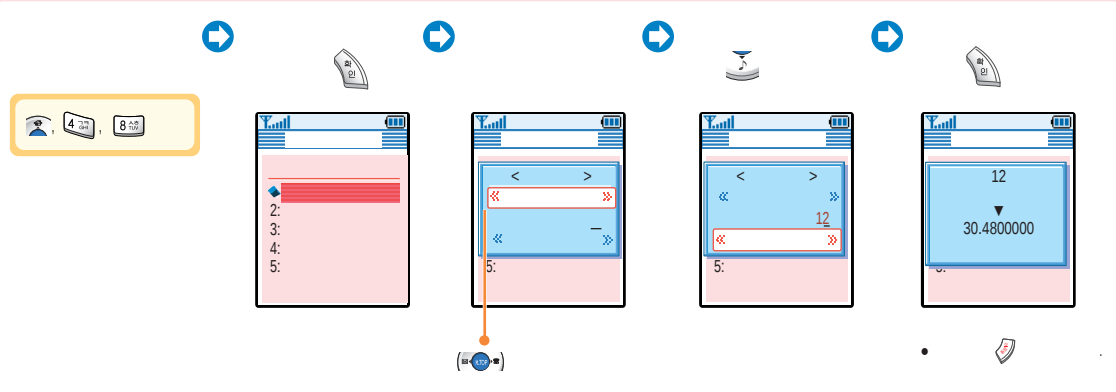

통화시간을 확인하려면

 가

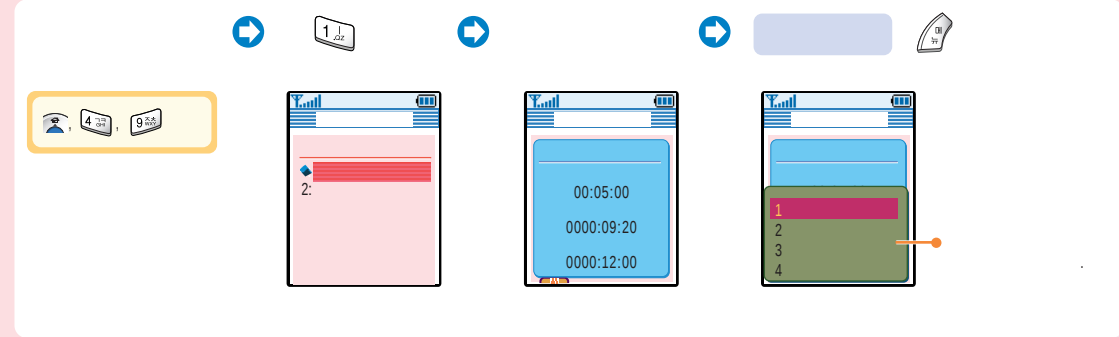

(n.TOP

)

 


현재시각을 설정하려면

가

가



가

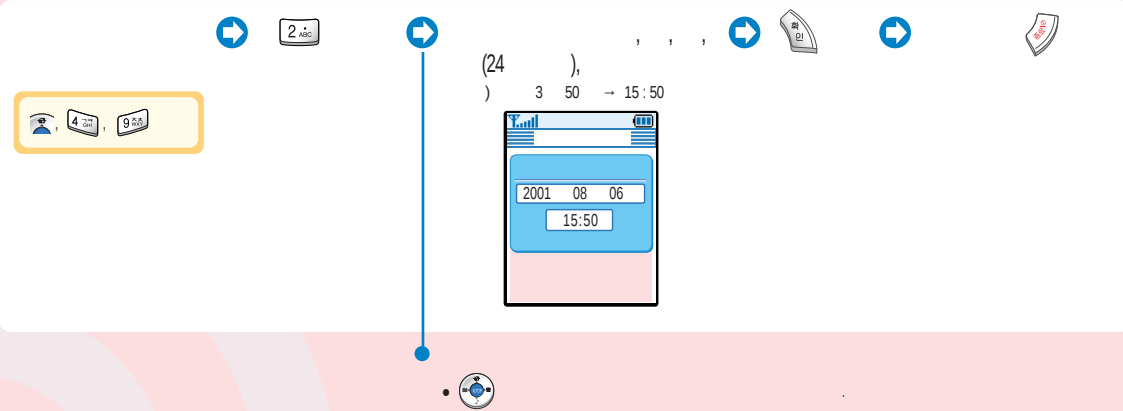

인터넷 / 메시지 메뉴

메뉴 실행 방법과 메뉴 소개

  
- 1) , n.Top
- 2)
 -
 -
 -
 -

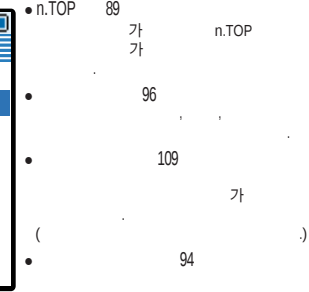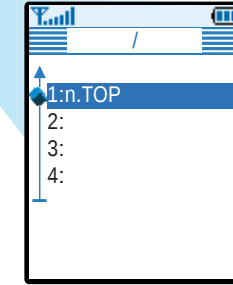




n.TOP 서비스

 n.TOP에 접속하기

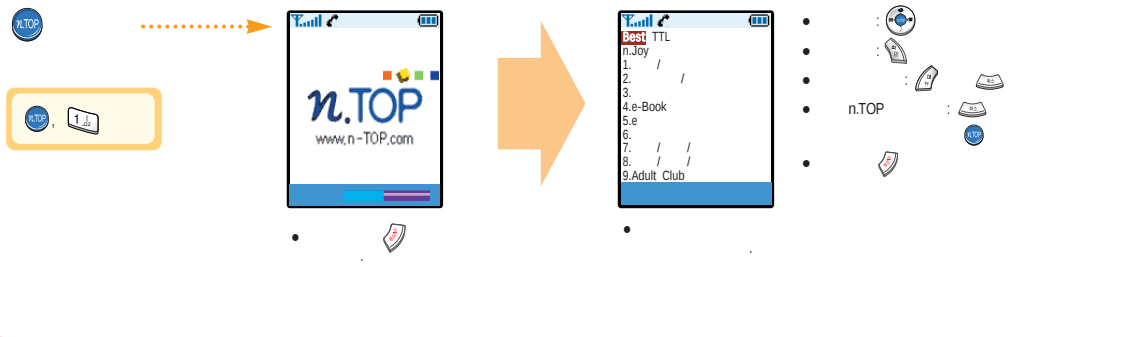


브라우저 메뉴 사용하기

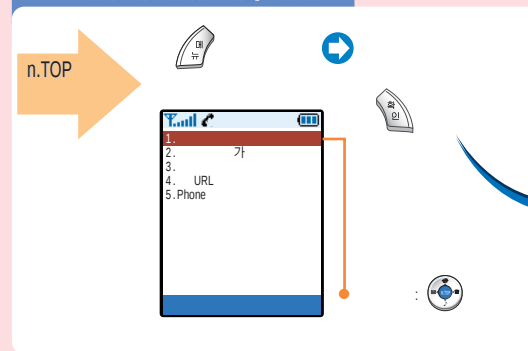 

가	가
가	가
URL	URL
Phone	n.TOP

 
n.TOP에서 사용할 E-mail 본문 미리 입력해두기

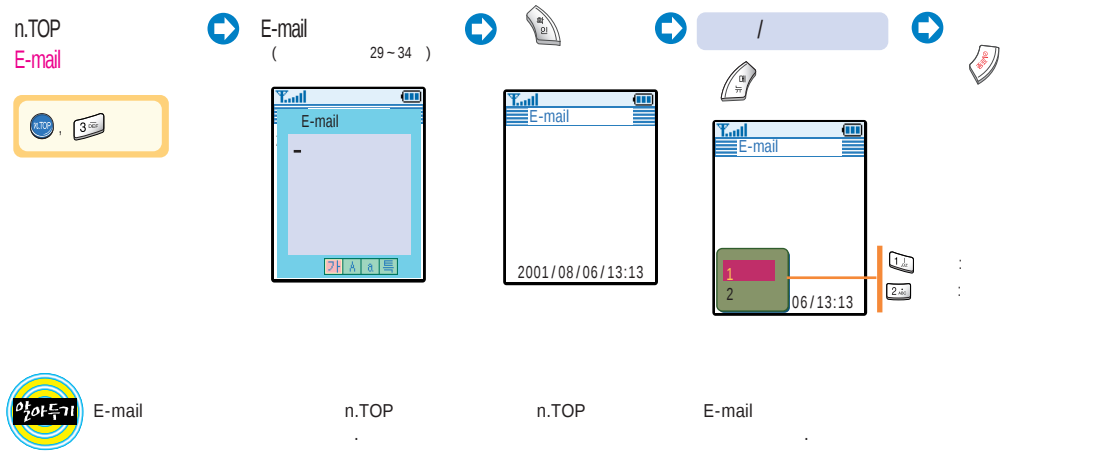


네트워크 기능 (마법사 보관함)

n.TOP 가

 GVM 다운받으려면 (예) 게임을 다운 받아 실행 할 경우

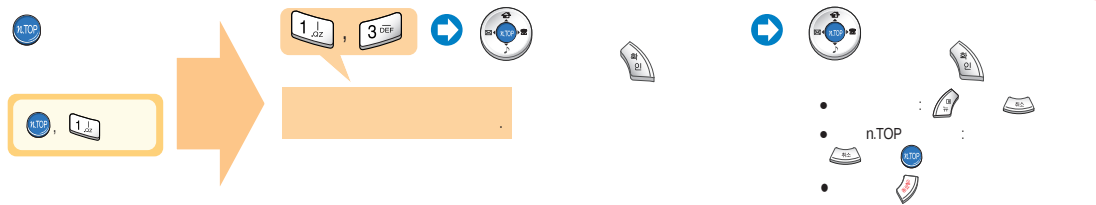

다운받은 항목을 실행하려면

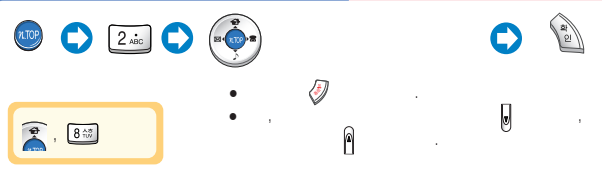 


게임(노래방) 사용중에 전화가 걸려오면!

- 1 : ()
- 2 : ()
- 3 : ()
- 4 : ()
- 5 : ()
- 6 : ()
- 7 : ()
- 8 : ()

다운받은 항목을 삭제하려면



 채팅 예약어를 수정하려면

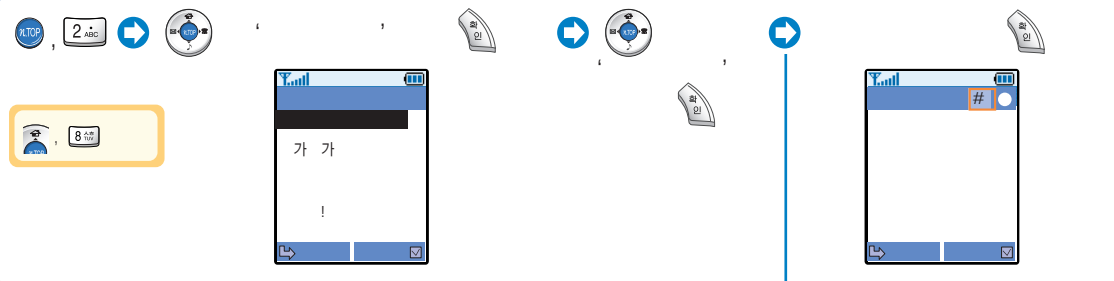


네트워크 사용중에 채팅을 하려면



(29 ~34)




 인터넷 환경을 설정하려면

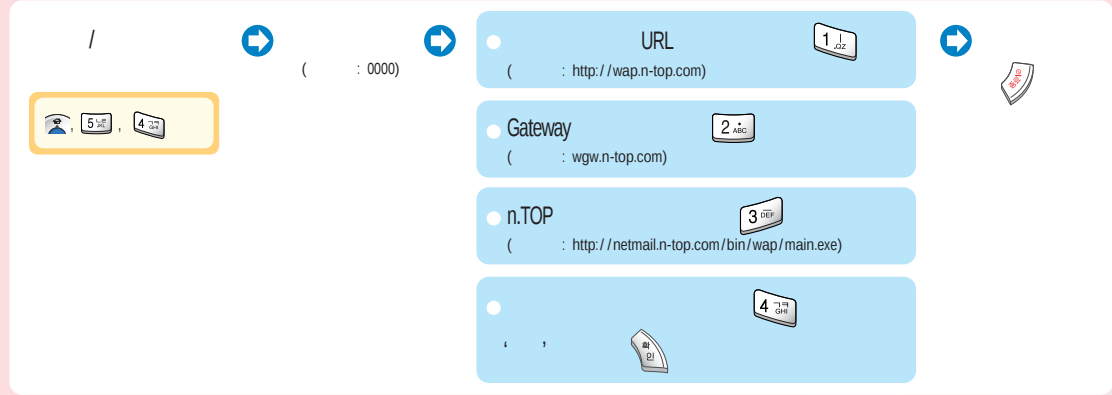

n.TOP 서비스를 이용하기 위한 환경은 제품 출하시 미리 맞추어져 있으므로 특별한 경우가 아니라면 바꾸지 마세요!

 MEMO

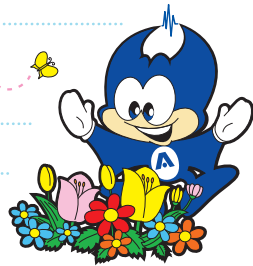

메시지 관리 기능이란?



- •

- •

•

•

- •

 
•

가




수신 메시지

수신된 문자 메시지를 확인하고 사용하려면

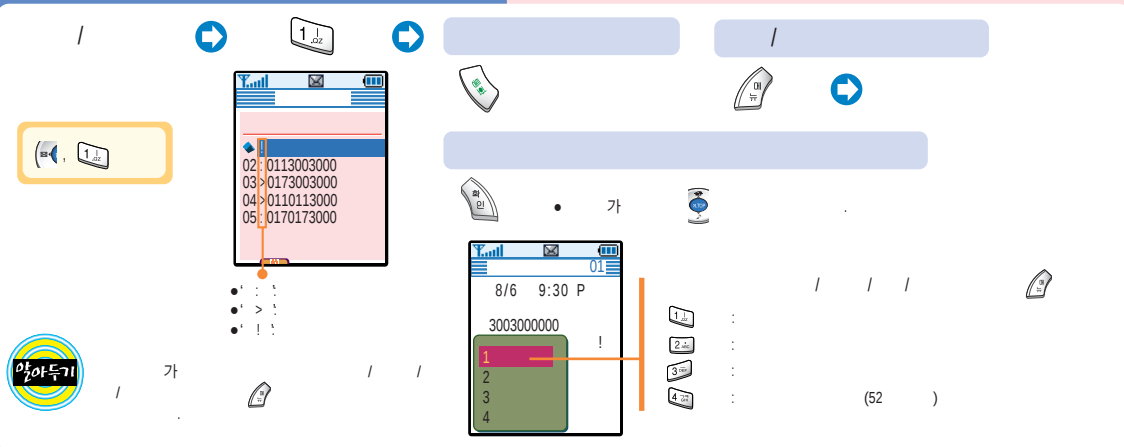

수신된 음성 메시지 정보(수신 개수/날짜/시간)를 확인하고 사용하려면

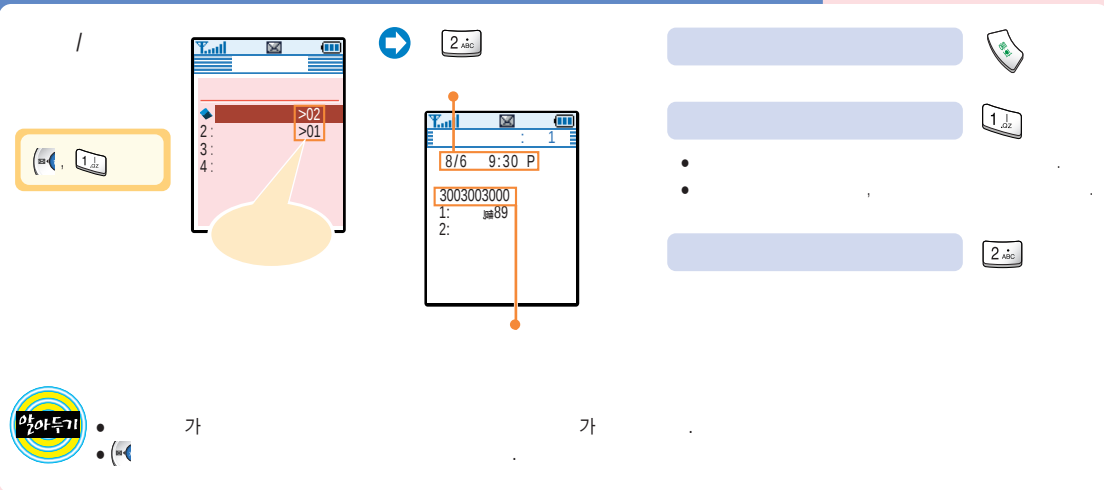 





발신 메시지 (편지 보내기)

가 80 (40 , 80)



 
새 문장 작성하기

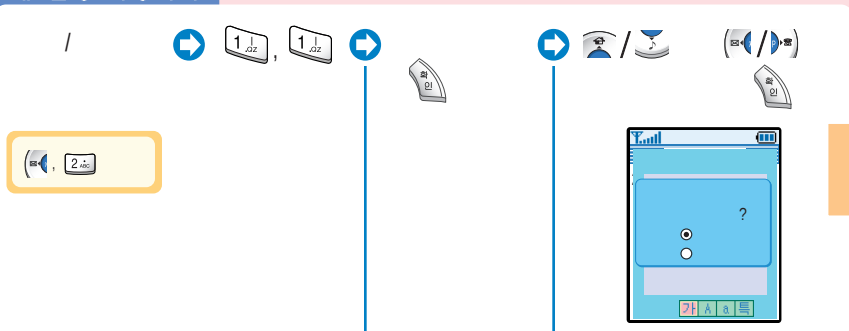


번호를 직접 입력하려면

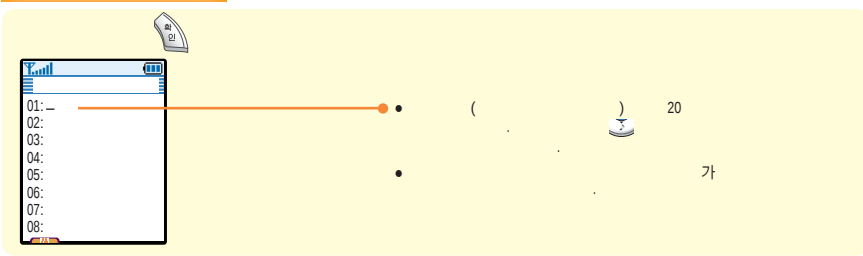 


번호를 찾아서 입력하려면

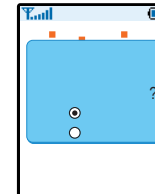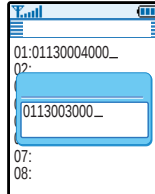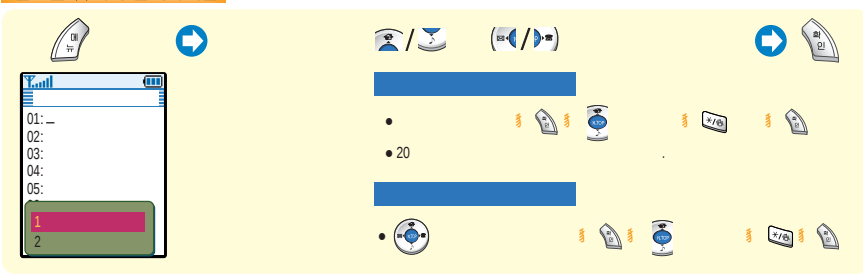   


문장보관함에 저장된 메시지를 불러오기하여 보내려면

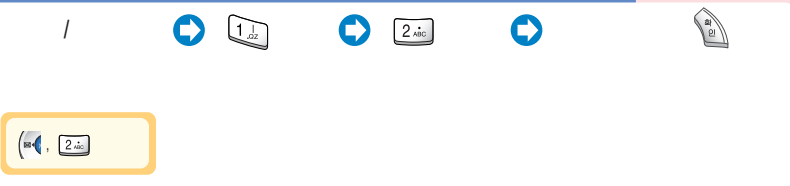 


문자 메시지 전송 속도를 조절하려면

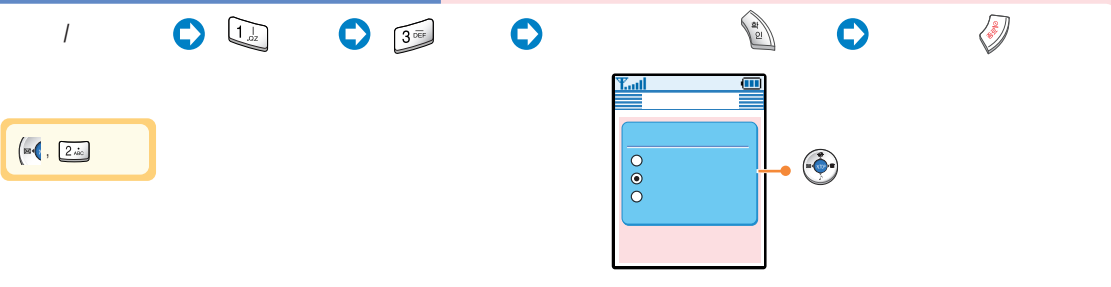 


휴대폰을 호출하려면

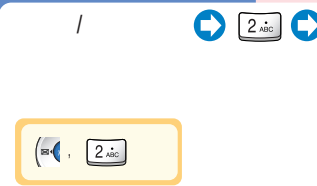 

번호를 직접 입력하려면

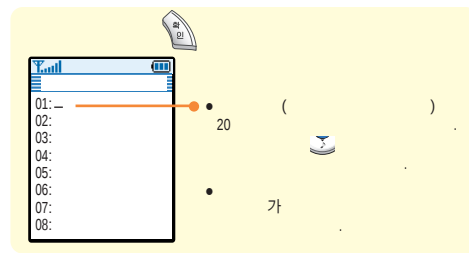 


번호를 찾아서 입력하려면

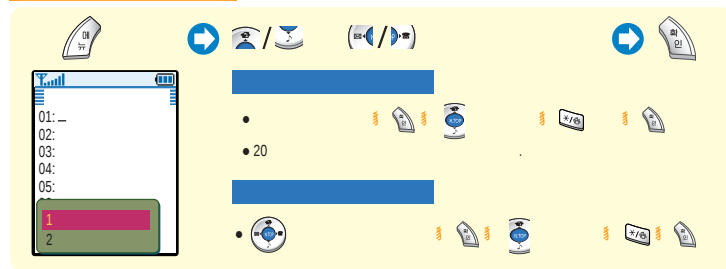 


보류된 메시지(전송에 실패한)를 확인하고 사용하려면

 5

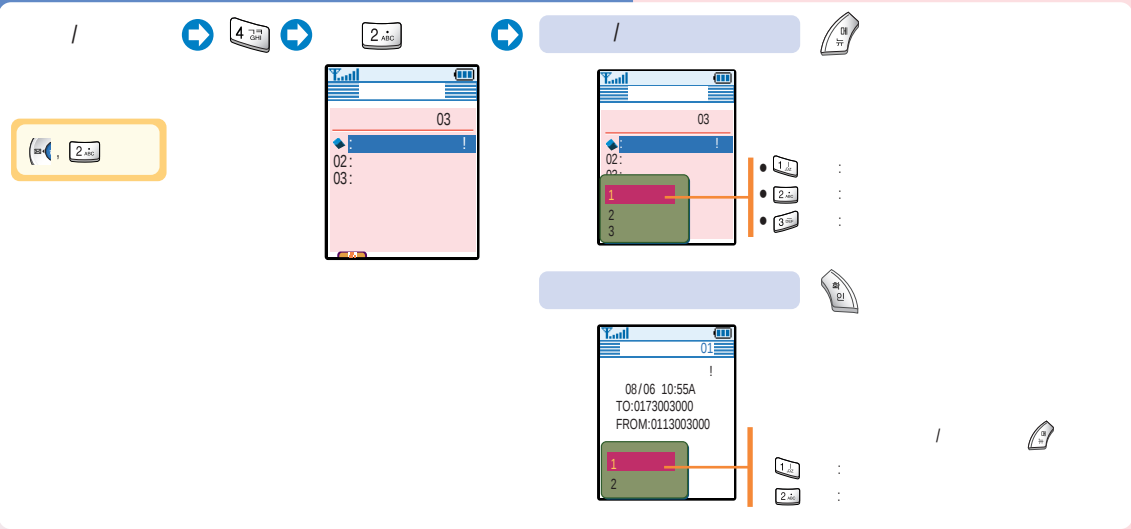

문장보관함을 사용하려면

 25

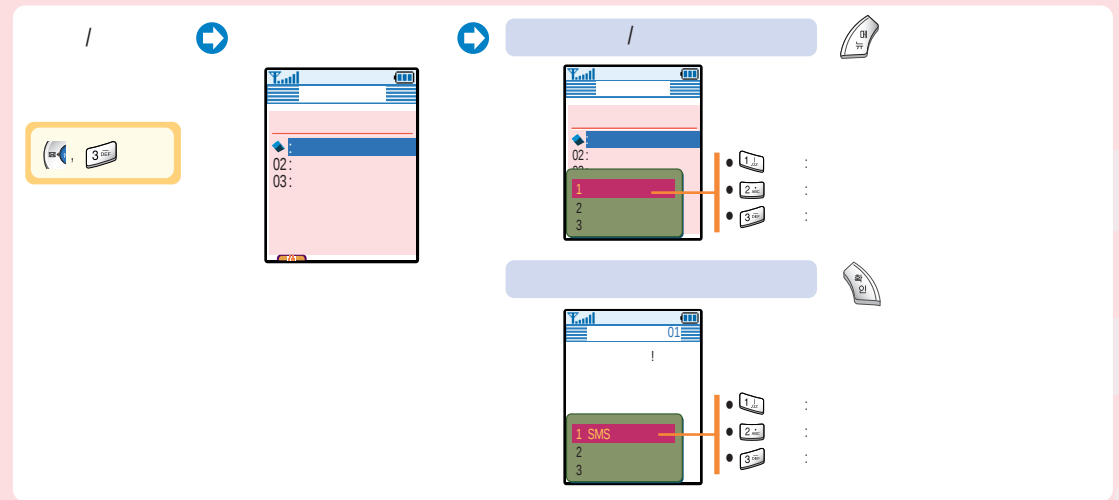




무선데이터 통신용 모뎀메뉴 사용하기




1. 무선데이터 통신용 모뎀메뉴가
2. (136)
3. 가

무선데이터 통신용 벨소리를 선택하려면

 
(24)

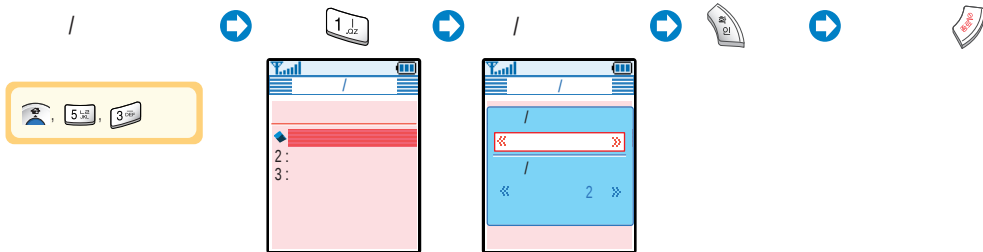

무선데이터 통신용 착신 상태를 선택하려면

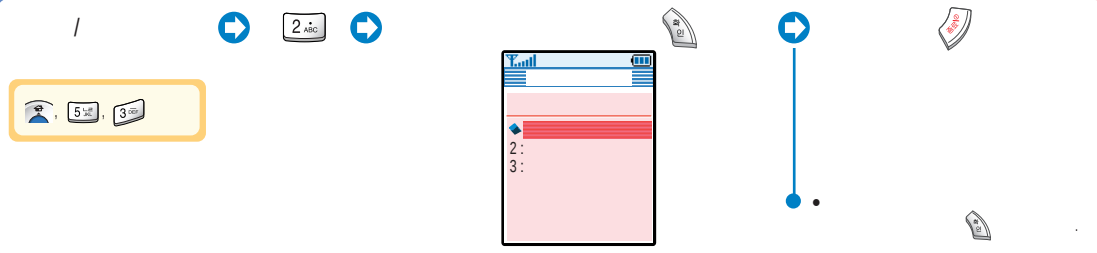 



통신 속도를 설정하려면

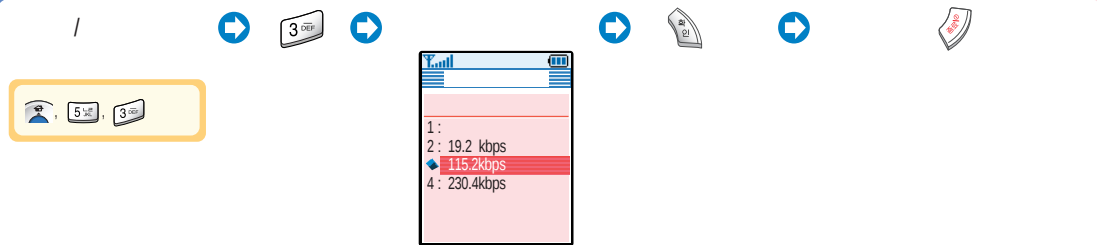 



휴대폰 관리 메뉴

  메뉴 실행 방법과 메뉴 소개

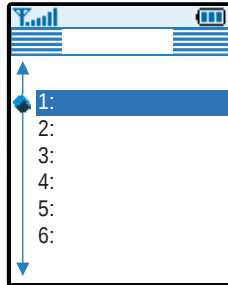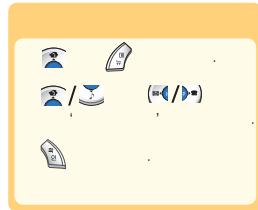

7:
8:
9:
0:
*:
#:

SID

- 112
- 113
- 114
- 115
- 116
- 117
- 118
- 119
- 119
- 120
- 120
- SID
- 121



 
비밀번호 변경하기

'0000'


가 가



(:0000)

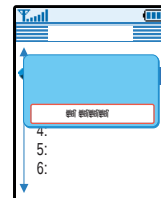


4

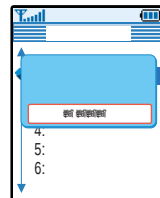 




자동다이얼 번호를 입력하고 설정하려면 (자동지역 / 국제전화)

 가
가

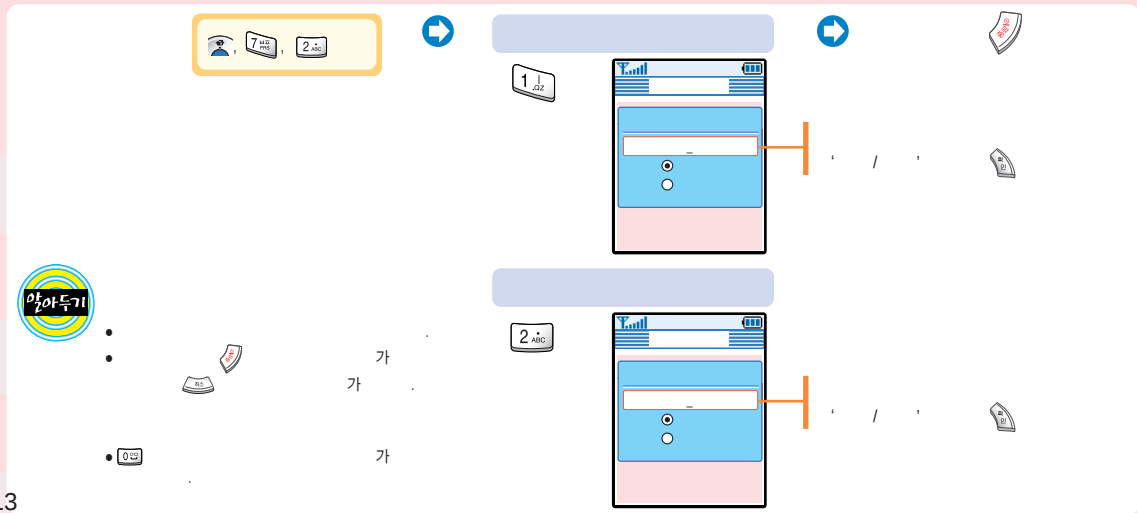


자기번호 숨김 기능

 가
'23#'

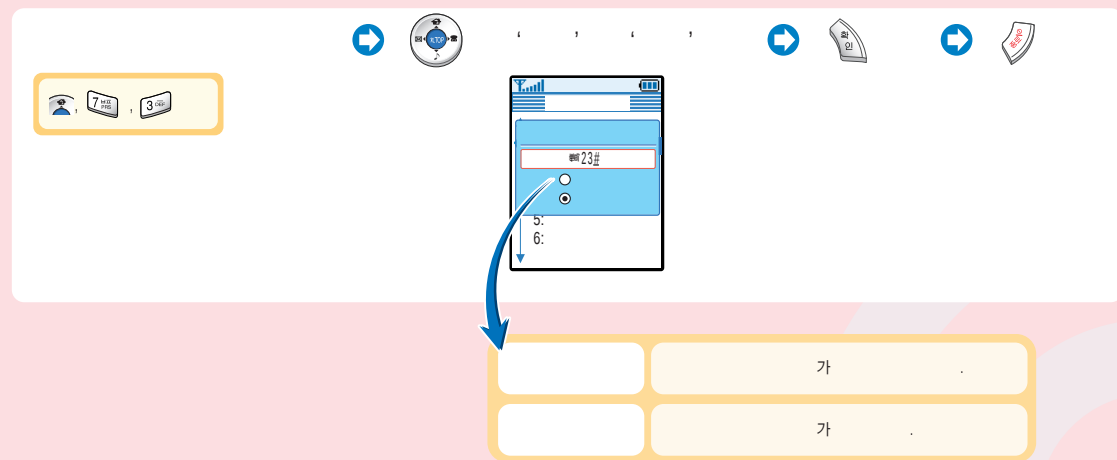




여러 가지 전화 기능의 사용 제한

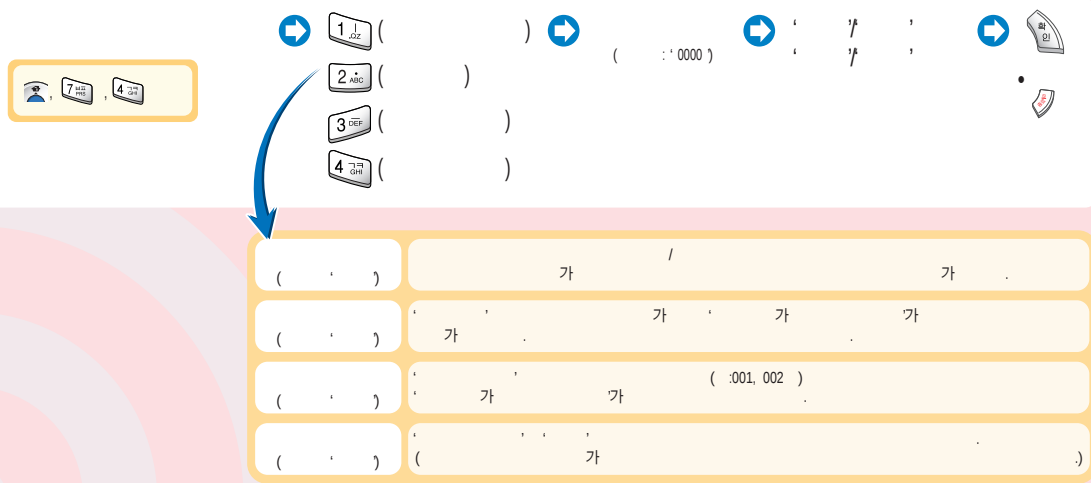 


화면의 조명 시간과 절전 조명을 선택하려면

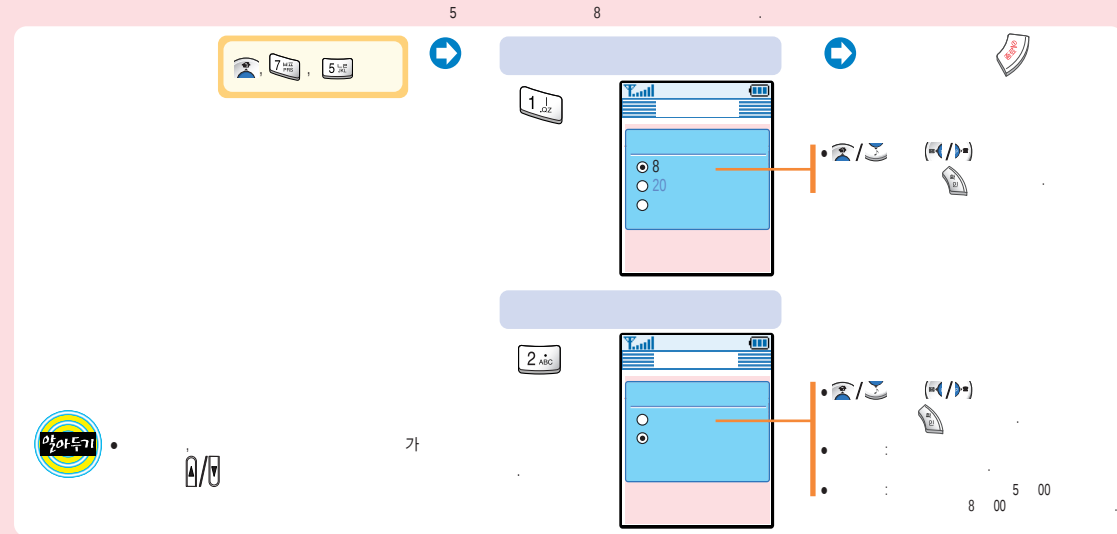 



휴대폰 화면의 밝기를 조절하려면

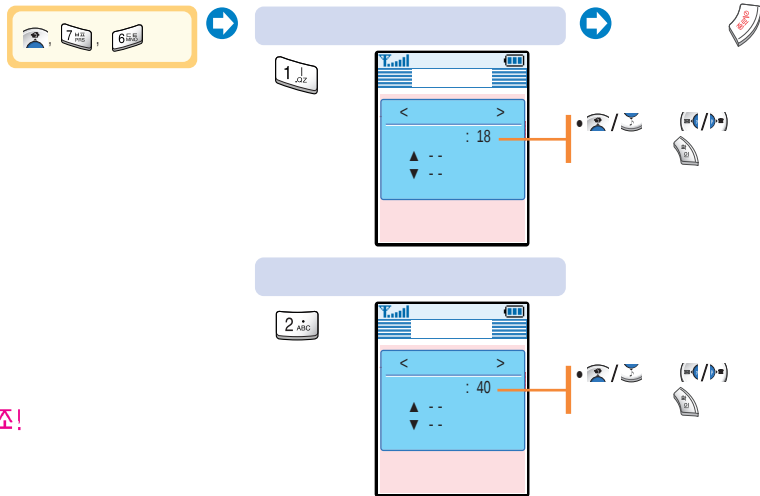 


용어 참조!

•
•



 시스템을 선택하려면

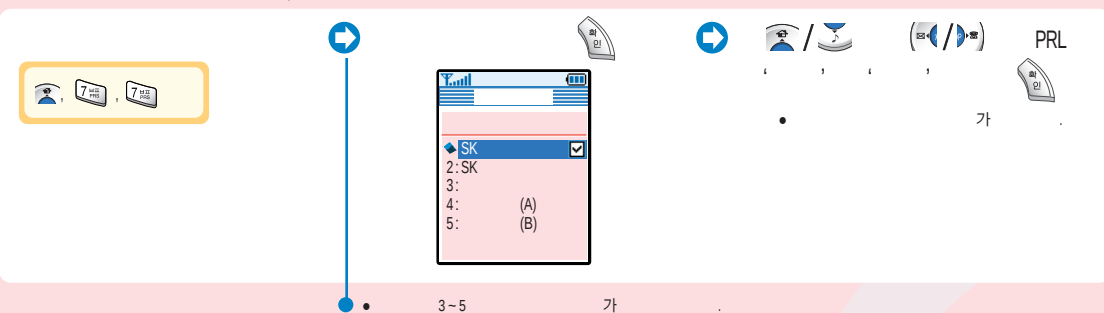

PRL이란?

Preferred Roaming List

가 가

Band

가

가



개인 확인 번호 발신 기능

가

가



수신 거부 기능



가
가
가

가

가



걸려온 전화를 받지 않으려면 를 길게 누르세요.



국제전화 로밍 서비스 기능

가

SID



초기화 기능



('0000)



('0000)



('0000)



('0000)




	('0000)	가
	가	가



다른 사람이 휴대폰을 사용할 수 없게 하려면 (잠금기능)

 
(:119, 112) 가

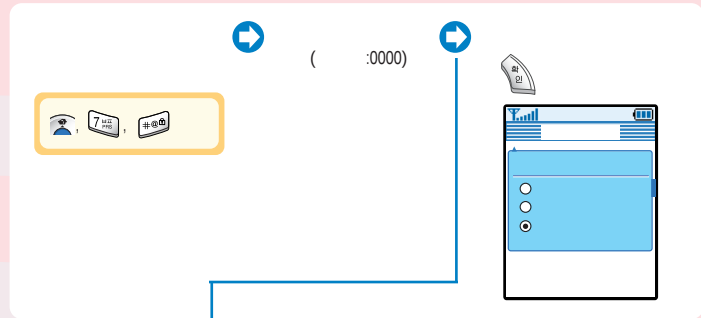

잠금 상태가 되면



 
목걸이형 이어마이크폰 사용방법

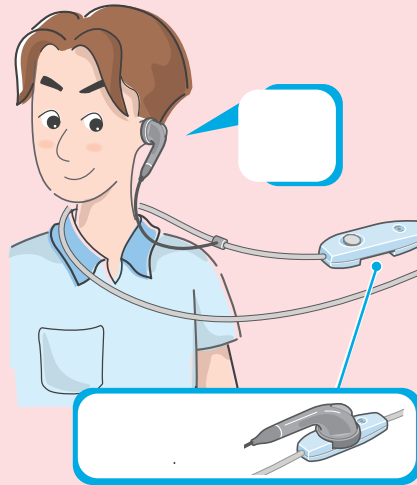


1.

3.

 2.

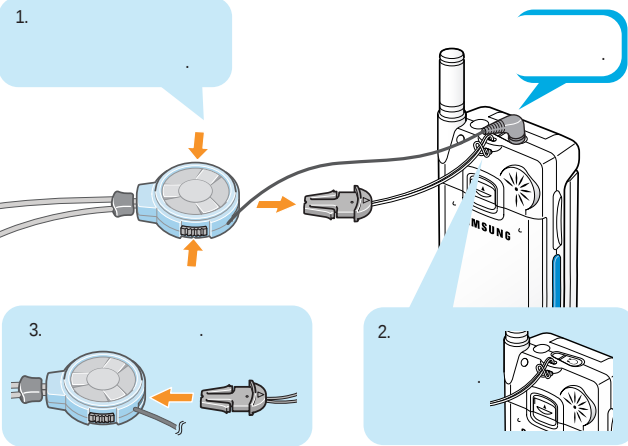

MEMO

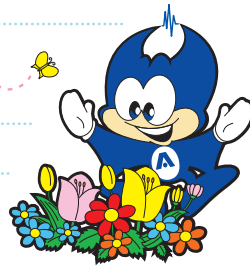 

CDMA2000이란?

CDMA2000	3	IMT 2000	
IS-95A/B	IS-95C		95A/B
	(14.4~64 kbps)	(144 kbps)	
		CDMA2000	
가	2	가	
CDMA2000			IS-95A/B
CDMA2000			

여러가지 부가서비스, 배터리에 관하여, 고장 같다고요? 안전을 위한 주의사항, 별매품, 메뉴 찾기등이 설명되어 있습니다.



 


뮤직벨 서비스 기능

n.TOP

(89)

뮤직벨을 다운 받으려면

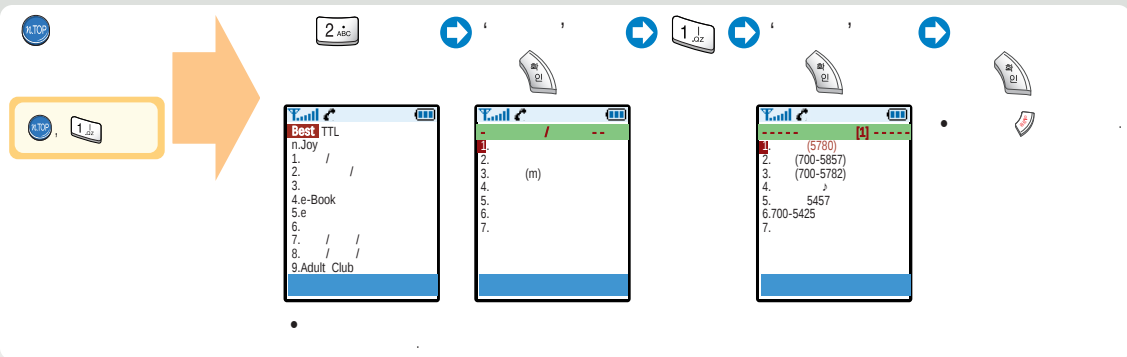

1, 2, 3, 4, 5가

 
5



700마이벨 서비스 기능


700

700마이벨 서비스로 멜로디를 다운 받으려면

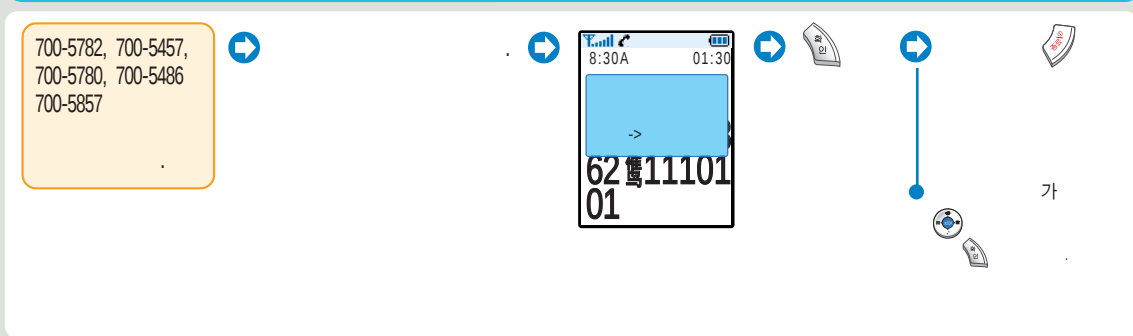


1, 2, 3

 3

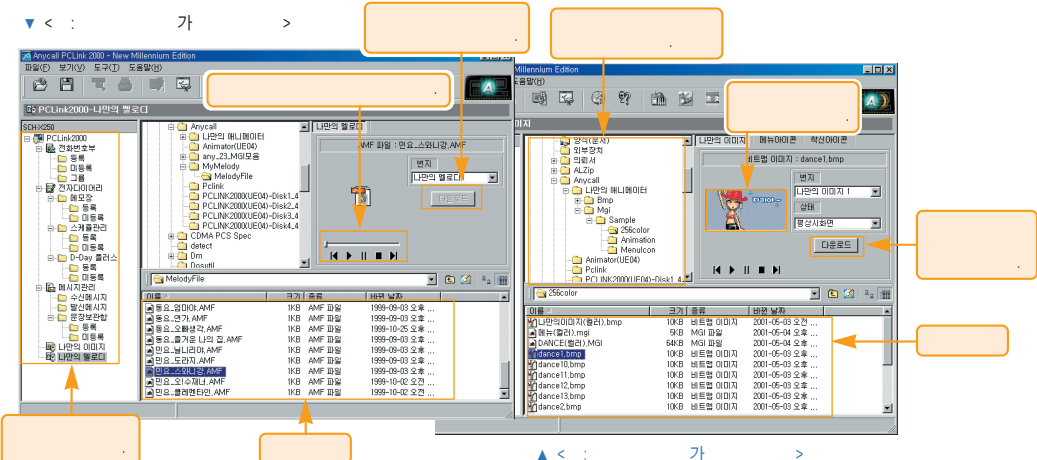

MEMO

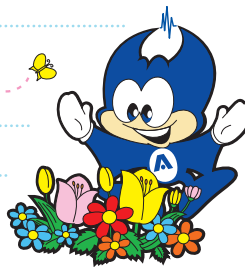 



고장 같다고요?

증상

조치

• 가 (9)

•

‘’ 가

• 가 2

•

•  ,

!

• ()

• (117)

가

•

•

• (134)

증상

조치

• 가

•

•

가

가

()

•

•

cdma2000

IS-95A/B

가

(?)

•

•

(23)

가

•

/

/

()

()

(21)

가

•

 
•



안전을 위한 주의사항

전 원 관 련

기 타

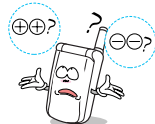

가

가

가

가

 
 
 
 
가



충전이 안되거나 휴대폰이 깨지는 경우!?


가

가

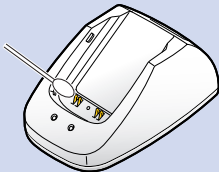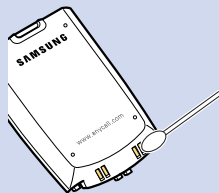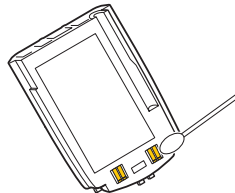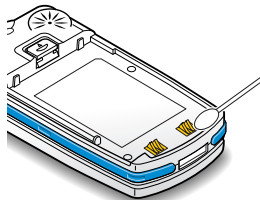


휴대폰에 이물질이 묻었어요!

 기능 메뉴 요약표

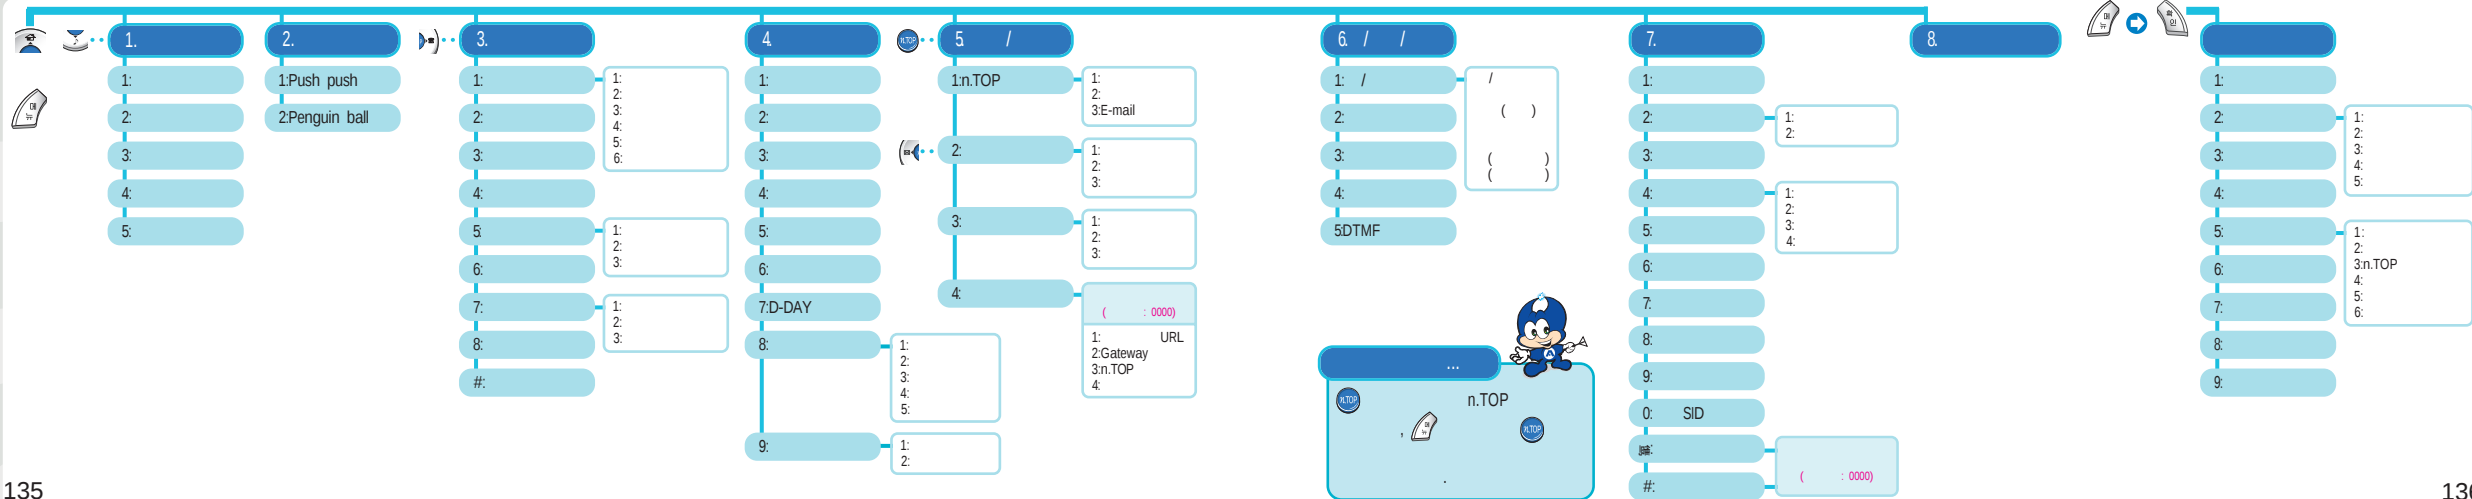

통화중 메뉴 요약표

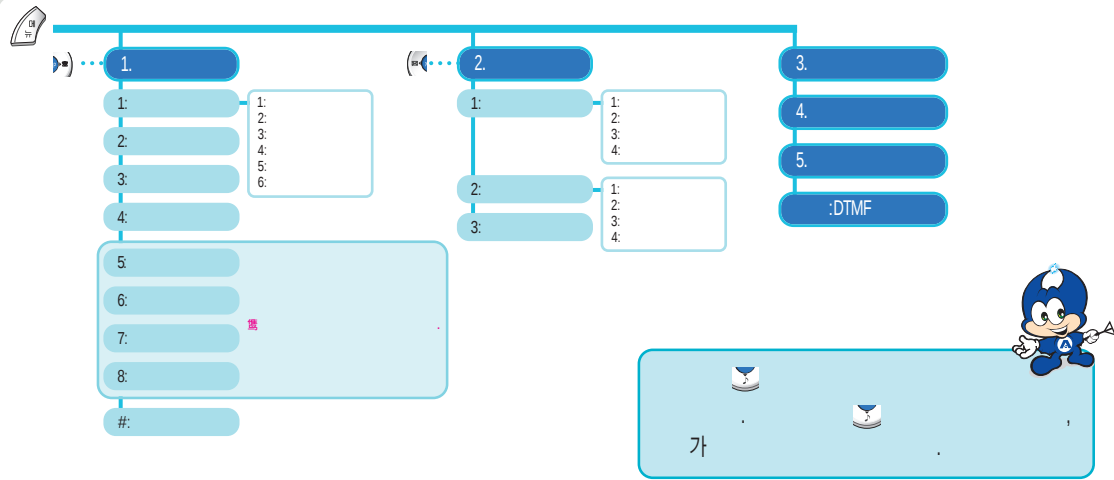 


별매품

차량용 핸즈프리유닛 (HC-U040FDK)



 
차량용 충전기 및 거치대

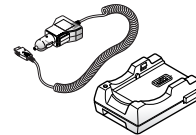


이어 마이크 폰



 
PC 링크 2000 CD-ROM

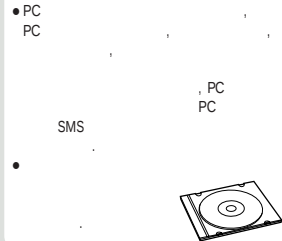

핸즈프리 거치대

 

데이터 통신 케이블 (PC-B016SBK)

 

여행용 충전기 (TCH-016KBK)



배터리



부록 규격 및 특성

(mm)

(± 1g)

(TX) : 824.64 ~ 848.37 MHz / (RX) : 869.64 ~ 893.37 MHz

: ± 300 Hz

: 86.9 (L) × 47.2 (W) × 23.3 (H)

: 86.9 (L) × 47.2 (W) × 25.8 (H)

: 90.8 g / : 107 g

300 mW

-20 ~ +50

0 % ~ 95 %

서비스에
대하여

- 2000-21)
- 1588-3366
- 14

가

1588-7285,

7



1 ()

	10		
	1		
	1		
	가		
	가	3	
		4	
		5	
	가	가	가 10%
()	가 가		가
	가		가

• : 가 ()

  SAMSUNG
삼성전자



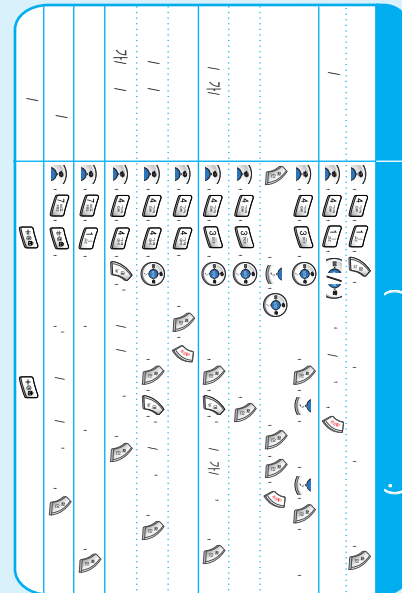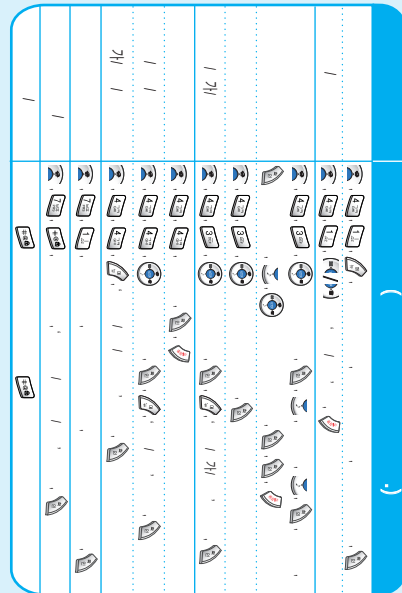

Menu Map

외국인을 위한 페이지 (for Foreigner)

The following illustration shows the start menu structure available and indicates the number assigned to each option.

To access menu mode, press the or key.

1. Music box ()

- 1-1. Select bell
- 1-2. Select melody
- 1-3. Select music bell
- 1-4. Select my bell
- 1-5. My own melody

2. Game

- 2-1. Push push
- 2-2. Penguin ball

3. Phonebook ()

- 3-1. Search a number (1. Recall by location/2. Recall by name/
3. Recall by number/4. Recall by group/
5. Recall by time/6. Last of search)
- 3-2. Last numbers dialed
- 3-3. Last numbers received
- 3-4. Store numbers in memory
- 3-5. Caller alert (1. Edit number/2. Set number/3. Icon list)
- 3-6. Group editing
- 3-7. Number plus (1. Save number/2. Select ring type/
3. Delete number)
- 3-8. Delete all
- 3-#. Own number display

Menu Map (Continued)

4. Organizer

- 4-1. Morning call
- 4-2. Alarm (1. Alarm 1/2. Alarm 2)
- 4-3. Scheduler
- 4-4. Memo
- 4-5. Calculator
- 4-6. World time
- 4-7. D-DAY plus
- 4-8. Unit measurement (1. Length/2. Weight/3. Volume/
4. Width/5. Temperature)
- 4-9. Timer (1. Call time display/2. Set time & date)

5. Internet/Messages

- 5-1. n.Top (1. n.Top Connect/2. Downloaded items/3. Write text for E-mail)
- 5-2. Messages (1. Message received/2. Message to send/
3. Write preset message)
- 5-3. Modem setup (1. Select ring type/2. Automatic receiving setup/
3. Set transmission rate)
- 5-4. Internet preference setup (password required)

- Pressing  enters the n.Top menu, and pressing and holding  down connects the n.Top service.
- Pressing  enters the Messages menu.



6. Alert type and volume

- 6-1. Alert type (Bell and Melody/Vibration/Lamp/Vibration and Lamp/
Bell and Vibration/Bell (increase)/Bell(decrease))
- 6-2. Ring volume
- 6-3. Connect tone
- 6-4. Disconnect tone
- 6-5. DTMF tone length

7. Personal information

- 7-1. Change password (password required)
- 7-2. Auto dial (1. Area code/2. International code)
- 7-3. Hide my number
- 7-4. Call barring (1. Privacy/2. Incoming calls/3. International/
4. Line identification services)
- 7-5. LCD Backlight setup (1. Backlight time setup/2. Backlight setup)
- 7-6. LCD Contrast
- 7-7. System select
- 7-8. PIN check
- 7-9. Select rejecting method
- 7-0. SID Select
- 7-*. Reset(Only Function/All data)
- 7-#. Lock phone - requires to enter the password
(Auto lock/Manual lock/Cancel)

Customizing the Start Menu

You can customize the start menu items by the My phone menu. Press the  key. You will be accessed to the start menu with the My phone menu.

My phone (No number mapped)

- 1. Set start menu
- 2. Set menu screen (1. Set Menu screen/2. Changing Menu icon/
3. Changing Menu order/4. Pop-up menu box/5. Icon list)
- 3. Set my name
- 4. Scroll text
- 5. Animation (1. Standby mode/2. Incoming call/3. n.Top connection/
4. Power-on/5. Power-off/6. Delete image)
- 6. Delete a start menu
- 7. Reset start menu
- 8. Change external (Clock on the external LCD)
- 9. Dial number size (Big * /Small)

Quick-Converting to Manner Mode

In addition, with a touch of a key, you can set the phone into the manner mode at any time. Press and hold down .

In-Call Options

To access these functions during a call, press the  key.

1. Phonebook ()

- 1-1. Search a number (1. Recall By location/2. Recall By name/
3. Recall By number/4. Recall By group/
5. Recall By time/6. Last of search)
- 1-2. Last numbers dialed
- 1-3. Last numbers received
- 1-4. Store numbers in memory
- 1-5. Caller alert
- 1-6. Group editing (Unavailable During a Call)
- 1-7. Number plus
- 1-8. Delete all
- 1-#. Own number display

2.Messages (())

- 2-1. Message received (1. Text messages/2. Voice messages/
3. Message alert/4. Message display)
2-2. Message to send (1. Write message/2. Page phone/
3. Send name card/4. Outbox)
2-3. Write preset messages

3. Switching microphone off(on)

4. Muting (Sending) key tone

5. Sending own number

. Sending DTMF dialing

Amplifying the transmitted signal

Press and hold  during a call.

To set this feature off, press and hold  once again.

Or, this feature will be automatically off when you end the call.

Function	Press in sequence
Ring Type	, , (Choose) , , , , , , , , , , ,
Alert Type	, , (Choose) , , , , , , , , , , ,
Ring Volume	, , (Choose) , , , , , , , , , , ,
Earpiece Volume	<i>During Conversation</i> , (Adjust)
Key Tone Volume	, (Adjust)
Call Last Numbers Dialed	, , (Choose) , , , , , , , , , ,
Store in Memory	, , (Choose) , , , , , , , , , ,
Scan Memory	, , (Choose) , , , , , , , , , ,
Dial by Memory location	001+019: Press and hold the last digit only 000/010-999: Press the first two digits briefly, and hold the last digit
Customizing the Start Menu	, , (Choose a Menu) , (Choose a function) , (Choose a location) , (Choose a function) , (Choose a location) , (Choose a function) , (Choose a location) , (Choose a function) , (Choose a location) , (Choose a function) , (Choose a location)



SCH-X250 Quick Reference Card	
Function	Press in sequence
Ring Type	[1-9], [Choose], [Choose], [Choose]
Alert Type	[6-9], [1-9], [Choose], [Choose]
Ring Volume	[6-9], [2-9], [Adjust], [Adjust]
Earpiece Volume	<i>During Conversation</i> [Adjust] [Adjust]
Key Tone Volume	[Adjust] [Adjust]
Call Last Numbers Dialed	[Adjust], [Choose], [Choose]
Store in Memory	[Adjust], Name, [Number/Location/E-mail/Group/Memo], [Adjust]
Scan Memory	[Adjust] Hold, [Choose], [Adjust]
Dial by Memory location	001-009: Press and hold the last digit only 000/010-999: Press the first two digits briefly, and hold the last digit
Customizing the Start Menu	[Adjust], [Adjust], [Adjust] (Choose a Memo), [Adjust] (Choose a function), [Adjust] (Choose a location), [Adjust] (Choose a icon)



