

Samsung Gravity™

PRODUCT SPECIFICATIONS

FEATURES

- High Speed Messaging Slider
- Pull Out QWERTY Keyboard
- Web-Enabled (t-zones)
- 1.3 Megapixel Digital Camera
- Camcorder
- Multiple Messaging Options (Text Messaging, Picture Messaging, Video Messaging, Email, IM)
- Built-in Bluetooth® Wireless Technology - Supports profiles: IM, mono & stereo headset, hands-free, serial port, object push (vCard only), file transfer, basic print, phonebook access
- Organizer – Alarm, Calculator, Calendar, Notes, Task List
- microSD™ (up to 4GB) Expansion Memory (card purchased separately)
- Advanced Speech Recognition
- 72 Note Polyphonic Ringtones
- Power ON/OFF Key with Keylock
- Volume Up/Down Keys
- Unread Message Indicator
- TTY Capable
- Graphic Format Support (PNG, JPEG, GIF)
- Audio Format Support (MP3, MIDI, AAC/AAC+)
- Video Format Support (MPEG4, H.263)
- MegaTones and HiFi Ringers
- myFaves® Capable
- Edge Highspeed Data
- GPRS
- Mobile Backup
- Task List
- USB Interface
- Games
- Music and Video Player
- Video Capture/Playback
- Wallpaper

TECHNICAL SPECIFICATIONS

- GSM 850, 900, 1800, 1900
- Dimensions: 4.53" x 2.07" x .70" (800mAh Li-Ion standard battery)
- Weight: 4.3 ounces (standard battery)
- Display: 176 x 220 Pixels, 262K TFT
- Internal Memory: 60MB
- External Memory: Up to 4GB microSD™ card
- Talk Time: Up to 6 hours (standard battery)
- Standby Time: Up to 300 hours (standard battery)
- Hearing Aid Compatibility = M3

MEMORY

- Internal Phonebook
 - Contact storage up to memory capacity (1,000 entries and up to 3 numbers for each entry)
 - Can store one picture with each entry
 - One-, Two- and Three-touch Dialing
- Last 90 Incoming, Outgoing and Missed Call Logs

CALL MANAGEMENT AND SERVICES

- Caller ID*
- Voice Mail*
- Call Forwarding*
- Call Waiting*
- Three-Way Calling*
- Call History
 - All Calls
 - Missed
 - Outgoing
 - Incoming
 - By Caller
- Speed Dial
- Auto Redial

- Voice Memo
- Vibrate Mode
- Missed Call Indicator
- Phonebook
- Photo Caller ID
- Speakerphone
- Speed Dial
- Vibrating Alert
- Voice Dialing

ACCESSORIES

- Standard Battery
- Car Power Charger
- Travel Charger
- Leather Case
- USB Data Cable
- Bluetooth® Car Kits
- Bluetooth® Headsets
 - Mono
 - Stereo
- Hands-Free Headset
- microSD™ Card

ORDER

Genuine Samsung Accessories
samsungwireless.com
 1-800-SAMSUNG

STANDARD PACKAGE CONTENTS

- Samsung Gravity™ Phone
- Battery & Charger
- Hands-Free Headset
- SIM Card
- Start Guide
- User Guide
- T-Mobile Services Guide
- Terms & Conditions



Samsung mobile phones have been rated number one in brand loyalty by consumers seven years in a row, according to Brand Keys, a leading independent authority on brand loyalty.

“number one in brand loyalty seven years in a row”

*Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Other conditions and restrictions apply. See carrier for more information. All talk and standby times are approximate. Battery performance depends on network configuration, signal strength, operating temperature, features selected, and voice, data, and other application usage patterns. Internet content/services designed for mobile devices.

**The Samsung Gravity™ (SGH-t459) supports Bluetooth® Profiles for wireless headsets, hands-free accessories, and object exchange. Both handset must be compatible with object exchange profile. Copyrighted material cannot be transferred.

© 2008 Samsung Telecommunications America, LLC ("Samsung"). Samsung is a registered trademark and Gravity™ is a trademark of Samsung Electronics America, Inc. and its related entities. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated.

Samsung Gravity™

SGH-t459

INFORMATION GUIDE

HIGH SPEED MESSAGING WITH SLIDE OUT QWERTY KEYBOARD

Stay in touch instantly with high-speed messaging. The slide out QWERTY keyboard on the Gravity makes messaging even faster. Text, Voice SMS, IM, MMS and access your personal email!

EMAIL CLIENT & MP3 PLAYER

The Gravity's built-in email client lets you access your email on-the-go, such as AIM®, AOL® or Yahoo!®. You can also access POP3 email accounts such as Gmail™. And you'll never miss a beat with the Gravity's built-in MP3 player. Take your songs with you wherever you go and rock on!

1.3 MEGAPIXEL CAMERA & CAMCORDER

Capture and share photographs with family and friends with the Gravity's 1.3 megapixel camera. Want to get closer? You can with its 4x digital zoom. Camcorder features video, long video and night shot. Personalize an audio postcard and send your pictures to family and friends!

WEB-ENABLED

Access the web right from your handset, so that you can stay up-to-date on the latest gossip, weather, news, sports scores and more. Landscape view let's you see the full story. You'll never miss your computer, ever.



SAMSUNG TELECOMMUNICATIONS AMERICA
 1301 E. Lookout Drive | Richardson, TX 75082 | 1.800.SAMSUNG

<https://training.samsungtelecom.com>
www.samsungmobileusa.com



password: myfaves



“number one in brand loyalty seven years in a row”

*Many of the services and features described above are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Other conditions and restrictions apply. See carrier for more information. All talk and standby times are approximate. Battery performance depends on network configuration, signal strength, operating temperature, features selected, and voice, data, and other application usage patterns. Internet content/services designed for mobile devices.

**The Samsung Gravity™ (SGH-t459) supports Bluetooth® Profiles for wireless headsets, hands-free accessories, and object exchange. Both handset must be compatible with object exchange profile. Copyrighted material cannot be transferred.

© 2008 Samsung Telecommunications America, LLC ("Samsung"). Samsung is a registered trademark and Gravity™ is a trademark of Samsung Electronics America, Inc. and its related entities. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated.

Samsung Gravity™

MENU NAVIGATION

1. AUDIO POSTCARD

- 1: General Settings
- 2: Choose Frame
- 3: Delay Timer
- 4: Lighting
 - 1: Auto
 - 2: Daylight
 - 3: Incandescent
 - 4: Fluorescent
 - 5: Cloudy
- 5: Effects

2. CALL RECORDS (UP NAVIGATION KEY IS SHORTCUT)

- 1: All Calls
- 2: Missed Calls
- 3: Incoming Calls
- 4: Outgoing Calls
- 5: Delete All
- 6: Call Time

3. T-ZONES

- 1: Home
- 2: Enter URL
- 3: Bookmarks
- 4: Saved Pages
- 5: History
- 6: Browser Settings

4. IM AND E-MAIL

- 1: IM
 - 1: AIM
 - 2: ICQ
 - 3: Windows Live
 - 4: Yahoo!
- 2: E-Mail
 - 1: AIM
 - 2: AOL
 - 3: Yahoo!
 - 4: More Accounts

5. MESSAGES

- 1: Create New
 - 1: Text Message
 - 2: Picture Message
 - 3: Audio Postcard
- 2: Inbox
- 3: Drafts
- 4: Sentbox
- 5: Templates
 - 1: Text Templates
 - 2: Picture Message Templates
- 6: Voice Mail
 - 1: Voice Server Number

7: Management

- 1: Messages Settings
- 2: Delete All
- 3: Memory Status
- 8: Broadcast Messages

6. FUN & APPS

- 1: Files
 - 1: Sounds
 - 2: Images
 - 3: Icons
 - 4: Videos
 - 5: Music
 - 6: Other Files
 - 7: Memory Card
 - 8: Memory Status
- 2: Games
- 3: Music Player
- 4: Camera
 - 1: Take and Send
 - 2: Record Video
 - 3: Photos
 - 4: Videos
 - 5: My Album
- 5: Voice Recorder
- 6: Organizer
 - 1: Alarm
 - 2: Calendar
 - 3: Tasks
 - 4: Notes
 - 5: Calculator
 - 6: Tip Calculator
 - 7: World Time
 - 8: Unit Conversion
 - 9: Timer
 - 10: Stopwatch
- 7: Image Editor

7. HELP

8. PHONEBOOK

- 1: Add New Contact
- 2: Contact List
- 3: Groups
- 4: Speed Dial
- 5: Block List
- 6: Management
 - 1: View Contacts
 - 2: Default Saving
 - 3: Copy All To
 - 4: Sort by Contacts
 - 5: Delete All
 - 6: Memory Status
- 7: Own Number
- 8: FDN List

9. SETTINGS

- 1: myFaves Settings
 - 1: Display
 - 2: Menu Style
 - 3: myFaves Icons
 - 4: Refresh Contacts
 - 5: About myFaves
- 2: Sound Settings
 - 1: Incoming Call
 - 2: Message Tone
 - 3: Keypad Tone
 - 4: Power-on/off Tone
 - 5: Slide Tone
 - 6: Extra Tones
- 3: Display Settings
 - 1: Wallpaper
 - 2: Theme
 - 3: Home Screen
 - 4: Info Display
 - 5: Dialing Display
 - 6: Greeting Message
 - 7: Backlight
- 4: Phone Settings
 - 1: Time & Date
 - 2: Language
 - 3: Airplane Mode
 - 4: Auto Key Lock
 - 5: USB Mode
 - 6: Security
 - 7: Memory Status
 - 8: Messaging Key
- 5: Bluetooth
 - 1: Turn Bluetooth on/off
 - 2: My Devices
 - 3: My Visibility
 - 4: My Phone Name
 - 5: Security Modes
 - 6: Features
 - 7: Help
- 6: Call Settings
 - 1: Answer Options
 - 2: Auto Redial
 - 3: Show My Number
 - 4: Call Forwarding
 - 5: Call Barring
 - 6: Call Waiting
 - 7: Network Selection
- 7: Software Update

Get to know the Samsung Gravity™

BLUETOOTH® SETUP

Your phone comes with Bluetooth® technology, which is a wireless technology that enables a data connection between your phone and a Bluetooth® wireless headset.

Prepare a Bluetooth® wireless headset

To pair your phone with a Bluetooth® headset, make sure that your headset is fully charged and that you put the headset into pairing mode. See your Bluetooth® headset's manual for more information.

Turn on the Bluetooth® feature and pair with a headset

1. From the main screen, select **Menu**.
2. Scroll to and select **Settings**.
3. Scroll to and select **Bluetooth®**.
4. Select **Turn Bluetooth® On**. Your phone turns on Bluetooth® and searches for your Bluetooth® headset.
5. Select the headset.
6. Type the PIN if required and select **OK**.

USE CAMERA/CAMCORDER & PICTURE MESSAGING

Send Picture Messages

1. Press the **Camera Key** on the right side of the phone to open the camera.
2. Frame the subject.
3. Press the **OK Key** to take the picture.
4. Select one of the following:
 - **Yes** to send your picture to **My Album** where you can access your pictures online.
 - **Options > Send To** to send to another destination. Select **Recent recipients**, **Phonebook**, or **New recipient**. Select the contact(s) or type the phone number and select **Add**.
5. Select **Send**.

SEND AUDIO POSTCARD

1. From the main screen, scroll to the myFavesSM contact and press the **OK Key**.
2. Scroll to and select **Audio Postcard**.
3. Press the **Left** or **Right Navigation Key** to scroll to the desired picture frame.
4. Frame the subject.
5. Press the **OK Key** to take the picture.
6. Select **Add voice** if desired to record a voice message.
7. Select **Stop** when done.
8. Select **Send**.

EMAIL & IM

Your phone comes with email functionality so you can keep connected while you are on the go with Yahoo!®, AOL®, and other popular email providers. Setting up email on your phone is easy—all you need to do is enter your email address and password and you will automatically receive emails from your email account directly on your phone. You can check email, send, reply, and even delete emails from your inbox so you can keep in touch whenever you want.

Sign In

1. From the main screen, select **Menu**.
2. Scroll to and select **IM and Email**.
3. Scroll to and select **Email**.
4. At the Welcome screen, select **Next**.
5. Select the email provider.
6. If required, read the terms of use and select **I Agree**.
7. Type your username and password.
8. Select **Sign In**.

Read email messages

1. From the main screen, select **Menu**.
2. Scroll to and select **IM and Email**.
3. Scroll to and select **Email**.
4. Select the email account.
5. Sign in to your account.
6. Scroll to and select the message to read.

Send instant messages

1. From the main screen, scroll to the myFavesSM contact and press the **OK Key**.
2. Scroll to and select **Send IM**.
3. Select **AIM®**, **ICQ**, **Windows Live™**, or **Yahoo!®**.
4. Sign in to communicate with your myFavesSM contact.

EDIT YOUR WAVE

Wave hello to your contact

1. From the main screen, scroll to the myFavesSM contact and press the **OK Key**.
2. Scroll to and select **Wave Hello**.

Edit your wave

1. From the main screen, scroll to the myFavesSM contact and press the **OK Key**.
2. Select **Options > Customize Wave**.
3. Select **Create custom wave**, **Change to a kiss**, **Change to a hug**, or **Change to wave**.