

Samsung EXHIBIT™ II 4G

exclusively at T-Mobile

P O R T A B L E Q U A D - B A N D
M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters: Customer Care Center:

1301 E. Lookout Drive 1000 Klein Rd.

Richardson, TX 75082 Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: <http://www.samsung.com>

©2011 Samsung Telecommunications America, LLC. Samsung is a registered trademark of Samsung Electronics Co., Ltd.

GH68-35618A

Printed in USA

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsung.com/us/support

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

ACCESS® and NetFront™ are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Google, the Google logo, Android, the Android logo, Android Market, Gmail, Google Mail, Google Maps, Google Talk, Picasa, and YouTube are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

Swype and the Swype logos are trademarks of Swype, Inc. © 2010 Swype, Inc. All rights reserved.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com>.

Dynamic Noise Suppression from Audience

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

How Does It Work?

Based on the intelligence of the human hearing system, the technology:

- Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise - so the person you're calling hears only your voice, without disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

Disclaimer of Warranties; Exclusion of Liability,

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started5

Understanding this User Manual	5
Battery Cover	6
Battery	9
Extending Your Battery Life	11
Power Savings	12
Initial Phone Configuration	12
Switching the Phone On or Off	13
Locking and Unlocking the Phone	13
Creating a New Google Account	14
Signing into Your Google Account	14
Retrieving your Google Account Password ..	15
Voice Mail	15
Visual Voicemail	16
Task Manager	16

Section 2: Understanding

Your Phone17

Features of Your Phone	17
Front View	18
Back View of Your Phone	19
Phone Display	19
Status Bar	20
Function Keys	24
Home Screen	26
Screen Navigation	28
Menu Navigation	30
Applications	32
Customizing the Screens	39

Section 3: Memory Card45

Using the SD Card	45
SD card Overview	45

Section 4: Call Functions

and Contacts List 48

Displaying Your Phone Number	48
Making a Call	48
Ending a Call	48
Making Emergency Calls	49
Dialing Options	50
Answering a Call	50
Managing Reject Calls	51
International Calls	52
Pause Dialing	52
Wait Dialing	52
Redialing the Last Number	53
Speed Dialing	53
Wi-Fi Calling	54
In Call Options	56
Logs Tab	60

Section 5: Entering Text 63

Text Input Methods	63
Selecting the Text Input Method	63
Entering Text Using Swype	64
Using the Samsung Keypad	67
Using XT9 Predictive Text	70

Section 6: Contacts 72

Accounts	72
Contacts List	72
Finding a Contact	75
Contact List Options	77
Contact Menu Options	78
Contact Entry Options	78
Joining Contact Information	79

Sending a Namecard	80
Copying Contact Information	81
Synchronizing Contacts	82
Display Options	82
Adding more Contacts via Accounts and Sync	83
My Profile	84
Additional Contact Options	84
Groups	85
The Favorites Tab	87

Section 7: Messaging88

Types of Messages	88
Creating and Sending Messages	88
Message Options	89
Viewing Newly Received Messages	89
Deleting Messages	91
Message Search	91
Messaging Settings	91
Text Templates	92
Email	93
Microsoft Exchange Email (Outlook)	96
Using Google Mail	99
Google Talk	101

Section 8: Multimedia102

Using the Camera	102
Camera and Camcorder Options	102
Using the Camcorder	107
Files	110
The Gallery	110
Using the Video Player	111
Media Hub	111
Music	112
Using Playlists	114
Creating a Playlist	114

Transferring Music Files	115
Removing Music Files	115
T-Mobile TV HD	115
YouTube	116

Section 9: Applications and Development117

Applications	117
411 & More	117
Accounts and sync	117
AllShare	117
Bejeweled 2	118
Blio	119
Bonus Apps	119
Books	119
Calculator	119
Calendar	120
Contacts	121
Camera	121
Clock	121
Downloads	121
Email	121
Files	121
Gallery	122
Gmail	122
Google Search	122
Highlight	122
Kies air	123
Latitude	123
Lookout Security	124
Maps	125
Market	127
Media Hub	129
Memo	129
Messaging	130

Mini Diary	130
More for Me	131
Music	131
My Account	131
My Device	132
Navigation	133
News & Weather	135
Places	135
Polaris Office	136
Settings	136
Slacker	137
Social Hub	137
T-Mobile Mall	137
T-Mobile Name ID	138
T-Mobile TV HD	138
Talk	138
Task	138
Task Manager	139
TeleNav GPS	139
Tetris	140
Video Chat	140
Videos	141
Visual Voicemail	141
Voice Recorder	141
Voice Search	141
Web	142
Wi-Fi Calling	142
Yelp	142
YouTube	142
Zinio Reader	143

Section 10: Connections144

Internet	144
Bluetooth	149
Enable Downloading for Web Applications	152
PC Connections	152

Kies Air	153
Wi-Fi	154
Tethering	156
Portable Wi-Fi Hotspot	157

Section 11: Time Management 159

Calendar	159
Clock	160
World Clock	161
Stopwatch	162
Setting a Timer	162
Configuring a Desk Clock	162

Section 12: Changing

Your Settings 163

Wireless and Networks	163
Tethering	165
VPN settings	166
Call Settings	169
Sound Settings	172
Display Settings	173
Power Saving Mode	174
Location and Security	175
Screen Unlock Pattern Settings	176
Applications	178
Android Development	180
Accounts and Synchronization	181
Motion Settings	182
Privacy Settings	182
SD Card & Phone Storage	183
Search Settings	184
Language & Keyboard Settings	184
Voice Input and Out Settings	187
Accessibility Settings	188
Date and Time	188
About Phone	189

Software Update	189
Section 13: Health and	
Safety Information	190
Exposure to Radio Frequency (RF) Signals ..	190
Specific Absorption Rate (SAR)	
Certification Information	194
Smart Practices While Driving	195
Battery Use and Safety	196
Samsung Mobile Products and Recycling ..	197
UL Certified Travel Charger	198
Display / Touch-Screen	198
GPS & AGPS	199
Emergency Calls	199
Care and Maintenance	200
Responsible Listening	201
Operating Environment	202
FCC Hearing Aid Compatibility (HAC)	
Regulations for Wireless Devices	204
Restricting Children's Access to Your	
Mobile Device	205
FCC Notice and Cautions	205
Other Important Safety Information	206
Section 14: Warranty Information	207
Standard Limited Warranty	207
End User License Agreement for Software ..	210
Index	216

Section 1: Getting Started

This section explains how to get started with your phone by installing and charging the battery, installing the SIM card and optional memory card, and setting up your voice mail.

Before using your phone for the first time, you'll need to install and charge the battery and install the SIM card. The SIM card is loaded with your subscription details, such as your PIN, available optional services, and many other features. If desired, you can also install an SD card to store media for use with your phone.

Understanding this User Manual

The sections of this manual generally follow the features of your phone. A robust index for features begins on page 216.

Also included is important safety information that you should know before using your phone. This information is available near the back of the guide, beginning on page 190.

This manual provides navigation instructions according to the default display settings. If you select other settings, navigation may be different.

Unless otherwise specified, all instructions in this manual assume you are starting from the Home screen and using the available keys.

Note: Instructions in this manual are based on default settings, and may vary from your phone, depending on the software version on your phone, and any changes to the phone's Settings.

Unless stated otherwise, instructions in this User Manual start with the phone unlocked, at the Home screen.

All screen images in this manual are simulated. Actual displays may vary, depending on the software version of your phone and any changes to the phone's Settings.

Special Text

Throughout this manual, you'll find text that is set apart from the rest. These are intended to point out important information, share quick methods for activating features, to define terms, and more. The definitions for these methods are as follows:

- **Notes:** Presents alternative options for the current feature, menu, or sub-menu.
- **Tips:** Provides quick or innovative methods, or useful shortcuts.
- **Important:** Points out important information about the current feature that could affect performance.
- **Warning:** Brings to your attention important information to prevent loss of data or functionality, or even prevent damage to your phone.

Text Conventions

This manual provides condensed information about how to use your phone. To make this possible, the following text conventions are used to represent often-used steps:

- Arrows are used to represent the sequence of selecting successive options in longer, or repetitive, procedures.

Example: "From the Home screen, press  (Menu) → Settings → Wireless and network → Bluetooth settings."

Battery Cover

The battery, SIM card and SD card are installed under the battery cover.

Important! Before removing or replacing the battery cover, make sure the phone is switched off. To turn the phone off, hold down the  key until the power-off image displays, then tap **Power off**.

To remove the battery cover:

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening (1) and firmly "pop" the cover off the device (similar to a soda can) (2).
3. Carefully remove the cover (3).



To replace the battery cover:

1. Align the cover tabs into their respective slots along the top of the battery compartment (1).

SIM Card Overview

Important! Before removing or replacing the SIM card, make sure the phone is switched off. To turn the phone off, hold down the  key until the power-off image displays, then tap **Power off**.

The SIM card is loaded with your subscription details such as your telephone number, PIN, available optional services, and many other features.

Important! The SIM card and its information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


Installing and Removing the SIM card

To install the SIM card:

1. Carefully slide the SIM card into the SIM card socket until the card clicks into place.
2. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.



To remove the SIM card:

1. Remove the battery cover.
2. Carefully place your fingernail into the end of the SIM slot and push the card slightly out.
3. Carefully slide the SIM card out of the SIM card socket.

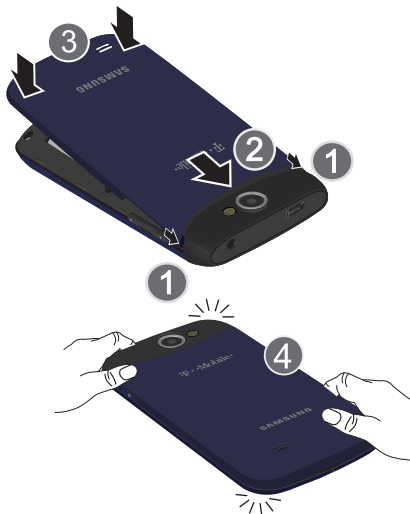

2. Carefully slide the cover into the top of the phone (2).
3. Press down on the back of the battery cover until you hear a click (3).
4. Squeeze along the edges of the cover to guarantee a secure fit.

 Note: If the card is not inserted correctly, the phone will not detect it and no service will be available. If this happens, turn off the phone, remove the card, and reinstall the card in the correct orientation.

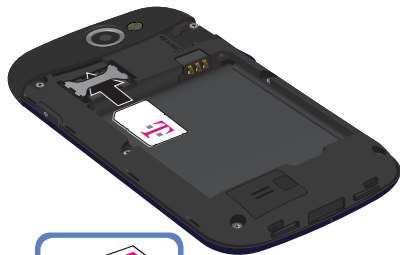

Installing the microSD Memory Card

Your phone supports an optional (external) microSD™ or microSDHC™ memory card for storage of media such as music, pictures, video and other files. The SD card is designed for use with this mobile phone and other devices.

Note: The microSD memory cards include capacities of up to 2GB. microSDHC™ memory card types can range from 4GB to up to 32GB.

Note: This device supports up to a 32GB microSDHC memory card.

1. Remove the battery cover.
2. Locate the microSD card slot on the inside of the device.
3. Orient the card with the gold strips facing down.
4. Firmly press the card into the slot and make sure that it catches with the push-click insertion. For more information on how to use the SD card see *“Using the SD Card”* on page 45.

Important!: Be sure to align the gold contact pins on the card with the phone's contacts.



Correct



Incorrect

Removing the microSD Memory Card

1. Remove the battery cover.
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.
3. Remove the card from the slot.
4. Replace the battery cover.

Battery

Before using your phone for the first time, install the battery and charge it fully.

Important!: Before removing or replacing the battery, make sure the phone is switched off. To turn the phone off, hold down the  key until the power-off image displays, then tap **Power off**.

Installing the Battery

1. Slide the battery into the compartment (1) so that the tabs on the end align with the slots at the bottom of the phone, making sure the connectors align.
2. Gently press down to secure the battery (2).

Removing the Battery

- Grip the battery at the top end (3) and lift it up and out of the battery compartment (4).



Installing Battery



Removing Battery

Charging the Battery

Your phone is powered by a rechargeable Li-ion battery. A wall charger, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

Before using your phone for the first time, you must fully charge the battery. A discharged battery recharges fully in approximately 4 hours.

Note: Verify that the battery is installed prior to connecting the wall charger. If both the wall charger is connected and the battery is not installed, the handset will power cycle continuously and prevent proper operation. Failure to unplug the wall charger before you remove the battery, can cause the phone to become damaged.

Important!: It is recommended you fully charge the battery before using your device for the first time.

1. Locate the Charger/Accessory jack and slide open the cover (1).
2. Insert the USB cable into the device's Charger/Accessory jack (2).
3. Plug the charging head into a standard AC power outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.



Note: This illustration displays both the **correct** and **incorrect** orientation for connecting the charger. If the charger is incorrectly connected, damage to the accessory port will occur therefore voiding the phone's warranty.

4. When charging is finished, first unplug the charger's power plug from the AC wall outlet, then disconnect the charger's connector from the phone.

Important!: If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to "Standard Limited Warranty" on page 207.

Low Battery Indicator

When the battery level is low and only a few minutes of talk time remain, a warning tone sounds and the "Low battery" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, by dimming the backlight.

When the battery level becomes too low, the phone automatically turns off.

Extending Your Battery Life

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.

- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Use the Power Savings Widget to deactivate hardware functions such as Wi-Fi, Bluetooth, GPS, Synchronization, or LCD brightness setting.
- Check the Battery use screen to review what features or functions have been consuming your battery resources.
- Check the Running Services and close any unnecessary applications.
- Use the Task Manager feature to end/shutdown background applications that are still running. These minimized applications can, over time, cause your device to “slow down”.
- Turn off any streaming services after use (see Running Services).
- Animated wallpapers use processing power, memory, and more power. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.

Power Savings

Active applications, Wi-Fi, Bluetooth, GPS, Synchronization, Location consent, or the LCD Brightness functionality all act to drain your battery.

The Power Savings application was designed to quickly activate (turn on), or deactivate (turn off) those functions or applications that use the most battery power.

1. From the Home screen, touch and hold an empty area until the **Add to Home screen** menu displays.

2. Tap **Widgets** → **Power savings**.

The Power Control shortcut is added to the current screen.

3. Tap any of the icons on the Power Savings shortcut bar to activate/deactivate the feature.



Note: A green bar displayed beneath the icon means the application is active (turned on). The green bar is removed from beneath the icon when the feature is deactivated (turned off).

Initial Phone Configuration

1. Tap the on-screen Android icon to begin the setup process.
2. Tap **Skip** to ignore the Wi-Fi connection setup process.
3. Select/deselect the desired Google location services and tap **Next**.

4. Configure the Data and Time settings and tap **Next**.

Note: Enabling Google location services can drain battery power. For more information, refer to “*Power Savings*” on page 12.

5. Press and hold  until the Phone options screen appears.
6. Tap **Power off** ().

Switching the Phone On or Off

If you have not already configured your phone after an initial firmware update, you will be prompted with a series of configuration screens.

Once the phone has been configured, you will not be prompted with these screens again.

Important! Before the initial configuration, you quickly access emergency services by tapping **Emergency call** and using the on-screen dialer.

1. Press and hold  until the phone switches on.

The phone searches for your network and after finding it, you can make or receive calls.

Note: The display language is preset to English at the factory. To change the language, use the Language menu. For more information, refer to “*Language & Keyboard Settings*” on page 184.

2. Press and hold  until the Phone options screen appears.
3. Tap **Power Off** ().

Locking and Unlocking the Phone

By default, the phone screen locks when the backlight turns off.

- ▶ Place your finger on the screen and swipe the glass in any of the directions shown unlock the phone.



Note: You can choose to configure lock settings to prevent unauthorized use of your phone. For more information, refer to “Setting up SIM Card Lock” on page 177.

Creating a New Google Account

You should create a Google™ Account when you first use your device in order to fully utilize the functionality. This account provides access to several device features such as Gmail, Google Maps, Google Search, and the Android Market applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

To create a new Google Account from your phone:

1. From the Home screen, tap  (Market).
2. Read the introduction and tap **Next → Create to begin**.
3. Follow the on-screen instructions to create a Google Account.
– or –
If this is not the first time you are starting the phone, tap  →  (Gmail).

Note: If you already have a Google account, you only need to sign in.

To create a new Google Account from the Web:

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, click **Sign-in → Create an account now**.
3. Follow the on-screen prompts to create your free account.
4. Look for an email from Google in the email box you provided, and respond to the email to confirm and activate your new account.

Signing into Your Google Account

1. Launch an application that requires a Google account (such as Android Market or Gmail).
2. Click **Next → Sign in**.
3. Tap the **Username** and **Password** fields and enter your information.
4. Tap **Sign in**. Your device communicates with the Google servers to confirm your information.
5. If prompted, create a new Gmail username by entering a prefix for your **@gmail.com** email address.

Retrieving your Google Account Password

A Google account password is required for Google applications. If you misplace or forget your Google Account password, follow these instructions to retrieve it:

1. From your computer, use an Internet browser and navigate to <http://google.com/accounts>.
2. Click on the **Can't access your account?** link.
3. Enter your full Gmail address and click **Submit**. Follow the password recovery procedure.

Voice Mail

Setting Up Your Voice Mail

Your device automatically transfers all unanswered calls to voicemail, even if your device is in use or turned off. As soon as your battery is charged and the SIM card inserted, activate your voicemail account.

Important! Always use a password to protect against unauthorized access.

For new users, follow the instructions below to set up voice mail:

Note: Voicemail setup may be different depending on your network.

1. From the Home screen, tap  and then touch and hold the **1**  key until the phone dials voice mail. You may be prompted to enter a password.
2. Follow the tutorial to create a password, a greeting, and a display name.

Accessing Your Voice Mail

You can access your Voice Mail by either pressing and holding **1**  on the keypad, or by using the phone's Application icon, then touching the Voice Mail application.

To access Voice Mail using the menu:

1. From the Home screen, tap  and then touch and hold **1**  until the phone dials voice mail.

Note: Touching and holding **1**  will launch Visual voicemail if it is already active on your phone.

2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press the asterisk key on the phone you are using.
3. Enter your passcode.

Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

1. From the Home screen, tap  (Applications) → **Visual Voicemail** (.
2. Read the on-screen information and tap **Next**.
3. Enter your new PIN code and tap **Next** to activate Visual Voicemail if this is the first time it was accessed. A list of the voicemail messages displays.

Note: You must subscribe to Visual Voicemail service to use this feature. Charges may apply. Please contact your service provider for further details.

4. Tap an on-screen voicemail message to play it back.

Task Manager

Your phone can run applications simultaneously, with some applications running in the background.

Sometimes your device might seem to slow down over time, and the biggest reason for this are background applications. These are applications that were not properly closed or shutdown and are still active but minimized. The Task Manager not only lets you see which of these applications are still active in the background but also easily lets you choose which applications are left running and which are closed.

Note: The larger the number of applications running on your phone, the larger the energy drain on your battery.

Task Manager Overview

- From the Home screen, tap  (Applications) → **Task manager** (.

— or —

Press and hold  then tap **Task manager**.

This screen contains the following tabs:

- **Active applications** display those currently active applications running on your phone.
- **Downloaded** displays any installed packages or applications from the Market that are taking up memory space. Tap **Uninstall** to remove them from your phone.
- **RAM**, which displays the amount of current RAM (Random Access Memory) currently being used and allow you to **Clear Memory** for either Level 1 or Level 2 (both Level memory locations).
- **Storage** displays a visual graph indicating the available and used space within the Random Access Memory (RAM), Program, and External SD card.
- **Help** provides additional battery saving techniques.

Shutting Down a Currently Active Application

1. From the Home screen, tap  → **Task Manager** (.
2. From the **Active applications** tab, tap **Exit** to close selected applications or tap **Exit all** to close all background running applications.

Section 2: Understanding Your Phone

This section outlines key features of your phone. It also describes the phone's keys, screen and the icons that display when the phone is in use.


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- Touch screen with virtual (on-screen) QWERTY keyboard
- High Speed Packet Access Plus (HSPA+) delivering data speeds faster than the current 3G network technology.
- Android 2.3, Gingerbread Platform
- Compatible with Adobe® Flash® technology
- Wi-Fi® Capability
- USB Tethering-capable
- Bluetooth enabled
- Full Integration of Google Mobile™ Services (Gmail, YouTube, Google Maps, Google Voice Search)
- Multiple Messaging Options: Text/Picture/Video Messaging, Google Talk, and SWYPE™
- Corporate and Personal Email
- 3 Megapixel Camera and Camcorder with autofocus and multi-shot
- MP3 Player with multitasking features
- Pre-loaded Games including Bejeweled 2® and Tetris®
- Over 250,000 Apps available to download from the Android Market™
- Pre-loaded e-reader applications such as: Blio® and Zinio®
- Social Networking capabilities
- Polaris® Office for document viewing and editing
- Assisted GPS (TeleNav GPS Navigation)
- Webkit-based browser
- Downloadable applications from Android Market
- Up to 32GB expandable memory slot
- Front Facing camera for Video Chat
- Mobile Hotspot Capability
- Lookout® Security (Security, Backup, Missing Device capabilities)
- T-Mobile® TV HD
- Slacker® Radio
- Wi-Fi Calling

Front View

The following illustrations show the main elements of your phone:

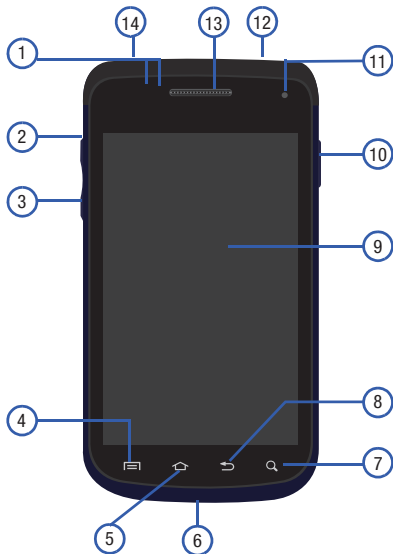

The following list correlates to the illustrations.

1. **Proximity Sensor** detects how close an object is to the surface of the screen. This is typically used to detect when your face is pressed up against the screen, such as during a phone call.

- While talking on the phone, the sensor detects talk activity and locks the keypad to prevent accidental key presses.

2. **microSD Card Slot** (internal) allows you use a microSD card to expand the memory of your phone.
3. **Volume key** allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. When receiving an incoming call:
 - Pressing the volume key down mutes the ring tone.
 - Pressing and holding the volume key rejects the call.
4. **Menu key** displays a list of options available for the current screen. From the Home screen it displays Add, Wallpaper, Search, Notifications, Edit, and Settings options.
5. **Home key** displays the Home screen when pressed. Touch and hold to display the Task manager.
6. **Microphone** is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used to make voice note recordings.
7. **Quick search** is used to search the device for applications, contact information, or searches the internet for information.

9. **Back key** redispays the previous screen or clears entries.
9. **Display** shows all the information needed to operate your phone, such as the connection status, received signal strength, phone battery level, and time.
10. **Power/Reset/Lock key** turns the device off (press and hold). Resets the device if it ever freezes (press and hold for 15-17 seconds). Access the Phone options menu (press and hold) to turn on/off Silent mode, Flight mode, or power off the device.
11. **Front Facing Camera** allows you to take pictures while facing the screen and allows you to video conference.

Note: Video recorded in Portrait mode is reversed during playback.

12. **USB Power/Accessory connector** allows you to connect a power cable or optional accessories such as a USB/data cable.
13. **Receiver** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
14. **Headset jack** allows you to connect a hands-free headset so you can listen to music.

Back View of Your Phone

The following illustration shows the external elements of your phone:



1. **External speaker** allows you to hear ringers, music, and other sounds offered by your phone.
2. **Flash** is used to take photos in lo-light conditions.
3. **Camera lens** is used to take photos.

Phone Display

Your phone's display provides information about the phone's status, and is the interface to the features of your phone. The display indicates your connection status, signal strength, battery status and time. Icons display at the top of the phone when an incoming call or message is received and also alerts you at a specified time when an alarm was set.

The screen also displays notifications, and Application (or shortcut) bar with four icons: Phone, Contacts, Messaging, and Applications.



Display settings

In this menu, you can change various settings for the wallpaper, cube, brightness or backlight.

- From the Home screen, tap  (**Applications**)
→  (**Settings**) → **Display**. For more information, refer to “Display Settings” on page 173.

Status Bar

The Status Bar shows information about the connection status, signal strength, phone battery level, and time, and displays notifications about incoming messages, calls and other actions.

This list identifies the icons you see on your phone's display screen:

Indicator Icons

This list identifies the symbols you'll see on your phone's display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Flight Mode is active. You cannot send or receive any calls or access online information.



Indicates there is no signal available.



Displays when there is no SIM card in the phone.



Displays when there is a system error or alert.



Displays when a call is in progress.



Displays when a call is on hold.



Displays when you have missed an incoming call.



Displays when the Auto reject mode feature is enabled and set to All numbers.



Displays when you have received a call from an unknown caller and the T-Mobile Name ID service is asking to name the contact.



Displays when the speakerphone is on.



Displays when the microphone is muted.



Displays when Call forwarding is set to Always forward. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 170.



Displays your current battery charge level. Icon shown is fully charged.



Displays your current battery is 100 percent charged. This icon is followed by an audible beep.



Displays your battery is currently charging.



Displays your current battery charge level is very low.



Shows your current battery only has three percent power remaining and will immediately shutdown. Represented as a blinking icon.



Displays when connected to the EDGE network.



Displays when your phone is communicating with the EDGE network.



Displays when connected to the 3G network.



Displays when your phone is communicating with the 3G network.



Displays when connected to the HSPA+ network.



Displays when your phone is communicating with the HSPA+ network.



Displays when the phone is connected to a computer using a supported USB cable connection.



Displays when there is a new text message.



Displays when an outgoing text message has failed to be delivered.



Displays when there is a new voicemail message.



Displays when there is a new visual voicemail message.



Displays in the notifications window when there is a new Email message.



Displays in the notifications window when there is a new Gmail message.



Displays when the time and date for a Calendar Event has arrived. For more information, refer to “*Calendar*” on page 159.



Displays when an alarm is set. For more information, refer to “*Setting an Alarm*” on page 160.



Displays when the phone is in Silent mode. All sounds except media and alarms are silenced, and Vibrate mode is set to **Only when not in silent mode**. For more information, refer to “*Silent mode*” on page 172.



Displays when the Sound profile is set to Silent mode and Vibrate is set to Always or Only in silent mode.



Displays when data synchronization and application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.



Displays when Bluetooth technology is active and enabled.



Displays when the Bluetooth technology is active and communicating with an external device.



Displays when the an outbound file transfer is in progress.



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active and there is an available open wireless network.



Displays when the Wi-Fi calling feature is active.



Displays when the Wi-Fi calling feature is in use and a call is currently active.



Displays when the Portable Wi-Fi Hotspot feature is active and communicating. For more information, refer to “*Portable Wi-Fi Hotspot*” on page 157.



Displays when the USB Tethering feature is active and communicating. For more information, refer to “*Tethering*” on page 165.



Displays when your phone is connected to a PC using Kies air.



Displays when your phone is connected to a Digital Living Network Alliance (DLNA) certified device using the AllShare application.



Displays in the notifications window when a song is currently playing.



Displays when your phone's GPS is on and communicating.



Displays when the external SD card (internal microSD) has been disconnected (unmounted) from the phone and is now ready for either removal or formatting.



Displays when the contents of the microSD card are being scanned.



Displays when the External SD card is being prepared for mounting to the device. This is required for communication with the External SD card.



Displays when the phone's microSD card has been improperly removed.



Displays when the phone has detected an active USB connection and is in a USB Debugging mode.



Displays when Power saving mode is enabled.





Displays when the Power saving alert notification has been activated. You are then prompted to view your current battery level.

For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 163.

Notification Bar

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current on-screen notification icons.

1. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
2. Tap a notification entry to open the associated application (2).

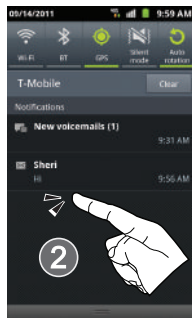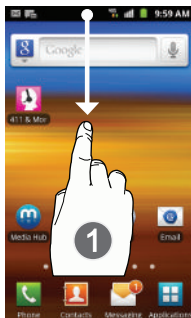


Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.

Clearing Notifications

1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
2. Tap **Clear**. The notifications are cleared from the panel.

Accessing Additional Panel Functions

In addition to notifications, this panel also provides quick and ready access to five device functions. These can be quickly activated or deactivated.

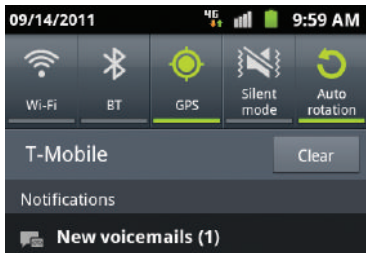

The following functions can either be activated (green) or deactivated (white): **Wi-Fi**, **BT** (Bluetooth), **GPS**, **Silent mode**, or **Auto rotation**.

Note: Vibration mode is available after pressing the Volume key down.

Silent mode (no vibration) is only available if the **Vibration** setting (**Settings > Sound settings > Vibration**) is set to **Only when not in Silent mode**.

Function Keys

Your phone comes equipped with four main function keys that can be used on any screen: **Home**, **Menu**, **Back** and **Search**.

Home Key

The **Home** key () takes you back to your Home screen (#4 of the 7 available screens).

- Press and hold to launch the Recent apps/Task manager screen. For more information, refer to “*Accessing Recently-Used Applications*” on page 31.

Menu Key

The **Menu** key () activates an available menu function for the current screen or application. When on the Home screen, the following menu options are available:

- **Add** () adds one of the following functions to a selected screen: Widgets, Shortcuts, Folders, and Wallpapers.
- **Wallpaper** () lets you to customize the current screen's wallpaper image by choosing from either Gallery, Live Wallpaper or Wallpaper gallery).
 - You can obtain images from either your Pictures folder, from any of the available images within the device's Wallpaper gallery, or from the animated Live Wallpapers.
- **Search** () displays the Google Search box that you can use to search for a key term both on the phone and online.

- **Notifications** (ⓘ) allows you to expand popup notifications area to provide more detailed information about the current on-screen notification icons.
- **Edit** (✎) allows you to add or remove extended screens from your device. You can have up to six extended screens (one Home screen and six Extended screens).
- **Settings** (⚙) provides quick access to the device's settings menu.
 - The Settings menu can also be accessed by pressing  and then tapping  → **Settings**.


Back Key

The **Back** key (⏮) returns you to the previously active screen. If the on-screen keyboard is currently open, this key closes the keyboard.

Search Key

The **Search** key (🔍) displays the Google Search box that can be used to search for either a key term both on the phone and online. In some instances, this key opens a search box specific only to the current application.

1. Press  to launch the Google Search box.
– or –
Press  and tap  → .
2. From the on-screen keyboard, tap  (top of screen) to launch the Google **Voice Search** function.

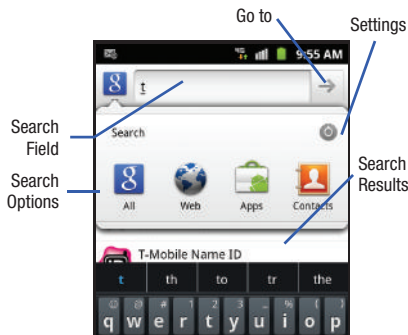

Using Google Search

Use the Google Search box to manually search for a term on both your device and on the Web.

1. Press  to launch the Google Search box.
2. Tap  to select a search area:
 - **All** searches your device, the Web, and the Android Market for your search term.
 - **Web** searches for your term only on the Web using the Google search engine.
 - **Apps** searches for your term only within the Android Market.
 - **Contacts** searches for your term only within your current Contacts entries.
 - **Settings** configures the items that are searched against. Example: Web, Apps, Memo, etc.

3. Enter a search term and tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once touched, the item opens in the appropriate application.

— or —

From the on-screen keyboard, tapping **Voice Search** () lets you speak into your device's microphone to enter a search term.

Using Additional Voice Search Functions

For more information, refer to:

<http://www.google.com/mobile/voice-actions/>.

From an open Voice Search dialog, speak the following words to access additional features:

- **voice actions** (such as: [your query]) allows you to search the web by speaking the search parameters.
- **listen to [artist/song/album]** allows you to begin listening to the selected song on Slacker radio.
- **send text to [recipient] [message]** allows you to open the Messaging screen.
- **navigate to [address/city/business name]** allows you to receive directions via Google maps™. Use either an Address name, Business name, business type, or other navigation information to get the desired directions.
- **call [name]** allows you to open the phone dial and automatically
- **send email to [recipient] [subject]** allows you to open your email account and compose a new email message.

- **map of [location]** allows you to view a map of an area via Google maps. Use either an Address name, Business name, zip code, or other navigation information.
- **go to [website]** allows you to navigate to any component of your device.
- **note to self [message]** allows you to search for a note save to your Memo Pad.
- **directions to [location]** using your current location, allows you to receive directions to a selected destination.

Home Screen

The Home screen is the starting point for using the applications on your phone. There are initially five available panels, each populated with default shortcuts or applications. You can customize each of these panels.



- **Notification area** displays those icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming event, USB connection, emails, and Text/MMS messages.
 - These notifications appear at the top-left of the screen (within the Status bar area) and display important user information.
 - This information can be accessed by either swiping down from the Status bar (page 23) or by accessing the Notifications panel ( > **Notifications** ()).
- **Status area** displays those icons associated with the status of the device such as communication, coverage, Bluetooth, 4G/3G, Wi-Fi communication, battery levels, GPS, etc.
- **Home Screen** is a customizable screen that provides information about notifications and device status, and allows access to application Widgets.
- **Extended Home Screens** extend beyond the current visible screen width to provide more space for adding icons, widgets, and other customization features.
 - There are six available extended screens (panels) each of which may be populated with its own shortcuts or widgets. These screens share the use of the three Primary Shortcuts.
 - The current screen is indicated at the bottom by a larger circle. Up to seven (7) total screens are available.

Note: Both the status bar and primary shortcuts are visible across all screens.

- **Google search** is an on-screen Internet search engine powered by Google™. Touch to access the Voice Search


feature where you can verbally enter a search term and initiate an online search.

- Tap **Voice Search** () to launch the Voice Search function from within this Google widget.
- **Widgets** are self-contained on-screen applications (not shortcuts). These can be placed onto any of the available screens (Home or extended).
- **Shortcuts** are icons that launch available device applications such as Camera, YouTube, Voicemail, Contacts, Phone, Email, Market, etc. These function the same as shortcuts on your computer.
 - Although some may already be found on the Extended Home screens, the majority can also be found within the Applications screens.
 - The Application screens can be accessed by tapping  (**Applications**) from the Primary shortcuts area.
 - Shortcuts can be removed from a screen and added back any number of times.
- **Primary Shortcuts:** are four shortcuts present throughout all of the available screens and can be used to both navigate within the device or launch any of the following functions:
 - **Phone** () launches the phone-related screen functions (Keypad, Logs, Favorites, and Groups).
 - **Contacts** () launches the Contacts-related screens (Keypad, Logs, Contacts, Favorites, and Groups).
 - **Messaging** () launches the Messaging menu (create new messages or open an existing message string).

– **Applications/Home** toggles functionality between the Home and Application screens.

- Tap  (**Applications**) to access the Application screens loaded with every available local application.
- While in the Applications screens, tap  (**Home**) to easily return to the Home screen.

As you transition from screen to screen, the screen counter (located at the bottom) displays the current panel number in a circle.

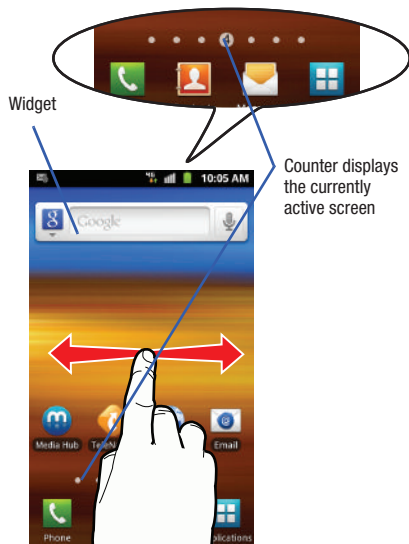

Screen Navigation

Using the touch screen display and the keys, you can navigate the features of your phone and enter characters. The following conventions are used in this manual to describe the navigation action in the procedures.

Navigating Through the Screens

The following terms describe the most common hardware and on-screen actions.

Press and hold

Tap

Touch and hold



- **Press and hold:** Pressing relates to use of the hardware keys and buttons to select or activate an item. For example: press the Navigation key to scroll through a menu. Some buttons and keys require you to press and hold them to activate a feature, for example, you press the Lock key to lock and unlock the phone.

- **Tap:** Use a brief touch to select items on the display or to enter text on the virtual QWERTY keyboard. For example: touch an Application icon to open the application. A light touch works best.
- **Touch and hold:** Touch and hold an icon or key to open the available options, or to access a pop-up menu. For example: press and hold from the Home screen to access a menu of customization options.
- **Flick:** Move your finger in lighter, quicker strokes than swiping. This finger gesture is always used in a vertical motion, such as when flicking through contacts or a message list.
- **Swipe or slide:** Quickly drag your finger vertically or horizontally across the screen. This allows you to move the area of focus or to scroll through a list. For example: slide your finger left or right on the Home screen to scroll among the seven panels.
- **Drag:** Press and hold your finger with some pressure before you start to move it. Do not release your finger until you have reached the target position.
- **Rotate:** Automatically change the screen orientation from portrait to landscape by turning the device sideways. For example: rotate to landscape orientation when entering text, to provide a larger keyboard, or when viewing web content to minimize scrolling.



- **Pinch:** “Pinch” the screen using your thumb and forefinger to zoom out when viewing a picture or a Web page. (Move fingers inward to zoom out.)

- **Spread:** “Spread” the screen using your thumb and forefinger to zoom in when viewing a picture or a Web page. (Move fingers outward to zoom in.)

Pinch (Zoom Out)



Spread (Zoom In)

Note: These screens can be re-arranged in any desired order. For more information, refer to “Customizing the Screens” on page 39.

Motion Navigation and Activation: The phone comes equipped with the ability to assign specific functions to certain phone actions that are detected by the accelerometer.

Note: Motion must be enabled for this feature to be active. For more information, refer to “Motion Settings” on page 182.

Menu Navigation

You can tailor the phone’s range of functions to fit your needs using both menus and applications. Menus, sub-menu, and features are accessed by scrolling through the available on-screen menus. Your phone defaults with seven home screens.

Navigating Through the Application Menus

There are four default Application Menus available. As you add more applications from the Android Marketplace, more screens are created to house these new apps.

1. Press  and then tap  (Applications).

The first Application Menu displays.


- To close the Applications screen, tap  or press

- 
2. Sweep the screen to access the other menus.
3. Tap any of the on-screen icons to launch the associated application.


Using Sub-Menus

Sub-menus are available from within most screen and applications.

1. Press . A sub-menu displays at the bottom of the phone screen.
2. Tap an option.

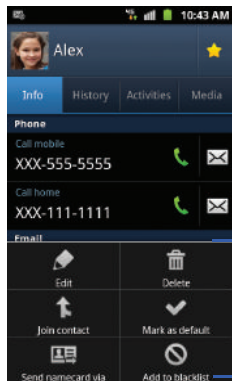

Sub-Menu items

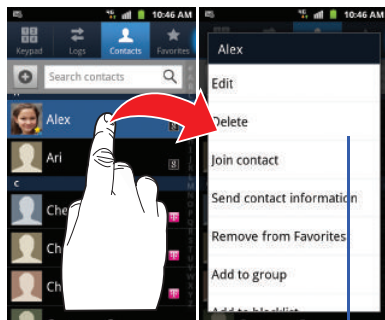

Context Menu

Using Context Menus

Context menus (also called pop-up menus) contain options that apply to a specific item on the screen. They function similarly to menu options that appear when you right click your mouse on your desktop computer.

- ▶ Touch and hold an item on-screen to open its context menu.

Accessing Recently-Used Applications

1. Press and hold  to open the recently-used applications window.

Note: This recent applications screen also provides access to the **Task manager**.

2. A pop-up displays the six most recently used applications.
3. Tap an icon to open the recent application.

Applications

The Application menu provides quick access to the most frequently used applications. Applications display on each of the four panels on the Applications screens.

The following table contains a description of each application available via both the Primary shortcuts area and via the Applications screens. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided. For information on navigating through the Applications icons, see *“Navigating Through the Application Menus”* on page 30.



411 & More

Provides more than just single tap access to directory assistance and other portals. Available categories include: 411 Directory Assistance, Current Weather, and more. For more information, refer to *“411 & More”* on page 117.



Accounts and sync

Allows you to add applications and determine which type of account information you want to synchronize with your Contact list. For more information, refer to *“Accounts and Synchronization”* on page 181.



AllShare

Allows you to share your on-device media content with other external devices using DLNA (Digital Living Network Alliance) and built-in AllShare™ technology. Samsung's AllShare makes staying connected easy.

For more information, refer to *“AllShare”* on page 117.



Bejeweled 2

Bejeweled 2 is a free web-based game, sequel to Bejeweled. Start by clicking two adjacent pieces to create a line of three or more identical gems. For more information, refer to *“Bejeweled 2”* on page 118.



Blio®

Blio is an eReading application that presents eBooks just like the printed version, in full color, and with all of the features you'd want from an eReader.

For more information, refer to *“Blio”* on page 119.



Bonus Apps

Once added to your Home screen, this Widget helps you discover free T-Mobile services and apps that are compatible with your phone.

For more information, refer to *“Bonus Apps”* on page 119.



Books

Use Google Books to read over 3 million ebooks on the go.

For more information, refer to “*Books*” on page 119.



Calculator

Launches the on-screen calculator application. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

For more information, refer to “*Calculator*” on page 119.



Calendar

Launches a calendar application that syncs to your Facebook™, Google™, or Microsoft Exchange work calendars.

For more information, refer to “*Calendar*” on page 159.



Camera

Launches the built-in 3.0 megapixel camera application from where you can take a picture with either the front or rear facing cameras.

Note: An SD card must be inserted before the camera will take and store photos.

In addition to taking photos, the built-in camera also doubles as a camcorder that also allows you to record, view, and send high definition videos.

For more information, refer to “*Using the Camera*” on page 102. For more information, refer to “*Using the Camcorder*” on page 107.



Contacts

The default storage location for saving phone numbers to your Contacts List is your phone's built-in memory.

For more information, refer to “*Contacts List*” on page 72.



Clock

Allows you to set an alarm, configure and view the World clock, use a stopwatch, or set a timer. The applications display in a tabular format and quickly accessed with the touch of a finger.

For more information, refer to *“Clock”* on page 121.



Downloads

Provides quick access to tabs containing a list of your current downloaded files (Internet and Other).

For more information, refer to *“Downloads”* on page 121.



Email

Provides access to both your Outlook (Exchange Server-based) work email and Internet email accounts (such as Gmail and Yahoo! Mail). For more information, refer to *“Email”* on page 93.



Files

Lets you view supported image files and text files on your microSD card. Organize and store data, images, and more in your own personal file folders. Files are stored to the memory card in separate (user defined) folders.

For more information, refer to *“Files”* on page 110.



Gallery

Displays a Gallery of camera images and video stored in the microSD card. For more information, refer to *“The Gallery”* on page 110.



Gmail

Provides access to your Gmail account. Google Mail (Gmail) is a web-based email service. Gmail is configured when you first set up your phone. For more information, refer to *“Using Google Mail”* on page 99.



Google Search

Provides an on-screen Internet search engine powered by Google™. For more information, refer to *“Using Google Search”* on page 25.



Highlight

This downloadable application/widget allows you to stay up to date on relevant news, Android Market apps and games (specific to your phone), T-Mobile ringtones, CallerTunes and more. For more information, refer to *“Highlight”* on page 122.



Kies air

Allows you to sync your Windows PC wirelessly with your phone (as long as both are on the same Wi-Fi network). You can now have real-time access of your phone through your PC to view call logs, videos, photos, bookmarks, IMs, and even send SMS messages directly from your home computer.

For more information, refer to “*Kies Air*” on page 153.



Latitude

Lets you see your friends' locations and share yours with them. The application also lets you see your friends' locations on a map or in a list. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.

For more information, refer to “*Latitude*” on page 123.



Lookout Security

Lookout™ provides mobile device-specific security features that are coupled with a minimal performance hit. For more information, refer to “*Lookout Security*” on page 124.



Maps

Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions. For more information, refer to “*Maps*” on page 125.



Market

Allows you to find and download free and for-purchase applications on Android Market. For more information, refer to “*Downloading a New Google Application*” on page 127.



Media Hub

Provides you with a one stop shop for the hottest movie and TV content. You can now rent or purchase your favorite content and then watch it from the convenience of anywhere. For more information, refer to “*Media Hub*” on page 111.



Memo

Creates new text memos. For more information, refer to “*Memo*” on page 129.



Messaging

Provides access to text and multimedia messaging (SMS and MMS). For more information, refer to “*Creating and Sending Messages*” on page 88.



Mini Diary

Allows you to create a mini diary where you can add a photo, and text to describe an event or other memorable life event.

For more information, refer to *“Mini Diary”* on page 130.



More for Me

Provides customized offers, discounts and deals right to your phone. For more information, refer to *“More for Me”* on page 131.



Music

Launches the built-in Music Player that allows you to play music files that you have stored on your microSD card. You can also create playlists. For more information, refer to *“Music”* on page 112.



My Account

Provides you with account specific information such as: current status, Activity, Set Alerts, Bill Summary, Plan Services, and FAQ's Info. For more information, refer to *“My Account”* on page 131.



My Device

Allows you to configure device settings, view Personalize your CallerTones, Ringtones, or Wallpapers, View Quick Tools, Support, and battery storage information. For more information, refer to *“My Device”* on page 132.



Navigation

Launches a Web-based navigation application.

Caution: Traffic data is not real-time and directions may be wrong, dangerous, prohibited, or involve ferries.

For more information, refer to *“Navigation”* on page 133.



News & Weather

Launches a Web-based news and weather feed based on your current location. For more information, refer to *“News & Weather”* on page 135.



Places

Displays company logos on a layer of Google Maps. When viewing an area you can quickly locate a business or person, find out more information about the business, see coupons, public responses, and more. For more information, refer to *“Places”* on page 135.



Polaris Office

Polaris Office® Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

For more information, refer to “*Polaris Office*” on page 136.



Settings

Accesses the device's built-in Settings menu. For more information, refer to “*Changing Your Settings*” on page 163.



Slacker

Slacker® offers free, internet radio for mobile phones.

For more information, refer to “*Slacker*” on page 137.



Social Hub

Allows you to easily and intuitively satisfy all of your communication needs from within a single-user interface. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available. For more information, refer to “*Social Hub*” on page 137.



T-Mobile Mail

This downloadable application provides access to several phone features and tunes. For more information, refer to “*T-Mobile Mail*” on page 137.



T-Mobile Name ID

Allows you to modify the on-screen Caller ID information.



T-Mobile TV HD

Allows you to watch live mobile HD TV on your phone.

This application is a subscription service. For more information, refer to “*T-Mobile TV HD*” on page 138.



Talk

Launches a Web-based Google Talk application that lets you chat with family and friends over the Internet for free. For more information, refer to “*Google Talk*” on page 101.



Task

Allows you to keep track of both your current and upcoming tasks. You can also sync these tasks with different accounts.

For more information, refer to “*Task*” on page 138.



Task Manager

Use Task Manager to see which applications are running on your phone, and to end running applications to extend battery life.

For more information, refer to “*Task Manager*” on page 139.



TeleNav GPS

This driving aid provides both audible and visual navigation instructions for GPS navigation. For more information, refer to “*TeleNav GPS*” on page 139.



Tetris

Tetris® is a puzzle video game in which falling tetrominoes must be manipulated to form complete lines, which are then cleared from the grid. For more information, refer to “*Tetris*” on page 140.



Video Chat

Allows you to record and share live videos on your device with your friends, family, and your favorite social networks. For more information, refer to “*Video Chat*” on page 140.



Videos

Launches your device's built-in video application that plays video files stored on your microSD card.

For more information, refer to “*Using the Video Player*” on page 111.



Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

For more information, refer to “*Visual Voicemail*” on page 16.



Voice Recorder

Allows you to record an audio file up to one minute long and then immediately send it as a message. For more information, refer to “*Voice Recorder*” on page 141.



Voice Search

Launches your phone's built-in voice recognition software and initiates a Google search based on the recognized text. For more information, refer to “*Voice Search*” on page 141.



Web

Open the browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your phone.

For more information, refer to “*Internet*” on page 144.



Wi-Fi Calling

Provides the ability to use your available Wi-Fi data connection to make outbound calls that count against your phone minutes. Similar to VOIP (Voice Over IP). For more information, refer to “*Wi-Fi Calling*” on page 54.



Yelp

Launches the Yelp application that provides access to an online urban city guide that helps people find cool places to eat, shop, drink, relax and play. Its the fun and easy way to find, review and talk about what’s great in your world. For more information, refer to “*Yelp*” on page 142.



YouTube

Launches the YouTube webpage via the browser.

For more information, refer to “*YouTube*” on page 116.



Zinio Reader

Launches a digital magazine reader. Zinio® has transformed your favorite print magazines into digital format. For more information, refer to “*Zinio Reader*” on page 143.

Customizing the Screens

You can customize the Home screens (panels) to display the Widgets, Shortcuts, Folders, or Wallpapers. For example, one screen could contain the Music Player shortcut and other forms of media, while another screen might contain communication apps such as Gmail.

You can customize your Home screen by doing the following:

- Adding, Deleting, and Rearranging screens
- Adding and Removing Shortcuts
- Adding and Removing Widgets
- Creating Folders
- Changing the Background (Wallpapers)

Adding and Deleting Screens


Your phone comes with seven screens. You can delete these screens and then add them back later.

Note: These screens can be deleted and re-arranged.

Important! Your phone can only contain at most seven screens and at least one screen.

To delete a screen:

1. Press  →  and then tap  (**Edit**).
2. Touch and hold, then drag the undesired screen down to the **Remove** tab ().

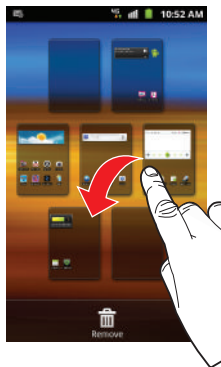

3. Press  to return to the main Home screen.

To add a screen:

1. Press  →  and then tap  (**Edit**).
2. Tap the **Add** icon (). The newly added screen appears as the last page.
3. Press  to return to the main Home screen.

Rearranging the Screens

1. Press  →  and then tap  (**Edit**).
2. Touch and hold a screen and then drag it into its new location. Upper-left is screen position #1 and bottom-right is screen last screen.

Adding and Removing Primary Shortcuts

The device comes with four Primary shortcuts: Phone, Contacts, Messaging, and Applications/Home. As long as the menu is displayed in a **Customizable grid**, you can replace the Phone, Contacts, and Messaging shortcuts with other applications so you access the shortcuts that are most frequently used.

1. Press  and then tap  (**Applications**).
2. Press  and then tap **View Type** → **Customizable grid**.
3. Press  and then tap **Edit** → **OK**. The application pages then appear at the top of the screen, the primary shortcuts appear at the

bottom, and you have the option to also generate a new folder or page to house these application shortcuts.

4. Scroll through the application pages at the top and locate the desired application.
5. Touch and hold the on-screen icon, then drag it over one of the four primary shortcuts to replace it.
 - The new primary shortcut displays at the bottom of the screen. The previous primary shortcuts switches places with your selected icon.
6. Press  and then tap **Save**.
7. Tap  to return to the Home screen.

Managing Shortcuts

Note: To move a shortcut from one screen to another, you must carefully touch and hold the shortcut and slowly drag it to the edge of the screen. As the shortcut turns light blue, you can begin to move it to the adjacent screen. If this does not work, delete it from its current screen. Activate the new screen and then add the selected shortcut.

To add a shortcut from the Applications screen:


1. Press  to go to the Home screen.
2. Select a location (screen) for your new shortcut by scrolling across your available screens until you reach the desired one.
3. Tap **Applications** () to reveal all your current available applications. By default, applications are displayed as an Alphabetical grid.
4. Scroll across the screens and locate your desired application.
5. Touch and hold the on-screen icon. The new shortcut then appears to hover over the current screen.



6. While still holding the on-screen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut via the Add to Home screen:

1. Press  to go to the Home screen.
2. Navigate to a screen with an empty area.
3. Touch and hold an empty area of the screen.
4. From the **Add to Home screen** window tap **Shortcuts**.
5. Scroll up or down the list and tap a selection.

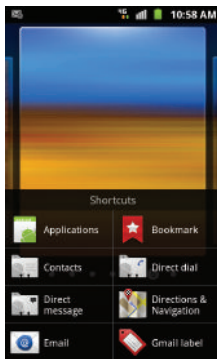

To delete a shortcut:

1. Press  to go to the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the shortcut over the **Remove** tab () and release.

Adding and Removing Widgets

Widgets are self-contained applications that can be placed on any screen. Unlike shortcuts, widgets appear as applications.

To add a Widget:

1. Press  to go to the Home screen.
2. Navigate to a screen with an empty area.
3. Touch and hold an empty area of the screen.



4. From the **Add to Home screen** window tap **Widgets**. The available widgets appear within a scrollable area across the bottom of the screen.
5. Scroll left or right across the bottom of the screen and then tap an available Widget to place it on your current screen.

To remove a Widget:

1. Touch and hold a Widget until it unlocks from the current screen.
2. Drag the widget over the **Remove** tab () and release it.
 - As you place the Widget into the Trash, both items turn red.
 - This action doesn't delete the Widget, it just removes it from the current screen.

To place a widget onto a different screen:

1. Touch and hold the widget until it becomes transparent.
2. Slowly drag it past the edge of the screen until the adjacent page appears highlighted and it then snaps onto the new page.
3. Drag the widget to its desired position on the new screen.
4. Repeat these steps to continue moving it to other screens.

Creating and Managing a Folder

Folders hold items that you want to organize and store together on the workspace.

To create a new on-screen folder:

1. Press  to go to the Home screen.
2. Touch and hold an empty area of the screen.
3. From the **Add to Home screen** window tap **Folders**.
4. Tap an available folder type and place it on the current screen.

Renaming a folder

1. Tap the desired folder you want to rename.
This opens its contents on an on-screen popup window.
2. With the folder open, touch and hold the grey Folder title bar (top of the Folder window) until the **Rename folder** pop-up displays.
3. Enter a new title for this folder and tap **Yes**.

Deleting a folder

1. Touch and hold a desired folder. This unlocks it from its location on the current screen.
2. Drag the folder over the **Remove** tab () and release it.

Managing Wallpapers

Wallpapers consist of either Gallery images (user taken), Live wallpapers (animated backgrounds), or Wallpaper gallery (default phone wallpapers).

Note: Selecting animated Live wallpapers will require additional battery power.

To change the current wallpaper:

1. Press  to go to the Home screen.
2. Touch and hold an empty area of the screen.
3. From the **Add to Home screen** window tap **Wallpapers**.
4. Select a Wallpaper:
 - Tap **Gallery** to select from a user image stored in the camera image gallery, crop the image, and tap **Save**.
 - Tap **Live wallpapers** to select from a list of animated backgrounds, once done tap **Set wallpaper**.
 - Tap **Wallpaper gallery**, scroll through the images, tap a wallpaper image, then tap **Set wallpaper**.

Section 3: Memory Card

Your device lets you use a microSD™ (SD) or microSDHC™ card (also referred to as a memory card) to expand available memory space. This secure digital card enables you to exchange images, music, and data between SD-compatible devices. This section addresses the features and options of your device's SD functionality. The device has a USB SD card mode.

- microSD card storage: up to 2GB in size
- SDHC card storage: up to 32GB in size

Using the SD Card

There are several methods for using the SD card:

1. Connecting to your PC to store files (such as music, videos, or other types of files and media).
2. To activate the camera, video, music player, and other dependant media or applications.

Important!: Your device can support SDHC cards up to 32GB capacity.

Note: Since the device comes with 16GB of built-in memory, its maximum total storage capacity is 48GB.

SD card Overview

After mounting an SD card in the device you can use your computer to access and manage the SD card.

Important!: If access to the external SD card is not available, download and install the USB drivers.

microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



- the contents of the microSD card are being scanned.



- the card is being prepared for use and for mounting.



- the card has been improperly removed.

Important!: **DO NOT** remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

Mounting the SD Card

To store photos, music, videos, and other applications. You must mount (install) the SD card prior to use. Mounting the SD card establishes a USB connection with your computer.

Important! You must enable USB storage to mount the SD card.

1. Press  →  and then tap  (Settings) → Storage.
2. Tap **Mount SD card**.

Connecting to the SD card

1. Insert the SD card into the external, SD card slot (For more information, refer to “*Installing the microSD Memory Card*” on page 8.)
2. Verify the card is properly mounted.
3. Verify the phone is not in a USB Debugging Mode. This mode is used by developers and prevents access to the phone's storage capabilities. For more information, refer to “*USB Debugging*” on page 180.
4. Connect the USB cable to the phone and connect the cable to the computer.

Unmounting the SD card

Unmounting the SD card prevents corruption and damage to the SD card while removing it from the slot.

1. Press  →  and then tap  (Settings) → Storage.
2. Tap **Unmount SD card** → OK.
3. When the “**SD card will be unmounted**” message displays and the **Mount SD card** now appears in the menu list, remove the SD card. For more information, refer to “*Removing the microSD Memory Card*” on page 9.

SD card Memory Status

To view the memory allocation for your external SD card:

- ▶ Press  →  and then tap  (Settings) → Storage. The available memory displays under the Total space and Available space headings.

Erasing Files from the SD card

You can erase files from the SD card using the phone.

1. Ensure the SD card is mounted. For more information, refer to “*Unmounting the SD card*” on page 46.
2. Press  →  and then tap  (Settings) → Storage → **Unmount SD card**.

3. Tap **Format SD card** → **Format SD card** → **Erase everything** to format the SD card. The SD card formats and erases all the data stored on it.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. Press  →  and then tap  (**Settings**) → **Privacy**.
2. Tap **Factory data reset**. This action erases all data from your device except current system software and bundled applications, or SD card files such as music or photos.

Note: This feature provides an option to format the internal USB storage, not the microSD card.

3. Tap **Format USB storage** to erase all data stored on the device's internal storage area.
4. Tap **Reset phone** → **Erase everything**.

Section 4: Call Functions and Contacts List

This section describes features and functionality associated with making or answering calls, and the Contacts list, which is used to store contact information.

Displaying Your Phone Number

- ▶ Press  →  and then tap  (**Settings**) → **About phone** → **Status**. Your phone number displays in the **My phone number** field.

Note: The phone's **Settings** menu can also be activated by pressing  and then tapping  (**Applications**) →  (**Settings**).

Making a Call

You can store phone numbers that are regularly used to the SIM card or to the phone's memory. These entries are referred to as the **Contacts list**.

1. Press  and then tap .
 2. Enter the phone number and then tap .
- ▶ If you make a mistake while dialing, tap  to clear the last digit. Touch and hold  to clear the entire sequence.

Note: When you activate the **Auto redial** (**Call > Additional options**) option in the Call settings menu, the phone automatically redials up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail.

Quick Dialing a Number from the Contacts List


1. From the Home screen, tap  (**Contacts**).
2. Locate a contact from the list.
3. In a single motion, touch and slide your finger over the number by going to the right. This action places a call to the recipient.

Ending a Call

- ▶ Briefly tap  key to end the call.

Note: To redial a recent number, tap  at the end of the call or locate the number from the Logs list, tap the entry and tap **Call**.

If you exit the current call screen and return to the Home screen, You are visually notified that you are still on an active call by the green phone icon within the Status bar (highlighted in green).

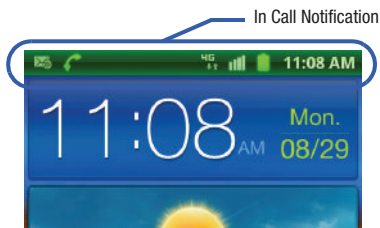

Ending a Call from the Status Bar

1. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
2. Tap **End** to end the currently active call (2).



Making Emergency Calls

If you do not have a SIM card installed the first time you turn on the phone, the **Insert SIM card to make calls** message displays and an animated tutorial shows you how to install the SIM card.

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.

Making an Emergency Call Without a SIM card installed

1. Tap **Emergency call** from the on-screen display to make an emergency call.
2. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.

Note: Selecting Location consent may drain battery power. For more information, refer to “Power Saving Mode” on page 174.

3. Tap  to exit this calling mode.

Making an Emergency Call With a SIM card installed

1. Swipe the Lock screen and access the Home screen.
2. Press  and then tap .
3. Enter the emergency number (ex: 911) and then tap .
4. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.

Note: Selecting Location consent may drain battery power. For more information, refer to “Power Saving Mode” on page 174.

5. Tap  to exit this calling mode.

Dialing Options


When you enter numbers on the Keypad, you will see three on-screen options.

From the keypad screen, use one of the following options:

- **Call** () to call the entered number.
- **Delete** () to delete digits from the current number.
- **Voice Mail** () to access your Voice Mail service.
- **Text Message** () to send the current number a new text message.

To view additional dialing options:

- ▶ Tap :
 - **Add to Contacts** to add the current number to either a new or existing Contacts entry.
 - **Speed dial setting** to access the Speed Dialing menu where you can assign a speed dial location to a current Contacts entry.
 - **Send message** to send the current caller a text message while still maintaining the current call active.

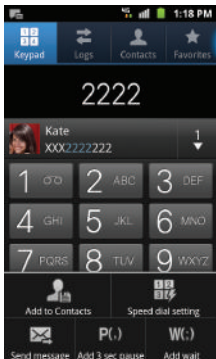

- **Add 3 sec pause** to insert a two-second pause to enter a 3-second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed).
- **Add wait** to insert a hard pause within the number string (the phone waits for your input). A wait requires that any consecutive numbers be manually sent by tapping **Send**.

Answering a Call


When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, picture, or name if stored in Contacts List, displays.

- ▶ At the incoming call screen:
 - Touch and slide  to the right to answer the call.
 - Touch and slide  to the left to reject the call.
 - Touch and drag the **Reject call with message** tab upward and tap a predefined rejection message or tap **Create new message** to create a new custom outgoing response.

Pressing the Volume down button mutes the ringer.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

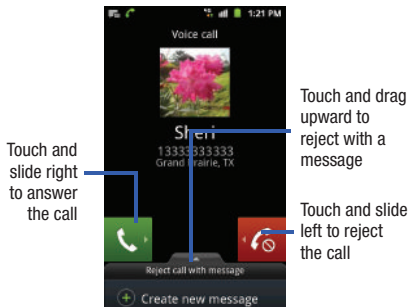

Managing Reject Calls

This feature allows you to categorize both known and unknown callers as rejected contacts. These Contacts are then added to your Rejection list which can be managed for individual entries from within the Contacts list or as a whole from the Call rejection screen.

1. From the Home screen, press  and then tap  (**Settings**) → **Call** → **Call rejection**.
2. Tap **Auto reject mode** to configure your automatic rejection settings. Rejected calls are routed automatically to your voicemail. Choose from:
 - **Off**: disables the automatic rejection feature. You must then manually reject incoming phone calls.

- **All numbers**: enables the features for all known and unknown number, including those contacts that are not assigned to the rejection list.
- **Auto reject numbers**: automatically rejects all entries assigned to the Reject list.

Adding numbers to the rejection list

Entries can be added to the list via either the Contacts menu or via the Auto reject list menu. The Contacts menu option assigns all numbers for an individual as rejected. The Auto reject list allows to assign individual numbers.

To assign multiple numbers as rejected via Contacts:

1. From the Home screen, tap  (**Contacts**).
2. Locate an entry and tap it to open the Contact Overview Screen (page 78).
3. Press  and then tap **Add to black list**. All phone numbers associated with this entry are then added to the reject list.

To assign single numbers as rejected via Auto reject list:

1. From the Home screen, press  and then tap  (**Settings**) → **Call** → **Call rejection** → **Black list**.
2. Tap  (**Add**) and either enter the phone number or select a Contact from your Logs or Contacts list.
3. Tap **Save** to complete the assignment.

International Calls

1. From the Home screen, tap , then touch and hold . The + symbol displays.
2. Use the on-screen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, tap  once to delete a single digit.
 - Touch and hold  to delete all digits.
3. Tap .

Pause Dialing

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or financial phone numbers.

- **3-Second Pause** automatically sends the next set of numbers after a three-second pause. This is indicated in the number string as a comma (,).
 - **Wait** sends the next set of numbers only after tapping . This is indicated in the number string as a semicolon (;).
1. From the Home screen, tap , and use the on-screen keypad to enter the phone number.
 2. Press  and then tap **Add 3 sec pause**. This feature adds an automatic three-second pause.
 3. Use the keypad to enter the additional numbers that will be dialed automatically after the second pause.


Tip: You can create pauses longer than three seconds by entering multiple 3-sec pauses.

4. Tap .

Wait Dialing

Inserting a Wait into your dialing sequence means that the phone waits until it hears a dial tone before proceeding with the next sequence of numbers.

1. From the Home screen, tap  and use the on-screen keypad to enter the phone number.
2. Press  and then tap **Add wait**. This feature causes the phone to require your acceptance before sending the next set of entered digits.
3. Tap .
4. Once prompted, tap  to dial the remaining digits.

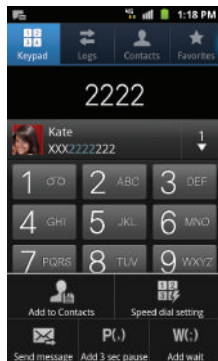

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. From the Home screen, tap .
2. Tap the **Logs** tab to display the list of recent calls.
3. Tap the name/number and tap .


Speed Dialing

Once you have stored phone numbers from your Contacts List, you can set up to 8 speed dial entries and then dial them easily whenever you want, simply by touching the associated numeric key.

Setting Up Speed Dial Entries

Important!: Speed dial location #1 is reserved for Voicemail. No other number can be assigned to this slot.

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**. The **Speed dial** screen displays a virtual keypad with the numbers 1 through 9.
3. Tap an unassigned number. The **Contacts** screen displays.

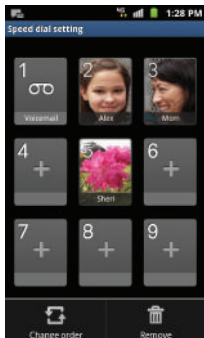

4. Tap a contact and select a number to assign to the speed dial location. The selected contact number/image is displayed in the speed dial number box.

Changing a Speed Dial Entry Order

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**.

Important!: The number 1 is reserved for Voicemail and another number cannot be assigned to this slot.

3. Press  and then tap **Change order**.

4. In a single motion, touch and drag an entry over another location on the virtual keypad.
5. Tap **Save** to store the new assignment.
6. Press  to return to the previous screen.

Removing a Speed Dial Entry

1. From the Home screen, tap .
2. Press  and then tap **Speed dial setting**.
3. Touch and hold a existing on-screen speed dial location and select **Remove** from the context menu.
— or —
Press  and then tap **Remove**. Tap an entry and select **Remove**.
4. Press  to return to the previous screen.

Making a Call Using Speed Dial

You can assign a short cut number to a phone number in the Contacts List for speed dialing.

1. From the Home screen, tap .
2. Touch and hold a speed dial location (numbers 2-9, or 1 if you are dialing voice mail) until the number begins to dial.
3. If you are not certain of the speed dial location, tap  →  → **Speed dial setting** and touch a speed dial number to view the assigned phone number.

Wi-Fi Calling

Wi-Fi Calling is a free feature for T-Mobile customers with a Wi-Fi capable phone. Wi-Fi Calling is an excellent solution for coverage issues in and around the home or wherever cellular coverage is limited. Minutes used while connected to the Wi-Fi network count against available rate plan minutes.

The benefits of Wi-Fi Calling include the following:

- Wi-Fi Calling provides a coverage option to improve upon your current in-home coverage experience
- Wi-Fi Calling works anywhere you can connect to an available Wi-Fi network.

Important: Wi-Fi must first be active and communicating prior to launching Wi-Fi Calling.

Activating Wi-Fi:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi settings**.
2. Tap **Wi-Fi** to turn it on. A checkmark displays to indicate activation.
3. Tap an available WAP (Wireless Access Point) from within the **Wi-Fi networks** area of the page. Follow the on-screen instructions to complete connection.

Note: To avoid international data roaming fees when using Wi-Fi calling when outside the United States, the Data Roaming feature on your device must be turned off.

Note: With certain rate plans, minutes used while connected to the Wi-Fi network count against available rate plan minutes.

Launching Wi-Fi Calling

Note: Verify you are currently connected to a Wireless Access Point.

1. Ensure that the **Wi-Fi connected** icon displays on the status bar. The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks display in the Wi-Fi networks section.

Note: When you select an open network you are automatically connected.



Wi-Fi Connected

Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).




Wi-Fi Communication Issue

Displays when Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).

2. From the Home screen, tap  (Applications) →  (Wi-Fi Calling).

3. If prompted to register onto the T-Mobile network prior to use, tap **Register** to complete the process.

4. Tap the slider to activate Wi-Fi Calling. The slider shows **On**. Your device connects to the T-Mobile Network.

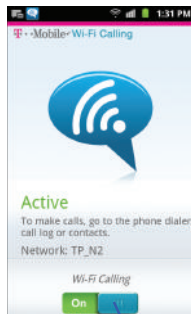

Wi-Fi Calling
activation
slider


Note: If prompted with a connection error, move the slider back to Off then back to On to re-establish the connection.

When	Action	Then
	Displays on the screen status bar.	You are connected to the T-Mobile network and can make Wi-Fi calls.
	Displays on the screen status bar.	The feature is active and you are using with within your current active call.
	Does not display on the screen status bar.	You are charged normal calling rate minutes. For more information, refer to “Wi-Fi” on page 154.

- Use the phone Dialer, call log, or contacts list to make a call. For more information, refer to “*Making a Call*” on page 48.
- Confirm you established a Wi-Fi calling connection to the T-Mobile network by making sure  appears at the top of the screen before you place your new call and  appears during the call.

In Call Options

Your phone provides a number of features that are available for use during a call.

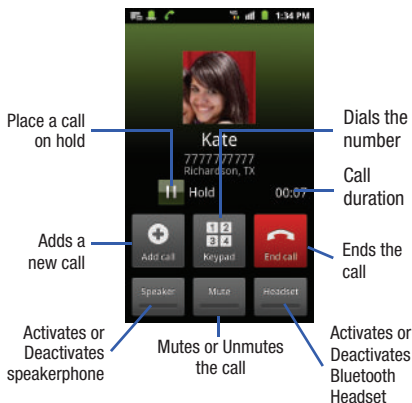

Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone, to adjust the earpiece volume.

- Press the **Up** volume key to increase the volume level and the **Down** volume key to decrease the level.

— or —

During a call, press the **Up** Volume key on the side of the device.

From the Home screen, you can also adjust the ring volume using these keys.

Placing a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:

1. Tap **Hold** to place the current call on hold.
2. Tap **Unhold** to activate the call that is on hold.

To make a new call while a call is in progress:

1. Enter the new phone number that you wish to dial or look it up in Call history.
2. Tap **Add call** to dial the second call.
3. Dial the new phone number and tap .

To switch between the two calls:

- ▶ Once the caller answers, tap **Swap**. The In call number turns gray and displays On hold. The active call displays a green background behind the number.

Turning the Speakerphone on and off

While on a call, you can use your Speakerphone by following these steps:

1. Tap  (**Speaker off**) to turn the speakerphone on.
2. Tap  (**Speaker on**) to turn the speakerphone off.

Tip: When the speaker is turned **On**, the color of the speaker is green. When the speaker is turned **Off**, the color of the speaker is gray.

Muting a Call

1. Tap  (**Mute off**) to turn mute on so the other caller cannot hear you speaking.
2. Tap  (**Mute on**) to turn mute off and resume your conversation.

Switching to Bluetooth Headset

1. While on a call, switch to the Bluetooth headset instead of speaker by tapping **Headset**.
2. At the prompt, tap **Yes** to enable Bluetooth if it is not already activated.

More In-call Options

During a call you can save the current caller's information to the Contacts list, or create a Memo.

Viewing the Contacts List

During a call you can look up a number in the Contacts list.

1. Press  and then tap **Contacts**.
2. Browse the Contacts list for the information you need.
3. Press  to return to the active call.

Creating a Memo During a Call

During a call it may be necessary to record information (a Note).

1. Press  and then tap **Memo**.
2. Use the keyboard to enter the note then tap **Save**.
 - If desired, press  and select a new memo background color before saving.

Multi-Party calls

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to participate in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call

1. From the Home screen, tap .
2. Dial the number for the first participant and tap .
3. Tap **Add call**, enter the second phone number and tap . The first caller is placed on hold.
4. Wait for the second caller to answer the incoming call and tap **Merge**. The two calls are now joined into a multi-party call and display in the order in which they were called.

Important!: A maximum of two callers can be joined to a single multi-party line. Additional callers participate in a new Multiparty session and are held in conjunction with the previous multiparty call. You can swap or place each multi-party call on hold.


Having a Private Conversation With One Participant

When you have two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:


1. Press  and then tap **Manage conference call**.
— or —

Tap the **Conference Call** image shown on page 58.

Manage Conference Call

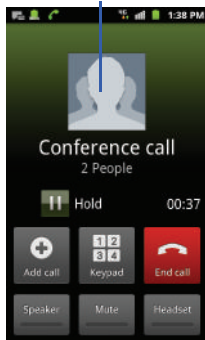

2. Tap  adjacent to the participants you would like to split from the current multi-line call. The list displays the callers in the order they were dialed.

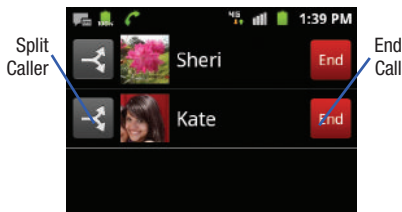

3. Tap the participant to which you want to speak privately. You can now talk privately to that person while the other participants can continue to converse with each other. If there is only one other participant, that person is placed on hold.
4. To return to the multi-party call, tap the **Merge** icon. All of the multi-party call participants can now hear each other.

Dropping One Participant

1. Press  and then tap **Manage conference call**.
2. Tap  to the right of the number to drop. The participant is disconnected and you can continue the call with the other participant.

3. Tap  to end your conversation with the remaining caller.

Call Waiting

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have previously set the Call waiting option to **Activate**.

You are notified of an incoming call by a call waiting tone. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 170.

To answer a new call while you have a call in progress:

1. In a single motion, touch and slide  to the right to answer the new incoming call.
2. Tap an option from the on-screen menu:
 - **Putting XX on hold** to place the previous caller on hold while you answer the new incoming call.
 - **Ending call with XXX** to end the previous call and answer the new call.

Note: The new caller appears at the top of the list. The previous caller is placed on hold and appears at the bottom of the list.

3. Tap **Swap** to switch between the two calls.

This places the new caller on hold and activates the previous call.

Important!: The currently active call is displayed with a green background.

4. Tap **Swap** again to switch back.

Logs Tab

The Logs tab is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. The Logs tab makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

The Notification area of the Home screen (upper-left) displays phone notifications, status, or alerts such as:



Displays when a call is in progress.



Displays when a call was missed.

Accessing the Logs Tab

1. From the Home screen, tap  →  (Logs tab).
2. Tap an entry to view available options.

Note: The Logs tab only records calls that occur while the phone is turned on. If a call is received while it is turned off, it will not be included in your calling history.

Each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).



Indicates all outgoing calls made from your device.



Indicates any received calls that were answered.



Indicates a missed call.



Indicates a rejected call.

Accessing Logs from The Notifications Area


1. Locate  from the Notifications area of the Status bar.
2. Tap the Status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel (1).
3. Tap the Missed call entry to open the Logs screen (2).



Tip: Press  and tap **Notifications** to open the panel.

This list provides easy access to redial an entry, or you can also choose to access two types of history entry lists depending on how they are touched.

Call Logs - Caller Overview

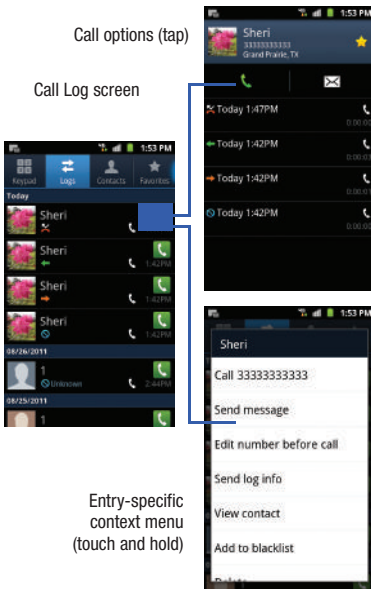

- Tap a contact entry name or number to reveal the **Call options** screen:
 - **Call** allows you to redial the entry by name or number.
 - **Send message** allows you to create a new text message to the selected entry.
 - **Time** provides the time and date of the call and its duration.
 - **Create contact** to save the number if it is not already in your Contacts.
 - **Update existing** to add the number to an existing Contacts entry.
- Touch and hold an entry to display the entry-specific context menu:
 - **Call [Number]** to redial the current phone number.
 - **Send message** allows you to create a new text message to the selected entry.
 - **Edit number before call** to make alterations to the current phone number prior to redial.
 - **Add to Contacts** to save the number if it is not already in your Contacts.
 - **Send log info** to send the Log entry information via text message.
 - **View contact** to view the information for the currently stored Contacts entry.
 - **Add to black list** to add the current phone number to an automatic rejection list. Similar to a block list, the selected caller will be blocked from making an incoming calls to your phone.
 - **Delete** to delete the entry from the Logs list.

Altering Numbers from the Logs List

If you need to make a call from the Logs screen and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.

1. From the Home screen, tap  → .
2. Touch and hold an entry to access the entry-specific context menu.
3. Tap **Edit number before call**.
4. Edit the number using the on-screen keypad or delete digits by pressing  to erase the numbers.
5. Tap  once the number has been changed.

Erasing the Logs List

You can delete either an individual call log entry or all current entries from the Logs list.

To clear a single entry from the list:

1. From the Home screen, tap  → .
2. Touch and hold an entry and select **Delete**.

To clear all entries from the list:

1. From the Home screen, tap  → .
2. Press  → **Delete**.
3. Tap **Select all** → **Delete** → **OK**.

Viewing Missed Calls from Lock Screen

When you are unable to answer a call for any reason and your screen is locked, the number of missed calls are displayed on the Lock screen immediately after a call is missed.

To view a missed call immediately:

1. Press  to reactive the screen.
2. Touch and drag the button (with the number of missed calls on it) to the right. The Logs tab is then displayed.



Section 5: Entering Text

This section describes how to select the desired text input method when entering characters into your phone. This section also describes the predictive text entry system that reduces the amount of key strokes associated with entering text.

Your phone comes equipped with an orientation detector that can tell if the phone is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text.

Your phone also provides several on-screen keypad text entry options to make the task of text entry that much easier.

Text Input Methods

There are two text input methods available:

- **Samsung keypad** (default): an on-screen QWERTY keypad that can be used in both portrait and landscape orientation.
- **Swype**: a new way to enter text on touch screens. Instead of tapping each key, use your finger to trace over each letter of a word.

The on-screen QWERTY keypad works the same in both portrait and landscape mode.

Selecting the Text Input Method


The Text Input Method can be assigned from within one of two locations:

Settings Menu:

- ▶ Press  →  and then tap 
(Settings) → Language and keyboard → Select input method.

Text Input field:

1. From a screen where you can enter text, touch and hold the text input field to open the context-menu.
2. Select the input method (**Samsung keypad** or **Swype**).

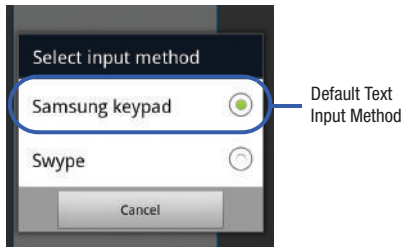

Enabling Accessibility settings

1. Press  →  and then tap  (**Settings**) → (**Accessibility**).
2. Tap **Accessibility** to activate or deactivate accessibility services. When activated, a check mark appears in the box.
3. If prompted, tap **OK** to download accessibility applications from the Android Market.
4. Follow the on-screen instructions.

For more information, refer to “*Accessibility Settings*” on page 188.

Entering Text Using Swype

Swype™ is a text input method that allows you to enter a word by sliding your finger or stylus from letter to letter, lifting your finger between words. SWYPE uses error correcting algorithms and a language model to predict the next word. SWYPE also includes a touch predictive text system.

The on-screen keyboard options are different between the Android keyboard and Swype on-screen input methods.

Enabling and Configuring SWYPE

If you configure another text input method (Samsung keypad) you must re-enable SWYPE before using the SWYPE keyboard.

When SWYPE is enabled there can also be normal keyboard functionality.

1. Press  →  and then tap  (**Settings**) → **Language and keyboard**.
2. Tap **Select input method** → **Swype**.

SWYPE Settings

To configure **Swype** settings:


1. Press  →  and then tap  → **Language and keyboard** → **Swype**.
2. Locate the **Preferences** section to alter these settings:
 - **Language:** allows you to select the current text input language. Default language is US English.
 - **Audio feedback:** turns on sounds generated by the Swype application.
 - **Show tips:** turns on helpful on-screen tips from Swype.
3. Locate the **Swype Advanced Settings** section to alter these settings:
 - **Word suggestion:** suggests words as you are typing.
 - **Auto-spacing:** automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
 - **Auto-capitalization:** automatically capitalizes the first letter of a sentence.
 - **Show complete trace:** once enabled, sets whether or not to display the complete Swype path.
 - **Speed vs. accuracy:** sets how quickly Swype responds to on-screen input. Move the slider between **Fast Response** (speed) or **Error Tolerant** (accuracy) and tap **OK**.

4. Locate the **Help** section to alter these settings:
 - **Swype help:** allows you to view the on-line user manual for Swype.
 - **Tutorial:** a short tutorial that helps you to get started using Swype.
5. Locate the **About** section to review the Swype application information:
 - **Version:** lists the Swype version number.

Swype Text Entry Tips

You can access the SwypeTips application and watch a video or tutorial on using Swype. You can also use the following Swype text entry tips.

- Create a squiggle (like an S shape) to create a double letter (such as **pp** in **apple**).
- Touch and hold a key to view the punctuation menu then make a selection.
- Move your finger or stylus over the apostrophe to enter contractions.
- Double-touch on the word you want to change to correct a misspelled word, then touch the delete key to erase one

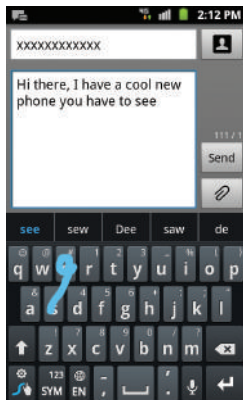

character. Touch and hold the delete key to erase an entire word.

Selecting a Text Input Mode in Swype


1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. With Swype as your text entry method, select one of the following text mode options:
 - **123 ABC**  to use Swype with alphanumeric characters from the on-screen keyboard.
 - **SYM (Symbol)**  to enter numbers and symbols from the on-screen keyboard.

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

Swype Keyboard Overview

- **Recipients:** a field where you can enter the recipients of the current message. You can choose from **Contacts, Recent, Group or Favorites**.
- **Text Input field:** a field where text, number, or other characters can be entered.
- **CAPS/ALT key:** When in 123ABC mode, this key changes the capitalization of the subsequent entered characters. When in SYM mode, this key can show additional symbol characters.
- **Text Input mode:** There are two available modes: **123ABC** and **SYM**.

- 123ABC mode contains alphanumeric characters and a few common punctuation marks. Text mode button indicates **SYM**.
- SYM mode contains only symbols and numbers. Text mode button indicates **123ABC**.
- **SWYPE tips:** Tapping this button displays the Swype tips and tutorial screen.

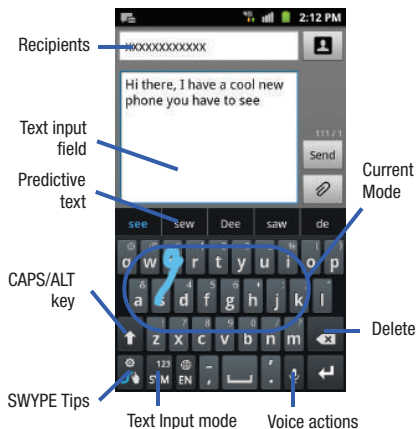

Using 123ABC Mode in SWYPE

In **123ABC** mode, you can enter only letters and a few common punctuation marks from the onscreen keyboard. The text mode key shows **123ABC**.

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.

2. Tap **123ABC** to configure the keyboard for 123ABC mode (showing letters and numbers on the onscreen keys). Once in this mode, the text input type shows **123ABC**.

Note: After typing an initial uppercase character, the key changes to and all letters that follow are in lower case.

3. Swipe your finger continuously over the letters to form a word.
 - If you make a mistake, tap to erase a single character. Touch and hold to erase an entire word.
4. Tap **Send** to send the message.



All lowercase

Displays when the next character is entered in lowercase. Pressing this while in 123SYM mode, reveals additional numeric-symbols keys.



Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.



All Uppercase

Displays when all characters will be entered as uppercase characters.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a word is entered and you lift your finger, the cursor automatically adds a space after the word.

Note: If multiple word choices exist for your Swype entry, an on-screen popup appears to provide additional word choices.

Entering Numbers and Symbols in SWYPE

By using the on-screen keyboard in portrait mode, some symbols are not available (such as Emoticons or Smileys). In SYM mode using Swype, you can only enter symbols and numbers from the on-screen keyboard. Once in SYM mode, the text mode key shows .

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. Tap  to configure the keyboard for SYM mode. Once in this mode, the text input type shows .
3. Tap the on-screen key for the number or symbol you want to enter.
4. Touch and hold an on-screen key to enter the secondary symbol (above the main one on the same key).
5. Tap  to choose from additional symbols.


For example:

- To enter **&**: tap **123SYM** and select the **&** key.
- To enter **~**: tap **123SYM** and draw a small circle over the **&** key.
or
To enter **~**: tap **123SYM** and then touch and hold the **&** key.

Using the Samsung Keypad

This QWERTY keypad is the default text input method and can be used to enter text in either a Portrait or landscape orientation. The only difference between the two orientations are the sizes of the keys.

From a screen where you enter text, rotate your phone counterclockwise to a landscape orientation. The on-screen QWERTY keypad displays.

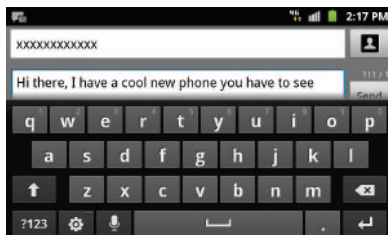

The Samsung Keypad

This phone has a built-in, QWERTY keypad (portrait mode) or keyboard (landscape mode). Using the QWERTY keypad/ keyboard, you can type letter, numbers, punctuation, and other characters.


To use the Samsung keypad you must first configure the settings to default to the Samsung keypad.

1. Press  →  and then tap 
(Settings) → Language and keyboard → Select input method → Samsung keypad.

– or –

From a screen where you can enter text, tap and hold the text input field and tap **Input method** → **Samsung keypad**.

2. The virtual keyboard is then assigned to the Samsung keypad configuration for all subsequent text input.

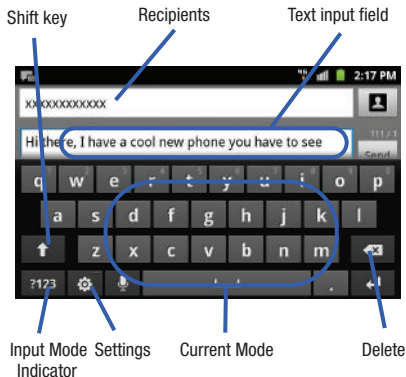

Changing the Text Input Mode in Keypad

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. With Samsung keypad as your text entry method, select one of the following text mode options:

- **Abc**  : to use alphabetic characters from the on-screen keyboard. In this mode, the text mode button displays .

- **Symbol/Numeric**  : to enter numbers by pressing the numbers selecting them on the on-screen keyboard. In this mode, the text mode button displays .

There are up to 3 available pages of numeric symbols available by tapping .

Note: After typing an initial uppercase character, tap  to toggle capitalization.



All lowercase

Displays when the next character is entered in lowercase.



Initial Uppercase

Displays when the first character of each word is entered as uppercase but all subsequent characters are lowercase.



All Uppercase

Displays when all characters will be entered as uppercase characters.

By default, the first letter of a new entry is capitalized and the following letters are lowercased. After a character is entered, the cursor automatically advances to the next space.

Using ABC Mode in Samsung Keypad

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard.
2. Tap **ABC** to configure the keyboard for ABC mode. Once in this mode, the text input type shows **?123**.

Note: After typing an initial uppercase character, the  key changes to  and all letters that follow are in lower case.

3. Enter your text using the on-screen keyboard.
 - If you make a mistake, tap  to erase a single character. Touch and hold  to erase an entire word.
4. Tap **Send** to send the message.

Using Symbol/Numeric Mode

Use the Symbol/Numeric Mode to add numbers, symbols, or emoticons. While in this mode, the text mode key displays **ABC**.

1. From a screen where you can enter text, tap the text input field to reveal the on-screen keyboard. Rotate the phone counterclockwise to a landscape orientation, if desired.
2. Tap **?123** to configure the keyboard for Symbol mode. Once in this mode, the text input type shows **ABC**.
3. Tap a number, symbol, or emoticon character.
4. Tap **ABC** to return to ABC mode.

To enter symbols:

1. Tap **?123** to configure the keyboard for Symbol mode.
 2. Tap the appropriate symbol key.
 - or –
 - Tap **1/3** button to cycle through additional pages.
- The first number on this key indicates which page (1, 2, or 3) of additional characters is active.

Using XT9 Predictive Text

XT9 is a predictive text system that has next-letter prediction and regional error correction.

Note: XT9 is only available when ABC mode is selected. XT9 advanced settings are available only if the XT9 field has been selected.

1. Press  →  and then tap  → **Language and keyboard** → **Samsung keypad**.

– or –

From within an active text entry screen, tap  from the bottom of the screen to reveal the **Samsung keypad settings** screen.

2. Set any of the following options:
 - **Portrait keypad types** allows you to choose a keypad configuration (Qwerty Keypad [default] or 3x4 Keypad).
 - **Input languages** sets the input language. Tap a language from the available list. The keyboard is updated to the selected language.
 - **XT9** enables predictive text entry mode. This must be enabled to gain access to the advanced settings.
 - **XT9 advanced settings** configuration of more advanced XT9 features. For more information, refer to “Using XT9 Predictive Text” on page 70.
 - **Keypad sweeping** allows changing between the input modes without having to use the Input Mode key. You can “sweep” the displayed keypad aside, in a similar manner to scrolling through the Home screens.

- **Auto-capitalization** automatically capitalizes the first letter of the first word in each sentence (standard English style).
- **Voice input** activates the Voice input feature. This is an experimental feature that uses Google’s networked speech recognition application.
- **Auto full stop** automatically inserts a full stop by tapping the space bar twice.
- **Tutorial** launches a brief onscreen tutorial covering the main concepts related to the Samsung keypad.

Using XT9 Predictive Text

XT9 is a predictive text system that has next-letter prediction and regional error correction, which compensates for users pressing the wrong keys on QWERTY keyboards.

1. Press  →  and then tap  → **Language and keyboard** → **Samsung keypad**.
2. Tap the **XT9** field. A checkmark indicates activation.
3. Tap the **XT9 advanced settings** and configure any of the following advanced options:
 - **Word completion** tells your device to attempt to predict how to complete the word you have started. (A green check mark indicates the feature is enabled.)
 - **Word completion point** sets how many letters should be entered before a word prediction is made. Choose from 2 letters, 3 letters, 4 letters, or 5 letters.

- **Spell correction** enables the automatic correction of typographical errors by selecting from a list of possible words that reflect both the characters of the keys you touched, and those of nearby characters. (A green check mark indicates the feature is enabled.)
- **Next word prediction** predicts the next word you are like to enter. (A green check mark indicates the feature is enabled.)
- **Auto-append** automatically adds predictions to the word you are typing. (A green check mark indicates the feature is enabled.)
- **Auto-substitution** allows the device to automatically replace misspelled or miskeyed words. This option reduce “typos.” (A green check mark indicates the feature is enabled.)
- **Regional correction** automatically tries to correct errors caused when you tap keys adjacent to the correct keys. (A green check mark indicates the feature is enabled.)
- **Recapture** sets the device to redisplay the word suggestion list after selecting the wrong word from the list.
- **XT9 my words** allows you to add new words to the built-in XT9 dictionary.
 - Tap **Add word**.
 - Use the **Register to XT9 my words** field to enter the new word.
 - Tap **Done** to store the new word.
- **XT9 auto-substitution** allows you create a word rule by adding words for automatic substitution during text entry (for example youve becomes you’ve).
 - Tap the XT9 auto-substitution field. Flick up or down to review the current list of word substitutions.
 - Press  and tap **Add**.

- Enter the original word that will be replaced in the **Shortcut** field (for example, youve).
- Enter the substitute word that will be used in the **Substitution** field (for example, you’ve).
- Tap **Done** to save the substitution rule.

4. Press  to return to the previous screen.

Section 6: Contacts

This section explains how to use and manage your Contacts List. You can save phone numbers to your phone's memory.

Accounts

From the Accounts menu you decide if you want applications to synchronize, send, and receive data at any given time, or if you want the applications to synchronize automatically. After determining how you want the accounts to synchronize, indicate which account to synchronize with your Contacts list.

1. Sign in to your Google account.

2. Press  →  and then tap  (Settings) → Accounts and sync.

– or –

From the Home screen, tap  (Applications) →  (Settings) → Accounts and sync.

3. From the **General sync settings** section, tap one of the following options:
 - **Background data:** allows your phone to use data in the background.
 - **Auto-sync:** automatically synchronizes your data with the phone.
4. From the Manage accounts area, tap  next to the account you want to synchronize.
– or –
Tap **Add account** to create a new account.


5. Tap an account type to add.
6. Follow the on-screen instructions. The selected account type synchronizes with your Contacts list.

Contacts List

Creating a Contact

The default storage location for saving phone numbers to your Contacts List is your phone's built-in memory.

If existing Google and Corporate email accounts have been synchronized to your phone, these will be made available to your device during the creation of new entries. These new Contacts entries can be assigned or saved to synced accounts such as Phone, SIM, Google, or Corporate. Your phone automatically sorts the Contacts entries alphabetically. You can create either a **Phone**, **SIM**, **T-Mobile Contacts Backup**, **Google**, or **Microsoft Exchange ActiveSync** contact.

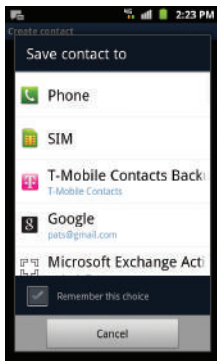

Note: Before you can save a contact to the Phone, Contact settings must be set to **Save new contacts to Phone**.

Important!: The Google and Microsoft Exchange ActiveSync account types are only visible after creating an email account of those types on your phone.

- **Phone** contacts are stored locally on the device.
-

Note: If the phone is ever reset to its factory default parameters, contacts stored on the phone can be lost.

- **SIM** contacts are stored within the SIM Card.
-

Note: SIM contacts only store the Name and Phone number for an entry.

- **T-Mobile Contacts Backup** contacts are stored remotely on the T-Mobile servers and can later be retrieved even if your phone has been damaged or reset.
 - **Google** contacts are shared with your existing Google account and can also be imported to your phone after you have created a Google Mail account.
 - **Microsoft Exchange ActiveSync** (also known as Work or Outlook) contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.
 - **Remember this choice** assigns the desired default account storage location for new Contact entries.
-

Note: When storing an entry into your SIM card, note that only the Name, and Number are saved. To save additional information for a particular contact, such as notes, email, dates, etc., it is important to save that Contact into your phone's onboard memory.

1. From the Home screen, tap  (**Contacts**).
 2. Tap  (**Create contact**) to create a contact.
-

Note: You can also add a new contact by entering a number from the keypad and pressing  and then tap **Add to Contacts** → **Create contact**. Continue with step 3.

3. Tap a destination type (**Phone**, **SIM**, **T-Mobile**, **Contacts backup**, **Google**, or **Microsoft Exchange ActiveSync**) (depending on where you want to save the new contact information).
 4. Tap the **Given name** and **Family name** fields, and enter a name for this contact using the displayed keypad.
 5. Tap the image icon and select a photo for this contact. Selections are: **Album**, or **Take photo**.
 6. Tap the label button (to the left of the **Phone number** field) to select a category such as **Mobile** (default), **Home**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom**, or **Callback**.
-

Note: These label entries can change and are dependant on the selected destination type (ex: Callback might not appear with a Google account destination type).

7. Tap a phone number field and enter a phone number.
 - Tap  on the QWERTY keyboard to remove a previously entered phone number.
 - Tap  to enter an additional phone number
 - Tap  to remove a previously entered phone number.
8. Enter additional information such as: **Internet call, Email, IM, Groups, Ringtone, Postal address, Organization or More** fields to input additional category information.
 - The **More** field contains the following options: Notes, Nickname, Website, Birthday, and Anniversary.
 - Use your finger to slide the page up or down to see additional fields and categories.
9. Tap **Save** to complete and store the new entry.

To save a Number from your Keypad:

1. From the Home screen, tap  (**Phone**).
2. Enter a phone number using the on-screen keypad.
3. Tap **Add to Contacts → Create contact** or **Update existing** (select the Contact entry from the on-screen list).
 - or –
 - Press  and then tap **Add to Contacts → Create contact** or **Update existing** (select the Contact entry from the on-screen list).

- If you're updating an existing contact, tap the entry from the list and proceed to step 5.
4. Tap a destination type (**Phone, SIM, T-Mobile Contacts backup, Google, or Microsoft Exchange ActiveSync**) (depending on where you want to save the new contact information).
 5. Tap the **Given name** and **Family name** fields, and enter a name for this contact.
 6. Tap the label button (to the left of the **Phone number** field) to select a category such as **Mobile** (default), **Home, Work, Work Fax, Home Fax, Pager, Other, Custom, or Callback**.

Note: These label entries can change and are dependant on the selected destination type (ex: Callback might not appear with a Google account destination type).

7. Tap **Save** to complete and store the new entry.

Note: For further details about how to enter characters, see *"Text Input Methods"* on page 63.

Finding a Contact

You can store phone numbers and their corresponding names onto either your SIM card, your phone's built-in memory, or an external location (such as Google, Exchange, or T-Mobile Backup). They are all physically separate but are used as a single entity, called Contacts.

Depending on the storage size of the particular SIM card, the maximum number of phone numbers the card can store may differ.

1. From the Home screen, tap  (**Contacts**).

2. Swipe up or down until you see the contact displayed.

– or –

Tap the **Search contacts** field and begin entering the entry's name. Matching entries are then displayed. This process filters through all of your current account Contact entries to only show you the matching entries.

– or –

In a single motion, touch and hold the letter tab area (on the right) until on-screen letters appear, then scroll through the list. You are then taken to that section of the Contacts list. Touch the contact entry.




Editing Contact Information

1. From the Home screen, tap .
2. Tap a contact name from the list.
3. Press  and select **Edit**.

Note: You can also access an entry's context menu by touching and holding an entry then tapping **Edit**.

4. Edit the contact information then tap **Save**.

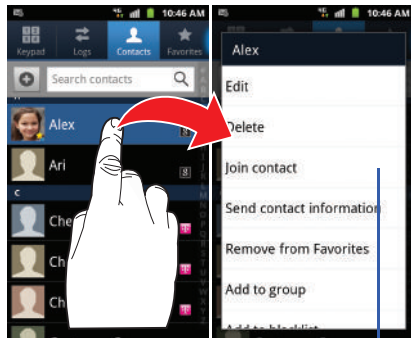

Context Menu

Adding a Number to an Existing Contact

1. From the Home screen, tap .


2. Touch and hold an entry and select **Edit** to reveal the Contact entry's details screen (page 78).

3. Tap a phone number field and enter a phone number.
• Tap 

on the QWERTY keyboard to remove a previously entered phone number.

- Tap  to enter an additional phone number
- Tap  to remove a previously entered phone number.

4. Enter additional information such as: **Internet call**, **Email**, **IM**, **Groups**, **Ringtone**, **Postal address**, **Organization** or **More** fields to input additional category information.

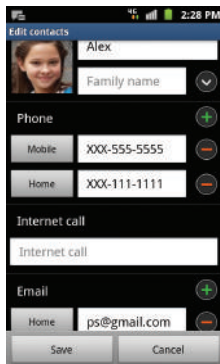

Contact Details Screen

- The **More** field contains the following options: Notes, Nickname, Website, Birthday, and Anniversary.
- Use your finger to slide the page up or down to see additional fields and categories.

5. Tap **Save** to complete and store the new entry.

Deleting Contacts

This option allows you to delete your contacts. You can delete all your entries from your phone's memory, your SIM card, FDN, or All.

Important! Once Contacts List entries are deleted, they cannot be recovered.

1. From the Home screen, tap .
2. Touch and hold a contact name from the list and select **Delete** → **OK**.

Contact List Options

1. From the Home screen, tap .
2. Press . The following options display:
 - **Delete:** allows you to delete 1 or more of your contacts.
 - **My profile:** allows you to set up a profile for yourself. The information will be the same that you can add for a new contact. Press  and tap **Edit** to alter this profile information.
 - **Sync contacts:** allows you to manually synchronize all of your current contacts with their respective accounts.

- **Merge with Google:** allows you to merge all of your current Contact entries with your active Google/Gmail account. If several of your contacts are from other sources such as Corporate email, Internet email, Facebook, etc., this allows you to “back them up” or copy them to your Gmail account. Tap **Merge** to continue or **Cancel** to exit.
- **Import/Export:** imports or exports contacts to or from the SIM card or SD card, you can also send namecards via methods such as Bluetooth, Email, Gmail, or Messaging.
- **More:**
 - **View Friends:** allows you to view only those Contact entries that have been added from Social Networking Sites (SNS) such as Facebook.
 - **Accounts:** allows you to add and manage mobile accounts on Facebook, Twitter, or MySpace. You can also add Corporate or Google accounts.
 - **Speed dial setting:** allows you to set up speed-dialing.
 - **Send email:** allows you to send an email using your Google account.
 - **Send message:** allows you to send a text or picture message.
 - **Display options:** allows you to choose to only display contacts that have phone numbers, sort by Given or Family name, display contacts Given (first) name first or Family (last) name first, display contacts stored to your SIM card, display contacts stored on your phone, and/or display contacts stored to other accounts. For more information, refer to “*Display Options*” on page 82.
 - **Settings:** allows you to configure where you save new contacts, or view your Own numbers, or Service numbers.


Contact Menu Options

1. From the Home screen, tap .
2. Touch and hold an entry to reveal the context menu. The following options display:
 - **Edit:** allows you to edit the currently selected Contacts entry.
 - **Delete:** allows you to delete the currently selected Contacts entry.
 - **Join contact:** allows you to link the current contact to another current contact. Similar to a “see also” feature. If you can’t remember a contact’s information, linking entries can help you find the person you are looking for.
 - **Send contact information:** allows you to send the current entry info via text message.
 - **Add to Favorites:** allows you to copy the current Contacts entry to the list within the Favorites tab.
 - **Remove from Favorites:** allows you to remove the current Contacts entry from the Favorites tab.
 - **Add to group:** allows you to add the current Contacts entry to an existing group.
 - **Add to black list/ Remove from black list:** allows you to add or remove the current Contacts entry to a list of automatically rejected incoming phone numbers.
 - **Send namecard via:** allows you to send the current Contact entry’s information to an external recipient via either **Bluetooth**, **Email** (Exchange or Internet), **Gmail**, or **Messaging**.

Contact Entry Options

1. From the Home screen, tap .

2. Tap an entry to reveal the **Contact entry’s Overview Screen**. This screen contains Name, contact numbers, email, and linked contact information.

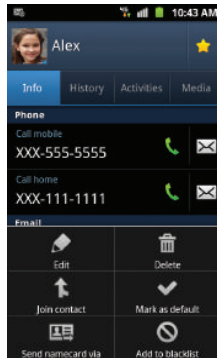

Contact Overview Screen

3. Press  to reveal the context menu specific to this entry.
4. Tap an available option.

Joining Contact Information

Most people now maintain multiple email accounts, social networking logins, and other similar account information. For example, a Facebook account login name might differ from a corporate email account login because they are maintained separately and for different groups of people.

This device can synchronize with multiple accounts (such as Facebook, Twitter, LinkedIn, Microsoft Exchange ActiveSync, Google, or T-Mobile). When you synchronize your phone with those accounts, each account creates a separate contact entry in the Contacts list.

If one of your contacts (Amy Smith) has a regular email account that you maintain in Gmail, but also has a Facebook account under her maiden and married name, as well as a Video! chat account, when you merge those accounts into your Contacts list you can join all of her entries and view the information in one record.

Joining contact information makes sending messages easy. You can select any account email address or information all from one screen, versus searching multiple, individual screens to locate the desired account information.

Next time you synchronize your phone with your accounts, any updates contacts make to email account names, email addresses, etc. automatically update in your contacts list.

1. From the Home screen, tap .

2. Tap a contact name (the name you want to link to another entry) to reveal the **Contact entry's Overview Screen**.

Note: Typically this is the same contact with a different name or account information.

3. Press  and then tap **Join contact**.
4. Tap the second contact entry (the entry in which to link). The second contact is now linked with the first and the account information is merged into one screen.

Note: The information is still maintained in both entries, but displays in one record for easier viewing when you link the contacts.

Important! It is the second contact image that is displayed for both, but the first contact's name that is used. For example: If Amy (original entry) is joined with Julie (second entry). Julie appears to disappear and only Amy remains. Tap the Amy entry (showing the Julie image) to view both.

5. Tap the main linked contact to view the contact information you linked. The contacts and information displays with an icon next to the contact name to indicate what type of account information is contained in the entry.

Unjoining a Contact

1. From the Home screen, tap .
2. Tap a contact name (the account name from which you want to unjoin an entry). This reveals the details for entry.

Note: Typically this is the same contact with a different name or account information.

3. Tap the **Joined contacts** area.
– or –
Press  and then tap **Separate contact**.
4. Tap  next to the entry you want to unjoin. The contacts are “unjoined” or separated and no longer display in the merged record screen. Both contacts now go back to being separately displayed.

Marking a Contact as Default

When you use applications such as the Voice Dialer or other messaging type applications, the application needs to know which information is primary (default) in a contact entry list. For example, when you say “Call John Smith”, if you have three phone records for John Smith, the Voice dialer is looking for the “default” number or entry.

The **Mark as default** option marks one entry in a contact record to use as the default. This comes in handy when you have multiple entries for the same person.

1. From the Home screen, tap .
2. Tap a Contact entry.
3. Press  and then tap **Mark as default**. The Mark as default screen displays radio buttons next to the contact name, phone number, or other contact information.
4. Tap the radio button next to the entry information you want to be the primary information (such as name, phone number, or email) and select **Save**.

Note: If there are multiple phone numbers assigned to an entry, assigning one as the default will automatically dial that number when the contact is selected for dialing.

Sending a Namecard

A Namecard contains contact information, and can be sent to recipients as a Virtual Business Card (V-card) attachment using Bluetooth, Google Mail, or as a message.

1. From the Home screen, tap .
2. Tap a Contact entry.
3. Press  and then tap **Send namecard via** and select a delivery method: **Bluetooth**, **Email**, **Gmail**, or **Messaging**.

The Namecard attaches to the selected message type and is delivered when you send the message.

Note: Email appears as an option only after an Internet or Exchange email account has been created.

Sending All Current Namecards

Rather than selecting once Contact entry at a time, you can send all of your current entries at once.

1. From the Home screen, tap .
2. Press  and then tap **Import/Export → Send namecard via**.
3. Tap **Select all** to place a check mark alongside all currently displayed Contact entries.
4. Tap **Send** and select a delivery method:
 - **Bluetooth** to transmit this contact to another bluetooth-compatible device.
 - **Email** to attach the contact card to a new outgoing email (Exchange or Internet).
 - **Gmail** to attach the contact card to a new outgoing Internet-based email.
 - **Messaging** to attach the contact card to a new outgoing text message.

Sending a namecard using Bluetooth

You must create a Contact prior to sending a namecard to a recipient. For more information, refer to “*Creating a Contact*” on page 72.

1. From the Home screen, tap .
2. Touch and hold the entry to reveal the on-screen context menu.
3. Tap **Send namecard via → Bluetooth**.

Important!: You must activate Bluetooth to use this feature.

4. Tap the Bluetooth device in which to send this name card. Bluetooth forwards the namecard to the recipient.

Copying Contact Information

Copying Contact Information to the SIM Card

The default storage location for saving phone numbers to your Contacts list is your phone's built-in memory. This procedure allows you to copy numbers saved to the phone's memory, onto the SIM card.

1. From the Home screen, tap .
2. From the Contacts List, press  and then tap **Import/Export → Export to SIM card**.
3. Tap **Select all** to choose all current phone contact entries.
– or –
Select a specific entry by touching an entry. A check mark indicates a selection.
4. Tap **Export**. The name and phone number for the selected contact is then copied to the SIM.

Copying Contact Information to the microSD Card

This procedure allows you to copy entry information saved on the phone's memory, onto the SIM card.

Note: These must be contacts stored on the phone. External entries (Google, Exchange, etc...) can not be transferred in this manner.

1. From the Home screen, tap .
2. From the Contacts List, press  and then tap **Import/Export** → **Export to SD card**.
3. Tap **OK** to choose all current phone contact entries.

Synchronizing Contacts

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your phone. Prior to syncing, you must first have an active Google or Microsoft Exchange account with current Contact entries, and be signed into your account via the phone.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your phone. For more information about syncing existing managed accounts, see “Accounts and Synchronization” on page 181.

1. Press  →  and then tap  → **Accounts and sync**.
2. Locate the email account containing the contacts you wish to synchronize.
3. Tap  within the adjacent account field to reveal the account's synchronization settings screen.

4. To synchronize Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.

Note: The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat step 2-3.

5. Your **Contacts** tab then reflects any updated Contact information.

Note: Syncing of contacts requires you are logged into your Gmail and Corporate accounts via the device.

Display Options

The Display options menu allows you to allows you to choose whether to display contacts saved from the Phone, SIM, T-Mobile Contacts Backup, external source, or all. You can also choose to display only contacts that have phone numbers.

1. From the Home screen, tap .
2. Press  and then tap **More** → **Display options**. Configure any of the following options:
 - **Only contacts with phones** allows you to display only those contacts containing phone numbers.
 - **Sort by** defines how the current list of Contacts are sorted: **Given name** or **Family name**.
 - **Display contacts by** defines how the current list of Contacts are listed: **Given name first** (ex: Steve Smith) or **Family name first** (Smith, Steve).
 - **Select contacts to display** allows you to filter Contacts based on category entries from within the

locations such as: **Phone, SIM, T-Mobile Contacts Backup, Google, and Microsoft Exchange ActiveSync.**

3. Tap **Done**.

Adding more Contacts via Accounts and Sync

When you synchronize applications such as Facebook, Twitter, LinkedIn, a corporate email account, or Google, using the Accounts and sync option synchronizes the data from the selected account type with your Contacts list.

1. Press  →  and then tap  → **Accounts and sync** → **Add account**.
2. Determine which type of account information you want to synchronize with your Contact list. Selections are: **Facebook, Twitter, LinkedIn, Microsoft Exchange ActiveSync, Google, Blio (T-Mobile), Samsung account, Video Chat, or T-Mobile Contacts Backup.**
3. Tap an account type to add.
4. Follow the prompts. The selected account type synchronizes with your Contacts list.
5. After synchronizing accounts you may want to link contact information. For more information, refer to “*Joining Contact Information*” on page 79.

To add Facebook content to your Contacts list:

You can now add your Facebook contact information, such as pictures, email, and phone numbers directly to your Contacts list. All of their current contact information is then migrated over to your phone. If a Contacts entry already exists with a slightly different name, separate entries are created and can later be linked (joined) together into a single entry.

Important! This process not only synchronizes your contact information but also your status, events, and more.

1. Press  →  and then tap  → **Accounts and sync** → **Add account** → **Facebook**.
2. Accept the terms of the Social Hub, tap the **I accept all terms above** field, then select **Agree**.
3. Read the on-screen descriptions and tap **Next**.
4. Log into your Facebook account:
 - Enter your account's access **Email** and **Password** information and tap **Log in**.
5. Tap those contact settings you wish to synchronize (all are enabled by default). A green circle indicates the feature is enabled.
 - Choose from: **Sync contacts, Sync message, or Sync calendar.**
6. Tap **Done** to complete the login and sync process.
7. Tap  to confirm your Facebook contacts are now synchronized and appear in your Contacts list.

To resync Social Network Contacts:

1. Press  →  and then tap  → **Accounts and sync**.
2. Tap  within the adjacent SNS account field to reveal the account's synchronization settings screen.
3. Tap **Sync Contacts**.

My Profile

You can send this Virtual Business Card (V-card) to other contacts as an attachment. My Profile is the first Contact listed in the Contacts list.

Note: As with any profile, your profile can be associated with a group.

To create My Profile:

1. From the Home screen, tap .
2. Press  and then tap **My profile**.

To edit My Profile:

1. With My profile displayed, press  and then tap **Edit**.
2. Modify any of the information contained in My Profile, then tap **Save**.

Additional Contact Options

Sending an Email to a Contact

Note: Contacts must contain an email account and address before you can use the Send email feature.

1. From the Home screen, tap .
2. Press  and then tap **More** → **Send email**.
Contacts that contain an email address display.
3. Tap the contact(s) to which you want to send an email. A check mark displays next to the selection.

Note: The select contact must have an email as part of their details screen.

4. Tap **Send**.
5. Select an email account type.
6. Compose the email and tap **Send**.

Export/Import

For more information, refer to “*Copying Contact Information*” on page 81.

Contact List Settings

From this menu you can determine the default storage location for Contacts, display your phone's primary number, and view service numbers listed in your Contact list.

1. From the Home screen, tap .
2. Press  and then tap **More** → **Settings**.

Important! The Google and Microsoft Exchange ActiveSync account types are only visible after creating an email account of those types on your phone.

3. Select one of the following options:
 - **Save new contacts to:** defines the default storage location of new Contacts. Choose from: **Always ask**, **Phone**, **SIM**, **T-Mobile Contacts Backup**, **Google**, or **Microsoft Exchange ActiveSync**.
 - **Service numbers:** displays the available service numbers.
 - **Send contact:** allows you to define what set of namecards are sent when you choose to send namecards to other sources.
 - Read the on-screen description of this feature and tap **Next**.
 - Select either **Send all namecards** or **Send individual namecards**.

Groups

This feature allows you to add a new or existing contact to a call group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.

Creating a New Caller Group

1. From the Home screen, tap  →  (Groups tab).
2. Press  and then tap **Create**.
3. Tap the **Group name** field and use the on-screen keypad to enter a new group name. For more information, refer to “*Text Input Methods*” on page 63.
4. Tap **Ringtone** and select a ringtone for the group. Selections are: **Default ringtone**, **Select sound from My files**, or **Phone ringtone**.
5. Tap **Save** to store the newly created group.

Note: Some externally maintained group types (such as Google) can only be managed or updated remotely online vs via the phone. These external types will not allow editing or deleting members locally via the phone.

Adding an Existing Entry to a Current Caller Group

1. From the Home screen, tap  → .
2. Tap a group entry →  (**Add group member**).
3. From the available list of contacts, tap the contact(s) you want to add. A check mark displays next to contact entry.
4. Tap **Add**. The selected contacts are added to the group.

Removing an Entry From a Caller Group

1. From the Home screen, tap  → .
2. Tap a group entry.
3. Press  and then tap **Remove member**.
4. Tap all of the contacts you want to remove from this group. A checkmark displays next to contact entry.
5. Tap **Remove**. The contacts are removed from the group.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. From the Home screen, tap  → .
2. Touch and hold a group entry then select **Edit group**.


3. Make modifications to the **Group name** or **Ringtone** fields. For more information, refer to “Creating a New Caller Group” on page 85.
4. Tap **Save**.

Deleting a Caller Group

1. From the Home screen, tap  → .
2. Press  and then tap **Delete**.
3. Select either **Select all** or tap the desired group.
4. Tap **Delete**.

Sending a Message to a Group

1. From the Home screen, tap  → .
2. Tap an existing group, and press  and then tap **Send message**.
– or –
Touch and hold a group entry and select **Send message**.

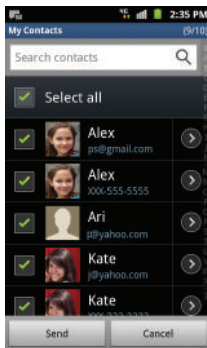

3. Select the recipients of the new message (indicated by a green checkmark). If an entry contains multiple phone numbers, each must be selected individually.
4. Tap **Send**.
5. Type your message, and tap **Send**.

The Favorites Tab

The Favorites tab is a list of the phone numbers that have been designated as favorite contacts. For more information, refer to “*Logs Tab*” on page 60.

1. From the Home screen, tap .
2. Tap  (**Favorites** tab).

Adding a contact to your favorites list:

3. From within the Favorites tab, press  and select **Add to favorites**.
4. Place a check mark alongside those current Contacts entries you wish to assign as favorites.
5. Tap **Add** to complete the process.

Section 7: Messaging

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Picture, Video, and Audio) Messages
- Email and Gmail Messages
- Google Talk

Message Icons on the Status Bar

Icons are displayed on the Status Bar at the top of the display when new messages are received. For more information, refer to “*Status Bar*” on page 20.

Creating and Sending Messages

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important! When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to “*Indicator Icons*” on page 20.

1. From the Home screen, tap  (Messaging) →  (New message).
2. Tap the **Enter recipient** field to manually enter a recipient.
— or —
Tap  to select from one of the following:
 - **Contacts:** to select a recipient from your Contacts list (valid entries must have a wireless phone number or email address).
 - **Recent:** to select a recipient from a list of recently sent messages.
 - **Groups:** to select a recipient from the Group list.
 - **Favorites:** to select a recipient from the Favorites list.
3. If adding a recipient from either Recent, Contacts, or Group, tap the contact to place a checkmark then tap **Add**. The contact displays in the recipient field.

Note: Delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

4. Tap the **Tap to enter message** field and use the on-screen keypad to enter a message. For more information, refer to “*Text Input Methods*” on page 63.
5. Add more recipients by tapping either the **Enter recipient** field or  and selecting recipients.
6. Review your message and tap **Send**.

Note: If you exit a message before you tap send the message automatically saves as a draft.

Message Options

1. From the Home screen, tap  (**Messaging**).
2. From within an open message, press  to display additional messaging options:
 - **Insert smiley:** allows you to add insert smiley icons images (emojicons).
 - **Call:** places an outgoing call to the sender.
 - **Add text:** allows you to add text items from sources such as: Location, Contacts, Calendar, Memo, Text, and Text templates.
 - **Add to Contacts:** allows you to add the new recipient to your current Contacts list as a new entry.
 - **Add/Remove slide:** converts an SMS message into an MMS (Multimedia) message and allows you to attach an existing slideshow.

– Once the message has been converted into an MMS message, press  and tap **More** to choose from these options: Add slide, Remove slide, Add subject, Duration (5 sec), Layout (bottom), or Delete message.

- **More:** (when in an SMS message - plain text) provides additional options such as: Add subject and Delete messages.

Viewing Newly Received Messages

When you receive a message, your phone notifies you by displaying  within the Notification area at the top left of your Home screen.

To read a message:

1. Open the Notification Bar and select the message. For more information, refer to “*Notification Bar*” on page 23.

– or –

From the Home screen, tap  then tap the new message to view its contents. The selected message displays on the screen.
2. Tap  to play a multimedia message.
3. In a single motion, touch and scroll up or down the page to scroll through the message (if additional pages were added).

Message Threads

Sent and received text and picture messages are grouped into message threads. Threaded messages allow you to see all the messages exchanged (similar to a chat program) and displays a contact on the screen.


Message threads are listed in the order in which they were received, with the latest message displayed at the top.

To reply to a text message:

1. From the Home screen, tap .
2. While the message is open, tap the **Type to compose** field and then type your reply message.
3. Compose your reply.

Your texts are colored Blue and your caller's replies are Yellow.

4. Tap **Send** to review your reply.

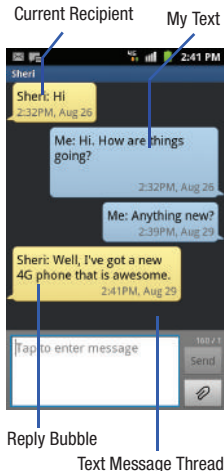

— or —

Press  and then select one of the available message options (page 89).

To access message thread options:

- From the main Messaging screen, touch and hold the message to display the following options:
 - **View contact:** displays the Contact's Overview page.
 - **Add to Contacts:** begins the process of adding the new number to your Contacts list.
 - **Delete thread:** deletes the currently selected message thread.

To access additional Bubble options:

- From within the message string screen, touch and hold the message bubble to display the following options:
 - **Delete message:** deletes the currently selected message bubble from the thread.
 - **Add to Contacts:** adds the current caller to your Contacts list.
 - **Copy message text:** copies the currently selected message bubble from the thread.
 - **Lock/Unlock message:** locks or unlocks the currently selected message bubble from being accidentally deleted.
 - **Forward:** allows you to forward the currently selected message bubble to an external recipient.
 - **Copy to SIM:** copies the currently selected message bubble as a single text message within the SIM card.

- **View message details:** displays details for the currently selected message bubble.

Deleting Messages

Deleting a message thread

1. From the Home screen, tap .
2. Touch and hold a message from the Messages list, then select **Delete thread**.
3. At the prompt, tap **OK** to delete or **Cancel** to exit.

Deleting a single message

1. From the Home screen, tap .
2. Open a message to reveal the message string.
3. Touch and hold a message bubble, then select **Delete message**.
4. At the prompt, tap **OK** to delete or **Cancel** to exit.

Deleting multiple messages

1. From the Home screen, tap .
2. Press  and then tap **Delete threads**.
3. Tap each message thread you want to delete. A checkmark displays beside each selected message.
4. Tap **Delete**.
5. At the prompt, tap **OK** to delete or **Cancel** to end the process.

Message Search

You can search through your messages by using the Message Search feature.

1. From the Home screen, tap .
2. Press  and then tap **Search**.
3. Use the on-screen keypad to enter a word or phrase in which to search, then tap .
4. All messages that contain the entered search string display.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

1. From the Home screen, tap .
2. Press  and then tap **Settings**.

The following Messaging settings are available:

Settings

- **Message font size:** enables the phone to change the display size for the on-screen front. Choose from: Normal, Small, or Tiny.
- **Background color:** enables the phone to display the messages using different contrasting colors schemes. The background color options are: Black or White.

Storage settings

- **Delete old messages:** deletes old messages when the limit is reached, rather than overwriting them.
- **Text message limit:** allows you to set a limit on how many text messages are allowed in one conversation.

- **Multimedia message limit:** allows you to set a limit on how many multimedia messages are allowed in one conversation.

Text message (SMS) settings

- **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Manage SIM card messages:** allows you to manage the messages stored on the SIM card.
- **Message Center:** allows you to enter the number of your message center where your messages reside while the system is attempting to deliver them.
- **Input mode:** allows you to set the input mode for your text messages. Choose from: GSM Alphabet, Unicode, or Automatic.

Multimedia message (MMS) settings

- **Delivery reports:** when this option is activated, the network informs you whether or not your message was delivered.
- **Read reports:** when this option is activated, your phone receives a request for a read reply along with your message to the recipient.
- **Auto-retrieve:** allows the message system to automatically retrieve messages.
- **Roaming auto-retrieve:** allows the message system to automatically retrieve while roaming.
- **Creation mode:** allows you to select the creation mode: Free, Restricted, or Warning.
 - **Restricted:** you can only create and submit messages with content belonging to the Core MM Content Domain.
 - **Warning:** the phone will warn you via pop up messages that you are creating a multimedia message which does not fit the Core MM Content Domain.

- **Free:** you may add any content to the message.

Push message settings

- **Push message:** allows you to receive push messages from the network.
- **Service loading:** allows you to set the type of service loading notification. Choose from: Always, Prompt, or Never.

Notification settings

- **Notifications:** allows you to see message notifications on your status bar.
- **Select ringtone:** allows you to set the ringtone for your message notifications.

Text Templates

This screen displays your available text message reply templates. This is a readily accessible list of both default and user-defined text snippets that can be used to quickly reply to incoming messages.

1. From the Home screen, tap .
2. From the Messaging list, press  and then tap **Text templates**.
3. Tap a message to immediately insert it into your current message conversation.

To create your own text template:

1. From the Home screen, tap .
2. From the Messaging list, press  and then tap **Text templates**.
3. Tap  (**Create template**).
4. Enter a new text string and tap **Save**.

Email

Email (or Internet Email) enables you to review and create email using several email services. You can also receive text message alerts when you receive an important email. Your phone's Email application lets you access and manage multiple email accounts simultaneously in one convenient location.


There are currently three main types of email accounts on your phone: Gmail, Internet-based email (Gmail, Yahoo, etc..), and Microsoft Exchange (Corporate email or Outlook®).

To send and receive email messages through an ISP (Internet Service Provider) account, or if you wish to use your device to access your corporate email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This protocol is frequently used in large networks and commercial settings. IMAP4 is the current standard.
- **POP3** (Post Office Protocol) - This protocol is supported by most ISPs (Internet service providers) and common among consumer applications. POP3 is the current standard.
- **Microsoft Exchange ActiveSync** - This protocol is frequently used with a large corporate email server system and provides access to email, contact, and calendar synchronization.

Creating an Internet Email Account

1. From the Home screen, tap  (Applications) →  (Email).
2. If you already have other email account setup:
 - Tap the account name field (upper-right) to open the complete email account list page.
 - Press  and then tap Add account.

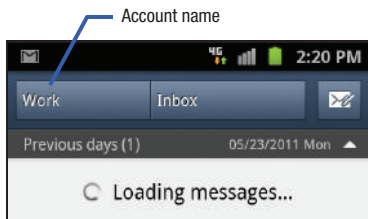

– or –

Enter your **Email address** and **Password** information. Tap **Show password** to view the password string as you enter it.

- **Email address:** your Outlook work email address.
 - **Password:** typically your network access password (case-sensitive).
3. Tap **Send email from this account by default** to make this not only your default email account, but also link it to your Social Hub (page 137).
 4. Tap **Next**. If prompted to sign up to Social Hub, tap **OK**.

- Tap **Manual setup** to configure your connection settings manually (POP3 or IMAP). Follow the on-screen prompts and enter the information specific to your email provider.
 - The unique account name is used to differentiate this account from other email accounts accessed by your device.
5. At the **Set up email** screen, name the account and enter a screen name to identify yourself on this account. If you have already setup this account, skip to step 7.
 6. Messages for this account display on the Inbox tab. You can also view Personal information for this account, Receipts (if you setup the account to return receipts), Travel information, and more (if available).
 7. Tap **Done** to store the new account.

Important! Only some “Plus” accounts include POP access allowing this program to connect. If you are not able to sign in with your correct email address and password, you may not have a paid “Plus” account. Launch the Web browser to access your account.

Opening an Email

1. From the Home screen, tap  →  (**Email**).
2. Tap the account name field (upper-right) to open the complete email account list page.

3. Select an email account and tap an email message.

Refreshing Email messages

1. From the Home screen, tap  →  (**Email**).
2. Select an email account.
 - If you are already in an email account, tap the account name field (upper-right) to open the complete email account list page.
 - Select an available email account.
3. Press  and then tap **Refresh**.

Composing Email

1. From the Home screen, tap  →  (**Email**).
2. Tap the account name field (upper-right) to open the complete email account list page.
3. Tap **Inbox** →  (**Compose**).
4. Enter the recipient's email address in the **To** field.
 - If you are sending the email message to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
5. Press  and then tap **Add Cc/Bcc** to add additional carbon copy recipients.
 - Use the **Cc** field to carbon copy additional recipients.
 - Use the **Bcc** field to blind copy additional recipients.

6. Tap the **Subject** field and enter the email subject.
7. Tap the email text field and compose your email message.
 - To add a n attachment (such as image, video, audio, etc.), tap **Attach** (from the bottom of the screen) and make a category selection.
 - Tap the file you wish to attach. If selecting an image, you can choose to select a variation of the image size.
 - Tap  to delete the attached file.
 - To insert a Gallery, Contacts, Location, Calendar, and Memo item, tap **Insert** and make a selection.
 - Tap the file you wish to attach.

Note: If you attach an image to your email, you have the option to resize it prior to delivery. Choose from: Original, Large (70%), Medium (30%), or Small (10%). Once chosen, tap OK.

8. Once complete, tap **Send**.

Configuring Email Settings


1. From the Home screen, tap  →  (Email).
2. Select an account.
3. From the email list screen, press  and then tap **More → Account settings**.
4. Alter any of the following settings:
 - **Account name:** displays your uniquely created account display name.
 - **Your name:** displays the name used in the From field of your outgoing email messages.
 - **Add signature:** Lets you attach a customized signature to the bottom of all outgoing emails.
 - **Signature:** Lets you create an email signature for your outgoing Gmail email messages.
 - **Email check frequency:** adjusts the time interval used by your device to check your email account for new email messages.
 - **Default account:** Assign this account as the default email account used for outgoing messages.
 - **Always Cc/Bcc myself** allows you to include your own email address in either the CC, Bcc, or None fields. Lets you always receive a copy of outgoing emails.
 - **Email notifications:** Activates the email notification icon to appear within the Notifications area of the status bar when a new Internet mail (Gmail, etc..) is received.
 - **Select ringtone:** Plays a selected ringtone when a new email message is received.
 - **Vibrate:** Activates a vibration when a new email message is received.
 - **Incoming settings:** Lets you specify incoming email settings, such as User name, Password, IMAP server, Security type, Port, and IMAP path prefix.
 - **Outgoing settings:** Lets you specify incoming email settings, such as SMTP server, Security type, Port, Require sign-in, User name, and Password.
 - **Forward with files:** Lets you include attachments when forwarding an email.

Microsoft Exchange Email (Outlook)

Your phone also provides access to your company's Outlook Exchange server. If your company uses either Microsoft Exchange Server 2003 or 2007, you can use this email application to wirelessly synchronize your email, Contacts, and Calendar information directly with your company's Exchange server.

Setting Up a Microsoft Exchange Email account

1. From the Home screen, tap  →  (Email).
2. If you already have other email account setup:
 - Tap the account name field (upper-left) to open the complete email account list page.
 - Press  and then tap Add account.

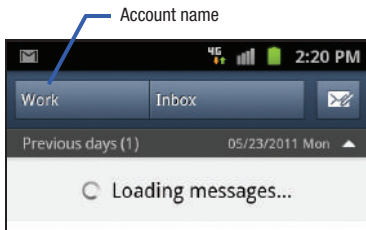

— or —

Enter your **Email address** and **Password** information. Tap **Show password** to view the password string as you enter it.

- **Email address:** your Outlook work email address.
 - **Password:** typically your network access password (case-sensitive).
3. Tap **Send email from this account by default**, to make this not only your default email account, but also link it to your Social Hub (page 137).
 4. Tap **Done** → **Next**. Consult your Network or IT Administrator for further details and support.
 5. Tap **Microsoft Exchange ActiveSync** (from the add new email account screen).
 6. When prompted to provide additional detailed information, enter an updated **Domain**, and confirm your **User name** and **Password** information.

Important!: It will be necessary for you to enter your domain information before the “\” in front of your user name.

- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a check mark in the box and activate this additional level. Most often, this option should be enabled.
- If your network requires you accept SSL certificates, tap the **Accept all SSL certificates** field to place a check mark in the box and activate this additional level. Most often, this option is not required. Confirm this information with your IT Administrator.

Important!: If your exchange server requires this feature, leaving this field unchecked can prevent connection.

7. Manually updated or re-enter your **Exchange server** information within the appropriate field.

This field can often be populated with incorrect or out of date information.

- **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator. Do not accept the default entry as this is a guess based on returned information.

Important!: The Exchange server field may not reflect the desired server information. It is recommended that you confirm this information and re-enter if necessary.

8. With the new server information entered, tap **Next**.
9. Read the on-screen activation disclaimer and, if prompted, tap **OK**.
10. Adjust the various on-screen configuration fields and tap **Next**.
11. Identify your new work email account with a unique name (Ex: Work), then tap **Done**.

Opening an Exchange Email

1. From the Home screen, tap  →  (**Email**).
2. Tap the account name field (upper-right) to open the complete email account list page.

3. Select an exchange email account and tap an email message.

Refreshing Exchange Email

1. From the Home screen, tap  →  (**Email**).
2. Select an exchange email account.
3. Press  and then tap **Refresh**.

Composing Exchange Email

1. From the Home screen, tap  →  (**Email**).
2. Tap the account name field (upper-right) to open the complete email account list page.
3. Select an exchange email account.
4. Tap **Inbox** and tap  (**Compose**).
5. Enter the recipient's email address in the **To** field.
 - If you are sending the email message to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.
6. Press  and then tap **Add Cc/Bcc** to add additional carbon copy recipients.
 - Use the **Cc** field to carbon copy additional recipients.
 - Use the **Bcc** field to blind copy additional recipients.
7. Tap the **Subject** field and enter the email subject.

8. Tap the email text field and compose your email message.
 - To add a picture attachment, tap **Attach** (from the bottom of the screen) and make a category selection.
 - Tap the file you wish to attach. If selecting an image, you can choose to select a variation of the image size.
 - Tap  to delete the attached file.

Note: If you attach an image to your email, you have the option to resize it prior to delivery. Choose from: Original, Large (70%), Medium (30%), or Small (10%). Once chosen, tap **OK**.

9. Once complete, tap **Send**.

Deleting an Exchange Email Message

- Touch and hold an email (from your inbox list) and select **Delete** from the on-screen context menu.
- or —
- With the email message displayed, tap  (**Delete**).

Configuring Microsoft Exchange Email Settings

1. Press  →  and then tap  → **Accounts and sync**.
2. Tap  adjacent to the Microsoft Exchange account field to reveal the account's synchronization settings screen.

3. Toggle either the **Sync Contacts** or **Sync Calendar** fields to force the device to manually resync either the exchange Contacts or Calendar entries.

— or —

Tap **Account settings** and specify any other email settings you wish to synchronize:

- **Account name** displays the name used by the device to track the account.
- **Add signature** activates the email signature feature.
- **Signature** allows you to create an outgoing email signature attached to new email messages sent from your phone.
- **Default account** assigns this account as the default used when sending out new email messages.
- **Always Cc/Bcc myself** allows you to include your own email address in either the CC, Bcc, or None fields. Lets you always receive a copy of outgoing emails.
- **Period to sync email** to assign the sync range for your incoming and outgoing email messages between your phone and your external exchange server. How many days worth of email messages should the phone and server synchronize. Choose from: **1 day**, **3 days**, **1 week**, **2 weeks**, or **1 month**.
- **Empty server trash:** allows you to delete your email account's trash bin remotely.
- **Sync schedule** allows you to configure your email sync schedule.
- **Out of office settings** allows you to configure your email's out of office notification settings.

- **Period to sync Calendar** assigns a period for your phone to sync calendar events.
- **Size to retrieve emails** configures the incoming email size allowed to pass through to your phone automatically without user interaction. Emails with attachments larger than configured will have to be retrieved manually.
- **Security options:** allows you to enable several security options such as: Encryption, Encryption algorithm, Sign, Sign algorithms, Email certificates, and Security policy list. These security policies could restrict some functions from corporate servers.
 - **Security policy list:** lists the current email's security policy. These policies could restrict some functions from corporate servers.
- **Email notifications** enables the device to display a status bar icon when new email messages have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Incoming settings** provides access to the Domain, password, and Exchange server settings.
- **Sync Contacts** synchronizes the contacts between your phone and the remote exchange server.
- **Sync Calendar** synchronizes your exchange calendar entries between your phone and the remote exchange server.
- **Sync Tasks** synchronizes your exchange tasks entries between your phone and the remote exchange server.

4. Press  to return to the previous page.

Using Google Mail

Google Mail (Gmail) is Google's web-based email. When you first setup the phone, Gmail is configured. Depending on the synchronization settings, Gmail is automatically synchronized with your Gmail account.

Signing into Google Mail

1. From the Home screen, tap  →  (Gmail).

Note: You must sign in to your Gmail account in order to access features such as Google Mail and Android Market.

2. Tap **Next** to add a Google account.
3. Tap **Create** if you do not have a Google account.
 - or –
 Tap **Sign in** if you have a Google account. The Inbox loads conversations and email.

Opening Gmail

1. From the Home screen, tap  →  (Gmail).
2. Tap an existing email message.

Refreshing Google Mail

- From within the Gmail message list, press  and then tap **Refresh** to send and receive new emails and synchronize your email with the Gmail account.

Composing a Gmail Message

1. From the Home screen, tap  →  (Gmail).
2. From the Gmail Inbox, press  and then tap **Compose**.
3. Enter the recipients Email address in the **To** field.

Tip: Separate multiple recipient email addresses with a comma.

4. Press  and select **Add Cc/Bcc** to add a carbon or blind copy.
5. Enter the subject of this message in the **Subject** field.
6. Tap the **Compose Mail** field and begin composing your message.
7. Once complete tap  (**Send**).


Viewing a Gmail Message

1. From the Gmail Inbox, tap a message to view the following options:
 - **Archive:** archives the selected Email.
 - **Delete:** deletes the Email.
 - **<:** displays older Emails.
 - **>:** displays newer Emails.
2. Press  to select one of the following additional options:

- **Change labels:** changes the label on the email or conversation.
- **Mark unread:** unread messages or threads with unread messages display in boldface text in the Inbox.
- **Mark important/Not important:** to change the important state of an email.
- **Go to inbox:** displays the Google Mail Inbox.
- **Mute:** mutes the conversation.
- **Add/Remove star:** click a message's star to add or remove the star (just like clicking flags in Outlook).
- **More:**
 - **Report spam:** reports the Email message as spam.
 - **Settings:** allows you to configure the General, or Notification settings.
 - **Help:** launches the browser and displays Google Mobile Help information.
 - **Select text:** allows you to select text to copy and paste.

Creating an Additional Gmail Account

1. From the Home screen, tap  →  (Gmail).
2. If you already have other email account setup:
 - Tap the account name field (upper-right) to open the complete email account list page.

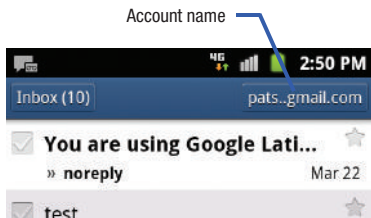

3. Tap **Add account** and follow the same steps as referenced in the previous section. For more information, refer to “*Signing into Google Mail*” on page 99.

Google Talk

Google Talk™ is a free Windows and web-based application for instant messaging offered by Google. Conversation logs are automatically saved to a Chats area in your Gmail account. This allows you to search a chat log and store them in your Gmail accounts.

You can now use Google Talk to not only have voicechats but also video conferences with connected friends.

Note: Before using this application, you must first have an active Gmail account available and be currently logged in.

1. From the Home screen, tap  →  (Talk).

Note: If you are not already logged into Google, refer to the instructions for signing in on page 99.

2. Begin using Google Talk.

Note: The Network confirms your login and processes. This could take up to 5 minutes to complete.

Section 8: Multimedia

This section explains how to use the multimedia features of your phone, including the Camera/Camcorder, Music Player, and how to manage your photos, images and sounds.

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your camera produces photos in JPEG format.

Important! Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Using the Camera

Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. From the Home screen, tap  (Camera).
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.

3. If desired, before taking the photo, use the left area of the screen to access various camera options and settings.
4. You can also tap the screen to move the focus to a desired area of interest.
5. Press  (Camera key) until the shutter sounds. (The picture is automatically stored within your designated storage location. If no microSD is installed, all pictures are stored on the Phone.) For more information, refer to “Camera and Camcorder Options” on page 102.



Camera and Camcorder Options

Options are represented by icons across both sides of the screen.

Camera Options

The following shortcuts are available for the camera:

Note: The options disappear after a few seconds. Touch the screen to display the tab, then touch the tab to view these options.

Focus area: displays the area of the image used as the main focus area.



Self portrait: allows you to set the front camera so you can take pictures of yourself or video chat.



Flash: allows you to set the flash options to Off, On, or Auto flash.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Self portrait: allows you to set the front camera so you can take pictures of yourself or video chat.

Flash: allows you to set the flash options to Off, On, or Auto flash.

Shooting mode: allows you to set the shooting mode. Options are:

- **Single shot:** takes a single photo and view it before returning to the shooting mode.
- **Smile shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it takes the picture.
- **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to itself. The guide box lets you view the area where the second part of the panoramic picture should fall within.



Settings (continued):

Scene mode: allows you to set the Scene to help take the best pictures possible.

Options include None, Portrait, Landscape, Night, Sports, Party/Indoor, Beach/Snow, Sunset, Dawn, Fall color, Firework, Text, Candlelight, and Backlight. Helpful tips are shown for each scene mode at the bottom of the display screen.

Exposure value: allows you to adjust the brightness level by moving the slider.

Focus mode: allows you to set this option to Auto focus, Macro, or Face detection. Use Auto focus for all other focal situations.

- **Auto focus:** automatically focuses the image based on the on-screen focus area.
- **Macro:** allows you to take close-up pictures.

Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 sec, 5 sec, and 10 sec.

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 3.2M (2048x1536), 2M (1600x1200), or 0.3M (640x480).

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Metering: allows you to set how the camera measures or meters the light source: Centre-weighted, Spot, or Matrix.

GPS tag: allows you to turn GPS On or Off (also known as Geotagging). The location of where the picture is taken is attached to the picture. (Only available in Camera mode.)

Shutter sound: allows you to set the Shutter sound to On or Off.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera, or down for Camcorder.



Camera button: takes a photo when pressed in Camera mode.



Image viewer: allows you to access the Image viewer and the various viewing options for a selected picture. The last picture you took, will be displayed as a thumbnail in the Image viewer icon.

Pictures and Videos Image Viewer Options

After you take a photo or record a video, you can access various options.

Photo options

- **Share:** allows you to share a picture using AllShare, Messaging, Picasa, Bluetooth, Gmail, Email, Kodak, or Snapfish.
- **Delete:** allows you to delete the current picture. Tap **OK** to delete or **Cancel**.
- **More:** provides additional options. For more information, refer to “*Camera Image Options*” on page 106.

Video options


- **Share:** allows you to share a video using AllShare, Messaging, YouTube, Bluetooth, Gmail, Email, Kodak, and Snapfish.
- **Play:** allows you to playback the current video file.
- **Delete:** allows you to delete the current video.
- **More:** provides additional options.
 - **Send to:** allows you to send the file to a Contacts entry, New Email address, or New Phone number.
 - **Set Default Destination:** allows you to assign a default action to take after taking an image (Contacts, New Email address, or New Phone number).
 - **Play:** allows you to replay the current video file.

– **Rename:** allows you to rename one or more video files.

Camera Gallery Options

The Gallery is where you can access the Gallery of stored camera images.

1. From the Home screen, tap  (**Applications**) →  (**Gallery**).
2. Select a folder location (ex: **Camera**) and select an image by tapping it once to place a green check mark on the file.
3. Press  from this main Gallery screen to reveal gallery-specific options **Send via**, **Delete**, and **More**.



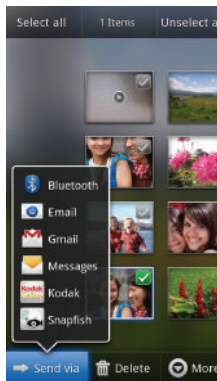


Camera Image Options

When you take a picture, the file is saved in the Photo folder. You can view your pictures immediately or view them anytime in the Photo folder.

1. From the Home screen, tap  (Applications) →  (Gallery).
2. Select a folder location and tap a file to open it in the Image viewer. Touch and drag a picture to the left to see the next picture or to the right to see the previous picture.
3. Tap the on-screen image and use either of the following image menu options:
 - **Send via:** allows you to share a picture using Bluetooth, Email, Gmail, Messaging, Kodak, or Snapfish.
 - **Delete:** allows you to delete the current image.
4. Press  and then tap **Set as** to select additional options:

- **Share via:** allows you to share a picture using AllShare or Picasa.
- **Set as:** allows you to assign the current image as either as Contact icon, Home screen Wallpaper, or Lock screen Wallpaper.

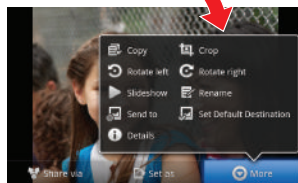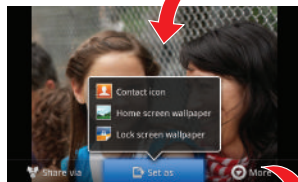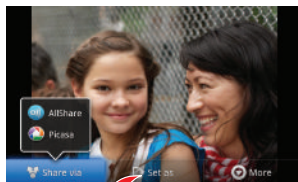

- **More:** provides you with the additional options such as:
 - **Copy:** allows you to copy one or more pictures to a different folder.
 - **Crop:** provides an on-screen box that allows you to crop the current picture. Tap **Save** to update the image with the new dimensions or tap **Discard** to ignore any changes.
 - **Rotate left:** allows you to rotate the view of the current image in a counterclockwise direction.

- **Rotate right:** allows you to rotate the view of the current image in a clockwise direction.
- **Slideshow:** adds the selected photo to a custom slideshow.
- **Rename:** allows you to change the name of the current file.
- **Send to:** allows you to send the file to a Contacts entry, New Email address, or New Phone number.
- **Set Default Destination:** allows you to assign a default action to take after taking an image (Contacts, New Email address, or New Phone number). The default storage location for pictures is DCIM > Camera folder.
- **Details:** files details such as Title, Type, Date taken, Album, Location, Latitude, Longitude, etc..

Assigning an Image as a Contact Icon

1. From the Home screen, tap  (Applications) →  (Gallery).
2. Select a folder location and tap a file to open it.
3. With the image displayed, press  and then tap **Set as → Contact icon**.
4. Tap a contact to make a selection.
5. Crop the image and tap **Save**.

Assigning an Image as a Wallpaper

1. From the Home screen, tap  (Applications) →  (Gallery).
2. Select a folder location and tap a file to open it.
3. With the image displayed, press  and then tap **Set as**.

4. Select one of the two options:
 - **Home screen Wallpaper** assigns the current image to the home screen background. This image is spread across all available screens.
 - **Lock screen Wallpaper** assigns the selected image to the background for the lock screen.
5. Touch and drag the crop box anywhere on the picture. Touch and drag the sides of the crop box to zoom in or out to create a cropped area.
6. Tap **Save** to assign the wallpaper image.
 - or –
 - Tap **Discard** to stop without updating the wallpaper image.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder that also allows you to record, view, and send high definition videos.

Note: To ensure the Camcorder can record the video, use an SDHC memory card.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. From the Home screen, tap  (**Camera**) to activate the camera mode.

2. Tap and slide the Camera mode button down to **Camcorder** Mode.
3. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camcorder at the subject.
4. Tap the **Video** key () to begin shooting video. The red light will blink while recording.
5. Tap the **Video** key () again to stop the recording and save the video file to your Camera folder.
6. Once the file has been saved, tap the image viewer, then tap () to play your video for review.
7. Press  to return to the viewer.

Camcorder Options

You can change options using your keypad in capture mode. The following short cuts are available:



Recording mode: allows you to set the recording mode to: Normal, which is limited only by available space on the destination location, Limit for MMS, which is limited by MMS size restrictions, and Self recording which activates the front-facing camera so you can video yourself.



Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.



Settings:

Edit shortcuts: allows you to set shortcut icons for the settings that you use the most.

Flash: allows you to set the flash options to Off or On. When you set the flash to On, it stays on continually while you are taking a video.

Recording mode: allows you to set the recording mode to:

- **Normal:** is limited only by available space on the destination location.
- **Limit for MMS:** is limited by MMS size restrictions.
- **Self-recording:** activates the front-facing camera so you can video yourself.

Exposure value: allows you to adjust the brightness level by moving the slider.

Timer: allows you to set a timer for how long to wait before taking a video. Options include: Off, 2 sec, 5 sec, and 10 sec.



Settings (continued):

Effects: allows you to change the color tone or apply special effects to the photo. Options include: None, Negative, Grayscale, and Sepia.

Resolution: allows you to set the image size to either: 640x480, 320x240, or 176x144.

White balance: allows you to set this option to one of the following choices: Auto, Daylight, Cloudy, Incandescent, or Fluorescent.

Storage: allows you to configure the default storage location for images or videos as either Phone or Memory card (if inserted).

Reset: allows you to reset all camera or camcorder settings to the default values.



Camera / Camcorder Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Slide the button up for Camera mode or down for Camcorder mode.



Camcorder button: shoots and stops video recording when pressed in Camcorder mode.



Image viewer: allows you to access the image viewer and the various viewing options for a selected video. Image viewer options are described in the following section. The last video you took, will be displayed as a thumbnail in the image viewer icon.

Accessing Videos

When you shoot a video, the file is saved in the Camera folder. You can view your videos immediately or view them anytime in the Camera folder.

1. From the Home screen, tap  (Applications) →  (Gallery).
2. Select a folder location and tap a video icon to begin video playback.

– or –

Touch and hold the video icon from the main Gallery to select the video (green check mark) and display the following video menu context options:

- **Send via:** allows you to share a video using Bluetooth, Email, Gmail, Messaging, Kodak, and Snapfish.
- **Delete:** allows you to delete chosen/selected pictures. Tap the checkmark, to turn it green, next to any file or folder you want to delete, then tap **Confirm deletions**.

- **More:** provides you with the additional options such as:
 - **Share via:** allows you to share your file via YouTube.
 - **Play via:** allows you to play your selected via AllShare.
 - **Rename:** allows you to rename one or more video files.
 - **Send to:** allows you to send the file to a Contacts entry, New Email address, or New Phone number.
 - **Set Default Destination:** allows you to assign a default action to take after taking an image (Contacts, New Email address, or New Phone number).
 - **Details:** displays video file information.

Files

Files allows you to manage your sounds, images, videos, Bluetooth files, Android files, and other memory card data in one convenient location. This application allows you to launch a file if the associated application is already on your phone (ex: MP4).

- From the Home screen, tap  (**Applications**)
-  (**Files**).

Note: Navigation in this viewer works on a hierarchy structure with folders, subfolders, etc.

Opening and Navigating within Files

DCIM is the default location for pictures or video taken by the device. These files are actually stored in the DCIM folder location.

1. From the Home screen, tap  (**Applications**)
-  (**Files**).

2. Tap a folder and scroll down or up until you locate your selected file.
 - **Up tab** allows you to back up into a higher directory.
 - **Home tab** allows you to back up to the root directory.
 - Press  and then tap **View by** to change the way the files are displayed on-screen. Choose from: **List**, **List and details**, or **Thumbnail**.
 - Press  for these additional options: **Share**, **Create folder**, **Delete**, **View by**, **List by**, and **More** (Move, Copy, Rename, and Settings).
3. Once you have located your file, tap the file name to launch the associated application.

The Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or caller image, and share as a picture message.

Note: If the phone displays a memory full message when accessing the Gallery, access **Files** and remove some of the media files from the folders, and then open the Gallery.

Opening the Gallery

- From the Home screen, tap  (**Applications**)
-  (**Gallery**). For more information, refer to “Camera Gallery Options” on page 105.

Note: If you stored your files in folders (directories) on the storage card, Gallery displays these folders as separate albums. The top left album contains all the pictures in the storage card.

Using the Video Player

The Video Player application plays video files stored on the SD card.

1. From the Home screen, tap  (**Applications**) →  (**Videos**). A list of videos sorted on the SD card displays in the Video list.
2. Tap a video file to begin viewing.

Media Hub

Samsung Media Hub is your one stop for the hottest movie and TV content. With hundreds of titles available, entertaining your family on the go was never easier. You can rent or purchase your favorite content and watch from any location. Featuring the stunning viewing quality Samsung is known for, Samsung Media Hub is your gateway to mobile video like you've never experienced it before.

Note: Media Hub usage is based on service availability.

Important! You must be using an active Wi-Fi/4G connection to preview and download a media file. You must have a microSD card installed prior to initiating the service. This card acts as a storage location for your downloaded rental or purchase.

Creating a New Media Hub Account

Before you can rent or buy media, you must first create an account. Enter the required information.

1. From the Home screen, tap  (**Applications**) →  (**MediaHub**).
2. If prompted, read the End-User License Agreement (EULA) and tap **Accept** to continue or **Decline** to exit.
3. Press  and then tap **My Account**.
4. Use the keypad to enter the required information, then tap **Create Account**. Follow the on-screen instructions to complete your registration.
5. From the My Account screen, you can edit parameters such as: **My Details**, **My Purchases**, **My Payment Methods**, **Manage My Devices**, **Log out**, or **Reset Media Hub**.

Using Media Hub

1. From the Home screen, tap  (**Applications**) →  (**MediaHub**).
2. Read the End-User License Agreement (EULA) and tap **Accept** to continue or **Decline** to exit.
3. At the Media Hub screen select one of the following options:
 - **What's new:** shows recently added media that is available for rent or purchase.

- **My Media:** allows you to view all of the media that you have purchased or rented. Touch a media entry to view it.
 - **Movie Store:** displays movies that are available for rent or purchase. Scroll through the movie categories at the top of the screen. Touch a category and movies of that type display.
 - **TV Store:** displays TV shows that are available for purchase. Scroll through the movie categories at the top of the screen. Touch a category and TV shows of that type display.
4. Scroll through the media listings and tap on an item you would like to purchase or rent.
 5. Tap **WATCH PREVIEW** to watch a short preview or tap **Rent** or **Own**.
 6. Choose a payment method and then follow the on-screen instructions. The media stores to the **My Media** folder.

Media Hub Notices

- Any media item (Media Content) may be rented or purchased after you create an account in Media Hub.
 - Media Content that is downloaded may be viewed concurrently on up to five (5) devices with Media Hub that are also registered to the same account.
 - You may choose to remove a device from your account no more than once every 30 days.
 - You may remove Media Content from a device as many times as you'd like. You will have the ability to re-download the Media Content at a later point in time subject to content re-download availability and studio permissions.
- You **MUST** be in network coverage to license Media Content you have acquired through the Service.
 - You must have Wi-Fi connectivity in order to download Media Content.
 - Unlike purchased Media Content, rented Media Content will be viewable on only 1 device in your account.
 - Media Content is downloaded and saved onto the SD card.
 - Your Media Content may pause/stop or not download in networks where there is a weak signal.
 - You may begin watching downloaded Media Content as soon as a) license acquisition has occurred and b) sufficient amount of the Media Content has been buffered.
 - You must finish watching rented Media Content within 24 consecutive hours of start of playback.
 - Stopping, pausing or restarting rented Media Content does not extend the available viewing time.
 - In no event will rented Media Content be available for a period of more than thirty (30) days (or shorter on a title-by-title basis) after the Media Content has been rented (e.g., if you begin viewing rented Media Content on the 29th day after the rental transaction, but do not finish viewing the entire title, that rented Media Content may not be available for the entire twenty-four (24) consecutive hour period if such period would extend the viewable time beyond the thirty (30) day rental window).
 - You cannot play any media content downloaded from Media Hub through any output on your mobile phone, including All Share.

Music

Playing Music

1. From the Home screen, tap  (Applications)

→  (Music). Music player tips display.

2. Tap **Done**.
3. Tap a tab to select the music category: **All**, **Playlists**, **Albums**, or **Artists**.
4. Scroll through the list and tap an entry to begin playback.

Note: The 5.1 channel sound effect works when earphones or sound is connected through the headset jack only.

5. The following controls are available once a song is played:



Pause the song.



Start the song after pausing.



Press and hold to rewind the song. Tap to go to previous song.



Press and hold to fast-forward the song. Tap to go to next song.



Volume control.



Allows you to listen to music using 5.1 Virtual Surround Sound.



Plays the entire song list once.



Replays the current list when the list ends.



Repeats the currently playing song.



shuffles the current list of songs randomly.



songs play in order and are not shuffled.



lists the current playlist songs



displays the current song in the player window

Making a Song a Phone Ringtone

1. From the Home screen, tap  (**Applications**) →  (**Music**).
2. Tap the **All** tab.
3. Touch and hold a song from the list to reveal the on-screen context menu.
4. Tap **Set as** → **Phone ringtone**.

Music Player Options

The Music Player Settings menu allows you to set preferences for the music player such as whether you want the music to play in the background, sound effects, and how the music menu displays.

- ▶ With the music player application displayed and playing a song, press  and select one of the following options:
 - **Add to quick list:** adds the selected music file to a quick playlist.
 - **Via Bluetooth:** plays the music through a Bluetooth stereo headset.
 - **Share music via:** shares a music file via AllShare, Bluetooth, Email, Gmail, or Messaging.
 - **Set as:** sets this song as a Phone ringtone, Caller ringtone, or Alarm tone.

- **Add to playlist:** adds a song to the playlist.
- **More:**
 - **Settings:** allows you to activate or deactivate the Equalizer, Sound effects, Music menu, or Visualization. The Music menu allows you to decide what you want to display. Selections are: Albums, Artists, Genres, Folders, Composers, Years, Most played, Recently played, or Recently added. Tap each item that you want to display in the Music menu.
 - **Details:** displays details about the selected music.
 - **Stop playing music:** stops playing the currently selected song or playlist.

Using Playlists

Playlists are used to assign music files into groups for playback. These Playlists can be created using the Music player on this device, or using a third-party application (such as Windows Media Player) and downloading those files to an SD card inserted into the device.

Creating a Playlist

1. From the Home screen, tap  (**Applications**)
→  (**Music**).
2. Tap the **Playlists** tab.
3. Press  and then tap **Create**.
4. Backspace over the default playlist title and type a new name for this playlist, then tap **Save**.

Adding Music to a Playlist

1. From the Home screen, tap  (**Applications**)
→  (**Music**).

2. Tap the **Playlists** tab.
3. Tap the playlist name in which to add music.
4. Press  and then tap **Add**.
– or –
Tap  (**Add music**).

Note: If a playlist is empty, add a song by touching a holding a song name from the main screen to open the context menu. Select **Add to playlist**.

5. Tap a music file, or tap **Select all** to add all the music tracks to this playlist then tap **Add**.

Removing Music from a Playlist

1. From the Home screen, tap  (**Applications**)
→  (**Music**).
2. Tap the **Playlists** tab.
3. Tap the playlist name in which to delete music.
4. Touch and hold a song to reveal the on-screen context menu.
5. Tap **Remove** → **OK**.

Editing a Playlist

Besides adding and removing music files in a playlist, you can also share, delete, or rename the playlist.

Only those playlist you have created can be edited. Default playlists can not be renamed.

1. From the Home screen, tap  (**Applications**)
→  (**Music**).

2. Tap the **Playlists** tab.
3. Touch and hold a playlist entry to reveal the on-screen context menu.
4. Tap **Edit title**.
5. Enter a new name for this playlist and tap **Save**.

Transferring Music Files

Music files can be downloaded to the phone using one of two methods:

1. Downloaded to the phone from or Android Market. Music files are directly stored on your phone.
2. Downloaded to the phone via a direct USB connection. Music files are stored into a Music folder on the SD card.

Note: It is recommended that you place your music into either a media or music folder. If these do not currently exist in your card, you should create them prior to transfer.

Removing Music Files

1. From the Home screen, tap  (Applications) →  (Music).
2. Tap the **All** tab.
3. Touch and hold a song entry to reveal the on-screen context menu.
4. Tap **Delete** → **OK**. The music file(s) is deleted.

T-Mobile TV HD

T-Mobile TV HD is an application that allows you to get both live Standard and High definition TV and Video on Demand.

1. From the Home screen, tap  (Applications) →  (T-Mobile TV HD). The T-Mobile Terms and Conditions page displays.

Note: A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.

2. Tap **Accept** if you accept the Terms and Conditions.
– or –
Tap **Exit** to close the application.

Note: T-Mobile TV must be initialized over a cellular network before it can be used. During this initial registration process, any current Wi-Fi connections must be disabled.

3. Tap **Disable Wi-Fi** if you currently have an active Wi-Fi connection.

4. Tap **Start Trial** to begin a free 30-day trial of the service.
5. Tap any of the following categories to begin viewing: **Live TV, On Demand, My media, More Info, Browse,** or **Live Channels.**

YouTube

YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format.

1. From the Home screen, tap  (**Applications**)
→  (**YouTube**).
2. Tap **Accept** if you accept the Terms and Conditions, or tap **Exit**.
3. When the screen loads you can begin searching and viewing posted videos.
4. Press  → **Settings** → **High quality on mobile** if you prefer high quality output.

Section 9: Applications and Development

This section outlines the various applications that are available on your phone.

Applications

The Applications list provides quick access to all the available applications on the phone.

Refer to the application table on page 32 for a description of each Application, its function, and how to navigate through that particular application. If the application is already described in another section of this user manual, then a cross reference to that particular section is provided.

411 & More

Provides more than just single tap access to directory assistance and other portals. Available categories include: 411 Directory Assistance, Current Weather, and more.

1. From the Home screen, tap  (Applications) →  (411 & More).
2. Tap an on-screen options and follow the on-screen prompts.

Accounts and sync

This application allows you to configure general synchronization settings that determine whether the background data is synchronized, and whether you automatically synchronize data with the phone.

- ▶ From the Home screen, tap  (Applications) →  (Accounts and sync).

For more information, refer to “Accounts and Synchronization” on page 181.

AllShare

This application wirelessly synchronizes your Samsung mobile phone with your TV, streams content and even keeps tabs on who calls or sends text messages with real-time, on-screen monitoring. Samsung's AllShare makes staying connected easy.

Allows users to share their in-device media content with other external devices using DLNA certified™ (Digital Living Network Alliance) Devices. These external devices must also be DLNA-compliant. Wi-Fi capability can be provided to TVs via a digital multimedia streamer.

Important! You must activate Wi-Fi to use this application. For more information, refer to “Wi-Fi settings” on page 163.

1. From the Home screen, tap  (Applications) →  (AllShare).
2. Follow the on-screen prompts.

The application contains two separate streaming media options:

- **My device** allows you to stream/share selected multimedia content from your device to DLNA compliant device connected to the same WAP.
- **Remote device** allows you to receive and playback media stored externally (server, laptop, etc.) directly on your device.

Configuring AllShare Settings

The AllShare™ application must first be configured prior to its initial use. You must setup parameters such as connected Wi-Fi, Items to share, source server address, and external device acceptance rights.

1. From the Home screen, tap  (**Applications**)
→  (**AllShare**).
2. Press  and then tap **Settings** and configure the following settings as desired:
 - **Device name:** defaults to your phone. Use the keypad to enter a new Media server if desired, and tap **Save**.
 - **Share video/photos/audio:** allows you to restrict what is shared from your phone. Tap the items you want to share.
 - **Upload from other devices:** allows you set the phone to select how uploads from other devices are started. Tap **Always accept**, **Always ask**, or **Always reject**.
 - **Default memory:** allows you to have media saved to your **Phone** or **Memory Card**. Tap an option.
 - **Subtitles:** allows you to see subtitles on shared media.

Depending on the setting you changed, a pop-up screen may display to restart AllShare. Tap **Yes** to continue.

Transmitting Media via AllShare

1. Tap the **My device** tab, select **Videos**, **Photos**, or **Music**, and then tap on the media that you would like to share.
2. At the **Select device** screen, any devices that you can share with are displayed.
3. Tap on a device to share media.

Receiving Media via AllShare

1. Tap the **Remote device** tab at the top of the screen.

All devices that you can receive media from are displayed.

2. Tap a device name. Media that you can receive from the other device is listed.
 - Tap an item that you want to stream to your phone.
3. Press  to return to the previous page.

Bejeweled 2

Bejeweled 2 is a free web-based game, sequel to Bejeweled. Start by clicking two adjacent pieces to create a line of three or more identical gems.

- From the Home screen, tap  (**Applications**)
→  (**Bejeweled 2**).

Blio

Blio is an eReading application that presents eBooks just like the printed version, in full color, and with all of the features you'd want from an eReader.

1. From the Home screen, tap  (Applications) →  (Blio).
2. Read the on-screen welcome information and tap **Close**.
3. Tap an available on-screen option and follow the prompts. Choose from: **Get, Shop, Search,** and **Read**.

Bonus Apps

Provides the procedures necessary to install the T-Mobile Bonus Apps Widget that allows you to discover those applications that are compatible specifically with your phone.

1. From the Home screen, tap  (Applications) →  (Bonus Apps).
2. Read the Widget installation and tap **OK**.
3. Once installed, locate the Widget on your screen and tap **Launch**.
4. Follow the on-screen prompts.

Books

Use Google Books to read over 3 million ebooks on the go.

Build your ebooks library in the cloud with Google Books: jump right into a bestseller or select from nearly 3 million free ebooks. Personalize the reader to your liking, pick up reading where you left off on your phone or computer, and settle down with a great book on your Android phone!

1. From the Home screen, tap  (Applications) →  (Books).
2. If prompted, tap **Turn sync on**. This synchronizes your books you have previously selected between your Books account and your device.
3. Tap  to begin searching for both free and paid ebooks.
4. Follow the on-screen prompts to download the ebook to your phone.

Calculator

Using this feature you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use this as a scientific calculator.

1. From the Home screen, tap  (Applications) →  (Calculator).
2. Enter the first number using the numeric keys.

3. Enter the operation for your calculation by tapping the **Plus**, **Minus**, **Multiplication**, or **Division** key.
4. Enter the next number.
5. To view the result, tap the = (**equals**) key.
6. Repeat steps 1 to 4 as many times as required.

Note: Place the screen in Landscape mode to reveal additional scientific functions.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder. Google Calendar is built into the phone and synchronizes both new and existing entries between your phone and your online Google account.

Important! You must have previously added an account (Facebook, Microsoft Exchange ActiveSync, or Google) prior to using the Calendar.

1. From the Home screen, tap  (**Applications**) →  (**Calendar**). The Calendar displays four tabs:
 - **Month:** displays the Month view.
 - **Week:** displays the Week view.
 - **Day:** displays the Day view.
 - **List:** allows you to search for events for the selected Month, Week, or Day, or you can look for events for a future date.

2. Press  and select one of the following options:
 - **Create:** creates a new Event.
 - **Go to:** displays a specific date.
 - **Today:** displays the date highlighted with a Blue box highlighting the date.
 - **Search:** allows you to search within current events.
 - **Delete:** allows you to delete All events, All events before today, or an individual event.
 - **Settings:** displays a list of configurable settings.

For more information, refer to “*Synchronizing Contacts*” on page 82.

To manually sync calendar events:

1. Press  →  and then tap  → **Accounts and sync**.
2. Locate the email account containing the events you wish to synchronize.
3. Tap  within the adjacent account field to reveal the account's synchronization settings screen.
4. Tap **Sync Calendar** to activate the synchronization of calendar events between your device and the remote exchange server. A green checkmark indicates the feature is enabled.

Contacts

The default storage location for saving phone numbers to your Contacts List is your phone's built-in memory.

For more information, refer to “*Contacts List*” on page 72.

Camera

Use your 3.0 megapixel camera feature to produce photos in a JPEG format. The Camcorder shoots High Definition video in an MP4 format.

Note: An SD card must be inserted before the Camera will take and store photos.

- From the Home screen, tap  (Applications) →  (Camera).

For more information, refer to “*Using the Camera*” on page 102.

Clock

Here you can set an alarm, configure and view the World clock, use a stopwatch, set a timer, and display the desk clock. The applications display in a tabular format and quickly accessed with the touch of a finger.

- From the Home screen, tap  (Applications) →  (Clock).

For more information, refer to “*Clock*” on page 160.

Downloads

Provides quick access to tabs containing a list of your current downloaded files (Internet and Other).

1. From the Home screen, tap  (Applications) →  (Downloads).
2. Tap an available file category tab (**Internet downloads** or **Other downloads**) and select the desired file. Compatible document formats can be opened by Polaris Office (page 136).

Email

Email enables you to review and create email using most email services. The device alerts you when you receive an email message.

For more information, refer to “*Email*” on page 93.

Files

Organize and store data, images, and more in your own personal file folders. Files are stored to the memory card in separate (user defined) folders.

- From the Home screen, tap  (Applications) →  (Files).

For more information, refer to “*Files*” on page 110.

Gallery

The Gallery is where you view photos and play back videos. For photos, you can also perform basic editing tasks, view a slideshow, set photos as wallpaper or caller image, and share as a picture message.

- ▶ From the Home screen, tap  (Applications)
→  (Gallery).

For more information, refer to “*The Gallery*” on page 110.

Gmail

Google Mail (Gmail) is a web-based email service. Gmail is configured when you first set up your phone. Depending on your synchronization settings, Gmail can automatically synchronize with your Gmail account on the web.

- ▶ From the Home screen, tap  (Applications)
→  (Gmail).

For more information, refer to “*Using Google Mail*” on page 99.

Google Search

Google Search is a web-based search engine that uses text-based queries to search for content on web pages.

- ▶ From the Home screen, tap  (Applications)
→  (Google Search) and enter the search text.
– or –

Tap  on the Google Search bar and say the search information. For more information, refer to “*Search Key*” on page 25. For more information, refer to “*Using Google Search*” on page 25.

Highlight

This downloadable application/widget allows you to stay up to date on relevant news, Android Market apps and games (specific to your phone), T-Mobile ringtones, CallerTunes and more.

1. From the Home screen, tap  (Applications)
→  (Highlight).
2. Accept the terms and conditions and tap **Accept**.
3. Select your desired channels/stations (sources of information) from the list and tap **Done**.
4. The application then displays information corresponding to the channel categories you selected.

To adjust the Highlight settings:

1. Press  and then tap **Settings**.
2. Enable options within these stations/channels.
3. Press  to exit the application.

Kies air

Kies air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

- From the Home screen, tap  (Applications) →  (Kies air).

For more information, refer to “Kies Air” on page 153.

Latitude

Google Latitude allows you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.

Important! You must sign in to your Google account, enable Wi-Fi, and enable the Location feature before you can use this application. For more information, refer to “Wi-Fi settings” on page 163.

Note: Although you do not have to enable location services in order to use Latitude, it is recommended for best accuracy.

1. From the Home screen, tap  (Applications) →  (Latitude).

Important! For best results, it is recommended that you enable all of your location services. For more information, refer to “Location and Security” on page 175.

2. Tap **Wi-Fi Disabled - Click to enable** connection to navigate to the Wi-Fi Settings menu where you can turn on Wi-Fi if it is not already enabled. For more information, refer to “Wi-Fi” on page 154.

Sharing your Location with Friends

1. From the Latitude map screen, tap  to display your Latitude friends. At first, only your name is displayed.
2. Press  → **Add friends**.
3. Tap **Select from Contacts** or **Add via email address**.
4. Tap a contact or enter an email address, then tap **Add friends**.
5. Tap **Yes** at the **Send sharing requests** prompt.

Your friend will receive an email or text message with your location marked on a map. They will also receive instructions on how to view your location from the web or use Latitude on their phone or tablet provided it is available. Once they acknowledge your request, their location will display on your tablet. They can share their location from their computer, phone, or tablet. For more information, go to <http://www.google.com/latitude>.

6. To view the map, press  → **See map.**

Latitude Options

- From the map display, press  to display the following options:
- **Search:** allows you to search for a place of interest.
 - **Directions:** displays navigation directions to a location from a starting point.
 - **My Places:** allows you to see locations you have marked as a favorite such as restaurants, museums, parks, and so forth. Press and hold on a location and when the screen displays with the address, tap the star in the upper-right corner. It will be listed in your Starred Places.
 - **Clear Map:** allows you to remove all markings and layers from the map.
 - **Join Latitude:** lets you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.
 - **More:** allows you to select the following additional options:
 - **Labs:** this is a testing ground for experimental features that aren't ready for primetime. They may change, break or disappear at any time. Click on a Lab to enable or disable it.
 - **Cache Settings:** allows you to set options to pre-fetch map tiles when not using Wi-Fi and to clear the cache that holds the map tiles.
 - **Help:** displays the Google Mobile Help web page where you can receive help on Google Maps.

- **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.
- **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.

Lookout Security

Lookout™ Security provides mobile device-specific security features that are coupled with a minimal performance hit. Lookout Mobile Security provides key security options that are unique to the mobile market. Along with the antivirus and anti-malware tech, there's a lost and stolen phone locator service, an application privacy adviser, and a backup service.

1. From the Home screen, tap  (**Applications**) →  (**Lookout Security**).
2. Read the on-screen descriptions and tap **Get started** to begin your configuration.
3. Read the on-screen information about Security and if desired, tap the **Enable Security** field to activate the feature.
4. Tap **Next**.
5. Read the on-screen information about Backup and if desired, tap the **Enable Backup** field to activate the feature.
6. Tap **Next**.

7. Read the on-screen information about the feature that can help locate your missing phone and if desired, tap the **New user** (to setup a new account) or Existing user (to log into your account field to activate the feature).

8. Tap **Start Lookout**.

From the main application, the main features are presented as buttons. Tap one to reveal a button that will run the feature.

Maps

Google Maps allow you to track your current location, view real-time traffic issues, and view detailed destination directions. There is also a search tool included to help you locate places of interest or a specific address. You can view locations on a vector or aerial map, or you can view locations at the street level.

Important!: Before using Google Maps you must have an active data (3G/4G) or Wi-Fi connection. The Maps application does not cover every country or city.

- From the Home screen, tap  (Applications) →  (Maps).

Important!: For best results, it is recommended that you enable all of your location services. For more information, refer to “*Location and Security*” on page 175.

Enabling a Location source

Before you use Google Maps and find your location or search for places of interest, you must enable a location source. To enable the location source you must enable the wireless network, or enable the GPS satellites.

Important!: The more location determining functions are enabled, the more accurate the determination will be of your position.

1. Press  →  and then tap  (Settings) → **Location and security**.
2. Tap **Use wireless networks** to enable GPS to determine location based on nearby cell towers.
3. Tap **Use GPS satellites** to enable the GPS satellite.
4. Tap **Use sensor aiding** to enhance positioning and save power using sensors.

Tip: When using Google Maps you can turn on Enable GPS satellites. Selecting GPS satellites allows you to locate places of interest at the street-level. However, this also requires a clear view of the sky and uses more battery power.

Opening Maps

1. From the Home screen, tap  (**Applications**)
→  (**Maps**).

2. Locate the top row of the applications to access additional options:

- **Search Maps:** allows you to search for a place of interest.
- **Places:** provides access to the places menu where you can quickly locate a business or person, find out more information about a business, see coupons, public responses, and more (page 135). Locate and tap one of the listed places (Restaurants, Coffee, Bars, Attractions, ATMs, Gas Stations, Explore Nearby, or Add your own place.)
A list of places within this category displays.
- **Layers:** allows you to switch map views:
 - **Traffic:** (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - **Satellite:** Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - **Terrain:** combines a topographical view of the area's terrain with the current map location.
 - **Transit Lines:** displays the overlapping transit lines on your map.
 - **Latitude:** allows you to see your friend's locations and share your location with them.
 - **My Maps:** displays a list of your preferred maps.
 - **Bicycling:** displays the overlapping cycling trails on your map.

– **Wikipedia:** displays any Wikipedia markers and info on your map.

- **My Location:** when touched, the location displays on the map with a blinking blue dot.

3. Press  and select one of the following options:

- **Search:** allows you to search for a place of interest.
- **Directions:** displays navigation directions to a location from a starting point.
- **My Places:** marks favorite locations on the map. These items are automatically synchronized with maps.
- **Clear Map:** after viewing or following directions, this option resets the map.
- **Join Latitude:** lets you and your friends share locations and status messages with each other. It also lets you send instant messages and emails, make phone calls, and get directions to your friends' locations.
- **More:**
 - **Labs:** a testing ground for experimental features that are not ready to use publicly.
 - **Cache Settings:** provides the ability to setup maps that are cached into the phone's memory (while not on a Wi-Fi connection) or to clear the cache of map titles.
 - **Help:** uses the browser to display a searchable Google Mobile Help screen.
 - **Terms, Privacy & Notices:** displays the Terms and Conditions, Privacy Policy, or Legal Notices information. Select the desired information from the pop-up menu.
 - **About:** displays general information about Google maps such as Version, Platform, Locale, Total data sent, Total data received, Free memory, etc.

Market

Android Market provides access to downloadable applications and games to install on your phone. Android Market also allows you to provide feedback and comments about an application, or flag an application that might be incompatible with your phone.

Accessing the Market

1. From the Home screen, tap  (Applications) →  (Market).
2. If not already logged in with your Google account, tap **Next**.
3. Tap **Sign in** and enter your Google account information.
4. Tap **Accept** to agree to the Android Market terms of service.

For more information, refer to “*Downloading a New Google Application*” on page 127.

Downloading a New Google Application

To download a new application, you will need to use your Google account to sign in to Android Market. The Android Market home page provides several ways to find applications. The home page features applications and includes a list of item applications by category, a list of games, a link to search, and a link to My apps.

1. From the Home screen, tap  (Applications) →  (Market).

2. Browse through the categories, find an application you're interested in, and tap the name.
3. Read the application descriptions.

Important! If the selected application requires access to data or control of a function on your phone, Market displays the information the application will access.

Tap **OK** if you agree to the conditions of the application. Once you tap **OK** on this screen you are responsible for using this application on the phone and the amount of data it uses. Use this feature with caution.

4. Tap **Install**.

Note: Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. If prompted, follow the on-screen instructions to pay for the application.
6. Check the progress of the current download by opening the Notifications panel.
7. After the item is downloaded and installed on your phone, the content download icon  appears in the notification area of the status bar.
8. On the Android Market screen, press  and then tap **My apps**, tap the installed application in the list, and then tap **Open**.

Tip: The newly downloaded applications display in the applications list and are shown in alphabetical order if the View Type is set to Alphabetical grid or Alphabetical list, or at the end of the list if View type is set to Customizable grid.

Note: A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.

Launching an Installed Google Application

1. From the Home screen, tap  (Applications).
2. Tap the newly installed application. This application is typically located on the last Applications page.

Android Development

This device can be used for Android application development. You can write applications in the SDK and install them on this device, then run the applications using the hardware, system, and network.

Warning! Android Dev Phones are not intended for non-developer end-users. Because the device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Unknown sources

This feature can be used for Android application development. The feature allows developers to install non-Market applications.

1. Press  →  and then tap  (Settings) → Applications → Unknown sources.

Unknown sources displays a check mark to indicate it is active.

Manage applications

This feature allows you to manage and remove installed applications. You can also view the amount of memory or resources used as well as the remaining memory and resources for each of the applications on your phone and clear the data, cache, or defaults.

- Press  →  and then tap  (Settings) → Applications → Manage applications.

Clearing application cache and data

1. Press  →  and then tap  (Settings) → Applications → Manage applications.
2. Tap an application in which to clear the cache or data.
3. Tap **Force stop**, **Uninstall**, **Clear data**, **Move to SD card**, **Clear cache**, or **Clear defaults**.

Uninstalling third-party applications

You can uninstall any application you downloaded and installed from Android Market.

1. Press  →  and then tap  (Settings) → **Applications** → **Manage applications**.
2. Tap the third-party application, and from the **Application info** screen, tap **Uninstall**.

Media Hub

- From the Home screen, tap  (Applications) →  (MediaHub).

For more information, refer to “Media Hub” on page 111.

Memo

This feature allows you to create a memo.

1. From the Home screen, tap  (Applications) →  (Memo).
2. Tap **Create memo**.
3. Compose the memo.
4. Press  and select a color, then tap **Save**.

For more information, refer to “Text Input Methods” on page 63.

Memo options

1. While viewing the list of Memos, press  and select one of the following options:
 - **Create**: allows you to create a memo.
 - **Delete**: allows you to delete one or more memos.
 - **Search**: allows you to search within the current set of memos.
 - **Send**: allows you to send one or several of your memos at one time. Select a memo and tap send to deliver it via: Bluetooth, Email, or Messaging.
 - **Sort by**: allows you to sort by Date or Color.
 - **More**: provides the following options:
 - **SNS log in**: allows you to log into your Facebook, Twitter, or LinkedIn accounts.
 - **Sync memo**: allows you to sync your memos Google Docs or send individual memos.
 - **PIN lock**: allows you to set a PIN lock so that a PIN must be entered before reading a memo.
2. Touch and hold the memo then select **Send** and choose the method to send this memo: **Bluetooth, Email, or Messaging**.
3. From the memo list, touch the upper-left edit button and select a color for the memo's background, then tap **Save**.

Messaging

This application allows you to use the Short Message Service (SMS) to send and receive short text messages to and from other mobile phones.

You can also use the Multi Media Service (MMS) to create multimedia messages to send and receive from other mobile phones.

- ▶ From the Home screen, tap  (Applications)
→  (Messaging).

For more information, refer to “Messaging” on page 88.

Mini Diary

This application allows you to create a mini diary where you can add a photo, and text to describe an event or other memorable life event.

1. From the Home screen, tap  (Applications)
→  (Mini Diary). Any diary entries display in a list.
2. If prompted, tap **Yes** to allow required network connectivity.
3. Tap the **Tap to add photo** field to add a photo for this diary event and touch the source.
Selections are: **Camera**, or **Gallery**.
4. Tap the **Add location** area of the screen, enter text, then tap **Done**.
5. Tap the **Tap to add text** area of the screen and enter text then tap **Done**.

6. Tap the weather data icon in the upper, right corner (above the photo) and select a weather condition from the list to describe the weather conditions for this entry.
7. Tap **Save**.

Mini Diary settings

1. From the Home screen, tap  (Applications)
→  (Mini Diary).
2. From the main Diary listings page, press  and then tap **Settings**.
3. Tap **Auto update** if you want the settings to automatically update.

Deleting a Mini Diary entry

1. From the Home screen, tap  (Applications)
→ .
2. Press  and then tap **Delete all**.

Mini Diary options

1. From the Home screen, tap  (Applications)
→ .
2. Select a diary.
3. Press  and select one of the following options:
 - **Create**: creates a new diary entry.
 - **Delete**: deletes the displayed entry.
 - **Edit**: allows you to edit the current diary entry.

- **Change photo:** replaces the photo in this entry by allowing you to take another photo or use another image.
- **Delete photo:** deletes the photo from this entry when you touch Yes to confirm.
- **More:** provides additional options such as: **Publish** (SNS service such as Facebook) and **Send via** (to deliver the entry via either Email or Messaging).

More for Me

Provides customized offers, discounts and deals right to your phone by providing some brief customer and location information. The application uses your current location to bring you the best deals in your area.

Initial Setup

1. From the Home screen, tap  (Applications) →  (More for Me).
2. Read the on-screen information and configure the necessary options such as: Gender, Age, and agreements.
3. Tap **Continue** to complete the setup process.

Using the More for Me Application

1. From the Home screen, tap  (Applications) →  (More for Me).
2. Access an available tab for more options:
 - **Just for Me:** displays a listing of current offers available within your current area.

- **All Deals:** Provides you with common categories to choose from, such as: Food & Drinks, Health & Beauty, Retail & Service, Activities, Events, Other, and All nearby.
- **My Deals:** displays a list of previously redeemed offers.
- **Settings:** Provides access to configuration settings such as: Get Better Deals, Connect with Facebook, and Terms & Conditions.

Music

This application allows you to play music files that you have stored on your microSD card. You can also create playlists.

- ▶ From the Home screen, tap  (Applications) →  (Music).

For more information, refer to “Music” on page 112.

My Account

This option provides you with account specific information such as your current activity, billing information, and Plan Services information. You can also set alerts for minute or message usage, payment reminder, or power saver.

Note: You may be prompted to log into the Android Market to receive the latest version of the T-Mobile My Account application.

The differences between My Account and My Device are these:

- **My Account:** check Activity, set Alerts and Events, review Billing, and review your current Plan and services.

- **My Device:** access Support, view Quick Tools, Personalize settings, and Storage & Battery.

Tip: Use the Menu key to toggle between My Account and My Device.

1. From the Home screen, tap  (**Applications**)
→  (**My Account**).
2. Read the on-screen information and tap **OK**.

The initial screen displays four tabs: Activity, Set Alerts, Billing, and Plan.

Activity

The Activity tab displays your current minute and message activity. You can view what percentage of minutes were used as well as the number of messages used for a particular start date.

Alerts and Events

From this screen you can activate alerts to notify you of the following:

- **Alert Settings:** sets when you would receive alerts for the following:
 - **Minute Usage:** tracks the number of minutes used and remaining in your plan. Minute Usage Reminder: sends an alert when the number of minutes used reaches 75 percent of the total available minutes in the plan. Over Limit Alert: sends an alert when usage exceeds your plan's total available minutes.
 - **Message Usage:** tracks the number of messages used and remaining in your plan. If you plan includes unlimited messages this setting does not apply.

- **Data Usage:** tracks data used and remaining in your plan. If you plan includes unlimited data usage this setting does not apply.
- **Payment Reminder:** alerts when your bill is due.
- **Power Saver:** sends an alert when the battery level reaches 30 percent. The alert displays in the notification window. This alert is automatically set to **On**.
- **Support Alerts:** allows you to enable automated troubleshooting.
- **Recent Order Status:** Displays details about your recent orders.
- **Account Events:** provides details about your recent account events.

Billing

This provides a billing summary.

Plan

This screen displays specific information and charges for your current plan and services. The screen also displays additional services information and charges. Included categories include: My plan & services, Additional Services, and T-Mobile Offers.

My Device

Use the My Device application to configure device settings, view support information, personalize your CallerTones, Ringtones, or Wallpapers, or view battery storage information.

1. From the Home screen, tap  (**Applications**)
→  (**My Device**).
2. Read the on-screen information and tap **OK**.

Tip: Use the Menu key () to toggle between My Account and My Device.

The differences between My Account and My Device are these:

- **My Account:** check Activity, set Alerts and Events, review Billing, and review your current Plan and services.
- **My Device:** access Support, view Quick Tools, Personalize settings, and Storage & Battery.

The initial screen displays four tabs: Personalize, Quick Tools, Support, and Storage Battery.

Support

Displays support information such as: Device Restart, Device Storage, My Account Feedback, T-Mobile Forums, T-Mobile on Twitter, and T-Mobile® Tech Assist™.

Quick Tools

Quick Tools is a shortcut that allows you to view and configure the following features and parameters: Wi-Fi, Bluetooth, Data Roaming, GPS, Brightness, Screen Timeout, and Phone Info.

Personalize

Using this menu you can personalize CallerTunes, Ringtone, and Wallpapers.

- **Caller Tunes:** allows you to choose songs for your callers to hear.
- **Ringtones:** you can personalize your phone's ringtones by choosing from recordings, voices, and more.

- **Wallpapers:** you can personalize your phone's background by selecting wallpapers from the Shop, Gallery, Live Wallpapers, and the Wallpaper Gallery.

Storage & Battery

From this tab you can view Memory storage information for the phone or memory card. You can also view the battery level percentage and other information.

Navigation

Google Maps Navigation (Beta) is an internet-connected turn-by-turn, GPS navigation system with voice guidance.

Caution! Traffic data is not real-time and directions may be wrong, dangerous, prohibited, or involve ferries.

Important! To receive better GPS signals, avoid using your device in the following conditions:

- inside a building or between buildings
- in a tunnel or underground passage
- in poor weather
- around high-voltage or electromagnetic fields
- in a vehicle with tinted windows

- From the Home screen, tap  (Applications) →  (Navigation).

Enabling GPS Location

1. Press  →  and then tap  (Settings) → **Location and security**

2. Tap **Use wireless networks**. A green check mark indicates the GPS location feature has been enhanced by using Wi-Fi and/or mobile networks to increase accuracy.
3. Tap **Use GPS satellites**. A green check mark indicates the GPS location feature is enabled.
4. Tap **Use sensor aiding**. A green check mark indicates the phone is enhancing its positioning ability and save power by using sensors.

Navigation options

1. From the Home screen, tap  →  (**Navigation**). The navigation application can be configured from the main screen.
2. Read the on-screen disclaimer and tap **Accept**.
3. Choose from the following on-screen options:
 - **Driving/Walking**: configures the method of travel. Selection of Walking would negate the need to track traffic jams and obstructions.
 - Driving mode enables the **Settings** feature: allows you to configure your Route options such as: **Avoid highways** or **Avoid tolls**.
 - **Maps**: enables the on-screen real-time map functionality.
 - **Speak Destination**: allows you to use the voice recognition feature to search for matching locations in your area.
 - **Type Destination**: allows you to manually enter a destination address (via the on-screen keypad).

- **Contacts**: allows you to receive turn-by-turn directions to the address stored for a selected Contacts entry.
- **Starred Places**: allows you to obtain directions to locations that have been starred within Google maps (maps.google.com).

Navigation Map options

Once on the map screen, you can access the following features:

- **Destination**: returns you to the previous Navigation options screen.
- **Search by voice**: Speak your destination instead of typing.
- **Layers**: allows you to switch map views:
 - **Traffic view**: (available only in selected areas) Real-time traffic conditions are displayed over roads as color-coded lines. Each color represents how fast the traffic is moving.
 - **Satellite**: Maps uses the same satellite data as Google Earth. Satellite images are not real-time. Google Earth acquires the best imagery available, most of which is approximately one to three years old.
 - **Parking**: displays parking information relative to your current location.
 - **Gas Stations**: displays gas station location relative to your current location.
 - **ATMs & Banks**: displays ATM and Bank locations relative to your current location.
 - **Restaurants**: displays restaurant and eatery locations relative to your current location.

Press  to access additional options:

- **Search:** manually search for a destination address, place, name of business, or even a type of business.
- **Set Destination:** returns you to the navigation options screen where you can access a destination by either Speaking, Typing, or selecting from a Contacts entry or Starred Place.
- **Layers:** allows you to switch map views. See previous description.
- **Mute:** allows you to mute the audio readout and directional information.
- **Exit Navigation:** terminates the application.
- **More:** provides additional application information such as: Help and Terms, Privacy & Notices.

Caution!: Navigation is a beta product. Use caution.

News & Weather

The News & Weather application allows you to view the news and weather in your area.

1. From the Home screen, tap  (**Applications**) →  (**News & Weather**).
2. Select from any of the available scrollable tabs located at the top of the screen: **Weather**, **Top Stories**, **U.S.**, **Sports**, and **Entertainment**.
3. Tap the temperature to display a graph mapping the days temperature and humidity.
4. While on the Weather screen, press  to display the following options:

- **Refresh:** allows you to refresh the screen. Your location and the weather is updated if there have been any changes.
- **Settings:** allows you to set weather, news, and refresh settings.
 - **Weather settings:** allows you to choose location(s) and set the metric for temperature displays.
 - **News settings:** allows you to choose topics, configure settings for fetching articles and images, and view the terms of service for news service.
 - **Refresh settings:** allows you to choose options for updating content.
 - **Application version:** displays the application version number.

To access the settings:

1. Press  and then tap **Settings**.
2. Tap an available option: **Weather settings**, **News settings**, **Refresh settings**, and **Application version**.

Places

Google Places displays company logos on a layer of Google Maps. When viewing an area you can quickly locate a business or person, find out more information about the business, see coupons, public responses, and more.

1. From the Home screen, tap  (**Applications**) →  (**Places**).

2. Use the **Find places** field to manually enter a desired place or choose from among the various categories. Matches are filtered by those closest to your current location.
3. Locate and tap one of the listed places (Restaurants, Coffee, Bars, Attractions, ATMs, Gas Stations, Explore Nearby, or Add your own place.) A list of places within this category displays.
4. Tap the Maps icon (upper-right) to launch the related maps feature.
5. Press  and then tap **Latitude**. The functions of this application are similar to those of the Navigation application, but work along with the Latitude service where you can share your location with your chosen Google friends.

Polaris Office

Polaris Office Mobile for Android is a Microsoft Office compatible office suite. This application provides a central place for managing your documents online or offline.

The application can also open Adobe PDF (Portable Document Format) files.

1. From the Home screen, tap  (**Applications**) →  (**Polaris Office**).
2. Read the registration information and enter your Name and Email information (if desired).

3. Tap **Later** to ignore this registration or **Register** to complete the process.
4. On its initial launch, tap an available tab:
 - **New**: creates a new office document.
 - **My Files**: This is where you keep your documents on this device. You can manage documents, or send them to others, and upload the documents.
 - **Recent docs**: provides a list of recently opened documents.
 - **Web files**: This provides your online storage information at Box.net. You can also share your documents to others without using email attachments.
 - **Search**: allows you to search for document files by using a text string.

Settings

This icon navigates to the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

- From the Home screen, tap  (**Applications**) →  (**Settings**).
– or –
Press  →  and then tap  (**Settings**).

For more information, refer to “*Changing Your Settings*” on page 163.

Slacker

Slacker offers free, internet radio for mobile phones.

1. From the Home screen, tap  (Applications) →  (Slacker).

Important!: You must register and create a free account prior to using this service.

2. If prompted, enter your Email address and password.
– or –
Tap **Create Account** if you have not created an account.
3. Begin selecting the music you want to listen to.

Social Hub

Allows you to easily and intuitively satisfy all of your communication needs from within a single-user interface. E-mails, instant messaging, social network contents, and calendar contents from all major service providers are available.

1. From the Home screen, tap  (Applications) →  (Social Hub). The Welcome to Social Hub page describes all of the available features.
2. Tap **Setup now** to setup your Social Hub account.

3. Tap on an account type that you would like to setup. Choose from either email accounts, SNS accounts, or other IM accounts.
4. If you choose an SNS account, read the SNS disclaimer, tap the **I accept all the terms above** checkbox, then tap **Agree** to continue.
5. Tap **Next**.
6. Follow the on-screen instructions for adding an account.
7. From the Social Hub main screen, tap the **Feeds** or **Messages** tabs to see information pertaining to your account.
8. To add another account, press  → **Add account**.

T-Mobile Mail

This downloadable application provides access to several phone features and tunes.

1. From the Home screen, tap  (Applications) →  (T-Mobile Mail).
2. Read the on-screen disclaimer and tap **I agree**.
3. Read the consecutive legal disclaimer screen and tap **Yes** or **No** to agree/disagree to its terms.
4. Tap **OK** to complete the activation process.

5. Review the on-screen options such as:

- Recommended
- Ringtones
- CallerTunes
- Applications
- Games

T-Mobile Name ID

Allows you to modify the on-screen Caller ID information. Name ID identifies unknown callers by Name, City, and State.

1. From the Home screen, tap  (**Applications**)
→  (**T-Mobile Name ID**).
2. Choose an on-screen option.

T-Mobile TV HD

T-Mobile TV is an application that allows you to get live TV and Video on Demand.

- From the Home screen, tap  (**Applications**)
→  (**T-Mobile TV HD**).

For more information, refer to “T-Mobile TV HD” on page 115.

Talk

You can instant message with Google Talk. Google Talk allows you to communicate with other people who are also connected with Google Talk on the phone or on the web.

- From the Home screen, tap  (**Applications**)
→  (**Talk**).

For more information, refer to “Google Talk” on page 101.

Task

Allows you to keep track of both your current and upcoming tasks. You can also sync these tasks with different accounts.

1. From the Home screen, tap  (**Applications**)
→  (**Task**).
2. Tap **Create task** to start a new task entry.
3. Tap the **Name** field and enter a task name using the keypad.
4. Tap the **Due date** field and enter a due date name using the keypad. If there is no date that the task is due, tap the **No due date** checkbox.
5. If desired, enter **Task**, **Priority**, **Reminder**, and **Notes** then tap **Save**.
6. At the Task list screen, press  to display the following options:
 - **Create**: allows you to create a new task.
 - **View by task**: allows you to view tasks by task categories.
 - **Delete**: allows you to delete one or all of your tasks.
 - **Search**: allows you to search your tasks for a particular word or words.
 - **List by**: allows you to sort by Due date, Status, or Priority.
 - **Sync Task**: allows you to sync your tasks to any of your accounts.

From the Task list screen, tap a task once you have completed it and a checkmark appears next to the task. The task name is also grayed out so that you can still read it.

Task Manager

Sometimes your phone might seem to slow down over time, and the biggest reason for this are background applications. These are applications that were not properly closed or shutdown and are still active but minimized. The Task Manager not only lets you see which of these applications are still active in the background but also easily lets you choose which applications are left running and which are closed.

Shutting Down Applications

- From the Home screen, tap  (Applications) →  (Task manager).

— or —

Press and hold  then tap **Task manager**.

This screen contains the following tabs:

- **Active applications** display those currently active applications running on your phone.
- **Downloaded** displays any installed packages or applications from the Market that are taking up memory space. Tap **Uninstall** to remove them from your phone.
- **RAM**, displays the amount of current RAM (Random Access Memory) currently being used and allow you to **Clear memory**.

- **Storage** displays a visual graph indicating the available and used space within the **System storage** location, **USB storage**, and **SD card** location.
- **Help** provides additional battery saving techniques.

7. From the **Active applications** tab, tap **Exit** to close selected applications or tap **Exit all** to close all background running applications.

TeleNav GPS

TeleNav GPS Navigator is a driving aid that uses both audible and visual directions for GPS navigation.

1. From the Home screen, tap  (Applications) →  (TeleNav GPS).
2. If prompted, read the GPS Settings notification, tap GPS Settings button and follow the on-screen prompts to enable the necessary GPS location feature.
3. Read the agreement and tap **Accept** to accept the terms, or tap **Exit** to close the window. Wait for the application to load required first-time use files.
4. Enter a phone number and tap **Submit**.
5. If you have already registered an account with your phone number, enter your existing 4-digit PIN and tap **Sign In**.
— or —
Create a new PIN code and tap **Create**.
6. Use the available on-screen functions.

Tetris

Tetris is a puzzle video game in which falling tetrominoes must be manipulated to form complete lines, which are then cleared from the grid.

1. From the Home screen, tap  (Applications) →  (Tetris).
2. Follow the on-screen setup and usage instructions.

Video Chat

This is a mobile video sharing and 2-way video calling service. This application also lets you record and share experiences with your friends, family, and your favorite social networks.

1. From the Home screen, tap  (Applications) →  (Video Chat) → **Sign up**.
2. Fill in the Email address, Username, and Password, then tap **Sign up** to create your new account.
3. Follow the on-screen instructions. For more information, visit: <http://qik.com/>.

To adjust application settings:

1. Press  and then tap **Settings**.
2. Choose from any of the following options:
 - **Sharing** allows you to setup sharing preferences.
 - **Facebook**: set up your Qik credentials for Facebook posting of videos.
 - **Twitter**: set up your Twitter account sharing preferences.

- **YouTube**: set up your Qik credentials for YouTube posting of videos.

- **People**: set up your contact sharing parameters.

- **Privacy** allows you to select who can find you and see your videos.
- **M2M Settings** allows you to configure the Mobile to Mobile video chat settings.
- **Location** allows you to select the level of location accuracy that is embedded into your Qik videos. When posting or sharing Qik video information with others, you can decide how accurate the related location information can be. Choose from: **Off**, **City level**, **Street level**, or **Track live**.
- **Video encoding quality** allows you to assign a video quality to the outbound video. Choose from: **Low**, **Normal**, or **High**.
- **About** displays the version information for the Qik Video Chat application.

Recording a Video Chat

1. From the Home screen, tap  (Applications) →  (Video Chat).
2. Tap **Record & Share**.
3. Read the one-time disclaimer describing the public nature of your videos and tap **OK**.
4. Tap **Record** to start recording.
 - or –
 - Tap **Stop** to end the recording process.
5. Enter a title for your video segment and select those services you wish to use to distribute your video.

Services such as Twitter, Facebook, YouTube, SMS, and E-mail ask that you select a recipient for your video segment.

Videos

The Video Player application plays video files stored on your microSD card.

- ▶ From the Home screen, tap  (Applications) →  (Videos).

For more information, refer to “Using the Video Player” on page 111.

Visual Voicemail

Visual Voicemail enables users to view a list of people who left a voicemail message, and listen to the any message they want without being limited to chronological order.

- ▶ From the Home screen, tap  (Applications) →  (Visual Voicemail).

For more information, refer to “Visual Voicemail” on page 16.

Voice Recorder

The Voice Recorder allows you to record an audio file up to one minute long and then immediately send it as a message.

1. From the Home screen, tap  (Applications) →  (Voice recorder).
2. Tap **Record** icon to record an audio file.
3. Tap **Stop** to stop recording. The file automatically saves to the Voice list.

4. From the Recorded files page, press  and then tap **Share** and select a method in which to share this audio file. Selections are: Messaging, Bluetooth, Gmail, or Email. Refer to each specific section, depending on the method you selected to send this voice recording.

Voice Search

The Voice Search feature is a voice-activated application that allows you to tell the phone what to search for and then the phone activates a Google search based on what you said.

For more information, refer to “Using Additional Voice Search Functions” on page 26.

1. From the Home screen, tap  (Applications) →  (Voice Search).
2. Tap **Speak now** and then speak your search command slowly and clearly.
Google searches for the information and displays related information in the browser.

Web

Open the browser to start surfing the web. The browser is fully optimized and comes with advanced functionality to enhance the Internet browsing feature on your phone.

- ▶ From the Home screen, tap  (Applications)
→  (Web).

For more information, refer to “Internet” on page 144.

Wi-Fi Calling

This feature allows you to make calls using a Wi-Fi over the T-Mobile network.

- ▶ From the Home screen, tap  (Applications)
→  (Wi-Fi Calling).

For more information, refer to “Wi-Fi Calling” on page 54.

Yelp

Yelp is an online urban city guide that helps people find cool places to eat, shop, drink, relax and play. It's the fun and easy way to find, review and talk about what's great in your world

1. From the Home screen, tap  (Applications)
→  (Yelp).
2. If prompted, log into your existing account or create a new one.
3. Follow the on-screen prompts.

YouTube

YouTube is a video sharing website on which users can upload and share videos, and view them in MPEG-4 format.

1. From the Home screen, tap  (Applications)
→  (YouTube).
2. When the screen loads you can begin searching and viewing posted videos.

To configure YouTube Settings:

- ▶ Press  and then tap **Settings** and configure the following parameters:
 - **High quality on mobile**, when enabled, allows you to start all videos in high quality mode while you are connected to a mobile network.
 - **Caption font size** allows you to set the font size used by on-screen captions. Choose from: Small, Medium, Large, or Extra Large.
 - **Clear search history** allows you to clear any previous YouTube searches from appearing within the search box.
 - **SafeSearch filtering** allows you to configure block settings for videos containing restricted content. This option blocks these videos from appearing within your search results. Choose from: Don't filter, Moderate, or Strict blocking.
 - **Help** provides answers to most YouTube questions.
 - **Feedback** allows you to provide user feedback to YouTube.
 - **Google Mobile Terms of Service**
 - **YouTube Terms of Service**

- **Google Mobile Privacy Policy**
- **YouTube Privacy Policy**
- **Application version** displays the software version for the current YouTube application.

To watch a high quality video:

- ▶ Press  and then tap **Settings → High quality on mobile**.

Zinio Reader

Launches a digital magazine reader. Zinio has transformed your favorite print magazines into digital format.

1. From the Home screen, tap  (Applications) →  (Zinio Reader).
2. Tap **sign in** if you already have an account or tap **create an account** to continue.
3. Follow the on-screen prompts.

Section 10: Connections

Your phone is equipped with features that allow you to quickly connect to the web.

Internet

Your phone is equipped with a Google browser to navigate the mobile web. This section explains how to navigate the browser and use the basic features.

Accessing the Internet

To access the Browser:

- ▶ From the Home screen, tap  (Applications) →  (Web).

Note: You must disable your Wi-Fi connection if you wish to view the web2go home page (<http://home.web2go.com/>).

Homepage

When you access the Browser, the web2go home page displays the following topics:

- **Google Search:** allows you to quickly search for online topics using the Google search engine.
- **Advertisement:** provides an on-screen advertisement bubble providing suggested phone applications.
- **More Sites:** provides access to additional Web sites.
- **Yahoo Mail:** displays the Sign in for Yahoo Mail. Register by sending a text message with the word START to 92500 if you are not already registered.
- **Facebook:** displays the Facebook Log in. Sign up from this page if you are not already registered.

- **AccuWeather:** based on your location settings, AccuWeather displays the current weather conditions.
- **CNN:** displays current news headlines and more.
- **ESPN:** displays current sports news headlines and more.
- **E! Online:** displays current entertainment news headlines and more.
- **Mapquest:** provides access to the online mapquest site.
- **Yelp:** provides access to Yelp which is an online urban city guide that helps people find cool places to eat, shop, drink, relax and play. Its the fun and easy way to find, review and talk about what's great in your world.
- **What's Now:** provides quick access to a variety of different entertainment and shopping websites.
- **My Account:** provides quick access to your account information

Navigating with the Browser

1. To select an item, touch an entry.
2. To scroll through a website, sweep the screen with your finger in an up or down motion.
3. To return to the previous page, press .

Browser Options

1. From the home page, press  to access the following options:
 - **New window:** displays a new window so you can browse multiple URLs. For more information, refer to “Adding and Deleting Windows” on page 145.

- **Windows:** displays a list of the windows you have open.
- **Browser brightness:** allows you to manually adjust the screen brightness.

Note: If the Automatic brightness feature is enabled (**Settings** → **Display** → **Brightness**), you can not modify the browser's brightness setting.

- **Stop/Refresh:** stops the load of the new page or reloads the contents of the current page.
- **Forward:** forwards the browser to another web page.
- **More:** displays the following additional options:
 - **Add bookmark:** allows you to add a URL to your bookmark list.
 - **Add shortcut to Home:** adds a shortcut to your web2go homepage on your phone's Home screen.
 - **Find on page:** allows you to search in the current page.
 - **Page info:** displays information about the selected page.
 - **Share page:** allows you to share the page using Gmail or as a message.
 - **Downloads:** displays the download history.
 - **Settings:** allows you to change the way you view your web pages by changing these options. See "Browser Settings" on page 148.

Entering a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website:

- From the web2go homepage, locate the **URL** field at the top of the screen, enter the URL and tap .

Note: This is not the same application as the Google Search Widget. The web2go screen can not be accessed via a Wi-Fi connection.

Search the Internet

To perform an internet search using keywords:

1. From within the Google search application, tap the **Google** search field, enter the keyword(s) to search using the on-screen keypad.
2. Tap . A list of search results displays.
3. Tap a link to view the website.

Adding and Deleting Windows

You can have up to eight Internet windows open at one time. To add a new window, follow these steps:

1. From your browser, press  and then tap **New window**.
 - or –
 - Press  and then tap **Windows** → **New window**.
2. A new browser window displays.
3. Press  and then tap **Windows** to see a list of all open windows.

Note: This icon will display a number that corresponds to the current number of active browser windows.

4. Scroll across the screen to view the currently active windows and tap an entry to launch the selected Internet window.
5. Tap  next to the listing to delete the window.

Using Bookmarks

While navigating a website, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites display in the Bookmarks page. From the Bookmarks page you can also view your Most visited websites and view your History.

1. From the webpage, tap . The **Bookmarks** page displays. Additional pages include **Most visited** and **History**.
2. Press  to display the following options:
 - **Bookmark last-viewed page:** Creates a new bookmark for the last webpage that you viewed.
 - **List/Thumbnail view:** Select **Thumbnail view** (default) to view a thumbnail of the webpage with the name listed, or select **List view** to view a list of the bookmarks with Name and URL listed.
 - **Create folder:** Creates a new folder in which to store new bookmarks.
 - **Change order:** Rearranges the current bookmarks.
 - **Move to folder:** Selected bookmarks are moved to a selected folder.

- **Delete:** Erases selected bookmarks.

3. Tap a bookmark to view the webpage, or touch and hold a bookmark for the following options:
 - **Open:** Opens the webpage of the selected bookmark.
 - **Open in new window:** Opens the webpage in a new window.
 - **Edit bookmark:** Allows you to edit the name or URL of the bookmark. For more information, refer to “*Editing Bookmarks*” on page 147.
 - **Add shortcut to Home:** Adds a shortcut to the bookmarked webpage to your phone’s Home screen.
 - **Share link:** Allows you to share a URL address via Bluetooth, Email, Gmail, or Messaging.
 - **Copy link URL:** Allows you to copy the URL address to use in a message.
 - **Delete bookmark:** Allows you to delete a bookmark. For more information, refer to “*Deleting Bookmarks*” on page 147.
 - **Set as homepage:** Sets the bookmark to your new homepage.

Adding Bookmarks

1. From the Home webpage, tap  → **Add**.
2. Use the on-screen keypad to enter the name of the bookmark and the URL.
3. Assign a folder location. **Home** is the default.
4. Tap **OK**. The new save page now appears on the Bookmarks page.

Editing Bookmarks

1. From the Bookmarks page, touch and hold the bookmark you want to edit.
2. Tap **Edit bookmark**.
3. Use the on-screen keypad to edit the name of the bookmark or the URL.
4. Tap **OK**.

Deleting Bookmarks

1. From the Bookmarks page, touch and hold the bookmark you want to delete.
2. Tap **Delete bookmark**.
3. At the confirmation window, tap **OK**.

Emptying the Cookies

A cookie is a small file placed on your phone by a website during navigation. In addition to containing some site-specific information, a cookie can also contain some personal information (such as a username and password) which might pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

1. From the Home webpage, press  and then tap **More** → **Settings** → **Clear all cookie data**.
2. Tap **OK** to delete the cookies or tap **Cancel** to exit.

Using Web History

The History list displays a list of the most recently viewed websites. These entries can be used to return to previously unmarked web pages.

1. From the Home webpage, tap  → **History** tab.

A list of the most recently viewed websites displays.

2. Tap an entry to display the webpage.
– or –
Press  and then tap **Clear history** to delete the current History list.

Using Most Visited

The Most visited list provides you with a list of the most visited and bookmarked websites. These entries are used to return to previously unmarked web pages.

1. From the Home webpage, tap  → **Most visited** tab.

A list of your most frequently visited webpages displays. The most frequently visited web pages display at the top of the list.

2. Tap any entry to display the selected webpage.

Browser Settings

To make configure browser settings, follow these steps:

1. From the Home screen, tap  (Applications) →  (Web).
 2. Press  and then tap **More → Settings**.
 3. Choose from the following on-screen options:
 - **Default zoom:** Adjusts the zoom feature. Set to Far, Medium, or Close.
 - **Open pages in overview:** Displays an overview of recently viewed web pages.
 - **Text encoding:** Adjusts the current text encoding.
 - **Block pop-up windows:** Prevents popup advertisement or windows from appearing on-screen. Remove the checkmark to disable this function.
 - **Load images:** Allows web page images to load along with the other text components of a loaded website.
 - **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
 - **Landscape view only:** Displays the browser in only the horizontal position.
 - **Enable JavaScript:** Enables javascript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
 - **Enable plug-ins:** Allows the download of plug-ins such as Adobe Flash.
 - **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Set home page:** Sets the current home page for the Web browser.
 - **Default storage:** Sets the default storage to Memory card.
 - **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
 - **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
 - **Clear all cookie data:** Deletes all current browser cookie files.
 - **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
 - **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
 - **Enable location:** Allows websites to request access to your location.
 - **Clear location access:** Clears location access for all websites. Tap **OK** to complete the process.
 - **Remember passwords:** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
 - **Clear passwords:** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
 - **Show security warnings:** Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.

- **Set search engine:** Allows you to choose a default search engine for your phone. Choose from: **Google**, **Yahoo!**, or **Bing**.
- **Website settings:** View advanced settings for individual websites.
- **Reset to default:** Clears all browser data and resets all settings to default.

Bluetooth

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

To turn **Bluetooth** on:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings**.
2. Tap the **Bluetooth** field to activate the feature (checkmark indicates active). When active,  displays in the Status area.

To turn **Bluetooth** off:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings**.

2. Tap the **Bluetooth** field to deactivate the feature.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



Displays when Bluetooth is active.



Displays when Bluetooth is connected (paired) and communicating.

Bluetooth Settings

The Bluetooth settings menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices
- Displaying your device's Bluetooth address

To access the **Bluetooth Settings** menu:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings**.
2. Verify Bluetooth is active. Indicated by a green check mark in the Bluetooth field.
3. Tap the **Device name**, **Visible**, and **Search for devices** fields to set the options.

To change your Bluetooth name:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap **Device name**.
3. Enter a new name.
4. Tap **OK** to complete the rename process.

To set visibility:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Visible**.
Making your device visible allows other devices to pair and communicate.

Note: Your device is visible for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To scan for Bluetooth devices:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

Note: Pairing between two Bluetooth devices is a one-time process. Once pairing is established the devices continue to recognize their partnership and exchange information without entering a passcode.

To pair your device with another Bluetooth device:

1. Verify Bluetooth is active.
2. From the Bluetooth settings page, tap **Visible**.
Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. Your device displays a list of discovered in-range Bluetooth devices.
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code, if needed, and tap **OK**.
6. The external device must accept the connection and enter your device's PIN code.

Once successfully paired to an external device,



displays in the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Disconnecting a Paired Bluetooth Device

Disconnecting a paired device breaks the connection between the device and your phone, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, touch the previously paired device (from the bottom of the page).
3. Tap **OK** to confirm disconnection.

— or —

From the Bluetooth settings page, touch and hold the name of the previously paired device, and select **Disconnect**.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your phone or it is powered off.

Deleting a Paired Bluetooth Device

Deleting a device from your list removes its “connection record” and upon reconnection would require that you re-enter all the previous pairing information.

1. Verify Bluetooth is active.

2. From the Bluetooth settings page, touch and hold the name of the previously paired device (from the bottom of the page). This opens the connected device’s menu options.
3. Tap **Unpair** to delete the paired device.

Sending Contacts via Bluetooth

Depending on your paired devices’ settings and capabilities, you may be able to send pictures, Contact information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled on both your phone and the external device, and the recipient’s device must be visible.

1. Verify your Bluetooth is active and your phone is visible.
2. From the Home screen, tap  (**Contacts**).
3. Tap the entry to open the overview page.
4. Press  and then tap **Send namecard via → Bluetooth** and select a paired external Bluetooth device.

Note: The external Bluetooth device must be visible and communicating for the pairing to be successful.

5. A Bluetooth share notification displays in your notifications list.

Enable Downloading for Web Applications

Important! Before you can download a web application you must insert an SD into the phone and enable the **Unknown sources** feature (enables downloading). For more information, refer to “*Installing the microSD Memory Card*” on page 8. Also, see “*Mounting the SD Card*” on page 46.

1. Press  →  and then tap  (**Settings**) → **Applications**.
 2. Tap the **Unknown sources** check box.
 3. Tap **OK** to allow install of non-Market applications. Tap again to remove the checkmark and disable the installation of non-market applications.
-

Warning! Not all web applications are safe to download. In order to protect your phone and data, use Android Market to install web applications. For more information, refer to “*Downloading a New Google Application*” on page 127.

PC Connections

You can connect your device to a PC using an optional PC data cable using various USB connection modes. Mass storage is the default connection method.

Mass storage: allows you to use the onboard storage capacity of the phone to store and upload files. This option allows your computer to detect the phone as a removable storage drive.

Kies air: allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network.

Connecting as a Mass Storage Device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can also access the files directory from the memory card by using the device as a memory card reader.

Note: The file directory of the memory card displays as a removable disk, separate from the internal memory.

1. Insert a memory card into the device to transfer files from or to the memory card.
-

Note: To use any downloaded market application that requires a USB connection between your phone and your PC, you should first set the USB setting to **Mass storage**.

2. Connect the multifunction jack on your device to a PC using an optional PC data cable. A pop-up window displays on the PC when connected.
3. Open the folder to view files.
4. Copy files from the PC to the memory card.

Prior to using Kies air for Phone Update

Before using Kies air to upgrade your device, it is recommended that you backup your personal data prior to use.

To export a Contact list to your microSD card:

1. From the Home screen, tap  (Contacts).
2. Press  and then tap **Import/Export**.
3. Tap **Export to SD card** → **OK**. For more information, refer to “Export/Import” on page 84.

Verify your images and videos are on your microSD card:

1. From the Home screen, tap  (Applications) →  (Gallery).
2. Verify the Gallery contains all of your pictures and videos.
3. Remove the back cover and remove the internal microSD card prior to initiating a Kies air update.

Enabling USB Debugging

USB debugging must be enabled before being able to use the Development feature.

1. Press  →  and then tap  (Settings) → **Applications** → **Development**.

2. Tap the **USB debugging** field to verify the feature is active before connecting your USB cable.
3. Using an optional PC data cable, connect the multifunction jack on your device to a PC.

Kies Air

Kies Air allows you to sync your Windows PC wirelessly with your phone provided they are both on the same Wi-Fi network. You can view and share call logs, videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

1. Sign onto the same Wi-Fi network from your phone and from your PC.
2. From the Home screen, tap  (Applications) →  (Kies air).
3. From the Kies air homescreen, tap **Start**.
4. If prompted, select a network. Choose from either **Wi-Fi** or **Portable Wi-Fi hotspot**.
5. Write down the on-screen URL address.

Important!: Both your phone and your computer must be connected to the same Wireless Access Point (WAP).

6. From your computer, enter the URL in your Web browser.

7. If prompted, an Access Request prompt is displayed on your device. Tap **Allow** to permit connection between the computer and device.
8. On your computer, you may be prompted to run a Java plugin for a TransferManagerApplet. Click **Run**.
9. Tap the **Remember for today** checkbox if you will be using Kies air with the same PC later.
10. From your PC, a security warning may be displayed asking if you want to run this application. Click **Run** to continue.
11. On your PC, the Kies air screen is displayed. On your phone, the  icon appears at the top of your screen.
12. Follow the on-screen instructions to view and share information between your phone and PC.
13. Click a link from the left navigation pane to access one of several device file categories such as:
 - [Device Name] - provides an overview of all the main categories.
 - Photos/Videos/Music
 - Ringtones
 - Bookmarks
 - Messages/Call Log/Contacts
 - File Explorer
 - Language settings

14. To exit the Kies air application, tap **Stop** on your device, then close out the Web browser on your computer.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity") is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Activating Wi-Fi

By default, your device's Wi-Fi feature is turned off (deactivated). Activating Wi-Fi allows your device to discover and connect to compatible in-range WAPs (Wireless Access Points).

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi settings**.
2. Tap **Wi-Fi** to activate the feature. A checkmark indicates that Wi-Fi is active. The device scans for available in-range wireless networks and displays them under Wi-Fi networks on the same screen.

Connecting to a Wi-Fi Network

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi**
settings.

The network names and security settings (Open network or Secured with WEP) of detected Wi-Fi networks display in the Wi-Fi networks section.

2. Tap the network you wish to connect to.

Note: When you select an open network you are automatically connected.

3. Enter a wireless password (if necessary).

Manually Add a New Network Connection

1. Tap **Add Wi-Fi network**.
2. Enter the Network SSID (the name of your Wireless Access Point).
3. Tap the **Security** field and select a security option. This must match the current security setting on your target WAP.
4. Enter your WAP's password if the WAP is secure.
5. Tap **Save** to store the new information and connect to the target WAP.

Note: No prompt to enter the WAP key displays if this is the second time to connect to a previously accessed or secured wireless network. The WAP key is required when the device is reset using factory default settings.

Deactivating Wi-Fi

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi**
settings.
2. Tap the **Wi-Fi** field to deactivate the feature.
The checkmark grays.
— or —
Activate and Deactivate Wi-Fi from the
Notification bar.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can reduce battery life and use times.

Manually Scan for a Wi-Fi Network

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi**
settings.
2. Press  and then tap **Scan**.

Wi-Fi Status Indicators

The following icons indicate the Wi-Fi connection status:



Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



Displays when Wi-Fi is active and there is an available open wireless network.

Wi-Fi Advanced Settings

The Wi-Fi settings - Advanced menu allows you to set up many of the device's Wi-Fi services, including:

- Setting the Wi-Fi sleep policy
- Viewing the device's MAC Address
- Configuring use of either a DHCP or Static IP

To access the Wi-Fi Advanced Settings menu:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi settings**.
2. Press  and then tap **Advanced**.

Tethering

This option allows you to share your phone's mobile data connection via a direct USB connection between your phone and computer. A wireless version of this same functionality would be the Portable Wi-Fi feature.

Note: You can not mount your phone's microSD card to your computer while using the USB tethering feature. If additional software or USB drivers are required, navigate to: <http://www.samsung.com/us/support/downloads>.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Tethering and portable hotspot**.
2. Plug in the USB cable between your computer and your phone.
3. When prompted for a USB mode, press  to exit the menu.
4. Tap **USB tethering** from the Tethering menu.
This places a green check mark next to the entry and activates the feature. A Tethering or Hotspot active notification briefly appears on the screen. Look for the Tethering active icon  in the Status bar area of the screen.

To disconnect tethering:

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Tethering and portable hotspot**.
2. Tap **USB tethering** from the Tethering menu to remove the check mark and deactivate the feature.
3. Remove the USB cable from the phone.

Portable Wi-Fi Hotspot

This feature allows you to turn your phone into a Wi-Fi hotspot. The feature works best when used in conjunction with HSPA+ (4G) data services (although 3G service can also be used).

Important! The Portable Wi-Fi Hotspot service can not be active at the same time as Wi-Fi. Please close your Wi-Fi connection prior to launching the Portable Wi-Fi service.

Note: You must have a tethering plan on your account to use the Wi-Fi hotspot. You can not use data on the device while it is being used as a hotspot.

To activate the Portable Wi-Fi Hotspot service:

1. Press  →  and then tap  (Settings) → **Wireless and network** → **Tethering and portable hotspot**.
2. Tap **Portable Wi-Fi hotspot settings** → **OK**.
3. Tap **Portable Wi-Fi hotspot**. This places a checkmark in the adjacent field to activate the service.
4. Tap **Portable Wi-Fi hotspot** → **Yes** to continue with the activation.
5. Tap **Configure portable Wi-Fi hotspot**.
6. Create a new Network SSID name, configure the desired fields and tap **Save**. Write down the SSID name.

7. Confirm the Portable Wi-Fi Portable Wi-Fi service icon  appears at the top of the screen.

Note: By default, the connection is open and not secured. It is recommended that you access the Portable Wi-Fi Hotspot settings and create a secure connection by using a password for communication.

Note: Using your 4G service and Portable Wi-Fi Hotspot drains your phone's battery at a much faster rate than when using any other feature combination. The best way to keep using the phone as a hotspot is to have it connected to a power supply.

To connect to the Hotspot:

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your phone hotspot from the network list.
 - The SSID name for your phone's hotspot is determined by what you entered into the **Network SSID** field.
 - You can change the name by tapping **Configure portable Wi-Fi hotspot** → **Network SSID** and changing the entry.
3. Select this Hotspot and follow your on-screen instructions to complete the connection.
4. Launch your Web browser to confirm you have an Internet connection.

To secure the Portable Hotspot service:

The two most common methods for securing your connection to the Hotspot are to a security method (WPA2 PSK) and to Hide your phone's SSID name.

1. Press  →  and then tap 
(Settings) → Wireless and network → Tethering and portable hotspot → Portable Wi-Fi hotspot settings → Configure portable Wi-Fi hotspot.
2. Tap the **Security** field and select **WPA2 PSK**.
3. With security enabled, enter a new password into the **Password** field.

Important! The more complex the password, the harder it will be for intruders to break your security. It is recommended that you not use names, birthdays, or other personal information.

4. Tap **Save** to store the new settings.

Section 11: Time Management

This section describes how you can manage time using time-related applications such as the Calendar, Alarm Clock, Analog or Digital clock, and the World clock.

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder.

1. From the Home screen, tap  (Applications) →  (Calendar). The Calendar displays four tabs:
 - **Month:** displays the Month view.
 - **Week:** displays the Week view.
 - **Day:** displays the Day view.
 - **List:** allows you to search for events for the selected Month, Week, or Day, or you can look for events for a future date.
2. Press  and select one of the following options:
 - **Create:** creates a new Event.
 - **Go to:** displays a specific date.
 - **Today:** displays the date highlighted with a Blue box highlighting the date.
 - **Search:** allows you to search within your current events.
 - **Delete:** allows you to delete All events, All events before today, or an individual event.
 - **Settings:** displays a list of configurable settings.

Creating a Calendar Event

1. From the Home screen, tap  (Applications) →  (Calendar).
2. From the Month tab, press  → **Create**.

Calendar Settings

Using the Calendar settings you can select the day with which you want the calendar to begin. You also select how you want to view the calendar, by Month, Week, or Day or determine how to manage events, notifications, sounds, and defaults reminders.

1. From the Home screen, tap  (Applications) → .
2. Press  → **Settings**.
3. Tap **Calendars** and select the calendar categories you want to display or tap **All calendar**. A check mark indicates selection.
4. Tap **Default view** and select a view: **Month**, **Week**, **Day**, or **List**.
5. Tap **Day view** and select a type: **Time grid**, or **Event list**.
6. Tap **First day of week** and select either **Monday** or **Sunday**.
7. Tap **Hide declined events** to activate this option. A check mark indicates selection.

8. Tap **Hide contacts' anniversaries** to activate this option. A check mark indicates selection.
9. Tap **Lock time zone** (to lock event time based on your current user-selected time zone). Select a time zone from within the **Select time zone** field.
10. Tap **Set alerts and notifications** to adjust the event notification method. Choose from: **Alert**, **Status bar notification**, and **Off**.
11. Tap **Vibrate** to activate this notification option. Selections are: **Always**, **Only in Silent mode**, or **Never**.
12. Tap **Select ringtone** to assign a ringtone to a calendar event notification.
13. Tap **Calendar sync** and select the type of general synchronization settings you want. A check mark indicates selection.

Clock

This feature allows you to create an alarm to ring at a specified time, track time in other parts of the world, use a stopwatch, or set a timer.

- From the Home screen, tap  (**Applications**)
→  (**Clock**).

Setting an Alarm

1. From the Home screen, tap  (**Applications**)
→  (**Clock**).
2. Tap  (**Create alarm**).
3. Use the plus or minus symbols to enter the hour, and minutes, then tap **AM** or **PM** (toggles depending on which was last selected).
4. Tap the **Alarm repeat** field and tap the number of times you want this alarm to repeat. Selections are: **One-time event**, **Daily**, **Every weekday (Mon-Fri)**, or **One-time event**. If you selected Weekly, a button row displays. Tap each day of the week in which you want this alarm to repeat, then tap **OK**.
5. Tap the **Alarm type** field and select one of the following: **Melody**, **Vibration**, **Vibration and melody**, or **Briefing**.
6. Slide the slider bar left or right in the **Alarm volume** field to decrease or increase the alarm volume. A sample of the volume level plays.
7. Tap the **Alarm tone** field and select one of the following: **Sounds**, or **Go to My files**. Locate a sound to use as an alarm ringtone then tap **OK** to activate the ringtone.

8. Tap the radio button to activate a tone for the **Snooze**. Tap the field to assign a duration time (3 minutes, 5 minutes, 10 minutes, 15 minutes, or 30 minutes) and snooze repetition (1 time, 2 times, 3 times, 5 times, and 10 times).

- **Duration** indicates the length of time the alarm will remain silent between alarm notifications (snooze time).
- **Snooze repeat** indicates the numbers of snooze sessions that are assigned to this alarm. How many times will the snooze silence the alarm.

9. Tap the radio button to activate **Smart alarm** which slowly increases screen brightness and the volume of nature tones to simulate dawn breaking.

Tap the field to assign a duration time (3 min, 5 min, 10 min, 15 min, or 30 min) and nature tone (Morning, Breeze, Mist, Forest, Light, or Rain).

- **Duration** indicates the length of time the alarm will remain silent between alarm notifications.
- **Tone** provides one of several nature sounds that are used as the alarm tone.

10. Tap the **Name** field and enter a name for this Alarm.
11. Tap **Save** to store the new alarm event.

Turning Off an Alarm

- ▶ To stop an alarm when it sounds, touch and slide  to the right.

Setting the Snooze Feature

- ▶ To activate the Snooze feature after an alarm sounds, touch and slide  to the left. Snooze must first be set in the alarm settings.

World Clock

This feature allows you to find out what time it is another part of world.

1. From the Home screen, tap  (Applications) →  (Clock).
2. Tap the **World clock** tab.
3. Tap  (Add city) then scroll and select the desired city, or tap in the search field to locate a city.

To assign DST settings:

1. Locate a desired city from the World Clock list.
2. Touch and hold a city and select **DST settings**.
3. Select a DST setting (Automatic, Off, 1 hour or 2 hours).

Stopwatch

This feature allows you to capture elapsed time while letting the stopwatch keep running.

1. From the Home screen, tap  (**Applications**) →  (**Clock**) → **Stopwatch** tab.
2. Tap **Start** to start the stopwatch counter.
3. Tap **Lap** to begin the lap time counter.
4. Tap **Stop** to stop the counter.
5. Tap **Restart** to restart the lap counter. You can have multiple lap times.
6. Tap **Reset** to reset the counter.

Setting a Timer

1. From the Home screen, tap  (**Applications**) →  (**Clock**) → **Timer** tab.
2. Tap the **hr**, **min**, or **sec** field and use the on-screen keypad to enter the hour, minute, or seconds. The timer plays an alarm at the end of the countdown.
3. Tap **Start** to start the timer.
4. Tap **Stop** to stop the timer or **Reset** to reset the timer and start over.
5. Tap **Restart** to resume the timer counter.

Configuring a Desk Clock

This feature lets you activate an on-screen clock that can be viewed when the device is docked.

- From the Home screen, tap  (**Applications**) →  (**Clock**) → **Desk clock** tab.

Section 12: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

Wireless and Networks

Using Flight mode

Flight mode allows you to use many of your phone's features, such as Camera, Games, and more, when you are in an airplane or in any other area where making or receiving calls or data is prohibited.

Important! When your phone is in Flight mode, it cannot send or receive any calls or access online information or applications.

1. Press  →  and then tap 
(Settings) → **Wireless and network**.
2. Tap **Flight mode**. A check mark displayed next to the feature indicates Flight mode is active.

Activating Wi-Fi

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi** settings.
2. Tap **Wi-Fi**. A check mark displayed indicates Wi-Fi is active.

Wi-Fi settings

Once set up for Wi-Fi connectivity, your phone automatically uses Wi-Fi, when available, for all your mobile phone services.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi** settings.
2. Configure the settings as desired.

The available connection types displayed with a security type displayed next to them.

Network Notification

By default, when Wi-Fi is on, you receive notifications in the Status bar anytime your phone detects an available Wi-Fi network. You can deactivate this feature if you do not want to receive notifications.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi** settings.
2. Tap **Network notification**. A check mark displayed next to the feature indicates Network notification is active.
3. Tap **Network notification** again to remove the check mark and deactivate this feature.

WPS Button Connection

The WPS (Wi-Fi Protected Setup) button is a standard for easy and secure wireless network set up and connections. To use WPS, the connecting device must support WPS and be compatible with Wi-Fi Protected Access (WPA) security. WPS can automatically set up a random network name and WPA wireless security for wireless Wi-Fi phones, routers, access points, computers, adapters, and other electronic devices.

WPS allows you to push buttons instead of entering a network name and wireless security PIN.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi settings**.
2. Tap **WPS button connection**.
3. Press the WPS button on your Wi-Fi access point within 2 minutes.

Manually Adding a Wi-Fi Network

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Wi-Fi settings**.
2. Tap **Wi-Fi** to turn it on.
3. Tap **Add Wi-Fi network**.
4. Enter the SSID (Service Set Identifier) and Security settings then tap **Save**.

Note: An SSID is a unique key which identifies a wireless LAN. Its purpose is to stop other wireless equipment from accessing your LAN — whether accidentally or intentionally. To communicate, wireless devices must be configured with the same SSID.

Bluetooth settings

In this menu you can activate Bluetooth, view or assign a device name, activate your phone so other Bluetooth devices can discover it, or scan for other, available Bluetooth devices with which to pair.

Activating Bluetooth

- ▶ Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings** and tap **Bluetooth** to turn it on.

Note: Bluetooth must be enabled prior to use.

Activating the Device Name

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings** → **Device name**. The assigned device name displays.
2. Press  to erase the current device name and enter a new name for this device using the keyboard.
3. Tap **OK** to confirm your setting.

Activating Visibility

- Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings** → **Visible**.

The phone is now activated for discovery for 119 seconds so you can pair with another device. After 119 seconds the phone becomes undiscoverable again.

Scanning for Devices

This option allows you to scan for active Bluetooth devices so you can pair with them.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Bluetooth settings** → **Search for devices**.

Your phone begins scanning and lists any discovered devices in the Bluetooth devices section.

2. Tap a device name to pair with the device.

Important!: Some Bluetooth devices are secured and require a PIN number to confirm and pair with them.

3. Enter a PIN to pair with the device, if one is required, and tap **Accept** or **Decline**.

Tethering

This option allows you to share your phone's mobile data connection via a direct USB connection between your phone and computer. A wireless version of this same functionality would be the Portable Wi-Fi Hotspot feature.

Note: You can not mount your phone's microSD card to your computer while using the USB tethering feature. If additional software or USB drivers are required, navigate to: <http://www.samsung.com/us/support/downloads>.

- Press  →  and then tap 
(Settings) → **Wireless and network** → **Tethering and portable hotspot**.

For more information, refer to “*Tethering*” on page 156.

Portable Wi-Fi Hotspot

This feature allows you to turn your phone into a Wi-Fi hotspot. The feature works best when used in conjunction with HSPA+ (4G) data services (although 3G service can also be used).

Important!: The Portable Wi-Fi Hotspot service can not be active at the same time as Wi-Fi. Please close your Wi-Fi connection prior to launching the Portable Wi-Fi service.

For more information, refer to “*Portable Wi-Fi Hotspot*” on page 157.

VPN settings

The VPN settings menu allows you to set up and manage Virtual Private Networks (VPNs).

Important! Before you can use a VPN you must establish and configure one.

Adding a VPN

Before you add a VPN you must determine which VPN protocol to use: PPTP (Point-to-Point Tunneling Protocol), L2TP (Layer 2 Tunneling Protocol), L2TP/IPSec PSK (Pre-shared key based L2TP/IPSec), or L2TP/IPSec CRT (Certificate based L2TP/IPSec).

1. Press  →  and then tap  (Settings) → **Wireless and network** → **VPN settings**.
2. Tap **Add VPN**.

To establish a PPTP VPN (Point-to-Point Tunneling Protocol):

1. Establish a VPN name (a name for this connection).
2. Assign a server by using Set VPN server.
3. Enable encryption (if desired).
4. Set the DNS search domains.

To add an L2TP VPN (Layer 2 Tunneling Protocol):

1. Establish a VPN name (a name for this connection).
2. Assign a server by using Set the VPN server.

3. Enable L2TP secret.
4. Set L2TP secret.
5. Set the DNS search domains.

To add an L2TP/IPSec PSK VPN (Pre-shared key based L2TP/IPSec):

1. Establish a VPN name (a name for this connection).
2. Assign a server by using Set the VPN server.
3. Utilize the Set IPsec pre-shared key.
4. Enable L2TP secret.
5. Set L2TP secret.
6. Set the DNS search domains.

To add an L2TP/IPSec CRT VPN (Certificate based L2TP/IPSec):

1. Establish a VPN name (a name for this connection).
2. Assign a server by using Set the VPN server.
3. Enable L2TP secret.
4. Set L2TP secret.
5. Set user certificate.

Note: A user certificate must be installed to use this setting.

6. Set CA certificate.

Note: A CA certificate must be installed to use this setting.

7. Set the DNS search domains.

Mobile networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Mobile networks options.

- ▶ Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks.

The following options display:

Use packet data

Allows you to activate data usage on your phone.

- ▶ Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks → Use packet data.

Data Roaming

Data roaming allows you to connect to your service provider's partner networks and access data services when you are out of your service providers area of coverage.

1. Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks.
2. Tap **Data roaming** to connect to data services while roaming outside your network.
– or –
Tap **Data roaming** again to remove the green check mark and deactivate the feature.

Access Point Names

To access a wireless access point:

- ▶ Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks → Access Point Names. A list of the Access point names display. The active access point displays a bright green, filled circle to the right of the name.

Network mode

You can configure your phone to either manually detect and use either a 2G (GSM) or 3G (WCDMA) data network connection.

- ▶ Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks → Network Mode.

Using the Fastest Available Network

To confirm you are always using the fastest possible connection, the phone has an automatic detection method where it finds both the fastest and most stable connection/communication method. This phone is capable of using either 4G/3G services for this connection.

1. Press  →  and then tap 
(Settings) → Wireless and network → Mobile networks → Network Mode.

2. Tap **GSM/WCDMA (Auto mode)**. A check mark displays next to this option to indicate that it is active. This is the default mode for this phone.

Using the 2G (EDGE) Network Only

If you are not using applications that require the 3G network speed (any application that accesses the network or uses a browser), using the 2G network saves battery life.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Mobile networks** → **Network mode**.
2. Tap **GSM only**. A check mark displays next to this option to indicate that it is active.

Note: Connecting to 2G networks slows the data transfer speed and time.

Using the 4G Network Only

If you are using applications that require the 4G network speed, follow these instructions to connect to the 4G network.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Mobile networks** → **Network mode**.
2. Tap **WCDMA only**. A check mark displays next to this option to indicate that it is active.

Network Operators

Using this feature you can view the current network connection. You can also scan and select a network operator manually, or set the network selection to Automatic.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Mobile networks**.
2. Tap **Network operators**. The current network connection displays at the bottom of the list.

Important!: You must deactivate data service prior to searching for an available network.

3. Tap **Search networks** to manually search for a network.
4. Tap **Select automatically** to automatically select a network connection.

Note: Connecting to 2G networks slows the data transfer speed and time.

Default Setup Options

Your phone default is set to Automatic (to automatically search for an available network. You can set this option to Manual to select a network each time you connect.

1. Press  →  and then tap 
(Settings) → **Wireless and network** → **Mobile networks** → **Network operators**.

2. Tap **Default setup**.
3. Tap **Manual** to locate and connect to a network manually.
 - or –
 - Tap **Automatic** to allow the device to automatically select a network.

Call Settings

To access the Call settings menu:

- ▶ Press  →  and then tap  (**Settings**) → **Call**.

– or –

From the Home screen, tap  → **Settings** → **Call**.

Configuring General Call Settings

Configure the general call settings using this option.

1. From the Home screen, tap  → **Settings** → **Call**.
2. Tap one of the following options:
 - **Call rejection**: allows you to manage your rejection mode and rejection list.
 - **Auto reject mode**: sets the phone to automatically reject incoming calls or messages.
 - **Reject list**: provides access to current rejection entries and numbers.
 - **Set reject messages**: allows you to manage both existing rejection messages and create new ones.
 - **Call alert**: allows you to assign call alert tones and activate call alerts and vibration.

- **Outgoing call vibration**: vibrates the phone when the called party answers.
- **Call status tones**: assigns sounds settings during the call. Choose from: Call connect tone, Minute minder, and Call end tone.
- **Alerts on call**: selects whether alarm and message notification is turned off during a call. Choose from: Off, Sound, Voice or Vibration.
- **Call answering/ending**: allows you to manage the settings for answering and ending calls.
 - **Answering key** allows you to press a key to answer the phone.
 - **Automatic answering**, when connected, automatically answers a call via the headset after a period of time. Selections are: off, After 1 second, After 2 seconds, After 3 seconds, After 4 seconds, or After 5 seconds.
 - **Power key ends calls** allows you to press the power key to end the current call.
- **Turn on proximity sensor**: allows you to turn off the LCD when the phone is near your face during a call so you do not accidentally tap a key.
- **Call forwarding**: configures call forwarding options. For more information, refer to “*Configuring Call Forwarding*” on page 170.
- **Additional settings**: allows you to additional call settings. For more information, refer to “*Configuring Additional Voice Call Settings*” on page 170.
- **Voicemail service**: allows you to select the carrier used for your voicemail service. For more information, refer to “*Voicemail*” on page 171.
- **Voicemail**: allows you to view the settings for your voicemail.

- **Hearing aids:** allows you to enable/disable hearing aid compatibility. For more information, refer to “*HAC Mode*” on page 170.

Configuring Call Forwarding

1. Press  →  and then tap  (Settings) → Call → Call forwarding.
2. Tap an available option:
 - **Always forward:** incoming calls are re-routed to a secondary number that you specify.
 - **Forward when busy:** forwards all your calls to voicemail when your phone is busy.
 - **Forward when unanswered:** automatically forwards to your voicemail number when the phone is not answered, and otherwise allows you to enter a voicemail number.
 - **Forward when unreachable:** automatically forwards to your voicemail number when the phone is not in service, or is turned off.

HAC Mode

This menu is used to activate or deactivate Hearing Aid Compatibility for this device.

1. Press  →  and then tap  (Settings) → Call.
2. Tap the **Hearing aids** field to activate the feature (green check mark), or tap it again to deactivate the feature. Off is the default setting.

Configuring Additional Voice Call Settings

1. Press  →  and then tap  (Settings) → Call → Additional settings.

2. Tap one of the following options:

- **Caller ID:** chooses whether your number is displayed when someone answers your outgoing call. Choose from: Network default, Hide number, or Show number.
- **Call barring:** blocks specific types of calls (All outgoing calls, International calls, etc.).
- **Call waiting:** notifies you of an incoming call while you are on another call.
- **Auto redial:** automatically redial the dialed number if it is unable to connect or the call is cut off.

Fixed Dialing Numbers

Fixed Dial Number (FDN), allows you to restrict outgoing calls to a limited set of phone numbers.

Enabling FDN

1. Press  →  and then tap  (Settings) → Call → Additional settings → Fixed Dialing Numbers.
2. Tap **Enable FDN**.
3. At the prompt, enter your PIN2 code and tap **OK**.

Important: Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.

The PIN2 code is provided by your carrier. Entering the PIN2 incorrectly three times will cause the device to lock. Contact customer service for assistance.

Changing the PIN2 Code

1. Press  →  and then tap 
(Settings) → Call → **Additional settings** →
Fixed Dialing Numbers.
2. Tap **Change PIN2**.
3. At the prompt, enter your old PIN2 code.
4. At the prompt, enter a new PIN2 code.
5. Confirm your PIN2 code.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.

The PIN2 code is provided by your carrier. Entering the PIN2 incorrectly three times will cause the device to lock. Contact customer service for assistance.

Managing the FDN List

When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

1. Press  →  and then tap 
(Settings) → Call → **Additional settings** →
Fixed Dialing Numbers.
2. Tap **Enable FDN**.
3. At the prompt, enter your PIN2 code and tap **OK**. FDN is enabled.
4. Tap **FDN list** then press  and then tap **Add contact** or edit the contacts that were stored.

Important! Not all SIM cards use a PIN2 code. If your SIM card does not, this menu does not display.

The PIN2 code is provided by your carrier. Entering the PIN2 incorrectly three times will cause the device to lock. Contact customer service for assistance.

Voicemail

From this menu, you can either view your voicemail number or enter a new one.

1. Press  →  and then tap 
(Settings) → Call → **Voicemail service**.
2. Tap **My carrier**.
3. Tap **Voicemail** → **Voice mail number** to now view your number within the Voicemail number field.
– or –
To enter a new voicemail number, tap **Voicemail** → **Voice mail number**, enter a number and tap **OK**.

Sound Settings

From this menu you can control the sounds on the phone as well as configure the display settings.

- Press  →  and then tap 
(Settings) → **Sound settings**.

The following options display:

Silent mode

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example. In Silent Mode the speaker is muted and the phone only vibrates to notify you of incoming calls, or other functions that normally have a defined tone or sound as an alert.

1. Press  →  and then tap 
(Settings) → **Sound settings**.

2. Tap **Silent mode**.

— or —

From the Home screen, press and hold the **Lock** key until **Phone options** displays.

3. Tap **Silent mode** to activate or deactivate this mode (the current mode displays).

Setup Phone Vibration

1. Press  →  and then tap 
(Settings) → **Sound settings**

2. Tap **Vibration** and select a vibration mode.
Choose from: **Always**, **Never**, **Only in silent mode**, or **Only when not in silent mode**.

Note: The Phone vibrate setting is independent of other call sounds settings. For example, if you have Silent mode enabled along with Phone vibrate, your phone won't play a ringtone, but will vibrate for an incoming call.

Note: Use both the Silent mode and enable the **Only when not in silent mode** option to guarantee no vibrations or sounds from your phone.

Adjusting the Volume Settings

The Volume menu now provides access to various volume settings within one on-screen popup menu.

1. Press  →  and then tap 
(Settings) → **Sound settings** → **Volume**.
2. Touch and drag the on-screen slider to assign the volume settings for any of the following volume levels.
- **Incoming call**, **Media**, **System**, or **Notification**.
3. Tap **OK** to assign the volume levels.

Setup the Voice Call Ringtone

1. Press  →  and then tap 
(Settings) → **Sound settings**.
2. Tap **Phone ringtone**.
3. Tap a ringtone from the available list. The ringtone briefly plays when selected.
4. Tap **OK** to assign a ringer.

Setting a Notification Ringtone

1. Press  →  and then tap  (Settings) → Sound settings → Notification ringtone.
2. Tap one of the ringtones and tap OK.

Audible Tone Settings

The Audible touch tones and Audible selection options are used when you use the dialing pad or making a screen selection. Each time you press a key or make a selection the selected tone sounds.

1. Press  →  and then tap  (Settings) → Sound settings.
2. Tap **Audible touch tones** or **Audible selection**. A check mark displayed next to these features indicates active status.

Screen Lock Sounds

The screen lock sounds option is used to activate/deactivate sounds when locking and unlocking the screen.

1. Press  →  and then tap  (Settings) → Sound settings.
2. Tap **Screen lock sounds**. A check mark displayed next to these features indicates active status.

Display Settings

In this menu, you can change various settings for the display such as the font, orientation, pop-up notifications, puzzle lock feature, animation, brightness, screen timeout, power saving mode, and tv out settings.

Adjusting the Screen Display

1. Press  →  and then tap  (Settings) → Display.
2. Configure the following screen display settings:
 - **Screen display**
 - **Font style:** sets the fonts used on the LCD display. Selections are: Default font. Tap **Get fonts online** to download additional fonts.
 - **Home screen Wallpaper:** assigns an image from either the Gallery, Live wallpapers, or Wallpaper gallery to the Home screen.
 - **Lock screen Wallpaper:** assigns an image from either the Wallpaper gallery or Gallery to the Lock screen.
 - **Clock position:** assigns the on-screen clock position to either the top, Middle or Bottom of the screen.
 - **Event notifications:** assigns what type of on-screen notification you are prompted with. Choose from either: New messages or New emails.
 - **Brightness:** adjusts the on-screen brightness level.

Note: For more information, refer to “Adjusting Screen Brightness” on page 174.

- **Auto-rotate screen:** when enabled, the phone automatically switches from portrait to landscape orientation and vice versa. When this setting is disabled, the phone displays in portrait mode only.
- **Animation:** determines whether some or all of the window elements animate. Selections are: No animations, Some animations, or All animations.
- **Screen timeout:** adjusts the delay time before the screen automatically turns off. Selections are: 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes, and 30 minutes.
- **Touch key light duration:** to adjust the light duration of the touch keys..
- **Horizontal calibration:** uses the accelerometer to calibrate the phone when held in a horizontal position.

Adjusting Screen Brightness

This feature configures the LCD Brightness levels.

1. Press  →  and then tap 
(Settings) → Display → Brightness.
2. Touch and slide the on-screen slider to adjust the level and tap **OK**.

Horizontal Calibration

Calibrate your phone by using the built-in accelerometer.

1. Press  →  and then tap 
(Settings) → Display → Horizontal calibration.

2. Place the phone on a level surface and tap **Calibrate**. The phone adjusts the level of the accelerometer. During the calibration process a green circle appears on-screen and the center circle adjusts to the center position.

Power Saving Mode

This feature allows you both automatically set the phone to use a power saving mode and configure additional power saving options manually, all in an effort to conserve battery power.

1. Press  →  and then tap 
(Settings) → Power saving mode.
2. Confirm  appears at the top of the screen.
This indicates the power saving mode is active.

To automatically enable power saving options:

1. Press  →  and then tap 
(Settings) → Power saving mode.
2. Tap **Use Power saving mode** to enable this feature when the battery level is low.
3. Tap **Power saving mode on at** to assign the “battery low” level at which the power saving mode is activated. It is at this level that the automatic power saving function will “kick in”.
4. Tap **OK** to store the new battery level.

To activate additional power saving features:

1. Activate Power saving mode.
2. Tap any of the available fields to activate additional power saving parameters. Choose from:
 - **Turn Off Wi-Fi** to disable Wi-Fi when it is not connected to an AP.
 - **Turn Off Bluetooth** to disable Bluetooth when not in use or actively transmitting data.
 - **Turn Off GPS** to disable the GPS location system when not in use.
 - **Turn off Sync** to disable the feature when the phone is not synchronizing with the server.
 - **Brightness** to enable or disable the adjustment of screen brightness. This field must be enabled before being able to adjust the brightness value.
 - **Brightness** to select the brightness percentage value. For more information, refer to “*Adjusting Screen Brightness*” on page 174.
 - **Screen time-out** to adjust the time delay before the screen turns off.
 - **Power saving tips** to display additional on-screen power saving information.

Location and Security

The Location and Security settings allow you to configure phone location and security settings.

Using Wireless Networks

Before you use applications such as Google Maps and find your location or search for places of interest, you must enable the Use wireless networks option or enable the GPS satellites.

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Use wireless networks** to enable location information using the wireless network.

Enabling the GPS Satellites

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Use GPS satellites** enable the GPS satellite.

Enabling the sensor aiding

1. Press  →  and then tap 
(Settings) → **Location and security**. For more information, refer to “*Enabling a Location source*” on page 125.
2. Tap **Use sensor aiding** enhances positioning and save power while using the sensors.

Screen Unlock Pattern Settings

To secure data and limit phone access, set the phone to require a screen unlock pattern each time you turn on the device, or every time the phone wakes up from sleep mode (when the screen automatically turns off).

Setting an Unlock Pattern

Creating a screen unlock pattern increases security on the phone. When you enable the User visible pattern field, you will draw an unlock pattern on the screen whenever you want to unlock the phone's buttons or touch screen. When you activate the User tactile feedback field, you feel vibration as feedback while drawing the pattern.

Note: Make sure the Require Pattern field is activated.

1. Press  →  and then tap  (Settings) → Location and security.
2. Tap **Set screen lock** → **Pattern**.
3. Read the instructions then tap **Next**.
4. Review the onscreen animation procedure for drawing a pattern and tap **Next** when you are ready to draw a pattern.
5. Draw your pattern by touching your first on-screen point. Then, **without removing your finger from the screen, drag your finger over adjacent points until the gray trace line overlaps each point** and they are highlighted with a green circle.

6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen and tap **Continue**.
7. Confirm the new pattern by redrawing it and then tapping **Confirm**. The Unlock pattern is set.

Changing the Screen Lock Pattern

This feature allows you to change the previously stored unlock pattern and update it if necessary. This process is similar to changing your password from time to time.

1. Press  →  and then tap  (Settings) → **Location and security**.
2. Tap **Change screen lock**.
3. Retrace your current pattern on the screen.
4. Tap **Pattern** and repeat steps 3 - 7 from the previous section.

Using Visible a Pattern

When enabled, this feature displays the onscreen lock grid that is used to unlock the phone.

PIN Lock and Unlock

1. Press  →  and then tap  (Settings) → **Location and security**.
2. Tap **Set screen lock**.
3. Tap **PIN**.
4. Enter a PIN number using the numeric keypad and touch **Continue** to confirm the password.

1. Confirm the PIN by re-entering it and tap **OK** to confirm.

Your phone now requires you to enter this PIN number in order to unlock the phone.

Password Lock and Unlock

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Set screen lock**.
3. Tap **Password**.
4. Enter a password using the keypad and tap **Continue** to confirm the password.
5. Confirm the password by re-entering it and tap **OK** to confirm.

Setting up SIM Card Lock

Prevent another user from using your SIM card to make unauthorized calls or from accessing information stored on your SIM card by protecting the information using a PIN code.

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card**, enter your SIM PIN code, then tap **OK**.

Note: You must activate Lock SIM card before you can change your SIM PIN code.

To change an existing SIM Card PIN:

1. Tap **Change SIM PIN**.
2. Enter the old SIM PIN code and tap **OK**.
3. Enter the new SIM PIN code and tap **OK**.
4. Re-type the new SIM PIN code and tap **OK**.

Password Settings

When you create a phone password you can also configure the phone to display the password as you type it instead of using an asterisk (*).

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Visible passwords** to activate this feature.

Device Administration

Activating this feature allows Google to administrate your phone in a way similar to IT security settings on a corporate PC. This would be beneficial in the case that your phone was lost or stolen. The phone could be “deactivated” or “restricted” (through administration) from a remote location.

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Select device administrators** to begin configuring this setting.
3. Select an administrator device and follow the prompts.

Credential Storage

This option allows certain applications to access secure certificates and other credentials. Certificates and credentials can be installed to the SD card and password protected.

1. Press  →  and then tap 
(Settings) → **Location and security**.
2. Tap **Use secure credentials** to activate this feature. A check mark displayed next to the feature indicates secure credentials is active.
3. Tap **Install from USB storage** to install encrypted certificates from the USB Storage location.
4. Tap **Set password** to set or change the credential storage password.
5. Tap **Clear storage** to clear the storage (SD card or phone memory) of all contents and reset the credentials password.

Applications

This phone can be used for Android development. You can write applications in the SDK and install them on this device, then run the applications using the hardware, system, and network. This feature allows you to configure the device for development.

Warning! Android Dev Phones are not intended for non-developer end-users. Because the device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Unknown Sources

Before you can download a web application you must enable the Unknown sources feature (enables downloading). Developers can use this option to install non-Market applications.

1. Press  →  and then tap 
(Settings) → **Applications**.
2. Tap **Unknown sources** to active this feature.

Note: If you are notified that you can not download a Market application because it comes from an “Unknown source”, enabling this option corrects this issue.

Managing Applications

This feature allows you to manage installed applications. You can view and control currently running services, or use the device for application development.

You can also view the amount of memory or resources used as well as the remaining memory and resources for each of the applications on your phone and clear the data, cache, or defaults.

- Press  →  and then tap 
(Settings) → **Applications** → **Manage applications**.

Clearing Application Cache and Data

Important! You must have downloaded applications installed to use this feature.

1. Press  →  and then tap 
(Settings) → Applications → Manage applications.
2. Tap an application in which to clear the cache or data.
3. Tap **Force stop**, **Clear data**, or **Clear cache**.

Uninstalling Third-party Applications

Important! You must have downloaded applications installed to use this feature.

1. Press  →  and then tap 
(Settings) → Applications → Manage applications.
2. Tap the **Downloaded** tab and select your desired application.
3. Tap **Uninstall** (from within the top area of the Application info page).
4. At the prompt, tap **OK** to uninstall the application.
5. Select a reason for uninstalling the application, then tap **OK**.

Moving Third-party Applications to your SD Card

Your phone's built in memory is augmented by using a microSD card to store additional data. When the phone's built-in memory capacity is reached, it can be possible to move some applications over to the internal microSD card. Freeing up memory space on the phone can help avoid any sluggish performance when the phone has to work harder to manage memory resources.

Important! Only certain downloaded applications are capable of being moved from phone to card.

1. Press  →  and then tap 
(Settings) → Applications → Manage applications.
2. Tap the **Downloaded** tab and select your desired application.
3. Tap **Move to SD card** (from within the Storage section of the Application info page).

Once the application has been moved to the microSD card, this button now reads "Move to phone".

Running Services

The Running services option allows you to view and control currently running services such as Backup, Google Talk, SNS (messaging), Swype, and more.

1. Press  →  and then tap 
(Settings) → Applications → Running services.

The screen displays all the processes that are running.

2. Tap a process to stop the process from running.
When you stop the process the service or application will no longer run until you start the process or application again.

Important! Stopping a process might have undesirable consequences on the application.

Memory Usage

This option allows you to view a list of the memory usage for currently active applications.

1. Press  →  and then tap 
(Settings) → Applications → Memory usage. The All tab is opened and displays a list of the current applications.
2. Press  and then tap **Sort** to change the list from being sorted either alphabetically or by largest memory usage.

Battery Usage

This option allows you to view a list of those components using battery power.

1. Press  →  and then tap 
(Settings) → Applications → Battery usage.
2. Press  and then tap **Refresh** to update the list.
– or –
Tap an entry to view more detailed information.

Android Development

- Press  →  and then tap 
(Settings) → Applications → Development.

Important! These features are used for development purposes only.

USB Debugging

This feature is used for development purposes only.

Allowing Mock Locations

This feature is used for development purposes only.

If you are a developer who is testing a GPS applications using this device, you can tell the device that the phone is at different GPS locations. In other words, the phone is allowed to “mock” the coordinates.

Accounts and Synchronization

Your phone provides the ability to synchronize data from a variety of different sources or sites. These accounts can range from Google, a Corporate Microsoft Exchange Email Server, and other social sites such as Facebook, Twitter, and MySpace. Corporate and Google accounts provide the ability to synchronize Calendar events and Contacts.

To enable the auto-sync feature:

1. Press  →  and then tap  (Settings) → Accounts and sync.
2. Tap **Auto-sync**. A green checkmark indicates the feature is enabled. This feature enables the synchronization of data between your phone and external sites or servers.
 - The three main components are Contacts Email, and Calendar Events. Before these can be synchronized, they must be added to the managed accounts list.
 - **Background data**: allows your phone to use data in the background.

Synchronizing a Google Account

By default, there are no accounts managed by the device. These must be manually added.

To manage an existing Google account:

1. Press  →  and then tap  (Settings) → Accounts and sync.
2. Tap **Add account** → Google.
3. Tap **Next** → Sign in.

Note: If you do not already have a Google account, tap **Create** and follow the on-screen prompts to create your new account.

4. Touch the **Username** (@gmail.com) and **Password** fields and enter your information.
5. Tap **Sign in**. Your phone then communicates with the Google servers to confirm your information. Your existing Gmail account then appears within the **Manage accounts** area of the screen.
 - Any changes or updates to your Gmail account are then automatically updated to your device.

To configure the Google management settings:

1. Press  →  and then tap  (Settings) → Accounts and sync.
 2. Tap  within the Google account field to reveal the account's synchronization settings screen.
 3. Tap the parameters you wish to synchronize (**Sync Contacts**, **Sync Gmail**, or **Sync Calendar**). A green checkmark indicates the feature is enabled.
 4. Press  to return to the previous screen.
- For more information, refer to “Synchronizing Contacts” on page 82.

Synchronizing Your Corporate Account

By default, there are no Corporate Calendar events managed by the device. These must be manually added.

Note: Once a corporate email account is created, it is automatically added as a managed account.

Use the following procedure to configure your phone to synchronize with a corporate email account.

1. From the Home screen, tap  (Applications) → **Settings** → **Accounts and sync**.
— or —
Press  →  and then tap  (**Settings**) → **Accounts and sync**.
2. Locate the email account containing the events you wish to synchronize.
3. Tap  within the adjacent account field to reveal the account's synchronization settings screen.
4. Toggle the check mark adjacent to either the **Sync Contacts** or **Sync Calendar** fields to manually sync the account.

Motion Settings

This feature allows you to assign specific functions to certain phone actions that are detected by both the accelerometer and gyroscope.

To activate motion:

- Press  →  and then tap  (**Settings**) → **Motion** → **Motion activation**.

To activate different motion functions:

- Activate the motion feature.
- **Turn over to mute** activates the mute function for incoming calls and playing sounds.
 - **Tutorials** provide on-screen visual explanations of the above features.

Privacy Settings

Location settings, backup configurations, or reset the phone to erase all personal data.

- Press  →  and then tap  (**Settings**) → **Privacy**.

Mobile Backup and Restore

The phone can be configured to back up your current settings, application data and settings.

1. Press  →  and then tap  (**Settings**) → **Privacy**.
2. Tap **Back up my data** to create a backup of your current phone settings and applications.

3. Tap **Automatic restore** to assist in the re-installation of a previously installed application (including preferences and data).

Prior to doing a Factory Reset

Before using Kies air to upgrade your device, it is recommended that you backup your personal data prior to use.

To export a Contact list to your microSD card:

1. From the Home screen, tap  (**Contacts**).
2. Press  and then tap **Import/Export**.
3. Tap **Export to SD card** → **OK**. For more information, refer to “Export/Import” on page 84.

Verify your images and videos are on your microSD card:

1. From the Home screen, tap  (**Applications**) →  (**Gallery**).
2. Verify the Gallery contains all of your pictures and videos.
3. Remove the back cover and remove the internal microSD card prior to initiating a Kies air update.

Factory Data Reset

From this menu you can reset your phone and sound settings to the factory default settings.

1. Press  →  and then tap  (**Settings**) → **Privacy**. (You will see a disclaimer.)
2. Tap **Factory data reset** → **Reset phone**.
3. If necessary, enter your password and tap **Erase everything**.

The phone resets to the factory default settings automatically and when finished displays the Home screen.

Note: Select **Format USB storage** to also erase all data on the USB storage.

SD Card & Phone Storage

From this menu you can view the memory allocation for the memory card as well as mount or unmount the SD card.

For more information about mounting or unmounting the SD card, see “Using the SD Card” on page 45.

To view the memory allocation for your external SD card:

- ▶ Press  →  and then tap  (**Settings**) → **Storage**. The available memory displays under the Total space and Available space headings.

Search Settings

You can use your phone's search preferences to configure some aspects of Google Web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches.

1. Press  →  and then tap  (Search).
2. Press  → **Search settings**.
3. Tap any of the following search parameters to then alter the settings:
 - **Google search** opens a screen where you can set your Google search preferences.
 - **Show web suggestions**: includes search matches from Google's online search engine.
 - **Use My Location**: uses your My Location information for Google search results and services.
 - **Search history**: determines whether you also wish to included personalized search history results in the list of matches.
 - **Manage search history**: helps to manage the personalized search history associated with your current registered Google account.
 - **Searchable items**: opens a screen where you can choose the search categories included in device searches, such as: **Web, Apps, Contacts, Memo, Messaging, Music, Slacker, Voice Search**, or **Yelp**.
 - **Clear shortcuts**: erases the history for recently selected search results.

Language & Keyboard Settings

This setting allows you to configure the language in which to display the menus. You can also set on-screen keyboard options.

- Press  →  and then tap  (Settings) → **Language and keyboard**.

Language Settings

To set the language that the menus display on the phone:

1. Press  →  and then tap  (Settings) → **Language and keyboard** → **Select language**.
2. Select a language and region from the list.

Select Input Method

There are two input methods available: Swype and Samsung keypad.

1. Press  →  and then tap  (Settings) → **Language and keyboard** → **Select input method**.
2. Select an input method.

Swype Settings

For more information, refer to “*SWYPE Settings*” on page 64.

1. Press  →  and then tap  (Settings) → **Language and keyboard** → **Swype**.

2. Tap one of the following Swype preferences to activate the setting:

- **Language:** allows you to select the current text input language. Default language is US English.
- **Audio feedback:** turns off sounds generated by the Swype application.
- **Show tips:** turns on an on-screen flashing indicator that provides helpful user information.

Swype Advanced settings

Advanced settings provide access to Swype operation parameters.

- **Word suggestion:** uses a built-in word database to predict words while entering text in Swype.
- **Auto-spacing:** automatically inserts a space between words. When you finish a word, just lift your finger or stylus and start the next word.
- **Auto-capitalization:** automatically capitalizes the first letter of a sentence.
- **Show complete trace:** determines whether or not to display the complete Swype trace path on-screen.
- **Speed vs. accuracy:** sets how quickly Swype responds to on-screen input. Move the slider between Fast Response (speed) or Error Tolerant (accuracy) and tap **OK**.
- **Personal dictionary:** manages your personal dictionary.
- **Reset Swype's dictionary:** deletes all words you've previously entered and added to Swype's dictionary.

Swype Help settings

Help settings provide access to Swype help operation parameters.

- **Swype help:** displays the on-screen Swype User Manual.
- **Tutorial:** provides an on-screen tutorial that shows you how to input text faster in Swype input mode.

About

Provides information about the current Swype application version.

Samsung Keyboard Settings

1. Press  →  and then tap  (**Settings**) → **Language and keyboard** → **Samsung keypad**.
2. Tap **Portrait keypad types** and select a text input method:
 - Qwerty Keypad
 - 3x4 Keypad
3. Tap **Input languages** and select a language.
4. Tap **XT9** to use XT9 Predictive text method. For more information, refer to “*XT9 Advanced Settings*” on page 186. For more information, refer to “*Text Input Methods*” on page 63.
5. Tap the **Keypad sweeping** field if you want to sweep the keypad and change from ABC to ?123 mode. For more information, refer to “*Text Input Methods*” on page 63.

6. Tap the **Auto-capitalization** field to automatically capitalize the first letter of a sentence.
7. Tap **Voice input** to activate the Voice input feature. This is an experimental feature that uses Google's networked speech recognition application.
8. Tap **Auto-full stop** to automatically insert a full stop by tapping the space bar twice.
9. Tap the **Tutorial** field to view a short tutorial on use of the Samsung keyboard.
4. Tap the **Spell correction** field. This option corrects typographical errors by selecting from a list of possible words that reflect the characters of the keys you touched as well as the characters of nearby keys.
5. Tap the **Next word prediction** field to enable word prediction.
6. Tap the **Auto-append** field to automatically add predictions.
7. Tap the **Auto-substitution** field to automatically replace words that you are typing. This option assists with correcting misspelled words.

XT9 Advanced Settings

The following XT9 Advanced settings are available when the XT9 field is selected.

1. Tap the **XT9** field to select XT9 (predictive text) mode, then tap **XT9 advanced settings**.
2. Tap the **Word completion** field to enable word completion. Your phone predicts how to complete the word typed.
3. Tap the **Word completion point** field then touch **2 letters**, **3 letters**, **4 letters**, or the **5 letters** radio button. Word completion begins after 2 or more (depending on your selection).
8. Tap the **Regional correction** field. This option sets the device to automatically correct mistyped words according to normal spelling for your region.
9. Tap the **Recapture** field. This option sets the device to re-display the word suggestion list when you select the wrong word from the list.
10. To add a new word to the T9 dictionary:
Tap **XT9 my words** → **Add word** or press  and then tap **Add**.
Enter the new word in the **Register to XT9 my words** field, then tap **Done**.

11. Tap **XT9 auto-substitution** to add words to substitute (for example you've becomes you've). A list of substitutions displays.
12. If you do not see the substitution you want, press  and then tap **Add**, then input the Shortcut word and Substitution word.
13. Tap **Done**.

Voice Input and Out Settings

Configuring Voice Input Recognition

This feature allows the phone to correctly recognize verbal input.

1. Press  →  and then tap 
(Settings) → **Voice input and output** → **Voice recognition settings**.
2. Configure the available options to alter the settings associated with this feature:
 - **Language:** selects an input language and associated dialect recognition (if available).
 - **SafeSearch:** sets the explicit image filter settings. These settings apply to only Google voice search results. Choose from: **Off**, **Moderate**, or **Strict**.
 - **Block offensive words:** allows you to block recognition of known offensive words or language. (A green check mark indicates the feature is active).
3. Press  to return to the previous screen.

Configuring Text-to-speech (Voice Output)

This feature allows the phone to provide a verbal readout of on-screen data such as messages and incoming caller information.

1. Press  →  and then tap 
(Settings) → **Voice input and output** → **Text-to-speech settings**.
2. Configure the available options to alter the settings associated with this feature:
 - **Listen to an example:** plays a short example of what the text-to-speech feature sounds like on your device when activated.
 - **Driving mode:** incoming calls and new notifications are automatically ready out loud.
 - **Driving mode settings:** allows you to select applications to use TTs while Driving mode is on.
 - **Always use my settings:** accepts an override of application settings with personal configurations for this text-to-speech settings screen. If enabled, your device defaults to using the text-to-speech feature.
 - **Default engine:** sets the speech synthesis engine that will be used for the spoken text. Choices include: **Pico TTS**.
 - **Install voice data:** confirms the installation of necessary data required for voice synthesis.
 - **Speech rate:** adjusts the rate at which on-screen text is spoken by the device. Choose from: **Very slow**, **Slow**, **Normal**, **Fast**, and **Very fast**.
 - **Language:** assigns the language used for verbal readout. Choose from German (Germany), English (United Kingdom), English (United States), Spanish (Spain), French (France), or Italian (Italy).

- **Samsung TTS:** configures the Samsung TTS settings for various languages.
- **Pico TTS:** configures the pico TTS settings for various languages.

Accessibility Settings

This service lets you enable and disable downloaded accessibility applications that aid in navigating your Android device, such as TalkBack (uses synthesized speech to describe the results of actions), KickBack (provides haptic feedback for actions), and SoundBack (plays sounds for various actions). Also lets you enable use of the power key to end calls.

1. Press  →  and then tap 
(Settings) → Accessibility.

Note: Initially, it might be necessary to download accessibility applications from the Android Market.

2. Tap **Accessibility** to activate the feature, then select the services for which you want data to log.
3. Select **The power key ends calls** field to activate this feature which ends any current calls.

Date and Time

This menu allows you to change the current time and date displayed.

1. Press  →  and then tap 
(Settings) → Date and time.

2. Tap **Automatic** to allow the network set the date and time.

Important! Deactivate **Automatic** to manually set the rest of the options.

3. Tap **Set date** and use the plus or minus icons to set the **Month**, **Day**, and **Year** then touch **Set**.
4. Tap **Select time zone**, then touch a time zone.
5. Tap **Set time** and use the plus or minus icons, set **Hour**, and **Minute**. Tap **PM** or **AM**, then select **Set**.
 - Optional: Tap **Use 24-hour format**. If this is not selected the phone automatically uses a 12-hour format.
6. Tap **Select date format** and touch the date format type.

About Phone

This menu contains legal information, system tutorial information, and other phone information such as the model number, firmware version, baseband version, kernel version, and software build number.

To access phone information:

► Press  →  and then tap 

(Settings) → **About phone**. The following information displays:

- **Status:** displays the battery status, the level of the battery (percentage), the phone number for this device, the network connection, signal strength, mobile network type, service state, roaming status, mobile network state, IMEI number, IMEI SV, Wi-Fi MAC address, Bluetooth address, and Up time.
- **Battery usage:** displays the applications or services (in percentages) that are using battery power.
- **Legal information:** This option displays information about Open source licenses as well as Google legal information. This information clearly provides copyright and distribution legal information and facts as well as Google Terms of Service, Terms of Service for Android-powered Phones, and much more pertinent information as a reference. Read the information and terms, then press  to return to the Settings menu.
- **Model number:** displays the phone's model number.
- **Android version:** displays the firmware version loaded on this handset.
- **Baseband version:** displays the baseband version loaded on this handset.
- **Kernel version:** displays the kernel version loaded on this handset.

- **Build number:** displays the software, build number.

Note: Firmware, baseband, kernel and build numbers are usually used for updates to the handset or support. For additional information please contact your T-Mobile service representative.

Software Update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone. The phone automatically updates with the latest available software when you access this option.

► Press  →  and then tap 

(Settings) → **Software update**.

The phone automatically updates the software (if available).

Section 13: Health and Safety Information

This section outlines the safety precautions associated with using your phone. The terms “mobile device” or “cell phone” are used in this section to refer to your phone. **Read this information before using your mobile device.**

Exposure to Radio Frequency (RF) Signals

The U.S. Food and Drug Administration (FDA) has published information for consumers relating to Radio Frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

Do cell phones pose a health hazard?

Many people are concerned that cell phone radiation will cause cancer or other serious health hazards. The weight of scientific evidence has not linked cell phones with any health problems.

Cell phones emit low levels of Radio Frequency (RF) energy. Over the past 15 years, scientists have conducted hundreds of studies looking at the biological effects of the radio frequency energy emitted by cell phones. While some researchers have reported biological changes associated with RF energy, these studies have failed to be replicated. The majority of studies published have failed to show an association between exposure to radio frequency from a cell phone and health problems.

The low levels of RF cell phones emit while in use are in the microwave frequency range. They also emit RF at substantially reduced time intervals when in the

stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects.

The biological effects of radio frequency energy should not be confused with the effects from other types of electromagnetic energy.

Very high levels of electromagnetic energy, such as is found in X-rays and gamma rays, can ionize biological tissues. Ionization is a process where electrons are stripped away from their normal locations in atoms and molecules. It can permanently damage biological tissues including DNA, the genetic material.

The energy levels associated with radio frequency energy, including both radio waves and microwaves, are not great enough to cause ionization of atoms and molecules. Therefore, RF energy is a type of non-ionizing radiation. Other types of non-ionizing radiation include visible light, infrared radiation (heat), and other forms of electromagnetic radiation with relatively low frequencies.

While RF energy does not ionize particles, large amounts can increase body temperatures and cause tissue damage. Two areas of the body, the eyes and the testes, are particularly vulnerable to RF heating because there is relatively little blood flow in them to carry away excess heat.

Research Results to Date: Is there a connection between RF and certain health problems?

The results of most studies conducted to date say no. In addition, attempts to replicate and confirm the few studies that have shown a connection have failed.

The scientific community at large therefore believes that the weight of scientific evidence does not show an association between exposure to Radio Frequency (RF) from cell phones and adverse health outcomes. Still the scientific community has supported additional research to address gaps in knowledge. Some of these studies are described below.

Interphone Study

Interphone is a large international study designed to determine whether cell phones increase the risk of head and neck cancer. A report published in the International Journal of Epidemiology (June, 2010) compared cell phone usage for more than 5,000 people with brain tumors (glioma and meningioma) and a similar number of healthy controls.

Results of this study did NOT show that cell phones caused brain cancer. In this study, most people had no increased risk of brain cancer from using cell phones. For people with the heaviest use of cell phones (an average of more than ½ hour per day, every day, for over 10 years) the study suggested a slight increase in brain cancer. However, the authors determined that biases and errors prevented any conclusions being drawn from this data. Additional information about Interphone can be found at <http://com.iarc.fr/en/media-centre/pr/>.

Interphone is the largest cell phone study to date, but it did not answer all questions about cell phone safety. Additional research is being conducted around the world, and the FDA continues to monitor developments in this field.

International Cohort Study on Mobile Phone Users (COSMOS)

The COSMOS study aims to conduct long-term health monitoring of a large group of people to determine if there are any health issues linked to long-term exposure to radio frequency energy from cell phone use. The COSMOS study will follow approximately 300,000 adult cell phone users in Europe for 20 to 30 years. Additional information about the COSMOS study can be found at <http://www.ukcosmos.org/index.html>.

Risk of Brain Cancer from Exposure to Radio Frequency Fields in Childhood and Adolescence (MOBI-KIDS)

MOBI-KIDS is an international study investigating the relationship between exposure to radio frequency energy from communication technologies including cell phones and brain cancer in young people. This is an international multi-center study involving 14 European and non-European countries. Additional information about MOBI-KIDS can be found at http://www.creall.cat/programes-recerca/en_projectes-creall/view.php?ID=39.

Surveillance, Epidemiology, and End Results (SEER) Program of the National Cancer Institute

The National Cancer Institute (NCI) actively follows cancer statistics in the United States to detect any change in rates of new cases for brain cancer. If cell phones play a role in risk for brain cancer, rates should go up, because heavy cell phone use has been common for quite some time in the U.S. Between 1987 and 2005, the overall age-adjusted incidence of brain cancer did not increase. Additional information about SEER can be found at <http://seer.cancer.gov/>.

Cell Phone Industry Actions

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the cell phone industry to take a number of steps, including the following:

- Support-needed research on possible biological effects of RF for the type of signal emitted by cell phones;
- Design cell phones in a way that minimizes any RF exposure to the user; and
- Cooperate in providing users of cell phones with the current information on cell phone use and human health concerns.

The FDA also is working with voluntary standard-setting bodies such as the Institute of Electrical and Electronics Engineers (IEEE), the International Commission on Non-Ionizing Radiation Protection (ICNIRP), and others to assure that safety standards continue to adequately protect the public.

Reducing Exposure: Hands-Free Kits and Other Accessories

Steps to Reduce Exposure to Radio Frequency Energy

If there is a risk from being exposed to radio frequency energy (RF) from cell phones - and at this point we do not know that there is - it is probably very small. But, if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your RF exposure.

- Reduce the amount of time spent using your cell phone;
- Use speaker mode or a headset to place more distance between your head and the cell phone.

Hands-Free Kits

Hands-free kits may include audio or Bluetooth® headsets and various types of body-worn accessories such as belt-clips and holsters. Combinations of these can be used to reduce RF energy absorption from cell phones.

Headsets can substantially reduce exposure because the phone is held away from the head in the user's hand or in approved body-worn accessories. Cell phones marketed in the U.S. are required to meet RF exposure compliance requirements when used against the head and against the body.

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used for convenience and comfort. They are also required by law in many states if you want to use your phone while driving.

Cell Phone Accessories that Claim to Shield the Head from RF Radiation

Because there are no known risks from exposure to RF emissions from cell phones, there is no reason to believe that accessories which claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hands-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption.

Children and Cell Phones

The scientific evidence does not show a danger to any users of cell phones from RF exposure, including children and teenagers. The steps adults can take to reduce RF exposure apply to children and teenagers as well.

- Reduce the amount of time spent on the cell phone;
- Use speaker mode or a headset to place more distance between the head and the cell phone.

Some groups sponsored by other national governments have advised that children be discouraged from using cell phones at all. For example, The Stewart Report from the United Kingdom made such a recommendation in December 2000. In this report, a group of independent experts noted that no evidence exists that using a cell phone

causes brain tumors or other ill effects. Their recommendation to limit cell phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (updated 10/1/2010):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>.
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radtown/wireless-tech.html>.
- Occupational Safety and Health Administration (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/>.
(Note: This web address is case sensitive.)
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/>.
- World Health Organization (WHO):
<http://www.who.int/peh-emf/en/>.
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>.
- Health Protection Agency:
<http://www.hpa.org.uk/Topics/Radiation/>.
- US Food and Drug Administration:
<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>.

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for Radio Frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government.

These FCC exposure limits are derived from the recommendations of two expert organizations: the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all

tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the mobile device a minimum of 1.0 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

Cellular/PCS WCDMA/GSM/EDGE and AWS WCDMA

- Head: 0.74 W/Kg.
- Body-worn Accessory: 0.76 W/Kg.
- Product Specific (Wireless Router): 0.97 W/kg;
- Simultaneous Transmission: 0.97 W/kg.

WLAN

- Head: 0.16 W/Kg.
- Body-worn Accessory: 0.16 W/Kg.
- Product Specific (Wireless Router): 0.16 W/kg;
- Simultaneous Transmission: 0.97 W/kg

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Smart Practices While Driving

On the Road - Off the Phone

The primary responsibility of every driver is the safe operation of his or her vehicle.

Responsible drivers understand that no secondary task should be performed while driving whether it be eating, drinking, talking to passengers, or talking on a mobile phone - unless the driver has assessed the driving conditions and is confident that the secondary task will not interfere with their primary responsibility. **Do not engage in any activity while driving a moving vehicle which may cause you to take your eyes off the road or become so absorbed in the activity that your ability to concentrate on the act of**

driving becomes impaired. Samsung is committed to promoting responsible driving and giving drivers the tools they need to understand and address distractions.

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. For example, only hands-free use may be permitted in certain areas.

Before answering calls, consider your circumstances. Let the call go to voicemail when driving conditions require. Remember, driving comes first, not the call!

If you consider a call necessary and appropriate, follow these tips:

- Use a hands-free device;
- Secure your phone within easy reach;
- Place calls when you are not moving;
- Plan calls when your car will be stationary;
- Do not engage in stressful or emotional conversations;
- Let the person with whom you are speaking know that you are driving and will suspend the call if necessary;
- Do not take notes or look up phone numbers while driving;

Notice regarding legal restrictions on mounting this device in an automobile:

Laws in some states may prohibit mounting this device on or near the windshield of an automobile. In other states, the law may permit mounting this device only in specific locations in the automobile. Be sure to consult the state and local laws or ordinances

where you drive before mounting this device in an automobile. Failure to comply with these restrictions could result in fines, penalties, or other damages.

Never mount this device in a manner that will obstruct the driver's clear view of the street and traffic.

Never use wireless data services such as text messaging, Web browsing, or e-mail while operating a vehicle.

Never watch videos, such as a movie or clip, or play video games while operating a vehicle.

For more information, go to <http://www.ctia.org>.

Battery Use and Safety

Important!: Handle and store batteries properly to avoid injury or damage. Most battery issues arise from improper handling of batteries and, particularly, from the continued use of damaged batteries.

- **Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.** Do not put a high degree of pressure on the battery. This can cause leakage or an internal short-circuit, resulting in overheating.
- **Do not let the phone or battery come in contact with liquids.** Liquids can get into the phone's circuits, leading to corrosion. Even when the phone appears to be dry and appears to operate normally, the circuitry could slowly corrode and pose a safety hazard. If the phone and/or battery get wet, have them checked by your service provider or contact Samsung, even if they appear to be working properly.

- **Do not place your battery in or near a heat source.**

Excessive heating can damage the phone or the battery and could cause the phone or the battery to explode. Do not dry a wet or damp battery with an appliance or heat source such as a microwave oven, hair dryer, iron, or radiator. Avoid leaving your phone in your car in high temperatures.

- **Do not dispose of the phone or the battery in a fire.** The phone or the battery may explode when overheated.
- **Do not handle a damaged or leaking battery.** Do not let leaking battery fluid come in contact with your eyes, skin or clothing. For safe disposal options, contact your nearest Samsung-authorized service center.
- **Avoid dropping the cell phone.** Dropping the phone or the battery, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- **Never use any charger or battery that is damaged in any way.**
- **Do not allow the battery to touch metal objects.** Accidental short-circuiting can occur when a metallic object (coin, key, jewelry, clip, or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

Important!: Important: Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone.

Warning!: Warning: Use of a non-Samsung-approved battery or charger may present a risk of fire, explosion, leakage, or other hazard. Samsung's warranty does not cover damage to the phone caused by non-Samsung-approved batteries and/or chargers.

- **Do not use incompatible cell phone batteries and chargers.** Some websites and second-hand dealers not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier-recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- **Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, or leakage, leading to serious injuries, damages to your phone, or other serious hazard.**

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories.

Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

Recycling programs for your mobile device, batteries, and accessories may not be available in your area.

We've made it easy for you to recycle your old Samsung mobile device by working with respected take-back companies in every state in the country.

Drop It Off

You can drop off your Samsung-branded mobile device and batteries for recycling at one of our numerous Samsung Recycling Direct (SM) locations. A list of these locations may be found at: http://pages.samsung.com/us/recyclingdirect/usactivities_environment_samsungrecyclingdirect_locations.jsp.

Samsung-branded devices and batteries will be accepted at these locations for no fee.

Consumers may also recycle their used mobile device or batteries at many retail or carrier-provided locations where mobile devices and batteries are sold. Additional information regarding specific locations may be found at:

<http://www.epa.gov/epawaste/partnerships/plugin/cellphone/index.htm> or at <http://www.call2recycle.org/>.

Mail It In

The Samsung Mobile Take-Back Program will provide Samsung customers with a free recycling mailing label. Just go to

<http://www.samsung.com/us/mobiletakeback> and follow the instructions to print out a free pre-paid postage label and then send your old mobile device or battery to the address listed, via U.S. Mail, for recycling.

Dispose of unwanted electronics through an approved recycler.

To find the nearest recycling location, go to our website:

Follow local regulations regarding disposal of mobile devices and batteries

Dispose of your mobile device and batteries in accordance with local regulations. In some areas, the disposal of these items in household or business trash may be prohibited. Help us protect the environment - recycle!

Warning! Never dispose of batteries in a fire because they may explode.

UL Certified Travel Charger

The Travel Charger for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines:

**FAILURE TO FOLLOW THE INSTRUCTIONS
OUTLINED MAY LEAD TO SERIOUS PERSONAL
INJURY AND POSSIBLE PROPERTY DAMAGE.**

**IMPORTANT SAFETY INSTRUCTIONS - SAVE
THESE INSTRUCTIONS.**

**DANGER - TO REDUCE THE RISK OF FIRE OR
ELECTRIC SHOCK, CAREFULLY FOLLOW
THESE INSTRUCTIONS.**

FOR CONNECTION TO A SUPPLY NOT IN
NORTH AMERICA, USE AN ATTACHMENT
PLUG ADAPTOR OF THE PROPER
CONFIGURATION FOR THE POWER
OUTLET.

THIS POWER UNIT IS INTENDED TO BE
CORRECTLY ORIENTED IN A VERTICAL OR
HORIZONTAL OR FLOOR MOUNT
POSITION.

Display / Touch-Screen

Please note the following information when using
your mobile device:

WARNING REGARDING DISPLAY

The display on your mobile device is made of
glass or acrylic and could break if your mobile
device is dropped or if it receives significant
impact. Do not use if screen is broken or
cracked as this could cause injury to you.

WARRANTY DISCLAIMER: PROPER USE OF A TOUCH-SCREEN MOBILE DEVICE

If your mobile device has a touch-screen
display, please note that a touch-screen
responds best to a light touch from the pad of
your finger or a non-metallic stylus. Using
excessive force or a metallic object when
pressing on the touch-screen may damage the
tempered glass surface and void the warranty.
For more information, please refer to the
“Standard Limited Warranty” on page 207.

GPS & AGPS

Certain Samsung mobile devices can use a Global Positioning System (GPS) signal for location-based applications. A GPS uses satellites controlled by the U.S. Government that are subject to changes implemented in accordance with the Department of Defense policy and the 2008 Federal Radio navigation Plan (FRP). Changes may affect the performance of location-based technology on your mobile device.

Certain Samsung mobile devices can also use an Assisted Global Positioning System (AGPS), which obtains information from the cellular network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges, and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your Location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices which are connected to a wireless network transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. The location-based information may be shared with third-parties, including your wireless service provider, applications providers, Samsung, and other third-parties providing services.

Use of AGPS in Emergency Calls

When you make an emergency call, the cellular network may activate AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the mobile device for as long as the emergency responder instructs you.

Navigation

Maps, directions, and other navigation data may contain inaccurate or incomplete data, and circumstances can and do change over time. In some areas, complete information may not be available. Therefore, **you should always visually confirm that the navigational instructions are consistent with what you see before following them. All users should pay attention to road conditions, closures, traffic, and all other factors that may impact safe driving or walking. Always obey posted road signs.**

Emergency Calls

This mobile device, like any wireless mobile device, operates using radio signals, wireless and landline networks, as well as user-programmed functions, which cannot guarantee connection in all conditions, areas, or circumstances. Therefore, you should never rely solely on any wireless mobile device for essential communications (medical emergencies, for example). Before traveling in remote or

underdeveloped areas, plan an alternate method of contacting emergency services personnel. Remember, to make or receive any calls, the mobile device must be switched on and in a service area with adequate signal strength.

Emergency calls may not be possible on all wireless mobile device networks or when certain network services and/or mobile device features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. From the Home screen, tap . Enter the emergency number for your present location (for example, 911 or other official emergency number), then tap . Emergency numbers vary by location.

If certain features are in use (call blocking, for example), you may first need to deactivate those features before you can make an emergency call. Consult your User Manual and your local cellular service provider. When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your mobile device may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Care and Maintenance

Your mobile device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years:

Keep your Samsung Mobile Device away from:

Liquids of any kind

Keep the mobile device dry. Precipitation, humidity, and liquids contain minerals that will corrode electronic circuits. If the mobile device does get wet, do not accelerate drying with the use of an oven, microwave, or dryer, because this may damage the mobile device and could cause a fire or explosion. Do not use the mobile device with a wet hand. Doing so may cause an electric shock to you or damage to the mobile device.

Extreme heat or cold

Avoid temperatures below 0°C / 32°F or above 45°C / 113°F.

Microwaves

Do not try to dry your mobile device in a microwave oven. Doing so may cause a fire or explosion.

Dust and dirt

Do not expose your mobile device to dust, dirt, or sand.

Cleaning solutions

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the mobile device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Shock or vibration

Do not drop, knock, or shake the mobile device. Rough handling can break internal circuit boards.

Paint

Do not paint the mobile device. Paint can clog the device's moving parts or ventilation openings and prevent proper operation.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cell phones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound, and distorted hearing. Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting

that is appropriate for everyone or for every combination of sound, settings, and equipment.

You should follow some common sense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- Be aware that you can adapt to higher volume settings over time, not realizing that the higher volume may be harmful to your hearing.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech, or experience any temporary hearing difficulty after

listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org/Pages/default.aspx>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/>

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4674)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area, and always switch your mobile device off whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the mobile device or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Using Your Mobile Device Near Other Electronic Devices

Most modern electronic equipment is shielded from Radio Frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless mobile device. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless mobile device and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the mobile device more than six (6) inches from their implantable medical device when the mobile device is turned ON;
- Should not carry the mobile device in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the mobile device OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless mobile device with an implantable medical device, consult your health care provider.

For more information see: <http://www.fcc.gov/oe/rfsafety/rf-faqs.html#>.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your mobile device off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health

care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle before using your mobile device in a motor vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your mobile device off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your mobile device off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch the mobile device off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and

any other area where you would normally be advised to turn off your vehicle engine.

FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless mobile devices under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless mobile devices be compatible with hearing aids.

The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities. While some wireless mobile devices are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and mobile devices also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless mobile devices to assist hearing device users find mobile devices that may be compatible with their hearing devices. Not all mobile devices have been rated. Mobile devices that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated mobile device successfully. Trying out the mobile

device with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Mobile devices rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Mobile devices rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than mobile devices that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless mobile device rating values are then added together.

A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use. If a hearing aid meets the M2 level rating and the wireless mobile device meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with "normal usage" while using their hearing aid with the particular wireless mobile device.


"Normal usage" in this context is defined as a signal quality that is acceptable for normal operation. The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the

Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules.

The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

HAC/Wi-Fi for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

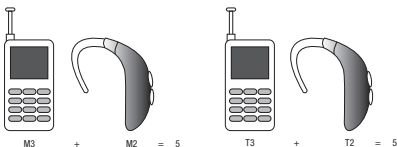

Restricting Children's Access to Your Mobile Device

Your mobile device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the mobile device, or make calls that increase your mobile device bill.

Keep the mobile device and all its parts and accessories out of the reach of small children.

FCC Notice and Cautions

FCC Notice

The mobile device may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the mobile device if such interference cannot be eliminated. Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association.

Cautions

Any changes or modifications to your mobile device not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas, and chargers. The use of any unauthorized accessories may be dangerous and void the mobile device warranty if said accessories cause damage or a defect to the mobile device. Although your mobile device is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the mobile device or install the mobile device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless mobile device equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the mobile device, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your mobile device off before boarding an aircraft. The use of wireless mobile devices in aircraft is illegal and may be dangerous to the aircraft's operation. Check with appropriate authorities before using any function of a mobile device while on an aircraft.
- Failure to observe these instructions may lead to the suspension or denial of cell phone services to the offender, or legal action, or both.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.
- Dispose of phones in accordance with local regulations. In some areas, the disposal of phones in household or business trash may be prohibited. For safe disposal options for phones, contact your nearest Samsung authorized service center.

Section 14: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code

removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG'S sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited

Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service.

What Are The Limits On SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY,

CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT

OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims,

exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG'S employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two

forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America, LLC.
All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [060111]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation

("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or

algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must

include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. THIRD-PARTY APPLICATIONS. Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such

applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks, products, or services of any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOES NOT WARRANT OR

MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD

PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. Limitation of Liability. SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS

BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably

settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Numerics

2G Network

Using 168

3 Sec Pause

Adding 50

3G Network 168

Using 168

411 & More 117

4G 157, 165

4G Network 167, 168

Using 167

A

Accessibility

Activation 64

Accessing

Recently-used applications 31

Voice mail 15

Accounts 117

Accounts and Sync 117

Adding Contacts 83

Add 3 Sec Pause 52

Add to Favorites 87

Adjusting

Call volume 56

Adobe PDF 136

Alarm

Setting 160

Turning Off 161

Alarm Tone

Set as 113

Alerts on Call 169

AllShare

Configuring Settings 118

Receiving Media 118

Transmitting Media 118

Answer Vibration 169

Answering a call 50

Answering Key 169

Application cache and data

Clearing 128

Application Menus

Navigating through 30

Applications 32

411 & More 32

Accounts and Sync 32

AllShare 32

Android Market 35, 127

Bejeweled 2 32

Blio 32

Bonus Apps 32

Browser 142

Calculator 33, 119

Calendar 33

Camera 33, 121

Clock 34

Contacts 33

Downloads 34

Email 34, 121

Files 34

Gallery 34

Google Books 33

- Google Mail 34, 122
- Google Maps 35, 125
- Google Search 34
- Highlight 34
- Kies air 35
- Latitude 35
- Lookout Security 35
- Media Hub 35
- Memo 35, 129
- Messaging 35
- messaging 130
- More for Me 36
- Music 36
- My Device 36
- Navigation 36
- News & Weather 36
- Places 36
- Polaris Office 37
- Settings 37
- Slacker 37
- Social Hub 37
- Task 37
- Task Manager 38
- TeleNav GPS 38, 139
- Tetris 38
- T-Mobile Mall 37
- T-Mobile Name ID 37
- T-Mobile TV HD 37
- Using the Camcorder 107
- Using the Camera 102
- Video Chat 38
- Video Player 141
- Videos 38

- Visual Voicemail 38
- Voice Recorder 38, 141
- Voice Search 38, 141
- Web 39
- Wi-Fi Calling 39
- Yelp 39, 142
- YouTube 39, 142
- Zinio Reader 39

Applications and Development 117

Auto Redial 170

Auto Reject

- Configuration 51

Auto Reject Mode 169

Automatic Answering 169

Auto-sync

- Enabling 181

B

Back up

- My Data 182

Background Color

- Text Messages 91

Backup and Restore 182

Battery

- Charging 10
- Extending Life 11
- Installing 9
- Low Battery Indicator 11
- Removal 9
- Saving Power 12
- Wall Charger 10

Battery Cover

- Removal 6
- Replace 6

Battery Life

Extending 11

Battery Usage 180

Battery Use & Safety 196

Bing

Set Search Engine 149

Black List 51, 61

Adding 51, 78

Blio 119

Block List 61

Bluetooth 164

About 149

Activation 164

Change Name 150

Deleting a Paired Device 151

Device Name 164

Disable 149

Disconnecting a Paired Device 151

Enable 149

Paring Devices 150

Scan for Devices 150

Scanning for other Devices 165

Sending Contact Information 151

Sending Contacts Via 151

Sending Namecard 81

Set Visibility 150

Settings 149

Status indicators 149

Switching to Headset during call 57

Turning on and off 149

Visibility 165

Bonus Apps 119

Books 119

Browser

Adding bookmarks 146

Deleting bookmarks 147

Emptying cookies 147

Entering a URL 145

Navigation 144

Options 144

Search Engine 149

Settings 148

Bubble

Options 90

C

Calculator

Scientific Functions 120

Calendar 159

Creating an event 159

Manually Sync Events 120

Settings 159

Calibration 174

Call Alert 169

Call Answering/Ending 169

Call Barring 170

Call Forwarding 169

Configuring 170

Call Functions 48

Answering 50

Ending 48

Ending a Call 48

Ending via Status Bar 49

Making a Multi-Party Call 58

Pause Dialing 52

Redialing the last number 53

Wait dialing 52

Call Rejection 51, 169

Call Settings 169

Additional Settings 170

General 169

Call Status Tones 169

Call Volume

Adjusting 56

Call Waiting 59, 170

Caller ID 170

Caller Ringtone

Set as 113

Calls

Making a 48

Multi-party 58

Muting 57

Camcorder 107

Accessing the Video Folder 109

Options 108

Shooting Video 107

Camera 102

Camera Options 102

Options 103

Taking Pictures 102

Care and Maintenance 200

Charging battery 10

Children and Cell Phones 193

Clearing

Application cache and data 128

Configuration

Initial 12

Connections

Accessing the Internet 144

Contact Entry

Options 78

Contact List

Options 77

Contact Menus

Options 78

Contacts

Adding a Number to Existing 76

Adding Your Facebook Friends 83

Additional Options 84

As a default 80

Black List 78

Copying 81

Copying to microSD Card 81

Copying to SIM Card 81

Creating a New 72

Default Storage Location 85

Deleting 77

Display Options 82

Displaying Contacts by Name 82

Export List to microSD 153, 183

Family Name First 82

Filtering 82

Given Name First 82

Groups 85

Joining 79

Merge with Google 77

New From Keypad 74

Send Namecard Via 78

Sending 80

Sending All 81

Setting Default Location 77

Settings 85

Contacts List 48

Context Menus 76, 78

Navigation 31

Using 31

Cookies

Emptying 147

Corporate Email

Account Synchronization 182

Add Account 182

Creating a Playlist 114

Creating and sending

Messages 88

Customizing

Home screens 39

D

Data Roaming 167

Activate/Deactivate 167

Deleting

Message Thread 91

Multiple messages 91

Single message 91

Deleting a contact 77

Desk Clock

Configuring 162

Display

Icons 20

Settings 20

Status Bar 20

Display / Touch-Screen 198

Displaying your phone number 48

Do cell phones pose a health hazard? 190

Downloading

New application 127

Downloads 121

Internet Downloads 121

Other Downloads 121

E

EDGE Network 168

Email 93

Composing 94

Configuring Settings 95

Creating an Internet Account 93

Internet Email 93

Opening 94

Opening Internet Email 94

Out of Office Settings 98

Refreshing Messages 94

Sending 84

Emergency Calls 199

Making 49

With SIM 49

Without SIM 49

Emoticons 89

Ending

A call 48

Entering Text 63

Using SWYPE 64

Erasing files from

Memory card 46

Event Notifications 173

Exchange Email 96

Account Setup 96

Composing 97

Configuring Settings 98

- Deleting Message 98
- Opening 97
- Refreshing Messages 97
- Exposure to RF Signals** 190
- F**
- Facebook**
 - Adding Contacts From 83
 - Video Chat 140
- Factory Data Reset** 183
 - Prior To 183
- Factory data reset** 47
- Favorites Tab** 87
- FCC Hearing Aid Compatibility (HAC) Regulations for Wireless Devices** 204
- FCC Notice and Cautions** 205
- Fixed Dialing Numbers** 170
- Folder**
 - Creating and Managing 43
 - Deleting 43
 - Renaming 43
- Font**
 - Style 173
- Font Size**
 - Caption 142
 - Text Messages 91
- Freezing** 19
- G**
- Gallery**
 - Folder Options 105
 - Image Options 106
 - Opening 110
- Getting Started** 5
 - Battery 9

- Battery Cover 6
- Locking/Unlocking the Phone 13
- microSD card 8
- SIM Card 7
- Switching Phone On/Off 13
- Voice Mail 15
- Getting the Fastest Connection** 167
- Gmail** 99, 122
 - Composing a message 100
 - Creating and Additional Account 101
 - Opening 99
 - Refreshing 99
 - Signing In 99
 - Viewing 100
- Google**
 - Account Management Settings 181
 - Account Synchronization 181
 - Add Account 181
 - Adding a Sync Account 181
 - Create New Account 14
 - Merge Contacts 77
 - Retrieving Password 15
 - Set Search Engine 149
 - Signing into Your Account 14
- Google Books** 119
- Google mail**
 - see also Gmail 100
- Google Maps**
 - Enabling a location source 125
 - Opening a map 126
- Google Talk** 37, 138
- GPS & AGPS** 199

Groups

- Adding an Member to an Existing Group 86
- Creating a new caller group 85
- Deleting 86
- Deleting a Caller Group 86
- Editing a Caller Group 86
- Removing an Entry 86
- Settings 86

GSM 167

H

Health and Safety Information 190

Hearing Aids 170

Highlight

- Settings 122

Hold

- Placing a call on hold 57

Home 26

Home Key 24

Home Screen

- Overview 26
- Wallpaper 173

Home screens

- Customizing 39

Homepage 144

Horizontal Calibration 174

HSPA+ 157, 165

I

Icons

- Description 20
- Indicator 20
- Status 20

Images

- Assigning as a Contact icon 107

Assigning as wallpaper 107

Transferring 153, 183

Verifying 153, 183

Importing and Exporting

- To SIM card 84

In call

- Options 56, 57

Incoming Call Volume

- Setting 172

Indicator icons 20

International Call 52

International calls

- Making 52

Internet 144

- Search 145

Internet Call 74

Internet Downloads 121

Internet Email 93

J

Joining

- Contact information 79

K

Kies Air

- Before Using 153

Kies air 123

L

LinkedIn

- Adding Contacts From 83

Live Wallpapers 173

Lock Screen

- Viewing Missed Calls 62
- Wallpaper 173

Logs 60

- Accessing 60
- Accessing from Notifications 60
- Altering Numbers 62
- Erasing 62

Low battery indicator 11

M

Making

- Emergency Calls 49
- International calls 52
- New call 48

Manage Conference Call 58

Managing Applications 178

- Clearing Application Cache 179
- Moving Third-party Applications to Card 179
- Uninstalling Third-party Applications 179

Market 127

Media Hub 111, 129

- Creating a New Account 111
- Using 111

Media Volume

- Setting 172

Memo

- Options 129

Memory card

- Erasing files from the 46

Memory Usage 180

Merge Calls 58

Merge with Google 77

Message

- Options 89
- Read 89
- Reply 90

Thread Options 90

Threads 90

Message Search 91

Message threads 90

Messaging

- Creating and sending 88
- Creating and Sending Text Messages 88
- Deleting a message 91
- Google Mail 99
- Icons on the Status Bar 88
- Insert Smiley 89
- Options 89
- Settings 91
- Signing into Google Mail 99
- Text Templates 92
- Types of Messages 88
- Viewing new 89

microSD Card

- Insertion 8
- Removal 9

Microsoft Exchange 73, 93

Mini Diary

- Deleting an entry 130
- Options 130
- Settings 130

Missed Call

- Viewing from Lock Screen 62

Mobile Networks 167

- Data Roaming 167

Mobile NetworksUse Packet Data 167

Mobile Web 144

- Entering Text in the Mobile Web Browser 145

- Navigating with the Mobile Web 144
- Using Bookmarks 146
- Motion Settings** 182
- Mounting the SD card** 46
- Move to SD card** 179
- Multi-Party Call** 58
 - Dropping One Participant 59
 - Private conversation 58
- Multi-party call**
 - Setting up 58
- Multi-party calls** 58
- Music** 131
 - Adding Music 114
 - Creating a Playlist 114
 - Editing a Playlist 114
 - Making a Song a Ringtone 113
 - Options 113
 - Player 112
 - Playing Music 112
 - Removing Music 114
 - Using Playlists 114
- Music Files**
 - Removing 115
 - Transferring 115
- My Profile** 84
- Namecard**
 - Send Via 80
 - Sending 80
 - Sending All 81
- Navigating**
 - Application Menus 30
 - Sub-Menus 30

N

- Through Screens 28
- Network connection**
 - Adding a new 155
- Network Mode**
 - 2G Network 167, 168
 - 3G Network 168
- New applications**
 - Downloading 127
- News & Weather** 135
- Non-Market Applications** 128
- Notification Bar** 23
 - Using 23
- Notification Volume**
 - Setting 172

O

- On/Off Switch** 13
- Operating Environment** 202
- Organizer**
 - Calculator 119
 - World Clock 161
- Other Downloads** 121
- Other Important Safety Information** 206
- Outgoing Call Vibration** 169
- Outlook** 93
 - Synchronizing 182
- Overview**
 - Home Screen 26

P

- Pause Dialing** 52
- People**
 - Video Chat 140

Phone

- Icons 20
- Switching on/off 13

Phone number

- Finding 48

Phone Options 172

Phone Ringtone 172

- Set as 113

Photos

- Options 105, 106
- Sharing 105, 106

Pico TTS 187

Polaris Office 136

Power Control 12

Power Saving Mode 174

- Activate 174
- Additional Parameters 175
- Setting Launch Levels 174

Power Savings 12

Predictive Text

- Using XT9 70

Predictive text

- Using XT9 70

Primary Shortcuts 27

- Adding and Deleting 40

Proximity Sensor

- Activation 169

Q

Quick Dialing 48

R

Recently-used Applications

- Accessing 31

Redialing the last number 53

Reducing Exposure

- Hands-Free Kits and Other Accessories 192

Reject Call

- Rejection Messages 169

Reject Calls

- Managing 51

Reject List 61, 169

Rejection List

- Assigning Multiple Numbers 51
- Assigning Single Numbers 51

Rejection Messages 169

Reset 183

- Device 19

Responsible Listening 201

Restore 182

Restricting Children's Access to Your Mobile device 205

Ringtone

- Phone 172

S

Samsung Keyboard

- Settings 185
- XT9 Advanced Settings 186

Samsung Keypad 67

- ABC Mode 69
- Changing the Input Type 68
- Enabling 67
- Entering Symbols 69
- Symbol/Numeric Mode 69

Samsung Products and Recycling 197

SAR Certification Information 194

Save a Number

- From Keypad 74

Screen

- Home 26
- Navigation 28

Screen Lock

- Changing 176
- Set Up 176

Screen Rotation

- Auto-Rotate 174

Screen Timeout 174

Screens

- Adding and Deleting 40
- Customizing 39
- Rearranging 46

SD card

- Connecting to 46
- Mounting the 46
- Unmounting 46

Search Engine 149

Select Language 184

Sending a Namecard 80

Set as

- Contact icon 106
- Home Screen Wallpaper 106
- Lock Screen Wallpaper 106

Setting an alarm 160

Setting up

- Voicemail 15

Settings 163

- Browser 148
- Contact list 85
- Display 20
- Enabling the GPS Satellites 175
- Enabling the sensor aiding 175

Enabling wireless network locations 175

Messaging 91

Mini Diary 130

Setup

- Initial 12

Shortcuts

- Adding from Application Screen 41
- Adding from Home Screen 42
- Deleting from a Screen 42
- Managing 41
- Primary 27

SIM Card

- Changing Existing PIN 177
- Importing and Exporting 84
- Insertion 7
- Lock 177
- Removal 7

SIM Card Lock

- Setting Up 177

Smart Practices While Driving 195

Snooze 161

SNS 83

SNS Friends

- Viewing 77

Social Network

- Adding Facebook Contacts 83
- Resync 84

Social Networking

- Adding Contacts From 83

Song

- Set as 113

Speakerphone

- Turning on and off 57

Speed Dial

- Changing an entry 53
- Making a call 54
- Removing an entry 54
- Setting up entries 53

Standard Limited Warranty 207

Status Bar 20

Sub-Menus

- Navigation 30

Switching to a Bluetooth

- During a call 57

SWYPE

- 123ABC Mode 66

Swype

- Advanced Settings 64, 185
- Entering Text 64
- Help 185
- Settings 64, 184
- Tutorial 185

System Volume

- Setting 172

T

Task 138

Tethering 156, 165

- Activating 156
- Active Icon 156
- Disconnecting 156

Text Input

- Methods 63

Text Input Method

- Selecting 63

Text Templates 92

- Create Your Own 92

Text-to-speech

- Configuration 187

Third-Party Applications 179

- Uninstalling 129

Time Management

- Calendar 159

T-Mobile Contacts Backup 73

T-Mobile Mail 137

Tools

- Camera 102

Transferring Music Files 115

Twitter

- Video Chat 140

U

UL Certified Travel Charger 198

Understanding Your Phone 17

- Back View 19
- Display 19
- Features 17
- Front View 18
- Home 26

Uninstalling

- Third-party applications 129

Unknown Sources 128

Unmounting

- SD card 46

Usage

- Battery 180
- Memory 180

USB Connections

- As mass storage device 152

USB Settings

- As mass storage device 152

Use GPS Satellites 125, 175
Use Packet Data 167
Use Sensor Aiding 125, 175
Use Wireless Networks 125, 175

Using Favorites

Adding Favorites 146
Deleting a Favorite 147
Editing Favorites 147

V

Vibration 172

Setup 172

Video Chat 140

Recording Video 140
Settings 140

Video Conference 101

Videos

Options 105

Voice Actions 26

Voice Input Recognition 187

Voice mail

Accessing 15
Accessing from another phone 15
Setting up 15

Voice Output

Configuring 187

Voicemail 171

Volume Settings

Adjusting 172

VPN

Adding 166
Settings 166

W

Wait 52

Wait dialing 52

Wallpapers

Changing 44
Managing 44

Warranty Information 207

WCDMA 167

Web 144

History 147

Web applications

enable downloading 152

Widget

Power Savings 12

Widgets

Adding and Removing 42
Google Talk 37
Mini Diary 36
Moving to a Different Screen 43
My Account 36
Settings 37, 136
Stopwatch 162

Wi-Fi

About 154
Activating 54, 154, 163
Advanced settings 156
Connecting to 155
Deactivating 155
Manually Adding Network 164
Manually scan for network 155
Settings 163
Status icons 156
WPS Button 164

Wi-Fi Hotspot 157

Activating 157

Connecting 157

Securing 158

World Clock

DST Settings 161

WPA2 PSK 158

Y

Yahoo! 149

YouTube

High Quality 116

Settings 142

Video Chat 140

Z

Zinio Reader 143