 



- | | |
|--------------------|------------------|
| 1. AUDIO IN | 2. DC ADAPTOR IN |
| 3. ROD ANT. | 4. POWER ON/OFF |
| 5. TUNE DOWN | 6. TUNE UP |
| 7. AUDIO LEVEL ADJ | 8. BATTERY |

CRANE **SANGLAN**
FM STEREO TRANSMITTER
 Frequency Range: 88.3 - 107.7 MHz
 Power: 3V - 6V DC 100mA OR 2X AA
 Caution: Follow the instructions to change the frequency
 PRODUCT COMPLIES WITH PART 15 OF THE FCC RULES.
 OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
 (1) THIS DEVICE MUST NOT CAUSE HARMFUL INTERFERENCE, AND
 (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
 INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE
 OPERATION. 888-828-8888 crane.com



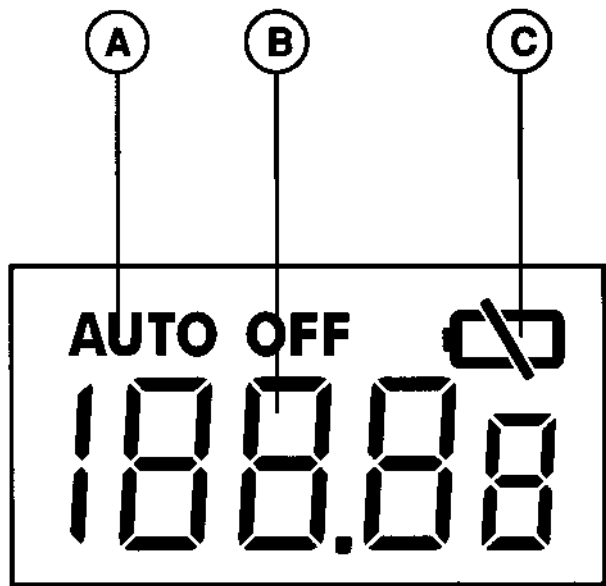

- A. AUTO POWER OFF
- B. FREQUENCY DISPLAY
- C. LOW BATTERY INDICATOR

OPERATION

Tuning:

1. Press the POWER button to turn on the TRANSMITTER.
2. A single press of the Up or Down tuning button will change the frequency up or down.



Specifications

Type: FM-Stereo TRANSMITTER

Output Power: 250 μ V MAX

Batteries: 3 volt(AAA/UM-4 size)X2

Dimension (W x H x D): 82x90x33mm

Weight: 128g

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.