


**26" TFT LCD DIGITAL TV WITH DVD PLAYER**

**HDLCDVD260A**

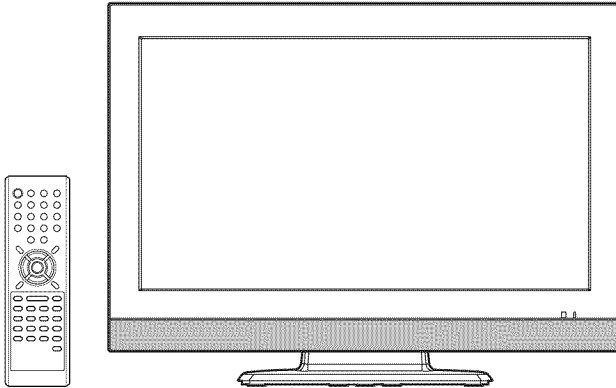

**ATTENTION**

If you purchase a universal remote control from your local retailer, please contact the remote manufacturer for the required programming code.

**TV/CABLE MODE SELECTION**

When shipped from the factory, the Tuning Band option is set to the "Cable" (Cable Television) mode. If not using CABLE, set this option to the "Air" position.

IF CONTACT WITH CUSTOMER SERVICE IS REQUIRED  
PLEASE HAVE THE MODEL NUMBER READY PRIOR TO THE CALL

**CUSTOMER SERVICE – 1-800-289-0980**

**ORION WEBSITE**

FOR INFORMATION ON OUR OTHER PRODUCTS, PLEASE VISIT OUR WEBSITE AT

**[www.orionsalesinc.com](http://www.orionsalesinc.com)**

Before operating the unit, please read this manual thoroughly.

|  |   |   |
|--|---|---|
|    | <b>CAUTION</b><br><b>RISK OF ELECTRIC SHOCK</b><br><b>DO NOT OPEN</b> |  |
| <b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. |   |   |



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

|  |
|--|
| <b>WARNING:</b> TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.   |
| <b>CAUTION:</b> TO PREVENT ELECTRIC SHOCK DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. |

**WARNING:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

|   |
|---|
| <p><b>CAUTION:</b><br/>THIS DIGITAL VIDEO PLAYER EMPLOYS A LASER SYSTEM. TO ENSURE PROPER USE OF THIS PRODUCT, PLEASE READ THIS OWNER'S MANUAL CAREFULLY AND RETAIN FOR FUTURE REFERENCE. SHOULD THE UNIT REQUIRE MAINTENANCE, CONTACT AN AUTHORIZED SERVICE LOCATION-SEE SERVICE PROCEDURE.</p> <p>USE OF CONTROLS, ADJUSTMENTS OR THE PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.</p> <p>TO PREVENT DIRECT EXPOSURE TO THE LASER BEAM, DO NOT TRY TO OPEN THE ENCLOSURE. RADIATION MAY BE PRESENT WHEN THE ENCLOSURE IS OPENED. DO NOT STARE INTO THE BEAM.</p> |
|---|

**Location of the required Marking**

The rating sheet and the safety caution are on the rear of the unit.

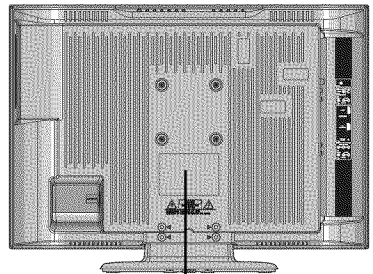

CERTIFICATION: COMPLIES WITH FDA RADIATION PERFORMANCE STANDARDS, 21 CFR SUBCHAPTER J.

|  |
|--|
| <p><b>The lamp(s) within this product contain mercury. Disposal should be in compliance with local, state or federal laws.</b></p> |
|--|

# IMPORTANT SAFETY INSTRUCTIONS

---

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a clean dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician to replace the obsolete receptacle.
- 10) Protect the power cord from being walked on or pinched particularly at plug, and the point where it exits from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damage, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus.
- 16) An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.
- 17) Do not overload wall outlets and extension cords, as this can result in a risk of fire or electric shock.
- 18) Do not push objects through any openings in this unit, as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid into the unit.
- 19) If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.


PORTABLE CART WARNING  
(symbol provided by RETAC)



S3126A

# IMPORTANT SAFETY INSTRUCTIONS (continued)

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

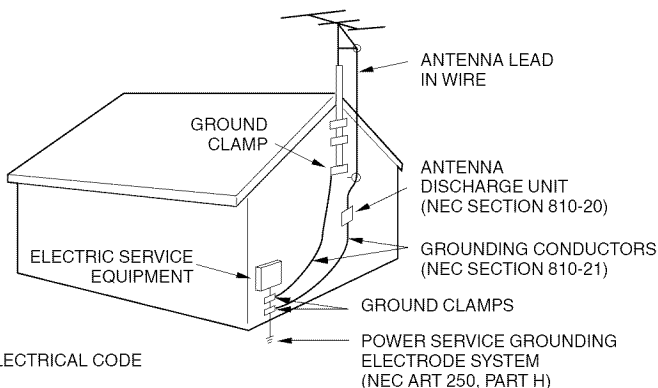

- 20) When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 21) Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
- 22) Keep your fingers clear of the disc slot as it is closing. It may cause injury.
- 23) When you connect the product to other equipment, turn off the power and unplug all of the equipment from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.
- 24) Reduce the volume to the minimum level before you turn on the product. Otherwise, sudden high volume sound may cause hearing or speaker damage.
- 25) Do not allow the product to output distorted sound for an extended period of time. It may cause speaker overheating and fire.
- 26) When you use the headphones, keep the volume at a moderate level. If you use the headphones continuously with high volume sound, it may cause hearing damage.
- 27) Do not look into the opening of the disc slot or ventilation opening of the product to see the source of the laser beam. It may cause eye damage.
- 28) Do not use a cracked, deformed, or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.
- 29) This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## CONDENSATION

Moisture will form in the operating section of the player if the player is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, player's performance will be impaired. To prevent this, let the player stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the player is exposed to the breeze from an air conditioner. In such cases, change the location of the player.

## HOW TO HANDLE THE LCD PANEL


- Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.
  - If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.



# SAFETY PRECAUTIONS

---

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 10 cm (4 inches) free space around the entire unit.

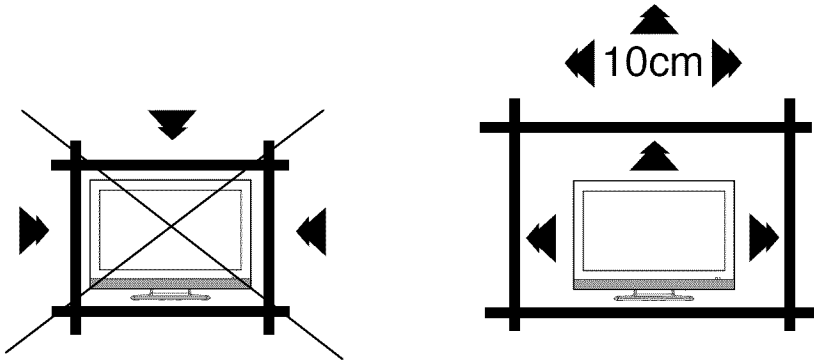

## Notes when mounting the LCD TV/DVD on a wall

- When installing the unit on a wall, allow at least 6 cm (2 1/2 inches) clearance between the rear of the LCD TV/DVD and the wall. Clearance of less than 6 cm (2 1/2 inches) will obstruct the vents and may cause the interior of the unit to overheat, resulting in damage to the unit.
- If the unit is to be mounted on the wall, contact the retailer where you purchased the LCD TV/DVD for advice, and have the equipment professionally installed. Incomplete or improper installation may cause injury to you, and/or damage to the LCD TV/DVD.

# IMPORTANT NOTICE

---

**Possible Adverse Effects on LCD Panel:** If a fixed (non-moving) pattern remains on the LCD Panel for long periods of time, the image can become permanently engrained in the LCD Panel and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your LCD Panel on for long periods of time while it is displaying the following formats or images:

- Fixed Images, such as stock tickers, video game patterns, TV station logos, and websites.
- Special Formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a widescreen (16:9) display (black bars on left and right sides of screen).

**The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.**

- LCD Panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
- Do not install the LCD Panel near electronic equipment that is susceptible to electromagnetic waves. Some equipment placed too near this unit may cause interference.
- Effect on infrared devices – There may be interference while using infrared devices such as infrared cordless headphones.

# Features

---

## LCD color TV With DVD/CD player

Unique space saving design combines a 26" LCD color TV and a DVD/CD player.

A DVD disc has much more capacity, but is the same size as an audio CD disc. The Picture/Audio quality of a DVD exceeds other software. The picture quality is higher than Super VHS video cassettes. The audio quality is higher than an audio CD. The DVD also has special options; audio language selection, subtitle language selection, or multi-angle, etc.

The DVD PLAYER can play back both audio CDs and MP3/WMA/JPEG CDs.

## Compatible with a wide range of DVD audio outputs

### Digital Audio Jack (Coaxial)

- When a component with a built-in Dolby Digital decoder is connected, Dolby Digital sound can produce the effect of being in a movie theater or a concert hall.
- Surround standard is different from Dolby Digital. This format is already in use in many theaters. By connecting this unit to a DTS decoder or an AV amplifier with a built-in DTS decoder, the DTS audio of DVD discs recorded in this format can be enjoyed. However, audio will not be output from the analog audio output jacks.
- By connecting this unit to an AV amplifier with a built-in MPEG decoder, the MPEG audio of DVD discs recorded in this format can be enjoyed.
- The Linear PCM sound of a 48 kHz/24 bit through 96 kHz/24 bit exceeds audio CD sound.

## Convenience Features

**Direct selection of your desired scenes using Title/Chapter/Time/Track** - You can play back from the desired scene.

**Recalling Up to 3 Scenes (DVD only)** - You can program up to 3 scenes in memory and recall the marked scenes.

**Frame Advance** - The **PAUSE/STILL** moves one frame at a time.

**Slow Motion** - The **SLOW** moves you back and forth through the program by 4 steps of 1/7-1/2 times.

**Repeat Playback** - You can repeat chapter, track, title, sides or material between two selected points.

**Program Playback (Audio CD/MP3/WMA CD)** - You can play back tracks in programmed sequences.

**Zoom (DVD only)** - You can zoom in the selected subject on the screen during playback.

**Note:** Make sure that discs are suitable for the following functions.

**Multi-Language** - Maximum 32 language subtitles and maximum 8 language soundtracks can be played back for movies or programs.

**Multi-Angle** - Pictures of Sports or a Live Concert are recorded with many cameras. When you play such a disc, you can change the angles during playback.

**Parental Control** - You can limit the play back of scenes or sounds of DVD discs that have a rating level encoded on the disc.

**Video Aspect Ratio** - You can change the aspect ratio of the screen for your monitor.

## TV Features

**Integrated Digital Tuner** - You can view digital broadcasts without using a Digital TV Set-Top Box.

**Closed Caption Decoder With Full Text Mode** - Displays text captions or full screen text on the screen for hearing impaired viewers.

**Picture Adjustments Using The Remote Control** - The On-Screen display allows precise remote control adjustment of BRIGHTNESS, CONTRAST, COLOR, TINT and SHARPNESS.

**Programmable TV Sleep Timer** - Operable from the remote control, the TV can be programmed for up to 120 minutes to turn off automatically.

**On-Screen 3 Language Display** - You can select one of 3 languages, English, Spanish or French for on-screen programming.

**V-Chip** - The V-Chip function can read the rating of a TV program or movie content if the program is encoded with this information. V-chip will allow you to set a restriction level.

\* This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

\* **DVD** is a trademark of DVD Format/Logo Licensing Corporation.

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

\* "DTS" and "DTS Digital Out" are registered trademarks of DTS, Inc.

## Before using your unit

|                                     |    |
|-------------------------------------|----|
| IMPORTANT SAFETY INSTRUCTIONS ..... | 3  |
| SAFETY PRECAUTIONS .....            | 5  |
| IMPORTANT NOTICE .....              | 5  |
| Features .....                      | 6  |
| Contents .....                      | 7  |
| Disc .....                          | 8  |
| Location of controls .....          | 9  |
| Remote control .....                | 11 |
| Power source .....                  | 12 |
| Antenna connections .....           | 13 |
| Cable TV connections .....          | 14 |

## TV operation

|  |    |
|--|----|
| Setting the language .....                                       | 15 |
| Memorizing channels .....  | 16 |
| TV operation .....   | 19 |
| Labeling channels .....  | 22 |
| Setting the V-Chip .....   | 23 |
| Closed Caption .....   | 27 |
| CC advanced .....  | 28 |
| Setting the picture size .....                                   | 29 |
| Adjusting the picture preference .....                           | 31 |
| Picture control adjustment .....                                 | 31 |
| DNR .....  | 32 |
| Selecting the color temperature .....                            | 32 |
| Setting the 3D Y/C .....   | 33 |
| Selecting Stereo/Second Audio Program<br>(SAP) .....             | 34 |
| Sound control adjustment .....                                   | 34 |
| Selecting the audio language .....                               | 35 |
| Selecting the digital output .....                               | 35 |
| Checking the Digital-signal strength .....                       | 36 |
| Resetting your settings .....                                    | 36 |
| Picture control adjustment in the Component<br>and PC mode ..... | 37 |

## Playback operation

|  |    |
|--|----|
| Preparation .....                        | 38 |
| Status display of disc .....             | 38 |
| Playback procedure .....                 | 39 |
| Special playback .....                   | 40 |
| MP3/WMA/JPEG and Audio CD playback ..... | 41 |
| Setting the JPEG interval .....          | 43 |

## Advanced function



|                                    |    |
|------------------------------------|----|
| Program playback (CD) .....        | 44 |
| Repeat playback (CD) .....         | 45 |
| Random playback (CD) .....         | 45 |
| Zooming .....                      | 46 |
| Locating desired scene .....       | 46 |
| Repeat playback .....              | 47 |
| Marking desired scenes .....       | 48 |
| Changing soundtrack language ..... | 49 |
| Subtitles .....                    | 49 |
| Changing angles .....              | 50 |
| Title selection .....              | 50 |
| DVD menu .....                     | 50 |

## Additional information

|  |    |
|--|----|
| Setting the language .....                               | 51 |
| Setting the aspect ratio of TV screen .....              | 52 |
| Setting on screen display .....                          | 52 |
| Setting the picture mode .....                           | 53 |
| Night Mode .....   | 54 |
| Digital Out .....  | 54 |
| Parental control setting .....                           | 55 |
| Setting the new password .....                           | 56 |
| Temporary disabling of rating level by<br>DVD disc ..... | 57 |
| Language code list .....                                 | 58 |
| Connections to other equipment .....                     | 59 |
| Reception disturbances .....                             | 62 |
| Problems and troubleshooting .....                       | 63 |
| Specifications .....                                     | 65 |
| limited WARRANTY .....                                   | 66 |

# Disc

## Playable discs

| Disc type and logo mark   | content                                  |
|---|--|
|    | Audio<br>+<br>Video<br>(moving pictures) |
|    | Audio                                    |
| The following discs are also available. <ul style="list-style-type: none"> <li>DVD-R/RW discs of DVD video format.</li> <li>CD-R/RW discs of MP3/WMA/JPEG.</li> </ul> |  |

### CAUTION:

- Only the left types of discs can be played on this unit. DVD-ROM, CD-ROM, SVCD, CVD, VCD, etc. cannot be played.
- 8cm discs can be played directly. If an 8cm disc adapter is used it will cause errors.
- If you insert an irregular shaped disc, it may get stuck and cause a malfunction.
- The use of a ring protector or other disc accessories will cause errors.
- This unit is to be used exclusively with the NTSC color system. PAL and SECAM system discs cannot be used with this unit.
- Some CD-R/RWs and DVD-R/RW can not be played back depending on the recording conditions.


## Region Number

Region number (Regional restriction code) is built-in to the unit and DVD video discs. Region number "1" or "ALL" of DVD video discs can be used on this unit.



## Title

When two or more movies are recorded on a disc, the disc is divided into two or more sections. Each section is called a "TITLE".

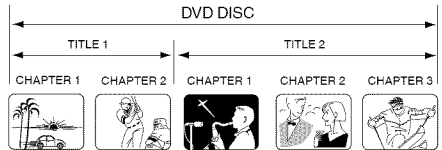

## Chapter

The titles can be subdivided into many sections. Each section is called a "CHAPTER".

## Track

An Audio CD can contain several items. These are assigned to the tracks.



## Removing Disc from Case

Be sure to hold the edge of disc. Do not touch the surface of the disc. Pick up the disc gently from the case.


- Do not scratch the disc.
- Do not get dirt on the surface of the disc.
- Do not stick a label or adhesive tape on the disc.
- Do not drop or bend the disc.

## Storing Disc

- Store the disc in the case to avoid risk of scratches, dirt or damage.
- Do not leave disc exposed to direct sunlight or in hot or humid places.


## Cleaning Disc

- Wipe the disc with a clean, dry cloth from center to edge.
- Do not wipe the disc in a circular motion.
- Do not use liquid or aerosol cleaners.

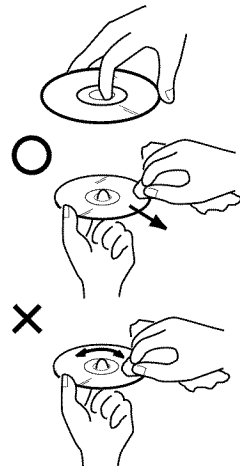


# Location of controls

Top

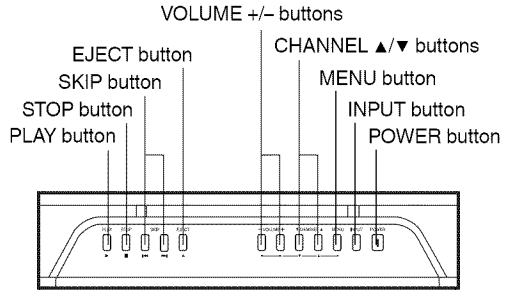


Front

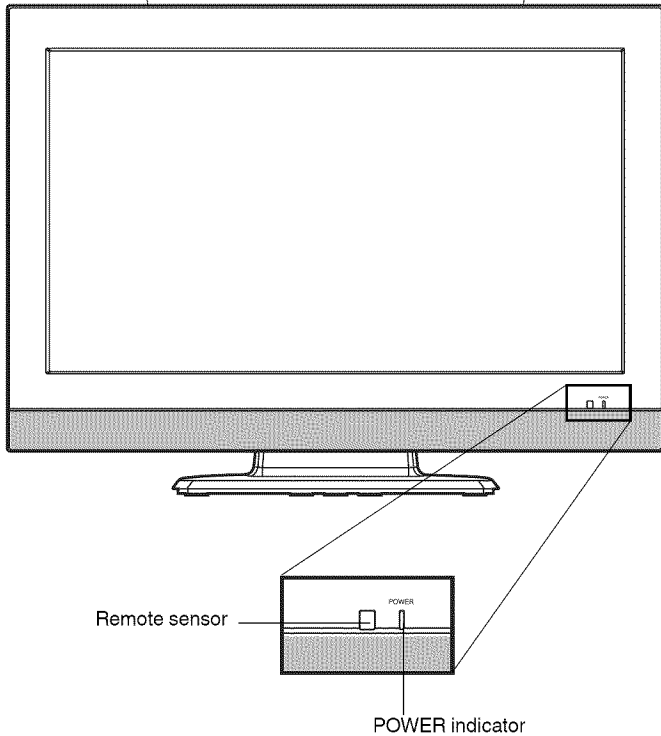


To display the menu screen.  
Press MENU button to display the menu screen.  
CHANNEL ▲/▼ buttons and VOLUME +/- buttons can be used to select the desired setting during the menu screen operations.


## Right side

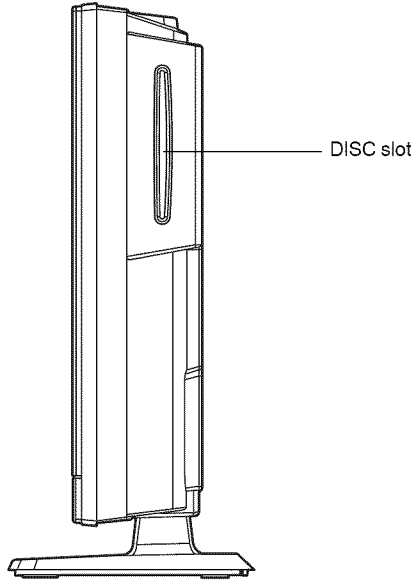

## Left side

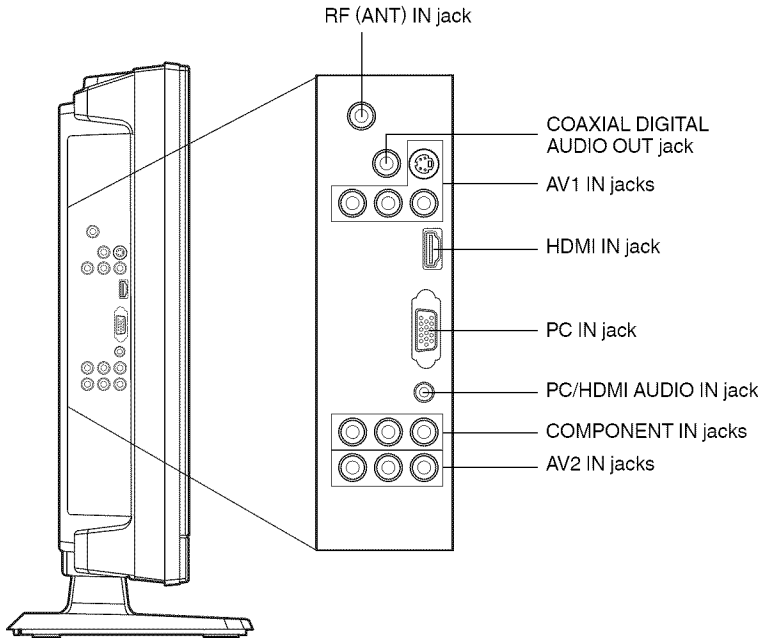


# Remote control

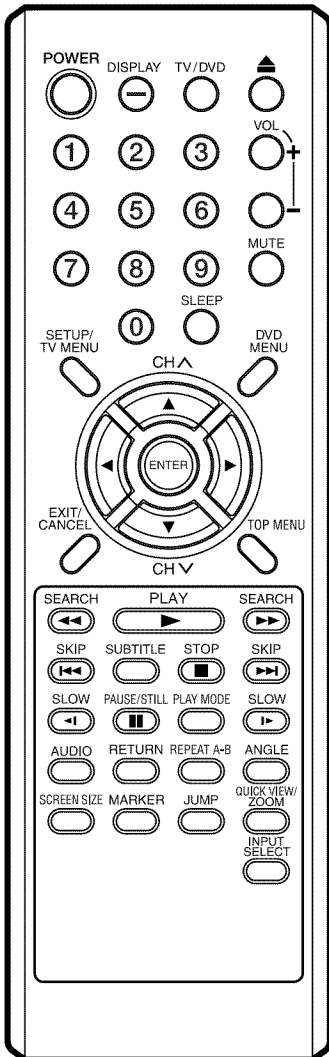

|                  |   | Page                                      |
|------------------|---|---|
| POWER            | Power On/Off  | 15, 19, 38, 39                            |
| DISPLAY/-        | Call TV information<br>Call DVD information<br>Input "-" for digital channels | 20, 22, 34<br>38<br>19                    |
| TV/DVD           | Switch between TV/AV and DVD  | 15, 19, 38, 39                            |
| ▲ (EJECT)        | Eject a disc  | 39  |
| 0-9              | Direct channel selection of TV<br>Input setting<br>Enter a password           | 19<br>46<br>23~26, 55~57                  |
| VOL +/-          | Adjust volume of TV   | 19, 20                                    |
| MUTE             | Switch off the sound  | 20  |
| SLEEP            | Sleep timer   | 21  |
| SETUP<br>TV MENU | TV mode - Display menu of TV<br>DVD mode - Call up initial setup mode         | 15~18, 21~29, 31~37<br>43, 51~56          |
| DVD MENU         | Display DVD menu  | 50  |
| CH ^/v           | Select channel of TV  | 20  |
| ▲▼▶              | Cursor buttons  | 15~18, 21~29, 31~37, 39, 41~46, 48, 50~56 |
| ENTER            | Enter information in the menu   | 15~19, 21~29, 31~37, 39, 41~48, 50~57     |
| EXIT<br>CANCEL   | Exit from On-Screen menu<br>Reset information in the menu                     | 46, 48, 55, 56                            |
| TOP MENU         | Select title  | 50  |
| SEARCH           | Fast Forward/Review playback  | 40  |
| PLAY             | Playback  | 39~42, 44, 45, 47, 50                     |
| SKIP             | Skip chapter to forward or reverse direction                                  | 40, 45                                    |
| SUBTITLE         | Set subtitle  | 49  |
| STOP             | Stop  | 39, 41, 42                                |
| SLOW             | Forward/Reverse- slow motion  | 40  |
| PAUSE/STILL      | Pause CD sound<br>Still picture of DVD  | 40  |
| PLAY MODE        | Select playback mode  | 47  |
| AUDIO            | Change sound track language   | 49  |
| RETURN           | Remove DVD setup menu   | 43, 51~55, 57                             |
| REPEAT A-B       | Repeat playback between A and B   | 47  |
| ANGLE            | Change playback angle   | 50  |
| SCREEN SIZE      | Display PICTURE SIZE menu   | 29  |
| MARKER           | Index   | 48  |
| JUMP             | Locating desired scene  | 46  |
| QUICK VIEW       | Switch between present/last channel   | 20  |
| ZOOM             | Zoom  | 46  |
| INPUT SELECT     | Display source selection menu   | 20, 37, 61                                |


## Inserting Batteries

 - 1 Open the battery compartment cover in the direction of the arrow.
- 2 Install two "AAA" batteries, paying attention to the polarity diagram in the battery compartment.
- 3 Replace the compartment cover.



### Operation

- Aim the remote control at the remote sensor and press control buttons to operate.
- Operate the remote control within a 30° angle on either side of the remote sensor, up to a distance of approximately 15 feet.

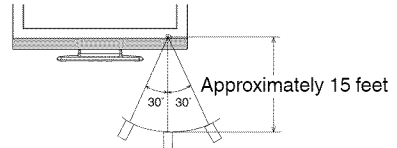


### NOTE:

- Do not leave the remote control unit exposed to direct sunlight or in hot or humid places.
- The remote control unit uses infrared beams to transmit signals, so sunlight or fluorescent light on the remote sensor may shorten operating distance.
- Incorrect use of batteries may cause them to leak or burst. Read the battery warnings and use the batteries properly.
- Do not mix old and new batteries.
- Remove batteries if the remote control will not be operated for an extended period of time.

## Power source

### TO USE AC POWER

1. Connect the AC cord plug into this unit's AC IN jack.
2. Connect the AC cord into an AC outlet.

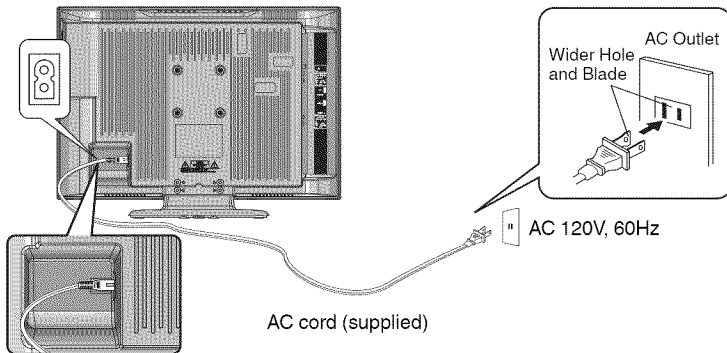

### NOTE:

- Please make sure to insert the cord securely at both the LCD TV/DVD and the wall outlet.
- The AC Cord has a grounding-type AC line plug. If the supplied AC cord does not match your AC outlet, contact a qualified electrician, do not defeat the purpose of a grounding plug.

### WARNING:

- DO NOT CONNECT THIS UNIT TO THE POWER USING ANY DEVICE OTHER THAN THE SUPPLIED AC CORD. THIS COULD CAUSE FIRE, ELECTRICAL SHOCK, OR DAMAGE.
- DO NOT USE WITH A VOLTAGE OTHER THAN THE POWER VOLTAGE DISPLAYED. THIS COULD CAUSE FIRE, ELECTRICAL SHOCK, OR DAMAGE.

### CAUTION:


- WHEN THIS UNIT IS NOT USED FOR A LONG TIME, (E.G., AWAY ON A TRIP) IN THE INTEREST OF SAFETY, BE SURE TO UNPLUG IT FROM THE AC OUTLET.
- DO NOT PLUG/UNPLUG THE PLUG WHEN YOUR HANDS ARE WET. THIS MAY CAUSE ELECTRICAL SHOCK.
- IF YOU NEED TO REPLACE THE SUPPLIED AC ADAPTER OR AC CORD, THE SPECIFIED ONE IS RECOMMENDED. CONTACT CUSTOMER SERVICE AT 1-800-289-0980.



# Antenna connections

If you are using an indoor or outdoor antenna, follow the instructions below that correspond to your antenna system. If you are using a Cable TV service, see page 15 for Cable TV connections.


## Combination VHF/UHF Antenna (Single 75 ohm cable or 300 ohm twin-lead wire)

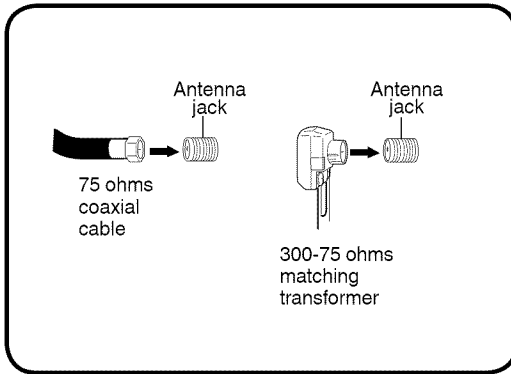

Connect the 75 ohm cable from the combination VHF/UHF antenna to the antenna jack.


If your combination VHF/UHF antenna has a 300 ohm twin-lead wire, the use of the 300-75 ohm matching transformer may be necessary.

## Combination VHF/UHF Antenna (Separate VHF and UHF 300 ohm twin-lead wires)

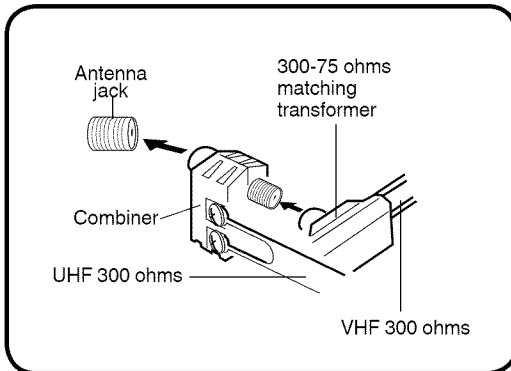

Connect the UHF 300 ohm twin-lead wire to the Combiner (not supplied). Connect the VHF 300 ohm twin-lead wire to the 300-75 ohm Matching Transformer. Attach the Transformer to the Combiner, then attach the Combiner to the Antenna Jack.

## Separate VHF/UHF Antennas (75 ohm VHF cable and 300 ohm UHF twin-lead wires)

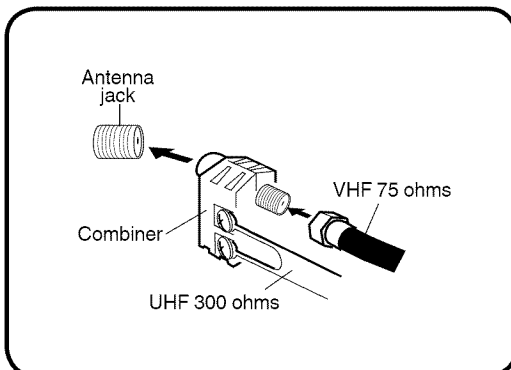


Connect the VHF 75 ohm cable and UHF 300 ohm twin-lead wire to the Combiner (not supplied). Attach the Combiner to the Antenna Jack.

# Cable TV connections

This TV/DVD has an extended tuning range and can tune most cable channels without using a Cable TV Converter box. Some cable companies offer "premium pay channels" where the signal is scrambled. Descrambling these signals for normal viewing requires the use of a descrambler device which is generally provided by the Cable TV company.


## FOR SUBSCRIBERS TO BASIC CABLE TV SERVICE

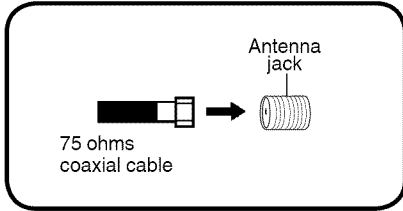

For basic Cable TV service not requiring a Converter/Descrambler box, connect the 75 ohm Coaxial Cable directly to the Antenna Jack on the back of the TV/DVD.


## FOR SUBSCRIBERS TO SCRAMBLED CABLE TV SERVICE

If you subscribe to a Cable TV service which requires the use of a Converter/Descrambler box, connect the incoming 75 ohm Coaxial Cable to the Converter/Descrambler box. Using another 75 ohm Coaxial Cable, connect the output jack of the Converter/Descrambler box to the Antenna Jack on the TV/DVD. Follow the connections shown below. Set the TV/DVD to the output channel of the Converter/Descrambler box (usually channel 3 or 4) and use the Converter/Descrambler box to select channels.

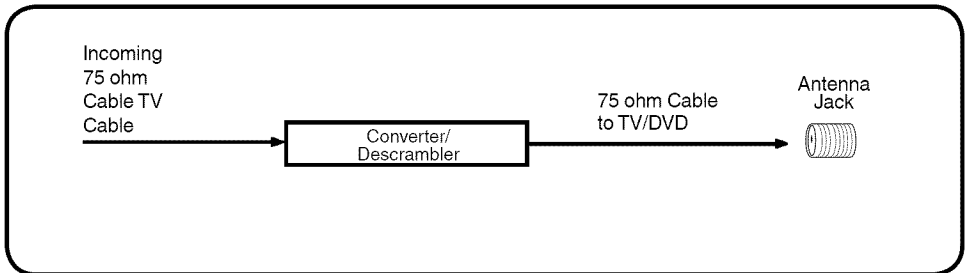


## FOR SUBSCRIBERS TO UNSCRAMBLED BASIC CABLE TV SERVICE WITH SCRAMBLED PREMIUM CHANNELS

If you subscribe to a Cable TV service in which basic channels are unscrambled and premium channels require the use of a Converter/Descrambler box, you may wish to use a signal Splitter and an A/B Switch box (available from the Cable TV company or an electronics supply store). Follow the connections shown below. With the switch in the "B" position, you can directly tune any unscrambled channels on your TV/DVD. With the switch in the "A" position, tune your TV/DVD to the output of the Converter/Descrambler box (usually channel 3 or 4) and use the Converter/Descrambler box to tune scrambled channels.

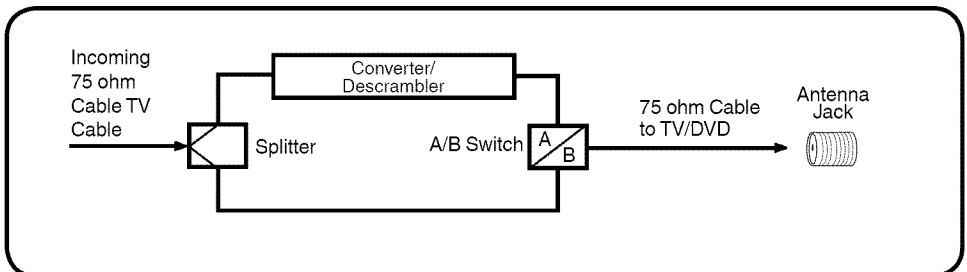


# Setting the language


You can choose from three different languages (English, French and Spanish) for the on-screen displays. Select the language you prefer first, then proceed with the other menu options.

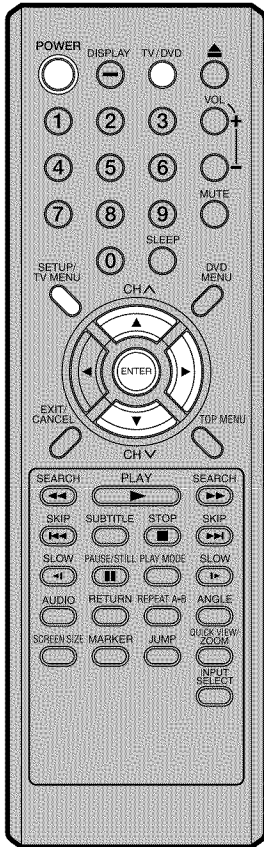

- 1 To turn on the TV, press **POWER**. (POWER indicator on the front of the unit blinks while starting. It may take approx. 15 seconds for a picture to appear on screen.)
- 2 Press **TV/DVD** to select TV mode.
- 3 Press **SETUP/TV MENU**. The menu screen will appear.
- 4 Press **▲** or **▼** to select "Setup" menu, then press **▶**.

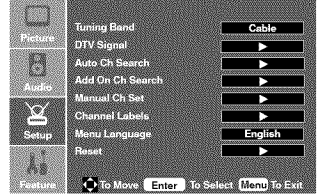

- 5 Press **▲** or **▼** to select "Menu Language".
- 6 Press **▶** or **ENTER** to select the desired language: English (ENGLISH), French (FRANÇAIS) or Spanish (ESPAÑOL).
- 7 Press **SETUP/TV MENU** to return to the normal screen.

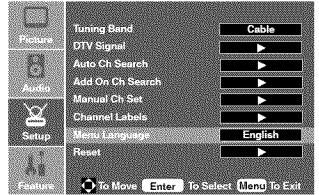


## NOTE:

- If no buttons are pressed for more than about 30 seconds, the MENU screen will return to normal operation automatically.
- On this TV, there are setting menus for each external input. You can change the settings to fit your needs. (Some settings are commoditized. I.e., Audio settings, Parental control, NTSC CC, ATSC CC and Digital Closed Caption settings are applied to all external inputs.)

# Memorizing channels


This TV is equipped with a channel memory feature which allows channels to skip up or down to the next channel set into memory, skipping over unwanted channels. Before selecting channels, they must be programmed into the TV's memory. To use this TV with an antenna, set the Tuning Band menu option to the Air mode. When shipped from the factory, this menu option is in the Cable mode.

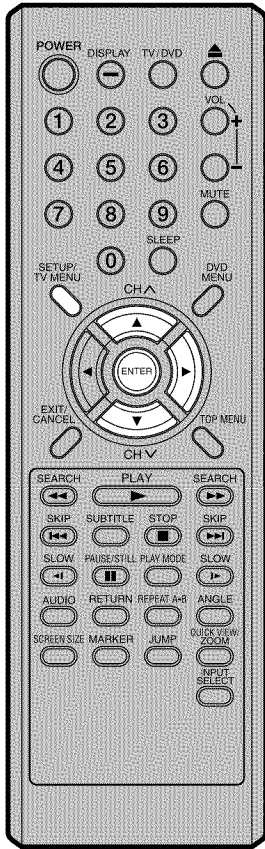


## Air/Cable selection

**1** Press **SETUP/TV MENU** in the TV mode. The menu screen will appear.

**2** Press **▲** or **▼** to select "Setup" menu, then press **▶**.

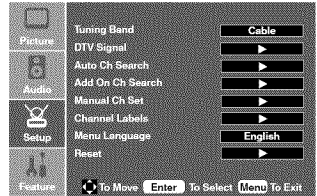


**3** Press **▲** or **▼** to select "Tuning Band".

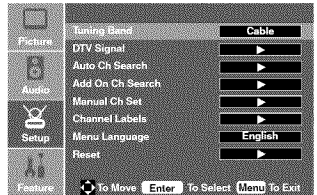

**4** Press **▶** or **ENTER** to select "Air" or "Cable".

**Air** - VHF/UHF channels  
**Cable** - CABLE TV channels

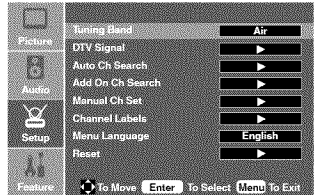

**5** Press **SETUP/TV MENU** to return to the normal screen.

## CABLE CHART

The chart below is typical of many cable system channel allocations.


| Number on this TV | Corresponding CABLE channel | 14  | 15  | 16  | 17  | 18  | 19  | 20  | 21  | 22  |     |     |     |     |     |     |     |     |
|-------------------|-----------------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 23                | 24                          | 25  | 26  | 27  | 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  |     |
| J                 | K                           | L   | M   | N   | O   | P   | Q   | R   | S   | T   | U   | V   | W   | AA  | BB  | CC  | DD  |     |
| 41                | 42                          | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  | 55  | 56  | 57  | 58  |     |
| EE                | FF                          | GG  | HH  | II  | JJ  | KK  | LL  | MM  | NN  | OO  | PP  | QQ  | RR  | SS  | TT  | UU  | VV  |     |
| 59                | 60                          | 61  | 62  | 63  | 64  | 65  | 66  | 67  | 68  | 69  | 70  | 71  | 72  | 73  | 74  | 75  | 76  |     |
| WW                | AA                          | BB  | CC  | DD  | EE  | FF  | GG  | HH  | II  | JJ  | KK  | LLL | MMM | NNN | OOO | PPP | QQQ |     |
| 77                | 78                          | 79  | 80  | 81  | 82  | 83  | 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  | 94  |     |
| RRR               | SSS                         | TTT | UUU | VVV | WWW | XXX | YYY | ZZZ | 96  | 97  | 98  | 99  | 100 | 101 | 102 | 103 | 104 |     |
| 105               | 106                         | 107 | 108 | 109 | 110 | 111 | 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 |     |
| A-5               | A-4                         | A-3 | A-2 | A-1 | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 | 112 |     |
| 123               | 124                         | 125 | 126 | 127 | 128 | 129 | 130 | 131 | 132 | 133 | 134 | 135 | 01  | 131 | 132 | 133 | 134 | 135 |
| 131               | 132                         | 133 | 134 | 135 | 01  | 131 | 132 | 133 | 134 | 135 | 5A  |     |     |     |     |     |     |     |

## NOTE:


- It may take a few seconds for a digital channel picture to appear on screen after being selected.

## Automatic channel search

- 1 Press **SETUP/TV MENU** in the TV mode. The menu screen will appear.
- 2 Press **▲** or **▼** to select "Setup" menu, then press **▶**.  
Press **▲** or **▼** to select "Auto Ch Search".

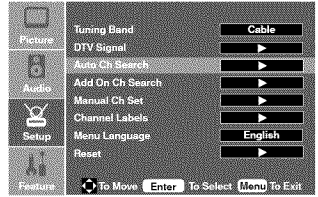

 - 3 Press **▶** or **ENTER**. The TV will begin memorizing all the channels available in your area.




- It may take from 15 minutes to 30 minutes to complete memorizing digital cable channels.
- Depending on the reception condition, a BAR display may not advance for several minutes, please be patient.


## Add on channel search

This feature searches only blank, unregistered channels.


- 1 Press **SETUP/TV MENU** in the TV mode. The menu screen will appear.
- 2 Press **▲** or **▼** to select "Setup" menu, then press **▶**.  
Press **▲** or **▼** to select "Add On Ch Search".

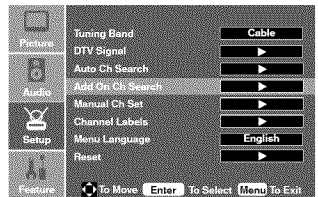

- 3 Press **▶** or **ENTER**. The TV will begin searching only blank, unregistered channels.

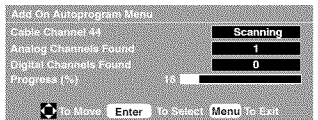


- It may take from 15 minutes to 30 minutes to complete memorizing digital cable channels.
- Depending on the reception condition, a BAR display may not advance for several minutes, please be patient.

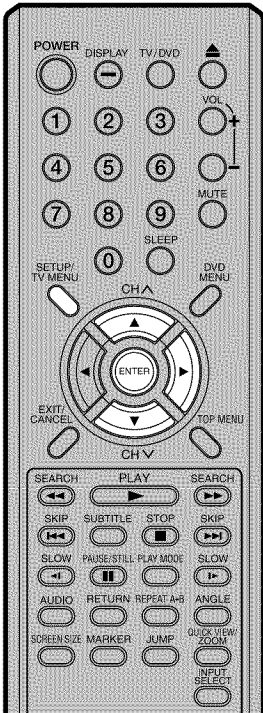

### NOTE:

- Memorizing channels is best accomplished during evening "PRIMETIME" hours, as more stations are broadcasting digital signals. Memorizing channels can only be accomplished while a station is broadcasting a digital signal to set that channel into memory.
- If you are unsure of the digital channels available in your area, you may visit [www.antennaweb.org](http://www.antennaweb.org) to receive a list based on your address or zip code. Should you require further assistance you may call our toll-free customer service line at 1-800-289-0980.
- New digital channels may be added to your area periodically, it is recommended to perform the "Add On Ch Search" procedure regularly.

# Memorizing channels

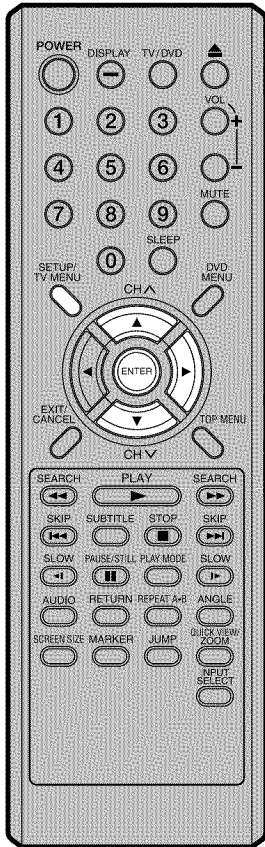


## Manual Ch Set

You can select the channel that you want to skip.


**1** Press **SETUP/TV MENU** in the TV mode. The menu screen will appear.

**2** Press **▲** or **▼** to select "Setup" menu, then press **▶**.


Press **▲** or **▼** to select "Manual Ch Set", then press **▶** or **ENTER**. Manual Ch Set menu will appear.

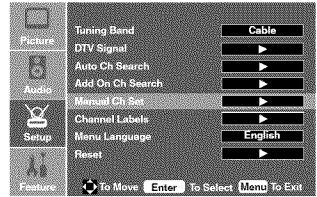

**3** Press **▲** or **▼** to select the channel that you want to skip, then press **ENTER**.

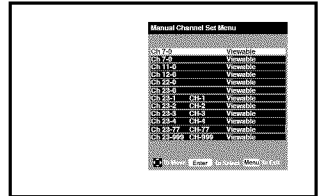


**4** Press **SETUP/TV MENU** to return to the normal screen.

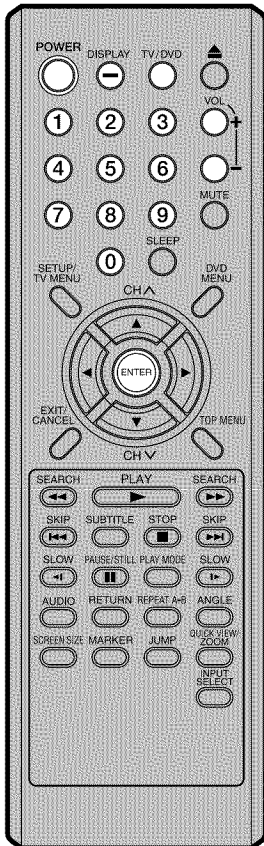

**1** To turn on the TV, press **POWER**.  
(POWER indicator on the front of the unit blinks while starting. It may take approx. 15 seconds for a picture to appear on screen.)  
Press **TV/DVD** to select TV mode.

**2** Adjust the volume level by pressing **VOL +** or **-**.  
The volume level will be indicated on the screen by white bars. As the volume level increases, so do the number of bars. If the volume decreases, the number of white bars also decreases.

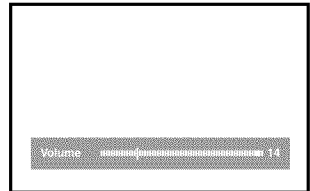

**3** Set the Tuning Band option to the appropriate position (see page 16).



**4** Press the **Direct Channel Selection (0-9, -)** buttons to select the channel, then press **ENTER**. (If you press only channel number, channel selection will be delayed for a few seconds.)



## TO SELECT ANALOG CHANNELS

- 1-9: Press 1-9 as needed. Example, to select channel 2, press **2**.
- 10-99: Press the 2 digits in order. Example, to select channel 12, press **1, 2**.
- 100-135: Press the 3 digits in order. Example, to select channel 120, press **1, 2, 0**.

## TO SELECT DIGITAL CHANNELS

Press the first 3 digits, then press the **-** button, followed by the remaining number.

Example, to select channel 015-001, press **0, 1, 5, -, 1**.

- If a channel is selected with only audio content, "Audio only" will be displayed on the screen.
- If a channel is selected with a weak digital signal, "Digital channel signal strength is low" will be displayed on the screen. If the digital channel has the same analog channel, you may be able to watch the same channel with analog.
- If a channel is selected to which you have not subscribed, "Digital channel is encrypted" will be displayed on the screen.


## VHF/UHF/CABLE CHANNELS

| Air          | Cable  |
|--------------|--|
| VHF<br>2-13  | VHF<br>2-13  |
| UHF<br>14-69 | STD/HRC/IRC<br>14-36 (A) (W)<br>37-59 (AA) (WW)<br>60-85 (AAA) (ZZZ)<br>86-94 (86) (94)<br>95-99 (A-5) (A-1)<br>100-135 (100) (135)<br>01 (5A) |

### NOTE:

- If a channel with no broadcast is selected, the sound will automatically be muted.
- It may take a few seconds for a digital channel picture to appear on screen after being selected.

# TV operation

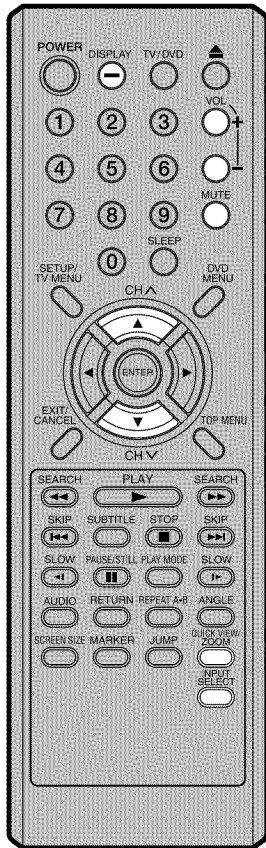

## NOTE:

- The TV is capable of holding a still video image or On screen display image on your TV screen indefinitely. If you leave the still video image or On screen display image displayed on your TV for an extended period of time, you risk permanent damage to your TV screen.
- When the TV receives an analog signal, **DISPLAY** shows only analog information.
- After 4 seconds, **DISPLAY** screen will return to normal TV-operation automatically.

## To select the video input source

Press **INPUT SELECT** to view a signal from another device connected to your LCD TV, such as a VCR or DVD player. You can select ANT, Composite 1, Composite 2, S-Video, Component, HDMI-DVI or PC depending on which input jacks you used to connect your devices.

## CH ^/v

Press and release **CH ^/v**. The channel automatically stops at the next channel set into memory. For proper operation, before selecting channels, they should be set into the memory. See pages 16 and 17 "Memorizing channels".




## DISPLAY

Press **DISPLAY** to display the current information on the screen.


When the TV receives a digital signal, the digital information will appear.

- Channel number
- Broadcast program name
- Station name
- Program guide
- V-CHIP RATING

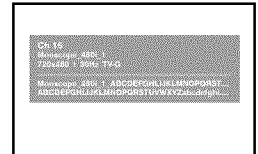

When the TV receives an analog signal, the analog information will appear.


- Channel number or VIDEO mode selected
- Channel label (if preset)
- Stereo or SAP (second audio program) audio status
- Content rating

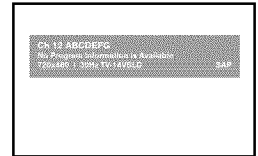

Press **DISPLAY** again to clear the call display.

## QUICK VIEW

This button allows you to go back to the last channel selected by pressing **QUICK VIEW**. Press **QUICK VIEW** again to return to the last channel you were watching.

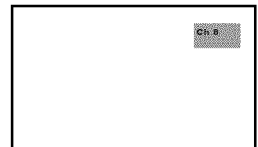

## MUTE

Press **MUTE** to switch off the sound. The TV's sound will be silenced and "Mute" will briefly appear on the screen. The sound can be switched back on by pressing this button again or the **VOL +** or **-**.







## SLEEP

The sleep timer allows you to set a time when the LCD TV automatically switches to standby.


- 1 Press **SETUP/TV MENU** in the TV mode. The menu screen will appear.
- 2 Press **▲** or **▼** to select "Feature" menu, then press **▶**.

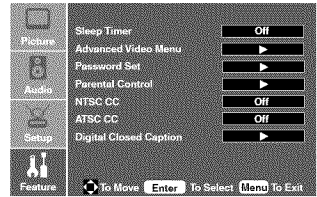


- 3 Press **▲** or **▼** to select "Sleep Timer".

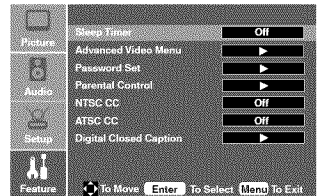

- 4 Press **▶** or **ENTER** repeatedly to select the desired sleep time (Off, 15 min, 30 min, 45 min, 60 min, 90 min, 120 min, 180 min or 240 min).

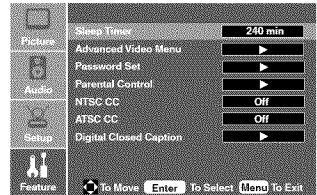

- 5 Press **SETUP/TV MENU** to return to the normal screen.

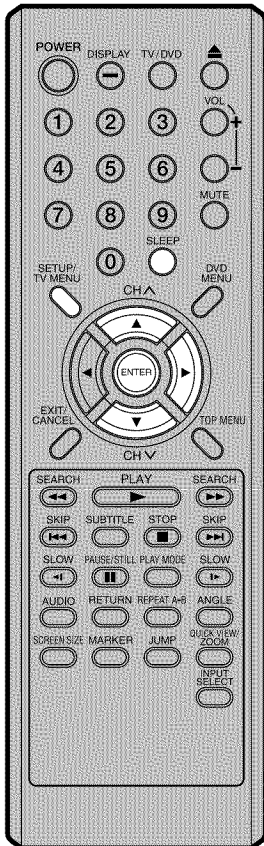


### NOTE:

- You can also set the sleep timer by pressing **SLEEP** on the remote control.
- After the sleep time is programmed, the display will appear briefly 10 minutes and 5 minutes, 1 minute before to remind you that the sleep timer is operating.
- To confirm the sleep timer setting, press **SLEEP** and the remaining time will be displayed for a few seconds.
- To cancel the sleep timer, press **▶** or **ENTER** repeatedly to select "Off" in step 4.

# Labeling channels


Channel labels appear over the channel number display each time you turn on the TV, select a channel, or press DISPLAY.

You can choose any seven characters to identify a channel.

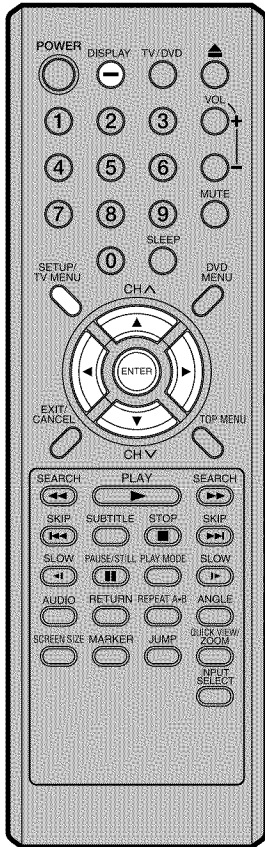


## To create channel labels


- 1 Press **SETUP/TV MENU** in the TV mode, then press **▲** or **▼** to select "Setup" menu, then press **▶**.
- 2 Press **▲** or **▼** to select "Channel Labels", then press **▶** or **ENTER**. The "Channel Labels" menu will appear.

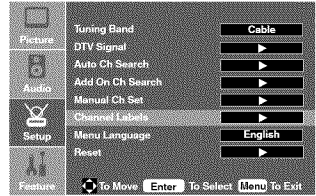

 - 3 Press **▲** or **▼** to select a channel you want to label.
- 4 Press **◀** or **▶** to enter a character in the first space. Press **▲** or **▼** repeatedly until the character you want appears on the screen.



The characters rotation as follows:

 

If the character which you desire appears, press **▶**. Repeat this step to enter the rest of the characters. If you would like a blank space in the label name, you must choose the empty space from the list of characters.


- 5 When you finish inputting the label name, press **SETUP/TV MENU** to return to the normal screen.
- 6 Repeat steps 1-5 for other channel. You can assign a label to each channel.

### NOTE:

- The channel labels will be reset after "Auto Ch Search".


# Setting the V-Chip

An age limitation can be set to restrict children from viewing or hearing violent scenes or pictures that you may choose to exclude. The restriction applies to "TV RATING" and "MPAA" if this data is transmitted. You may set this restriction separately. To use the V-Chip function, you must register a password.

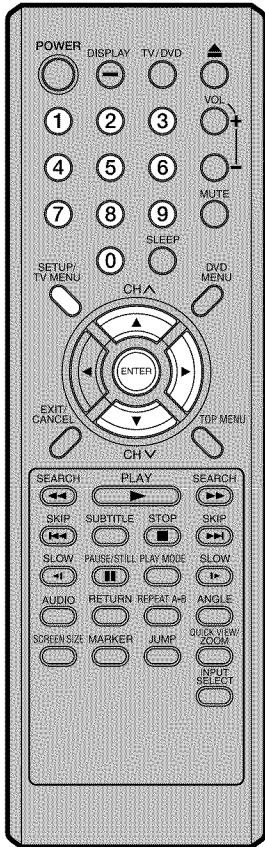


## To register a password


**1** Press **SETUP/TV MENU** in the TV mode. The menu screen will appear. Press **▲** or **▼** to select "Feature" menu, then press **▶**.

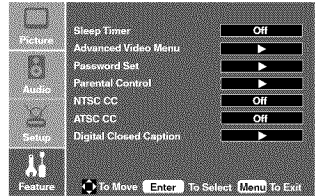

**2** Press **▲** or **▼** to select "Password Set", then press **▶** or **ENTER**.

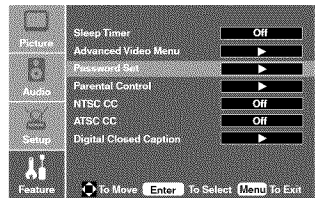

 **3** Use **Number buttons (0-9)** to enter your password (The factory default password is "0000").



**4** Select and enter a password (4 digits) using **Number buttons (0-9)**.




**5** Enter the same password again to confirm. The password is now registered.



## NOTE:

- If you forget the password, contact Customer Service at 1-800-289-0980 for assistance. Your original remote control will be required.
- To avoid forgetting the password, write it down and keep in a safe place.

# Setting the V-Chip

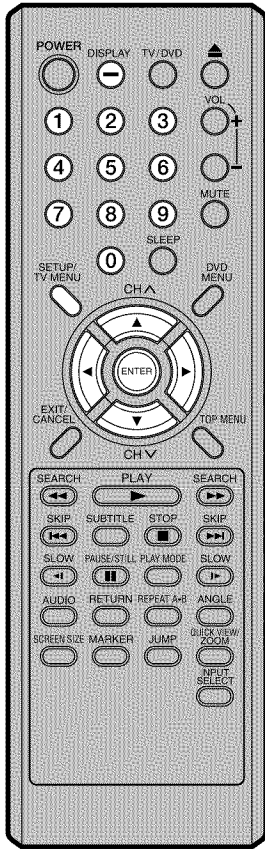

## To use the TV after the TV is protected.

When a program is received that is blocked by the V-Chip, press **DISPLAY** or **SETUP/TV MENU**.




The protection will be temporarily overridden. If the TV is turned off, the V-Chip restriction will be reactivated.

## NOTE:

- The V-Chip function is activated only on programs and input sources that include a rating signal.

## To set the V-Chip

- Press **SETUP/TV MENU** in the TV mode. Press **▲** or **▼** to select "Feature" menu, then press **▶**.
- Press **▲** or **▼** to select "Parental Control", then press **▶** or **ENTER**. Use **Number buttons (0-9)** to enter your password. The Parental Control Menu appears.
- Press **▲** or **▼** to select "US Ratings", then press **▶** or **ENTER**.
- Press **▲/▼/◀/▶** to select the desired rating, then press **ENTER**.

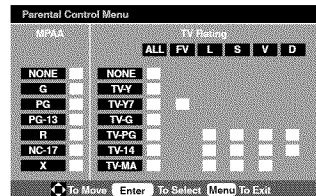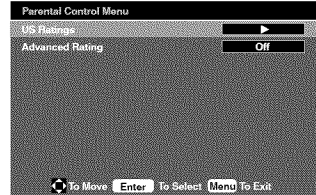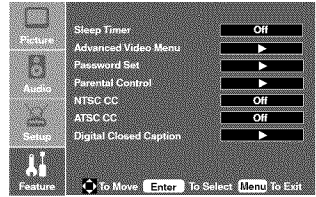

## TV Rating

- NONE:** TV Rating is not set  
**TV-Y:** All children  
**TV-Y7:** 7 years old and above  
**TV-G:** General audience  
**TV-PG:** Parental guidance  
**TV-14:** 14 years old and above  
**TV-MA:** 17 years old and above

- ALL** (All)  
**FV** (Fantasy Violence)  
**L** (Language)  
**S** (Sex)  
**V** (Violence)  
**D** (Dialogue)


## MPAA (Motion Picture Association of America)

- NONE:** MPAA is not set.  
**G:** All ages  
**PG:** Parental guidance  
**PG-13:** Parental guidance less than 13 years old  
**R:** Under 17 years old Parental guidance suggested  
**NC-17:** 17 years old and above  
**X:** Adult only


- Press **SETUP/TV MENU** to return to the normal screen.

## To change the password

- 1 Press **SETUP/TV MENU** in the TV mode. The TV menu screen will appear.
- 2 Press **▲** or **▼** to select "Feature" menu, then press **▶**.

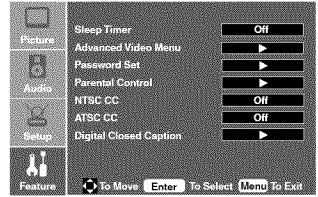


- 3 Press **▲** or **▼** to select "Password Set", then press **▶** or **ENTER**.

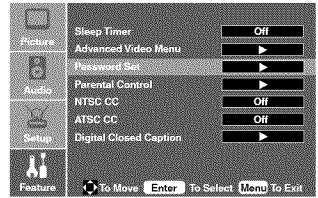


- 4 Use **Number buttons (0-9)** to enter your password.



 - 5 Enter a new password using **Number buttons (0-9)**.



- 6 Enter the same password again to confirm. The password is now registered.

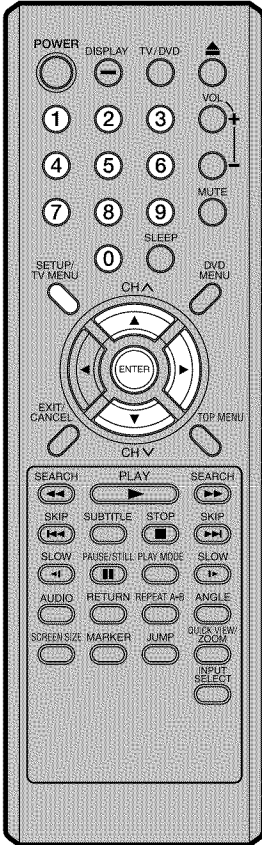


# Setting the V-Chip

## Downloading the additional V-Chip rating system

As a supplement to the standard V-Chip rating system, your television will be able to download an additional rating system, if such a system becomes available in the future.


### To download the additional V-Chip rating system (when available)

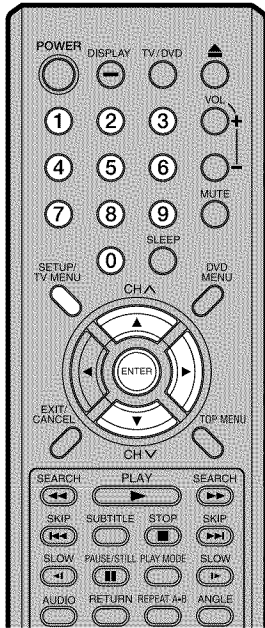

#### NOTE:

- You can only download the additional V-Chip rating system when your TV is receiving a digital signal.
- When you download the additional rating system, it may take some time for the download to occur.
- The V-Chip rating information and system are not determined or controlled by the TV.
- The standard V-Chip rating system is available whether your TV is receiving a digital signal or not, and will block both analog and digital programs. To set the restriction level using the standard V-Chip rating system, select US Ratings in step 3.
- The downloadable V-Chip rating system is an evolving technology, and availability, content, and format may vary.
- You cannot select this feature if the TV is not receiving a digital signal for the current station.


- 1 Press **SETUP/TV MENU** in a digital channel. Press **▲** or **▼** to select "Feature" menu, then press **▶**.

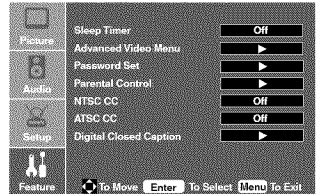


- 2 Press **▲** or **▼** to select "Parental Control", then press **▶** or **ENTER**. Use **Number buttons (0-9)** to enter your password. The Parental Control Menu appears.



- 3 Press **▲** or **▼** to select "Advanced Rating", then press **▶** to select "On". The "Parental Lock (DTV)" option appear.

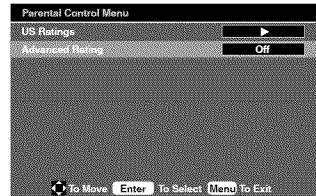

- 4 Press **▲** or **▼** to select "Parental Lock (DTV)", then press **▶** or **ENTER**.

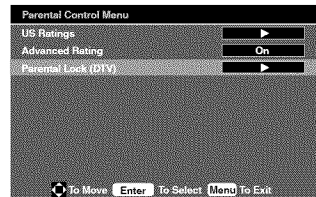


- 5 If the TV is not storing the additional rating system, the TV will begin downloading it, which may take some time to be completed.
- 6 Set your preferred content rating limits for the additional rating system.

## WHAT IS CLOSED CAPTIONING?

This television has the capability to decode and display Closed Captioned television programs. Closed Captioning will display text on the screen for hearing impaired viewers or it will translate and display text in another language.


**Captions:** This Closed Caption Mode will display text on the screen in English or another language. Generally, Closed Captions in English are transmitted on CC1 and Closed Captions in other languages are transmitted on CC2.

**Text:** The Text Closed Caption Mode will usually fill 1/2 of the screen with a programming schedule or other information.

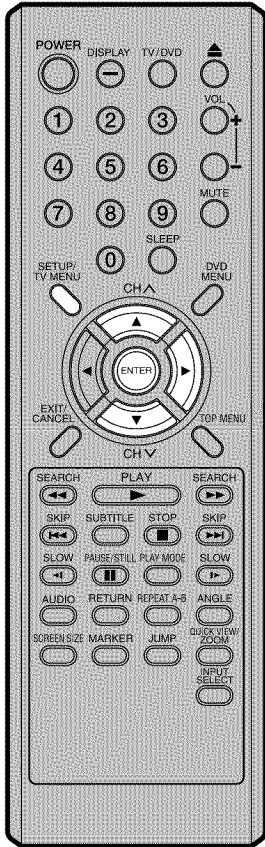

- 1 Press **SETUP/TV MENU** in the TV mode. Press **▲** or **▼** to select "Feature" menu, then press **▶**.
- 2 Press **▲** or **▼** to select "NTSC CC" or "ATSC CC".


When you select "NTSC CC", you can choose CC1, CC2, CC3, CC4, TEXT1, TEXT2, TEXT3, TEXT4 and Off.

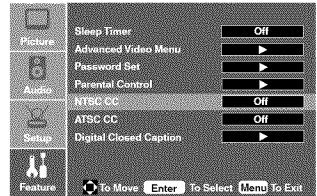

When you select "ATSC CC", you can choose from CS1, CS2, CS3, CS4, CS5, CS6 and Off.

### NOTE:

- Depending on the broadcast signal, some Analog Captions will function with a Digital broadcast signal but Digital Captions will take precedence on the TV/DVD. To disable the Digital Captions, turn the "ATSC CC" off.

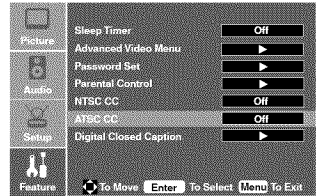


- 3 Press **▶** or **ENTER** to select the desired Closed Caption mode.
- NOTE:**
- To turn the Closed Caption feature off, select "Off".
- 4 Press **SETUP/TV MENU** to return to the normal screen.

### NOTE:

- If the program or video you selected is not closed-captioned, no captions will display on-screen.
- If text is not available in your viewing area, a black rectangle may appear on-screen. If this happens, set the Closed Caption feature to "Off".
- When selecting Closed Captions, the captioning will be delayed approx. 10 seconds.
- If no caption signal is received, no captions will appear, but the television will remain in the Caption Mode.
- Misspellings or unusual characters may occasionally appear during Closed Captioning. This is normal with Closed Captioning, especially with live programs. This is because during live programs, captions are also entered live. These transmissions do not allow time for editing.
- When Captions are being displayed, on-screen displays, such as volume and mute may be seen but may interfere with Closed Captions.
- Some cable systems and copy protection systems may interfere with the Closed Captioned signal.
- If using an indoor antenna or if TV reception is very poor, the Closed Caption Decoder may not appear or may appear with strange characters or misspelled words. In this case, adjust the antenna for better reception or use an outdoor antenna.

# CC advanced

When you have selected Custom as the display method, you can adjust the various setting listed below as follows:

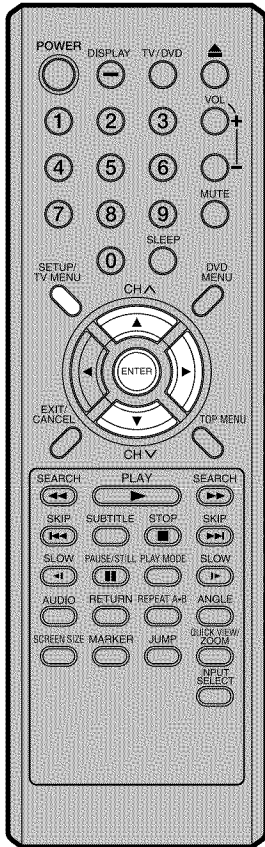


## NOTE:

- Do not set the Closed Caption "Text Color" and "Background Color" as the same color or you will not be able to see the text.
- Do not set both the "Text Opacity" and the "Background Opacity" to "Transparent" or you will not be able to see the text.


This feature is designed to customize Digital Captions only.

**1** Press **SETUP/TV MENU** in the TV mode. The TV menu screen will appear.


**2** Press **▲** or **▼** to select "Feature" menu, then press **▶**.

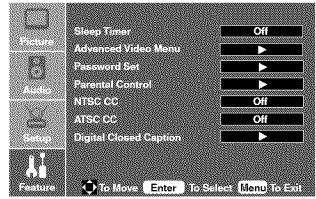


**3** Press **▲** or **▼** to select "Digital Closed Caption", then press **▶** or **ENTER**. The Digital Closed Caption menu will appear.

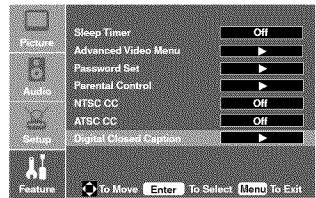

**4** Press **▲** or **▼** to select "Style", then press **▶** or **ENTER** to select "Custom".

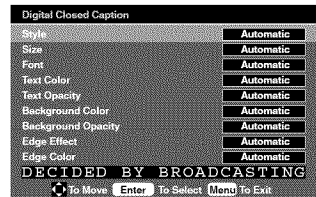

**5** Press **▲** or **▼** to select desired setting, then press **▶** or **ENTER**.

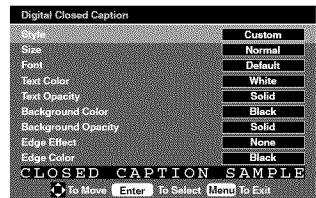

You can select from among the following items and parameters.


- Size:** Small, Normal, Large
- Font:** Default, Font 1, Font 2, Font 3, Font 4, Font 5, Font 6, Font 7,
- Text Color:** Red, Green, Blue, Yellow, Magenta, Cyan, Black, White
- Text Opacity:** Transparent, Translucent, Solid, Flashing
- Background Color:** Red, Green, Blue, Yellow, Magenta, Cyan, Black, White
- Background Opacity:** Transparent, Translucent, Solid, Flashing
- Edge Effect:** None, Raised, Depressed, Uniform, Left Shadow, Right Shadow
- Edge Color:** Red, Green, Blue, Yellow, Magenta, Cyan, Black, White

**6** Press **SETUP/TV MENU** to return to the normal screen.




# Setting the picture size

You can view 480i and 480p format programs in a variety of picture sizes— Normal, Zoom, Wide and Cinema.

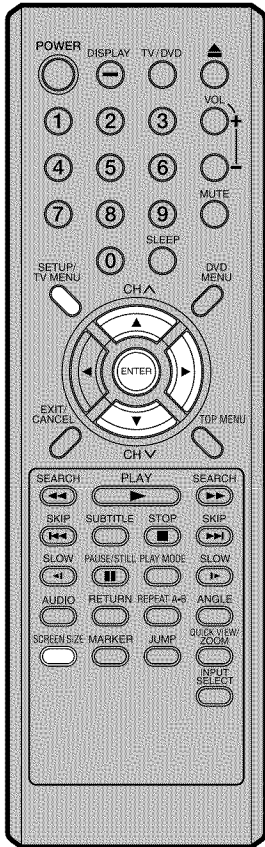


## Selecting the picture size

- 1 Press **SETUP/TV MENU** in the TV mode. Press **▲** or **▼** to select "Picture" menu, then press **▶**.

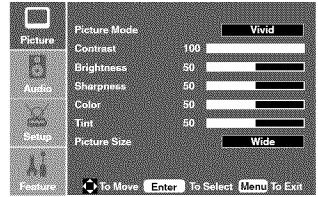


- 2 Press **▲** or **▼** to select "Picture Size", then press **▶** or **ENTER** to select the desired picture size, as described below and on the next page.

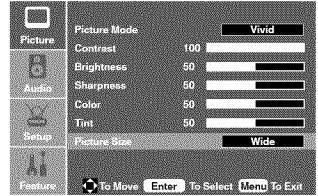

- 3 Press **SETUP/TV MENU** to return to the normal screen.

## Normal picture size


In some cases, this image will display the size of standard 4:3 with a black side bar.

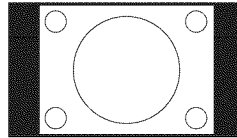

## Zoom picture size (for letter box programs with subtitles)

To fill the width of the screen, it is extended horizontally. However, it is only slightly extended at the top and the bottom.

The top and bottom edges of the picture may be hidden.

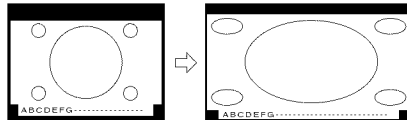

## NOTE:

- You can also set the picture size by pressing **SCREEN SIZE** on the remote control.
- Some High Definition and/or Digital broadcasts may not allow you to change the picture size.

# Setting the picture size

---


**NOTE:**

- In HDMI or COMPONENT mode with a scanning rate of 720p or 1080i, only the Normal and Cinema picture size features are available.
- In PC mode, only the Normal and Wide picture size features are available.
- In Cinema picture size, some of the on screen display items may be positioned off the visible portion of the screen.

**Wide picture size (for 4:3 format programs)**

To fill the screen, the right and left edges are extended, however; the center of the picture remains near its former ratio.


The top and bottom edges of the picture may be hidden.

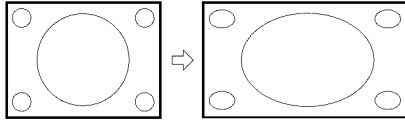

**Cinema picture size (for letter box programs)**


The entire picture is uniformly enlarged—it is stretched the same amount both wider and taller (retains its original proportion).

 The top and bottom edges of the picture may be hidden.






# Adjusting the picture preference/Picture control adjustment

You can select four picture modes—Vivid, Standard, Movie and User—as described in the following table:

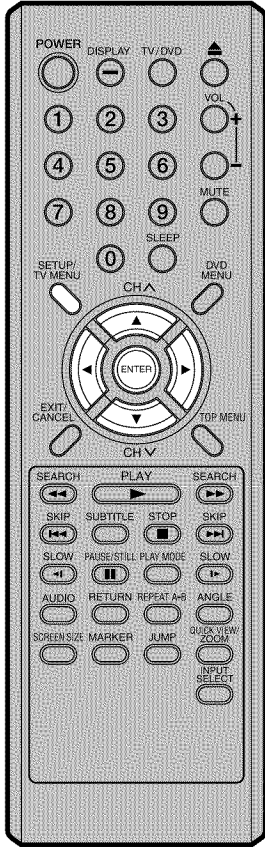

## Adjusting the picture preference

- 1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Picture" menu, then press **▶**.
- 2 Press **▲** or **▼** to select "Picture Mode".
- 3 Press **▶** or **ENTER** to select the item you want to adjust.

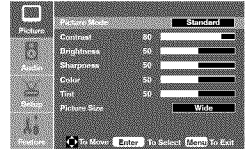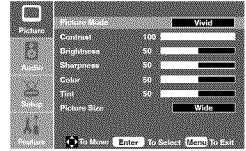
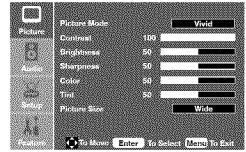


| Mode            | Picture Quality   |
|-----------------|---|
| <b>Vivid</b>    | Bright and dynamic picture (factory-set)  |
| <b>Standard</b> | Standard picture quality (factory-set)  |
| <b>Movie</b>    | Movie-like picture setting (factory-set)  |
| <b>User</b>     | Your personal preferences (set by you; see "Picture control adjustment" below). |

- 4 After your desired setting, press **SETUP/TV MENU** to return to the normal screen.

## Picture control adjustment

- 1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Picture" menu, then press **▶**.
- 2 Press **▲** or **▼** to select the item you want to adjust, then press **▶** or **ENTER**. Press **◀** or **▶** to adjust the setting.

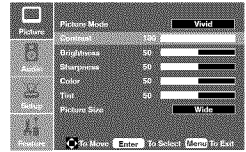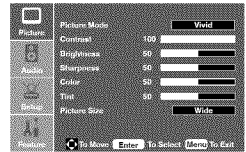

- Press **▲** or **▼** to change the adjusting item.




|                   | ◀                    | ▶                     |
|-------------------|----------------------|-----------------------|
| <b>Contrast</b>   | decrease contrast    | increase contrast     |
| <b>Brightness</b> | decrease brightness  | increase brightness   |
| <b>Sharpness</b>  | makes picture softer | makes picture clearer |
| <b>Color</b>      | be pale color        | be brilliant color    |
| <b>Tint</b>       | be greenish color    | be reddish color      |

### NOTE:

- The Contrast default setting is set to maximum at the factory.

- 3 After your desired setting, press **SETUP/TV MENU** to return to the normal screen.

# DNR/Selecting the color temperature

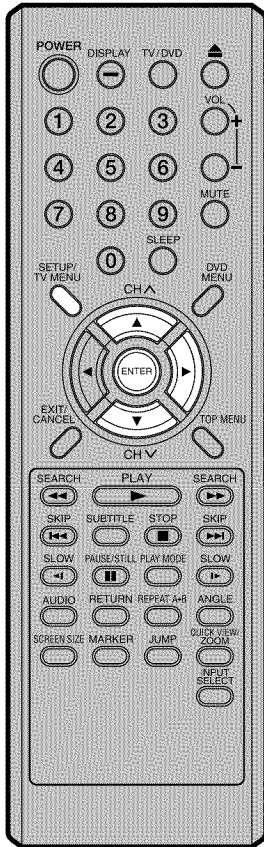

## DNR




DNR (Digital Noise Reduction) can reduce the roughness of the picture.

**1** Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Feature" menu, then press **▶**.

**2** Press **▲** or **▼** to select "Advanced Video Menu", then press **▶** or **ENTER**.

**3** Press **▲** or **▼** to select "DNR". Press **▶** or **ENTER** to select "On" or "Off".

**4** Press **SETUP/TV MENU** to return to the normal screen.

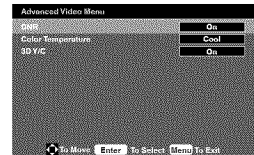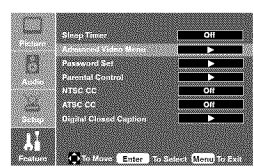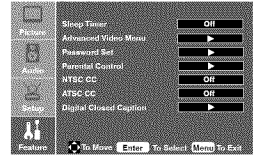




## Selecting the color temperature

Change the picture quality by selecting from three preset color temperatures—Cool, Normal, and Warm:

**1** Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Feature" menu, then press **▶**.

**2** Press **▲** or **▼** to select "Advanced Video Menu", then press **▶** or **ENTER**.

**3** Press **▲** or **▼** to select "Color Temperature". Press **▶** or **ENTER** to select the mode you prefer.

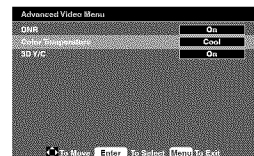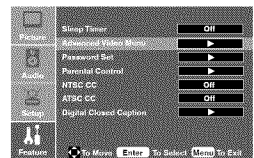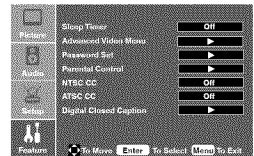


| Mode          | Picture Quality |
|---------------|-----------------|
| <b>Cool</b>   | Bluish          |
| <b>Normal</b> | Neutral         |
| <b>Warm</b>   | Reddish         |


**4** Press **SETUP/TV MENU** to return to the normal screen.

# Setting the 3D Y/C


3D Y/C reduces visible interference in your TV picture. This is useful when receiving a broadcast with a weak signal (especially a Cable channel) or playing a video cassette that is damaged by repeated use.

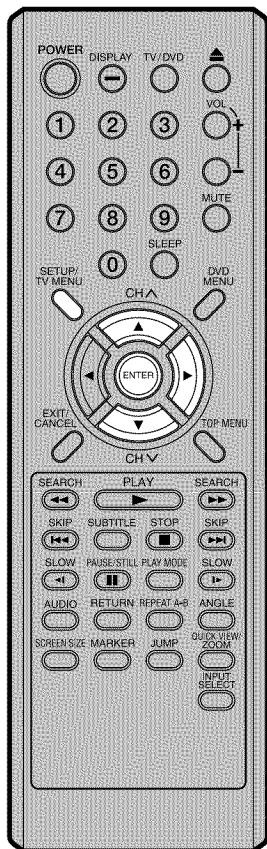


1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select “Feature” menu, then press **▶**.

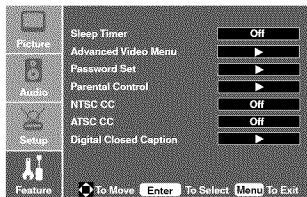

2 Press **▲** or **▼** to select “Advanced Video Menu”, then press **▶** or **ENTER**.

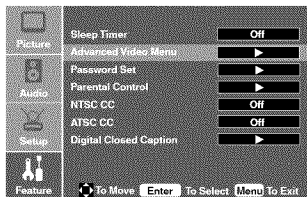

3 Press **▲** or **▼** to select “3D Y/C”. Press **▶** or **ENTER** to select “On” or “Off”.

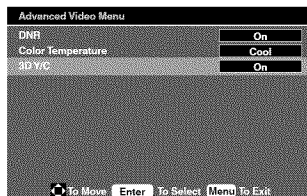


4 Press **SETUP/TV MENU** to return to the normal screen.

# Selecting Stereo/Second Audio Program (SAP)/ Sound control adjustment


The multi-channel TV sound (MTS) feature provides high-fidelity stereo sound. MTS also can transmit a second audio program (SAP) containing a second language or other audio information.

When the TV receives a stereo or SAP broadcast, the word "Stereo" or "SAP" displays on-screen every time you turn the TV on, change the channel, or press DISPLAY.

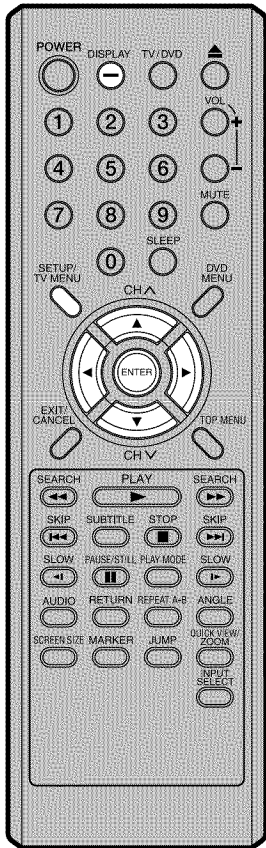


## Selecting Stereo/Second Audio Program (SAP)

**1** Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Audio" menu, then press **▶**.

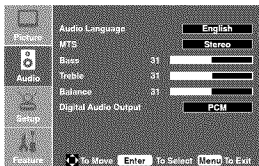

**2** Press **▲** or **▼** to select "MTS", then press **▶** or **ENTER** to select "Stereo".

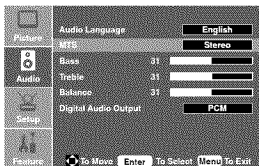

**3** Press **SETUP/TV MENU** to return to the normal screen.

### NOTE:


- Generally you can leave your TV in stereo mode because the TV automatically outputs the type of sound being broadcast (stereo or mono).
- If the stereo sound is noisy, select Mono to reduce the noise.

## To listen to a second audio program (SAP)


Press **▶** or **ENTER** to select "SAP" in step 2 above. The TV speakers will output the second audio program instead of normal audio.

## Sound control adjustment

**1** Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Audio" menu, then press **▶**.

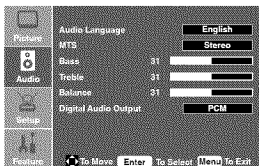

**2** Press **▲** or **▼** to select the item you want to adjust, then press **▶** or **ENTER**.

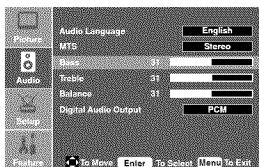

**Bass:** Press **◀** or **▶** to adjust the bass sound.

**Treble:** Press **◀** or **▶** to adjust the treble sound.

**Balance:** Press **◀** or **▶** to obtain an equal sound level from both speakers.

- Press **▲** or **▼** to change the adjusting item.




**3** After your desired setting, press **SETUP/TV MENU** to return to the normal screen.

# Selecting the audio language/ Selecting the digital output


## Selecting the audio language

When two or more audio languages are included in a digital signal, you can select one of the audio language.

- 1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Audio" menu, then press **▶**.

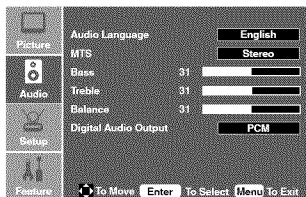

- 2 Press **▲** or **▼** to select "Audio Language". Then press **▶** or **ENTER** to select your desired language.

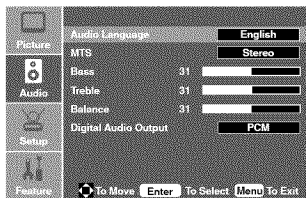


- 3 Press **SETUP/TV MENU** to return to the normal screen.


## Selecting the digital output

You can choose the format of the digital audio output signal.


- 1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Audio" menu, then press **▶**.

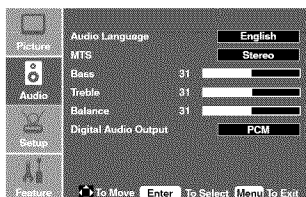


- 2 Press **▲** or **▼** to select "Digital Audio Output", then press **▶** or **ENTER** to select "PCM" or "RAW".

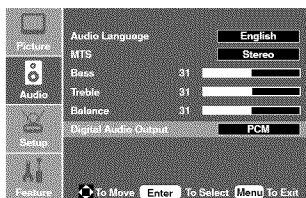

- 3 Press **SETUP/TV MENU** to return to the normal screen.

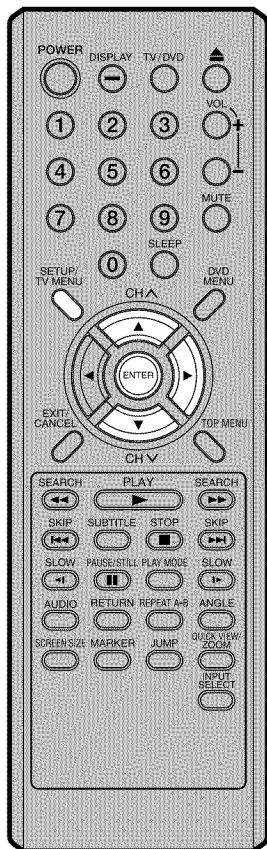

# Checking the Digital-signal strength/ Resetting your settings

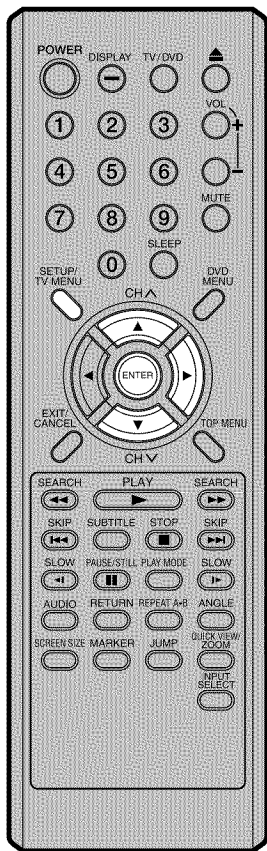


## Checking the Digital-signal strength

This TV will allow you to view the digital signal meter for digital channels.


1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Setup" menu, then press **▶**.



2 Press **▲** or **▼** to select "DTV Signal".

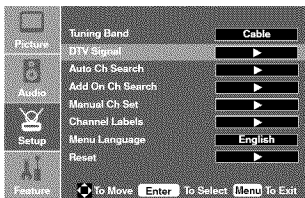

3 Press **▶** or **ENTER** to check the Digital-signal strength.

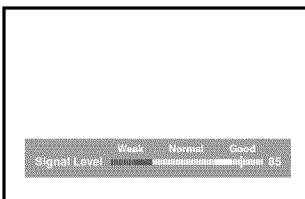

4 Press **SETUP/TV MENU** to return to the normal screen.


## Resetting your settings

The Reset function returns your settings to the factory settings.

1 Press **SETUP/TV MENU** in the TV mode. Then press **▲** or **▼** to select "Setup" menu, then press **▶**.



2 Press **▲** or **▼** to select "Reset".

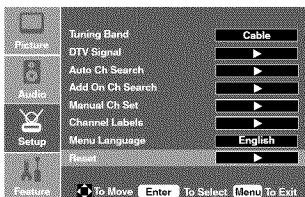

3 Press **▶** or **ENTER** to return your settings to the factory settings.

4 Press **SETUP/TV MENU** to return to the normal screen.


### NOTE:

- Signal meter feature is not available for analog channels.
- After 180 seconds, DTV Signal screen will return to normal TV-operation automatically.



# Picture control adjustment in the Component and PC mode

You can adjust to optimize the performance of the TV in the Component and PC mode.

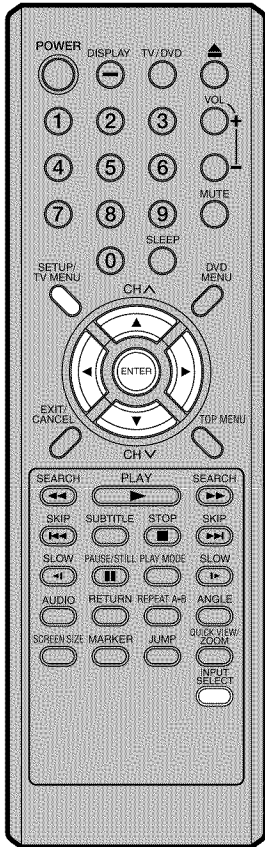


## NOTE:


- If no buttons are pressed for more than approx. 30 seconds, the Menu-screen will return to normal Monitor-screen automatically.
- The "Component Set" and "PC Set" settings are not effective for other input modes.

**Example:** Adjust the H-Pos in the component mode.


- 1 Press **INPUT SELECT** repeatedly to select the component mode.
- 2 Press **SETUP/TV MENU** during the component mode. Then press **▲** or **▼** to select "Feature" menu, then press **▶**.

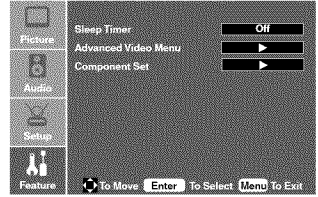

- 3 Press **▲** or **▼** to select "Component Set", then press **▶** or **ENTER**.

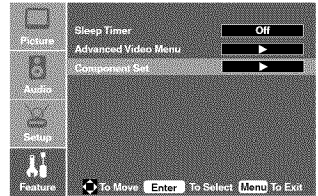

- 4 Press **▲** or **▼** to select "H-Pos", then press **▶** or **ENTER**.

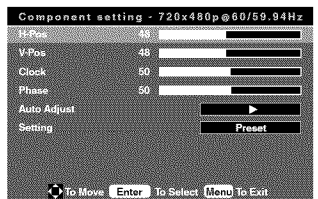

- 5 Press **◀** or **▶** to adjust the setting.
  - Press **▲** or **▼** to change the adjusting item.




- H-Pos:** To adjust the horizontal position of the image on the Component or PC mode.
- V-Pos:** To adjust the vertical position of the image on the Component or PC mode.
- Clock:** To minimize any vertical bars or stripes visible on the screen background.
- Phase:** This must be adjusted after the frequency of the Component or PC mode has been set to 60Hz to optimize picture quality (page 61).
- Auto Adjust (PC Setting only):** To optimize "H-Pos", "V-Pos", "Clock" and "Phase" automatically.
- Setting:** To return your settings to the factory settings.

- 6 Press **SETUP/TV MENU** to return to the normal screen.

# Preparation/Status display of disc

The following pages describe the setup/operation in DVD mode.

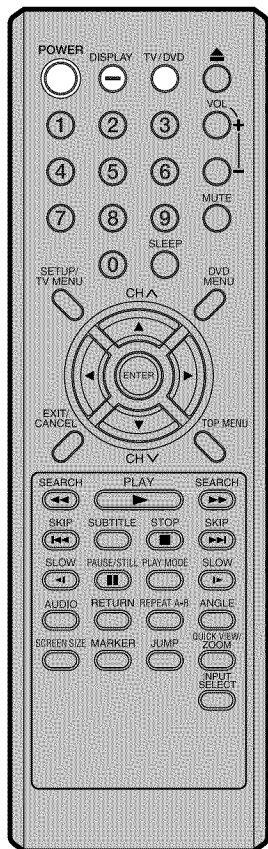

## Preparation

Before DVD/CD operation, please make the following preparations.

**1** Insert the AC cord plug into a standard 120V 60Hz polarized AC outlet.

- If the AC cord plug is plugged in for the first time, wait for about 5 seconds before pressing **POWER**.

**NOTE:** When connecting to other equipment, unplug the unit from the AC outlet.

**2** Press **POWER** on the unit or on the remote control to turn on the unit. The **POWER** indicator will light.

- Each time you turn the unit ON, the TV/DVD starts from the TV mode.
- When using an amplifier, switch on the amplifier.


**3** Press **TV/DVD** to select DVD mode.

The DVD startup screen will appear on the screen.



## Status display of disc

Press **DISPLAY**. The status display of the disc will appear on the screen.

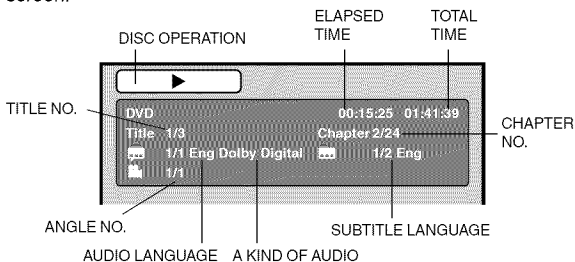


To make the status display screen disappear, press **DISPLAY** again.

## NOTE:

- If the unit does not operate properly:


Static electricity, etc., may affect the player's operation. Disconnect the AC power cord once, then connect it again.

# Playback procedure

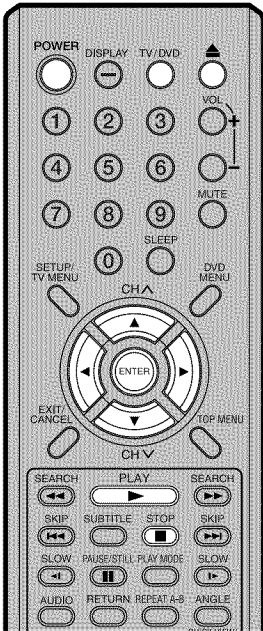



1 Press **TV/DVD** to select DVD mode.

2 Place the disc in the disc slot with the label side facing forward. (If the disc has a label.) Hold the disc without touching either of its surfaces, align it with the guides, and place it in position.

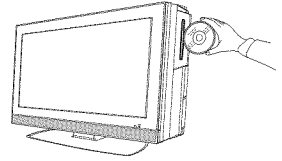

3 On the screen, "**▲**" changes to "Reading" and then playback will commence.

- A menu screen may appear on the TV screen, if the disc has a menu feature. In this case, press **▲**, **▼**, **◀**, **▶** or **ENTER** to operate a menu feature.

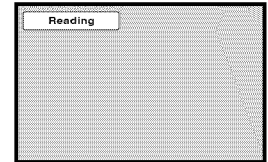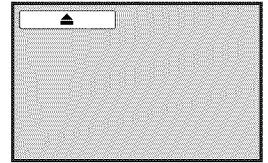

4 Press **STOP** to end playback.

- The unit memorizes the stopped point, depending on the disc. "**■**" appears on the screen. Press **PLAY** to resume playback (from the scene point).
- If you press **STOP** again ("**■**" appears on the screen) or unload the disc, the unit will clear the stopped point.

5 Press **▲** (**EJECT**).

Remove the disc and then press **POWER**.

The unit turns off.


When you eject the disc, you may hear mechanism noise, but it is not malfunction.

## NOTE:

- If a non-compatible disc is loaded, "Incorrect Disc", "Region Code Error" or "Parental Error" will appear on the TV screen according to the type of loaded disc. If these appear, check your disc again (see pages 8 and 55).
- Some discs may take a minute or so to start playback.
- If an 8 cm disc is placed into the disc slot and picture playback or menu display does not begin automatically, press **PLAY**.
- A "Prohibition" symbol "X" may appear at the upper left of the screen. This symbol means either the feature you tried is not available on the disc, or the unit cannot access the feature at this time. This does not indicate a problem with the unit.
- If you place a single-faced disc label backwards (i.e. the wrong way) "Reading" will appear in the display and then "Incorrect Disc" will be displayed.
- Some playback operations of DVDs may be intentionally fixed by software producers. Since this unit plays DVDs according to the disc content recorded, some playback features may not be available. Also refer to the instructions supplied with the DVDs.

# Special playback

**NOTE:** There may be a slight delay between when you press the button and the function activating.

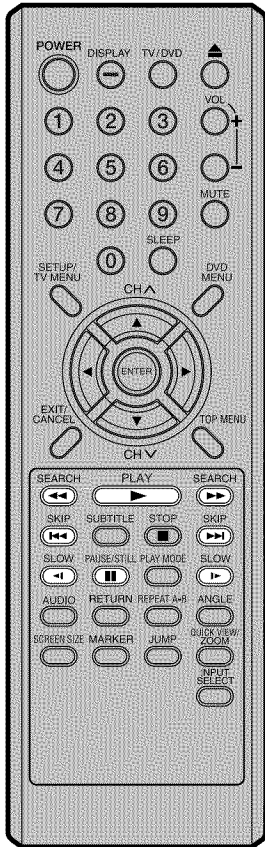

## Fast Forward Playback

Press **SEARCH ►►** during normal playback. Each press of **SEARCH ►►** will increase the speed of the search ►► (x 2), ►►► (x 4), ►►►► (x 8), ►►►►► (x 15). (CD: ►► (x 2), ►►► (x 4), ►►►► (x 8), ►►►►► (x 20))

- To resume normal playback, press **PLAY**.

## Review Playback


Press **SEARCH ◀◀** during normal playback. Each press of **SEARCH ◀◀** will increase the speed of the search ◀◀ (x 2), ◀◀◀ (x 4), ◀◀◀◀ (x 8), ◀◀◀◀◀ (x 15). (CD: ◀◀ (x 2), ◀◀◀ (x 4), ◀◀◀◀ (x 8), ◀◀◀◀◀ (x 20))

- To resume normal playback, press **PLAY**.

## Still Playback

Press **PAUSE/STILL** during normal playback to pause playback.

- To resume normal playback, press **PLAY**.

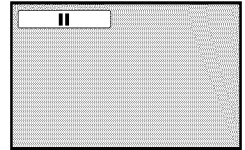

## Frame Advance

Press **PAUSE/STILL** during still playback. One frame is advanced each time you press **PAUSE/STILL**.

- To resume normal playback, press **PLAY**.

## Slow-motion Playback

Press **SLOW ◀|** Reverse or **SLOW |▶** Forward during normal playback or still playback. Each press of **SLOW** will change the speed of the slow x1/2, x1/4, x1/6, x1/7.

- To resume normal playback, press **PLAY**.
- To resume the still playback, press **PAUSE/STILL**.

## Locating a chapter or track

Press **SKIP ►►|** Forward or **SKIP |◀◀** Reverse during playback to locate a chapter that you want to watch. Each time you press the button, a chapter or track is skipped.

## NOTE:

- The unit is capable of holding a still video image or On screen display image on your television screen indefinitely. If you leave the still video image or On screen display image displayed on your TV for an extended period of time, you risk permanent damage to your television screen.

# MP3/WMA/JPEG and Audio CD playback

This player can play back MP3/WMA/JPEG-data which has been recorded on CD-R or CD-RW. To produce MP3/WMA/JPEG-data, you need a Windows-PC with CD-ROM drive and MP3/WMA/JPEG-encoding software (not supplied). The Apple-HFS-System cannot be played.

## MP3/WMA/JPEG CD information

### Limitations on MP3/WMA/JPEG CD playback

- MP3/WMA/JPEG CD is the disc that is standardized by ISO9660, its file name must include 3-digit extension letters, "mp3", "wma", "jpg".
- The directory and file names of MP3/WMA/JPEG CD must correspond to ISO standardized files.
- This unit can read 2000 files per disc. If one directory has more than 2000 files, it reads up to 2000 files, the remaining files will be omitted.
- MP3/WMA CDs cannot be used for playback for the purpose of recording.
- If the CD has both audio tracks and MP3/WMA/JPEG files, only audio tracks are played.
- It may take more than one minute for this unit to read MP3/WMA/JPEG files depending on its structure.
- Music recorded by "Joliet Recording Specification" can be played back.
- The music files recorded by "Hierarchical File System" (HFS) cannot be played.
- The unit can play back baseline and progressive JPEG files.

### Limitations on display

- The maximum number for display is 15 characters. Long file names will be condensed.
- Available letters for display are the following: capital or lowercase letters A through Z, numbers 0 through 9, and \_ (under score).
- Other letters than those above are replaced by a hyphen.

### Notes on MP3/WMA/JPEG files

To play back MP3/WMA/JPEG CD in the recorded order,


1. Use MP3/WMA/JPEG software that records data alphabetically or numerically.
2. Name each file including a two-digit or three-digit number (e.g. "01" "02" or "001" "002").
3. Refrain from making too many sub-folders.

### CAUTION:

- Some MP3/WMA/JPEG CDs cannot be played back depending on the recording conditions.
- The CD-R/RW that has no music data or non-MP3/WMA/JPEG files can not be played back.

## MP3 CD/WMA and Audio CD playback


- 1 Load a MP3/WMA/JPEG CD or an Audio CD in the disc slot.
- 2 "Reading" will appear on the TV screen. Reading time will depend on the number of files on the disc.
- 3 A file browser screen will appear on the TV screen.

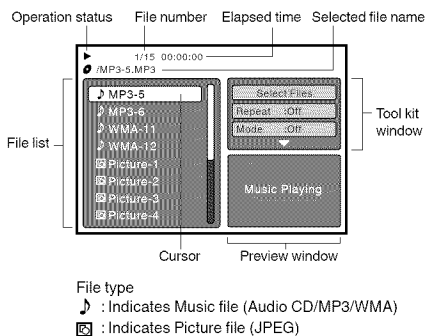

- In case the current directory includes 9 files or more, press ▲ or ▼ to scroll in the file list.
- To see contents in folder, select the folder and then press **ENTER**. To return to the parent directory, select "Go Up ..." then press **ENTER**.
- In case of a CD containing a mixture of MP3, WMA and JPEG files, the files are played back by selecting them from the file browser.

- 4 Press ▲ or ▼ to select the desired file.

When **PLAY** is pressed after displaying file browser displayed, or when the disc tray is closed by pressing **PLAY**, playback begins automatically starting from the first file.

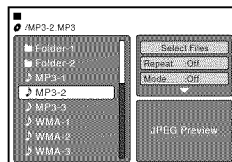


In this case, if the first file is an MP3/WMA file, only MP3/WMA files are played back in order. If the first file is a JPEG file, the first JPEG file is played back. If there is no file at a root directory, playback does not begin automatically.

- 5 Press **ENTER**.  
The selected file starts playing back.

- 6 Press **STOP** to end playback.
  - The unit records the stopped point. "■" appears on the screen. Press **PLAY** to resume playback (from the scene point).
  - If you press **STOP** again or unload the disc, the unit will clear the stopped point.


### NOTE:

- During MP3/WMA/JPEG-Playback, you cannot use JUMP and A-B Repeat functions.
- You can use Repeat (Track or All), Random functions and Program playback for MP3/WMA/JPEG and Audio CD Playback (see pages 44 and 45).

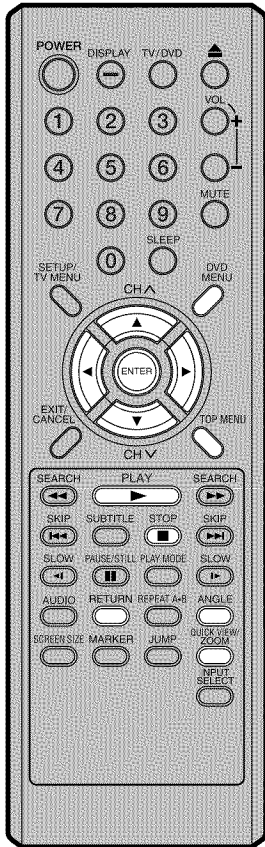


- 1 In the file browser, press ▲/▼ to select the desired JPEG file. To display a thumbnail list, press **DVD MENU**.

Press ▲/▼/◀/▶ to select the desired file.  
(To return to the file browser, press **TOP MENU**.)

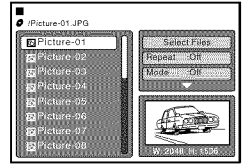

When **PLAY** is pressed after displaying the file browser, or when the disc tray is closed by pressing **PLAY**, playback begins automatically starting from the first file. In this case, if the first file is a JPEG file, the first JPEG file is played back. If the first file is an MP3/WMA file, only MP3/WMA files are played back in order. If there is no file at a root directory, playback does not begin automatically.

- 2 Press **ENTER**. The selected picture appears on the TV screen.

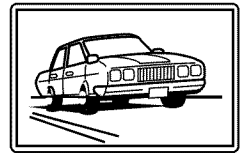

### Rotating an image

You can rotate an image by 90 degrees. Press **ANGLE** during playback of the image. "■", "■", "■" or "■" appears on the screen.

### Zooming an image

Zoom function also can be used in viewing JPEG files. Press **ZOOM** (See "Zooming" on page 46).

- 3 Press **STOP** to end playback. The file browser appears on the TV screen. If you want to watch the other file, repeat steps 1-2.

### Select Files

The file type to make it display in the file browser can be chosen.


- 1 Press ◀/▶ to select "Select Files" at right column in the file browser.
  - Press **ENTER**, then press ▲/▼ to select file type from the list (Music or Picture).
- 2 Press **ENTER** to add/remove check mark. Checked file type will be displayed in the file browser.
- 3 Press **RETURN** to save the setting.


### NOTE:


- MP3 or WMA files on the KODAK Picture CD are not recognized on this unit.

# Setting the JPEG interval


You can continuously play back all JPEG files automatically.

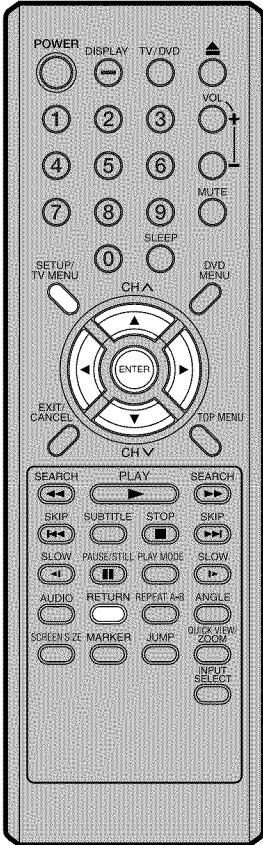

- 1 Press **SETUP/TV MENU** in the stop mode. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.
- 2 Press **▲** or **▼** to select "JPEG Interval", then press **▶** or **ENTER**.

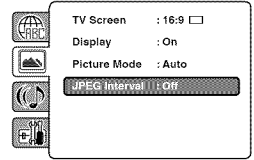

- 3 Press **▲** or **▼** to select your desired time, then press **ENTER**.

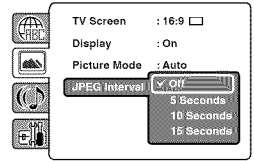

## Off:

Plays back one file at a time.

## 5 Seconds:

Plays back images in the form of a slide show at 5 second intervals.

## 10 Seconds:

Plays back images in the form of a slide show at 10 second intervals.


## 15 Seconds:

Plays back images in the form of a slide show in 15 second intervals.

- 4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.


# Program playback (CD)

You can arrange the order of tracks on the disc.

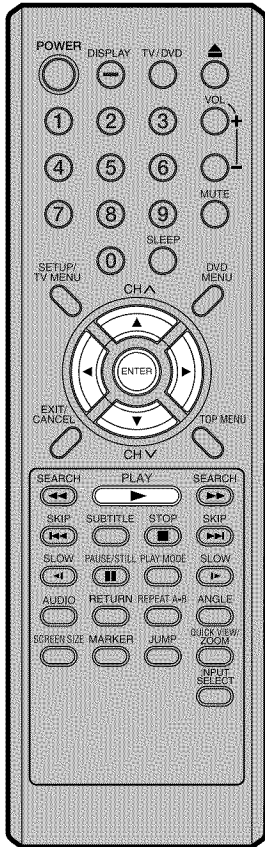


- 1 In the file browser, press ▲/▼/◀/▶ to select “Edit Mode”, then press **ENTER**.

When “Edit Mode” is black color, you can mark the files which you want to add into Program list.

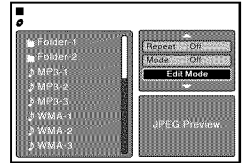


- 2 Press ▲/▼/◀/▶ to select the file you want to add into the program list.

Press **ENTER**. Selected file was marked. Repeat this procedure to select the other files.

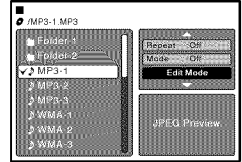


- 3 Press ▲/▼/◀/▶ to select “Add To Program”. Then press **ENTER**. All marked files are added into the program list.


When you finish storing the files you want into the Program list, select “Edit Mode” again and press **ENTER** to release edit mode.

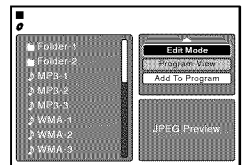

- 4 Press ▲/▼ to select “Program View”, then press **ENTER**. Program View shows only the programmed files that you have added in Step 2.

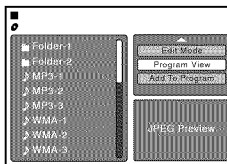

Browser View

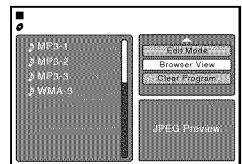

Program View

- 5 In the Program View, press **PLAY**. The files start to playback in programmed order that were added by you.

## To remove file from program list in stop mode


In the Edit Mode, switch to Program View. Select the files you want to remove, then press **ENTER**. Select “Clear Program” and press **ENTER**. Marked file is removed from program list.

## NOTE:

- The program is cancelled when you eject the disc or turn the power off.




# Repeat playback (CD)/Random playback (CD)

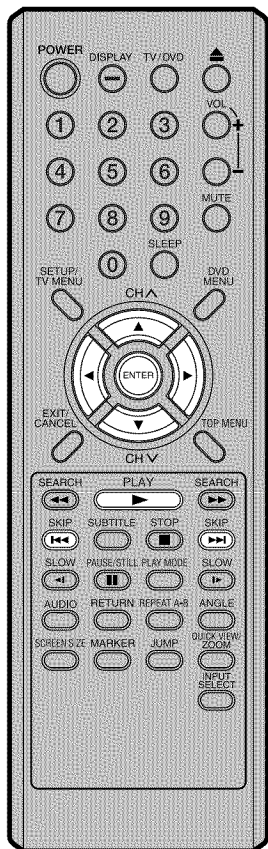


## Repeat playback

1 In the file browser, press  $\blacktriangle/\nabla/\blacktriangleleft/\blacktriangleright$  to select "Repeat" during stop mode.

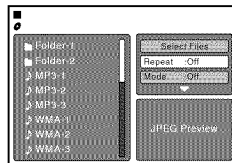

2 Press **ENTER** repeatedly to select "Track" or "All".

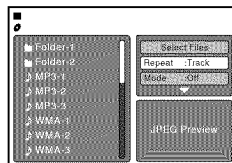


3 Press **PLAY**.  
The unit automatically starts repeat playback after finishing the current track.


To resume normal playback, select Repeat : "Off" in step 2.

## Random playback

1 In the file browser, press  $\blacktriangle/\nabla/\blacktriangleleft/\blacktriangleright$  to select "Mode" during stop mode.

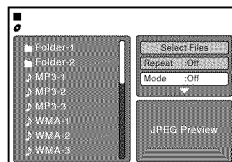

2 Press **ENTER** to select "Random".

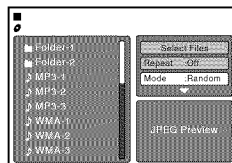


3 Press **PLAY**.  
The Random playback will start.

To resume normal playback, select Repeat : "Off" in step 2.

### NOTE:

- The repeat or random function is canceled when you eject the disc or turn the power off.
- The track repeat function is canceled when **SKIP**  $\blacktriangleleft$  or  $\blacktriangleright$  is pressed.
- In case of Audio CD, the function of A-B Repeat also can be used. See "A-B Repeat playback" 47.


# Zooming/Locating desired scene

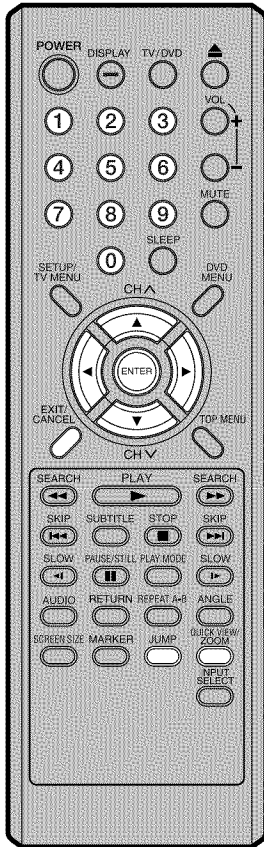

## Zooming

This unit will allow you to zoom in on the frame image. You can then make selections by switching the position of the frame.

- 1 Press **ZOOM** during playback.  
The center part of the image will be zoomed in.  
Each press of **ZOOM** will change the ZOOM magnification **Q1** (x 1.3), **Q2** (x 1.5) and **Q3** (x 2.0).

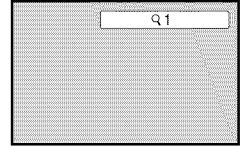


- 2 Press **▲/▼/◀/▶** to view a different part of the frame.  
You may move the frame from the center position **UP**, **DOWN**, **LEFT** or **RIGHT**.
- 3 In the zoom mode press **ZOOM** repeatedly to return to a 1:1 view (**Q Off**).

## Locating desired scene

 Use the title, chapter and time recorded on the disc to locate the desired point to play back.

- 1 Press **JUMP** during playback or resume stop mode.



- 2 Press **▲** or **▼** to select the "Time", "Title/track" or "Chapter".
- 3 Press **Number buttons (0-9)** to input the number.
  - If you input a wrong number, press **CANCEL**.
  - Refer to the package supplied with the disc to check the numbers.
- 4 Press **ENTER**.

- Playback starts.
- When you change the title, playback starts from Chapter 1 of the selected title.
- Some discs may not work in the above operation.

### NOTE:

- You can select the Pause, Slow or Search playback in the zoom mode.
- Some discs may not respond to zoom feature.

# Repeat playback

## Title, Chapter, Track Playback

1 Press **PLAY MODE** during playback or stop mode.

2 Press **ENTER** repeatedly to select "Chapter" or "Title". The unit automatically starts repeat playback after finishing the current title or chapter.



- If you set the repeat mode during stop mode, press **PLAY** to start Repeat playback.


3 Press **PLAY MODE** again to make the screen disappear.

- Press **PLAY** to start Repeat playback.
- To resume normal playback, select Repeat "Off" in step 2.

## A-B Repeat Playback

A-B repeat playback allows you to repeat material between two selected points.


1 Press **REPEAT A-B** during playback. The start point is selected.

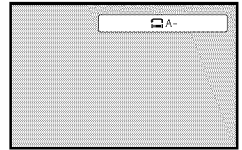

2 Press **REPEAT A-B** again. The end point is selected. Playback starts at the point that you selected. Playback stops at the end point, returns to Point A automatically, then starts again.



3 To resume normal playback press **REPEAT A-B** again. "Off" appears on the screen.

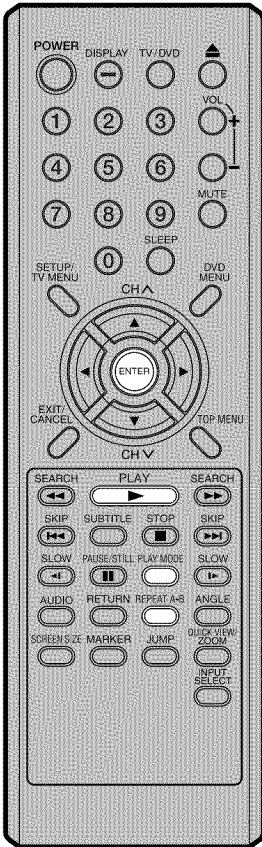


### NOTE:

- Some discs may not work with the repeat operation.
- In A-B repeat mode, subtitles near point A or B may not appear.
- During the A-B Repeat Playback the ANGLE feature will not operate.
- You may not be able to set A-B Repeat, depending on the scenes of the DVD.
- A-B Repeat does not work with an interactive DVD, MP3/MPEG/WMA/JPEG-CD.

# Marking desired scenes

The TV/DVD stores the points that you want to watch again. You can resume playback from that scene.

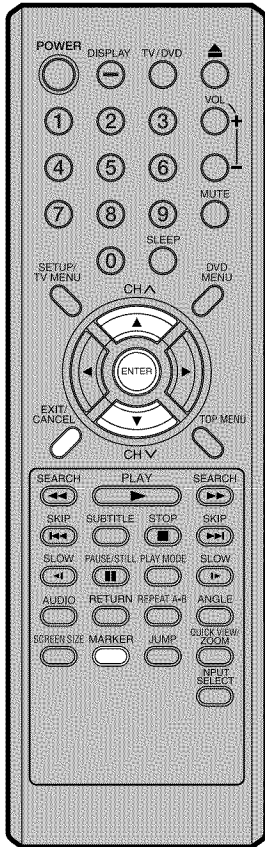

## Marking the Scenes

1 Press **MARKER** during playback.

|          |              |
|----------|--------------|
| Marker 1 | -- : -- : -- |
| Marker 2 | -- : -- : -- |
| Marker 3 | -- : -- : -- |

2 Select the blank Marker using **▲** or **▼**, then press **ENTER** at the desired scene.

|          |              |
|----------|--------------|
| Marker 1 | 00 : 27 : 54 |
| Marker 2 | -- : -- : -- |
| Marker 3 | -- : -- : -- |

- Up to 3 scenes can be selected.
- Repeat this procedure to set the other 2 scenes.

3 Press **MARKER** to remove this display.

## Returning to the Scenes

1 Press **MARKER** during playback or stop mode.

|          |              |
|----------|--------------|
| Marker 1 | 00 : 27 : 54 |
| Marker 2 | 01 : 16 : 25 |
| Marker 3 | 02 : 08 : 31 |

2 Press **▲** or **▼** to select the Marker 1-3.

|          |              |
|----------|--------------|
| Marker 1 | 00 : 27 : 54 |
| Marker 2 | 01 : 16 : 25 |
| Marker 3 | 02 : 08 : 31 |

3 Press **ENTER**.  
Playback starts from the marked scene.

## To Cancel the Mark

1 Press **MARKER** during playback or stop mode.

2 Press **▲** or **▼** to select the Marker 1-3.

3 Press **CANCEL**.  
Press **MARKER** to remove this display.

### NOTE:

- The marking is canceled when you eject the disc or turn the power off.
- Some subtitles recorded around the marker may fail to appear. [DVD]

 
# Changing soundtrack language/Subtitles

## Changing soundtrack language

You can select the language when you play a multilingual disc.

1 Press **AUDIO** during playback.

The current soundtrack language will appear.



2 Press **AUDIO** repeatedly until the desired language is selected.

The on-screen display will disappear after a few seconds.




The on-screen display will disappear after a few seconds.

## Subtitles
 
### Turning the subtitles on and off

When playing back a disc recorded with subtitles, you can turn the subtitles on or off.


Press **SUBTITLE** during playback until "Off" appears.




### Changing the subtitle language

You can select the language when playing back a disc recorded with multi-lingual subtitles.

 1 Press **SUBTITLE** repeatedly during playback until your desired language appears.



2 The on-screen display will disappear after a few seconds.

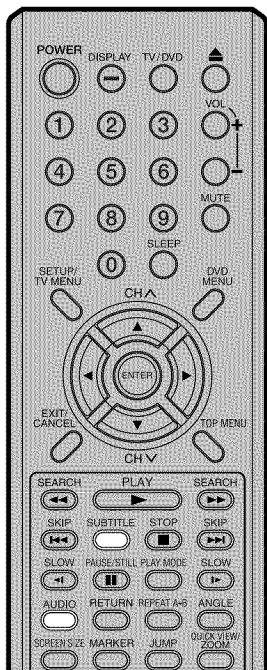

## NOTE:

- If the desired language is not heard after pressing **AUDIO** several times, the language is not recorded on the disc.
- Changing soundtrack language is cancelled when you eject the disc. The initial default language or available language will be heard if the disc is played back again.
- Changing subtitle language is cancelled when you eject the disc.
- Some functions may not work on some DVDs. You may not be able to turn subtitles on or off or change subtitles. While playing the DVD, the subtitle may change when:
  - you eject the disc.
  - you change the title.
- In some cases, the subtitle language is not changed to the selected one immediately.


# Changing angles/Title selection/DVD menu

## Changing angles

When playing back a disc recorded with multi-angle facility, you can change the view angle.

- 1 Press **ANGLE** during playback.

The current angle will appear.

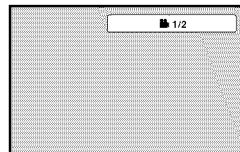

- 2 Press **ANGLE** repeatedly until the desired angle is selected.

## Title selection

Two or more titles are recorded on some discs.

If the title menu is recorded on the disc, you can select the desired title.


- 1 Press **TOP MENU** during playback.  
Title menu appears on the screen.
- 2 Press **▲/▼** or **◀/▶** to select the desired title.
- 3 Press **ENTER** or **PLAY**.  
The playback of the selected title will start.

## DVD menu

Some DVDs allow you to select the disc contents using the menu.

When you play back these DVDs, you can select the subtitle language and soundtrack language, etc. using the DVD menu.

- 1 Press **DVD MENU** during playback.  
The DVD menu appears on the screen.
  - Press **DVD MENU** again to resume playback at the scene when you pressed **DVD MENU**.
- 2 Press **▲/▼** or **◀/▶** to select the desired item.
- 3 Press **ENTER**.  
The menu continues to another screen. Repeat steps 2 and 3 to set additional items if any.

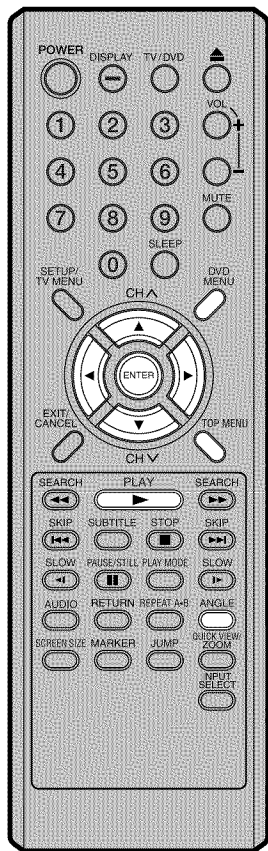



### NOTE:


- Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.
- Depending on the DVD, you may not be able to select the title. Depending on the DVD, a "title menu" may simply be called a "menu" or "title" in the instructions supplied with the disc.

# Setting the language


You can select the language of “Menu”, “Subtitle” and “Audio” if more than one languages are recorded onto the disc.

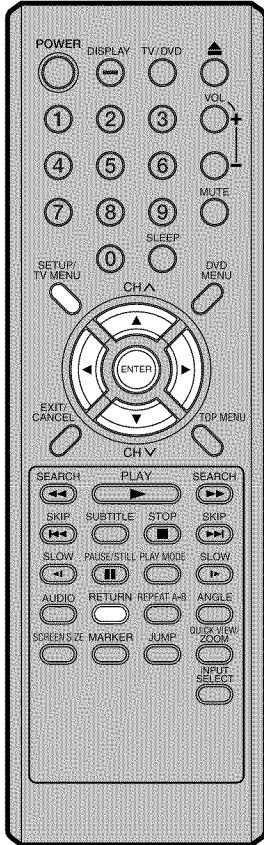

- 1 Press **SETUP/TV MENU** in the stop mode. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.
- 2 Press **▲** or **▼** to select desired option, then press **▶** or **ENTER**.

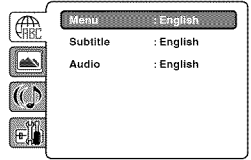

- 3 Press **▲** or **▼** to select your desired language (e.g. English).

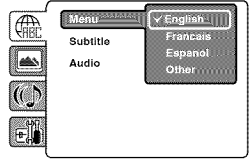

## English, Francais, Espanol :

The selected language will be heard or seen.

## Other :

Other language can be selected (see the “Language code list” on page 58).

## Original (Audio):

The unit will select the first priority language of each disc.

## Off (Subtitle):

Subtitles do not appear.

- 4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.


## NOTE:


- If the selected language is not recorded on the disc, the first priority language is selected.

# Setting the aspect ratio of TV screen/Setting on screen display


## Setting the aspect ratio of TV screen

You can select the aspect ratio of the picture.

- 1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.
- 2 Press **▲** or **▼** to select "TV Screen", then press **▶** or **ENTER**.

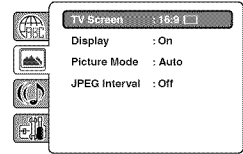

- 3 Press **▲** or **▼** to select your desired screen type, then press **ENTER**.

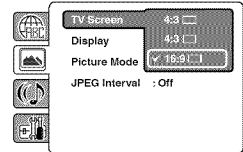

You have the following screen sizes to choose from:

### 4:3 Letterbox

When playing back a wide screen DVD disc, it displays the wide picture with black bands at the top and bottom of screen.

### 4:3 Panscan

It displays the wide picture on the whole screen with left and right edges automatically cut off.


### 16:9 Wide


A wide screen picture is displayed full size.

- 4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.


## Setting on screen display

On screen display can be switched on or off when you press the DISPLAY button.

- 1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.
- 2 Press **▲** or **▼** to select "Display", then press **▶** or **ENTER**.

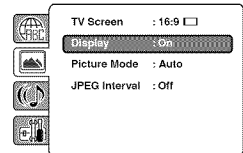


- 3 Press **▲** or **▼** to select "On" or "Off", then press **ENTER**.

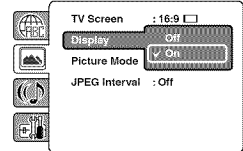

**On:** On screen displays appear when you press the buttons (factory setting).

**Off:** On screen displays do not appear when you press any buttons except **SUBTITLE**, **PLAY MODE**, **MARKER** and **DISPLAY**.

- 4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.

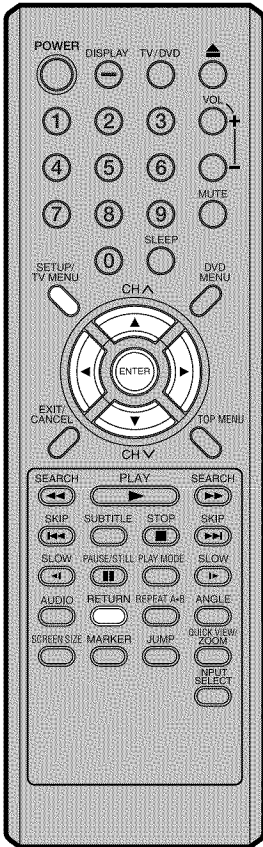


### NOTE:

- It is not always possible for the DVD disc to display the picture as per your preferred picture setting - for example, if you select "4:3 Panscan", the disc may not offer this option. In this case the picture would display the format the disc is capable of playing back.




# Setting the picture mode


There are two types of source content in pictures recorded in DVD video discs: film content (pictures recorded from films at 24 frames per second) and video content (video signals recorded at 30 frames per second). Make this selection according to the type of content being viewed.

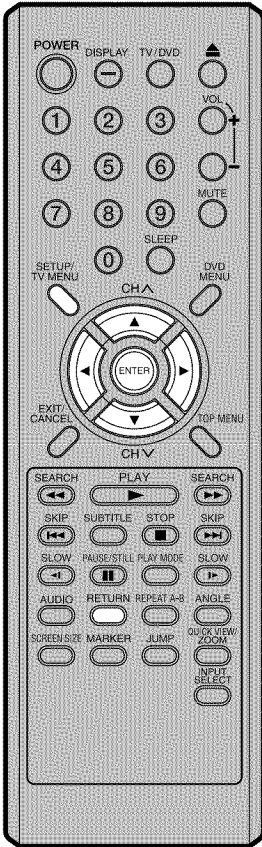


## Setting the picture mode

1 Press **SETUP/TV MENU** in the stop mode. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.

2 Press **▲** or **▼** to select "Picture Mode", then press **▶** or **ENTER**.

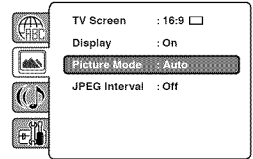

3 Press **▲** or **▼** to select your desired picture mode, then press **ENTER**.

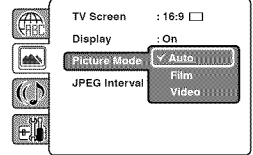

### Auto:

Select this position normally.

The DVD player automatically detects source content, film or video, of playback source.

### Film:

Suitable for playback of film content pictures.

### Video:


Suitable for playback of video content pictures.

4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.

## NOTE:


- Depending on the disc, pictures may be cut off or doubled. In this case, select "Video".

# Night Mode/Digital Out

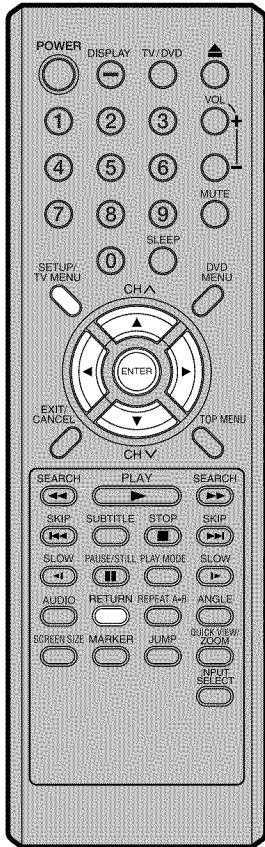


## Night Mode

Night Mode enables you to control the dynamic range so as to achieve a suitable sound for your equipment.

1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.


2 Press **▲** or **▼** to select "Night Mode", then press **▶** or **ENTER**.

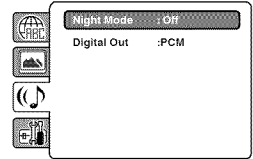

3 Press **▲** or **▼** to select "On" or "Off", then press **ENTER**.

**On** : Loud sound such as explosion or similar is toned down slightly when play back. This makes it suitable for when it is connected to a stereo.


**Off** : It plays back at the recording level on the disk.

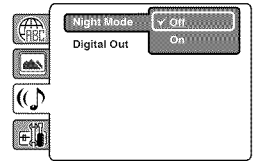


4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.

## Digital Out


You can select the digital output sound format corresponding to your system connection.

1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.

2 Press **▲** or **▼** to select "Digital Out", then press **▶** or **ENTER**.

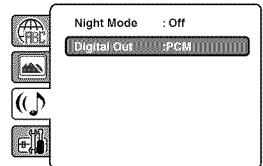

3 Press **▲** or **▼** to select "PCM", "Bitstream" or "Off", then press **ENTER**.

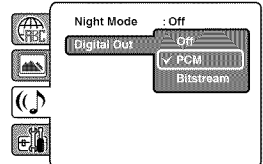

### NOTE:

- This function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Reduction may differ depending on DVD video disc.
- Even if you select "Bitstream", MPEG audio will be output in PCM format.

**PCM:** Change Dolby Digital to PCM for the output. Select when connected to a 2 channel digital stereo amplifier.


**Bitstream:** Disc audio bitstream data will be output.

**Off:** There is no sound output from DIGITAL AUDIO OUT jack.


4 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.

# Parental control setting


Some discs are specified not suitable for children. Such discs can be limited not to play back with the unit.

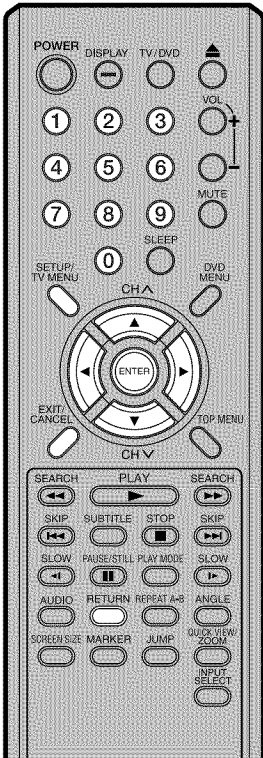

- 1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select option, then press **◀/▶** or **ENTER**.
- 2 Press **▲** or **▼** to select "Parental", then press **▶** or **ENTER**. "Enter Password" screen will appear.

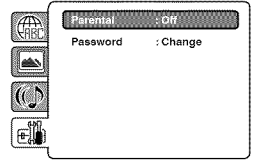


- 3 Press "0000" using **Number buttons (0-9)**. (Please note, this pre-setting password of this unit). Then press **ENTER**. The parental level list will appear.

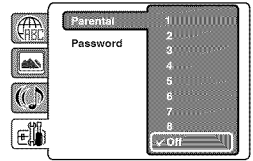

- **Level Off** : The parental control setting does not function.
- **Level 8** : Virtually all DVD software can be played back.
- **Level 1** : DVD software for adults cannot be played back.
- Select from level 1 to level 8. The limitation will be more severe as the level number decreases.
- If you input a wrong number, press **CANCEL**.

- 4 Press **▲** or **▼** to select the level 1 to level 8. The limitation will be more severe as the level number is lower. Then press **ENTER**.

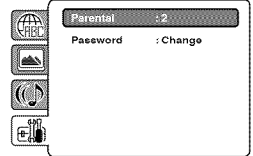



- 5 Press **SETUP/TV MENU** or **RETURN** to remove the menu screen.

## NOTE:


- If each setup (P.51~56) has been completed, the unit can always be operated under the same conditions (especially with DVD discs). Each setup will be retained in the memory when you turn the power off.
- Depending on the discs, the unit cannot limit playback.
- Some discs may not be encoded with specific rating level information though its disc jacket says "adult". For those discs, the age restriction will not work.
- After the rating is locked, the setting cannot be changed unless you enter the correct password.

# Setting the new password

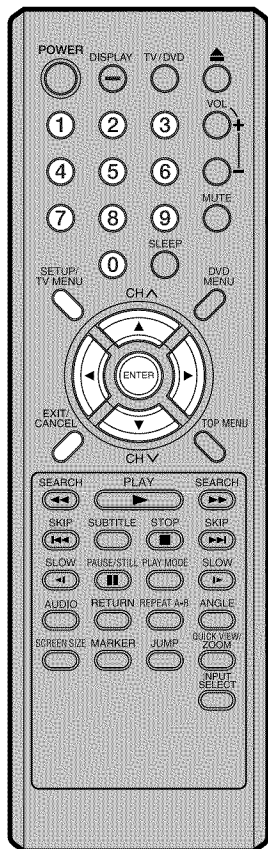


1 Press **SETUP/TV MENU** in the stop mode or No Disc. Press **▲** or **▼** to select  option, then press **◀/▶** or **ENTER**.

2 Press **▲** or **▼** to select "Password", then press **▶** or **ENTER**. "Enter Current Password" screen will appear.

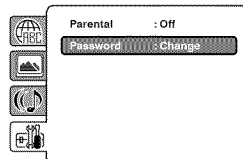


3 Press **Number buttons (0-9)** to enter the password you have stored.

- If you input a wrong number, press **CANCEL**.

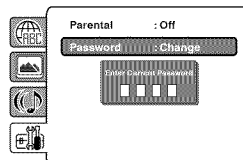

4 Then press **ENTER**. "Enter New Password" screen will appear. Press **Number buttons (0-9)** to input the new password.

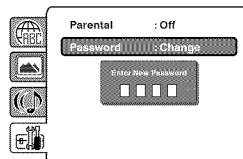

5 Press **ENTER**. Now your new password has been set. Be sure to remember this number!


## NOTE:

- Do not forget the password. If you forget the password, contact Customer Service at 1-800-289-0980. The original remote control will be required.



# Temporary disabling of rating level by DVD disc

Some pre-recorded DVD discs may attempt to temporarily cancel the rating level that you have set. You will be given the option to allow or not allow the override.

- 1 Load a DVD disc (see page 39).

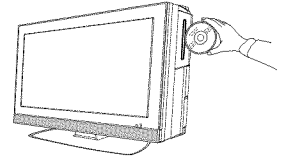

- 2 If the DVD disc has been designed to temporarily cancel the Rating level, the screen which follows the "Reading" screen will change, depending on which disc is played. If you select "YES" with **ENTER** key, password input screen will then appear.
- 3 Enter the password with **Number buttons (0-9)**. Then press **ENTER**.
  - If you interrupt the entering, press **RETURN**.
- 4 Playback will commence if the entered password was correct.

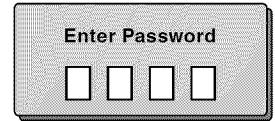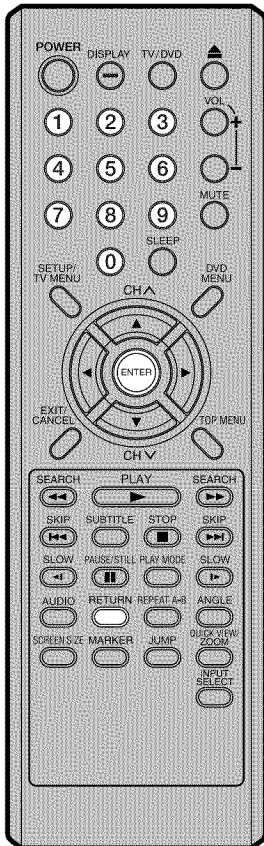

## NOTE:

- This temporary cancellation of the rating level will be kept until the disc is ejected. When the disc is ejected, the original rating level will be set again automatically.

# Language code list

Enter the appropriate code number for the initial settings “Menu”, “Subtitle” and/or “Audio” (see page 51).


| Language Name   | Code | Language Name    | Code | Language Name  | Code | Language Name | Code |
|-----------------|------|------------------|------|----------------|------|---------------|------|
| Abkhazian       | 1112 | Fiji             | 1620 | Lingala        | 2224 | Sinhalese     | 2919 |
| Afar            | 1111 | Finnish          | 1619 | Lithuanian     | 2230 | Slovak        | 2921 |
| Afrikaans       | 1116 | French           | 1628 | Macedonian     | 2321 | Slovenian     | 2922 |
| Albanian        | 2927 | Frisian          | 1635 | Malagasy       | 2317 | Somali        | 2925 |
| Amharic         | 1123 | Galician         | 1722 | Malay          | 2329 | Spanish       | 1529 |
| Arabic          | 1128 | Georgian         | 2111 | Malayalam      | 2322 | Sundanese     | 2931 |
| Armenian        | 1835 | German           | 1415 | Maltese        | 2330 | Swahili       | 2933 |
| Assamese        | 1129 | Greek            | 1522 | Maori          | 2319 | Swedish       | 2932 |
| Aymara          | 1135 | Greenlandic      | 2122 | Marathi        | 2328 | Tagalog       | 3022 |
| Azerbaijani     | 1136 | Guarani          | 1724 | Moldavian      | 2325 | Tajik         | 3017 |
| Bashkir         | 1211 | Gujarati         | 1731 | Mongolian      | 2324 | Tamil         | 3011 |
| Basque          | 1531 | Hausa            | 1811 | Nauru          | 2411 | Tatar         | 3030 |
| Bengali; Bangla | 1224 | Hebrew           | 1933 | Nepali         | 2415 | Telugu        | 3015 |
| Bhutani         | 1436 | Hindi            | 1819 | Norwegian      | 2425 | Thai          | 3018 |
| Bihari          | 1218 | Hungarian        | 1831 | Oriya          | 2528 | Tibetan       | 1225 |
| Breton          | 1228 | Icelandic        | 1929 | Panjabi        | 2611 | Tigrinya      | 3019 |
| Bulgarian       | 1217 | Indonesian       | 1924 | Pashto, Pushto | 2629 | Tonga         | 3025 |
| Burmese         | 2335 | Interlingua      | 1911 | Persian        | 1611 | Turkish       | 3028 |
| Byelorussian    | 1215 | Irish            | 1711 | Polish         | 2622 | Turkmen       | 3021 |
| Cambodian       | 2123 | Italian          | 1930 | Portuguese     | 2630 | Twi           | 3033 |
| Catalan         | 1311 | Japanese         | 2011 | Quechua        | 2731 | Ukrainian     | 3121 |
| Chinese         | 3618 | Javanese         | 2033 | Rhaeto-Romance | 2823 | Urdu          | 3128 |
| Corsican        | 1325 | Kannada          | 2124 | Romanian       | 2825 | Uzbek         | 3136 |
| Croatian        | 1828 | Kashmiri         | 2129 | Russian        | 2831 | Vietnamese    | 3219 |
| Czech           | 1329 | Kazakh           | 2121 | Samoan         | 2923 | Volapük       | 3225 |
| Danish          | 1411 | Kirghiz          | 2135 | Sanskrit       | 2911 | Welsh         | 1335 |
| Dutch           | 2422 | Korean           | 2125 | Scots Gaelic   | 1714 | Wolof         | 3325 |
| English         | 1524 | Kurdish          | 2131 | Serbian        | 2928 | Xhosa         | 3418 |
| Esperanto       | 1525 | Laothian         | 2225 | Serbo-Croatian | 2918 | Yiddish       | 2019 |
| Estonian        | 1530 | Latin            | 2211 | Shona          | 2924 | Yoruba        | 3525 |
| Faroese         | 1625 | Latvian, Lettish | 2232 | Sindhi         | 2914 | Zulu          | 3631 |

# Connections to other equipment

The exact arrangement you use to interconnect various video and audio components to this unit is dependent on the model and features of each component. Check the Owner's Manual provided with each component for the location of video and audio inputs and outputs.

## To connect the LCD TV/DVD to a VCR

### Left side of the unit

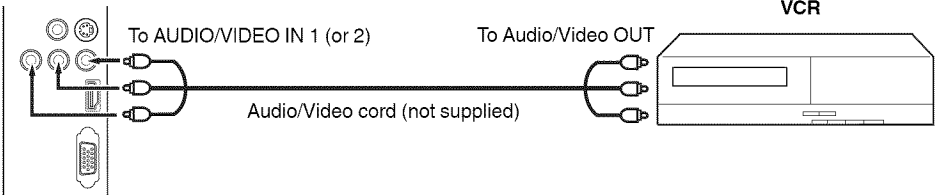


## To connect the LCD TV/DVD to a VCR with an S-Video cord

If you connect a VCR with a S-VIDEO cable to the S-VIDEO IN jack on the rear lower right of the unit, you must also connect the audio cables to the AUDIO IN jacks on the rear lower right of the unit. The S-VIDEO cable only carries the video signal. The audio signal is separate.

### NOTE:

- When the S-video cable and the standard video cable are connected at the same time, the S-video cable takes precedence.


### Left side of the unit

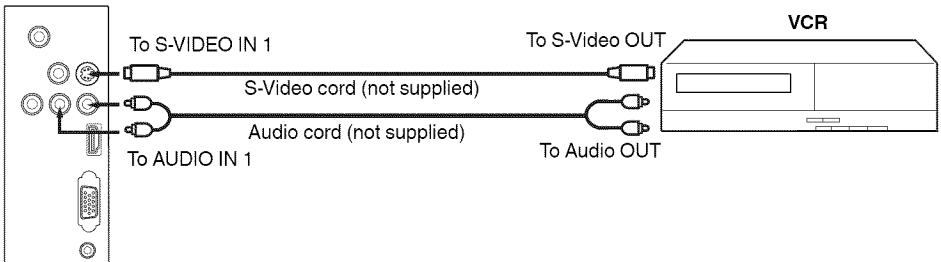

## To connect to a DVD player with Component Video Input

You can enjoy a high quality picture by connecting the unit's COMPONENT VIDEO OUT jacks of your DVD player with the COMPONENT video cables (not supplied).

### Left side of the unit

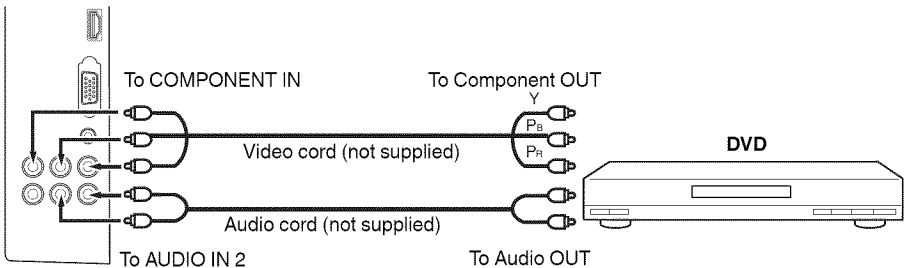

### NOTE:


- Component Video input of the unit are for use with a device which output 480i/1080i interlaced signals and 480p/720p progressive signals.

## To connect a HDMI or a DVI device to the unit

The HDMI input receives digital audio and uncompressed video from a HDMI device or uncompressed digital video from a DVI device.

When you connect to a DVI device with a HDMI-to-DVI adapter cable, it transfers only video signal. Separate analog audio cords required.

### Left side of the unit

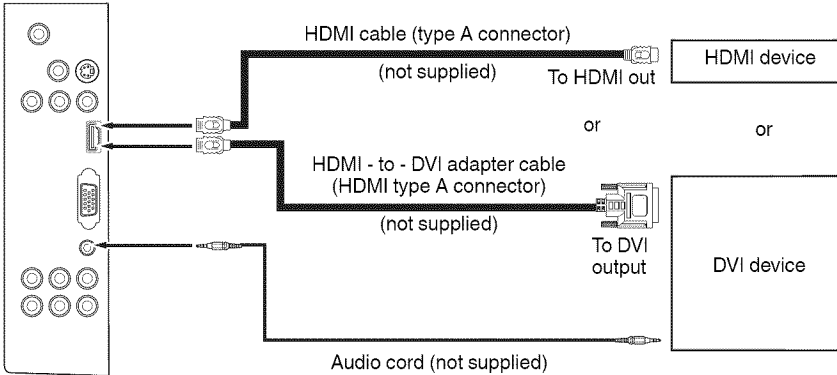


## Using an AV Amplifier with built-in digital surround

If you are using an Amplifier with built-in digital surround sound, you can enjoy various audio systems including Dolby Digital Surround audio that sounds just like the movie.

Connect an AV amplifier with built-in Dolby Digital decoder, DTS decoder, or MPEG decoder etc. as shown below.

### Left side of the unit

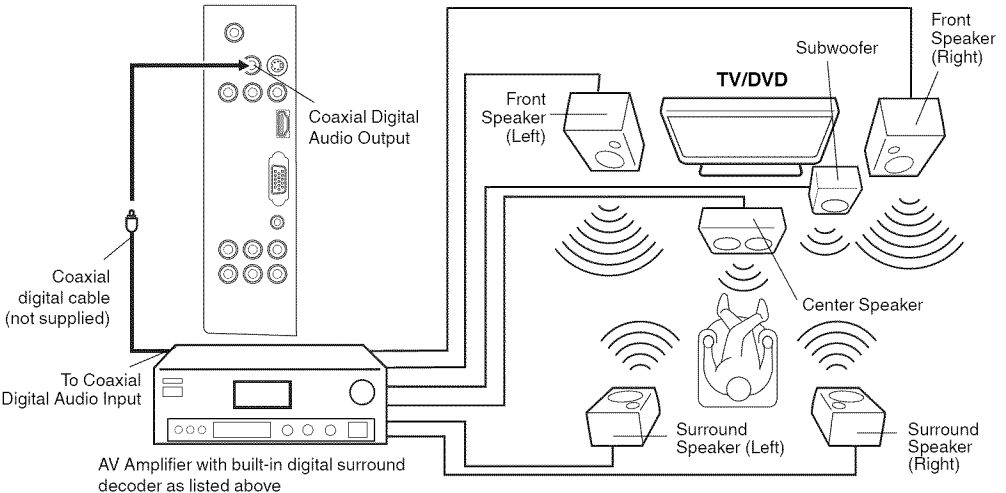

### NOTE:

- This unit will not work in conjunction with DTS audio. There will be no sound output if connected to an AV amplifier with a built-in DTS decoder.
- Coaxial digital audio output is active only when receiving digital broadcasting, not when receiving analog broadcasting.




## To connect the TV/DVD to a camcorder, or a TV Game

To playback from a camcorder, connect the camcorder to the unit as shown.

This unit can also be used as a display device for many video games. However, due to the wide variety of signals generated by these devices and subsequent hook-up variations required, they have not all been included in the suggested connection diagrams. You'll need to consult each component's Owner's Manual for additional information.

### Left side of the unit

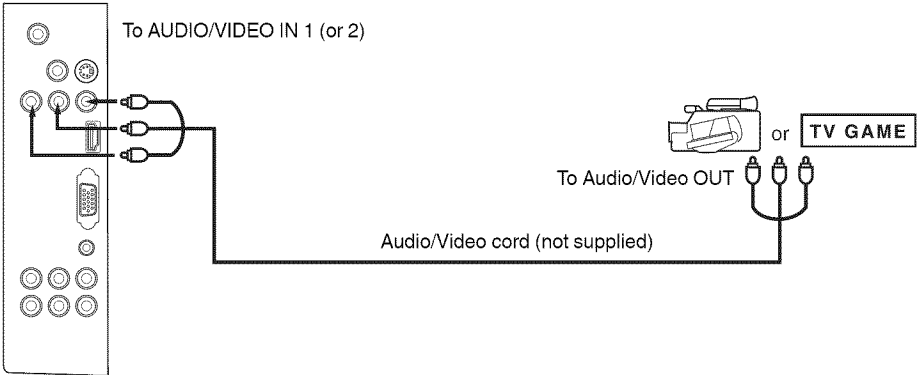

## To connect the TV/DVD to a PC (Personal Computer)


Before you connect this TV/DVD to your PC, change the adjustment of your PC's Resolution and Refresh rate (60 Hz).

Connect one end of a (male to male) VGA cable to the video card of the computer and the other end to the VGA connector PC MONITOR on the back of the TV/DVD. Attach the connectors firmly with the screws on the plug. In case of a Multimedia computer, connect the audio cord to the audio output of your Multimedia computer and to the AUDIO connector of the PC/HDMI AUDIO IN jacks of the TV/DVD.

Press **INPUT SELECT** on the remote control to select PC mode.

Switch on the computer. The TV/DVD can operate as the computer monitor.

### Left side of the unit

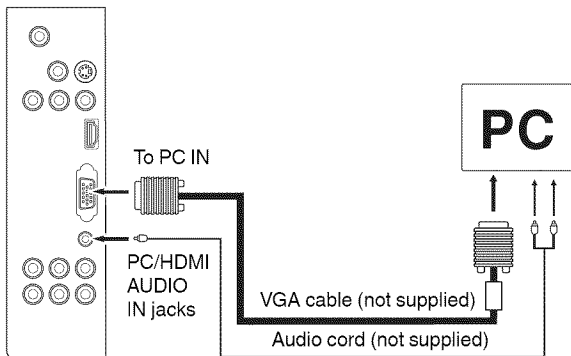

### Monitor Display modes

| MODE | Resolution | Refresh rate |
|------|------------|--------------|
| VGA  | 640x480    | 60Hz         |
| VGA  | 720x400    | 70Hz         |
| SVGA | 800x600    | 60Hz         |
| XGA  | 1024x768   | 60Hz         |
| WXGA | 1280x768   | 60Hz         |
| WXGA | 1280x720   | 60Hz         |
| WXGA | 1360x768   | 60Hz         |

**To return to normal mode**  
Press **INPUT SELECT** again.

### NOTE:

- The on-screen displays will have a different appearance in PC mode than in TV mode.
- If there is no video signal from the PC when the unit is in PC mode, "NO SIGNAL" will appear on the TV-screen.


# Reception disturbances

---

Most types of television interference can be remedied by adjusting the height and position of the VHF/ UHF antenna. Outdoor antennas are recommended for best results. The most common types of television interference are shown below. If one of these symptoms appear when the TV is connected to a Cable TV system, the disturbance may be caused by the local Cable TV company broadcast.

## IGNITION

Black spots or horizontal streaks may appear, the picture may flutter or drift. Usually caused by interference from automobile ignition systems, neon lamps or AC powered tools and appliances such as drills or hair dryers.

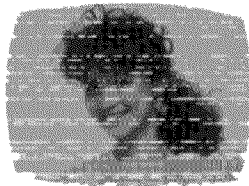


## GHOSTS

Ghosts are caused by the television signal following two paths. One is the direct path and the other is reflected by tall buildings, hills or other large objects. Changing the direction or position of the antenna may improve the reception.




## SNOW

If the TV is located far from the TV station, in a fringe reception area where the signal is weak, small dots may appear in the picture. If the signal is extremely weak, the installation of a larger external antenna may be necessary.

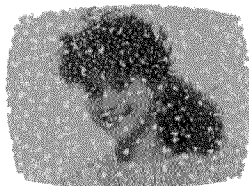

## RADIO FREQUENCY INTERFERENCE (RFI)

Caused by two-way radios, this type of interference produces moving ripples or diagonal streaks in the picture. Some cases may cause a loss of contrast in the picture. Changing the direction and position of the antenna or installing an RFI filter may improve the picture.

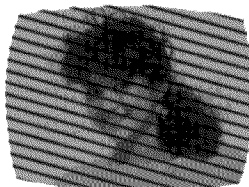

## PICTURE SIZE VARIATION

A slight picture size variation is normal when you adjust the CONTRAST or BRIGHTNESS settings.



## CARE AND MAINTENANCE

To prevent fire or shock hazard, disconnect the TV from the power source before cleaning. The finish on the cabinet may be cleaned with mild soap and a soft, damp cloth and cared for as other furniture. Use caution when cleaning or wiping the plastic parts.

# Problems and troubleshooting

Use the following check list for troubleshooting when you have problems with your TV/DVD. Consult your local dealer or service outlet if problems persist.

Be sure all connections are properly made when using with other units.

| SYMPTOMS                               | POSSIBLE SOLUTIONS  | PAGE                           |
|--|---|--------------------------------|
| <b>POWER</b>                           |   |                                |
| TV/DVD does not operate.               | <ul style="list-style-type: none"> <li>• Make sure the power cord is plugged in.</li> <li>• Power is off, check fuse or circuit breaker.</li> <li>• Unplug unit, then plug it back in.</li> </ul>   | 12                             |
| <b>TV BROADCAST RECEPTION</b>          |   |                                |
| Poor sound or no sound.                | <ul style="list-style-type: none"> <li>• Station or Cable TV experiencing problems, tune to another station.</li> <li>• Check Volume adjustments.</li> <li>• Check for sources of possible interference.</li> </ul>   | 19<br>19, 20<br>62             |
| Poor picture or no picture.            | <ul style="list-style-type: none"> <li>• Station or Cable TV experiencing problems, tune to another station.</li> <li>• Check antenna or Cable TV connections, reorient antenna.</li> <li>• Check for sources of possible interference.</li> <li>• Check picture control adjustments.</li> </ul>  | 19<br>13, 14<br>62<br>31       |
| Poor reception on some channels.       | <ul style="list-style-type: none"> <li>• Station or Cable TV experiencing problems, tune to another station.</li> <li>• Station signal is weak, reorient antenna to receive stronger station.</li> <li>• Check for sources of possible interference.</li> </ul>   | 19<br>13<br>62                 |
| Poor color or no color.                | <ul style="list-style-type: none"> <li>• Station or Cable TV experiencing problems, tune to another station.</li> <li>• Make sure channels are set into memory.</li> <li>• Check picture control adjustments.</li> <li>• Check antenna or Cable TV connections, reorient antenna.</li> <li>• Check for sources of possible interference.</li> </ul> | 19<br>17<br>31<br>13, 14<br>62 |
| Picture wobbles or drifts.             | <ul style="list-style-type: none"> <li>• Station or Cable TV experiencing problems, tune to another station.</li> <li>• Make sure channels are set into memory.</li> <li>• Cable TV company is scrambling signal.</li> <li>• Check antenna orientation.</li> </ul>  | 19<br>17<br>–<br>13            |
| No Cable TV reception.                 | <ul style="list-style-type: none"> <li>• Check all Cable TV connections.</li> <li>• Set Tuning Band option to the "Cable" mode.</li> <li>• Station or Cable TV system problems, try another station.</li> </ul>   | 14<br>16<br>19                 |
| Horizontal or diagonal bars on screen. | <ul style="list-style-type: none"> <li>• Check antenna connections, reorient antenna.</li> <li>• Check for sources of possible interference.</li> </ul>   | 13<br>62                       |
| No reception above channel 13.         | <ul style="list-style-type: none"> <li>• Make sure Tuning Band option is in the appropriate mode.</li> <li>• If using antenna, check UHF antenna connections.</li> </ul>  | 16<br>13                       |
| TV shuts off.                          | <ul style="list-style-type: none"> <li>• No broadcast on station tuned.</li> <li>• Sleep Timer is set.</li> <li>• Power interrupted.</li> </ul>   | 19<br>21<br>–                  |
| Closed - Caption is not activated.     | <ul style="list-style-type: none"> <li>• TV station experiencing problems or program tuned is not closed captioned. Try another channel.</li> <li>• Check Cable TV connection or VHF/UHF antenna, reposition or rotate antenna.</li> <li>• Set NTSC CC or ATSC CC "On" in the menu.</li> </ul>  | 19<br>13, 14<br>27             |
| Display is not shown in your language. | <ul style="list-style-type: none"> <li>• Select proper language in the menu options.</li> </ul>   | 15                             |
| Digital broadcasting screen problem.   | <ul style="list-style-type: none"> <li>• Check digital signal strength.</li> </ul>  | 36                             |

- The LCD panel is a very high technology product, giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

| SYMPTOMS   | POSSIBLE SOLUTIONS  | PAGE          |
|--|---|---------------|
| <b>DVD</b>   |   |               |
| Playback doesn't start.  | <ul style="list-style-type: none"> <li>No disc is inserted.</li> <li>The disc may be dirty. Clean up the disc.</li> <li>The unit cannot play CD-ROMs, etc.</li> </ul>   | 39<br>8<br>8  |
| No picture.  | <ul style="list-style-type: none"> <li>TV/DVD selector is not set correctly.</li> </ul>   | 38            |
| No sound.  | <ul style="list-style-type: none"> <li>Check the input selector of the amplifier is set properly.</li> <li>The unit is in the Special playback mode.</li> <li>Select the correct Audio Output position on AV amplifier.</li> </ul>  | –<br>40<br>60 |
| Picture is distorted during CUE or REVIEW.   | <ul style="list-style-type: none"> <li>The picture will be distorted occasionally.</li> </ul>   | –             |
| Stopping playback, search, slow-motion play, repeat play, or program play, etc. cannot be performed. | <ul style="list-style-type: none"> <li>Some discs may not allow some functions.</li> </ul>  | –             |
| No 4:3 (16:9) picture.   | <ul style="list-style-type: none"> <li>The setup does not match your TV.</li> </ul>   | 29, 30, 52    |
| No on-screen display.  | <ul style="list-style-type: none"> <li>Select Display On.</li> </ul>  | 52            |
| No surround sound.   | <ul style="list-style-type: none"> <li>The setup does not match your stereo system.</li> </ul>  | 60            |
| The unit or remote operation key is not functioning.   | <ul style="list-style-type: none"> <li>Turn off the unit and unplug the AC power cord for several minutes, then replug it.</li> </ul>   | 15            |
| Playback does not start when the title is selected.  | <ul style="list-style-type: none"> <li>Check the RATING LEVEL setup.</li> </ul>   | 55, 56        |
| Audio soundtrack and/or subtitle language is not changed when you play back a DVD.                   | <ul style="list-style-type: none"> <li>Multilingual language is not recorded on the DVD disc.</li> </ul>  | 49            |
| No subtitle.   | <ul style="list-style-type: none"> <li>Some discs have no subtitles.</li> <li>Subtitles are cleared. Press SUBTITLE.</li> </ul>   | 49            |
| Angle cannot be changed.   | <ul style="list-style-type: none"> <li>Multi-angles are not recorded on the DVD disc.</li> </ul>  | 50            |
| "X" appears on the screen.   | <ul style="list-style-type: none"> <li>The function is prohibited with the unit or the disc.</li> </ul>   | 39            |
| <b>REMOTE CONTROL</b>  |   |               |
| The remote control does not function.  | <ul style="list-style-type: none"> <li>Aim at the remote control at the remote sensor.</li> <li>Operate within Approx. 5 Meters or reduce the light in the room.</li> <li>Clear the path of the beam.</li> <li>The batteries are weak. Replace the batteries.</li> <li>Check the batteries are inserted correctly.</li> </ul> | 12            |



FOR CUSTOMER SERVICE, ADDITIONAL SET-UP AND OPERATING ASSISTANCE, OR TO ORDER ACCESSORIES PLEASE CALL:

**1-800-289-0980**

**WHEN CALLING CUSTOMER SERVICE – PLEASE HAVE YOUR MODEL NUMBER READY**

OR WRITE TO:  
**ORION SALES, INC.**  
 3471 N. UNION DR.  
 OLNEY, ILLINOIS 62450

FOR INFORMATION ON OUR OTHER PRODUCTS, OR TO ORDER ACCESSORIES ONLINE, PLEASE VISIT OUR WEBSITE AT  
[www.orionsalesinc.com](http://www.orionsalesinc.com)

# Specifications

## GENERAL

|                        |  |
|------------------------|--|
| Power supply:          | AC 120V 60Hz   |
| Power consumption:     | Operation: 130W<br>Stand by: 1W  |
| Weight:                | 11.2 kg (24.7 lbs)   |
| Dimensions:            | Width: 663 mm (26-1/8 inches)<br>Height: 495 mm (19-1/2 inches)<br>Depth: 211 mm (8-5/16 inches) |
| Operating temperature: | 5°C - 40°C   |
| Operating humidity:    | Less than 80%  |

## TELEVISION

|                        |  |
|------------------------|--|
| Type:                  | 26.01 inches (660.5 mm diagonal)   |
| Display method:        | Transmission TFT color LCD panel   |
| Number of Pixels:      | 1366 (H) x 768 (V)   |
| Viewing angle:         | Left/Right: 80/80 degree<br>Up/Down: 80/80 degree  |
| Tuner type:            | NTSC standard<br>ATSC standard (8VSB), QAM   |
| Receiving channels:    | VHF 2-13<br>UHF 14-69<br>CATV 14-36 (A)-(W)<br>37-59 (AA)-(WW)<br>60-85 (AAA)-(ZZZ)<br>86-94 (86)-(94)<br>95-99 (A-5)-(A-1)<br>100-135 (100)-(135)<br>01 (5A)  |
| Input:                 | S-Video: Y-Input: 1.0 V (p-p), 75 ohms<br>C-Input: 0.3 V (p-p), 75 ohms<br>Video: (RCA) 1 V p-p/75 ohms<br>Audio: (RCA) -8 dBm/50K ohms  |
| Digital audio out:     | 0.5 Vp-p 75 ohms terminated  |
| Component video input: | (Y) 1 V (p-p), 75 ohms<br>(PB)/(PR) 0.7 V (p-p), 75 ohms   |
| HDMI input:            | HDMI compliant (type A connector)<br>HDCP compliant<br>E-EDID compliant<br>Suggested scan rates: 1080i, 480p, 480i, 720p<br>HDMI Audio: 2-channel PCM<br>32/44.1/48 kHz sampling frequency<br>16/20/24 bits per sample |
| PC Monitor input:      | Mini-Dsub 15pin x 1  |
| Antenna input:         | VHF/UHF In 75 ohms coaxial   |
| Speaker:               | 41 mm x 122 mm (1-5/8 inches x 4-13/16 inches), 4 ohms x 2   |
| Audio output power:    | 5.0W + 5.0W  |
| <b>DVD/CD player</b>   |  |
| Signal system:         | NTSC   |
| Applicable disc:       | 1. DVD (12 cm, 8 cm)<br>2. CD (12 cm, 8 cm)  |
| Pickup:                | CD: Wavelength: 790 nm<br>Maximum output power: 7 mW<br>DVD: Wavelength: 655 nm<br>Maximum output power: 5 mW  |
| <b>ACCESSORIES:</b>    | Remote control<br>Batteries (UM-4) x 2<br>AC Cord  |

Designs and specifications are subject to change without notice.

# **SANSUI®** *limited* **WARRANTY**

## LCD TV WITH DVD PLAYER

ORION warrants this product to be free from manufacturing defects in material and workmanship under normal use and conditions for a period of 1 year from date of original purchase in the United States.

Should service be necessary under this warranty for any reason due to a manufacturing defect or malfunction during the first 12 months from date of original purchase, ORION will provide carry-in service by an ORION authorized Independent Service Center at no charge. Also, if an original part fails due to manufacturing defect in material and workmanship within one year from date of original purchase we will replace the defective part, provided the defect or malfunction is verified along with dated proof of purchase.

There are ORION authorized Independent Service Centers located throughout the country. For the one nearest you, DIAL TOLL FREE: 1-800-289-0980 or visit our website at [www.orionsalesinc.com](http://www.orionsalesinc.com). This product is eligible for CARRY-IN service only. ORION will not be liable for damages incurred in shipment of the unit. If there are no ORION authorized Independent Service Centers in your area please call - 1-888-296-7466 for assistance.

Note: This warranty is void if the product is:

- (a) Damaged through negligence, misuse, abuse, or accident.
- (b) Used in a commercial application or rentals.
- (c) Modified or repaired by anyone other than an Independent Service Center authorized by ORION to effect warranty repairs to the class of product or by the ORION Factory Service Center.
- (d) Damaged because it is improperly connected to the equipment of other manufacturers.

This warranty does not cover:

- (a) Damage to video disc.
- (b) Damage to equipment not properly connected to the product.
- (c) Costs incurred in the shipping of the product to an ORION authorized Independent Service Center or ORION Factory Service Center.
- (d) Damage or improper operation of unit caused by customer abuse, misuse, negligence, or failure to follow operating instructions provided with the product.
- (e) Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.
- (f) Signal reception problems caused by external antenna or cable systems.

THIS WARRANTY IS NON TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESS WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED SHALL APPLY TO THIS PRODUCT THEREAFTER. ORION MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE AND USE.

UNDER NO CIRCUMSTANCES SHALL ORION BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATION ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU.

**ORION SALES, INC.**  
3471 N. UNION DR.  
OLNEY, ILLINOIS 62450





J50H0201A SH 07/10 ☐

Printed in Thailand