

Auto Answer Mode

This feature sets the phone to automatically pick up after 5 or 15 seconds. This feature works with the hands-free car kit and headset (sold separately).

To activate this feature:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Settings** and press **MENU/OK**.
 3. Highlight **Others** and press **MENU/OK**.
 4. Highlight **Auto Ans. Car/HS** and press **MENU/OK**.
 5. Select either **5 Seconds** or **15 seconds** and press **MENU/OK**.
- To deactivate this feature, select **Off** during step 5 above.

Setting Flip Options

This feature enables you to answer incoming calls by opening the clamshell so that you don't have to press **TALK** or **SPEAKER**.

To activate this feature:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Settings** and press **MENU/OK**.
 3. Highlight **Others** and press **MENU/OK**.
 4. Highlight **Flip Options** and press **MENU/OK**.
 5. Highlight the menu under **Open** and press **MENU/OK**.
 6. Select **Answer Call** and press **MENU/OK**.
- To deactivate this feature, select **No Action** during step 5 above.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except **MENU/OK**, **END**, **BACK**, side volume key, Ready Link key, and Navigation key).

To activate this feature:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Others** and press **MENU/OK**.
4. Highlight **Any Key Answer** and press **MENU/OK**.
5. Select **On** and press **MENU/OK**.

To deactivate this feature, select **Off** during step 5 above.

Setting Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. If the last four digits you enter do not match any stored phone book entry, the digits are automatically prepended with the digits specified using the following steps.

To activate this feature:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Others** and press **MENU/OK**.
4. Highlight **Abbrev. Dial** and press **MENU/OK**.
5. Select **Enable** and press **MENU/OK**.
6. Enter a six-digit number and press **MENU/OK** or **OK** (left softkey).

If you want to deactivate this feature, select **Disable** during step 5 above.

Tip: If you enter less than 6 digits, the display shows a warning message.

Headset Mode

To set Headset mode:

1. Press to access the main menu.
 2. Highlight **Settings** and press **MENU/OK**.
 3. Highlight **Others** and press **MENU/OK**.
 4. Highlight **Headset Mode** and press **MENU/OK**.
 5. Select **Voice Call** or **Ready Link** and press **MENU/OK**.
- Press **Info** (right softkey) during step 5 above to see the Headset Mode information.
 - To deactivate this feature, select **Off** at the step 5 above.

Setting Side Key Guard

This feature enables you to lock your side key (Ready Link key, Volume keys and Side Call key) while the clamshell is closed.

To activate this feature:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Settings** and press **MENU/OK**.
 3. Highlight **Others** and press **MENU/OK**.
 4. Highlight **Side Key Guard** and press **MENU/OK**.
 5. Select **On** and press **MENU/OK**.
- "Side Key Guard" message appears on the Sub LCD when you press any side key while the clamshell is closed.
 - To deactivate this feature, select **Off** during step 5 above.

Note: This feature does not apply when the clamshell is open.

Sleep Mode

This feature helps conserve your battery power by restricting the display.

To set sleep mode:

1. From Standby mode, press **MENU/OK** to display the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Display** and press **MENU/OK**.
4. Highlight **Sleep Mode** and press **MENU/OK**.
5. Highlight **Main LCD** or **Sub LCD** and press **MENU/OK**.
6. Select your desired option and press **MENU/OK**.

To deactivate this feature, highlight **Off** during step 6 above.

Setting Message Notification

You can see message notification when you receive Text message or Voicemail while you are in PCS applications or Browser mode.

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Messaging** and press **MENU/OK**.
4. Check the box next to **Games/Apps** or **Browser** and press **Save** (left softkey).
 - Press **Info** (right softkey) during step 4 above to see the Messages information.

Changing the Menu Language

When you first turn your phone on, the menus are displayed in English.

To change the menu language to Spanish, follow these steps.

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Others** and press **MENU/OK**.
4. Highlight **Language** and press **MENU/OK**.
5. Select **Español** and press **MENU/OK**.

Setting Your Phone's Security

Accessing the Security Menu

You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Security** and press **MENU/OK**.
4. Enter lock code.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or PCS Phone Number or try 0000.

Locking Your Phone

When your phone is locked, your phone allows you to restrict the incoming calls and make calls except 911 and special numbers.

To lock your phone:

1. From the Security Menu display (See "Accessing the Security Menu" on page 31), highlight **Lock Phone** and press **MENU/OK**.
2. Highlight **Lock now** or **On Power-up** and press **MENU/OK**.
3. Depending on your preference, highlight either **Full Lock** or **Except Incom.Calls** and press **MENU/OK**.
 - **Full Lock:** All phone calls except for Emergency# or Special #s cannot be made. And no phone calls can be received except for Special #s.
 - **Except Incom.Calls.:** All phone calls except for Emergency# or Special #s cannot be made. But all incoming calls can be received.

Tip: If you want to cancel the "On Power-up" setting before turning the phone off, select **Unlocked** during step 2 above.

Unlocking Your Phone

To unlock your phone:

1. From the Locked display, press **Unlock** (left softkey).
2. Enter your lock code.

Changing the Lock Code

To change your lock code:

1. From the Security Menu display (See "Accessing the Security Menu" on page 31), highlight **Others** and press **MENU/OK**.

2. Highlight **Change Lock** and press **MENU/OK**.
3. Enter new lock code, **1234** for example, in the box under **New Code**.
4. Reenter the new lock code in the box under **Reenter Code**.

Calling in Lock Mode

You can place calls to 911 and to your special numbers when in lock mode.

To place an outgoing call in lock mode:

- To call an emergency number or special number, enter the phone number and press **TALK** or **SPEAKER**. (For emergency numbers, see “Calling Emergency Numbers” on page 14).

Restricting Calls

You can restrict both incoming calls and outgoing calls if necessary. (The Restrict Calls setting does not apply to 911).

To restrict calls:

1. From the Security Menu display (See “Accessing the Security Menu” on page 31), highlight **Others** and press **MENU/OK**.
2. Highlight **Limit Use** and press **MENU/OK**.
3. Select the menu under **Outgoing Calls** or **Incoming Calls** and press **MENU/OK**.
4. Highlight your desired option and press **MENU/OK**.

Options:

- **Allow All:** You can make or receive all calls.
- **Phone Book Only:** Only Phone Book entries, Voicemail, or Special #s are available to make or receive calls.
- **Special #s Only:** Only three special numbers’ entries are available to make or receive calls.
- **Note:** To unrestrict all calls, select **Allow All** during step 4 above.

Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

You can save three special numbers in addition to your Internal Phone Book entries (the same number may be in both directories). You can make and receive calls from special numbers even when your phone is locked.

To add or replace a special number:

1. From the Security Menu display (See “Accessing the Security Menu” on page 31), highlight **Others** and press **MENU/OK**.

2. Highlight **Special #s** and press **MENU/OK**.
3. Highlight the box under the entry number and press **MENU/OK**.
4. Enter your desired phone number and press **MENU/OK**.

-or-

Press **Options** (right softkey), then highlight **From Ph. Book** or **Voicemail** and press **MENU/OK**.

To insert pauses into a number:

1. From the step 4 above, enter the phone number and press **Options** (right softkey) for the options.
2. Highlight **Hard Pause**, **2-Second Pause** or **Hyphen**, and press **MENU/OK**.
3. Finish entering the rest of the numbers, and press **MENU/OK**.

Note: During Speed Dial entry, There are no Speed Dial options associated with special numbers.

Erasing the Internal Phone Book

To erase all the names and phone numbers in your Internal Phone Book:

1. From the Security Menu display (See “Accessing the Security Menu” on page 31), highlight **Erase Ph. Book** and press **MENU/OK**.
2. If you're sure you want to erase your Phone Book, highlight **Yes** and press **MENU/OK**.

Erasing the Downloads

To erase all the downloaded data from web:

1. From the Security Menu display (See “Accessing the Security Menu” on page 31), highlight **EraseDownload** and press **MENU/OK**.
 2. If you're sure you want to erase downloaded data from web, highlight **Yes** and press **MENU/OK**.
- If you have assigned downloaded data, the function returns to its default setting.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Internal Phone Book, Call History, Scheduler and Messages are not affected.

To reset your phone:

1. From the Security Menu display (See “Accessing the Security Menu” on page 31), highlight **Reset Phone**, and press **MENU/OK**.

2. If you're sure you want to reset your phone, highlight **Yes** and press **MENU/OK**.

Resetting and Locking Your Phone through SMS

When your phone is lost or stolen, you can erase your important personal information (such as phone book entries, call history and messages) and lock your phone by sending a special formatted SMS message to your phone.

Send the following format from your computer:

\\RESET **<Passcode>**RESET

<Passcode> – your defined passcode.

Default Passcode is 11-digit ESN(Electronic Serial Number) which is written on the package or phone itself.

To activate this feature, the following presetting is required:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Security** and press **MENU/OK**.
4. Enter your lock code.
5. Highlight **Others** and press **MENU/OK**.
6. Highlight **Found Me** and press **MENU/OK**.
7. Highlight **Reset/Lock** and press **MENU/OK**.
8. Select **Enable** and press **MENU/OK**.

To unlock a phone that has been locked through SMS, bring the phone to Customer center.

Changing the Passcode

To change the passcode for the special formatted SMS messages.


1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.
3. Highlight **Security** and press **MENU/OK**.
4. Enter lock code.
5. Highlight **Others** and press **MENU/OK**.
6. Highlight **Found Me** and press **MENU/OK**.
7. Highlight **Chg passcode** and press **MENU/OK**.
8. Enter new passcode in the box under **New Passcode** (11 digits).
9. Reenter the new passcode in the box under **Reenter Code**.

Controlling Your Roaming Experience

Understanding Roaming

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide PCS Network and whether your phone is operating in analog or digital mode. The following chart indicates what you'll see depending on where you're using your phone.

Main LCD	Roaming Indicator
Nationwide PCS Network	
Other/Analog Networks	

Sub LCD	Roaming Indicator	Analog Indicator
Nationwide PCS Network		
Other Digital Networks	Digital Roam	
Analog Networks		Analog Roam

Tip: Remember, when you are using your phone off the Nationwide PCS Network, always dial numbers using 11 digits (1 + area code + number).


Note: You will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on other digital networks, your call quality and security will be similar to the quality you receive when making calls while on the enhanced Nationwide PCS Network. You may not be able to access certain calling features.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some calling features will be unavailable, you can still make and receive calls and access voicemail. You will experience a few differences:

- You are more likely to experience static, cross-talk, fade-out and dropped calls.
- Some calling features, which are standard on the enhanced Nationwide PCS Network, such as Call Waiting PCS products and services and direct international dialing, are unavailable.
- Though callers can leave voicemail messages while you are roaming, you will not receive notification until you return to the Nationwide PCS Network. While roaming, you can periodically check your voicemail for new messages by dialing 1+areacode+your PCS Phone Number. Press  when you hear your greeting

and enter your pass code at the prompt.

- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery needs recharging sooner when you use your phone for analog roaming.

Note: If you're on a call when you leave the Nationwide PCS Network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think PCS Service is available, turn your phone off and on again to reconnect to the Nationwide PCS Network.

Note: When using your phone in analog mode, the handset may feel warm. This behavior is normal for analog operation.

Setting Your Phone's Roam Mode

Your PCS Phone allows you to control your ability to roam. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual band/tri mode phone to control your roaming experience:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Settings** and press **MENU/OK**.
 3. Highlight **Roaming** and press **MENU/OK**.
 4. Highlight **Set Mode** and press **MENU/OK**.
 5. To select an option, select it and press **MENU/OK**.
- **PCS**
 - **Automatic**
 - **Cellular**

Controlling Roaming Charges Using Call Guard

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. This feature makes it easy to manage your roaming charges by reminding you when you make or receive roaming calls. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the enhanced Nationwide PCS Network.

To Turn the Call Guard Feature On or Off:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Settings** and press **MENU/OK**.

3. Highlight **Roaming** and press **MENU/OK**.
4. Highlight **Call Guard** and press **MENU/OK**.
5. Select **On** or **Off** and press **MENU/OK**.

To Place Roaming Calls With Call Guard On:

1. From the Standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Internal Phone Book, Call History or Messaging).
2. Press **TALK** or **SPEAKER** or press **MENU/OK**, highlight **Call** or **Call:Speaker On** and press **MENU/OK**.
3. Press **1** to proceed while the pop-up message is displayed.

-or-

Press any key to erase the pop-up message, then press **MENU/OK**, highlight **Roam Call** or **Roam:Speaker** and press **MENU/OK**.

To Answer Incoming Roaming Calls With Call Guard On:

1. Press **TALK** or **SPEAKER**.
2. Press **1** to proceed while the pop-up message is displayed.

-or-

1. Press **MENU/OK**, highlight **Answer** or **Answer:Speaker** and press **MENU/OK**.

Remember if the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls even if you have selected the **Analog** setting.

Navigating Through Menus

Menu Navigation

The Navigation key on your PCS Phone allows you to scroll through menus quickly and easily.

To navigate through a menu, simply press the Navigation key up or down. As you navigate through the menu, menu options are highlighted. Select an option by highlighting it and pressing **MENU/OK**.

Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing **MENU/OK**.

For example, if you want to view your last incoming call:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Call History** and press **MENU/OK**. (It may already be highlighted).
3. Press the Navigation key down to highlight **Incoming Calls** and press **MENU/OK**.

If you have received any calls, they are displayed on the screen.

Backing Up Within a Menu

To go to the previous menu:

Press **Back**

To go to the Standby display:

Press **END**.

Shortcuts

Left Navigation key (◀) to take a shortcut to the My Shortcut menu.

Right Navigation key (▶) to take a shortcut to the phone book (Find Name).

Up Navigation key (▲) to take a shortcut to the Messaging.

Down Navigation key (▼) to take a shortcut to the Downloads.

Managing Call History

Viewing Call History

You'll find your Call History invaluable. It is a list of the last 20 phone numbers or Internal Phone Book entries for each calls you placed, accepted or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) may only appear once on the list.

To view a Call History entry:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Call History** and press **MENU/OK**.
3. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls** and press **MENU/OK**.

Call History Options

For additional information and options for a particular call, highlight a Call History entry and press **MENU/OK**. This feature gives you the option of selecting:

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number with Speaker Phone mode.
- **Save Phone#** to save the phone number if it is not already in your Internal Phone Book (if applicable) or if the caller's phone number has already been stored in the any Phone Book entry, **Go to Phone Book** appears instead of **Save Phone#**. (See "Saving a Phone Number From Call History" on page 40).
- **Prepend** to add numbers to the beginning of the phone number. (See "Prepending a Phone Number From Call History" on page 41).
- **View** to view the caller's information.
- **Erase** to erase the entry.

Tip: You can also view the next Call History entry by pressing the Navigation key right or view the previous entry by pressing the Navigation key left.

Making a Call From Call History

To place a call from Call History:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Call History** and press **MENU/OK**.
3. Highlight **Outgoing Calls**, **Incoming Calls** or **Missed Calls**.

4. Press **MENU/OK**.
5. Highlight the entry you want to call by scrolling through the list.
6. Press **TALK** or **SPEAKER**.

-or-

Press **MENU/OK**, highlight **Call** or **Call:Speaker On** and press **MENU/OK**.

Note: You cannot make calls from Call History to entries identified as No ID or Restricted.

Saving a Phone Number From Call History

Your PCS Phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of 500 phone numbers and each entry's name can contain 16 characters.

To save a phone number from Call History:

1. Highlight the call history entry you want to save.
2. Press **MENU/OK** to display the options.
3. Highlight **Save Phone#** and press **MENU/OK**.
4. Highlight appropriate label (Home, Work, Mobile, Pager, Data, Fax or No Label), and press **MENU/OK**.
5. Enter a Name, and press **MENU/OK** or **OK** (left softkey). Or you can also save the phone number without a name by pressing **MENU/OK** from the name entry display, highlight **Yes** and then press **MENU/OK**. If you have already stored entries in the Phone Book, you are prompted to select the following entry mode.
 - **New Name** to enter a name directly.
 - **From Ph. Book** to select a name from Phone Book entry list.
6. Press **Save** (left softkey).

Note: You cannot save phone numbers from calls identified as No ID or Restricted. If the selected entry has already been stored in the phone book, "Alternate" appears during step 3 above.

After you have saved the number, the new Internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page 42.)

Prepending a Phone Number From Call History

If you need to make a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. Highlight a call history entry and press **MENU/OK**.
2. Highlight **Prepend** and press **MENU/OK**.
3. Enter the digits you want to add to the number.

If you want to save the number, press **MENU/OK** and select **Save Phone#** from options.

If not, the changes only apply to the current call.

To select an option, highlight it and press **MENU/OK**.

- **Call** to dial the phone number.
- **Call: Speaker On** to dial the phone number with Speaker Phone mode.
- **Save Phone#** to store the phone number in your Internal Phone Book.
- **Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 17).
- **2-Second Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 17).

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 39.

To erase Call History:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Call History** and press **MENU/OK**.
 3. Highlight **Erase History** and press **MENU/OK**.
 4. Highlight the category you want to erase and press **MENU/OK**.
 5. Highlight **Yes** and press **MENU/OK**.
- You can also select **All Calls** at the previous step 4 above to erase all Call History.

Using your Internal Phone Book

Internal Phone Book Entry Options

To access an Internal Phone Book Entry's options, display the entry list, highlight an entry and press **MENU/OK**, then select a phone number and press **Options** (right softkey). To select an option, highlight it and press **MENU/OK**.

- **Edit** to edit your desired label
- **Call** to dial the phone number. (If you are roaming and have the Call Guard feature activated, you are required to take an extra step to proceed. See "Controlling Roaming Charges Using Call Guard" on pages 36-37).
- **Call:Speaker On** to dial the phone number with Speaker Phone mode.
- **Call Alarm** to set the call alarm to the entry.
- **Set Speed Dial** to set the speed dial to the entry.
- **Set Voice Dial** to set the voice dial to the entry.
- **Prepend** to alter a phone number by adding additional numbers.

When you are in edit display the following options are displayed:

- **Send PCS Mail** to send the email. (Only **Email** label)
- **Visit Site** to visit the Web site. (Only **Web** label)
- **Edit** to edit your desired label.
- **Erase** to erase your desired label.

Tip: You can view the next entry by pressing the right Navigation key or view the previous entry by pressing the left Navigation key.

You can erase the selected entry from the Phone Book list.

1. Press the right Navigation key to display the Phone Book list.
2. Press **Options** (Right softkey).
3. Highlight **Erase Entry** and press **MENU/OK**.
4. Highlight **Yes** and press **MENU/OK**.

Selecting a Character Input Mode

Your PCS Phone provides convenient ways to enter words, letters, punctuation and numbers whenever you are prompted to enter text (for example, when adding an Internal Phone Book entry).

To change the character input mode:

1. When you display a screen where you can enter text, press right softkey to display the input mode menu.
2. Highlight your desired mode from **T9 Word**, **Alphabet**, **SYMBOL**, **NUMBER**, **CANNED SUFFIX**, or **SMILEYS** and press **MENU/OK**.

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your PCS Phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on page 43).

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you type). If the word you want does not display after you have entered all the letters, press **Next 0** to scroll through additional word selections. To accept a word and insert a space, press **Space #**.

If you make a mistake, press **Back** to erase a single character. Press and hold **Back** to delete an entire entry.

Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the database:

1. Select the **Alphabet** input mode.
2. Enter the word using multi-tap text entry. (See “Entering Characters by Tapping the Keypad” on pages 44-45). Then press right softkey, highlight **T9 Word** and press **MENU/OK**. The word will appear as an option the next time you scroll through options during T9 Text Input.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 43). Press the corresponding key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

Characters scroll in the following order:

Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	ABC2	abc2
3	DEF3	def3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6	mno6
7	PQRS7	pqrs7
8	TUV8	tuv8
9	WXYZ9	wxyz9
0	0	
#	Space	
*	Unshifted One-character-shifted Caps Lock	

In Spanish mode, characters scroll in the following order.

Key	Spanish Sequence Key	
	Upper Case	Lower Case
1	., @ 1 ¿ ? ¡ ! * # /	
2	AÁBC2	aábc2
3	DEÉF3	deéf3
4	GHIÍ4	ghíí4
5	JKL5	jkl5
6	MNÑOÓ6	mnñoó6
7	PQRS7	pqrs7
8	TUÚÜV8	tuúüv8
9	WXYZ9	wxyz9
0	0	
#	Space	
*	Unshifted One-character-shifted Caps Lock	

See page 30 for changing Spanish entering mode.

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character not on the same key.

Using Smart Punctuation

“Smart punctuation” is available while using in T9 mode. It’s a quick and easy way to type email domains, possessive forms and contractions. When you press **1**, T9 displays a period.

However, as you continue to type, T9 determines the appropriate mark based on your word database.

For example, to type “It’s Easy.”

Press **4** **8** **1** **7** **Space #** **3** **2** **7** **9** **1**.

Tip: The beginning of the word after the space is changed to upper/lower case depending on the entry field. You can change the shift by pressing **Shift ***.

Entering Numbers, Symbols, Canned Suffix and Smileys

Entering NUMBER

To enter numbers, select the **NUMBER** mode and press the appropriate key (see “Selecting a Character Input Mode” on page 43).

1. In a text entry field, press right soft key.
2. Highlight **NUMBER** and press **MENU/OK**.
3. Press the corresponding numeric key to enter the number.

Shortcut: Press and hold the corresponding numeric key to enter the number directly.

Entering SYMBOL

To enter symbols, select the **SYMBOL** mode. (See “Selecting a Character Input Mode” on page 43).

1. In a text entry field, press right soft key.
2. Highlight **SYMBOL** and press **MENU/OK**.
3. Highlight the line that includes your desired symbol.
4. Press the corresponding key (1 ~ 0) with each symbol.

-or-

Highlight your desired symbol by using the Navigation key, and press **MENU/OK**.

Symbol List

1	2	3	4	5	6	7	8
.	-	@	?	!	*	#	'
()	“	:	;	”	^	`
<	>	+	/	\	\$	%	&
[]	=	«	»	_		~
{	}	°	ı	ı	¢	£	§

Entering CANNED SUFFIX

To enter canned suffix, select the **CANNED SUFFIX** mode (see “Selecting a Character Input Mode” on page 43).

1. In a text entry field, press right soft key.
2. Highlight **CANNED SUFFIX** and press **MENU/OK**.
3. Highlight the line that includes your desired smiley.
4. Highlight your desired smiley by using the Navigation key and press **MENU/OK**.

Entering SMILEYS

To enter smile picture, select the **SMILEYS** mode (see “Selecting a Character Input Mode” on page 43).

1. In a text entry field, press right soft key.
 2. Highlight **SMILEYS** and press **MENU/OK**.
 3. Highlight the line that includes your desired smiley.
 4. Press the corresponding key (1~4) with each smiley.
- or-
- Highlight your desired smiley by using the Navigation key and press **MENU/OK**.

Adding a New Internal Phone Book Entry

Your PCS Phone can store up to 300 Internal Phone Book entries. Phone Book entries can store up to a total of 500 phone numbers and the entry's name can contain 16 characters.

To add a new entry:

1. Press **MENU/OK** to access the main menu.
2. Press **MENU/OK** to display the menu options.
3. Highlight **Save Phone#**, and press **MENU/OK**.
4. Highlight your desired label and press **MENU/OK**.
5. Enter a name and press **MENU/OK** or **OK** (left softkey). Or you can also save the

phone number without a name by pressing **MENU/OK** from the name entry display, highlight **Yes** and then press **MENU/OK**. If you have already stored entries in the Phone Book, you are prompted to select the following entry mode.

- **New Name** to enter a name directly.
- **From Ph. Book** to select a name from Phone Book entry list.

6. Press **Save** (left softkey).

-or-

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Phone Book** and press **MENU/OK**.
 3. Highlight **Add New Entry** and press **MENU/OK**.
 4. Enter a name and press **MENU/OK** or **OK** (left softkey).
 5. Select the box under your desired label and press **MENU/OK**.
 6. Enter the number or address and press **MENU/OK**.
 7. Press **Save** (left softkey).
- If you want to store the number without name, press **MENU/OK** or **OK** (left softkey) before you enter the name during step 4 above and select **Yes**.

After you have saved the number, the new Internal Phone Book entry is displayed.

(See "Internal Phone Book Entry Options" on page 42).

Finding Internal Phone Book Entries

There are several ways to display your Internal Phone Book entries. Follow the steps outlined in the sections below to display entries from the Internal Phone Book menu.

Finding Names

You can review all the entries stored in your Internal Phone Book or find an entry quickly by following these simple steps:

1. Press **MENU/OK** to access the main menu.
 2. Highlight **Phone Book** and press **MENU/OK**.
 3. Highlight **Find Name** and press **MENU/OK**.
-
- Press the right Navigation key for the shortcut (steps 1 through 3).
4. To select the entry, scroll through the list using your Navigation key.
 5. Highlight your desired entry and press **MENU/OK** to locate a specific label.
- Press **Options** (right softkey) for the menu options.

Finding Entries

To find an Internal Phone Book entry by its entry first letters:

1. Press the right Navigation key.

2. Enter the first letter of the name or part of a name using multi-tap method.

3. Highlight your desired entry by scrolling through the phone book entry and press **MENU/OK**.

- If you enter a single letter, the display shows the list that begins with that letter.

-or-

1. From the Standby mode, enter 4 digits or more.

2. Press **MENU/OK**.

3. Highlight **Find** and press **MENU/OK**.

4. The phone book entry list that includes the numbers that ends with the digits you entered appears.

5. Scroll through the list to select your desired entry.

6. Press **TALK** or **SPEAKER** to make a call.

Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:

1. Press **MENU/OK** to access the main menu.

2. Highlight **Phone Book** and press **MENU/OK**.

3. Highlight **Speed Dial #s** and press **MENU/OK**.

4. Speed dial numbers list appears.

Finding Voice Dial Numbers

To find phone numbers you have stored in Voice Dial:

1. Press **MENU/OK** to access the main menu.

2. Highlight **Voice Service** and press **MENU/OK**.

3. Highlight **Voice Dial** and press **MENU/OK**.

4. Highlight **Review** or **Review:Speaker** and press **MENU/OK**.

5. Voice Dial number's list appears.

Adding a Phone Number or Address to an Internal Phone Book Entry

To add a phone number or address to an entry:

1. Press **MENU/OK** to access the main menu.

2. Highlight **Phone Book** and press **MENU/OK**.

3. Highlight **Find Name** and press **MENU/OK**.

- Press the right Navigation key for the shortcut (steps 1 through 3).

4. Highlight the entry you wish to add phone numbers/email/web addresses and press **MENU/OK**.

5. Highlight a phone number and press **Options**(right softkey).

Then highlight **Edit** and press **MENU/OK**.

-or-

Highlight an Email address or Web address, then press **Edit** (right softkey).

6. Highlight the box under the label you wish to add.
7. Enter the number or address and press **MENU/OK**.
8. Press **Save** (left softkey).

Editing an Internal Phone Book Entry

To make changes to an entry:

1. Display an Internal Phone Book entry.
2. Highlight the entry you wish to edit and press **MENU/OK**.
3. Select the Phone number and press **Options** (right softkey). Then highlight Edit and Press **MENU/OK**.

-or-

Highlight an Email address or Web address, then press **Edit** (right softkey).

4. Highlight the box under the following labels and edit by using the Number keys.
 - **Name** to change the entry's name. Enter the new name. (See "Entering Characters by Tapping the Keypad" on pages 44-45).
 - **Home** to change the entry's phone number. Enter the new home phone number.
 - **Work** to change the entry's phone number. Enter the new work phone number.
 - **Mobile** to change the entry's phone number. Enter the new mobile phone number.
 - **Pager** to change the entry's pager number. Enter the new pager number.
 - **Data** to change the entry's number for data. Enter the new data number.
 - **Fax** to change the entry's fax number. Enter the new fax number.
 - **No Label** to change the entry's number. Enter the new number.
 - **Email** to change the entry's email address. Enter the new email address.
 - **Web** to change the entry's web address. Enter the new web address.
 - **Ringer** to assign a ringer type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 50).
 - **Image** to assign an image type to the entry. (See "Selecting a Ringer/Image Type for an Entry" on page 50).
5. Press **Save** (left softkey).

Tip: You can also store the phone number in the Pager, Data and Fax Category.

Selecting a Ringer/Image Type for an Entry

You can assign a ringer/image type to an Internal Phone Book entry so you can identify the caller by the ringer or image type.

To select a ringer type for an entry:

1. Press the right Navigation key.
2. Select the entry you want to set the incoming ringer or image, and press **MENU/OK**.
3. Press **Options** (right softkey).
4. Highlight **Edit** and press **MENU/OK**.
5. Select the menu under **Ringer** or **Image** by scrolling up or down and press **MENU/OK**.
6. Highlight your desired ringer type or images and then press **MENU/OK**.
 - **Get New:** Start up a Browser and you can select an item to download.
 - **Normal: Ringer** equivalents to With Caller ID or Roaming setting (see page 19).
Image equivalents to Incoming Calls setting (see page 24).
 - **None:** the setting equivalent to off.
7. Press **Save** (left softkey).
 - To confirm the ringer, highlight **Ringer** and press **Play**(right softkey).
 - To see a display preview, press **Preview** (right softkey)during step 7 above. Then press **Sub LCD**(right softkey) to see the Sub LCD preview.(You may also check the Image through the external display). Use your Navigation key to adjust the position of the image.
 - If you set an Animation Ringer and an Image, your PCS Phone plays the ringer of Animation Ringer and displays the selected Image.

Secret Internal Phone Book Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone number is replaced by "(Secret)."

To make an entry secret:

1. Press the right Navigation key.
2. Scroll to the Internal Phone Book entry you want to tag Secret.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press **MENU/OK**.
5. Enter 4 digits lock code.
6. Select **On** and press **MENU/OK**.
 - To make an entry public, select **Off** during step 6 above.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or PCS Phone Number or try 0000.

Dialing PCS Services

You must be in digital mode to access PCS Services.

To dial a service:

1. Press **MENU/OK** to access the main menu.
2. Highlight **Phone Book** and press **MENU/OK**.
3. Highlight **Services** and press **MENU/OK**.
4. Highlight **Dir Assist**, **Account Info**, or **Voice Command** and press **MENU/OK**.
5. Press **TALK** or **SPEAKER**.

-or-

Press **MENU/OK**, highlight **Call** or **Call: Speaker On** and press **MENU/OK**.

Storing Special Numbers in the Phone Book

Using the Pause Feature

Generally, when you call an automated system like voicemail boxes or credit card companies, you are required to enter a password or calling card number. Rather than entering the numbers manually each time, you can store the numbers in your Internal Phone Book, separated by special characters called "pauses".

Using Two Different Types of Pauses

There are two different types of pauses that you can use when storing a number in your Internal Phone Book.

- **Hard Pauses** cause the phone to stop dialing until you select **Send Tone** or press **TALK** or **SPEAKER**. To display **Send Tone**, press **MENU/OK**, highlight **Send Tone** and press **MENU/OK**.
- **2-Second Pause** waits two seconds before sending the next string of digits.

To insert pauses into a number:

1. Enter the number you want to dial.
2. Press **MENU/OK** to display the menu options.
3. Highlight:
 - **Hard Pause** for a hard pause.
 - **2-Second Pause** for a timed pause.
 - **Hyphen** for a hyphen (see following section).
4. Press **MENU/OK** to insert a pause or manual hyphen.

5. Finish entering the rest of the numbers, then dial or save the entered number. See pages 16-17 for saving.

Using Hyphens

You can add hyphens to your Internal Phone Book numbers, however they are mainly for show. You can insert hyphens manually where you like, or choose automatic hyphenation, which inserts hyphens according to the North American Numbering Plan. Entering a manual hyphen suspends any automatic hyphenation for that number.

Using Different Dialing Methods

Prepend Dialing

Prepend dialing allows you to alter a phone number in your Phone Book by adding additional numbers. For example, if your Internal Phone Book entry was entered without an area code and you are out of town, you can prepend that entry with the appropriate area code.

1. Highlight the phone number stored in Phone Book entry using one of the previously described methods.
2. Press **Options** (right softkey) to display the menu options.
3. Highlight **Prepend**, and press **MENU/OK**.
4. Enter the digits you wish to prepend.
5. Press **TALK** or **SPEAKER**.

-or-

Press **MENU/OK** to display the menu options, then highlight **Call** or **Call:Speaker On** and press **MENU/OK**.

Using Speed Dial

With this feature you can dial Internal Phone Book entries with one key press for locations 2-9. Save your memory locations 2-9 for speed dialing or your most commonly used phone numbers. Speed dial numbers must be stored in your Phone Book to use this feature.

To store a speed dial number:

1. Press the right Navigation key.
2. Highlight the Internal Phone Book entry, which want to set a speed dial number.
3. Press **MENU/OK**.
4. Select the box under the phone number you want to set a speed dial.
5. Press **Options** (right softkey) to display the menu options.