

# SAVANT

## REMOTE QUICK START GUIDE



## THANKS FOR PURCHASING A SAVANT REMOTE. HERE'S HOW TO GET STARTED:

# 1

### DOWNLOAD THE SAVANT APP™

The Savant App is available for Apple and Android devices. Upon download, the app will walk you through the rest of your setup.

If you need additional help, visit [savant.com/support](https://savant.com/support).



Search for Savant in your app store and look for this icon.

# 2

### ENSURE YOUR HOST IS ALREADY SET UP

 
A Savant Host™ is required to connect to the Remote. A solid green light indicates that the Host is connected to your Wi-Fi® network. If you need help setting up your Host, please refer to the Host Quick Start Guide.



# 3

## PLUG IN THE BASE


Insert one end of the micro-USB power cord into the port located at the back of the Remote Base and the other end into the power adaptor, then plug the adaptor into a power outlet. The Base should be located within line of sight of your TV.

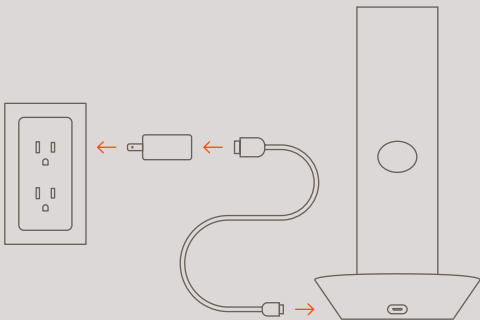

# 4

## CHARGE YOUR REMOTE

 
Place your Remote in the Base. As long as you're nearby, your app should recognize the Remote and will prompt you to connect it to the system. If you do not receive a prompt, tap the + icon in the Devices section of the Savant App.

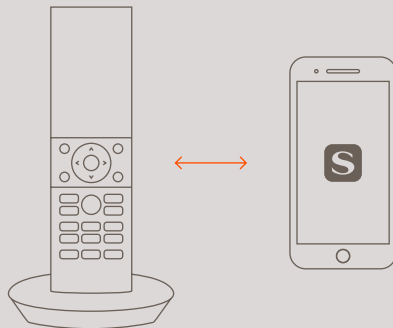

# 5

## PLACE YOUR REMOTE BASE

 
It's best to place the Remote Base in full view and within 30 feet of all your entertainment devices.

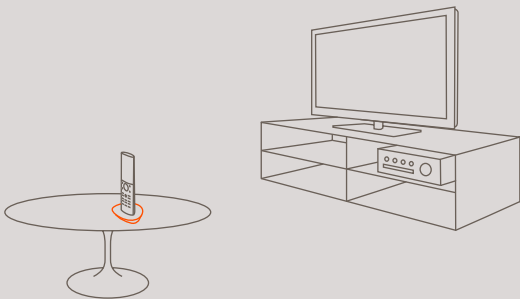

# 6

## PLACE YOUR BLASTER

 If your entertainment devices are out of the line of sight of your Remote Base, you will need to use the included Blaster (included only with Savant Remote + Host package). When devices are on multiple shelves, you will need a Blaster for each shelf. Insert the two AAA batteries to power on the Blaster and place it in front of your devices.

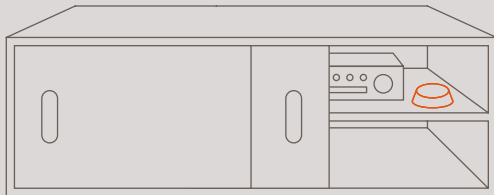

# 7

 
## USE THE APP TO CONFIGURE YOUR REMOTE

Use the Savant App to walk you through the rest of your set up. This will include the connecting of your entertainment devices and a brief voice tutorial.



## GET TO KNOW YOUR REMOTE

The Power button is for turning active entertainment devices off; pressing Power again will turn the devices back on. The Remote will wake up when you lift it out of the Base and will sleep when not in use.

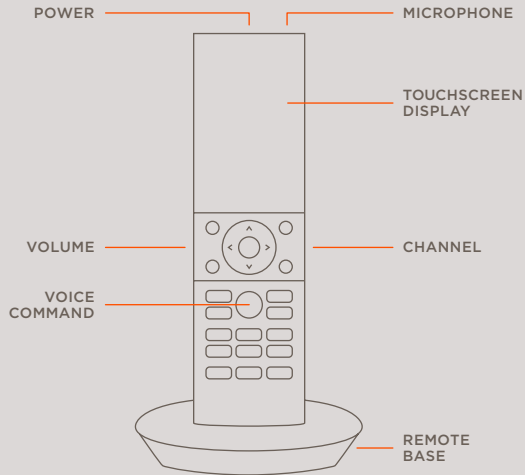



## VOICE COMMAND TIPS

You can use your Remote to activate services, scenes, and environmental controls. To use voice control, press and hold the button with the image of a microphone and speak your command clearly.

A full list of voice commands is available at [savant.com/support](https://savant.com/support).



To watch your Favorites, just say the name of the channel: “Food Network” or “HBO”



To activate a service, say things like “Watch Cable,” “Listen to Sonos,” or “Apple TV”



Adjust your environment by saying things like “Brighter,” “Dimmer,” or “Lights Off”



Activate a Savant Scene like “Movie Time” by saying its name, or say “Capture” to save the settings of current services into a new scene

FOR MORE INFORMATION, TUTORIAL VIDEOS,  
AND FAQ'S, VISIT [SAVANT.COM/SUPPORT](http://SAVANT.COM/SUPPORT)  
OR CALL US TOLL-FREE AT 1-855-5SAVANT

Follow us:   

Savant Systems, LLC. 45 Perseverance Way, Hyannis, MA 02601

© 2015 Savant Systems, LLC. All rights reserved. Savant, Savant App, Savant Host, and the Savant logo are trademarks of Savant Systems, LLC. Android, Google, Google Play, and other Google marks are trademarks of Google Inc. Wi-Fi is a registered trademark of Wi-Fi Alliance®. All other brand names, product names, and trademarks are the property of their respective owners. Product images are simulated and for instructional purposes only. They may differ from the actual products and are subject to change without notice. Savant Systems, LLC reserves the right to change product specifications without notice. Printed in China. Version # 1.0.D



FCC ID: ASU-CRU0100  
IC: 10052A-CRU0100

Part # HDH6B004010