

SEL-3031

Serial Radio Transceiver

Instruction Manual

20091009

SEL SCHWEITZER ENGINEERING LABORATORIES, INC.



*** P M 3 0 3 1 - 0 1 ***

© 2009 by Schweitzer Engineering Laboratories, Inc. All rights reserved.

All brand or product names appearing in this document are the trademark or registered trademark of their respective holders. No SEL trademarks may be used without written permission. SEL products appearing in this document may be covered by US and Foreign patents.

Schweitzer Engineering Laboratories, Inc. reserves all rights and benefits afforded under federal and international copyright and patent laws in its products, including without limitation software, firmware, and documentation.

The information in this manual is provided for informational use only and is subject to change without notice. Schweitzer Engineering Laboratories, Inc. has approved only the English language manual.

This product is covered by the standard SEL 10-year warranty. For warranty details, visit www.selinc.com or contact your customer service representative.

PM3031-01

Table of Contents

List of Tables	iii
List of Figures	v
Preface	vii
Section 1: Introduction and Overview	
Overview	1.1
Features, Benefits, and Applications	1.2
Models, Options, and Accessories	1.2
Product Diagrams	1.4
Specifications	1.7
Section 2: Installation	
Overview	2.1
Connections	2.7
Front-Panel Indicators	2.11
Communications	2.12
Section 3: Job Done Examples	
Overview	3.1
High-Speed Teleprotection or Control With MIRRORING BITS Communications	3.1
Using an SEL Information Processor to Collect Relay Status and Measurements	3.6
Section 4: Settings and Commands	
PC Software	4.1
Settings	4.5
Commands	4.15
Section 5: Performance Monitoring, Testing, and Troubleshooting	
Overview	5.1
Monitoring Radio Performance	5.1
Self-Test	5.5
Troubleshooting	5.6
Appendix A: Firmware and Manual Versions	
Firmware	A.1
Instruction Manual	A.1

Appendix B: SEL-3044 Encryption Card

Overview.....	B.1
NIST FIPS 140-2 Level 2 Security Requirements	B.1
Theory of Operation—SEL Protocol.....	B.2

List of Tables

Table 1.1	Radio Antenna and Cable Accessories	1.3
Table 2.1	Fresnel Zone Diameter	2.3
Table 2.2	900-MHz Frequency Skip Zones.....	2.6
Table 2.3	Length vs. Loss in Coaxial Cables at 900 MHz	2.6
Table 2.4	Default Passwords.....	2.10
Table 2.5	Password Jumper Position	2.10
Table 2.6	Communications Cables for Time and Communications Connections	2.11
Table 2.7	Front-Panel Status Indicator LEDs	2.11
Table 2.8	SEL-3031 Port Description.....	2.12
Table 2.9	SEL-3031 Port Description.....	2.13
Table 4.1	ACSELERATOR QuickSet SEL-5030 Software	4.1
Table 4.2	Device Editor Menus	4.9
Table 4.3	Global Settings	4.11
Table 4.4	Radio Settings.....	4.12
Table 4.5	SKIP Zone Frequencies	4.12
Table 4.6	Port X Settings.....	4.14
Table 4.7	Fixed Port Settings.....	4.15
Table 4.8	DATE Command.....	4.17
Table 4.9	ID Command	4.17
Table 4.10	IRIG Command	4.18
Table 4.11	L_D Command	4.18
Table 4.12	PAS Command.....	4.19
Table 4.13	Factory Default Passwords	4.19
Table 4.14	Valid Password Characters	4.20
Table 4.15	QUIT Command	4.20
Table 4.16	RAD Command	4.21
Table 4.17	SER Command	4.22
Table 4.18	SET Command (Change Settings).....	4.22
Table 4.19	SET Command Editing Keystrokes	4.23
Table 4.20	SHO Command (Show/View Settings).....	4.23
Table 4.21	STA Command (Device Self-Test Status)	4.24
Table 4.22	STA Command Report.....	4.24
Table 4.23	Command Definitions.....	4.25
Table 5.1	Device Self-Tests	5.5
Table 5.2	Troubleshooting Tips	5.6
Table A.1	Firmware Revision History.....	A.1
Table A.2	Instruction Manual Revision History.....	A.1

This page intentionally left blank

List of Figures

Figure 1.1	Product Overview	1.1
Figure 1.2	SEL-3031 Dimensions	1.4
Figure 1.3	SEL-3031 Rack Mount (Front and Rear)	1.5
Figure 1.4	SEL-3031 Wall Mount (Front and Rear)	1.6
Figure 2.1	Fresnel Zone	2.2
Figure 2.2	Antenna Polarization.....	2.5
Figure 2.3	Wall-Mount and Rack-Mount Rear Connections	2.7
Figure 2.4	Two-Wire EIA-485 Connections	2.12
Figure 2.5	EIA-232 and EIA-485 DB-9 Connector Pin Numbers	2.13
Figure 2.6	SEL Cable C245A: SEL-3031 to Computer.....	2.14
Figure 2.7	SEL Cable C285: SEL-3031 to DTE Device (SEL Relays)	2.15
Figure 2.8	SEL Cable C782/C387: SEL-3031 to SEL Communications Processor.....	2.15
Figure 2.9	USB Interface	2.16
Figure 3.1	SEL MIRRORRED BITS Connection Example.....	3.1
Figure 3.2	SEL-3031 Port Settings for MIRRORRED BITS Connection	3.2
Figure 3.3	SEL-351 Port Settings for MIRRORRED BITS Connection	3.3
Figure 3.4	SEL-451 Port Settings for MIRRORRED BITS Connection	3.4
Figure 3.5	SEL-2505 DIP Switch Settings for MIRRORRED BITS Connection	3.5
Figure 3.6	TAR ROKA Command From an SEL-351	3.6
Figure 3.7	SEL-3031 Linking Information Processors to Relays	3.6
Figure 3.8	SEL-3031 Port 1 Settings for Fast Messaging.....	3.7
Figure 3.9	SEL-351 Port Settings for Fast Messaging.....	3.8
Figure 3.10	Example AUTO Command Output.....	3.9
Figure 4.1	Communications Menu	4.2
Figure 4.2	Serial Port Communications Parameters	4.3
Figure 4.3	Terminal Window Menu	4.4
Figure 4.4	Device Response to ID Command.....	4.4
Figure 4.5	Selection of Drivers	4.7
Figure 4.6	Update Part Number	4.8
Figure 4.7	New Setting Screen.....	4.8
Figure 4.8	Status Screen.....	4.10
Figure 4.9	Radio Strength and Channel Availability	4.11
Figure 4.10	RAD Command Response	4.21
Figure 4.11	Device Response to the STATUS Command.....	4.24
Figure 5.1	Example RAD Command	5.2
Figure 5.2	RBAD Generation.....	5.4
Figure B.1	SEL-3044 Encryption Card	B.1
Figure B.2	In-Band Data Packet Format.....	B.4
Figure B.3	Operation of the AES Encryption Function.....	B.5
Figure B.4	Encryption Card Location.....	B.7

This page intentionally left blank

Preface

Manual Overview

The SEL-3031 Serial Radio Transceiver manual includes the information needed to properly install and operate the product.

The scope of this manual includes specifications, installation, mechanical information, self-monitoring, and alarming.

An overview of each manual section and topics follows.

Preface. Describes the manual organization and conventions used to present information.

Section 1: Introduction and Overview. Describes the basic features and functions of the SEL-3031, and lists the specifications.

Section 2: Installation. Describes how to mount and wire the SEL-3031; illustrates wiring connections for various applications.

Section 3: Job Done Examples. Describes common SEL-3031 applications.

Section 4: Settings and Commands. Describes settings and commands for use with the SEL-3031.

Section 5: Performance Monitoring, Testing, and Troubleshooting. Lists common operating and troubleshooting questions.

Appendix A: Firmware and Manual Versions. Details differences between firmware versions. Provides a record of changes made to the manual.

Appendix B: SEL-3044 Encryption Card. Describes how the encryption card operates to secure wireless data. Provides installation information.

Conventions

Safety Information

This manual uses three kinds of hazard statements, formatted as follows:

⚠CAUTION

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury or equipment damage.

⚠WARNING

Indicates a potentially hazardous situation that, if not avoided, **could** result in death or serious injury.

⚠DANGER

Indicates an imminently hazardous situation that, if not avoided, **will** result in death or serious injury.

SEL-3031 Cautions, Warnings, and Dangers

The following hazard statements appear in the body of this manual in English. See the following table for the English and French translation of these statements.

English	French
<p>⚠CAUTION</p> <p>Although the power level is low, concentrated energy from a directional antenna may pose a health hazard. Do not allow users to come closer than 23 cm (9 in) to the antenna when the transmitter is operating in indoor or outdoor environments in the 900-MHz band.</p>	<p>⚠ATTENTION</p> <p>Bien que le niveau de puissance soit bas, l'énergie concentrée d'une antenne directionnelle peut être un danger pour la santé. Ne pas autoriser les usagers à s'approcher à moins de 23 cm (9 po) de l'antenne quand l'émetteur est en opération dans un environnement intérieur ou extérieur dans la bande des 900-MHz.</p>
<p>⚠CAUTION</p> <p>The radio contains devices sensitive to electrostatic discharge (ESD). Undetectable permanent damage can result if you do not use proper ESD procedures. Ground yourself, your work surface, and this equipment before removing any cover from this equipment. If your facility is not equipped to work with these components, contact SEL about returning this device and related SEL equipment for service.</p>	<p>⚠ATTENTION</p> <p>La radio contient des circuits sensibles aux décharges électrostatiques (DES). Des dommages permanents non-décelables peuvent résulter de l'absence de précautions contre les DES. Raccordez-vous correctement à la terre, ainsi que la surface de travail et l'appareil avant d'en retirer un panneau. Si vous n'êtes pas équipés pour travailler avec ce type de composants, contacter SEL afin de retourner l'appareil pour un service en usine.</p>

English	French
<p>⚠WARNING Operator safety may be impaired if the device is used in a manner not specified by SEL.</p>	<p>⚠AVERTISSEMENT La sécurité de l'opérateur peut être compromise si l'appareil est utilisé d'une façon non indiquée par SEL.</p>
<p>⚠WARNING Atmospheric electrical charge accumulation can cause potential between the conductor and shield of the feedline, or cause lightning to strike an antenna. A lightning protector should be installed to prevent damage to equipment or injury to personnel.</p>	<p>⚠AVERTISSEMENT L'accumulation de charges électriques de type atmosphérique peut être la cause d'une différence de potentiel entre le conducteur et le blindage de la ligne d'alimentation, ou peut attirer la foudre sur l'antenne. Un parafoudre devrait être installé pour prévenir les dommages à l'équipement ou les blessures au personnel.</p>
<p>⚠WARNING Do not look into the fiber (laser) ports/connectors.</p>	<p>⚠AVERTISSEMENT Ne pas regarder vers l'extrémité des ports ou connecteurs de fibres pour laser.</p>
<p>⚠WARNING Do not look into the end of an optical cable connected to an optical output.</p>	<p>⚠AVERTISSEMENT Ne pas regarder vers l'extrémité d'un câble optique raccordé à une sortie optique.</p>
<p>⚠WARNING This device is shipped with default passwords. Default passwords should be changed to private passwords at installation. Failure to change each default password to a private password may allow unauthorized access. SEL shall not be responsible for any damage resulting from unauthorized access.</p>	<p>⚠AVERTISSEMENT Cet appareil est expédié avec des mots de passe par défaut. A l'installation, les mots de passe par défaut devront être changés pour des mots de passe confidentiels. Dans le cas contraire, un accès non-autorisé à l'équipement peut être possible. SEL décline toute responsabilité pour tout dommage résultant de cet accès non-autorisé.</p>
<p>⚠DANGER Disconnect or de-energize all external connections before opening this device. Contact with hazardous voltages and currents inside this device can cause electrical shock resulting in injury or death.</p>	<p>⚠DANGER Débrancher tous les raccordements externes avant d'ouvrir cet appareil. Tout contact avec des tensions ou courants internes à l'appareil peut causer un choc électrique pouvant entraîner des blessures ou la mort.</p>

This page intentionally left blank

Section 1

Introduction and Overview

Overview

The SEL-3031 is a 900-MHz, license-free, spread-spectrum radio. The radio operates in the ITU Region 2 ISM band of 902–928 MHz using a fast frequency-hopping algorithm for noise immunity and long-distance operation.

The SEL-3031 prevents the need for multiple sets of radios or expensive dedicated fiber transmitting over long distances. *Figure 1.1* shows the flexibility of the SEL-3031 in providing DNP3 SCADA information, MIRRORED BITS® control for reclosing coordination, and engineering access to the SEL-651R Recloser Control.

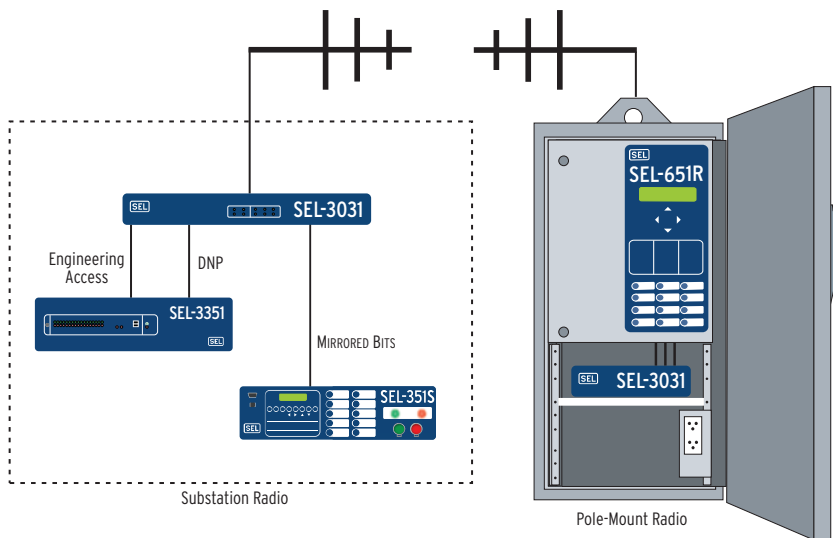


Figure 1.1 Product Overview

Features, Benefits, and Applications

- ▶ **Three Ports in One Radio Reduce Costs.** Simultaneously communicates with up to three independent ports and protocols.
- ▶ **Low Latency Enables Fast Control.** Transfers control commands with a typical 5.5-millisecond latency with SEL MIRRORED BITS® communications.
- ▶ **Strong Security Thwarts Attackers.** Protects critical data and repels malicious attacks with optional encryption card, using session authentication and strong 256-bit Advanced Encryption Standard (AES) technology.
- ▶ **Tough Radio Operates in Extreme Conditions.** Is designed, built, and tested for trouble-free operation in extreme temperature, electromagnetic interference, shock, and vibration conditions.
- ▶ **No Licensing Reduces Delays and Expenses.** Uses the license-free, 900-MHz ISM band for on-time, on-budget projects.
- ▶ **Mounting Options Simplify Installation.** Order your SEL-3031 in one of three different packages: rack-mount, wall-mount, and NEMA 3R prewired radio solution.
- ▶ **Multiple Protocols Satisfy Interconnection Requirements.** Communicate with industry-standardized byte-oriented protocols, such as DNP3, Modbus®, SEL MIRRORED BITS communications, IEEE C37.118 Synchrophasors, SEL Fast Messaging, and SEL ASCII.
- ▶ **Flexible Serial Port Options Match Integration Needs.** Order serial Port 1 as EIA-232, EIA-485, or optical fiber to easily connect to your existing devices.
- ▶ **Simple Settings Streamline Radio Commissioning.** Use ACCELERATOR QuickSet® SEL-5030 Software for all settings.
- ▶ **USB Management Port Conveniently Connects to PC.** Make settings changes, verify status information for proper installation, and verify radio performance without affecting the three serial channels.

Models, Options, and Accessories

Standard Features

- ▶ Three EIA-232 serial ports
- ▶ IRIG-B time code input

- Power supply
 - Wall mount: 9–30 Vdc
 - Rack mount: 24–48 Vdc, 125/250 Vac or Vdc
- ACSELERATOR QuickSet software
- Protocol pass-through support
 - DNP3
 - Modbus
 - SEL MIRRORED BITS
 - SEL Fast Messaging
 - SEL ASCII
 - IEEE C37.118 Synchrophasors

Optional Features

- One port EIA-485
- One port fiber-optic (SEL-2812-compatible)
- SEL-3044 Encryption Card

Accessories

Table 1.1 Radio Antenna and Cable Accessories

Description	Part Number
Feed Line	
RG-8 TNC to N Connector	C964
RG-8 TNC to TNC	C965
LMR-400 TNC to N Connector	C966
LMR-400 TNC to TNC	C961
Antenna	
Three-element 8.5 dBi Yagi, N Connector	235-0221
Five-element 11.1 dBi Yagi, N Connector	235-0220
Vertical 2.15 dBi Gain Omni-directional, N Connector	235-0231
Surge Protection	
Gas Tube Coaxial Surge Protector, TNC Connector	915900139

Product Diagrams

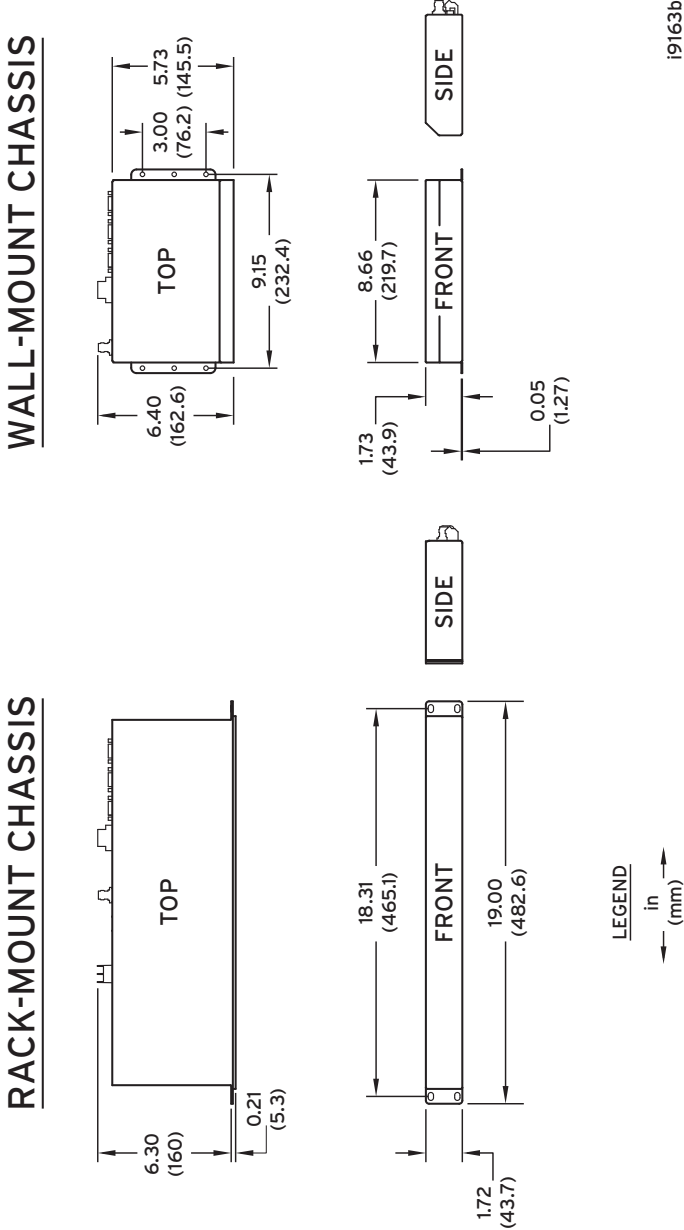


Figure 1.2 SEL-3031 Dimensions

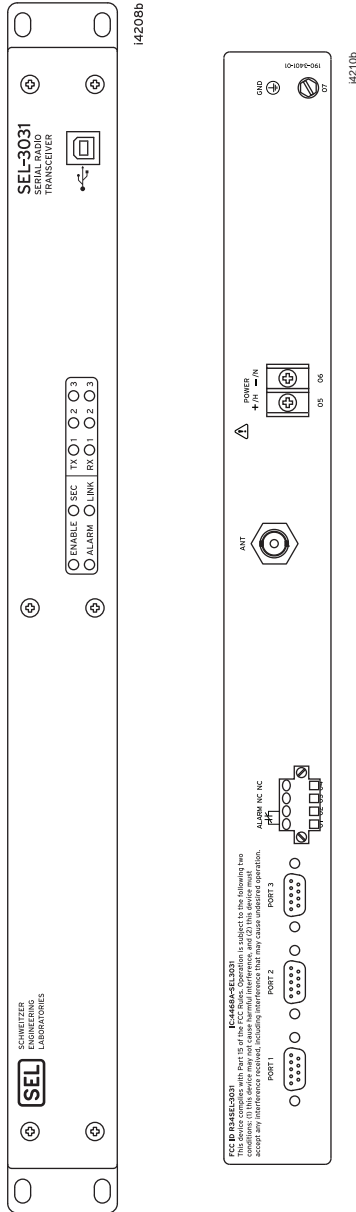


Figure 1.3 SEL-3031 Rack Mount (Front and Rear)

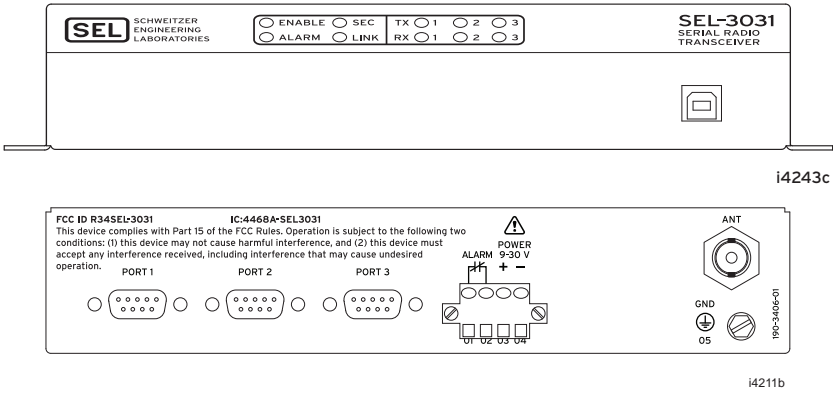


Figure 1.4 SEL-3031 Wall Mount (Front and Rear)

Specifications

General

Temperature Range

-40° to +85°C per IEC 60068-2-1 and 60068-2-2

Operating Environment

Pollution Degree:	2
Relative Humidity:	5–95%, noncondensing
Maximum Altitude:	2000 m

Dimensions

Wall Mount:	43.9 mm x 219.7 mm x 162.6 mm (1.73 in x 8.66 in x 6.40 in)
Rack Mount:	43.7 mm x 482.6 mm x 160.0 mm (1.72 in x 19.00 in x 6.3 in)

Time-Code Input

Port 2, Pins 4 and 6

Format:	Demodulated IRIG-B
Input Impedance:	333 Ω
Accuracy:	± 5 milliseconds

Alarm Contact

Form B Contact

(open when energized and passes diagnostics)

Operating Voltage:	250 Vdc or 190 Vac
Dielectric Test Voltage:	500 Vrms
Continuous Carry:	6 A

Communications

Communications Ports

Serial Port 1:	EIA-232, EIA-485 (ordering option) SEL-2812 Fiber-Optic Port (ST connectors) Data Speed: 19200 bps; 9600 bps with encryption card
Serial Port 2, 3:	Standard EIA-232 Data Speed: 19200 bps; 9600 bps with encryption card

Protocols Supported

Modbus, DNP3, SEL MIRRORING BITS Communications (MB8), ACSELERATOR QuickSet SEL-5030 Software Support, SEL ASCII and Compressed ASCII, SEL Fast Messaging, IEEE C37.118 Synchrophasors

Radio Latency

SEL-3031

MIRRORED BITS:	5.5 ms typical
Standard:	4 ms typical

SEL-3031 With SEL-3044 Encryption Card

MIRRORED BITS:	16 ms typical
Standard:	15 ms typical

Radio

Transmitter

Frequency Band:	902–928 MHz ISM band
Modulation:	GFSK
Operating Mode:	Point-to-Point
RF Connector:	TNC
Power Output:	1 W (30 dBm) to 100 mW (20 dBm) in steps of 1 dBm
Channel Bandwidth:	250 kHz

Specifications**Receiver**

Sensitivity:	-97 dBm
Bit Error Rate (BER):	<10 ⁻⁶ at -97 dBm
Distance:	20 miles, line of sight
Error Detection:	32-bit CRC (MB8 mode)

Power Supply**Rated Supply Voltage**

Wall-Mount Model:	12/24 Vdc
Low-Voltage Model:	24/48 Vdc
High-Voltage Model:	125/250 Vdc 110/240 Vac, 50/60 Hz

Input Voltage Range

Wall-Mount Model:	9-30 Vdc
Low-Voltage Model:	18-60 Vdc
High-Voltage Model:	85-275 Vdc; 85-264 Vac

Power Consumption

Wall Mount:	< 5 W
Rack Mount:	< 7 W

Type Tests**Communications Equipment Tests**

IEEE 1613-2003

Environmental Tests

Enclosure Protection:	IEC 60529:2001
Vibration Resistance:	IEC 60255-21-1:1988 Class 1 Endurance, Class 2 Response IEC 60255-21-3:1993 Class 2
Shock Resistance:	IEC 60255-21-2:1988 Class 1 shock withstand, bump, Class 2 shock response
Cold:	IEC 60068-2-1:2007 -40°C, 16 hours

Damp Heat, Cyclic: IEC 60068-2-30:2005
25-55°C, 6 cycles, 95% relative humidity

Dry Heat: IEC 60068-2-2:2007
+85°C, 16 hours

Dielectric Strength and Impulse Tests

Dielectric (HiPot):	IEC 60255-5:2000 IEEE C37.90-2005
Impulse:	IEC 60255-5:2000 0.5 J, 5 kV

RFI and Interference Tests**EMC Immunity**

Standard: IEEE 1613, Class 2

Electrostatic Discharge: IEC 61000-4-2:2008
Severity Level 4
8 kV contact discharge
15 kV air discharge
IEEE C37.90.3-2001
Severity Level 4
8 kV contact discharge
15 kV air discharge

Radiated RF Immunity: IEC 61000-4-3:2008
10 V/m
IEEE C37.90.2-2004
35 V/m

Fast Transient, Burst Immunity: IEC 61000-4-4:2004
4 kV @ 2.5 kHz, and 5.0 kHz for communications ports, power supply, alarm contacts

Surge Withstand Capability Immunity: IEC 60255-22-1:2007
2.5 kV common-mode,
1 kV differential-mode
IEEE C37.90.1-2002
2.5 kV oscillatory, 4 kV fast transient for communications ports, power supply, alarm contacts

Conducted RF Immunity: IEC 61000-4-6:2008
10 Vrms

Digital Radio Telephone RF Immunity: ENV 50204-1995
Severity Level 10 V/m at 900 MHz and 1.89 GHz

EMC Emissions

Radiated Emissions

FCC Part 15.247; ICES-001; RSS-210

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15, Class A; ICES-003

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Section 15.21

Users manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Certifications

ISO: Equipment designed and manufactured using ISO 9001-certified quality program.

FCC ID: R34SEL - 3031

IC: 4468A - SEL3031

This page intentionally left blank

Section 2

Installation

Overview

RF Exposure Notice

RF EXPOSURE The SEL-3031 transmitter module is approved for use only with specific antenna, cable, and output power configurations that have been tested and approved for use. Modifications to the SEL-3031, the antenna system, or to the power output that have not been explicitly specified by the manufacturer are not permitted and may render the radio non-compliant with applicable regulatory authorities. The radio equipment described in this manual emits radio frequency energy. Professional installation is required. The antenna(s) for this transmitter must not be colocated or operated in conjunction with any other antenna or transmitter.



⚠ CAUTION

Although the power level is low, concentrated energy from a directional antenna may pose a health hazard. Do not allow users to come closer than 23 cm (9 in) to the antenna when the transmitter is operating in indoor or outdoor environments in the 900-MHz band.

FCC Part 15 Notice

NOTE: Operation is subject to the following two conditions:
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for Class A digital devices, pursuant to FCC Part 15 Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and radiates radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential environment is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

Radio Path

Spread-spectrum radios operating in the 900-MHz ISM band are limited by line-of-sight. Radio line-of-sight is longer than optical line-of-sight, due to the bending of the radio wave toward the surface of the earth. This radio horizon is typically 30% longer than the visual horizon. The longer the communications path, the taller the antennas must be in order to maintain the line-of-sight.

Obstructions in the line-of-sight will impact the performance of the radio, as the strongest radio signal is communicated directly along the radio line-of-sight.

The line-of-sight between two antennas is shaped like an ellipse (called the Fresnel zone). The point exactly halfway between the two antennas is the widest part of the ellipse, as shown in *Figure 2.1*. At 900 MHz and 1000 feet apart, the Fresnel zone is 16 feet in diameter. At 20 miles apart, it is 170 feet in diameter. Anything within the Fresnel zone will obstruct and reduce signal strength and availability (the ground, buildings, vegetation, etc.). *Table 2.1* depicts the maximum Fresnel zone diameter and path loss for some typical path distances.

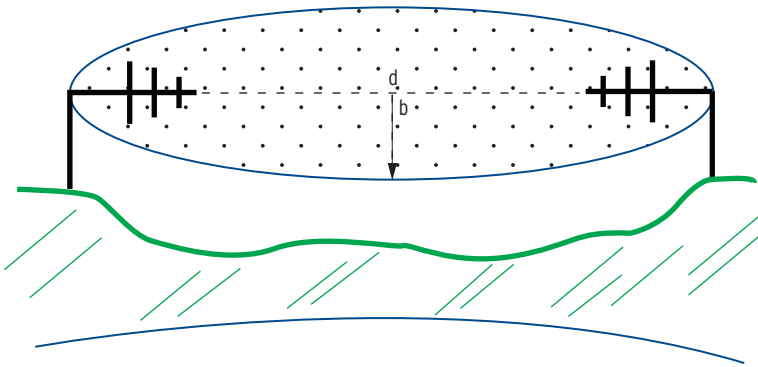


Figure 2.1 Fresnel Zone

The formula used to calculate the widest distance of the Fresnel zone is as follows:

$$b = 17.32 \sqrt{d / (4f)}$$

where:

b = radius of the Fresnel zone in meters

d = distance between transmitter and receiver in kilometers

f = frequency transmitted in GHz

Table 2.1 Fresnel Zone Diameter

900 MHz		
Distance Between Antennas	Fresnel Zone Diameter	Freespace Loss (dB)
300 m (1000 ft)	5 m (16 ft)	81
1.6 km (1 mi)	11.6 m (38 ft)	96
8 km (5 mi)	26 m (85 ft)	110
16 km (10 mi)	36.6 m (120 ft)	116
24 km (15 mi)	44.8 m (147 ft)	119
32 km (20 mi)	51.8 m (170 ft)	122
40 km (25 mi)	60 m (190 ft)	124

Obstructions in the Fresnel zone may also cause multipath interference due to reflective or refractive signals that may arrive at the receiver out-of-phase with the desired signal. The Fresnel zone should be 60% clear of obstructions for reliable radio communications. Large objects outside the Fresnel zone can cause reflections that may also affect reliable radio operation.

Transmitted Signal

According to FCC and IC, the maximum transmitted power allowed out of an antenna is 36 dBm EIRP (Equivalent/Effective Isotropically Radiated Power). This is the amount of equivalent power transmitted equally in all directions using a theoretical isotropic antenna. EIRP takes into account the power output of the radio, line feed losses, and the gain of the antenna.

$$\text{EIRP} = \text{SEL-3031 Power Output (dBm)} - \text{line-feed loss (dB)} + \text{antenna gain (dBi)}$$

Calculate the EIRP so you can set the proper output power on the SEL-3031 to stay in compliance with FCC and IC regulations; maximum power output from the antenna must not exceed 36 dBm. The SEL-3031 can transmit up to 1 W or 30 dBm from the antenna port. If the calculated EIRP exceeds 36 dBm then you must reduce the power transmitted by the radio by reducing the transmit power setting TXPWR (see the TXPWR description in *Radio Settings on page 4.12* for more information). The radio is shipped with 30 dBm default and can be reduced to 20 dBm. Look up feedline loss in [Table 2.3](#).

Antenna/feedline configurations with net gains (antenna gain minus cable loss) greater than 8.0 dBi must have their output power limited to 341 mW. After setting the transmit power, measure the actual power.

NOTE: This device has been designed to operate with the antennas listed in [Table 1.1](#), and having a maximum gain of 11.1 dBi. Antennas not included in this list or having a gain greater than 11.1 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms. Antennas having a gain of greater than 6 dB must use a

feed line with enough loss to remain compliant with the maximum 36 dBm EIRP or reduce the radio transmitted power accordingly.

For example, if you wanted to design a radio system to achieve a 32-km (20-mile) radio path and run at the highest allowed transmitted power, one way would be to use the SEL-3031 with 15 meters (50 feet) of LMR 400, lightning arrestor, and the 5-Element Yagi with 11.1 dBi of gain. The radio would transmit 30 dBm, the feedline loss is 1.95 dB, lightning arrestor loss is 0.15 dB, and the antenna gain is 11.1 dBi. The result would be 39 dBm, which is 3 dBm higher than allowed by the FCC. You must reduce the radio's transmit power setting TXPWR to 27 dBm. This would make your EIRP equal to 36 dBm. After setting the transmit power, measure the actual power.

NOTE: To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that permitted for successful communication.

Fade Margin

The fade margin determines the allowable signal loss between the transmitter and receiver. The fade margin is a function of system gains (transmitter power, receiver sensitivity, and antenna gain) and system losses (free space loss, losses due to Earth's curvature, and coaxial cable loss). Variations in temperature and humidity of the atmosphere with elevation causes the signals to bend more or bend less, resulting in fading at the receiver. The longer the path, the more likely deep fades will occur, requiring a greater fade margin. The formula to calculate free-space loss is shown below.

$$\text{Free Space Loss} = 92.4 + 20\log(f) + 20\log(d) \text{ dB}$$

where:

f = frequency in GHz
 d = distance in km

Regional conditions also impact the probability of signal fade. Generally, mountainous terrain is more favorable, while tropical areas and those near large bodies of water are less favorable. One of the results from a site survey is the fade margin. A fade margin of 20 dB will yield good radio performance.

Site Survey

A line-of-sight path provides the most reliable transmission in all cases. As the distance increases the need for a clear path becomes more critical in creating a reliable, available radio link. If the radio path is short then a path study may not be needed. If you have a clear line-of-site to the other location without obstructions to the Fresnel zone (see [Radio Path](#)) then a path study is generally not needed. Longer distances may

require a path study, a visual path inspection, and a spectrum analysis of the area to give a good indication of how high the antenna needs to be and how good the radio link will be.

Radio Interference

The SEL-3031 shares a frequency spectrum with other services and FCC Part 15 (unlicensed) devices in ITU Region 2 (North, Central, and South America). This radio should not be used in Brazil or Chile due to the regulations defining frequency allocation. Error-free communications may not be achievable in a given location, and some level of interference should be expected.

Consider the following points when setting up your system:

- Using directional Yagi antennas helps to narrow the radio path and provide the best path to prevent adjacent interference.
- If you suspect interference from a nearby, licensed system (such as a paging transmitter), it may be helpful to use horizontal polarization for all of the antennas in the network. Horizontal polarization can help improve signal availability but will likely increase the path loss. Horizontal polarization can provide an additional 20 dB of attenuation to interference because most other services use vertical polarization in these bands. *Figure 2.2* demonstrates antenna mounting for both vertical and horizontal polarization.

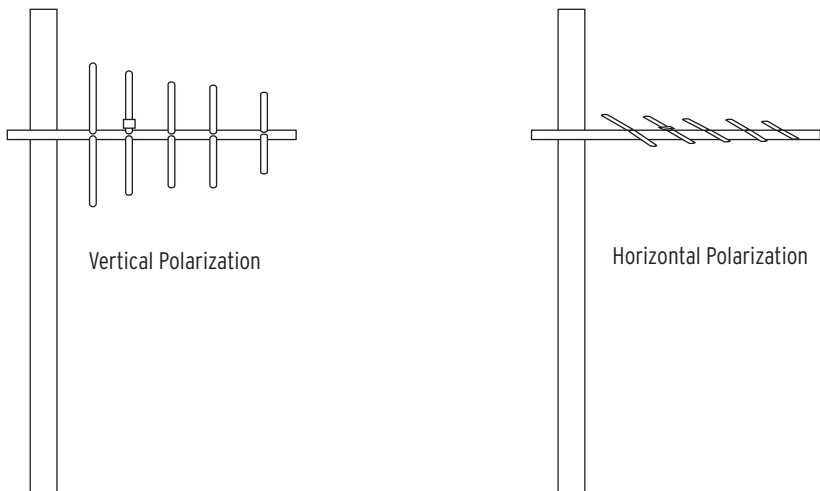


Figure 2.2 Antenna Polarization

- Multiple SEL-3031 systems can coexist in close proximity with minimal interference as long as each SEL-3031 is assigned a unique network address. Each network identification uses a specific hop pattern and number of frequency zones.

- When constant interference is present in a particular frequency zone, it may be necessary to “lock out” that zone from the SEL-3031 hopping pattern. The SEL-3031 includes a SKIP setting that removes interfered frequency zones from its hopping pattern. See [Table 4.5](#) for more information on the skip zones and information on how to set the SKIP setting. In the USA and Canada, a maximum of six zones may be skipped, per FCC and IC rules. Check the regulatory requirements for your country.
- The RF power output for all SEL-3031 radios in your system should be set to the lowest level necessary for reliable communications. This decreases the likelihood of causing unnecessary interference to nearby systems. See [Table 2.2](#) for more information on the different frequency zones.

Table 2.2 900-MHz Frequency Skip Zones

Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
902.6–903.8	904.1–905.3	905.6–906.8	907.1–908.3	909.2–910.4	910.7–911.9	912.2–913.4	913.7–914.9
Zone 9	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
915.2–916.4	916.7–917.9	918.2–919.4	919.7–920.9	921.2–923.0	923.3–924.5	924.8–926.0	926.3–927.5

Feedlines

The feedline used with the antenna is as important as the antenna. Coaxial cables should have low attenuation and rated for outdoor use. Keep the feedline as short as possible to minimize signal loss between the radio and antenna. Times Microwave LMR 400® or RG-8 A/U coax cables are preferred. If longer lengths or less loss is desired for the radio link then larger cable such as Andrew HELIAX® can be used. [Table 2.3](#) lists the signal losses (in dB) for the indicated lengths of each cable type at 900 MHz.

Table 2.3 Length vs. Loss in Coaxial Cables at 900 MHz (Sheet 1 of 2)

Cable Type	3.05 Meters (10 Feet)	12.24 Meters (50 Feet)	30.48 Meters (100 Feet)	91.44 Meters (300 Feet)
RG-8 A/U (C964)	0.70 dB	3.50 dB	7.0 dB	Unacceptable Loss
LMR 400 (C966)	Do not use	1.95 dB	3.90 dB	Unacceptable Loss
1/2-inch HELIAX	Do not use	1.15 dB	2.29 dB	6.87 dB

Table 2.3 Length vs. Loss in Coaxial Cables at 900 MHz (Sheet 2 of 2)

Cable Type	3.05 Meters (10 Feet)	12.24 Meters (50 Feet)	30.48 Meters (100 Feet)	91.44 Meters (300 Feet)
7/8-inch HELIAX	Do not use	0.64 dB	1.28 dB	3.84 dB
1-1/4-inch HELIAX	Do not use	Do not use	0.95 dB	2.85 dB
1-5/8-inch HELIAX	Do not use	Do not use	0.80 dB	2.4 dB

Antenna System Ground

Antenna system grounding is not included in the scope of this manual. Please consult a radio systems engineer or other professional for advice on ground-system design. A well-designed system will minimize equipment damage and risk of electric shock to personnel.

Chassis Ground



Connect the grounding terminal labeled **GND** on the rear panel to a rack frame ground or main station ground for proper safety and performance. Use 4 mm² (12 AWG) or heavier wire less than 2 meters (6.6 feet) in length for this connection. The ground connection should be made before the power connections.

Connections

Rear-Panel Connections

The physical layout of the SEL-3031 connections is shown in [Figure 2.3](#).



Figure 2.3 Wall-Mount and Rack-Mount Rear Connections

Power Connections

The **POWER** terminals on the rear panel (labeled **+/H** and **-/N**) must connect to the correct supply voltage. The supply voltage range is located on the serial label. The wall-mount configuration accepts only 9–30 Vdc. The rack-mount configuration accepts 24–48 Vdc or 125/250 Vac or Vdc. Check the serial label for power supply information.

Do not apply power to the SEL-3031 without having a proper 50- Ω load on the antenna port. If you do not have the proper 50- Ω load connected, the radio antenna port will shut off, the alarm contact will pulse, and the **ALARM LED** will illuminate. This functionality protects the radio circuitry and indicates an antenna or cable failure. The **POWER** terminals on the rack-mount version are isolated from chassis ground. The **POWER** terminals on the wall-mount version are not isolated from chassis ground. Use 2.5 mm² (14 AWG) size wire to connect to the **POWER** terminals on the rack mount. Place an external circuit breaker or switch no more than 3 meters (9.8 feet) from the equipment. The circuit breaker (or equivalent approved disconnect device appropriate for the country of installation) must comply with IEC 60947-1 and IEC 60947-3, be identified as the disconnect device for the equipment, and be located near the equipment. This disconnect device must interrupt both the hot (**+/H**) and the neutral (**-/N**) power leads. The maximum current rating for the power disconnect circuit breaker or overcurrent device (fuse) must be 20 A. An internal power supply fuse protects the operational power supply. Be sure to use fuses that comply with IEC 60127-2.

Lightning Protection

WARNING

Atmospheric electrical charge accumulation can cause potential between the conductor and shield of the feedline, or cause lightning to strike an antenna. A lightning protector should be installed to prevent damage to equipment or injury to personnel.

Mounting the antenna on an equipment building roof or tower is safest because the potential rise on the outside of either of these structures will approximately equal the potential on the inside. A lightning protector (Gas Tube Coaxial Surge Protector, SEL part number 915900139) should be used to equalize the difference in potential that can occur between the center conductor and the shield of the coaxial cable between the antenna and the radio. The higher the antenna is mounted on a support structure, the greater the probability of equipment damage resulting from a lightning strike.

In all surge-protector applications, you should mount the surge protector at the building or enclosure entrance, and ground the surge-protector body. Ground the radio to the same point as the surge-protector ground to avoid ground-rise-potential damage.

When using the surge protector, order an additional C965 or C961 cable and place this cable between the SEL-3031 and the surge protector. Because the distance varies from the SEL-3031 to the surge protector, be sure to specify this cable at approximately the correct length (plus 10 to 20 percent for installation variability).

Grounding (Earthing) Connections



You must connect the ground terminal labeled **GND** to a rack frame or switchgear ground for proper safety and performance. Use 2.5 mm² (14 AWG) wire less than 2 meters (6.6 feet) in length for the ground connection.

Serial Ports

Because all ports (1, 2, and 3) are independent, you can communicate to any combination simultaneously. All EIA-232 ports accept DB-9 male connectors. The serial port EIA-485 option for Port 1 is also a DB-9 male connector. If Port 1 is ordered with the EIA-485 option the product will ship with a DB-9-to-terminal adapter to easily wire to EIA-485 systems. Port 2 includes the IRIG-B time-code signal input (see [Table 2.6](#)). SEL offers fiber-optic transceivers or fiber-optic port options on Port 1 (SEL-2812 compatible optic) for connecting devices at distances over 15 meters (50 feet) where copper cable is not appropriate. The SEL-2800 family of transceivers provides fiber-optic links between devices for electrical isolation and longer distances, overcoming the limitations of electrical EIA-232 interfaces. Contact SEL for further information on these products.

Front-Panel Jumpers

The front panels of the rack- and wall-mount configurations contain two jumpers. Access to the jumpers is different for each configuration. Note that jumper number 1 (JMP1) is for factory use only and should not be installed.

CAUTION

The radio contains devices sensitive to Electrostatic Discharge (ESD). Undetectable permanent damage can result if you do not use proper ESD procedures. Ground yourself, your work surface, and this equipment before removing any cover from this equipment. If your facility is not equipped to work with these components, contact SEL about returning this device and related SEL equipment for service.

Wall-Mount Chassis Jumper Access

From the front of the wall-mount configuration, remove the four screws located on the sides of each corner. Use a Torx® T15 size screwdriver to remove the four screws. Slide the back cover up and to the back of the unit to reveal the front jumpers. You do not need to remove the ribbon cable to change jumpers. The jumpers are located to the left of the USB connector.

Rack-Mount Chassis Jumper Access

From the front of the rack-mount configuration, remove the front panel by loosening the six screws and removing the front panel. You will find the jumpers to the left of the USB connection.

Password Jumper

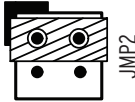
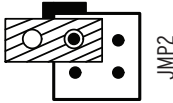
The SEL-3031 contains two levels of passwords to access and set the radio. The Level 1 password is for read access and the Level 2 password is for write access. The default passwords that are shipped with the SEL-3031 are shown in [Table 2.4](#). Do not leave factory default passwords in the product. See [PASSWORD Command on page 4.19](#) for more information on setting passwords.

Table 2.4 Default Passwords

Access Level	Password
1	OTTER
2	TAIL

If necessary, you can disable passwords by installing a jumper. Refer to [PASSWORD Command on page 4.19](#) for information on properly disabling and changing passwords.

Table 2.5 Password Jumper Position

Password Enable/Disable	Jumper Position
<p>Jumper Installed (Password Disabled) The jumper installed disables the passwords.</p>	
<p>Jumper Removed (Default) The SEL-3031 ships by default with passwords enabled.</p>	

IRIG-B Time-Code Input

The SEL-3031 accepts a demodulated IRIG-B time signal to synchronize the internal clock with an external time source. IRIG-B is available on Port 2 utilizing Pins 4 and 6 for time communications. The SEL-3031 supports the IRIG-B002 standardized time format.

Table 2.6 Communications Cables for Time and Communications Connections

EIA-232 Serial Port	Connect to Device	SEL Cable No.
Port 2	IRIG-B BNC with time only	C256
	SEL communications processors and computing platform data with IRIG-B ^a	C387
	IRIG-B only from DB-9 on SEL-2407 [®]	C388

a. If connecting to an SEL communications processor you must turn the 5V_EN Global setting in the SEL-3031 to OFF.

Front-Panel Indicators

The SEL-3031 has ten front-panel LED indicators. [Table 2.7](#) further describes these indicators that display the current status of the radio. The **LINK** LED indicates when the SEL-3031 has properly connected to another SEL-3031. The **SEC** LED deals with the SEL-3044 Encryption Card. See [Appendix B: SEL-3044 Encryption Card](#) for more information on using this card.

 


Table 2.7 Front-Panel Status Indicator LEDs

Label	Color	Description
ENABLE	Green	All self tests are passing and unit is operational
ALARM	Red	ON: Self test failure detected Flashing: Antenna failure
SEC	Green	ON: Encryption card detected and wireless data secured Flashing: Encryption card detected and in RESET OFF: No encryption card present or card failed
LINK	Green	Communications link established between master and remote radio
TX 1, 2, 3	Green	Serial data received by the port and transmitted out of the radio
RX 1, 2, 3	Green	Radio data received and transmitting out of serial port

Communications

Serial Ports

Table 2.8 shows the physical interfaces of the SEL-3031. Several options are provided for Port 1 physical interfaces, including EIA-232, EIA-485, and fiber.

Table 2.8 SEL-3031 Port Description

Port	Communications Interface	Location
Port 1	EIA-232, EIA-485, or fiber	Rear (Port 1 has three ordering options)
Port 2	EIA-232	Rear
Port 3	EIA-232	Rear
USB	USB 1.1	Front (management port)

Serial (EIA-232 and EIA-485)

Use the EIA-232 port for communications distances of ≤15 meters (50 feet) in low-noise environments. Use the optional EIA-485 Port 1 for communications of ≤1200 meters (4000 feet) maximum distance (to achieve this performance, ensure proper line termination at the receiver).

If Port 1 is an EIA-485 connection, there are two types of connections that will work on multidrop systems. Table 2.9 shows the standard pinout of a recommended four-wire EIA-485 connection. If your system only works on a two-wire EIA-485 connection, then you will need to connect Pins 1 and 3 together and Pins 2 and 4 together.

Figure 2.4 shows how to wire this configuration.

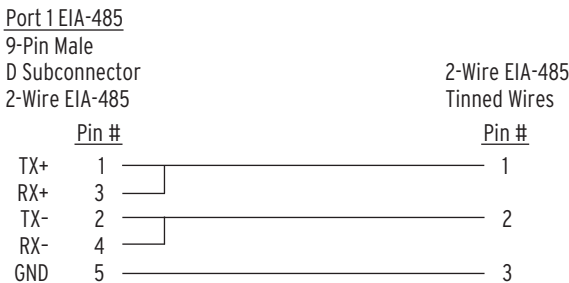


Figure 2.4 Two-Wire EIA-485 Connections

Fiber-Optic Serial Port

Order the fiber-optic option for Port 1 for safety and long-distance communications up to 4 kilometers (2.5 miles). The fiber-optic port is an SEL-2812-compatible device that can connect directly to any SEL-2812-compatible device or SEL-2812 fiber optic transceiver, using multimode fiber-optic cable with a core diameter of 50 to 200 micrometers. When working with this device, observe the following safety precautions:

⚠ WARNING

- Do not look into the fiber (laser) ports/connectors.
- Do not look into the end of an optical cable connected to an optical output.
- Do not perform any procedures or adjustments that this instruction manual does not describe.
- During installation, maintenance, or testing of the optical ports, use only test equipment qualified for Class 1 laser products.
- Incorporated components, such as transceivers and laser emitters, are not user serviceable. Return units to SEL for repair or replacement.

Port Connector and Communications Cables

Figure 2.5 shows the EIA-232 and EIA-485 DB-9 connector pin numbering for the SEL-3031.

 


Figure 2.5 EIA-232 and EIA-485 DB-9 Connector Pin Numbers

Table 2.9 shows the pin function of the serial ports.

Table 2.9 SEL-3031 Port Description (Sheet 1 of 2)

Pin	Port 1, Port 3 EIA-232	Port 2 EIA-232	Port 1 EIA-485
1	+5 Vdc	+5 Vdc	TX+
2	RXD	RXD	TX-
3	TXD	TXD	N/C
4	N/C	IRIG+	N/C
5	GND	GND	GND

Table 2.9 SEL-3031 Port Description (Sheet 2 of 2)

Pin	Port 1, Port 3 EIA-232	Port 2 EIA-232	Port 1 EIA-485
6	N/C	IRIG-	N/C
7	RTS	RTS	RX+
8	CTS	CTS	RX-
9	GND	GND	GND

Cleaning

Use care when cleaning the SEL-3031. Perform the following steps:

- Step 1. Use a mild soap or detergent solution and a damp cloth to clean the chassis.
- Step 2. Be careful cleaning the front and rear panels because a permanent plastic sheet covers each panel.

Do not use abrasive materials, polishing compounds, or harsh chemical solvents (such as xylene or acetone) on any surface.

Cables

SEL-3031

9-Pin Male
Subminiature "D" Connector

Pin	Pin #	
RXD	2	ORANGE
TXD	3	RED
GND	5	BLUE/SHIELD
RTS	7	GREEN
CTS	8	WHITE

PC Device

9-Pin Female
Subminiature "D" Connector

Pin #	Pin	Func.
2	RXD	(OUT)
3	TXD	(IN)
5	GND	
7	RTS	(IN)
8	CTS	(OUT)

NOTE: For best results, limit the cable length to 15 meters (50 ft)

Figure 2.6 SEL Cable C245A: SEL-3031 to Computer

<u>SEL-3031</u>			<u>DTE Device</u>	
9-Pin Male			No IRIG	
Subminiature "D" Connector			9-Pin Male	
			Subminiature "D" Connector	
Pin				
<u>Func.</u>	<u>Pin #</u>			<u>Pin #</u>
RXD	2	ORANGE	_____	2
TXD	3	RED	_____	3
GND	5	BLUE/SHIELD	_____	5
RTS	7	GREEN	_____	7
CTS	8	WHITE	_____	8

NOTE: For best results, limit the cable length to 15 meters (50 ft)

Figure 2.7 SEL Cable C285: SEL-3031 to DTE Device (SEL Relays)

<u>SEL-3031</u>			<u>SEL Communications Processor</u>	
9-Pin Male			With IRIG	
Subminiature "D" Connector			9-Pin Male	
			Subminiature "D" Connector	
<u>Pin #</u>				<u>Pin #</u>
1	_____		_____	1
2	_____		_____	2
3	_____		_____	3
4	_____		_____	4
5	_____		_____	5
6	_____		_____	6
7	_____		_____	7
8	_____		_____	8
9	_____		_____	9

NOTE: For best results, limit the cable length to 15 meters (50 ft)

CAUTION: You must turn off the +5 V on Pin 1 of the SEL-3031 when connecting to a communications processor.

Figure 2.8 SEL Cable C782/C387: SEL-3031 to SEL Communications Processor

USB Interface

The SEL-3031 uses a standard USB Type-B interface for the management port. The USB interface is used for settings management, initial radio installation, and reporting data from long-term radio statistics. The management port may be used while the SEL-3031 is in service without disrupting the radio communications. To use this interface, plug a USB Type-B cable into the radio and plug the other end into your PC. This will automatically prompt your PC to install a USB-to-serial driver that creates a virtual serial port. The virtual serial port needs to be set to 9600 bps, 8 data bits, 1 stop

bit, and no parity to properly communicate with the SEL-3031. This virtual serial port can now be used with ACCELERATOR QuickSet® SEL-5030 Software to help set and view settings and obtain report information.



Figure 2.9 USB Interface

Section 3

Job Done Examples

Overview

This section describes how to set up a serial port for two popular types of protocols: MIRRORED BITS® and SEL Fast Messaging. This section assumes you have established a radio link. If you are having problems setting up the radio link, refer to [Section 2: Installation](#) and [Section 5: Performance Monitoring, Testing, and Troubleshooting](#) for more information.

Each of the sections below describes how to set up the SEL-3031 serial port and the end devices to make a proper connection.

High-Speed Teleprotection or Control With MIRRORED BITS Communications

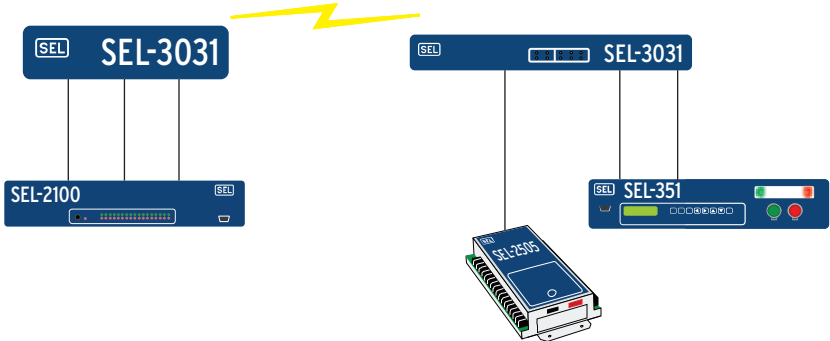


Figure 3.1 SEL MIRRORED BITS Connection Example

The SEL-3031 can handle up to three connections of MIRRORED BITS simultaneously over one radio link. For this example there are three MIRRORED BITS channels over the SEL-3031. This example shows you how to set the radio and set different end devices to properly use the radio as MIRRORED BITS links.

SEL-3031 MIRRORED BITS Settings

For *Figure 3.2* we set Port 1 on both SEL-3031 devices as a MIRRORED BITS connections.

On each radio set the following settings on the Port 1 settings.

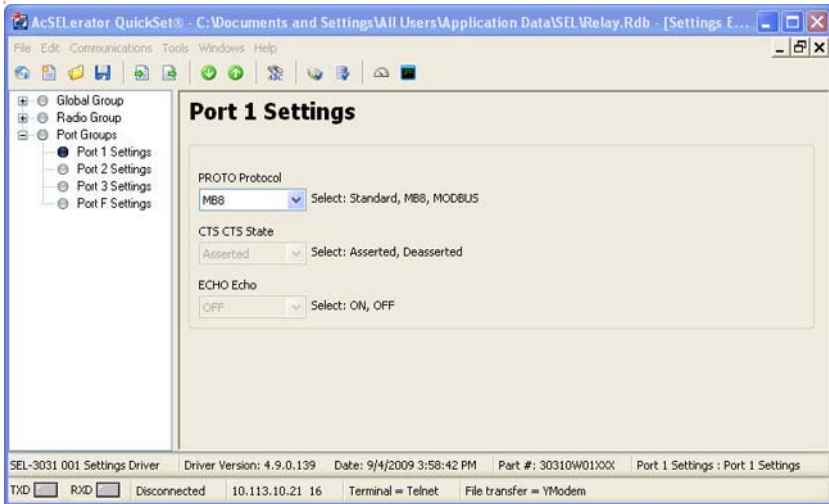


Figure 3.2 SEL-3031 Port Settings for MIRRORED BITS Connection

The SEL-3031 makes it very simple to set a MIRRORED BITS connection. Only the PROTO setting is needed to set the MIRRORED BITS port. The SEL-3031 without an encryption card has fixed data rate of 19200 bps (8, N, 1) so no other setting changes are needed.

On Port 1 on each radio install a C285 cable to the IED device. As an alternative, the SEL-3031 can be ordered with a fiber-optic serial port that works with SEL-2812 transceivers. If you use the fiber-optic port on the SEL-3031 then the IED connection needs to be an SEL-2812MR Fiber-Optic Transceiver.

SEL-351, SEL-311, and SEL-700 Series MIRRORRED BITS Settings

The required settings for the SEL-351 are shown below. These settings are similar to all of the SEL-351, SEL-311, and SEL-700 series of relays. To establish a communication link via the radio, the most critical settings are PROTO, SPEED, RTSCTS, RXID, and TXID.

```

=>SHO P 2 <Enter>
Port 2

PROTO = MB8A
SPEED = 19200   RTSCTS= N       RBADPU= 60       CBADPU= 1000
RXID = 1        TXID = 2       RXDFLT=XXXXXXXX
RMB1PU= 1      RMB1DO= 1      RMB2PU- 1      RMB2DO= 1
RMB3PU= 1      RMB3DO= 1      RMB4PU- 1      RMB4DO= 1
RMB5PU= 1      RMB5DO= 1      RMB6PU- 1      RMB6DO= 1
RMB7PU= 1      RMB7DO= 1      RMB8PU- 1      RMB8DO= 1
  
```

Figure 3.3 SEL-351 Port Settings for MIRRORRED BITS Connection

The SEL-3031 locks all three serial ports to 19200 bps (8, N, 1). You cannot change the port speed. If the SEL-3044 Encryption Card is used then the data rate changes to 9600 bps (8, N, 1).

NOTE: If you are using the SEL-3044 Encryption Card, you must change the connected devices' RMBxPU and RMBxDO settings = 2 to maintain the same level of channel security as the standard MB8 protocol. This will delay operation by one processing interval but will give you a higher level of channel security.

Set PROTO equal to MB8x, where x equals A or B depending on which MIRRORRED BITS channel is used.

NOTE: This setting is slightly different in the SEL-2100 Logic Processor, SEL-3530 Real-Time Automation Controller (RTAC), and SEL-321 Relay.

Set SPEED equal to 19200 (or 9600 if the encryption card is installed).

Set RTSCTS (hardware handshaking) to N to disable that option.

Set the RXID equal to one and TXID equal to two at the master end. At the remote end, set the RXID equal to two and the TXID equal to one. The relays use these addresses to prevent a relay from receiving messages from a secondary MIRRORRED BITS device if the paths are accidentally connected wrong. The relay only receives messages sent by a relay with the matching transmit address and vice versa.

To connect the relay to the radio, use an SEL-C285 cable (DB-9 male-to-DB-9 male straight-through). If complete electrical isolation is desired between the radio and a relay's EIA-232 communications port, use the SEL-2812MR Fiber-Optic Transceiver and fiber-optic cable to connect the relay to the radio.

SEL-400 Series MIRRORED BITS Settings

The required port settings for SEL-400 series relays are shown below. To establish communication via the radio, the most critical settings are PROTO, MBT, SPEED, STOPBIT, TXID, RXID, and TXMODE. All other settings are per the application requirements.

```
Protocol Selection
PROTO := MBA
Communications Settings
MBT   := N      SPEED :=19200  STOPBIT := 2

Mirrored Bits Protocol Setting

TX_ID := 2      RX_ID := 1      RBADPU := 10      CBADPU := 20000
TXMODE := P      MBNUM := 8      RMB1FL := P      RMB1PU := 1
RMB1DO := 1      RMB2FL := P      RMB2PU := 1      RMB2DO := 1
RMB3FL := P      RMB3PU := 1      RMB3DO := 1      RMB4FL := P
RMB4PU := 1      RMB4DO := 1      RMB5FL := P      RMB5PU := 1
RMB5DO := 1      RMB6FL := P      RMB6PU := 1      RMB6DO := 1
RMB7FL := P      RMB7PU := 1      RMB7DO := 1      RMB8FL := P
RMB8PU := 1      RMB8DO := 1
```

Figure 3.4 SEL-451 Port Settings for MIRRORED BITS Connection

Set PROTO equal to MBx, where x equals A or B depending on which MIRRORED BITS channel is being used. Set MBT equal to N to disable that option.

Set SPEED equal to 19200 (or 9600 if the encryption card is installed).

Set STOPBIT equal to 2.

NOTE: If you are using the SEL-3044 Encryption Card, you must change the connected devices' RMBxPU and RMBxDO settings = 2 to maintain the same level of channel security as the standard MB8 protocol. This will delay operation by one processing interval but will give you a higher level of channel security.

Set the RXID equal to one and TXID equal to two at the master end. At the remote end, set the RXID equal to two and the TXID equal to one. The relays use these addresses so that the master relay only receives messages sent by a relay with the matching transmit address and vice versa.

Set TXMODE equal to P (Paced).

To connect the relay to the radio, use an SEL-C285 cable (DB-9 male-to-DB-9 male straight-through). If complete electrical isolation is desired between the radio and antenna and the relay's EIA-232 communications port, use the SEL-2812MR Fiber-Optic Transceiver and fiber-optic cable to connect the relay to the radio.

SEL-2505 and SEL-2506 Settings

The SEL-2505 and SEL-2506 use control (DIP) switches to set the MIRRORING BITS connection. For easy installation order the SEL-2505 with the SEL-2812 fiber-optic option (SEL-2505x6xXX). Use multimode C807 ST terminated fiber-optic cable to directly connect the SEL-2505 to an SEL-3031 equipped with a fiber-optic option for Port 1. Other transceiver models can be used as long as the corresponding SEL-2800 family transceiver is used on both ends.

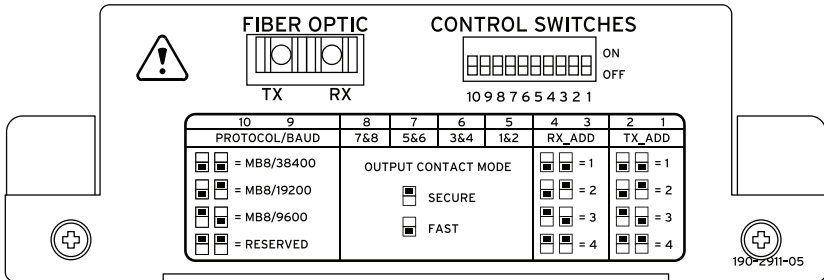


Figure 3.5 SEL-2505 DIP Switch Settings for MIRRORING BITS Connection

Set the TX_ADD equal to one and set RX_ADD equal to two at the local end. At the remote end, set the RXID equal to two and the TXID equal to one. The devices use these addresses so that the master relay only receives messages sent by a relay with the matching transmit address and vice versa.

Set Switch 9 and 10 equal to MB8/19200 for the Protocol/Baud setting. If the SEL-3031 contains the SEL-3044 Encryption Card then the Protocol/Baud setting must be MB8/9600.

NOTE: If you are using the SEL-3044 Encryption Card, you must change the settings of the SEL-2505 output contact mode dip switches to "SECURE" to maintain the same level of channel security as the standard MB8 protocol. This will delay operation by one processing interval but will give you a higher level of channel security.

To connect the SEL-2505 to the radio, use a 62.5 μm multimode SEL-C807 fiber cable. The SEL-C807 fiber cable comes with ST[®] connectors and your choice of zipcord or waterproof heavy-duty jacketed fibers.

Initial Checkout

The easiest way to verify that the relays are communicating is to use the **TARget** command, as shown below.

```
=>TAR ROKA <Enter>
LBOKB  CBADE  RBADB  ROKB  LBOKA  CBADA  RBADA  ROKA
0       0       0       0       0       0       0       1
```

Figure 3.6 TAR ROKA Command From an SEL-351

The results shown here is from an SEL-351 Relay. ROKA is asserted, meaning that the two relays have established MIRRORRED BITS communication. For longer-term channel tests, use the **COM** report command available in the relay and suggestions described in *Monitoring Radio Performance on page 5.1*.

Using an SEL Information Processor to Collect Relay Status and Measurements

SEL information processors and computing platforms easily collect relay status and measurement information. SEL information processors include the SEL-3530 Real-Time Automation Processor, SEL-2032, SEL-2030, and SEL-2020 Communications Processors, and ruggedized SEL computers configured as intelligent servers or gateways. An SEL information processor can be used as data collection point, port switch, and control operations all through one serial port. The SEL-3031 serial interface allows you to obtain all of this relay information from remote IEDs using the wireless connection. The example below will show you how to set the radio, relays, and communications processors to allow the Fast Messaging protocol to operate over a wireless connection.

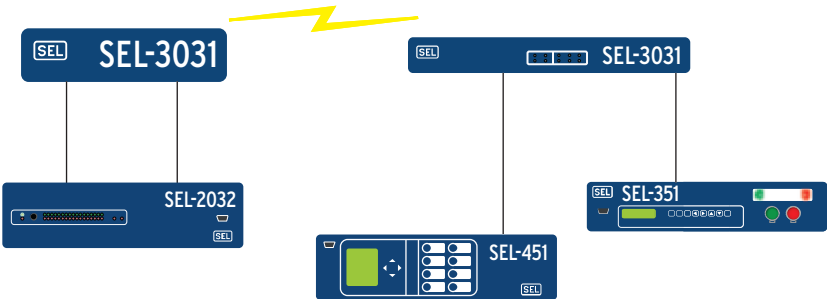


Figure 3.7 SEL-3031 Linking Information Processors to Relays

SEL-3031 Settings

The SEL-3031 requires very few inputs for setting up the serial port to the correct protocol. *Figure 3.8* shows the settings needed for Port 1.

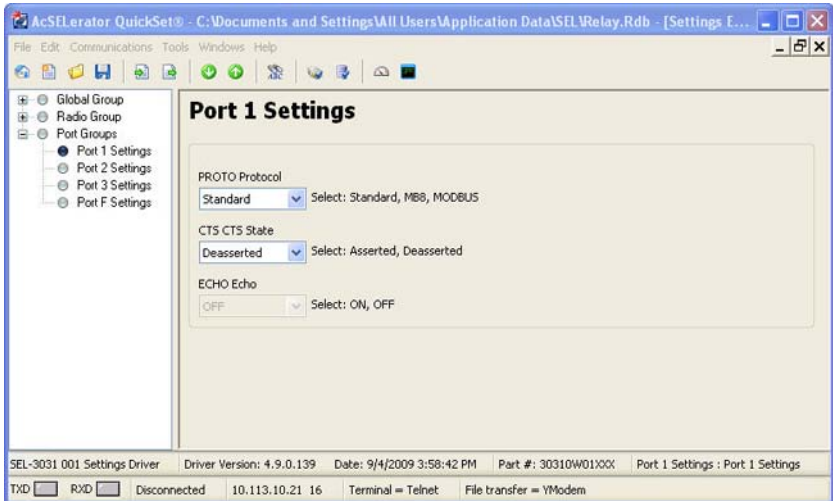


Figure 3.8 SEL-3031 Port 1 Settings for Fast Messaging

The PROTO setting must be set to **Standard**. The Standard setting is the default for use on any byte-oriented protocol. The Standard setting is used with connections such as DNP3, SEL ASCII, Compressed ASCII, Fast Operate, Fast SER, and SEL Fast Meter with Configuration.

The CTS1 setting should be set to **Deasserted**. This will deassert the control lines on the SEL-3031. Some protocols in devices require the control line to be in a high or low state to permit proper communication. For example, with DNP, some remote devices will not reply back to the master until the control line is deasserted. If the control line is asserted the DNP device is told to wait. Again, this setting is based upon how the vendor implemented flow control in the devices. For most all SEL products this setting should always be set to **Deasserted**.

On Port 1 on each radio install an SEL-C285 cable to the IED device. As an alternative, the SEL-3031 can be ordered with a fiber-optic serial port that works with the SEL-2812 transceivers. If you use the fiber port on the SEL-3031 connection at the IED needs to be an SEL-2812MR transceiver or compatible built-in port.

SEL-300 Series Settings

The required settings for the SEL-351 are shown below. These settings are similar to all of the SEL-351, SEL-311, and SEL-700 family of relays. To establish a communication link via the radio, the most critical settings are PROTO, SPEED, BITS, PARITY, STOP, and RTSCTS.

```
==>SHO P 2 <Enter>
Port 2

PROTO = SEL
SPEED = 19200   BITS = 8   PARITY= N   STOP = 1
T_OUT = 10     AUTO = Y   RTSCTS= N   FASTOP= Y

==>
```

Figure 3.9 SEL-351 Port Settings for Fast Messaging

Set AUTO = Y if you want the relay to send automatic messages to indicate specific conditions.

Set FASTOP = Y if you want the communication processor to issue control commands to the relay.

SEL-2032/SEL-2030 Settings

The following steps demonstrate on how to set SEL-2032 to initially connect and configure an SEL-351 relay.

- Step 1. Use the SEL-C285 cable to connect one of the SEL-2032 ports; this example uses Port 2 to Port 1 of the SEL-3031.
- Step 2. Enter Access Level 2 on the SEL-2032 and issue the **SET P 2** command to configure Port 2. The SEL-2032 prompts for the type of device connected to the port.
 - a. Enter **S** for the SEL IED.
 - b. Enter **Y** to autoconfigure the port.
 - c. Press the **<Enter>** key to confirm the configuration prompts.
The SEL-2032 establishes communication with the relay; determines the type of relay, relay ID, and communication data rate; and determines if the relay is capable of Fast Meter.
 - d. Enter **Y** to save port configuration changes at the final prompt.
- Step 3. Issue the **AUTO 2** command to see what Fast Message features are supported by the SEL-351S. *Figure 3.10* shows an example output for the **AUTO** command.

```
*->>AUTO 2 <Enter>
FID: FID=SEL-351S-7-R106-V0-Z003003-D20010110
DEVICE ID: FEEDER 1
BAUD RATE: 19200
OPERATE SUPPORT: Binary (1 Breakers, 16 Remote Bits S-C-P)
LEVEL 1 PASSWORD: OTTER
COMMANDS SUPPORTED:
B 20METER
B 20DEMAND
B 20TARGET
A 20HISTORY
A 20STATUS
A 20EVENT
A 20EVENTS
A 20EVENTL
*->>
```

Figure 3.10 Example AUTO Command Output

The **AUTO** command verifies initial configuration is set up. Refer to the *SEL-2032 Instruction Manual* for more information on setting up Fast Messaging.

This page intentionally left blank

Section 4

Settings and Commands

PC Software

ACSELERATOR QuickSet® SEL-5030 Software is a powerful settings and HMI tool that aids in setting, applying, and using the SEL-3031 and other SEL devices. This section describes how to get started with your SEL-3031 and ACSELERATOR QuickSet.

Table 4.1 ACSELERATOR QuickSet SEL-5030 Software

Terminal	Provides a direct connection to the SEL device. Use this communications method to interface directly with the device.
Rules-Based Settings Editor	Provides online or offline device settings that include interdependency checks. Use this feature to create and manage settings for multiple devices in a database.
Settings Database Management	Provides a database to manage multiple device settings.
Help	Provides general ACSELERATOR QuickSet and device-specific ACSELERATOR QuickSet context help.

Setup

Follow the steps outlined in [Section 2: Installation](#) to prepare the SEL-3031 for use. Perform the following steps to initiate communications:

- Step 1. Apply power to the SEL-3031.
- Step 2. Connect a USB Type-B cable (SEL-C664) between the management port of the SEL-3031 and the PC.
- Step 3. Follow the on screen instructions and install the USB driver if not already installed.
- Step 4. Start ACSELERATOR QuickSet software.

Communications

ACSELERATOR QuickSet uses the device USB management port to communicate with the SEL-3031. Perform the following steps to configure ACSELERATOR QuickSet to communicate effectively with the device.

- Step 1. Click **Communications** from the ACSELERATOR QuickSet main menu bar, as shown in *Figure 4.1*.

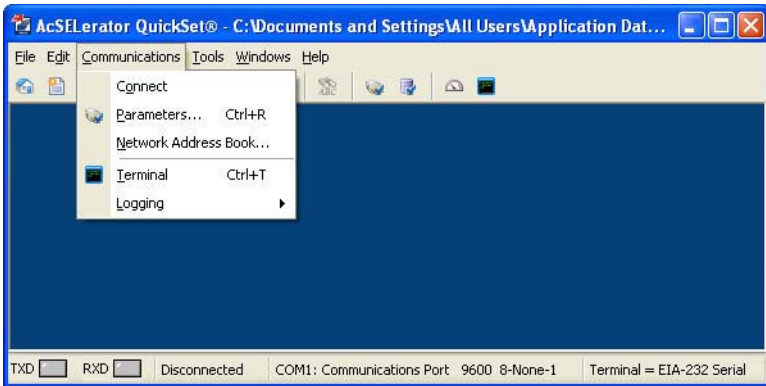


Figure 4.1 Communications Menu

- Step 2. Select **Parameters** to display the screen shown in *Figure 4.2*.

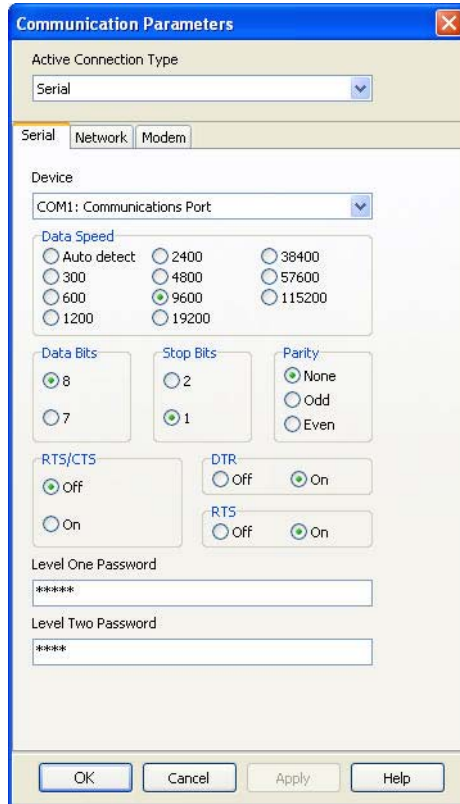


Figure 4.2 Serial Port Communications Parameters

- Step 3. Configure the PC port to Data Speed 9600, Data Bits 8, Stop Bits 1, and Parity None.
- Step 4. Configure ACSELERATOR QuickSet to match the SEL-3031 default settings by entering the Access Level 1 and Access Level 2 passwords in their respective text boxes.
- Step 5. Exit the menus by clicking **OK** when finished.

Terminal Window

Select **Communications > Terminal** on the ACSELERATOR QuickSet main menu bar to open the terminal window (shown in [Figure 4.3](#)).

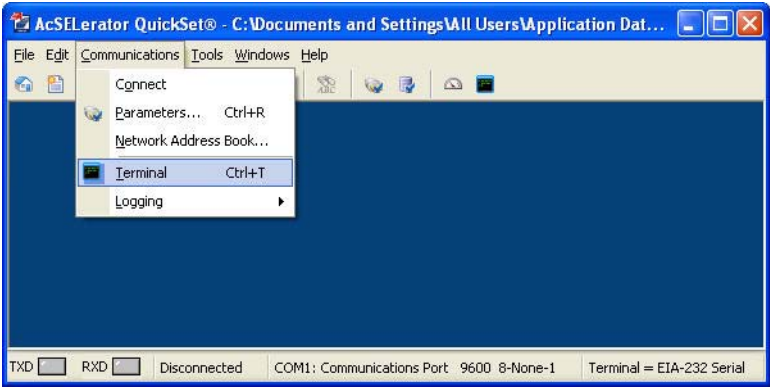


Figure 4.3 Terminal Window Menu

The terminal window is an ASCII interface for the device that supports a basic terminal emulation. Open the terminal window by clicking **Communications > Terminal** or by typing **<Ctrl+T>**. Verify proper communications with the device by opening a terminal window, pressing **<Enter>** a few times, and verifying that a prompt is received. If a prompt is not received, verify proper setup.

Drivers and Part Number

After clicking **Communications > Terminal**, access the device at Access Level 1. Issue the **ID** command to receive an identification report, as shown in *Figure 4.4*.

```
=>>ID <Enter>
*FID=SEL-3031-R100-V0-Z001001-D20091009", "08DC"
*BFID=SLBT-3031-R100-V0-Z001000-D20091009", "0965"
*CID=25DC8978", "034B"
*DEVID=STATION_A", "04DB"
*DEVCODE=72", "0310"
*PARTNO=30310W01XXX", "0538"
*CONFIG=00000000", "03E3"
*SPECIAL=0", "02DE"
=>>
```

Figure 4.4 Device Response to ID Command

Locate and record the Z-number (Z001001) in the FID string. The first portion of the Z-number (Z001...) determines the ACSELERATOR QuickSet device settings driver version when you are creating or editing device settings files. The Device Editor driver will be discussed in more detail in *Device Editor (Editor Mode)*. Compare the part number (PARTNO = 3031XXXXXXXX) with the Model Option Table (MOT) to ensure correct device configuration.

Settings

Settings Database Management and Drivers

ACSELERATOR QuickSet uses a database on the PC to save device settings.

ACSELERATOR QuickSet contains sets of all settings files for each device specified in the Database Manager. Choose appropriate storage backup methods and a secure location for storing database files.

Active Database

Change the active database to the one requiring modification by selecting **File > Active Database** on the main menu bar.

Database Manager

Select **File > Database Manager** on the main menu bar to create new databases and manage records within existing databases.

Settings Database

- Step 1. Open the Database Manager to access the database. Click **File > Database Manager**. A dialog box will appear. The default file already configured in ACSELERATOR QuickSet is Relay.rdb. This database contains example settings files for the SEL products with which you can use ACSELERATOR QuickSet.
- Step 2. Enter descriptions of the database for each device in the Database Description and Settings Description dialog boxes.
- Step 3. Enter special operating characteristics that describe the device settings in the Settings Description dialog box. These can include radio location and communications settings.
- Step 4. Highlight one of the devices listed in Settings in Database and click **Copy** to create a new collection of settings. ACSELERATOR QuickSet will prompt for a new name. Be sure to enter a new description in the Settings Description.

Copy/Move Settings Between Databases

- Step 1. Select **Copy/Move Settings Between Databases** to create multiple databases with the Database Manager.

These databases are useful for grouping similar protection schemes or geographic areas.
- Step 2. Click **Open B** to open a device database.

- Step 3. Type the filename and click **Open**.
 - a. Highlight the device or setting in the A database.
 - b. Select **Copy** or **Move**, and click the > button to create a new device or setting in the B database.
- Step 4. Reverse this process to take devices from the B database to the A database. **Copy** creates an identical device that appears in both databases. **Move** removes the device from one database and places the device in another database.

Create a New Database/Copy an Existing Database

To create a new database, perform the following:

- Step 1. Open **File > Database Manager** and click **Create New Database**. ACSELERATOR QuickSet will prompt you for a file name.
- Step 2. Type the new database name (and location if it differs from the previous database location), and click **Save**. ACSELERATOR QuickSet displays the message Settings [path and file name] was successfully created.
- Step 3. Click **OK**.

To copy an existing database of devices to a new database, perform the following:

- Step 1. Open **File > Database Manager** and click **Copy/Move Settings Between Databases** in the Database Manager dialog box. ACSELERATOR QuickSet will open the last active database and assign it as Database A.
- Step 2. Click **Open B**. ACSELERATOR QuickSet will prompt you for a file location. Type the new database name, click **Open**, and click **Yes**. The program will then create an empty database. Load devices into the new database as shown in [Copy/Move Settings Between Databases](#).

Settings

ACSELERATOR QuickSet allows you to create settings for one or more SEL-3031 devices. Store existing device settings downloaded from the SEL-3031 by creating a library of settings, then modify and upload these settings from the library to an SEL-3031. ACSELERATOR QuickSet makes setting the device easy and efficient and provides rules-based settings checks, commissioning, and help.

Settings Editor

The Settings Editor shows device settings in easy-to-understand categories, and makes setting the device simple and efficient. Settings are grouped logically, and settings that are not used in the selected group are dimmed (grayed) in the ACSELERATOR QuickSet

menus. ACSELERATOR QuickSet shows all of the settings categories in the settings tree view. The settings tree view remains constant whether settings categories are enabled or disabled. However, any disabled settings are dimmed when accessed by clicking an item in the tree view.

File Menu

ACSELERATOR QuickSet uses a database to store and manage SEL device settings. Each unique device has its own record of settings. Use the File menu to open an existing record, create and open a new record, read device settings, create an open a new record, or convert and open an existing record. This record can be opened in the Settings Editor as a Setting Form (template) or in Editor Mode.

File > New

Select **File > New** to command new settings files. ACSELERATOR QuickSet will create the new settings files from a driver that you specify in the Settings Editor Selection dialog box. ACSELERATOR QuickSet uses the Z-number in the FID string to create a particular version of settings. To get started, select **File > New** from the main menu bar, then select **SEL-3031** and **001** from the Settings Editor Selection window as shown in [Figure 4.5](#).

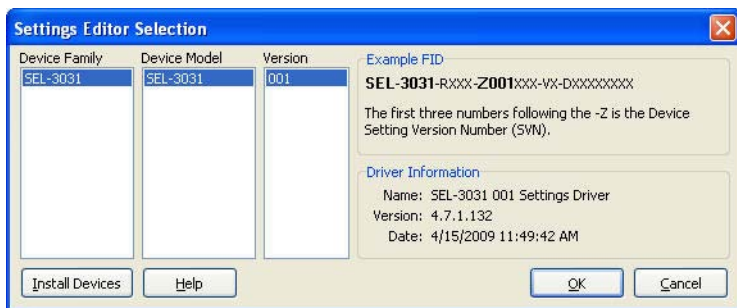


Figure 4.5 Selection of Drivers

After you select the device model and settings driver, ACSELERATOR QuickSet will present the Device Part Number dialog box. Use this dialog box to configure the Device Editor to produce settings for your device with options determined by the part number, as shown in [Figure 4.6](#). Click **OK** when finished.

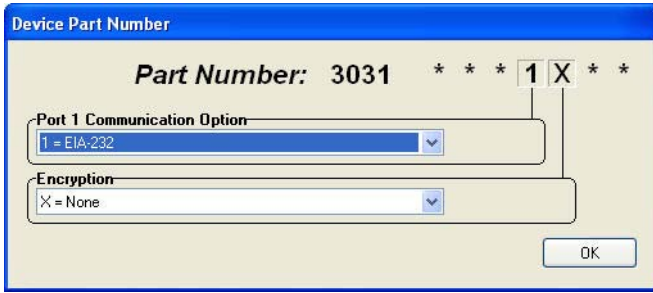


Figure 4.6 Update Part Number

Figure 4.6 shows the Settings Editor screen. View the bottom of the Device Editor window to verify the Settings Driver number. Compare the ACSELERATOR QuickSet Settings Driver number and the first portion of the Z-number in the FID string (this can be found by selecting **Tools > HMI > HMI > Status**). These numbers must match. ACSELERATOR QuickSet uses the first portion of the Z-number to determine which Device Editor to display.

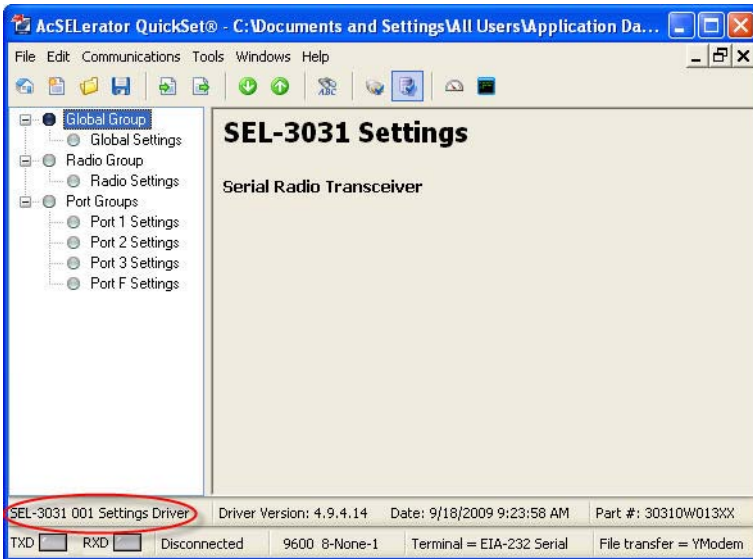


Figure 4.7 New Setting Screen

File > Open

Select **File > Open** to open an existing device from the active database folder. ACSELERATOR QuickSet prompts for a device to load into the Device Editor.

File > Read

Select **File > Read** to cause ACSELERATOR QuickSet to read the device settings from a connected device. As ACSELERATOR QuickSet reads the device, a Transfer Status window will appear. ACSELERATOR QuickSet uses serial protocols to read settings from SEL devices.

Device Editor (Editor Mode)

Use the Device Editor (Editor Mode) to enter and display settings. Make sure that the firmware in your radio matches the ACSELERATOR QuickSet settings driver; the driver version number in the lower left corner of the Device Editor should be equal to the first three digits following “Z” in the radio Firmware Identification (FID) string. Use the **ID** or **STA** command to easily view the FID string.

Entering Settings

- Step 1. Click **+** in the Settings Tree View to expand and select the settings you want to change.
- Step 2. Click **Tab** to navigate through the settings, or click on a setting.
- Step 3. Right-click your mouse in the setting dialog box and select **Previous Value** to restore the previous value for a setting.
- Step 4. Right-click your mouse in the setting dialog box and select **Default Value** to restore the factory default setting value.

If you enter a setting that is out of range or has an error, ACSELERATOR QuickSet will show the error at the bottom of the Settings Editor. Double-click the error listing to go to the setting and enter a valid input.

Table 4.2 Device Editor Menus

Menus	Description
<< >>	Moves from one category to the next.
Merge	Merges the open record with another record.
Compare	Compares the open record with another record.
Search	Searches for a particular setting.
Part Number	Displays part number.

Sending Settings

Select **Save**, **Send**, or **Print Device Settings** from the File menu of the Device Editor once settings are entered into ACSELERATOR QuickSet. This will ensure that your settings are not lost.

Options-Part Number

Select **Edit > Part Number** to change the part number if it was entered incorrectly during an earlier step.

Text Files

Select **Tools > Settings > Import** or **Tools > Settings > Export** on the Device Editor (Editor Mode) menu bar to import or export settings to or from a text file. Use this feature to create a small file that can be easily stored or sent electronically.

Meter and Control

Human Machine Interface (HMI)

Select **Tools > HMI > HMI** to bring up the screen shown in *Figure 4.8*. The HMI real time view shows the functions that are available from the HMI. The Meter & Control window is an easily-organized view of real-time data and information stored in the SEL-3031.



Figure 4.8 Status Screen

The Status screen provides a real-time view of the radio to which it is connected. A user can see the current status of the SEL-3031 and verify any alarm conditions.

Select the Radio Status screen to view the radio statistics. Included is the RSSI value that displays the current strength of the receive signal. This will aid in properly aiming the antenna for maximum signal strength. The “Availability” displays the overall

channel availability of the link. The “Zone Availability” gives the availability of each of the 10 zones. See [Monitoring Radio Performance on page 5.1](#) for more information on optimizing the radio link.

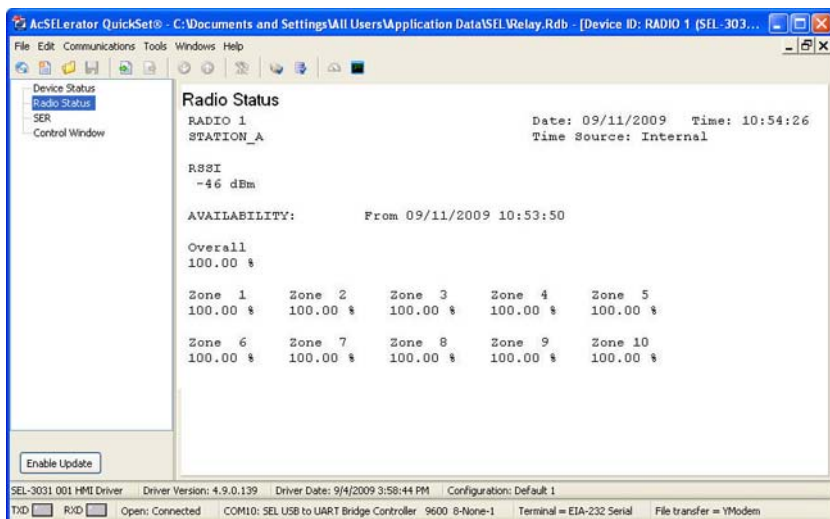


Figure 4.9 Radio Strength and Channel Availability

The SER window displays the same information as the ASCII SER commands. The Control Window allows you to clear the SER, synchronize with IRIG, and set the time and date.

Global Settings

Under the Global group settings category, set the device and host identifiers settings. The SEL-3031 displays the Device and Host Identifier strings at the top of the serial port commands responses, identifying messages from individual devices. Enter up to 30 characters, including capital letters A–Z, numbers 0–9, periods, and dashes. [Table 4.3](#) shows the device and host identifier settings.

Table 4.3 Global Settings

Setting Prompt	Setting Range	Setting Name := Factory Default
Device Identifier	30 characters	DID
Host Identifier	12 characters (no spaces)	HID
Date Format	MDY, YMD, DMY	DATE_F := MDY
Port Power	ON, OFF	5V_EN := OFF

Date_F allows you to change the device date presentation format to either North American standard (Month/Day/Year), Engineering standard (Year/Month/Day), or European standard (Day/Month/Year).

5V_EN enables the +5 V on Pin 1 on every EIA-232 DB-9 serial port. When this setting is on, all three ports will have +5 Vdc on Pin 1. The entire load on the +5 V must not exceed 500 mA.

Radio Settings

Table 4.4 Radio Settings

Settings Prompt	Settings Range	Setting Name := Factory Default
Operation Mode	MASTER, REMOTE	MODE := REMOTE
Network Identification	1–10	NID := 1
Skip Zones	1–16, NONE	SKIP := NONE
Transmit Power	20–30 dB	TXPWR := 30
Encryption Passphrase	8–80 Characters	KEY := NONE

MODE sets the operating mode of the radio. The radio is set to REMOTE by default. One radio must be set to REMOTE and the other set to MASTER.

NID sets the network address of the radio network. Both radios must be set to the same network address in order for them to link and communicate. If more than one radio network is used in the same proximity then make sure that the NID is set to a different value and SKIP the first six zones on one of the radio networks. To avoid certain radio frequencies, see setting SKIP.

SKIP determines which of the 16 frequency zones to skip in the SEL-3031 hopping sequence. The SEL-3031 will only operate on 10 of the 16 zones. The default setting is set to NONE. The SEL-3031 must use a minimum of 10 zones, so a setting of NONE will force the radio automatically SKIP zones 11–16. The SKIP setting can contain up to six comma-delimited zones from [Table 4.5](#). Each zone entered into this setting will set the SEL-3031 to skip that particular zone in the hopping table. This setting can help increase the availability of the radio and avoid areas of interference.

Table 4.5 SKIP Zone Frequencies

Zone 1	Zone 2	Zone 3	Zone 4	Zone 5	Zone 6	Zone 7	Zone 8
902.6– 903.8	904.1– 905.3	905.6– 906.8	907.1– 908.3	909.2– 910.4	910.7– 911.9	912.2– 913.4	913.7– 914.9
Zone 9	Zone 10	Zone 11	Zone 12	Zone 13	Zone 14	Zone 15	Zone 16
915.2– 916.4	916.7– 917.9	918.2– 919.4	919.7– 920.9	921.2– 923.0	923.3– 924.5	924.8– 926.0	926.3– 927.5

The SEL-3031 has radio statistics to help set the SKIP setting if the availability of the radio is less than desired. In order to determine which frequency zones to skip, issue a **RADio C** command and operate the radios over a period of time. You will get better availability results the longer you let the radio run linked. Issue the **RADio** command to view the availability of each frequency zone. In the radio report identify the frequency zones with the lowest availability and enter these zones via the SKIP setting. Issue another **RADio C** command and let the SEL-3031 run for another day and verify that the availability has increased. See [Section 5: Performance Monitoring, Testing, and Troubleshooting](#) for more information on how to use the SKIP setting.

TXPWR sets the transmitted power out of the SEL-3031. The available range is 20–30 dBm (1 W). The radio transmit power is set in 1 dBm increments. The radio is shipped with a factory default setting of 30 dBm. This setting must be used to reduce the power output of the antenna if the total EIRP exceeds 36 dBm. See [Transmitted Signal on page 2.3](#) for more information on how to calculate and configure the maximum power output.

In the USA and Canada, the FCC and IC regulate the amount of power a radio can radiate with EIRP (Effective Isotropically Radiated Power output). The EIRP limit of radiation is 36 dBm. This value includes the power of the transmitter, cable losses, and antenna gain. If you exceed the allowed 36 dBm you must lower the transmitted power of the radio using the TXPWR setting, and then measure the actual power.

See [Transmitted Signal on page 2.3](#) for more information on determining and properly setting the TXPWR setting.

The **KEY** setting is only available if the product contains an SEL-3044 Encryption Card. The KEY setting is a passphrase that is used to generate an encryption key. The acceptable range is from 8 to 80 characters. All printable characters are accepted. If you have an encryption card, this value must be set in order to enable the secure wireless connection. When the SEL-3031 is shipped with the encryption card, or added in the field, it is by default shipped in reset mode. The **SEC LED** on the front panel will flash green to show this state. The KEY setting must be set in order to activate the encryption card. The SEL-3031 radios will not transmit data until the SEL-3044 is set properly. The **SEC LED** will illuminate green when the KEY setting is correctly set. The green **SEC LED** indicates data being set through the radio link is secured. Once the KEY setting is configured the setting can never be read back, viewed, or saved with ACSELERATOR QuickSet software.

To encrypt a radio link, both radios must contain an SEL-3044 and the KEY settings must be set to the same value. See [Appendix B: SEL-3044 Encryption Card](#) for more information on the SEL-3044 Encryption Card.

Port Settings

The SEL-3031 settings allow you to configure the parameters for each of the three communications ports. The SEL-3031 comes standard with three EIA-232 ports. Port 1 can be ordered as an EIA-232, EIA-485, or serial fiber-optic port. [Table 4.6](#) shows the port settings ranges and default settings for Port 1, Port 2, and Port 3.

The protocol setting defines the type of data that will be passing through the serial port. This setting automatically sets parameters in the radio to optimize best performance. Any of the three serial ports may be set to any of the protocols. Ports 2 and 3 are always EIA-232 ports. For example, you have three ports of MIRRORED BITS® (MB8), or any combination of MB8, MODBUS, and STANDARD.

Table 4.6 Port X^a Settings

Settings Prompt	Settings Range	Setting Name := Factory Default
Protocol	STANDARD, MB8, MODBUS	PROTO := STANDARD
CTS State	Asserted, Deasserted	CTS := DEASSERTED
Echo	ON, OFF	ECHO := OFF

a. X = 1, 2, or 3.

PROTO sets the intended protocol used to communicate through the radio ports. Set to STANDARD for all byte-oriented protocols such as DNP3, ASCII, Synchrophasors, or file transfer. This is the default setting for PROTO and should be used unless you are using MIRRORED BITS or MODBUS. Set PROTO to MB8 to work with SEL MIRRORED BITS devices. The SEL-3031 only supports MB8 MIRRORED BITS protocol. See [Section 3: Job Done Examples](#) for more information on setting up MIRRORED BITS. Set PROTO to MODBUS when used with Modbus protocol. When PROTO is set to either STANDARD or MODBUS the radio will not perform the 32-bit CRC check on the received data. If you do not have a good link with high availability you will see noise on the channel. These errors are better handled by the communications protocols to ignore this data rather than have conflicting retry messages between the radio and communications protocols. If PROTO is set to MB8, the 32-bit CRC will remove any data that does not pass the CRC. The data rate on all three ports is fixed at 19200 bps. If the unit has an SEL-3044 Encryption Card then the data rate is fixed at 9600 bps.

NOTE: If you are using the SEL-3044 Encryption Card and PROTO is equal to MB8 you must change the connected devices' RMBxPU and RMBxDO settings = 2 to maintain the same level of channel security as standard MB8 protocol. This will delay operation by one processing interval but will give you a higher level of channel security.

Table 4.7 Fixed Port Settings

Port Setting	Fixed Port Settings	Fixed Port Settings With SEL-3044 Card
Data Rate	19200 bps	9600 bps
Data Bits	8	8
Parity	None	None
Stop Bit	1	1
RTS/CTS Flow Control	Off	Off

The **CTS** setting is used to set the state of the CTS (Pin 7) line on each of the ports. In most cases this setting should be set to deasserted. Most SEL devices require CTS deasserted in order for them to respond to DNP requests. The SEL-3031 does not support hardware flow control. It will only assert or deassert the CTS line to signal connected equipment to continue communication.

The **ECHO** setting is only enabled when Port 1 is ordered as an EIA-485 device. This setting is used to set up a two-wire versus four-wire EIA-485 connection. The default ECHO setting is set to ON which works with four-wire EIA-485 applications. For two-wire operation, the ECHO setting must be set to OFF, and Pins 1 and 7 and Pins 2 and 8 must be connected together (see [Table 2.9](#)).

Commands

Access Levels

Issue commands to an SEL-3031 serial port to view or change device settings or retrieve information. For security, these commands are available on different password-protected access levels. Throughout this section each command description indicates the access level at which the command is available. There are three access levels in the device, offering varying levels of control.

- Access Level 0 commands are the lowest security level. Access Level 0 commands support minimum identification.
- Access Level 1 commands are for reviewing information only (e.g., status) and not for making any changes.
- Access Level 2 commands are for changing device settings.

Go to [Communications on page 4.2](#) for instructions on connecting to the SEL-3031 through the USB interface.

The virtual serial interface created from the USB port must be set to 9600 bps, 8 data bits, 1 stop bit, and no parity to communicate to the SEL-3031.

Access Level 0

Once serial port communication is established with the SEL-3031, press **<Enter>** and you should see the following prompt:

```
=
```

NOTE: If you don't get the = prompt, then refer back to [Communications on page 4.2](#) to properly connect to the SEL-3031.

This is referred to as Access Level 0. Only a few commands are available at this level. One is the **ACC** command.

Enter **ACC** at the Access Level 0 prompt:

```
=ACC <Enter>
```

The **ACC** command takes the SEL-3031 to Access Level 1.

Access Level 1

When the SEL-3031 is in Access Level 1, the device sends the following prompt:

```
=>
```

From Access Level 1, use the **2AC** command to go to Access Level 2.

Enter **2AC** at the Access Level 2 prompt:

```
=>2AC <Enter>
```

Access Level 2

When the device is in Access Level 2, the SEL-3031 sends the following prompt:

```
=>>
```

All of the Access Level 1 commands are available in Access Level 2. The SEL-3031 responds with `Invalid Access Level` when a command is entered from an access level lower than the required level for the command. The device responds with `Invalid Command` to commands that are not available or are entered incorrectly.

ASCII Commands

The SEL-3031 includes ASCII commands and settings to properly set the SEL-3031. ACCELERATOR QuickSet software provides a user-friendly interface to set the SEL-3031, but either interface can be used to set the product.

DATE Command

Use the **DATE** command to view and set the date, as shown in [Table 4.8](#).

Table 4.8 DATE Command

Command	Description	Access Level
DAT	Displays the internal clock date.	1
DAT date	Sets the internal clock date (DATE_F set to MDY, YMD, or DMY).	1

The device can overwrite the date entered with other time sources, such as IRIG. Enter **DATE** to set the internal clock date. Separate the month, day, and year parameters with slashes. Set the year in four-digit format (for dates 2000–2099).

IDENTIFICATION Command

The **ID** command extracts device identification codes, as shown in [Table 4.9](#). The **ID** command is only available as a compressed (comma-delimited) command.

Table 4.9 ID Command

Command	Description	Access Level
ID	Returns a list of device identification codes, as shown below: <pre>=ID <Enter> "FID=SEL-3031-R100-V0-Z001001-D20091009", "08D2" "BFID=SLBT-3031-X307-V0-Z000000-D20091009", "0974" "CID=2B957901", "0330" "DEVID=RADIO 1", "03D9" "DEVCODE=72", "0310" "PARTNO=30310W01XXX", "0538" "CONFIG=00000000", "03E3" "SPECIAL=0", "02DE"</pre>	1

IRIG Command

Use the **IRI** command to read the demodulated IRIG-B time code at the management port or IRIG-B input, and to force immediate synchronization of the internal clock with the IRIG-B signal (see [Table 4.10](#)). If an IRIG-B signal is present at serial Port 2, the device will automatically synchronize the internal clock with the IRIG-B signal in a time period not exceeding one minute. It is not necessary to issue the **IRI** command for this automatic synchronization. If you are testing the device and do not want to wait for

the one-minute synchronization, issue the **IRI** command to force the device to synchronize immediately with the IRIG-B signal. You can also use the **IRI** command to determine whether the device is properly reading the IRIG-B signal.

Table 4.10 IRIG Command

Command	Description	Access Level
IRI	Forces synchronization of internal control clock to IRIG-B time-code input.	1

To force the device to synchronize to IRIG-B, enter the following command:

```
=>IRI <Enter>
```

If the device successfully synchronizes to IRIG-B, it will send the following header and access level prompt:

```
SEL-3031           Date: 04/12/2005   Time: 15:41:29  
DEVICE  
=>
```

If no IRIG-B code is present at the serial port input, or if the code cannot be read successfully, the device will respond as follows:

```
IRIG-B DATA ERROR  
=>
```

L_D Command

Use **L_D** to load firmware, as shown in [Table 4.11](#). See [Appendix A: Firmware and Manual Versions](#) for information on firmware and instruction manual changes.

Table 4.11 L_D Command

Command	Description	Access Level
L_D	Downloads firmware to the device.	2

PASSWORD Command

Use **PAS** to view or change existing passwords, as shown in [Table 4.12](#) and [Table 4.13](#).

Table 4.12 PAS Command

Command	Description	Access Level
PAS <i>level new passwords</i>	Sets a password for <i>new password</i> for Access Level <i>level</i> . ^a	2

a. Parameter level represents the device Access Levels 1 or 2.

WARNING

This device is shipped with default passwords. Default passwords should be changed to private passwords at installation. Failure to change each default password to a private password may allow unauthorized access. SEL shall not be responsible for any damage resulting from unauthorized access.

Table 4.13 Factory Default Passwords

Access Level	Password
1	OTTER
2	TAIL

To change the password for Access Level 2 from the default password TAIL to new password Ot3579, enter the following:

```
=>>PAS 2 <Enter>
Old PW:? **** <Enter> (Enter TAIL)
New PW:? ***** <Enter> (Enter Ot3579)
Confirm PW:? ***** <Enter> (Enter Ot3579)
Password Changed
```

```
CAUTION: This password can be strengthened. Strong passwords do not include a name, date, acronym, or word. They consist of the maximum allowable characters, with at least one special character, number, lower-case letter, and upper-case letter. A change in password is recommended.
=>>
```

Similarly, use **PAS 1** to change Access Level 1 passwords. Passwords can contain as many as 12 characters. Uppercase and lowercase letters are considered different characters. Strong passwords have 12 characters with at least one special character or digit and mixed-case sensitivity, and do not form a name, date, acronym, or word. Passwords formed in this manner are less susceptible to password guessing and automated attacks. Examples of valid, distinct, strong passwords are shown below.

- #Ot3579!ljd7
- \$A24.68&,mvj
- (Ih2dcs)36dn
- *4u-Iwg+?If-

Table 4.14 Valid Password Characters

Alpha	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a b c d e f g h i j k l m n o p q r s t u v w x y z
Numeric	0 1 2 3 4 5 6 7 8 9
Special	! " # \$ % & ' () * + , - . / : ; = . ? @ [\] ^ _ ' { } ~

If you forget your password, you can reissue a new password by following these steps:

- Step 1. In accordance with the appropriate safety regulations, turn off the device, and see *Front-Panel Jumpers on page 2.9* for instructions on accessing the jumpers.
- Step 2. Go to [Table 2.5](#) to locate Jumper 2 and short the jumper as shown.
- Step 3. Go to the appropriate access level and issue **PAS x** (x = 1 or 2) to enter a new password.
- Step 4. In accordance with the appropriate safety regulations, turn off the device and remove Jumper 2 to activate the password function.
- Step 5. Replace the front-panel cover and turn on the device.

QUIT Command

Use **QUIT** to revert to Access Level 0 from either Access Level 1 or Access Level 2, as shown in [Table 4.15](#).

Table 4.15 QUIT Command

Command	Description	Access Level
QUI	Sends you to Access Level 0.	0

Access Level 0 is the lowest access level; your SEL-3031 does not require a password check to descend to this level (or to remain at this level).

RADIO Command

The **RAD** command is for viewing statistics and data on the radio link, as shown in [Table 4.16](#). The **RAD** command provides two important types of information.

- ▶ **RSSI = Receive Signal Strength Indicator.** The RSSI shows the current strength of the receive signal from the radio. This command helps you to refine antenna positioning. The RSSI is reported in dBm and updates every time the **RAD** command is issued. The RSSI is calculated from the latest 50 frequency hops averaged over time. RSSI is very useful for optimizing performance on directional antennas and monitoring signal strength.

- **AVAILABILITY.** The radio automatically calculates the availability of the overall radio link and the availability of each hopping frequency. The availability is calculated by measuring the number of good radio frames received per the number of radio frames expected. The Overall is the tallied availability of each of the frequency zones used in the current hopping table. This number is valuable for measuring overall radio availability. The SEL-3031 also calculates the availability of each zone used in the current hopping table. The radio zones displayed in the **RAD** command are based on the **SKIP** setting. See [Table 4.5](#) for more information on Skip Zones. See [Section 5: Performance Monitoring, Testing, and Troubleshooting](#) for more information on using the availability to set the **SKIP** setting for improved radio performance.

Table 4.16 RAD Command

Command	Description	Access Level
RAD	View radio statistics	1
RAD C	Clear radio statistics	2

1	2	3	4	5	6	7	8
1234567890123456789012345678901234567890123456789012345678901234567890							
[Common Header]							
RSSI							
-69 dBm							
AVAILABILITY: From 10/02/2009 17:33:21							
Overall							
100.00 %							
Zone 1	Zone 2	Zone 3	Zone 4	Zone 5			
100.00 %	100.00 %	100.00 %	100.00 %	100.00 %			
Zone 6	Zone 7	Zone 8	Zone 9	Zone 10			
100.00 %	100.00 %	100.00 %	100.00 %	100.00 %			

Figure 4.10 RAD Command Response

SER Command

Use **SER** to view and manage the Sequential Events Recorder report, as shown in [Table 4.17](#).

Table 4.17 SER Command

Command	Description	Access Level
SER	Displays a chronological progression of all available SER rows (up to 1024 rows); row 1 is the most recent and row 1024 is the oldest.	1
SER row 1 SER row 1 row 2 SER date 1 SER date 1 date 2	Displays a chronological or reverse chronological subset of the SER rows.	1
SER C	Clears/resets all SER records.	2

If the requested SER report rows do not exist, the device will respond with the following:

```

NO SER data

```

SET Command

The **SET** command is for viewing or changing device settings, as shown in [Table 4.18](#). Append **TERSE** to skip the settings display after the last setting. Use this parameter to speed up the **SET** command. If you want to review the settings before saving, do not use the **TERSE** option.

Table 4.18 SET Command (Change Settings)

Command	Description	Access Level
SET G s^a	Set Global settings	2
SET R s	Set Radio settings	2
SET P s	Set serial Port settings	2

a. s = specific setting name.

Append the specific setting name you want to change in the **SET** command to immediately jump to the setting. If *s* is not entered, the device starts at the first setting. For example, to directly jump to the **TXPWR** setting in the Radio setting category, enter **SET R TXPWR <Enter>**. This will take you directly to the **TXPWR** setting.

If you want to set all of the Radio settings, issue the **SET R** command and it will start at the beginning of the settings list. Enter the desired setting value or press **<Enter>** to accept the existing setting, as shown in [Table 4.19](#).

Table 4.19 SET Command Editing Keystrokes

Press Key	Results
<Enter>	Retains the setting and moves to the next setting.
^<Enter>	Returns to the previous setting.
< <Enter>	Returns to the previous setting category.
> <Enter>	Moves to the next setting category.
END <Enter>	Exits the editing session, then prompts you to save the settings.
<Ctrl+X>	Aborts the editing session without saving changes.

The device checks each setting to ensure that it is within the allowed range. If the setting is not within the allowed range, the device generates an **Out of Range** message and prompts you for the setting again. When all the settings are entered, the device displays the new settings and prompts you for approval to enable them. Answer **Y <Enter>** to enable the new settings. The device is disabled for no longer than one second while saving the new settings. The **ALARM LED** illuminates momentarily and the **ENABLED LED** extinguishes while the device is disabled.

SHOW Command

When showing settings, the radio displays the settings label and the present value from nonvolatile memory for each setting class as shown in [Table 4.20](#).

Table 4.20 SHO Command (Show/View Settings)

Command	Description	Access Level
SHO G s	Show Global settings	1
SHO R s	Show Radio settings	1
SHO P s	Show serial Port settings	1

Append *s* and the specific settings name you want to view in the **SHOW** command to immediately jump to the setting. If *s* (and the settings name) is not included, the device presents settings beginning with the first in the group.

STATUS Command

Use **STA** to display the status report, as shown in [Table 4.21](#).

Table 4.21 STA Command (Device Self-Test Status)

Command	Description	Access Level
STA n	Displays the device self-test information <i>n</i> times ($n = 1-32767$). Defaults to 1 if <i>n</i> is not specified.	1
STA C	Reboots the device and clears self-test warning and failure status results.	2

Refer to [Section 5: Performance Monitoring, Testing, and Troubleshooting](#) for self-test thresholds and corrective actions, as well as information on hardware configuration conflict resolution. [Figure 4.11](#) shows the device response to the **STA** command.

```

=>>STA <Enter>
RADIO 1                               Date: 10/10/2009   Time: 16:44:00
STATION_A                             Time Source: Internal

Serial Number: 2009275250
FID=SEL-3031-R100-V0-Z001001-D20091009 CID=25D052CF
RFID=SEL-3031-R100-V0-D20091009
BFID=SLBT-3031-R100-V0-Z000000-D20091009
Part number 30310W01XXX

PROTOCOLS

PORT 1      PORT 2      PORT 3
STANDARD    MODBUS    MB8

SELF TEST RESULTS

FLASH      SDRAM      RADIO      RTC      SEC
OK         OK         OK         OK         ABSENT

Device Enabled
    
```

Figure 4.11 Device Response to the STATUS Command

[Table 4.22](#) shows the status report definitions and message formats for each test.

Table 4.22 STA Command Report (Sheet 1 of 2)

Status Report Designator	Definition	Message Format
FID	Firmware identifier string	Text Data
RFID	FPGA Firmware identifier string	Text Data
BFID	SELBOOT Firmware identifier string	Text Data
Part Number	Part Number of the SEL-3031	Text Data
PORT 1, 2, 3	Protocol setting for port 1, 2, and 3	STANDARD, MB8, MODBUS

Table 4.22 STA Command Report (Sheet 2 of 2)

Status Report Designator	Definition	Message Format
FLASH	Nonvolatile memory integrity	OK/FAIL
SDRAM	Integrity of code that runs in RAM	OK/FAIL
RADIO	Radio module status	OK/FAIL
RTC	Real-Time Clock status	OK/FAIL
SEC	SEL-3044 Encryption Card status	OK/ABSENT/RESET/FAIL

TIME Command

Use **TIME** to return information about the SEL-3031 internal clock, as shown in [Table 4.23](#). You can specify hours and minutes (seconds data are optional). Separate the hours, minutes, and seconds with colons, semicolons, spaces, commas, or slashes.

Table 4.23 Command Definitions

Command	Description	Access Level
TIME	Displays the present internal clock time.	1
TIME hh:mm	Sets the internal clock to <i>hh:mm</i> .	1
TIME hh:mm:ss	Sets the internal clock to <i>hh:mm:ss</i> .	1

Enter **TIME hh:mm** and **TIME hh:mm:ss** to set the internal clock time. The value **hh** is for hours 0–23; the value **mm** is for minutes 0–59; the value **ss** is for seconds 0–59. If you enter a valid time, the device will update, save the time in nonvolatile memory, and display the time entered. If you enter an invalid time, the SEL-3031 will respond with Invalid Time.

This page intentionally left blank

Section 5

Performance Monitoring, Testing, and Troubleshooting

Overview

This section provides information on monitoring radio performance, testing, and troubleshooting. Because the SEL-3031 is equipped with extensive self-tests, traditional periodic test procedures may be eliminated or greatly reduced.

Monitoring Radio Performance

This section describes the tools you can use to monitor and improve the radio performance. This section assumes that the radio link is up and running in service. There are several items that you can use to optimize the radio link. The first section explains how to optimize standard radio links using DNP3, Modbus®, or other byte-oriented protocols. The second section addresses monitoring the radio performance when using MIRRORED BITS®.

Monitoring and Improving Radio Link Performance

This section assumes the radio link is up and running with sufficient link availability. If the radio link is either not working or has very low availability view [Section 2: Installation](#) for information on properly installed and operating the radio.

Obtain access through the front USB port either with a terminal program or ACCELERATOR QuickSet® SEL-5030 Software. Access Level 1 and issue the **RAD** command (see [Figure 5.1](#)). The first value from the report is the RSSI receive signal strength indication. This is the level of received level strength of the radio given in dBm. A good radio link should have 20 dBm of margin to account for environmental conditions and signal fade. The SEL-3031 receiver is rated at -97 dBm. If you observe a value of -77 dBm or greater then you are receiving a strong signal. If the value is less than -77 dBm that does not mean the radio link will not work; it means that the performance and channel availability needs to be monitored. To increase the signal or availability numbers the radio antenna may need to be adjusted, output power increased, antenna replaced with a with a higher gain antenna, (not to exceed transmit power of 36 dBm EIRP), or the SKIP setting used to avoid zones with low availability. A path study should always be done before the radio is installed. The RSSI value

Monitoring Radio Performance

should match to the results of the path study. If the path study numbers do not match the actual results then either the data entered is incorrect or information about the locations was omitted. Contact SEL if you cannot get the calculated values to match the measured values.

```

RADIO 1                               Date: 09/11/2009   Time: 10:54:26
STATION_A                             Time Source: Internal

RSSI
-46 dBm

AVAILABILITY:           From 09/11/2009 10:53:50

Overall
100.00 %

Zone 1   Zone 2   Zone 3   Zone 4   Zone 5
100.00 % 100.00 % 100.00 % 100.00 % 100.00 %

Zone 6   Zone 7   Zone 8   Zone 9   Zone 10
100.00 % 100.00 % 100.00 % 100.00 % 100.00 %

```

Figure 5.1 Example RAD Command

If you are using directional antennas, verify they have identical orientation—both sides must be either polarized horizontally or vertically. Typically, a vertically polarized antenna will give better results than a horizontally polarized antenna. If the location of the radio antenna is shared with other antennas operating at the same frequency, then proper spacing and opposite polarization should be used on one set of the antennas, along with using the SKIP setting. See [Section 2: Installation](#) for more information on antenna installation. Check the aiming of the antenna while updating the **RAD** command until you get the strongest signal. This will require two people, where one person is moving the position of the antenna in small increments, while the other is monitoring the RSSI. The antenna position must be rotated on both sides to obtain the highest signal strength. The RSSI must also be reviewed on each radio. The receive strength on the remote radio will likely be different than the received strength on the master radio.

The last step to check is the availability of the radio link. The **RAD** command will give the overall availability of the radio link. For protection systems the desire is to have a radio link with 99.99% availability. This overall availability number is a great way of directly obtaining this number. If you are running **MIRRORED BITS** then you can also use the end devices for the availability number.

To get a good availability reading, issue a **RAD C** command from Access Level 2. This will reset all of the availability numbers. Let the radio link run for a couple of days or longer. The longer period of time, the more accurate the numbers. After a few days have passed issue the **RAD** command and view the availability numbers. If the overall availability number is less than desired then look at the availability numbers per zone. If all of the zones are down in availability then more adjustment is needed on the antennas. If a few of the zones are down and the rest are acceptable then go back to the radio settings and change the SKIP zone setting. Enter the zones, up to six, that you want to skip with the lowest availability. Issue a **RAD C** command and let the radio run for a couple of days.

You may need to repeat these steps before the availability reaches the desired level. Note: There are 16 zones available in the SEL-3031 where a radio link only uses a maximum of 10 zones. Skipping zones will turn on zones not previously used and may give worse performance. The default SKIP setting of NONE will make the SEL-3031 SKIP zones 11–16.

If the availability of most of the zones is bad (low) and positioning the antenna did not help then the radio link has a large amount of interference or there is an obstruction to the Fresnel zone that is causing reflection issues. The interference can be caused by a number of items. A path study is critical to determine how good the line-of-sight is and how high the antennas need to be. If the path study results do not match your actual results you will need to make sure all of the parameters used to make the path study were correct. If the results still do not match then there is an unaccounted obstruction in the path (either buildings or trees) that is causing the decrease in availability. View [Section 2: Installation](#) for more information on properly installing the antenna. If the availability numbers are less than desired then the problem is within the location, interference, or multipath radio issues. If the antenna tower is not located high enough and proper steps are not done to detect noise floors or obstructions to the fresnel zone then the availability numbers may not reach those used in the path study.

Monitoring MIRRORRED BITS Performance

When using one, two, or three ports of the SEL-3031 for MIRRORRED BITS communications it is important to monitor the availability of the channel. The SEL-3031 provides channel availability information and the MIRRORRED BITS devices each contain communications data for each MIRRORRED BITS channel. This section describes how these work and how to optimize the MIRRORRED BITS channel to achieve a high level of availability.

The end of the previous section describes how to measure the availability of the radio link. All SEL relays that have MIRRORRED BITS give a full channel monitoring report that will give the unavailability and a report on all of the data drops. The SEL-3031 displays the availability and SEL MIRRORRED BITS devices display the unavailability. The relationship of the two is represented below.

$$\text{Availability} = 1 - \text{Unavailability}$$

The SEL-3031 will show a lower availability than shown by the SEL relays with MIRRORRED BITS. The difference lies in how the radio monitors each packet of MIRRORRED BITS. Upon detecting bad packets the SEL-3031 removes the packets before they reach the relay. The relay will only declare a dropped channel if it receives bad data or after a period of time expires without seeing a new data packet. This gives the SEL-3031 a chance to ride through several bad hops, remove corrupted data, keep the channel up and operating, and minimize the amount of total unavailability as seen by the MIRRORRED BITS devices.

Before you use an SEL device's MIRRORRED BITS communications report, make sure you go through [Monitoring and Improving Radio Link Performance](#) to verify the radio is optimized and the SKIP setting is set to avoid noisy zones.

Monitoring Radio Performance

Monitoring MIRRORRED BITS performance over a radio link is critical to ensure proper operation when called upon to operate. The RBAD and CBAD bits provided in every SEL device with MIRRORRED BITS can be used to alarm when the radio link is degraded below levels needed for proper operation.

- **RBADPU:** Setting for the amount of time the channel is in a failed state before setting the RBAD alarm Relay Word bit.
- **CBADPU:** Setting for the threshold of the CBAD channel availability alarm.

When a MIRRORRED BITS channel is operating correctly, Relay Word bit ROK is set to 1. When the channel is disturbed, ROK drops out. The ROK bit is not recommended for use as an alarm point. ROK is a good indication of the channel's health. If the ROK bit is toggling, this is an indication of an intermittent channel problem.



Figure 5.2 RBAD Generation

The RBAD bit is generated by the output of the RBAD timer. The RBAD timer is driven by the output of the ROK signal. RBAD is the recommended bit to indicate communications alarms. Typically, a communications outage of two seconds or greater is considered an alarm condition. RBAD should be set on both MIRRORRED BITS device to the maximum length of outage before declaring an alarm.

The CBADPU setting is generated from the unavailability of the MIRRORRED BITS channel. For example, if RBADPU is set to 2 seconds and the longest channel disruption was 1 second out of every second and this occurred every 2 seconds, RBAD would not assert. RBAD would not assert because MIRRORRED BITS is not disrupted for longer than 2 seconds at any time. Relay Word bit CBAD and the CBADPU setting solves this problem. To set CBADPU there are two good options. The first option is to set it to 2000. This is a common value used based upon spread spectrum radio use in the field. The CBAD Relay Word bit will assert when the unavailability of the channel exceeds 0.02.

The other method in setting CBAD is to let the radio link run for a period of time and monitor the performance. After reviewing a month of unavailability you will be able to set CBADPU above the unavailability value.

The proper setting and use of CBAD and RBAD is important to report when the communications link has failed or has become intermittent enough to cripple proper communication. Over time, many issues can occur to cause a bad or intermittent radio link. Items such as tree growth, new building construction, or another radio added at

the site or in the path of the current radio link. It is important to take CBAD and RBAD and use them in the relay to trigger an alarm condition through an output contact or have the SCADA system detect the alarm. Line-of-site radio paths can experience adverse conditions over time and it is critical to constantly monitor the radio performance to keep the availability numbers as high as possible.

Self-Test

All self-tests are described in [Table 5.1](#). If all diagnostic tests are passed, the **ENABLED** LED is on, the **ALARM** LED is off, and the contact output is open. If the device is disabled, the **ENABLED** LED is off, the **ALARM** LED is illuminated, and the contact output is closed.

Table 5.1 Device Self-Tests

Self-Test	Description	SER Message	Alarm LED	Alarm Contact
FPGA Version Mismatch	Fails if FPGA registers do not match expected.	Yes	On	Closed
Data RAM	Performs read/write tests on each section of Data RAM.	Yes	On	Closed
Code RAM	Performs a comparison test against code flash.	Yes	On	Closed
Code Flash	Checksum is continually computed on code base.	No	On	Closed
Flash (Settings)	Performs a validity test every hour on the settings.	Yes	On	Closed
Processor Exception	Indicates processor failure.	Yes	On	Closed
RTC	Indicates clock chip static RAM failures.	Yes	On	Closed

Troubleshooting

Table 5.2 Troubleshooting Tips (Sheet 1 of 2)

Symptom	Probable Cause	Corrective Action
ALARM LED is ON	Radio recognized a status failure.	Cycle power, issue STATUS command. If alarm signal returns, return unit to the factory for repair.
ALARM LED flashes ON every half second.	Radio detected a VSWR error where there is an open or short on the antenna port.	Verify all connections from the antenna to the radio are secure. Verify the antenna, feedlines, or lightning arres- tor is not damaged.
The SEC LED is flashing.	The SEL-3031 properly detects the encryption card but the card is in reset and doesn't have the key set.	Use ACSELERATOR Quick-Set and set the KEY setting. This must be set the same on both radios.
Cannot connect to the radio through the USB port.	USB driver not installed properly.	Check for active SEL to USB drivers from your PC in Device Manager Ports section. If that does not work, uninstall and rein- install the driver and restart your PC.
Cannot change radio set-tings.	Invalid password.	Install password disable jumper and change pass- words using the PAS com- mand. See <i>Password Jumper on page 2.10</i> for information on how to dis- able passwords.
Wall-mount radio will not turn on.	The polarity of the power supply wires is reversed.	Check the correct polarity and reverse if incorrect.

Table 5.2 Troubleshooting Tips (Sheet 2 of 2)

Symptom	Probable Cause	Corrective Action
<p>The Remote radio will not link up to the Master.</p>	<p>Radio address or mode is not set correctly.</p>	<p>The Master and Remote radios must be set to the same address and have the same SKIP settings. Check that the Master radio LINK light is ON and that the NID address and SKIP setting is set correctly on both units.</p>
	<p>Antennas are not pointed correctly, or there is a bad antenna cable.</p>	<p>Use ACSELERATOR Quick-Set on the radio to issue the RAD command to check for signal strength. If the signal is low, try to re-aim both antennas to gain signal strength and check for bad antenna cables. See Section 2: Installation for more information on proper radio installation.</p>

This page intentionally left blank

Appendix A

Firmware and Manual Versions

Firmware

Determining the Firmware Version in Your Device

To find the version number of the firmware in your SEL-3031, use the **STA** command (see *STATUS Command on page 4.24* for more information). The firmware revision number is after the R, and the release date is after the D. For example, the following string shows firmware version number 100 with a release date of October 9, 2009:

```
FID=SEL-3031-R100-V0-Z001001-D20091009
```

Table A.1 lists the firmware versions, a description of any modifications, and the instruction manual date code that corresponds to firmware versions. The most recent firmware version is listed first.

Table A.1 Firmware Revision History

Firmware Identification (FID) Number	Summary of Revisions	Manual Date Code
SEL-3031-R100-V0-Z001001-D20091009	► Initial version.	20091009

Instruction Manual

The date code at the bottom of each page of this manual reflects the creation or revision date.

Table A.2 lists the instruction manual release dates and a description of modifications. The most recent instruction manual revisions are listed at the top.

Table A.2 Instruction Manual Revision History

Revision Date	Summary of Revisions
20091009	► Initial version.

This page intentionally left blank

Appendix B

SEL-3044 Encryption Card

Overview

The SEL-3044 Encryption Card is a standalone card that can be added to the SEL-3031 to encrypt the radio data being sent between SEL-3031 radio links. The SEL-3044 can be ordered at time of purchase or added as an upgrade. The SEL-3044 requires one setting to provide a very strong level of encryption over the radio link. Anytime the SEL-3031 is used with critical data it is strongly advised to use the SEL-3044. If you do not use the SEL-3044, the data between the radios can be compromised. If you want to encrypt the radio link an SEL-3044 is required in both radios.

NOTE: The SEL-3044 is NOT a PCMCIA card. Do not install in a laptop.

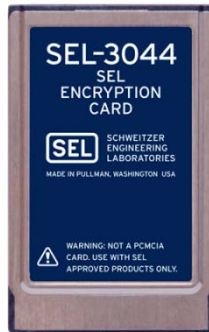


Figure B.1 SEL-3044 Encryption Card

NIST FIPS 140-2 Level 2 Security Requirements

The National Institute of Standards and Technology (NIST) developed the Federal Information Processing Standards (FIPS) 140-2 standard that defines the security requirements for a cryptographic module utilized within a security system protecting sensitive information in computer and telecommunications systems.

Protection of a cryptographic module within a security system is necessary to maintain the confidentiality and integrity of the information protected by the module.

FIPS 140-2 Level 2 covers areas related to the secure design and implementation of a cryptographic module.

These areas include the following:

- Cryptographic module specification
- Cryptographic module ports and interfaces
- Roles, services, and authentication
- Finite state model
- Physical security
- Operational environment
- Cryptographic key management
- Electromagnetic interference/electromagnetic compatibility (EMI/EMC)
- Self-tests
- Design assurance
- Mitigation of other attacks

The SEL-3044 meets FIPS 140-2 Level 2 requirements and has been submitted for FIPS 140-2 Level 2 security validation. The status is currently pending NIST approval. This level of data security provides assurance that best practices have been applied to the design, testing, and manufacturing of the SEL-3044.

Theory of Operation–SEL Protocol

Encryption Components

A cryptographic device consists of three components: encryption algorithm, key management, and device security functions.

Encryption Algorithm

The Advanced Encryption Standard (AES) algorithm with a key length of 256 bits is implemented in the SEL-3044. This algorithm is a secure means of encrypting data. The AES algorithm and key length provide proven resistance to modern cryptanalysis.

Key Management

System key (256 bits): The system key is set by a passphrase of 8 to 80 characters. The passphrase is used to generate a system key. The system key is used to encrypt and securely transmit unique session keys (see below). It also provides a cryptographic authentication mechanism for rejecting session requests by unauthorized SEL-3044 devices.

Session key (256 bits): Session keys are used to encrypt all protected user data prior to transmission. They are produced at system startup and periodically during sessions. Session keys are generated using the process outlined by FIPS 186-2. They are produced using an integrated physical random number generator (RNG) and a statistical data whitening algorithm. Session keys are purely random and are not linked to the system key. The use of unique session keys limits the amount of data that is encrypted with a single key value, thus strengthening the system against cryptanalytical attack. The session keys are encrypted using the system key prior to being exchanged between SEL-3044.

Device Security

The SEL-3044 incorporates a hardware RNG and FIPS-approved data whitener to guarantee that all session keys contain 256 bits of entropy (i.e., completely random). This guarantees that encoded messages are protected by a true cryptographic strength of 256 bits.

Multilevel password authentication defines user security roles.

Changing the system key can only be performed by authorized users that have Access Level 2 passwords.

If required, the user can reset the entire device. This allows the user to reinitialize the system key should the security parameters need to change due to IT security procedures or if the programmed system key value is lost.

NOTE: This process requires physical access to the SEL-3031 and cannot be done remotely.

Security of the Transferred Data

The SEL-3044 provides data encryption with a cryptographic key strength of 256 bits. The SEL-3044 RNG is designed so that all possible key values are equally likely. It is widely accepted throughout the cryptographic community that it is not realistically possible to mount a successful brute force (key guessing) attack on a 256-bit key space with technology available today.

Application Consideration

Two messaging structures exist to establish and maintain a secure, coherent communications link between two SEL-3044 devices: In-Band (IB) frames and Out-of-Band (OOB) frames. IB frames transmit encrypted user data (i.e., data received on the trusted data interface) between the two protected devices (computer, IED, RTU, etc.). OOB frames transmit connection control data between the two SEL-3044 devices in the communications link. Control frames are required to implement key exchanges, status checks, and other functions necessary to maintain the communications link.

In-Band Message Format

IB messages consist of the encrypted data plus the frame overhead necessary to maintain synchronization and channel security. *Figure B.2* shows the format of an IB frame. The shaded area is the encrypted data portion of the message.

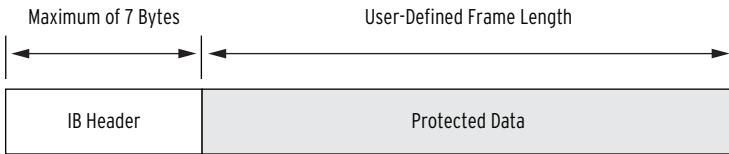


Figure B.2 In-Band Data Packet Format

Out-of-Band Message

Out-of-Band (OOB) messages are used to exchange control information between SEL-3044 cards. These exchanges include loss of synchronization, request for rekey, and rekey information.

IMPORTANT: During OOB message communication, data exchange between the devices connected to the SEL-3044 cannot occur. Communication will be temporarily halted during a rekey.

System Settings

The system key provides encryption and secure transmission of unique session keys between SEL-3044 devices. It also provides a cryptographic authentication mechanism for rejecting session requests by unauthorized devices. Session keys provide encryption of all protected user data prior to transmission. An SEL-3044 produces session keys at system startup, and periodically during sessions, using the process outlined by FIPS 186-2. An integrated physical RNG and statistical data-whitening algorithm generate purely random session keys. Through the use of these unique session keys, the SEL-3044 limits the amount of data encrypted by any single key value, thus strengthening the system against attack.

NOTE: Both SEL-3044 transceivers that communicate with each other must share the same system key.

AES Overview

The AES encryption function uses a 256-bit-long secret key and scrambles the contents of each frame prior to transmission to provide cryptographically strong data confidentiality.

Encryption is the process of transforming a digital message from its original form into a form that an unauthorized individual cannot interpret. The output of the encryption process is a function of the message and an encryption key (see [Figure B.3](#)).

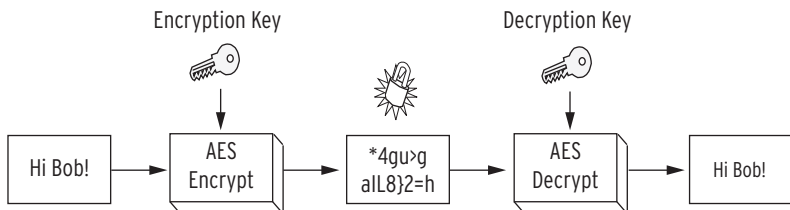


Figure B.3 Operation of the AES Encryption Function

This encryption process must be completely reversible by an authorized individual with access to the secret decryption key. Authority to read a message is only granted by sharing knowledge of the secret decryption key. Ideally, only individuals with knowledge of the decryption key can reverse the encryption operation and interpret the protected message. There are two main classes of encryption functions. Symmetric key encryption relies on the same secret key value, K , to perform both the encryption and decryption transformations. Asymmetric key encryption, on the other hand, uses a different key for encryption and decryption for example, asymmetric encryption might use K_1 for encryption and K_2 for decryption. The AES encryption algorithm the SEL-3044 uses is a symmetric block cipher with an encryption/decryption key size of 256 bits.

The AES is the latest encryption standard adopted by NIST. In 1997, NIST challenged the cryptographic community to develop the next generation encryption algorithm to replace the aging DES and 3DES encryption standards. In 2000, NIST chose the Rijndael encryption algorithm as the AES encryption standard. During the evaluation of candidates for the AES standard, some of the world's best cryptanalysts analyzed and approved Rijndael. Since its adoption in 2001, AES has proven to be very effective against known attacks, very efficient, and simple to implement.

Frame Replay Protection

Every frame in a given session contains a sequence number field. The value in this field increments every time a frame is transmitted. The SEL-3044 will not accept any frame that contains a sequence number value that is less than, or equal to, the sequence number value received in the last frame. It is exceedingly difficult to maliciously alter the sequence number in any given frame to bypass this functionality because the sequence number field is protected by the strong cryptographic authentication mechanisms. Because of the protection these mechanisms provide, an attacker cannot capture a previously transmitted frame and resend the frame to the SEL-3044 to cause harmful actions.

Resetting the SEL-3044

At some point it may be necessary to reset the SEL-3044. You must have access to the front USB port on the SEL-3031. The SEL-3044 must be installed in the SEL-3031 to reset. Use either ACCELERATOR QuickSet® SEL-5030 Software or a terminal interface to access the Radio settings. In the Radio settings, set the KEY setting to None, save the setting, then set a new passphrase and save.

If you have lost your passwords to access the SEL-3031 then you must disable passwords by temporarily installing a jumper. Refer to [Password Jumper on page 2.10](#) and [Table 2.5](#) for information and instructions on disabling passwords.

Installing SEL-3044 in the SEL-3031

The SEL-3044 can be ordered at time of purchase of the radio or it may be added later as a field upgrade. The process involves powering down the radio, removing hardware, installing the card, and setting the radio.

CAUTION

The radio contains devices sensitive to Electrostatic Discharge (ESD). When working on the radio with the front or top cover removed, work surfaces and personnel must be properly grounded or equipment damage may result.

- Step 1. Remove the power from the radio and remove all connections from the device.
- Step 2. Rack-mount SEL-3031: Loosen the six front-panel screws and remove the front panel.

Wall-mount model: Use a Torx® T15 screwdriver and remove the four screws located on the sides of each corner. Slide the cover up and back to reveal the front of the unit.
- Step 3. Between the main board and radio board there is a PCMCIA card slot. Gently slide the SEL-3044 straight into the card slot. Push firmly until it is fully seated.

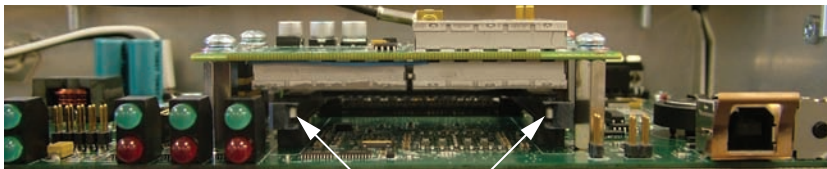


Figure B.4 Encryption Card Location

- Step 4. Reassemble the unit in reverse order of [Step 2](#).
- Step 5. Apply power to the unit and verify the SEC light is flashing. The flashing LED shows the SEL-3044 is functioning properly and is currently in Reset.
- If the SEC LED is not flashing, then you must turn off the unit and verify the card is properly seated in the pins.
- If the SEC LED does not flash on power up after checking the card is seated properly, then you will need to send the radio and encryption card back for repair.
- Step 6. Use ACCELERATOR QuickSet to connect to the device and set the KEY setting to enable the SEL-3044.
- Step 7. The KEY setting must be set the same on both SEL-3031 transceivers for proper operation.

This page intentionally left blank



SCHWEITZER ENGINEERING LABORATORIES, INC.

2350 NE Hopkins Court • Pullman, WA 99163-5603 USA

Tel: +1.509.332.1890 • Fax: +1.509.332.7990

www.selinc.com • info@selinc.com