



**Toys R Us**

Part of the "R" US Family of Brands.

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

FAST LANE is a mark of Geoffrey, LLC, a subsidiary of Toys "R" Us, Inc. © 2010 Geoffrey, LLC Made in China Distributed in the United States by Toys "R" Us, Inc., Wayne, NJ 07470 Distributed in Australia by Toys "R" Us (Australia) Pty Ltd., Regents Park NSW 2143 www.toysrus.com

ITEM #98873 O.I. NO. 4831

6+

INCLUDED

0.6V x 1

9V x 1

# CAUTION- ELECTRIC TOY

Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Input: 120VAC, 60HZ 9.5W Only. Output: 12VDC, 0.2A

**ATTENTION PARENTS:  
IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.**

## OPERATING INSTRUCTIONS:



### BATTERY PACK CARE / CAUTIONS:

1. If battery pack and/or connectors are wet, thoroughly dry before charging.
2. Unplug the battery pack if it is not going to be used for several days.
3. Do not charge battery pack that is hot, wet or shows signs of leakage or corrosion.
4. Do not expose to fire, as explosion may result.
5. Do not disassemble the battery pack.

### BATTERY INSTALLATION:


**THE RECHARGEABLE NI-MH BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 4 HOURS PRIOR TO USE.**

1. Plug the wall pack battery charger into wall outlet.
2. Connect the battery pack and charger cables by snapping together the jack and the socket tightly. (See Diagram 1)
3. After charging for 4 hours, the battery pack will be warm. This condition is normal for fully charged batteries. If the speed of the car slows down suddenly, it is time to recharge.
4. To disconnect cables, press down on the clip and pull apart. (See Diagram 1)
5. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging.
6. Recharging a warm or hot battery pack will greatly shorten battery life.

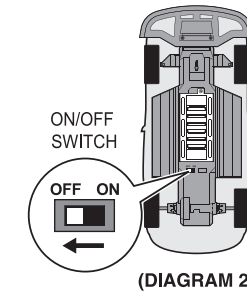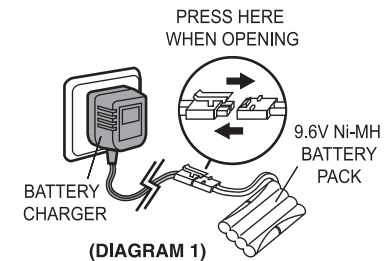



### VEHICLE:

- A. Make sure the ON/OFF switch is in the "OFF" position. (See Diagram 2)
- B. Unscrew to open the battery cover and place the battery pack inside properly. (See Diagram 3)
- C. Plug the jack of the battery pack into the socket of the battery compartment. (See Diagram 3)
- D. Replace the battery cover.

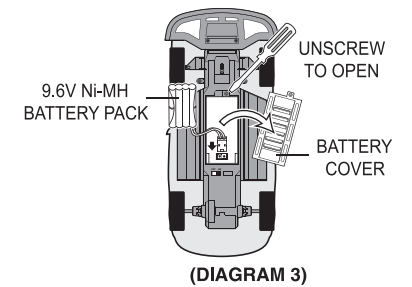

### TRANSMITTER:

- A. Unscrew the battery cover at the bottom of the transmitter and place a 9-volt battery inside following the engraved signs (See Diagram 4).
- B. Replace the battery cover.


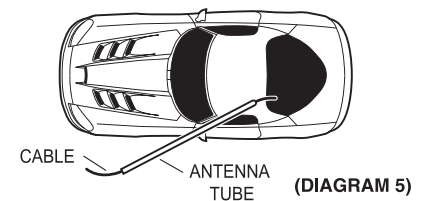
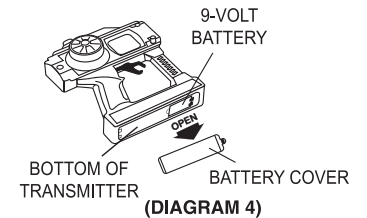


### VEHICLE OPERATION:

- A. Pass the cable through the antenna tube provided and plug into the vehicle tightly. (See Diagram 5)
- B. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 2)


### FORWARD RUNNING (TURBO POWER BOOST)

- C. Pull the trigger backward for forward running. (See Diagram 6)
- D. Pull the trigger to half way for normal speed. (See Diagram 7)
- E. Pull the trigger to full extension for turbo speed. (See Diagram 8) Release the trigger half way to resume normal speed.

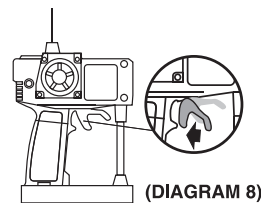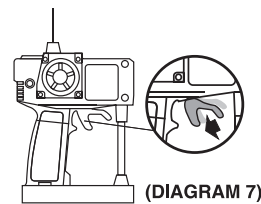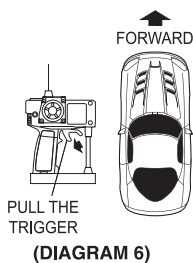

### DRIVING IN REVERSE:


- F. Push the trigger of the transmitter forward (away from you). (See Diagram 9)

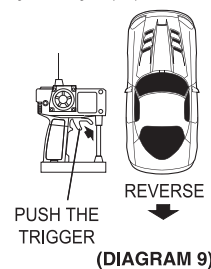

### FRONT WHEELS STEERING



#### ADJUSTMENT:

- G. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 10)
- H. If the vehicle runs toward left, turn Steering Alignment Lever towards "R".
- I. If the vehicle runs toward right, turn Steering Alignment Lever towards "L".

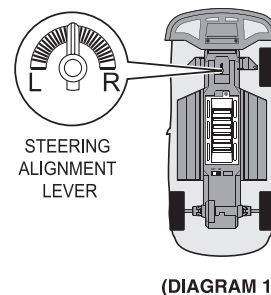


#### STEERING OPERATION:

- J. To make left or right-hand turns while driving forward, turn the steering wheel to left or right while pulling the trigger of the transmitter back (towards you). (See Diagram 11)
- K. To make left or right-hand turns while driving in reverse, turn the steering wheel to left or right while pushing the trigger of the transmitter forward (away from you). (See Diagram 12)

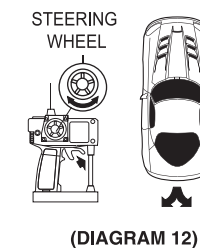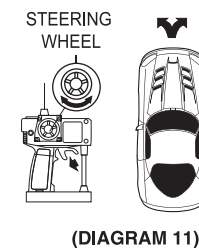

### STOP OPERATION:

- L. Release the trigger to stop. (See Diagram 13)

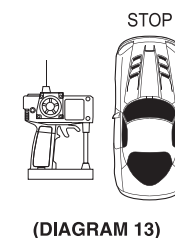

### PERFORMANCE TIPS FOR VEHICLE

- Do not drive car on grass, sand or carpet.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.

FCC NOTE:  
THE ANTENNA PROVIDED IS A UNIQUE ANTENNA, BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT, SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**CAUTION:  
ELECTRIC TOY**  
Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT : 120VAC-60Hz-9.5W ONLY  
OUTPUT : 12VDC-0,2A

www.toysrus.com