

ELECTRONIC WHOOPEE CUSHION

On / Off Switch
to operate the
receiver



Fig. 1 FRONT

WHOOPEE CUSHION

 


Fig. 2 BACK


Apply double
faced tape

Battery
compartment

4 x AAA size
battery



 Fig. 3



LED indicator

Activate
button

Key ring hole

Fig. 4 FRONT

1x 12-volt battery

Fig. 5 BACK

REMOTE CONTROL

BATTERY REQUIREMENT:

ELECTRONIC WHOOPEE CUSHION operates on DC 6V four AAA batteries. **REMOTE CONTROL** operates on one 12-volt battery.

HOW TO STALL THE BATTERY IN ELECTRONIC WHOOPEE CUSHION / REMOTE CONTROL:

1. Slide the cover, at the back of **ELECTRONIC WHOOPEE CUSHION / REMOTE CONTROL**, backward to open. (see fig. 2 / fig. 5)
2. Load new batteries, taking care that the polarities indicated on the batteries plus (+) and minus (-) correspond with the engravings on the Battery Compartment. (see fig. 3)
3. Replace the Battery Compartment cover securely.

FIG. THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY LOSS OR INJURY INCURRED CAUSED BY UNAUTHORIZED MANIPULATION TO THIS EQUIPMENT. USER MUST ALWAYS USE YOUR OWN BEST JUDGMENT TO OPERATE THE EQUIPMENT.

HOW TO PLAY:

A) DIRECT TO ACTIVATE

Press the **TRY ME** button to hear the funny fart sounds as matter of fact on or off the **ON/OFF** switch.

B) USING THE REMOTE CONTROL

1. Turn on and hide the **ELECTRONIC WHOOPEE CUSHION** wherever you want.
2. When you are ready to "let loose", press the **REMOTE CONTROL** button to activate the sounds. The LED indication will light up when pressing. (see fig. 4)
3. Apply double faced tape to mount under a chair or table if necessary.

*If strong radio signals are presents, it may be false to activate.