
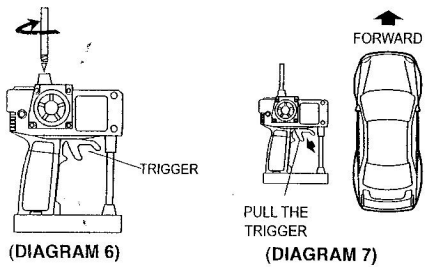
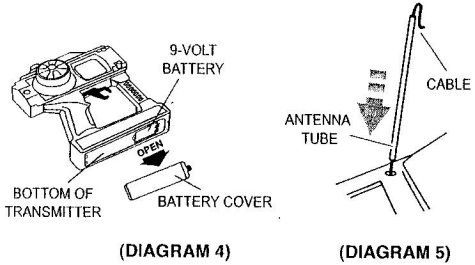


Unscrew the battery cover at the bottom of the transmitter and place a 9-volt battery inside following the engraved signs (See Diagram 4).







B. Replace the battery cover.

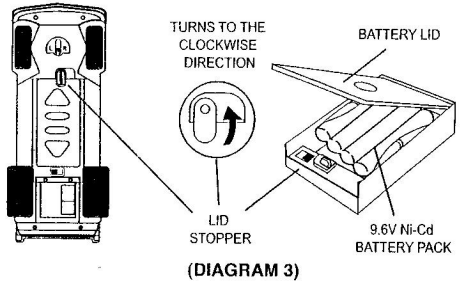

- A. Pass the cable through the antenna tube provided and plug into the vehicle tightly. (See Diagram 5)
 B. Screw the antenna onto the top of the transmitter and extend to full length. (See Diagram 6)
 C. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram 2)

FORWARD RUNNING (TURBO POWER BOOST)

- D. Pull the trigger backward for forward running. (See Diagram 7)
 E. Pull the trigger to half way for normal speed. (See Diagram 8)
 F. Pull the trigger to full extension for turbo speed. (See Diagram 9) Release the trigger half way to resume normal speed.

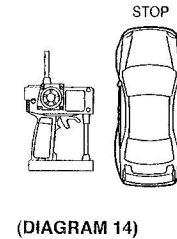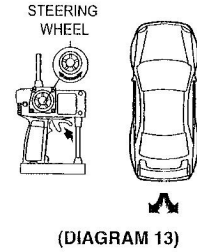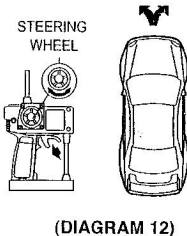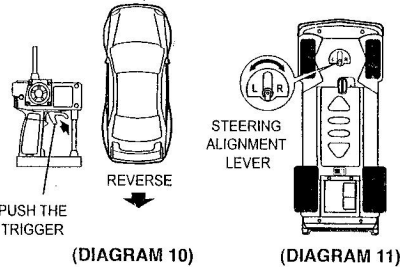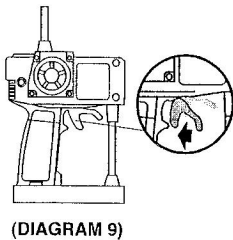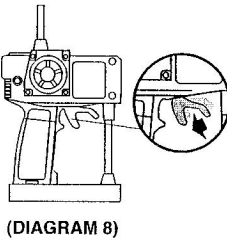

G. Push the trigger of the transmitter forward (away from you). (See Diagram 10)

FRONT WHEELS STEERING ADJUSTMENT:

- H. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram 11)
 I. If the vehicle runs toward left, turn Steering Alignment Lever towards "R".
 J. If the vehicle runs toward right, turn Steering Alignment Lever towards "L".

STEERING OPERATION:

- K. To make left or right-hand turns while driving forward, turn the steering wheel to left or right while pulling the trigger of the transmitter back (towards you). (See Diagram 12)
 L. To make left or right-hand turns while driving in reverse, turn the steering wheel to left or right while pushing the trigger of the transmitter forward (away from you). (See Diagram 13)

STOP OPERATION:

- M. Release the trigger to stop. (See Diagram 14).

- Do not drive car on grass, sand or carpet.
- Do not drive car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is in the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when they are not in use.

ATTENTION PARENTS:
 IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

CAUTION:
 ELECTRIC TOY
 Not recommended for children under 6 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

INPUT : 120VAC-60Hz-5.5W ONLY
 OUTPUT : 12VDC-0.2A

www.toysrus.com