

# BATTERY INSTALLATION

## IMPORTANT:

Please note the vehicle uses a 9.6V Rechargeable Battery Pack and the Battery Pack is charged by a Charger .

## BATTERY LOADING

(The rechargeable Ni-Cd battery pack is not charged, please charge it for 8 hours prior to use)

1. Plug the Battery Charger.
2. Connect the cables leading from the Battery Pack and the Charger together by snapping the jack and the socket tightly. (See Diagram #1a)
3. To disconnect cables, press down on the clip and pull apart. (See Diagram #1a)
4. You should charge the battery pack for 8 hours the first two times. Then subsequent charges will only require 4 hours.
5. After charging for 4 hours, the battery will be warm. This condition is normal for fully charged batteries.
6. If the speed of the car slows down suddenly, it is time to recharge.
7. After use, the battery pack will be hot! Wait at least 20 minutes until it cools before recharging. Recharging a warm or hot battery pack will greatly shorten the use life of the battery.
8. The toy must be used with the recommended transformer.
9. The transformer is not a toy.

## BATTERY PACK CARE

- If battery pack and connector are wet, thoroughly dry before charging.
- Battery packs can be charged for much longer periods without harm. However we recommend unplugging the battery pack if battery pack will not be used for several days.

## CAUTIONS

- Do not charge battery pack that is hot, wet or shows leakage or corrosion.
- May explode if disposed of in fire!
- Do not disassemble the battery pack.

## HOW TO REMOVE AND INSERT REPLACEABLE BATTERIES:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Different types of batteries or new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with the correct polarity.
7. Exhausted batteries are to be removed from the toy.
8. The supply terminals are not to be short-circuited.
9. For best performance only the recommended batteries /their equivalent are to be used.
10. Remove battery when toy is not in use.

## ATTENTION PARENTS

It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

## VEHICLE

1. Slide the ON/OFF switch to the "OFF" position . Make sure the ON/OFF switch is at the "OFF" position. (See Diagram #2)
2. Turn the lid stopper in an anti-clockwise direction to open the battery lid. (See Diagram #3)
3. Lift the battery lid to open and place the battery pack inside securely. (See Diagram #1a)
5. Replace the battery lid and turn the lid stopper in a clockwise direction to close.

## TRANSMITTER

1. Slide to open the battery compartment cover at the back of the Remote Control unit and insert four AA batteries according to the diagram in the battery compartment securely. (See Diagram #4)
2. Replace the battery compartment cover.

## FCC NOTE:

THE ANTENNA PROVIDED IS A UNIQUE ANTENNA. BY INSTALLATION OF UNAUTHORIZED ANTENNA TO THIS EQUIPMENT. SUCH UNAUTHORIZED INSTALLATION COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

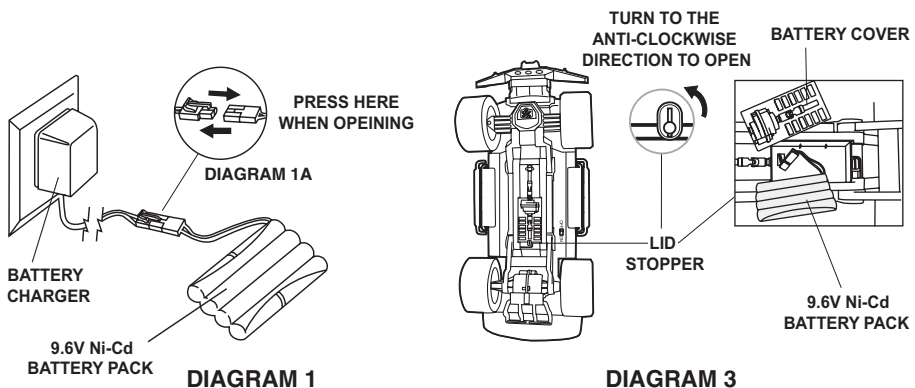 


DIAGRAM 1

DIAGRAM 3

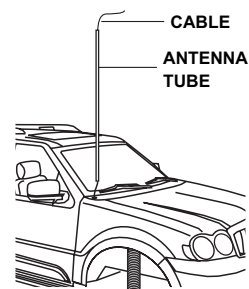 


DIAGRAM 5

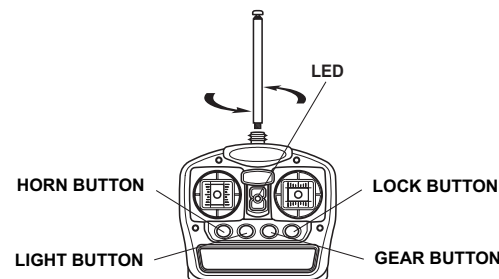 


DIAGRAM 6

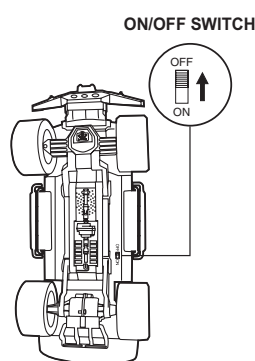 


DIAGRAM 2

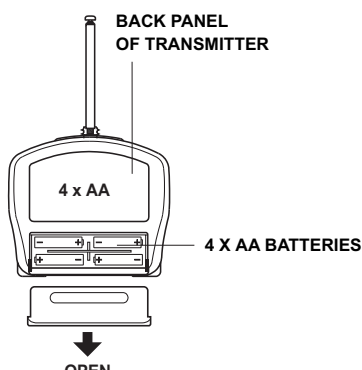 


DIAGRAM 4

 
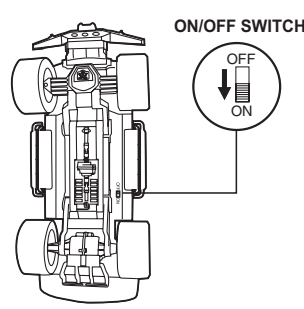 


DIAGRAM 7

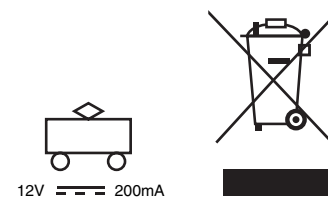

CE 0681

Visit us at [www.ez-tec.com](http://www.ez-tec.com)  
PRINTED IN CHINA  
O.I. NO.3998

ITEM: 95967

SIZE: 210MM X 297MM

PN#65-3998-100-0100

## HOW TO PLAY

### START TO PLAY

1. Build up antenna by passing the cable through the antenna tube provided and plug into the vehicle tightly. Otherwise, the vehicle will not work. (See Diagram #5)
2. Screw the antenna on the top of the transmitter and extend to full length. (See Diagram #6)
3. Push the ON/OFF switch to the "ON" position of the vehicle. (See Diagram #7)

### FORWARD RUNNING

4. Push the Driving Control Stick forward for forward running. (See Diagram #8).

### REVERSE RUNNING

5. Pull the Driving Control Stick backward for reverse running. (See Diagram #9)

### FRONT WHEELS STEERING ADJUSTMENT

6. If the vehicle does not run straight forward, adjust the lever for satisfactory alignment on the underside of the vehicle. (See Diagram #10)
7. If the vehicle runs towards left, turn "Steering Alignment Lever" towards "R"
8. If the vehicle runs towards right, turn "Steering Alignment Lever" towards "L"

### STEERING OPERATION

9. Turn the Steering Control Stick to the left or right while pushing the Driving Stick forward at the same time the car will turn left or right and run forward. (See Diagram #11)
10. Turn the Steering Control Stick to the left or right while pulling the Driving Stick backward at the same time the car will turn left or right and run backward. (See Diagram #12)

### STOP OPERATION

11. Release both Control Sticks, the vehicle will stop. (See Diagram #13)

### FEATURE DETAIL

#### FORWARD:

- 3 different speeds from slow to fast by pressing the GEAR button on the Remote Control. See detail in section "GEAR"
- 3 engine sounds depending on the gear.
- the brake light comes "ON" when the vehicle stops.

#### REVERSE:

- activate the backward signal sound.
- the brake light comes "ON" when the vehicle stops.

#### LEFT & RIGHT SIGNAL LIGHTS:

- the signal light will flash when the vehicle turns left or right.

#### HORN:

- press the HORN button on the Remote Control to activate the vehicle's horn. (See Diagram #6)

#### HEAD LIGHT:

- press the LIGHT button on the Remote Control to activate the vehicle's head lights. (See Diagram #6)

### GEAR:

- there are 3 level of speeds from slow to fast, press the GEAR button on the Remote Control to change speeds. (See Diagram #6)

### REMOTE CAR LOCK SYSTEM:

- press the LOCK button on the Remote Control to "lock" the car and "turn off" the engine (See Diagram #6). The lock indicator will flash (See Diagram #14) .
- the vehicle cannot be operated while the car is "locked". (Note: the battery pack will continue to drain unless the car is switched off by using the ON/OFF switch.)
- to "unlock" the vehicle and begin operations again, press the LOCK button once more to turn on the engine.
- if the vehicle does not respond to the unlock command, check to see if the switch is at the "ON" position. If there is still ON/OFF no response, recharge the battery pack of the vehicle and/or replace the batteries of the Remote Control!

### REALISTIC DESIGN:

- pull to open the functional doors to access the working seatbelts at the front seats. (See Diagram #14)
- lift the hood to see the realistic engine. (See Diagram #14)
- lift to open the tailgate trunk. (See Diagram #14)
- there is enough room to fit a 12 inch doll or action figure.

### TO REMOVE THE DEMO WIRE & THE "TRY ME" CONTROL

The DEMO WIRE and the "TRY ME" Control is only used for store display and should be removed before use.

1. Unpack the unit. Slide to open the battery compartment cover at the back of the Remote Control unit. Remove and discard all batteries from the battery compartment. Unplug the DEMO WIRE and the "TRY ME" Control from the Remote Control. (See Diagram #15)
2. Insert new batteries according to the diagram in the battery compartment securely. Replace the battery compartment cover.
3. Locate the battery compartment at the bottom of the vehicle. Unlock the battery compartment cover by turning the stopper in an anti-clockwise direction. Lift and remove the cover. Unplug and discard the DEMO WIRE. Insert a fully-charged 9.6V rechargeable battery pack (see the section of Battery Charging for instructions) and replace the battery compartment cover to begin play.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS OF AGE, DUE TO SMALL PARTS.

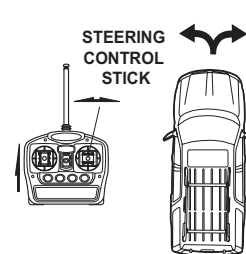 


DIAGRAM 11

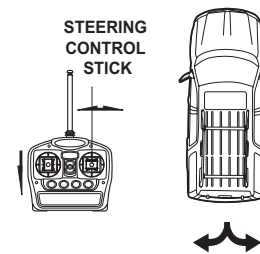 


DIAGRAM 12

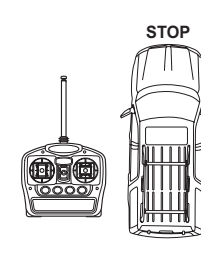 


DIAGRAM 13

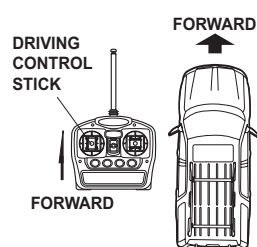 


DIAGRAM 8

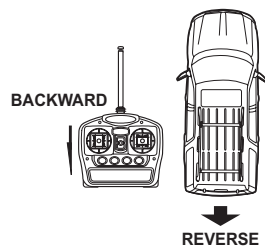 


DIAGRAM 9

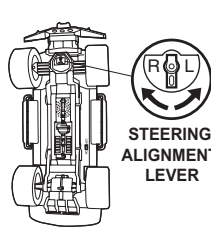 


DIAGRAM 10

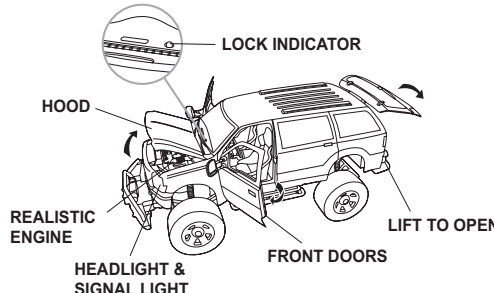 


DIAGRAM 14

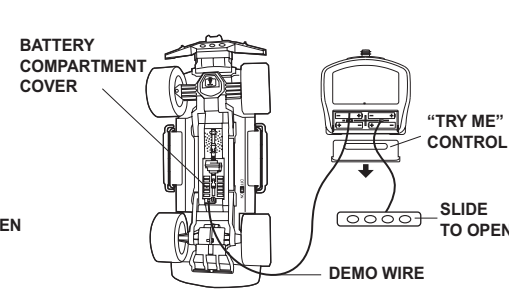 


DIAGRAM 15