



# FORD F-350

## RADIO CONTROLLED

### OPERATION INSTRUCTIONS

**IMPORTANT: THE RECHARGEABLE NI-CD BATTERY PACK IS NOT CHARGED. PLEASE CHARGE IT FOR 4 HOURS PRIOR TO USE.**

#### Battery Charging

1. Plug the battery charger into a wall outlet.
2. Connect the cables of the battery pack and the charger together by snapping the jack and the socket together tightly. Charge at least 4 hours. (See Diagram 1)
3. To disconnect the cables, press down on the clip and pull apart. (See Diagram 1)
4. After charging, the battery will be warm. This condition is normal for fully charged batteries.
5. If the speed of the vehicle slows down suddenly, it is time to recharge.
6. After each use, the battery pack will be hot! Allow the battery pack to cool for at least 20 minutes before recharging. Recharging a warm or hot battery pack will greatly shorten the useful life of the battery.

#### Battery Pack Care

- Make sure the battery pack and connectors of the charger are dry before recharging.
- Battery packs can be charged for much longer periods without harm. However, we recommend unplugging the battery pack if the battery pack will not be used for several days.

#### Cautions

- Do not charge a battery pack that is hot, wet or shows leakage or corrosion.
- The battery pack may explode if disposed of in fire!
- Do not disassemble the battery pack.

#### Battery Installation: Vehicle

1. Locate the ON/OFF switch at the bottom of the car. Make sure the ON/OFF switch is at the "OFF" position. (See Diagram 2)
2. Turn the lid stopper in an anti-clockwise direction to open the battery lid. (See Diagram 3)
3. Lift the battery lid to open and place the battery pack inside securely.
4. Plug the jack of the battery pack into the socket of the battery compartment. (See Diagram 4)
5. Replace the battery lid and turn the lid stopper in a clockwise direction to close.

#### Battery Installation: Transmitter

1. Slide to open the battery compartment cover at the back of the Remote Control unit and insert four AA batteries according to the diagram in the battery compartment securely. (See Diagram 5)
2. Replace the battery compartment cover.

#### Vehicle Operation

1. Screw the antenna onto the top of the transmitter and extend it to full length. (See Diagram 6)
2. Pass the cable of the vehicle through the antenna tube provided and insert the tube into the vehicle tightly. (See Diagram 7)
3. Slide the ON/OFF switch to the "ON" position. (See Diagram 2)

#### DRIVING FORWARD

4. Push the DRIVING CONTROL stick forward (away from you). (See Diagram 8)

#### DRIVING IN REVERSE

5. Pull the DRIVING CONTROL stick back (towards you). (See Diagram 9)

#### STEERING OPERATION

6. To make left or right turns while driving forward, turn the STEERING CONTROL stick to left or right while pushing the DRIVING stick forward at the same time. (See Diagram 10)
7. To turn left or right while driving reverse, turn the STEERING CONTROL stick to left or right while pulling the DRIVING stick backward at the same time. (See Diagram 11)

#### FRONT WHEELS STEERING ADJUSTMENT

8. If the vehicle does not run straight forward, adjust the STEERING ALIGNMENT LEVER for satisfactory alignment on the underside of the vehicle. (See Diagram 3)
9. If the vehicle runs toward left, turn the STEERING ALIGNMENT LEVER towards "R".
10. If the vehicle runs toward right, turn the STEERING ALIGNMENT LEVER towards "L".

#### STOP OPERATION

11. Release both CONTROL sticks to stop the vehicle.

#### Installing The Side Mirror

- Insert the side mirror into the corresponding socket horizontally. (See Diagram 12)

#### Feature Detail

##### FORWARD & REVERSE:

- 3 different speeds from slow to fast by pressing the GEAR button on the Remote Control. See detail in section "GEAR"
- 3 engine sounds depending on the gear selected.
- the brake light comes "ON" when the vehicle stops.

##### LEFT & RIGHT SIGNAL LIGHTS:

- the signal light flashes when the vehicle turns left or right.

##### HORN:

- press the HORN button on the Remote Control to activate the vehicle's horn. (See Diagram 6)

##### HEAD LIGHT

- press the LIGHT button on the Remote Control to activate the vehicle's headlights. (See Diagram 6)

##### GEAR:

- there are 3 level of speeds from slow to fast, press the GEAR button on the Remote Control to change speeds. (See Diagram 6)

##### REMOTE CAR LOCK SYSTEM:

- press the LOCK button on the Remote Control to "lock" the car and turn off the engine (See Diagram 6). The lock indicator will flash. (See Diagram 13)
- the vehicle cannot be operated while the car is "locked". (Note: the battery pack will continue to drain unless the car is switched off by using the ON/OFF switch.)
- to "unlock" the vehicle and begin operations again, press the LOCK button once more to turn on the engine.
- if the vehicle does not respond to the unlock command, check to see if the ON/OFF switch is at the "ON" position. If there is still no response, recharge the battery pack of the vehicle and/or replace the batteries of the Remote Control.

##### REALISTIC DESIGN:

- lift the hood to see the realistic engine. (See Diagram 13)
- The car's interior has enough room to fit a 12 inch doll or action figure

##### TRUCK BED COVER:

- a truck bed cover is included in the package. The cover may be installed or removed easily (See Diagram 14).

##### CLOSING THE PASSENGER DOORS

To close the passenger doors tightly, please ensure they are latched securely at the points indicated by the diagram below. (See Diagram 15)

##### REPLACING THE PASSENGER DOORS

The passenger doors of the vehicle are designed to be removable on purpose to protect the hinge from excessive stress that may lead to breakage. The doors can be reinstalled easily by simply resnapping the door onto the hinge. Follow the directions of the diagram below. (See Diagram 16)

##### Performance Tips For Vehicle

- Do not drive the car on grass, sand or carpet.
- Do not drive the car through water.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure the ON/OFF switch on your vehicle is at the "OFF" position when it is not in use.
- Do not bend the antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in buildings will affect the operation of your vehicle.
- Do not leave the vehicle or transmitter near sources of heat or in direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.

##### BATTERY CAUTIONS

1. Do not charge non-rechargeable batteries.
2. Remove rechargeable batteries from the toy before recharging.
3. Rechargeable batteries are to be recharged under adult supervision.
4. Different types of batteries, new and used batteries are not to be mixed.
5. Only batteries of the same or equivalent type as recommended are to be used.
6. Batteries are to be inserted with the correct polarity.
7. Exhausted batteries are to be removed from the toy.
8. The supply terminals are not to be short-circuited.
9. The transformer is not a toy.
10. The toy must be used with the recommended transformer.
11. This toy is not intended for children under 6 years old.
12. Do not charge battery pack that is hot, wet or shows leakage or corrosion.
13. The battery pack may explode if disposed of in fire.
14. Do not disassemble the battery pack.
15. Overcharging can damage the battery pack. Charge according to recommended time.
16. This toy and all accessories must be periodically examined for potential hazards, and that potentially hazardous parts must be repaired and replaced before use.

##### ATTENTION PARENTS:

IT IS RECOMMENDED THAT THIS TOY AND ALL ACCESSORIES BE PERIODICALLY EXAMINED FOR POTENTIAL HAZARDS AND THAT ANY POTENTIALLY HAZARDOUS PARTS BE REPAIRED OR REPLACED.

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

The FORD brand name and logo are registered trademarks of Automobiles FORD. Used under license.

**FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

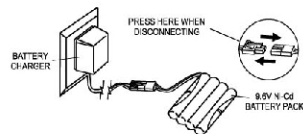


DIAGRAM 1

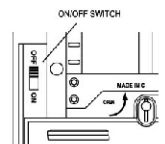


DIAGRAM 2

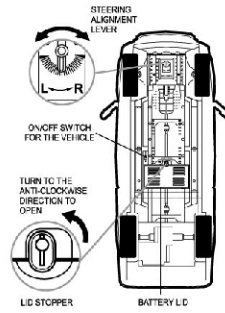


DIAGRAM 3

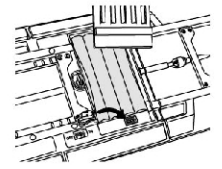


DIAGRAM 4

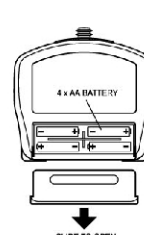


DIAGRAM 5

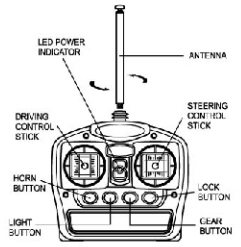


DIAGRAM 6

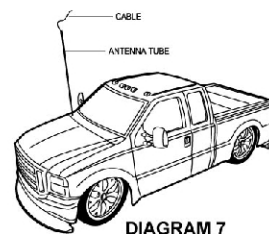


DIAGRAM 7

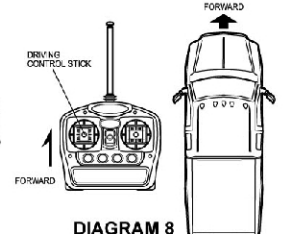


DIAGRAM 8

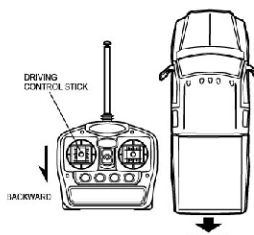


DIAGRAM 9

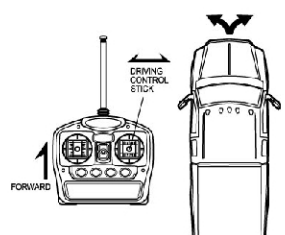


DIAGRAM 10

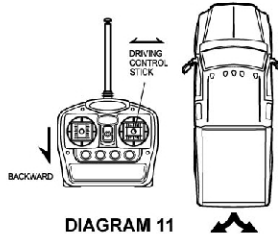


DIAGRAM 11

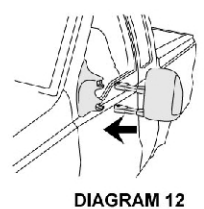


DIAGRAM 12



DIAGRAM 13

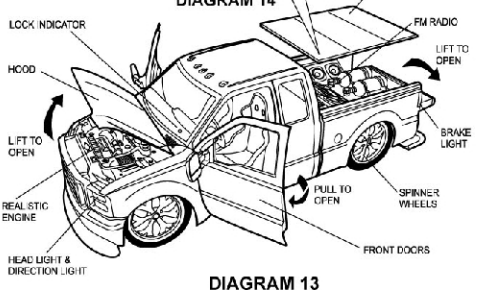


DIAGRAM 14

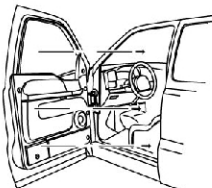


DIAGRAM 15

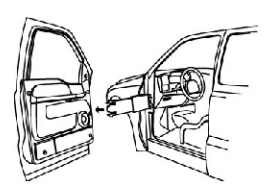


DIAGRAM 16



MODEL NUMBER: 98507  
PRINTED IN CHINA  
O.I. NO. 3045