

OPERATING INSTRUCTIONS

BATTERY LOADING

(FOR MAXIMUM PERFORMANCE, USE ALKALINE BATTERIES)

Remember to take out all batteries from car and transmitter after playing.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel-Cadmium) batteries.

VEHICLE

1. Slide the ON/OFF switch at the bottom of the vehicle to the "OFF" position. (See Diagram 1)
2. Unscrew to open battery case cover and insert 4 X 'AA' size battery as indicated, following the engraved (+) (-) signs. (See Diagram 1)
3. Replace the battery case cover.

TRANSMITTER

1. Slide open the battery case cover from the back of the transmitter and put 1 x 9volt battery inside following the engraved (+) (-) signs. (See Diagram 2)
2. Replace the battery case cover.

NOTE: REMOVE ALL BATTERIES AFTER YOU HAVE FINISHED USING YOUR VEHICLE.


HOW TO PLAY

- A. Slide the ON/OFF switch at bottom of the vehicle to the "ON" position. (See Diagram 1)
- B. Push the control stick of the transmitter (control unit) forward, the vehicle will run straight forward. (See Diagram 3)
- C. Pull the control stick of the transmitter (control unit) backward, the vehicle will run backward in a circular path. (See Diagram 4)
- D. Release the control stick of the transmitter, the vehicle will stop. (See Diagram 5)


PERFORMANCE TIPS:

- Don't drive in grass, sand or carpet.
- Don't go through water.
- Use fresh alkaline batteries.
- Be sure to rest your vehicle for at least 30 minutes after every 15 minutes of operation.
- Make sure ON/OFF switch on your vehicle is OFF when not in use.
- Don't bend antenna.
- Electrical, CB interference, mobile phones, air conditioning, elevators and steel girders in building, will affect the operation of your vehicle.
- Don't leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time.
- Remove the batteries from the vehicle and transmitter when not in use.


FCC NOTE:
THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

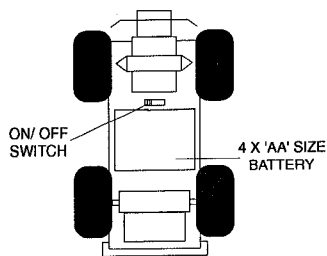


(DIAGRAM 1)

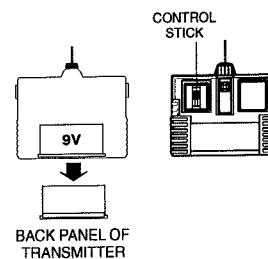


(DIAGRAM 2)

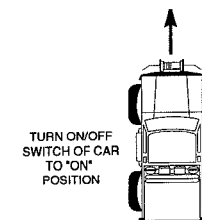

(DIAGRAM 3)

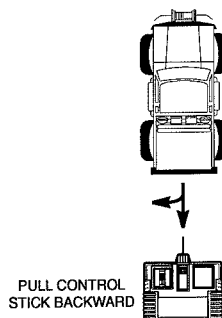

(DIAGRAM 4)

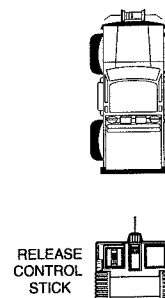

(DIAGRAM 5)

CAUTION: NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS DUE TO SMALL PARTS.
IMPORTANT: SEE INSTRUCTIONS BEFORE PLAYING.
SPECIFICATIONS AND COLORS OF CONTENTS MAY VARY FROM ILLUSTRATION.
© 2006 SCIENTIFIC TOYS LTD, CHAI WAN, HONG KONG.

