



User's Guide



Please read this user's guide before using your new car.

Package contents

 
- XMODS Micro RC Car
- Controller/Charger
- Trading Card
- Wrist Strap
- User's Guide
- Quick Start

Features

- Light up the race track with XMODS Micro's working headlights
- 1:64 scale; small enough to carry in your pocket
- Charge in about 60 seconds

① Install batteries in the controller

1. Turn **OFF** the controller and use a screwdriver (not included) to open the battery compartment.
2. Insert four AAA batteries (not included) matching the polarity symbols (+ and -) marked inside.

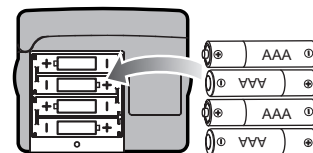

Battery Notes:

 
- *Dispose of old batteries promptly and properly. Do not burn or bury them.*
- *Use only fresh batteries of the required size and type.*
- *Do not mix old and new batteries, or batteries with different capacities or different chemistries.*
- *If you do not plan to use your car for a week or more, remove the batteries. Batteries can leak chemicals that may damage electronic parts.*

2

② Charge your car

When your XMODS Micro Car runs slowly, does not run at all, or is unresponsive to controls, recharge it.


1. Open the controller's top cover and turn **ON**.
2. Align the car's metal contact points (on the bottom) with the controller's and snap the car in place. The controller's indicator lights red during charging and turns green when the car is fully charged.
3. Press the **RELEASE** button on the controller to release your car from the controller.

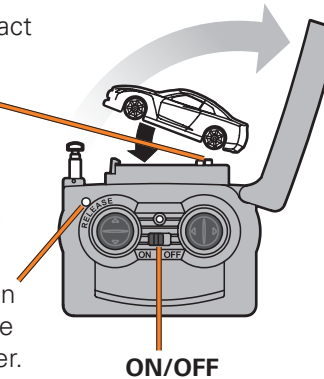

⚠ Caution: After you charge the car, disconnect it from the controller. Overcharging could damage the car and controller.

③ Drive your car

 1. Extend the antenna.
2. Turn **ON** the controller.
3. Use the control sticks to steer your car, the left stick for moving forward/backward and the right stick for turning left/right.

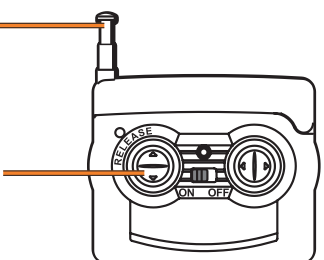


3

⚠ Caution: If your car moves slowly or not at all, check the wheel mechanisms for lint, hair, dust or thread.

④ Align the wheels


If your car does not drive in a straight line when you release the right stick, adjust the wheel alignment control on the car's bottom.

 Turn toward **L** if the car pulls right. Turn toward **R** if it pulls left.



⑤ Attach the Wrist Strap

 Attach the supplied Carrying Strap to the strap hole on the side of the controller to carry the controller conveniently.

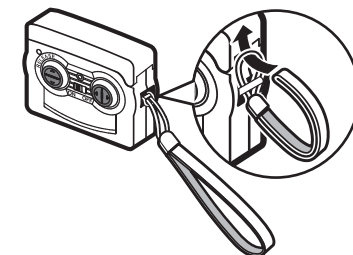

Specifications

Power	4 AAA batteries
Frequency	27/49 MHz
Control Distance	Up to 30 ft (9.14 m)
Age	8+

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Recycle Rechargeable Batteries

Recycle your old rechargeable batteries at one of the many collection sites in the U.S. and Canada. To find the site nearest you, visit www.call2recycle.org or call toll-free 1-877-2-RECYCLE.

4

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ignition L.P. may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) damage or failure caused by loss of control, loss of signal between the toy and its controller due to excessive range or low power, impact, violent contact, collision or rough use; (c) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (d) consumables such as fuses or batteries; (e) ordinary wear and tear or cosmetic damage; (f) transportation, shipping or insurance costs; (g) costs of product removal, installation, set-up service, adjustment or reinstallation; and (h) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced

5

parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at: Ignition L.P., 3102 Maple Ave Suite 450, Dallas, TX 75201 02/09

For product support, call
1-866-315-0426

Protect the environment by recycling used electronics.
Go to E-CyclingCentral.com to find an electronic recycling center near you.

© 2009, Ignition L.P. All rights reserved.
XMODS is a trademark used by Ignition L.P.

07A09
Printed in China

6